


Window Curtain Guide to Find the Perfect Length

When selecting the length of your curtains, determine where you want to hang the curtain rod and how you want it to flow on the floor. The longer the length, the more dramatic the puddle on the floor.

Curtain rod can be mounted
2-6 inches above window trim.

For a pop of
drama, hang
curtain 1-2 inches
from ceiling to
help elongate
your window.

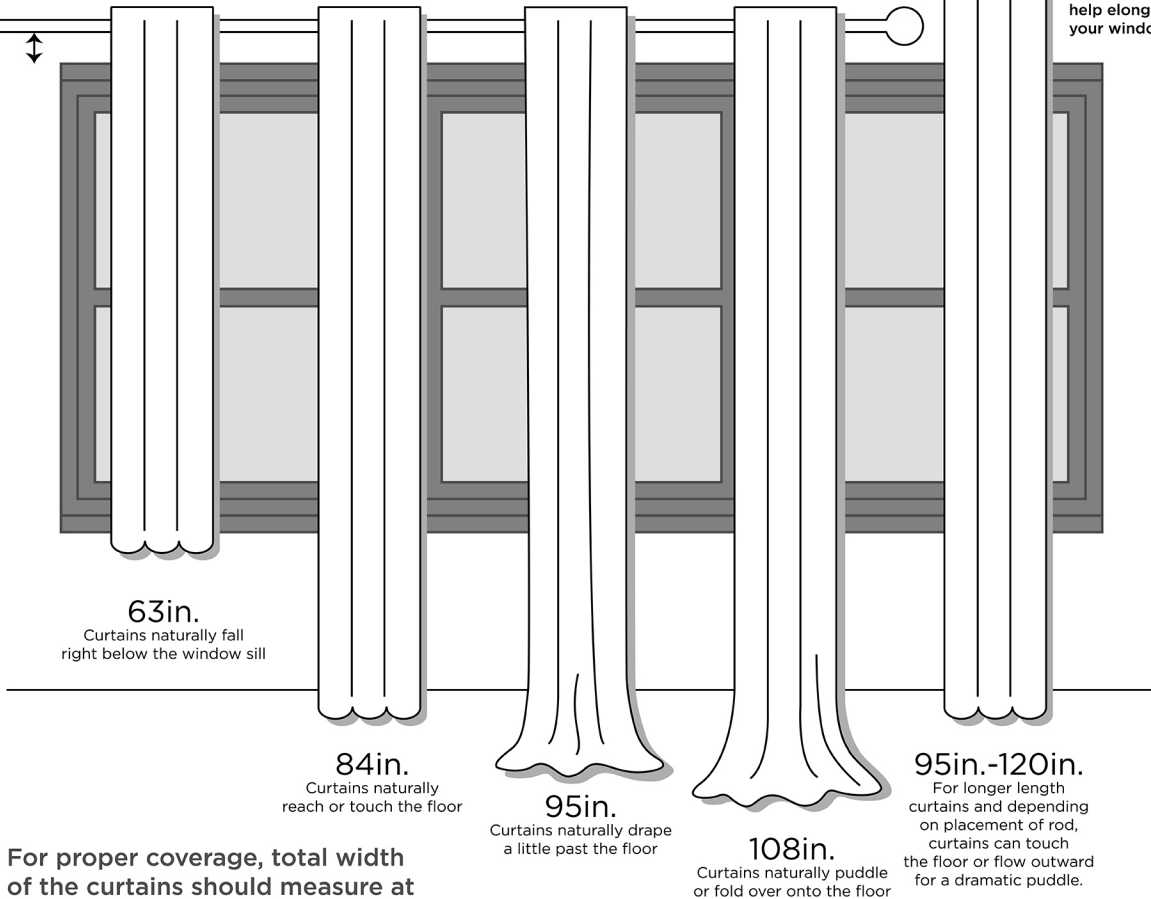

63in.

Curtains naturally fall
right below the window sill

84in.

Curtains naturally
reach or touch the floor

95in.

Curtains naturally drape
a little past the floor

108in.

Curtains naturally puddle
or fold over onto the floor

95in.-120in.

For longer length
curtains and depending
on placement of rod,
curtains can touch
the floor or flow outward
for a dramatic puddle.

**For proper coverage, total width
of the curtains should measure at
least 1.5 times the width of the window.**

For fullness, should be 2-3 times the width of the window.