

# Vantage Transom Top

## Installation Instructions

### Step 1

Attach the Transom Top to the shutter by using the clips provided. Align the shutter and the Transom Top on a flat surface. Be sure the sides are also aligned. Once the clip is pushed into place it cannot be moved around. Join them together by pushing each clip on as far as it will go. Use 2 clips per Transom Top. See Figure 1 for clip placement.

### Step 2

Fasten the shutter and Transom Top assembly to the wall. Use the instructions supplied with the shutters for proper installation techniques. Figure 2 shows the proper location for a Pressloks or screws (depending on how the shutter is installed).

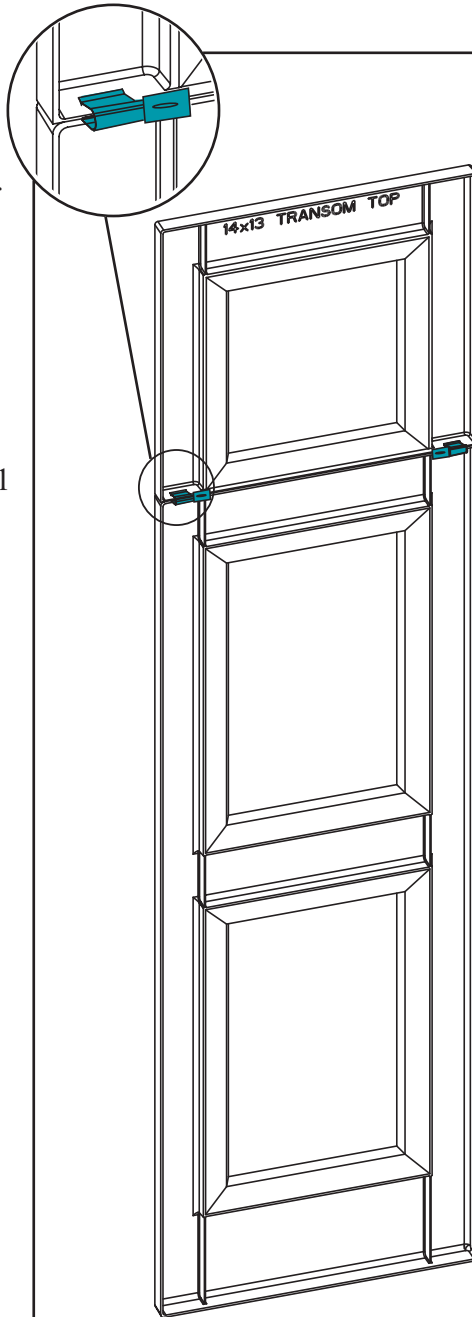


Figure 1 (back of assembly)

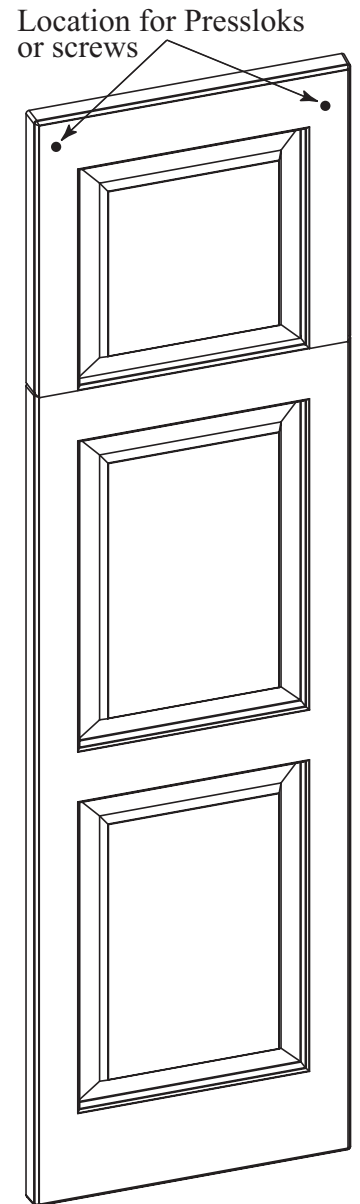


Figure 2 (front of assembly)