


Assembly Instructions

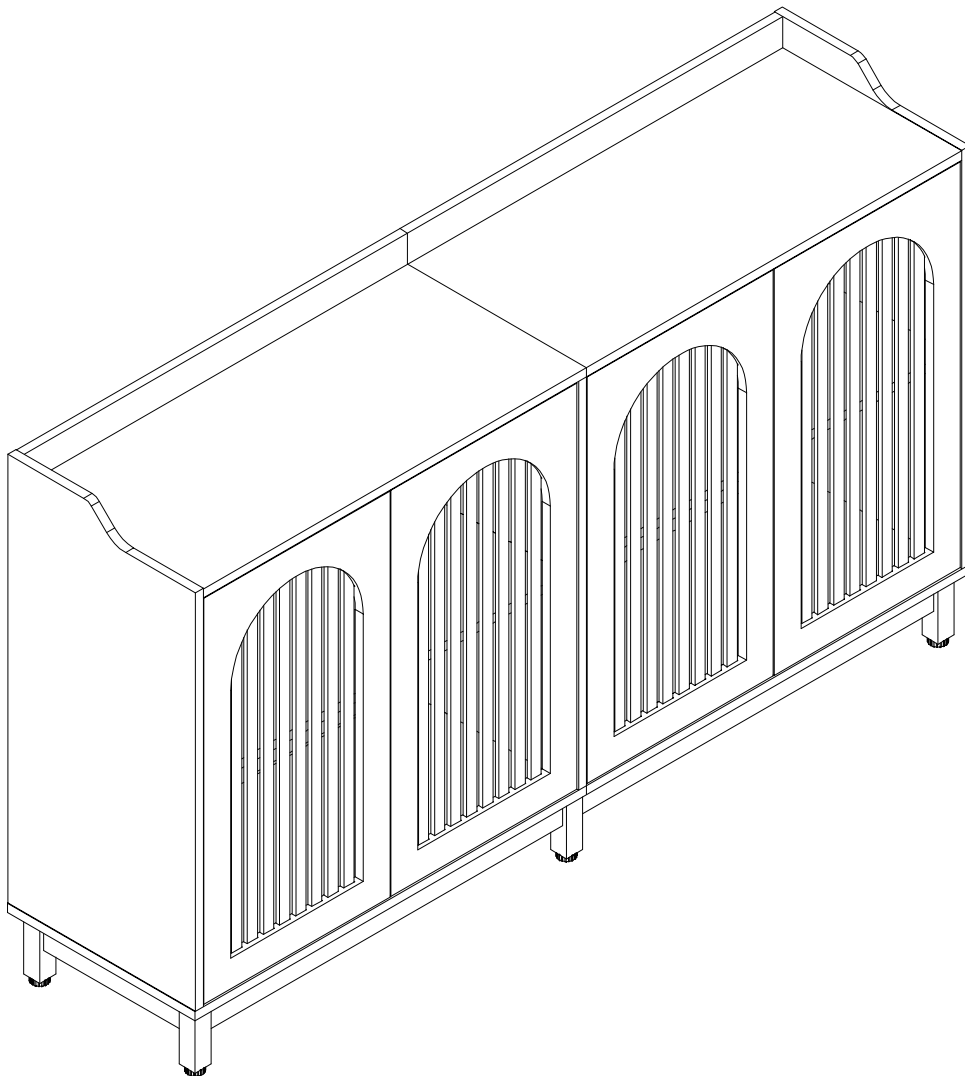


Sideboard

Model No.
HOGA-JW0983X/ JW1016

Contact Us




We're here to help you.

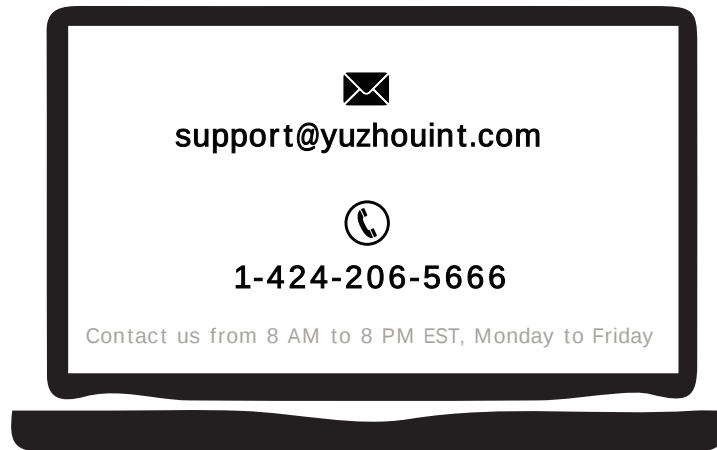

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

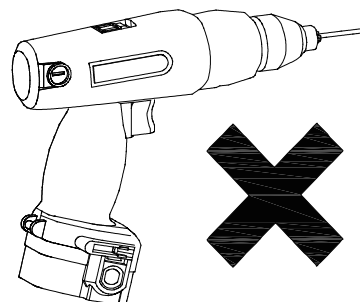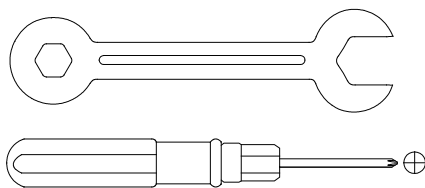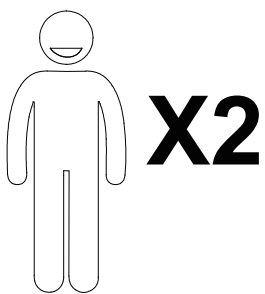


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

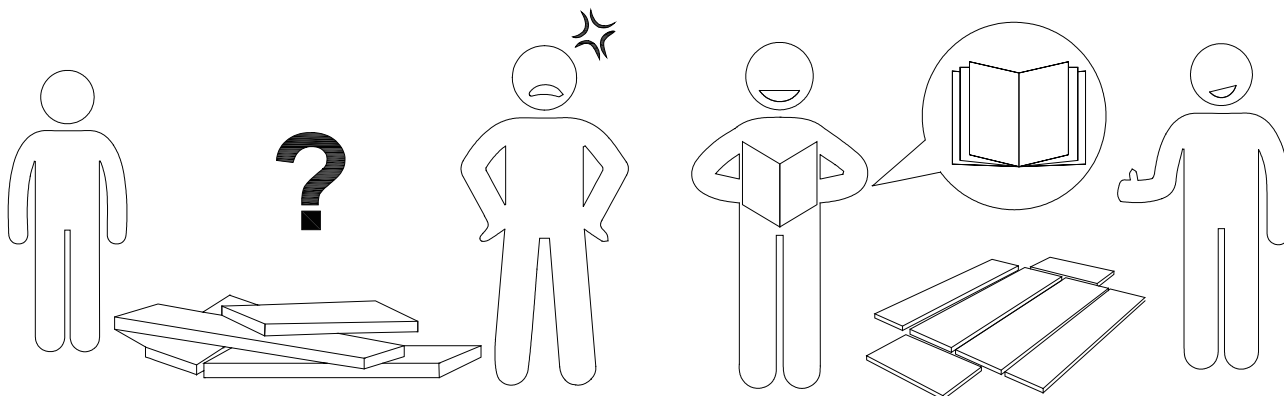

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.
















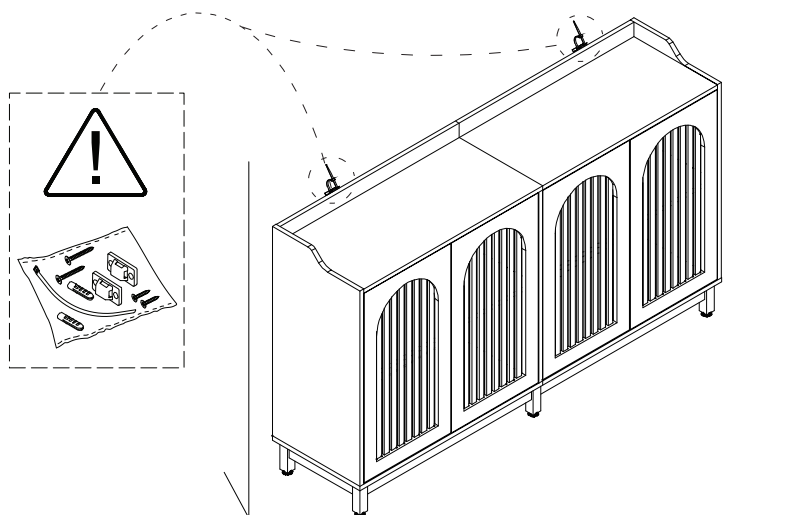


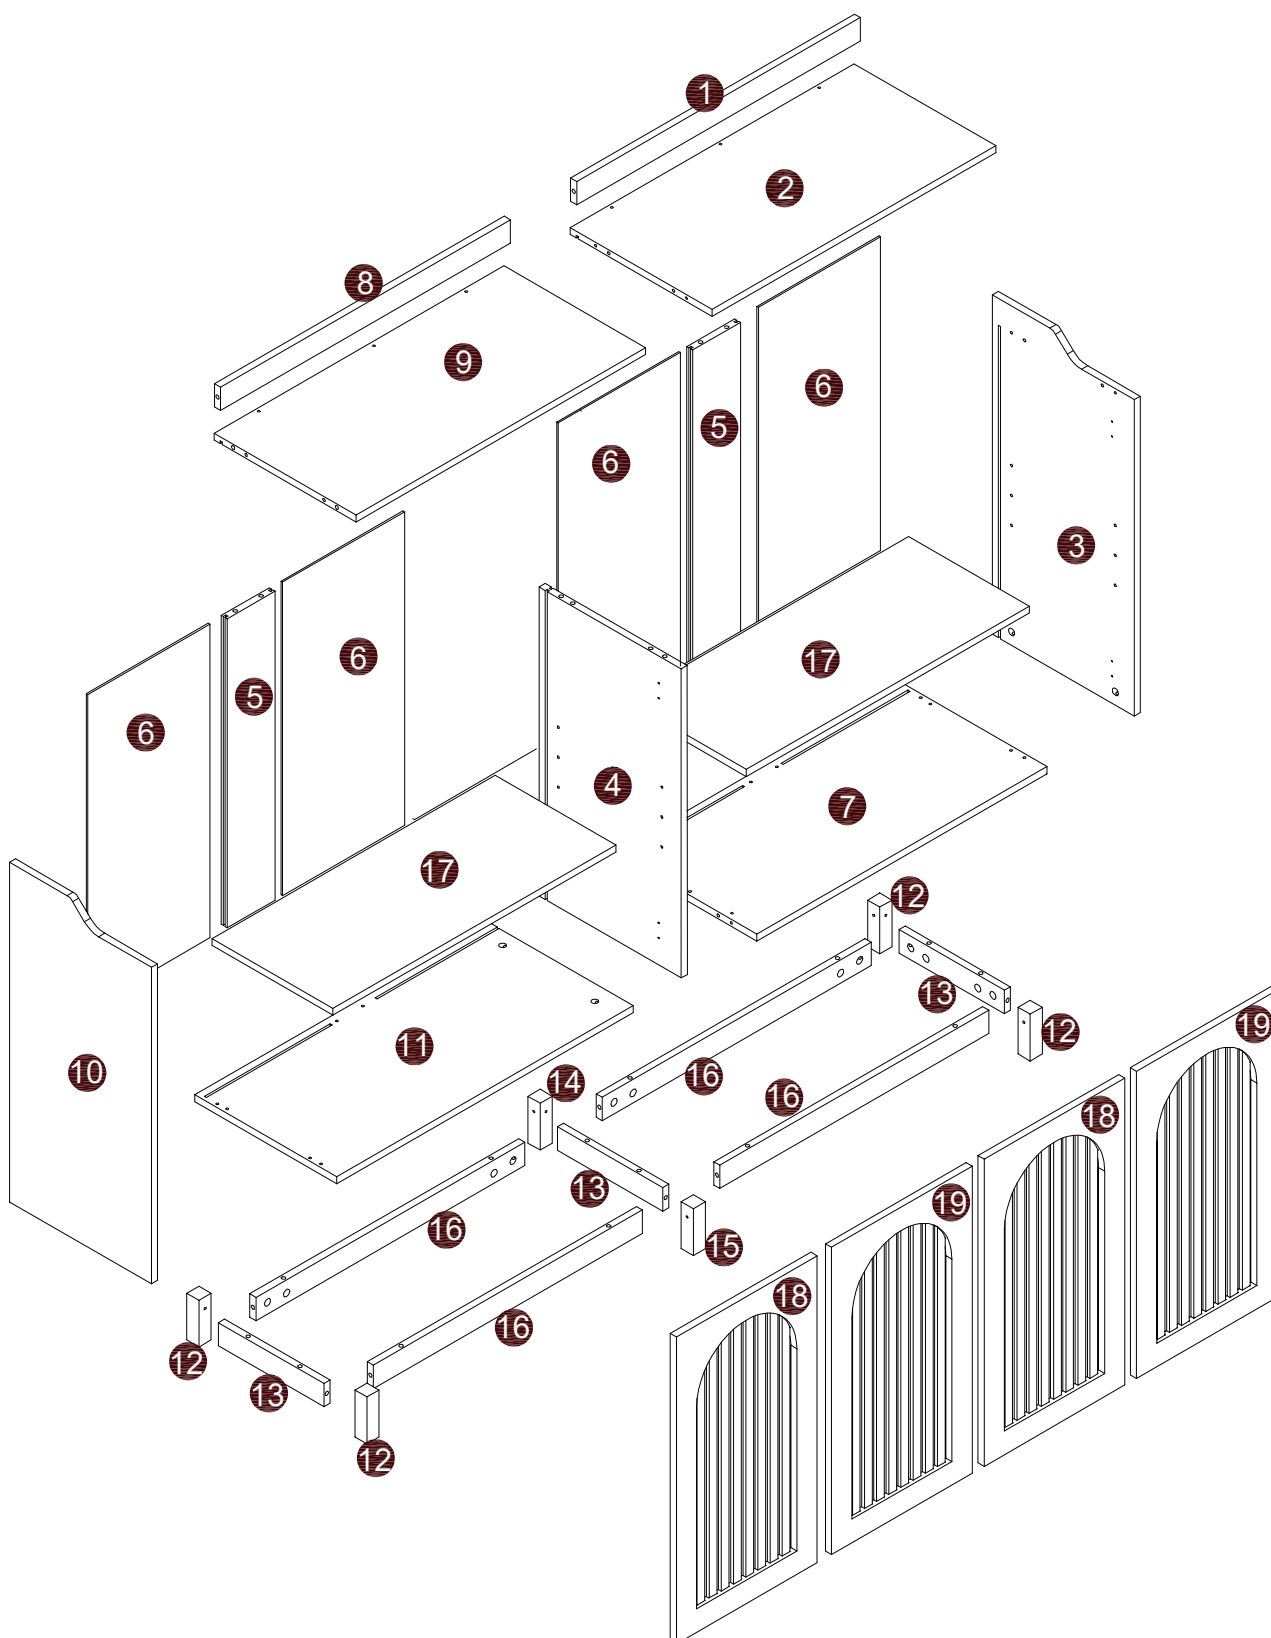





⚠ Caution






Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

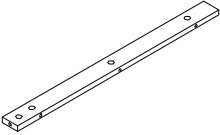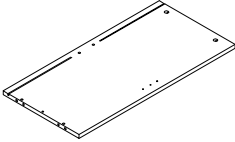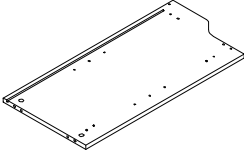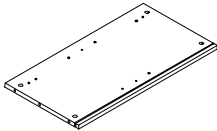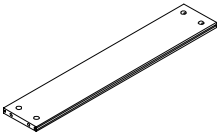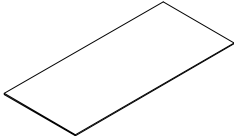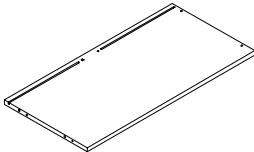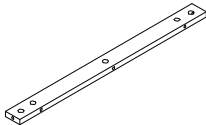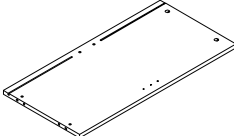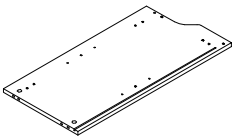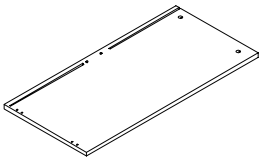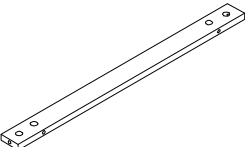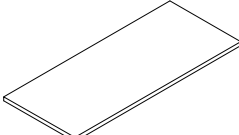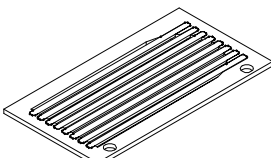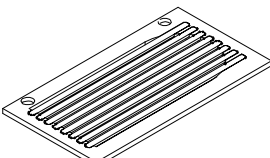1  1 pc	2  1 pc	3  1 pc	4  1 pc	5  2 pcs
6  4 pcs	7  1pc	8  1 pc	9  1 ps	10  1 pc
11  1pc	12  4 pcs	13  3pcs	14  1 pc	15  1pc
16  4 pcs	17  2 pcs	18  2pcs	19  2 pcs	



Hardware List

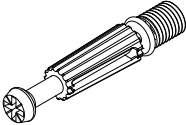A	B	C	D	E	F
 M6x35mm	 Ø15x12mm	 Ø8x30mm		 Ø3.5x14mm	
61 pcs	61 pcs	14 pcs	2 pcs	70 pcs	8 pcs

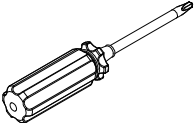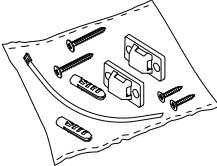
G	H	I	J	K	L
 Screwdriver					 plastic scre winert
1 pc	8 pcs	16 pcs	6 pcs	2 pcs	5 pcs

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

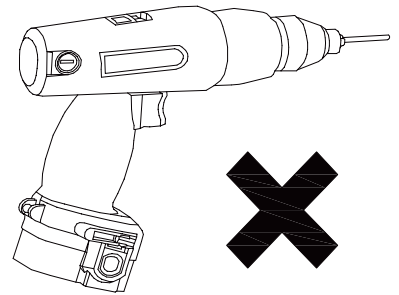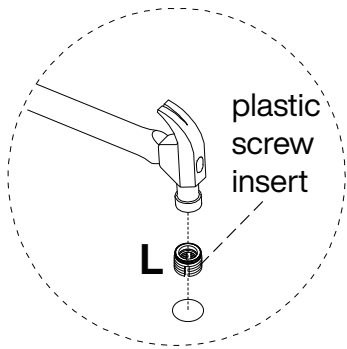



When installing screw #A and finding that there is no plastic screw insert in the mounting hole, gently tap #L into the hole to be installed.

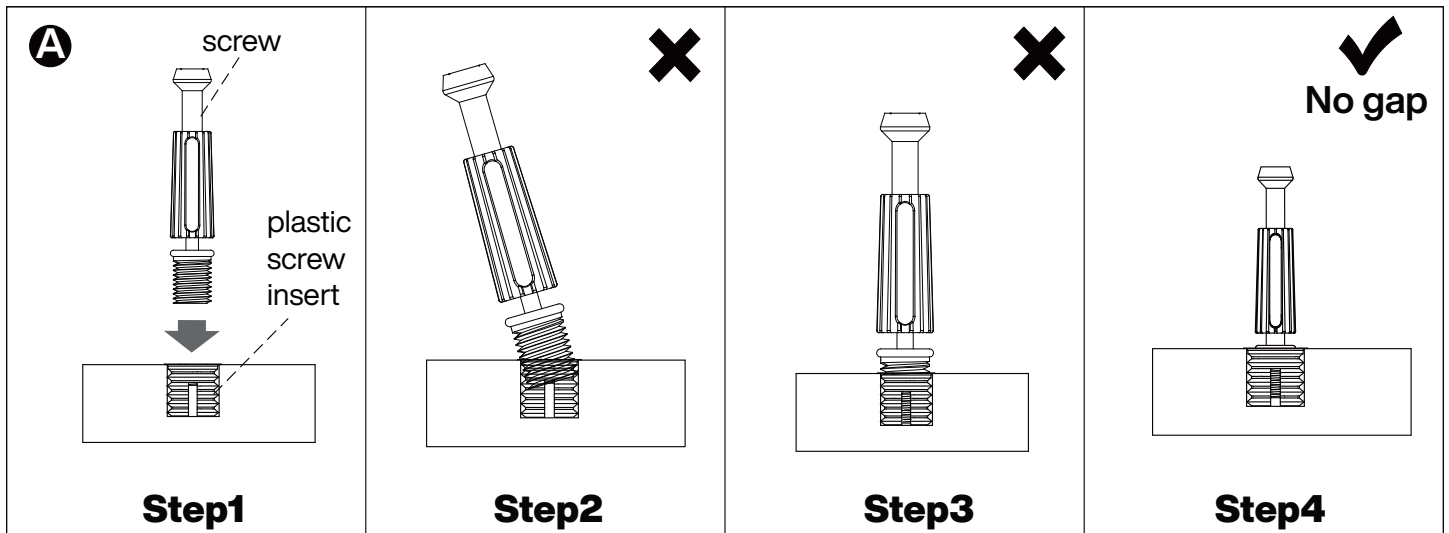


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

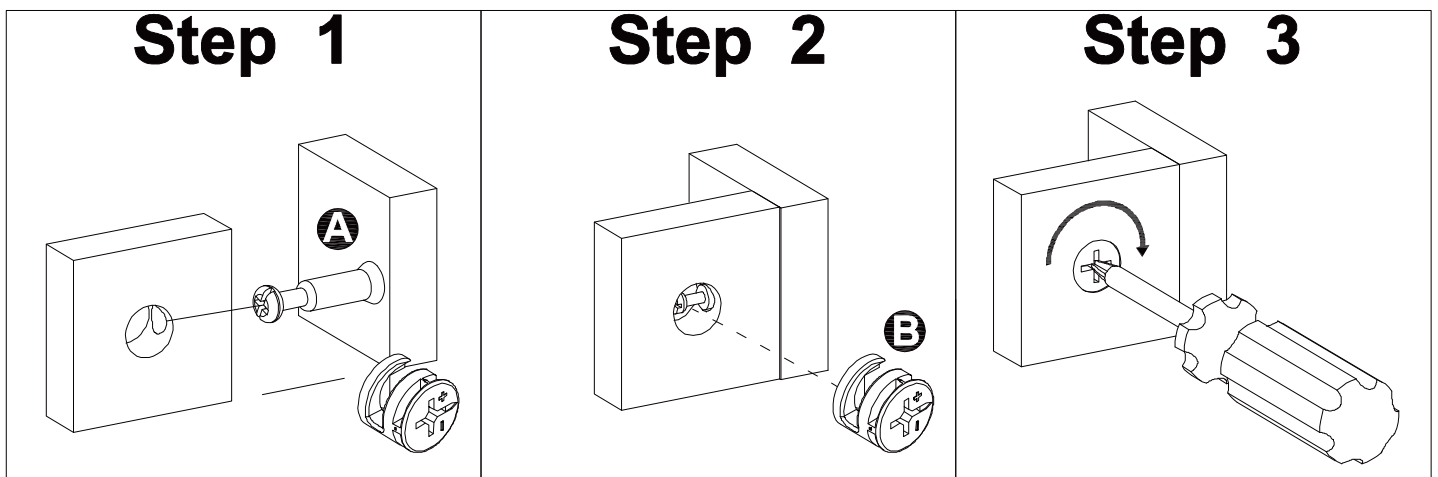



1

A	C
	
M6x35mm	Ø8x30mm
9 pcs	3 pcs

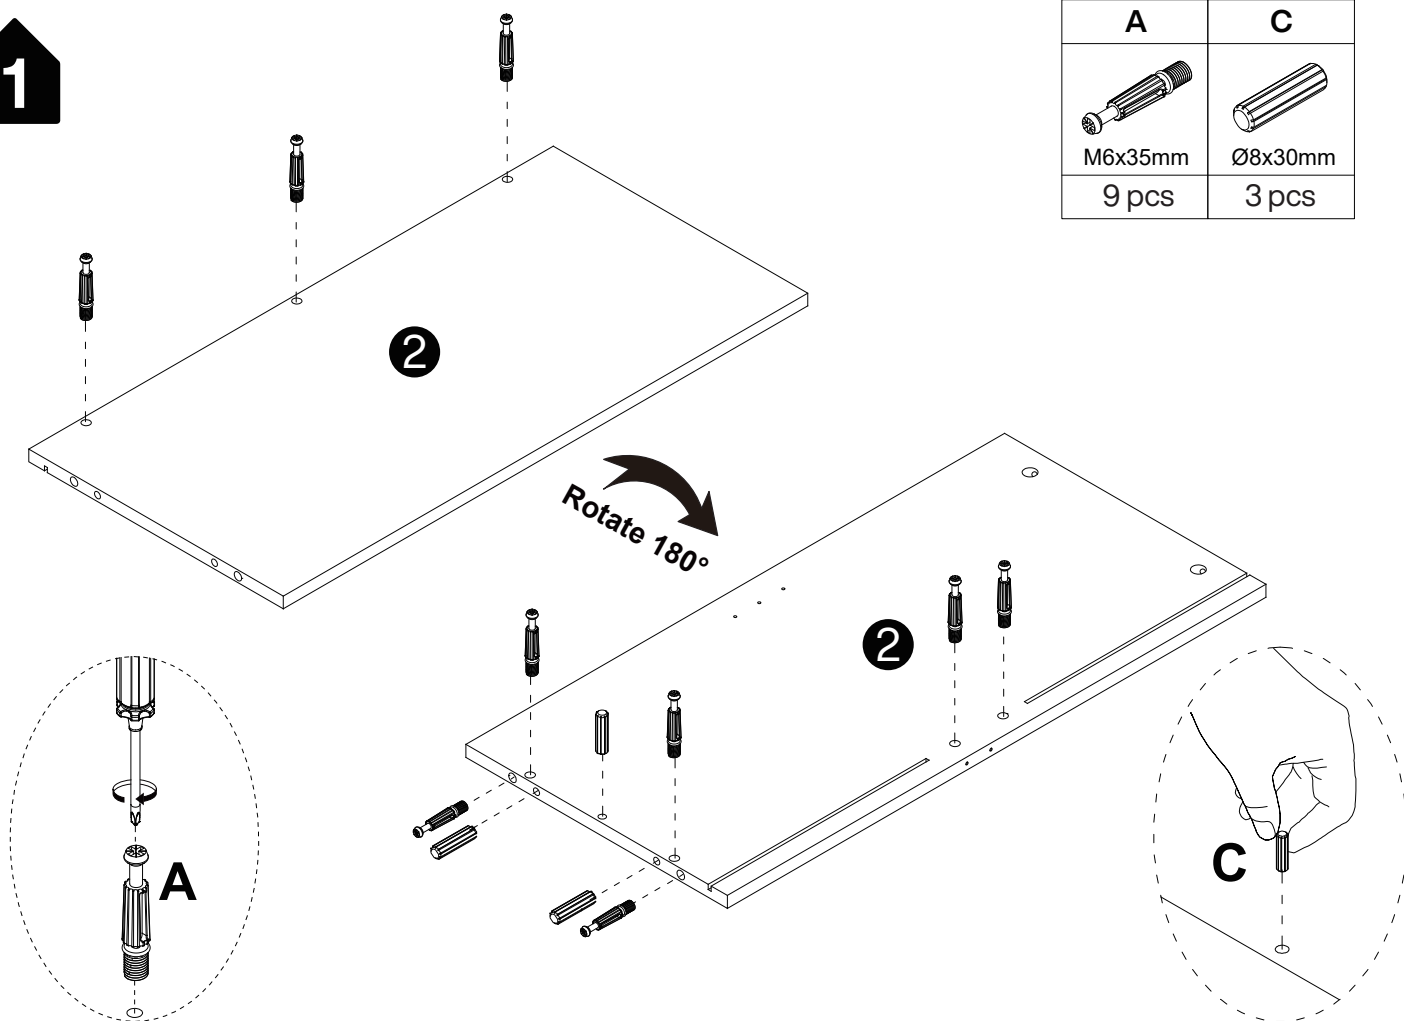


2


A

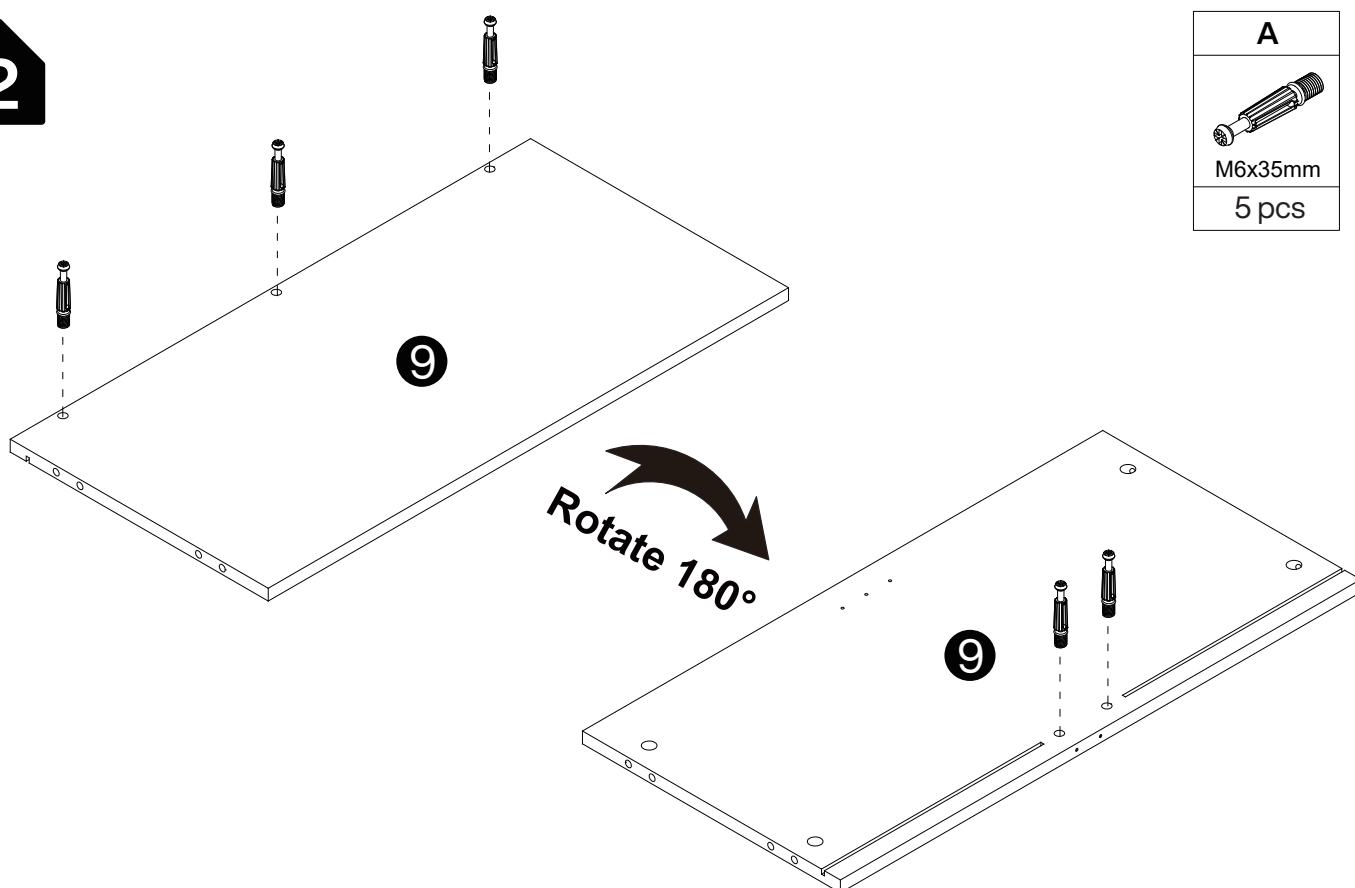M6x35mm
5 pcs

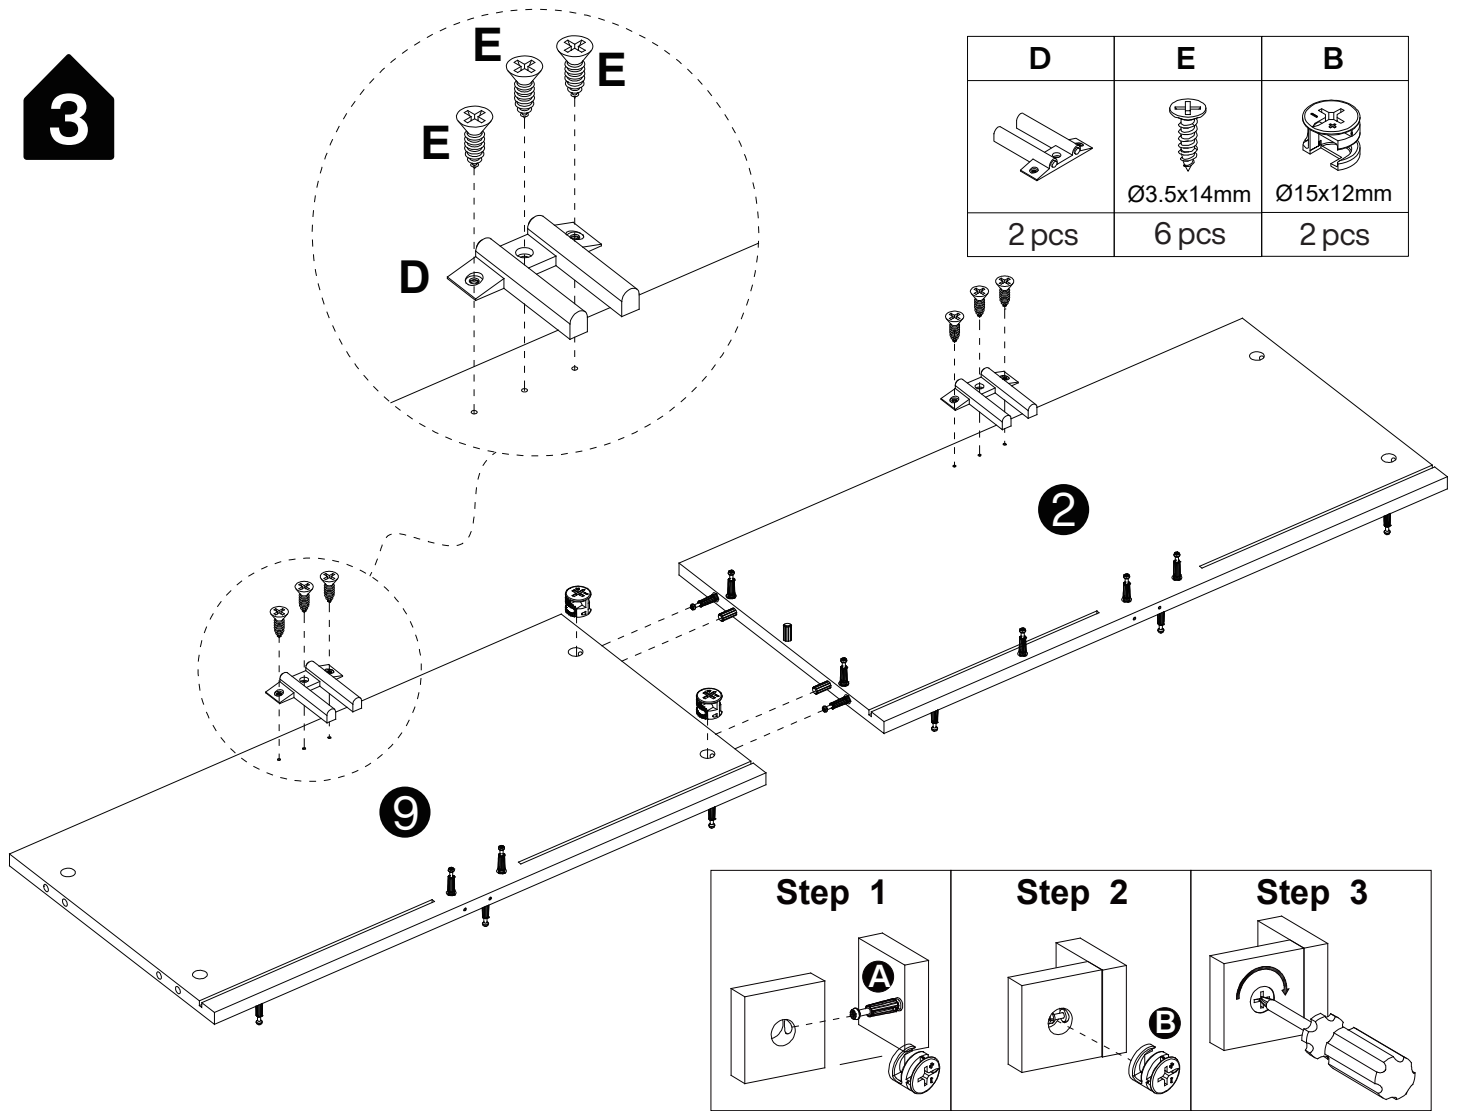



3

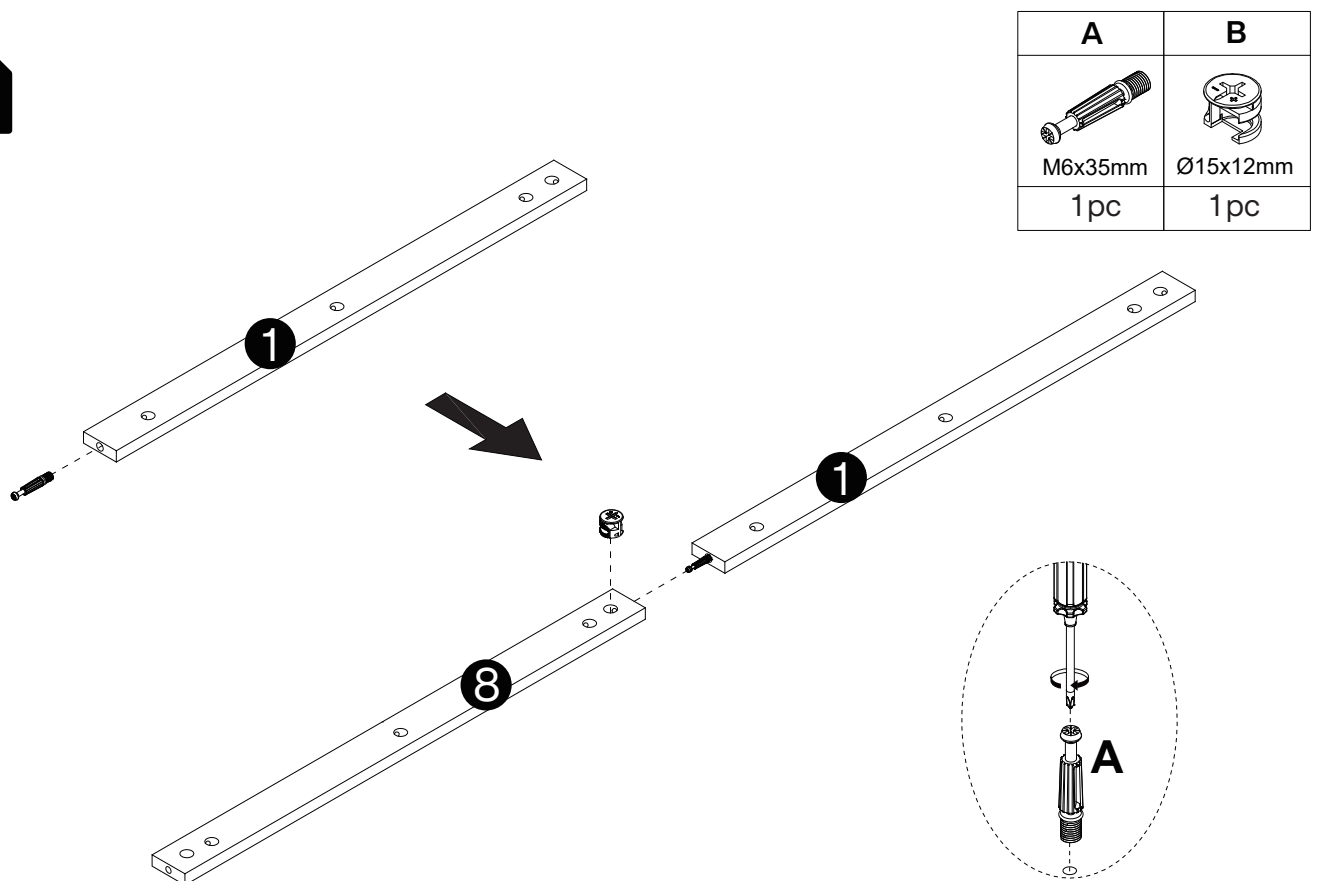


4




5

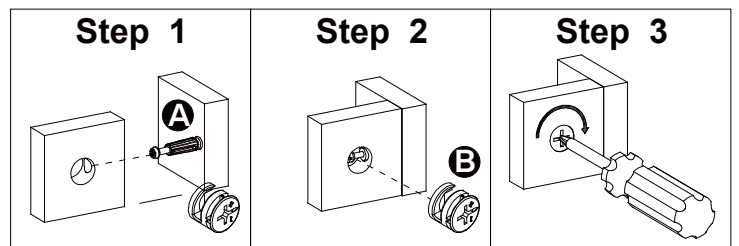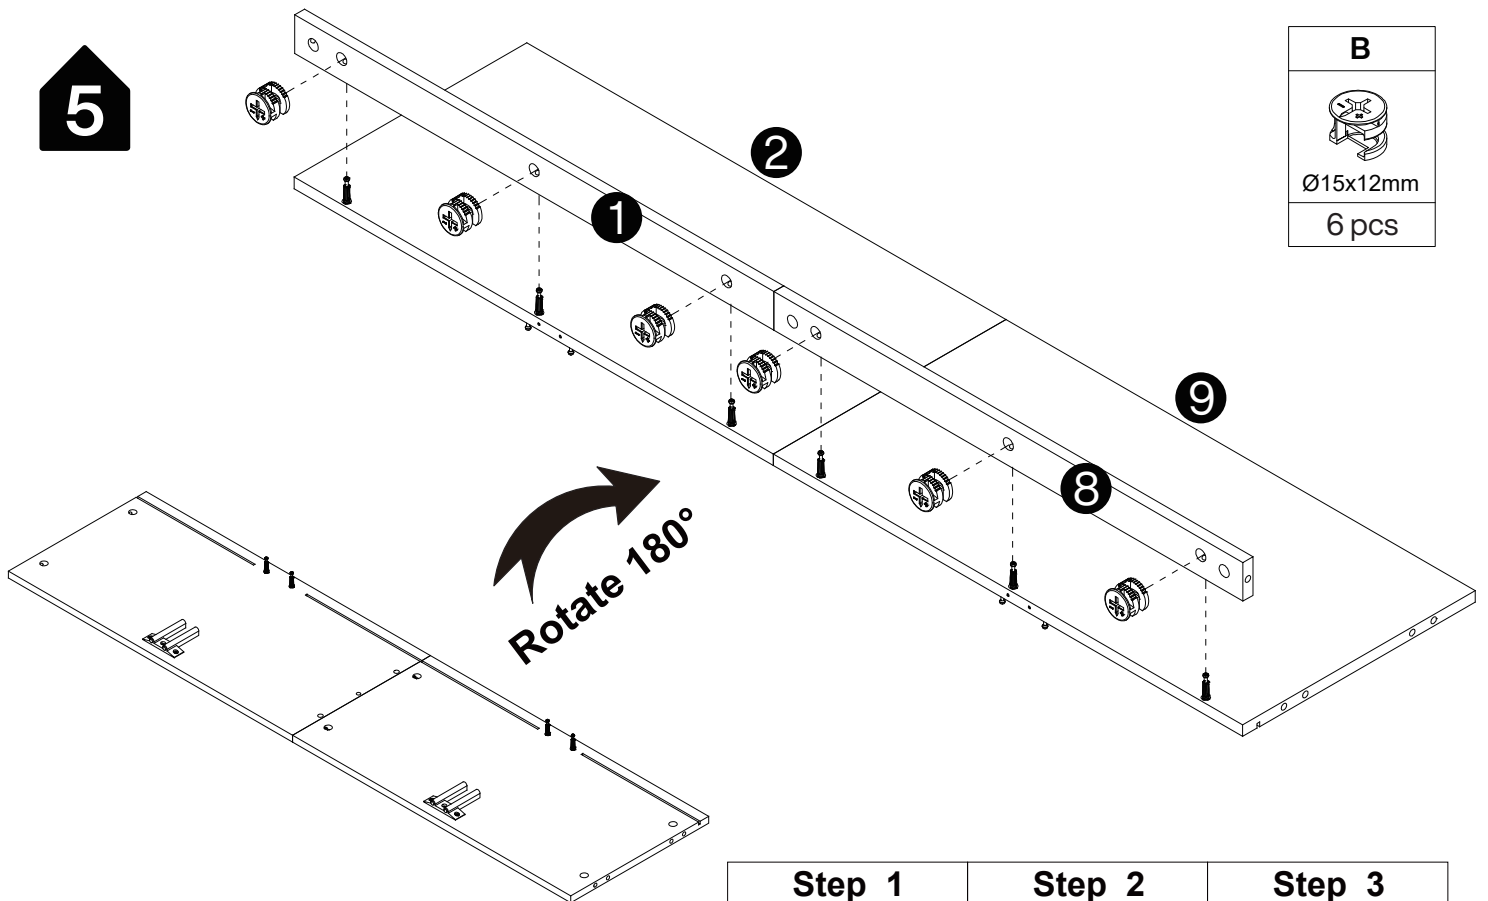


6

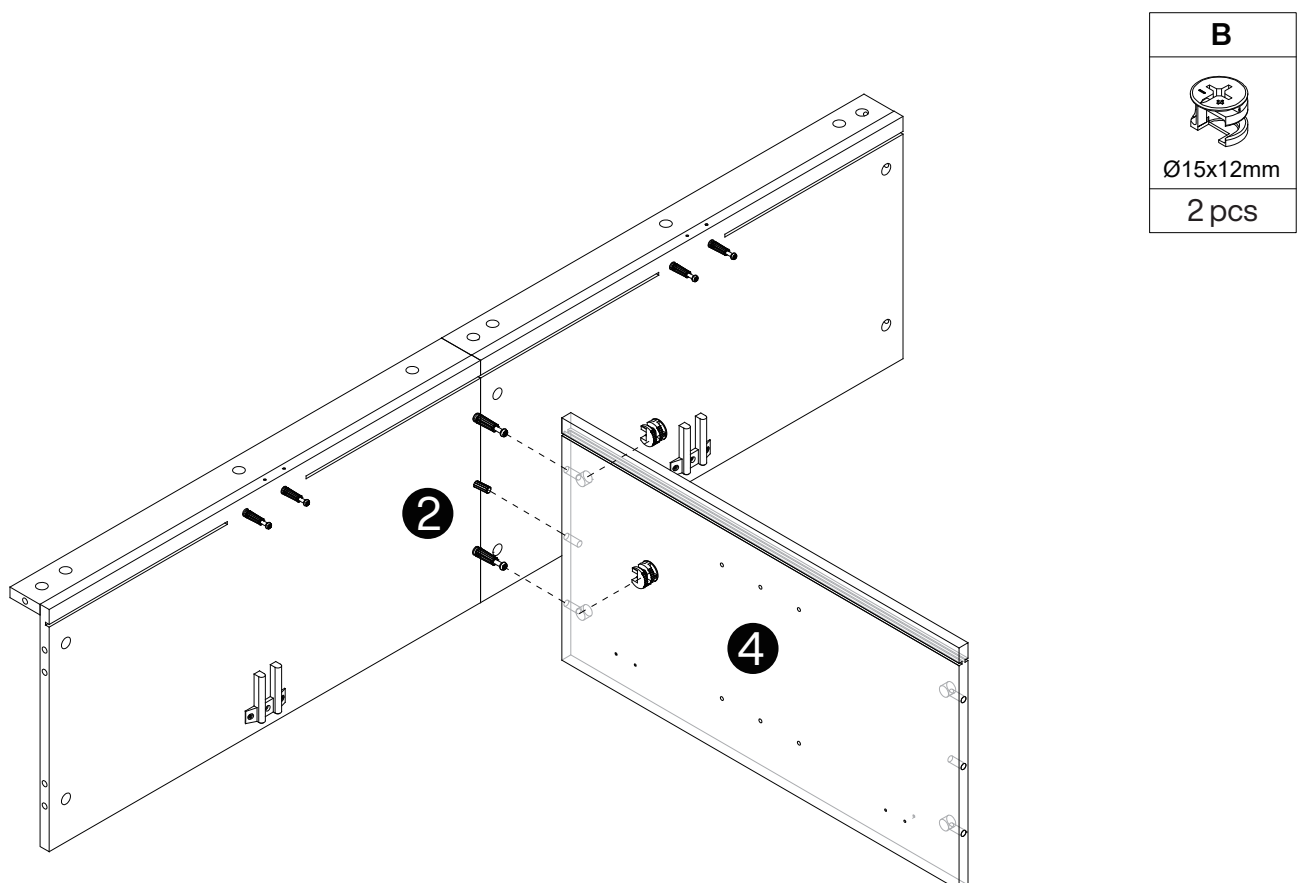

7

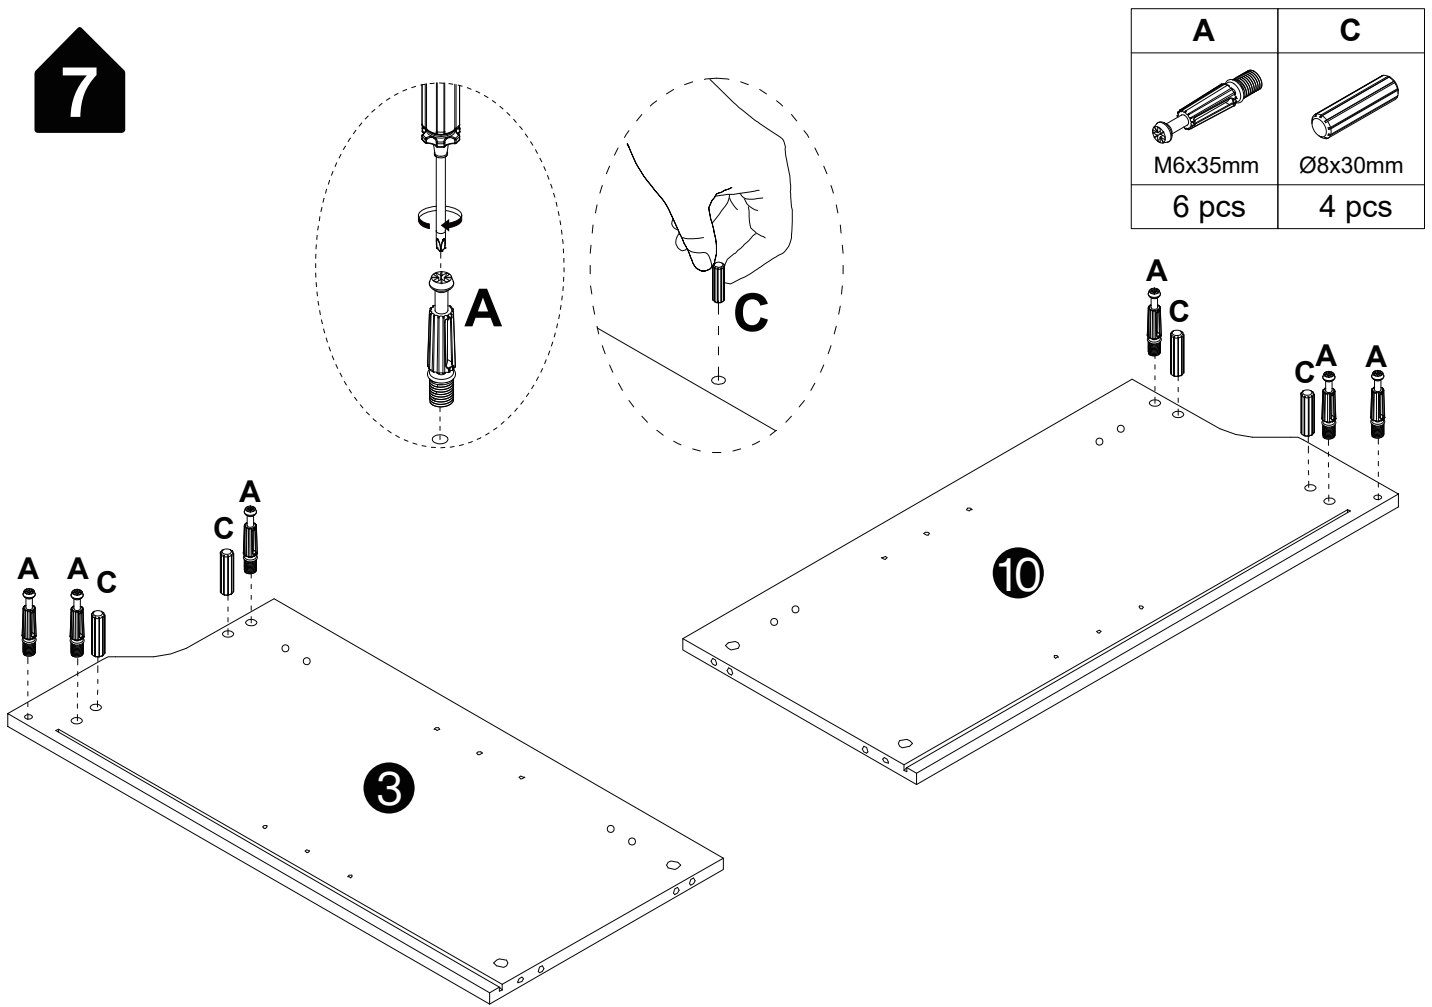



8

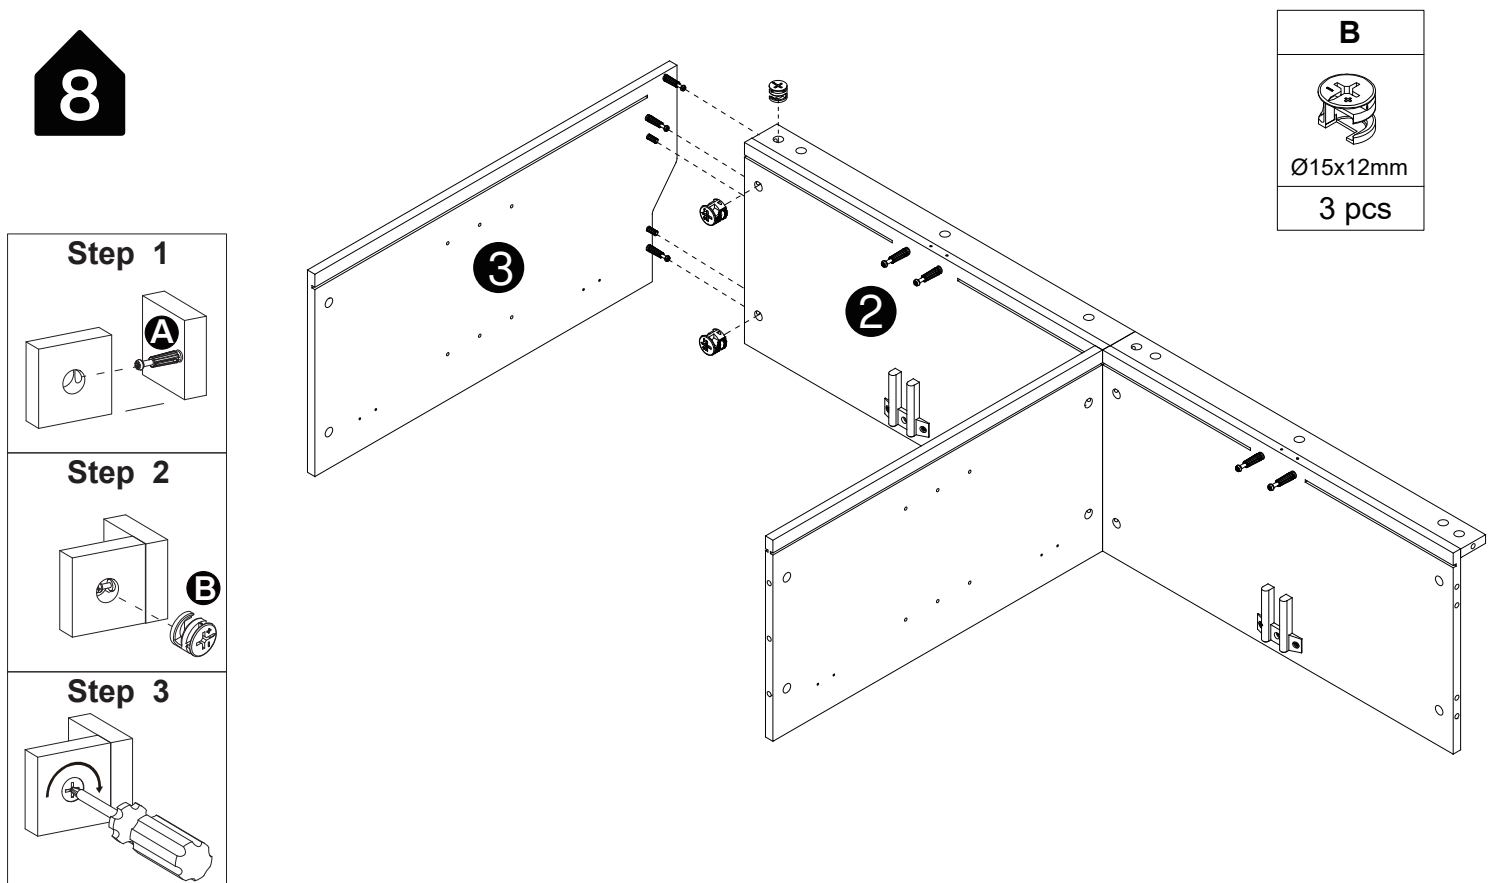

9

B


Ø15x12mm
3 pcs

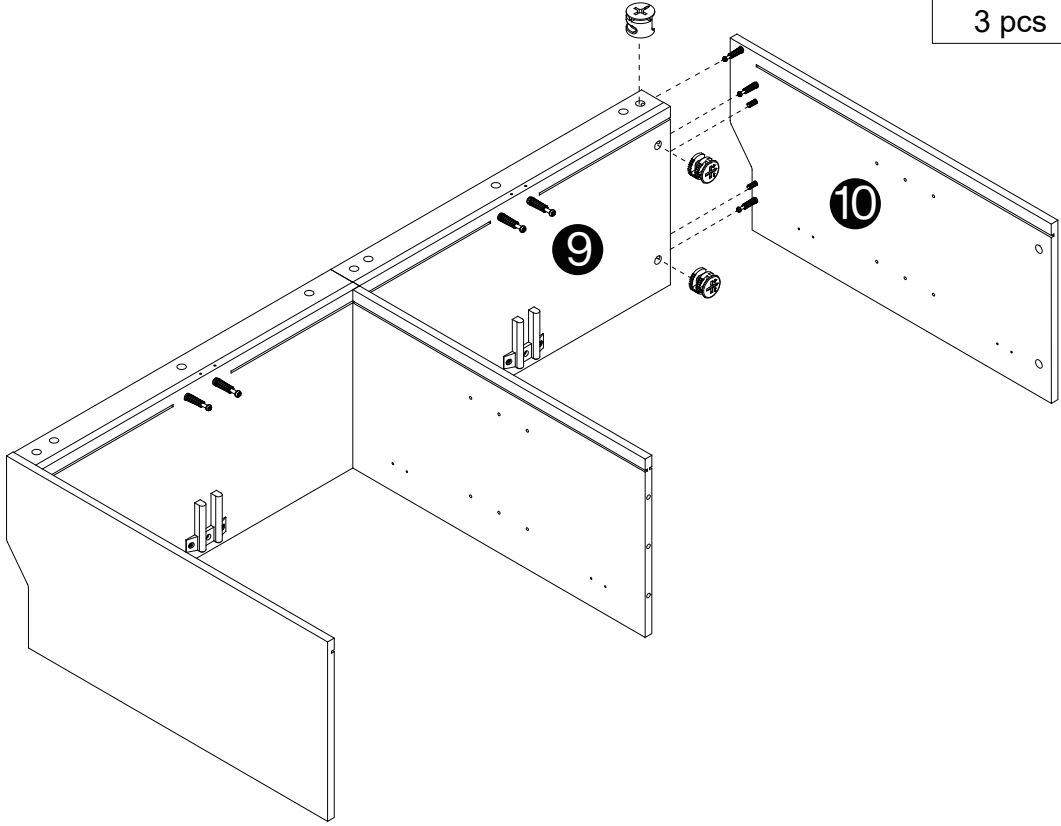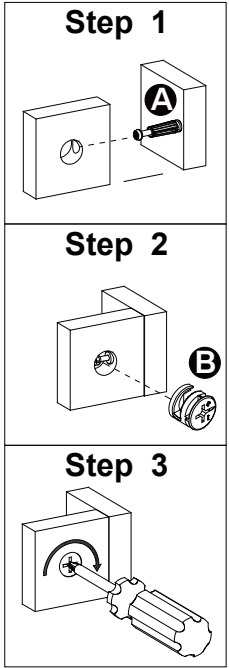


10

B


Ø15x12mm
4 pcs

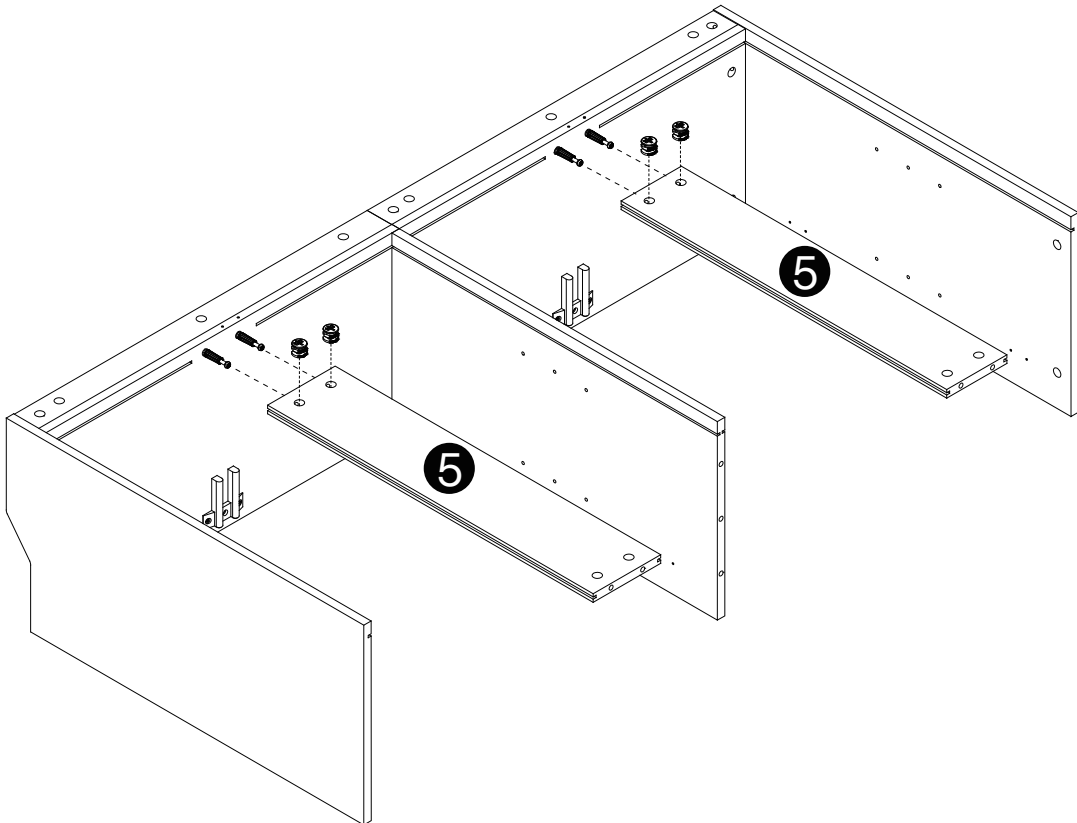



11

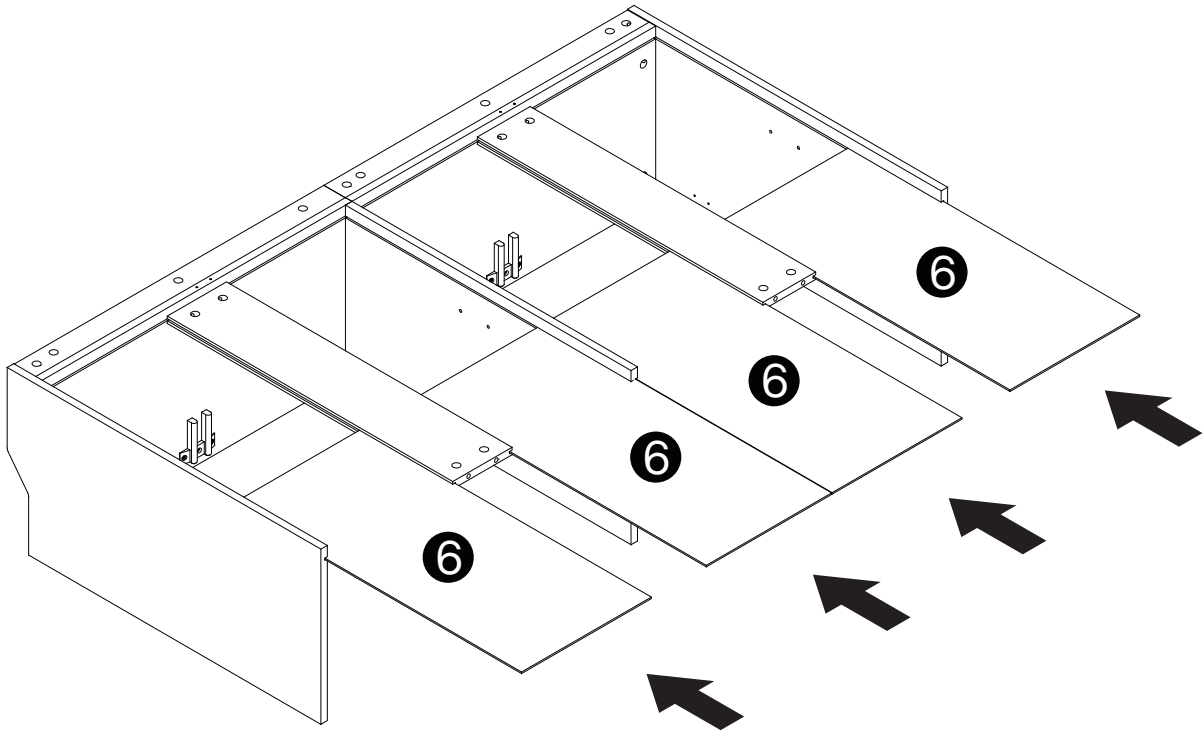


12

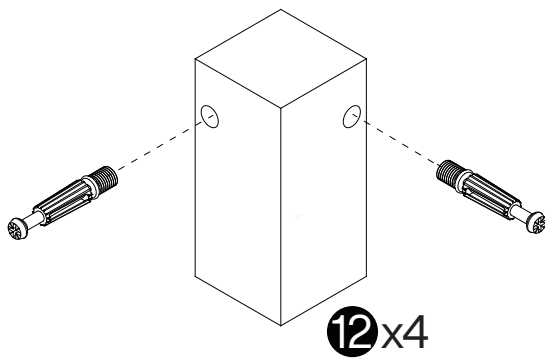


A

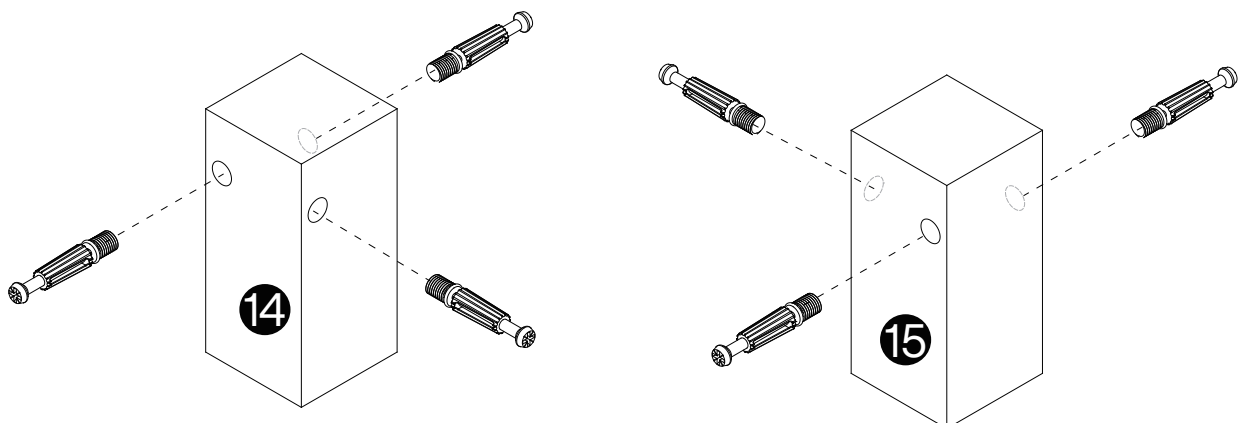M6x35mm
14 pcs

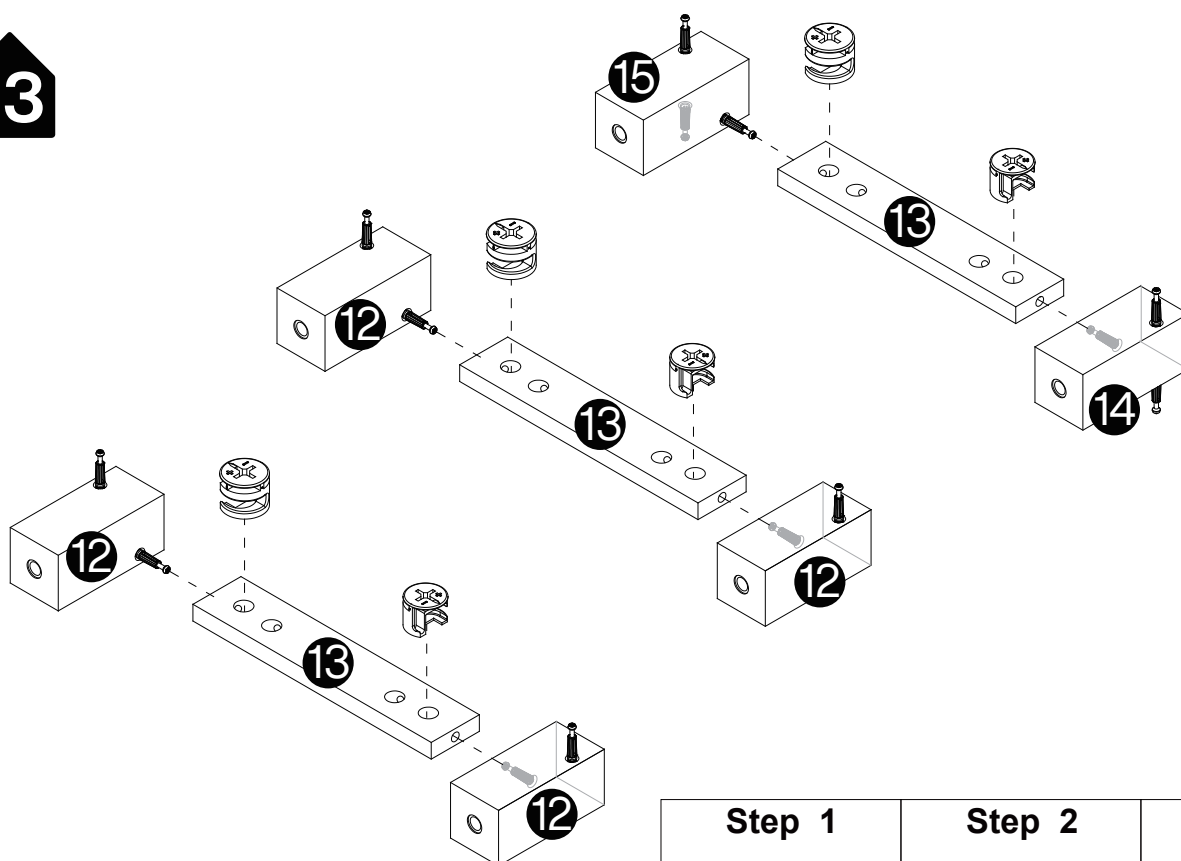


13

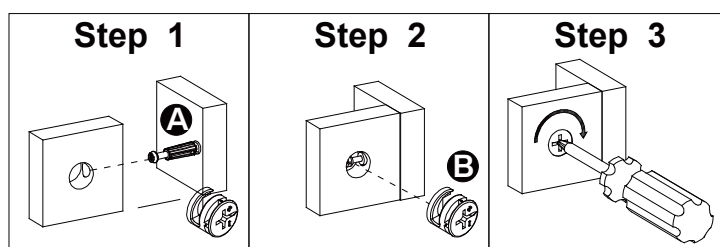

B	
	
Ø15x12mm	
6 pcs	






14

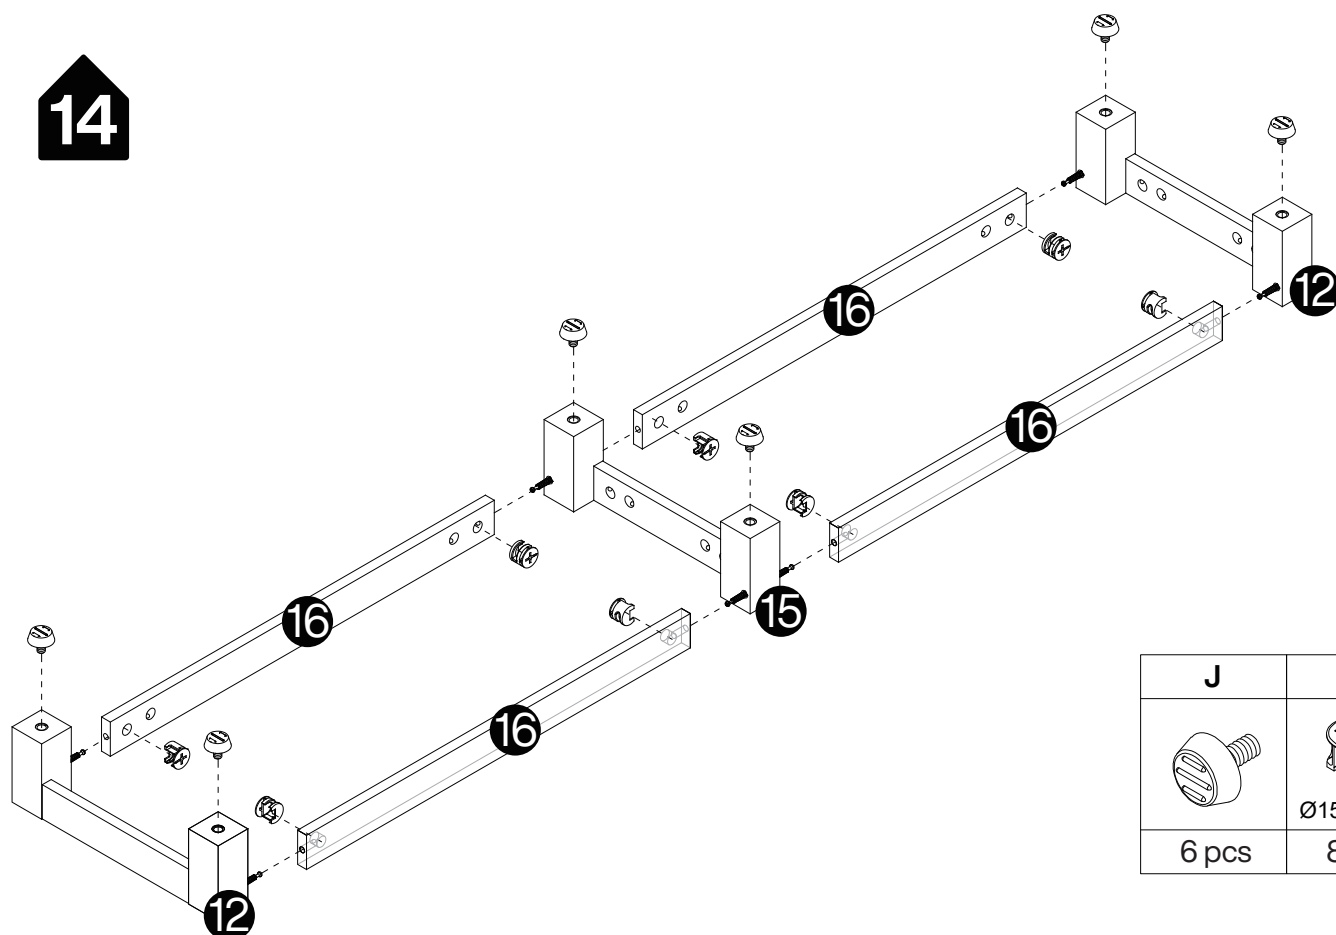

J	B
	
Ø15x12mm	
6 pcs	8 pcs

15



A	C
	
M6x35mm	Ø8x30mm
16 pcs	2 pcs

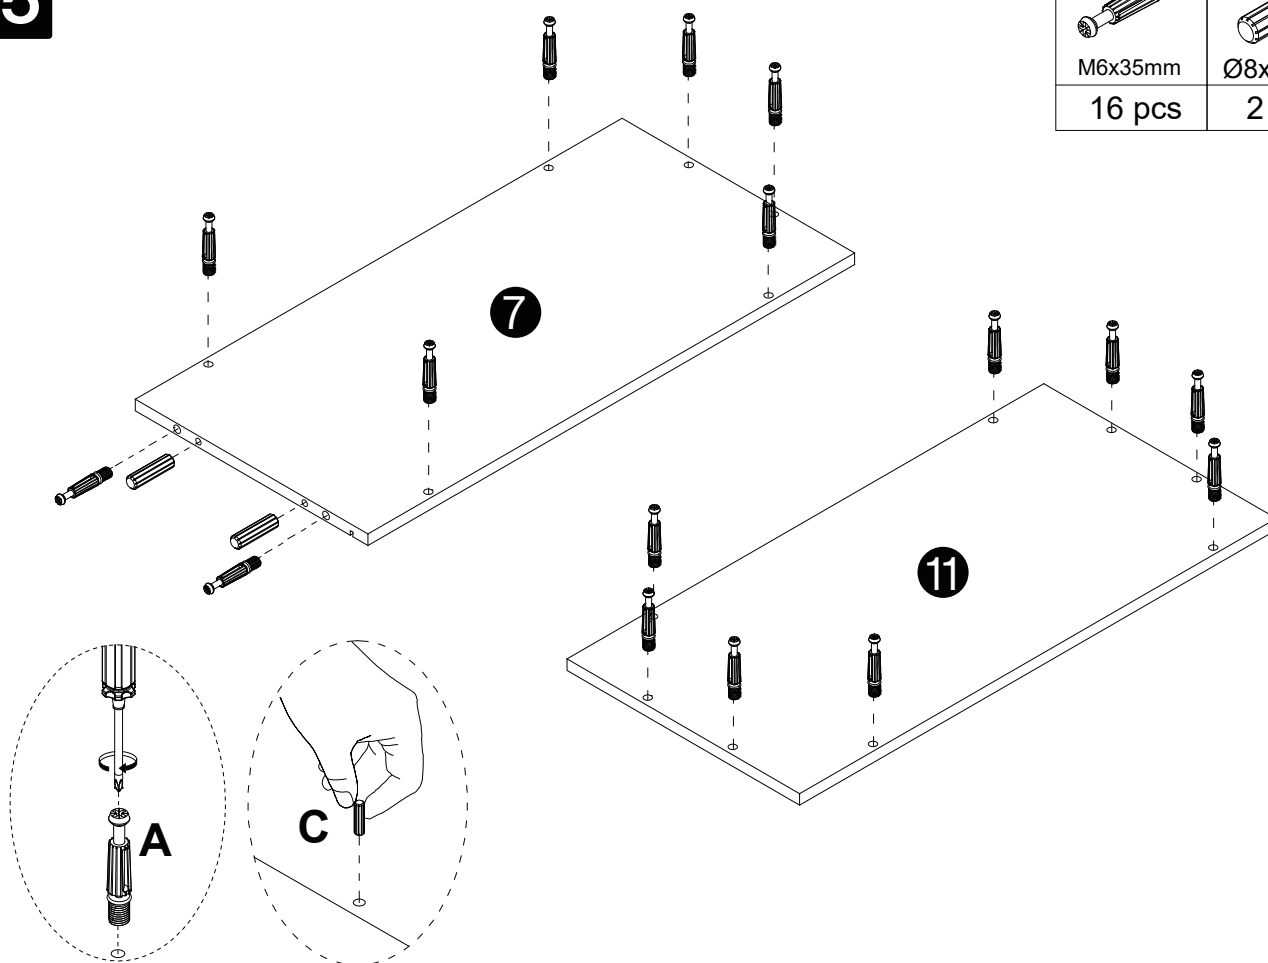


16

B


Ø15x12mm
2 pcs

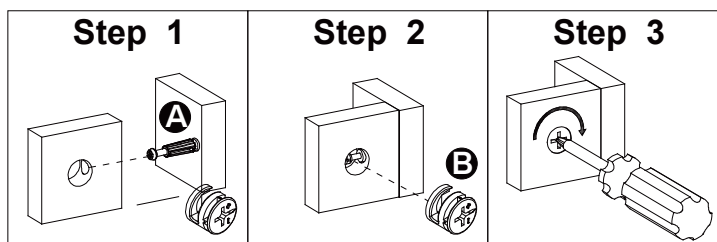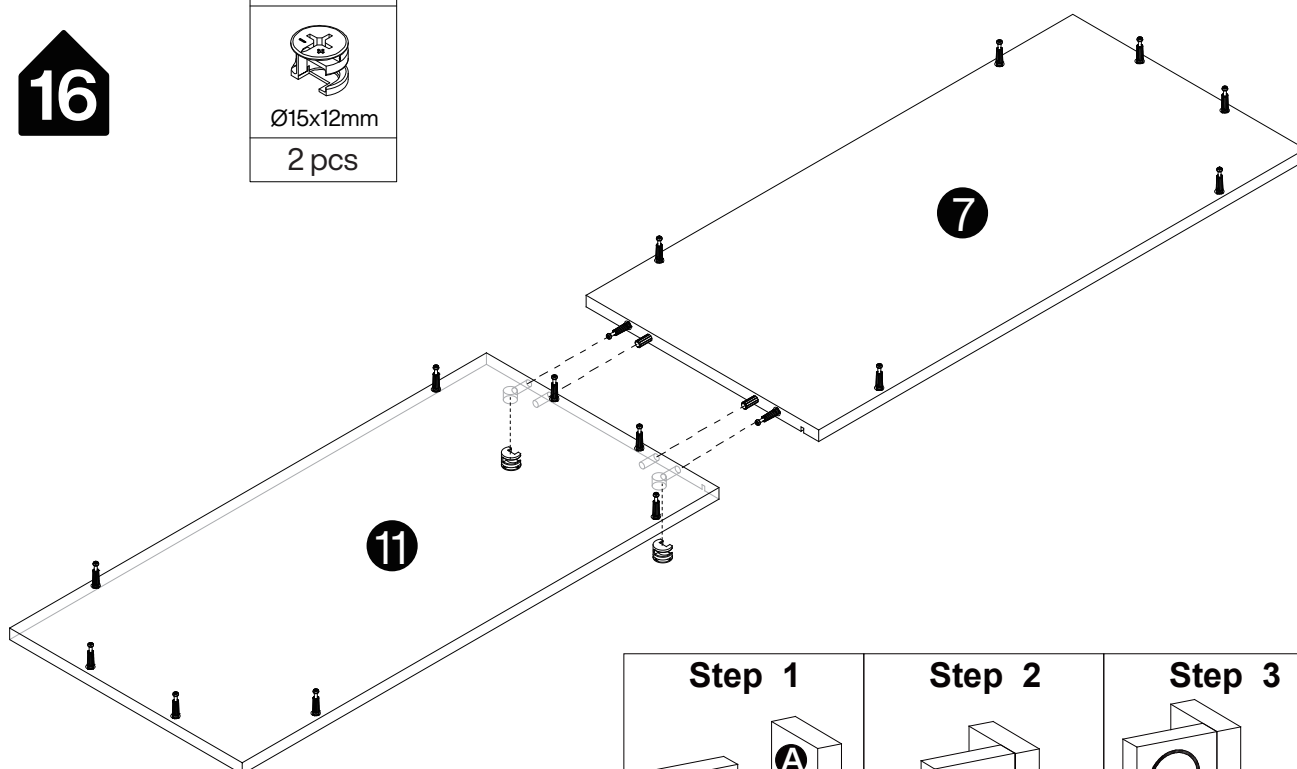



17


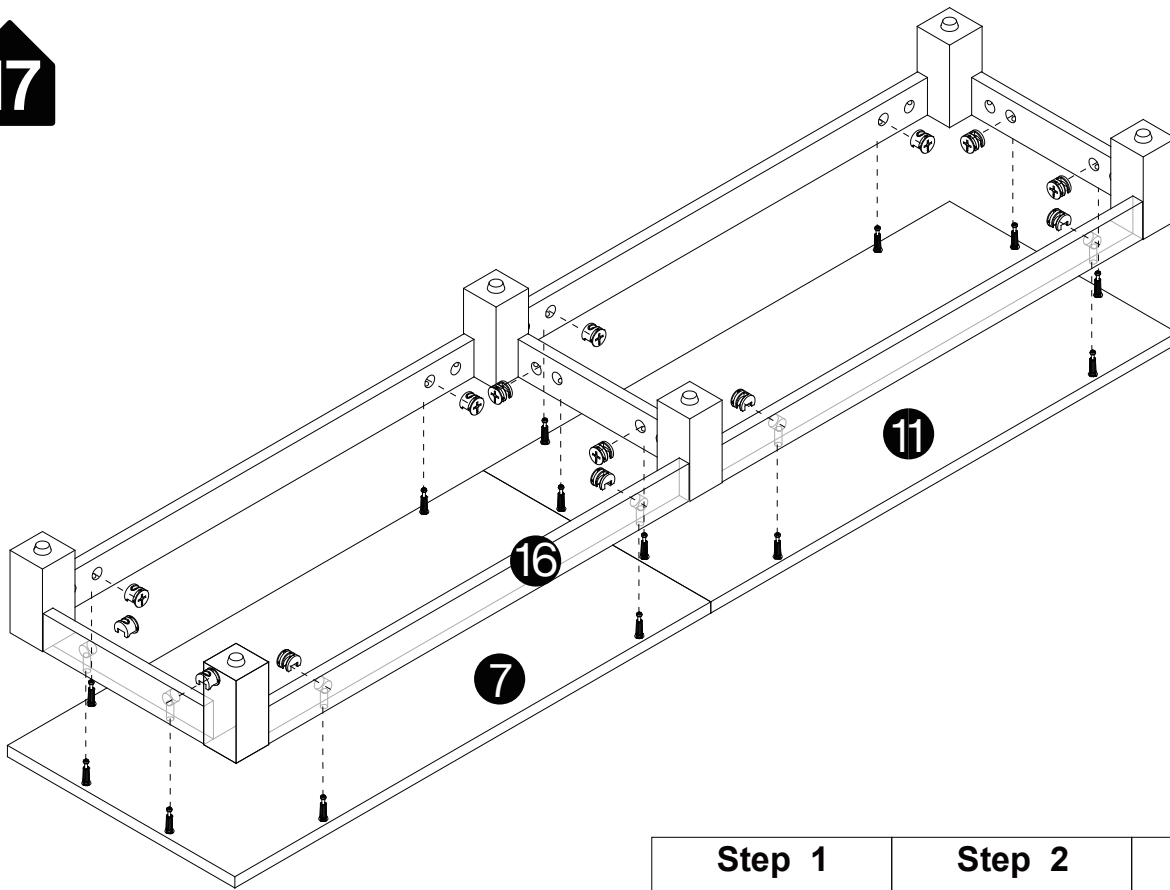


B	
	
Ø15x12mm	
14 pcs	

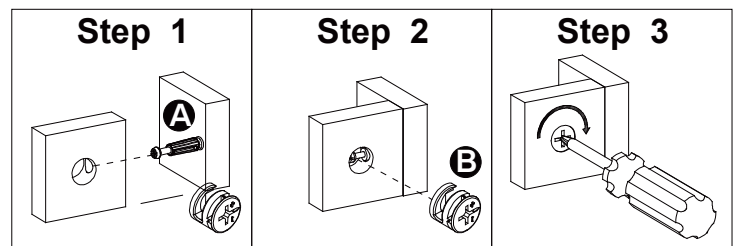


18

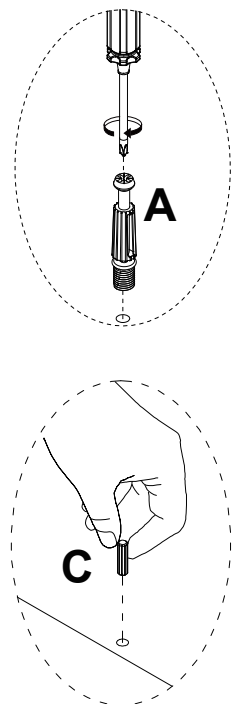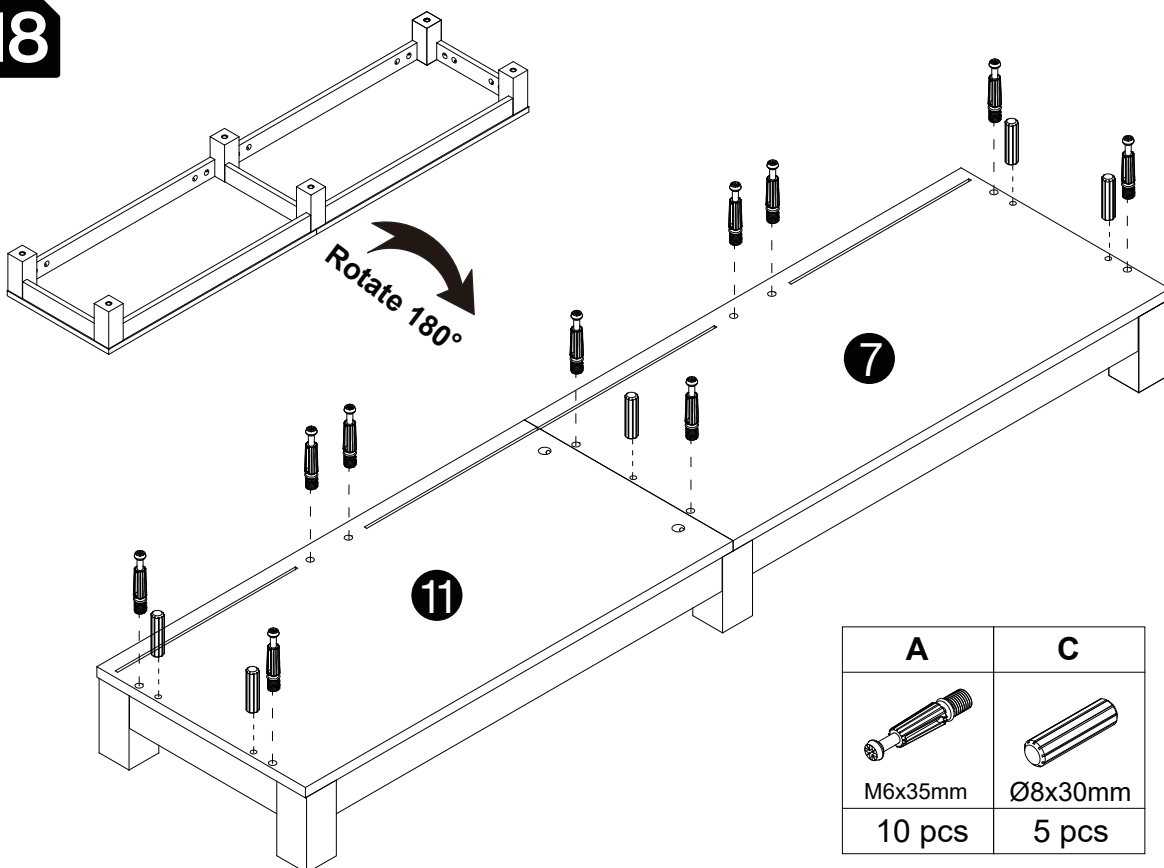


A	C
	
M6x35mm	Ø8x30mm
10 pcs	5 pcs

19

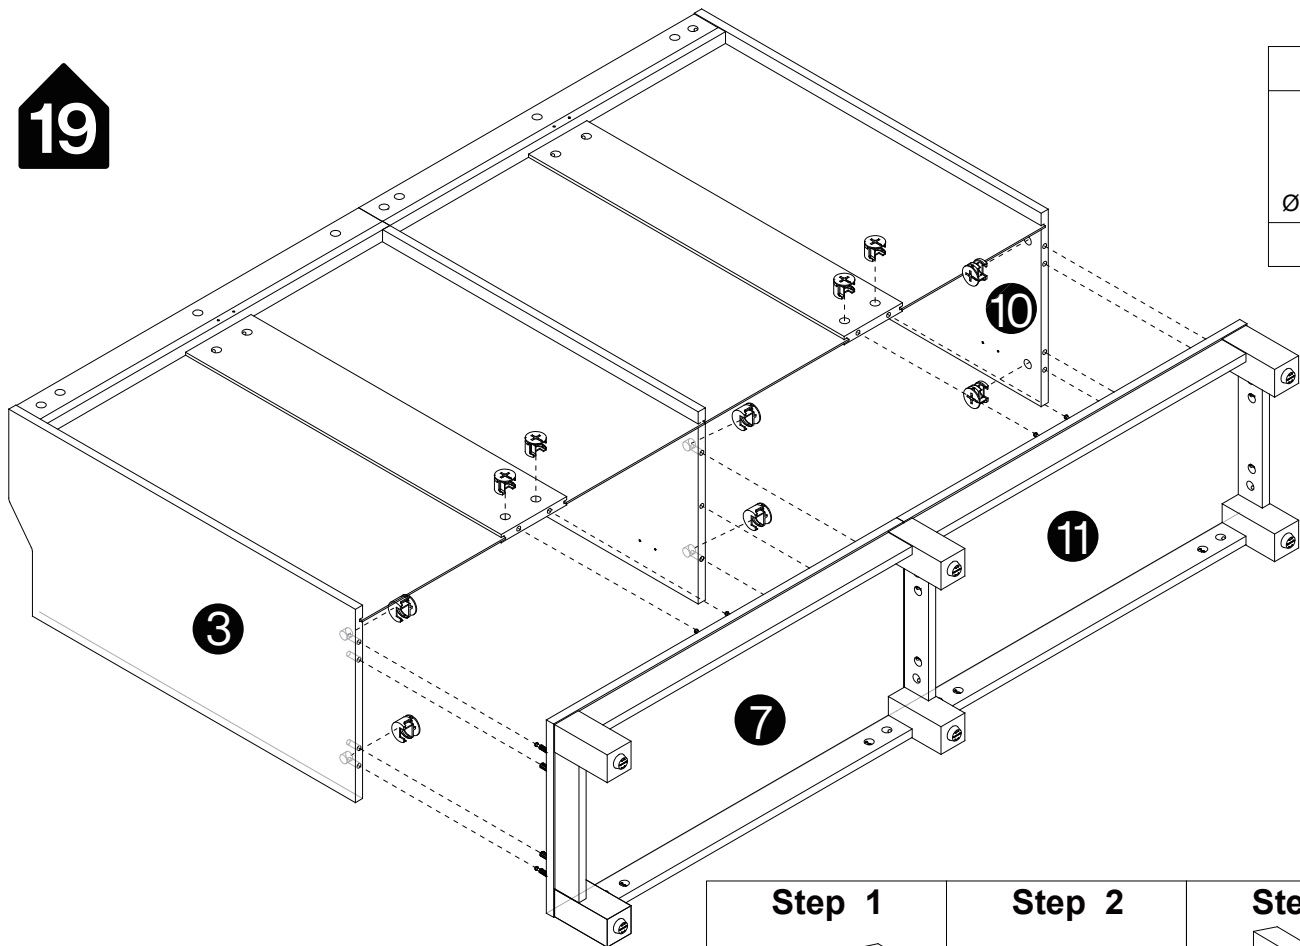



B


Ø15x12mm
10 pcs

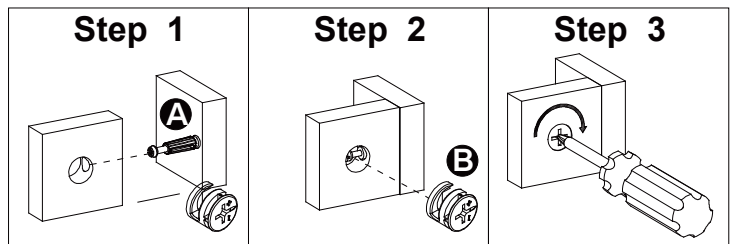


20

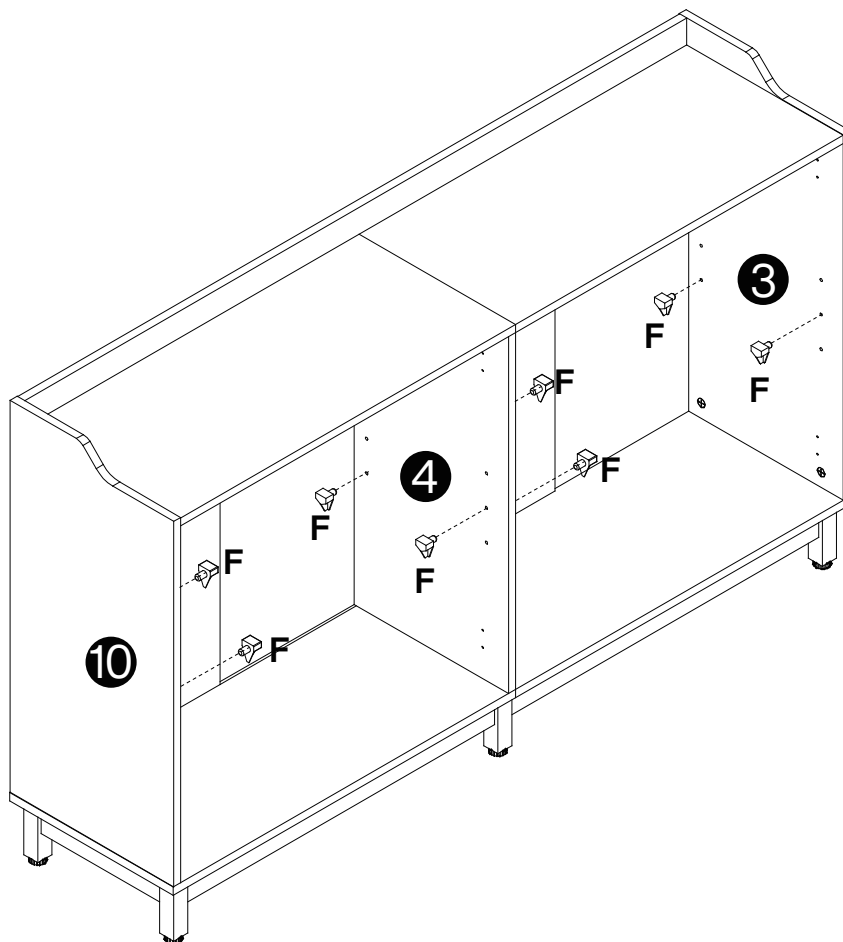


F

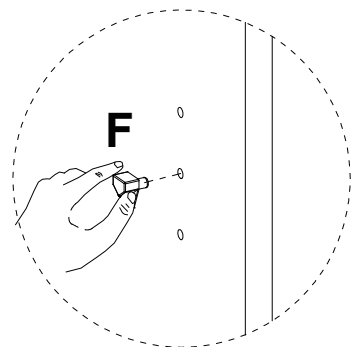8 pcs

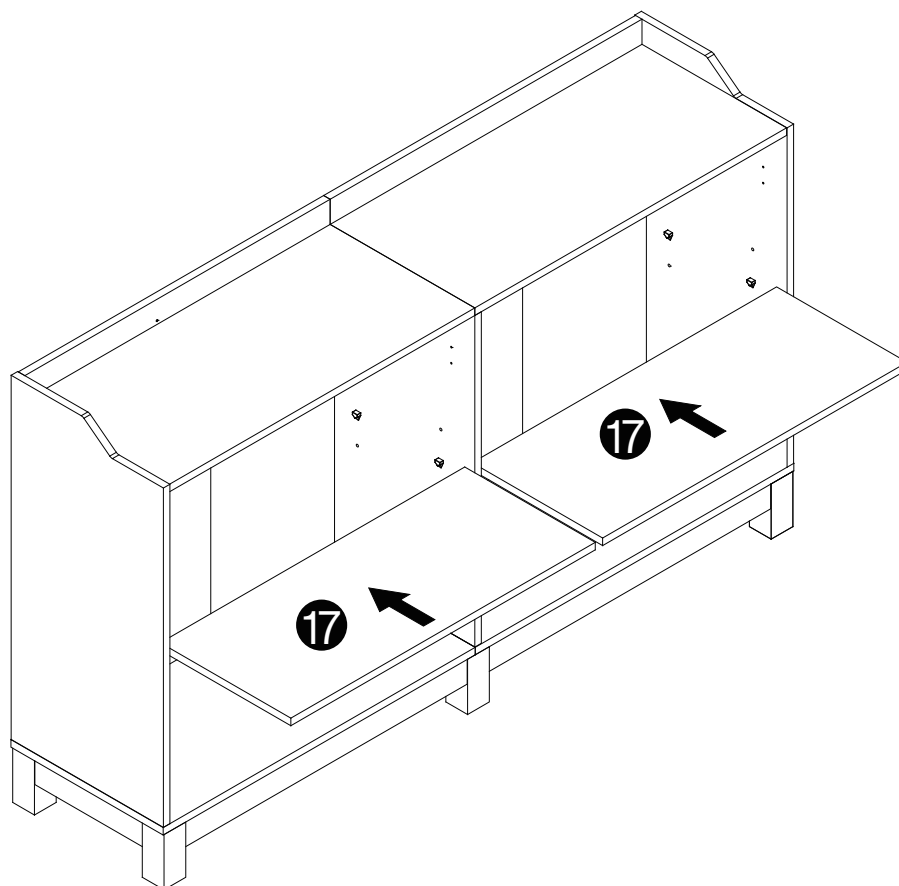

21

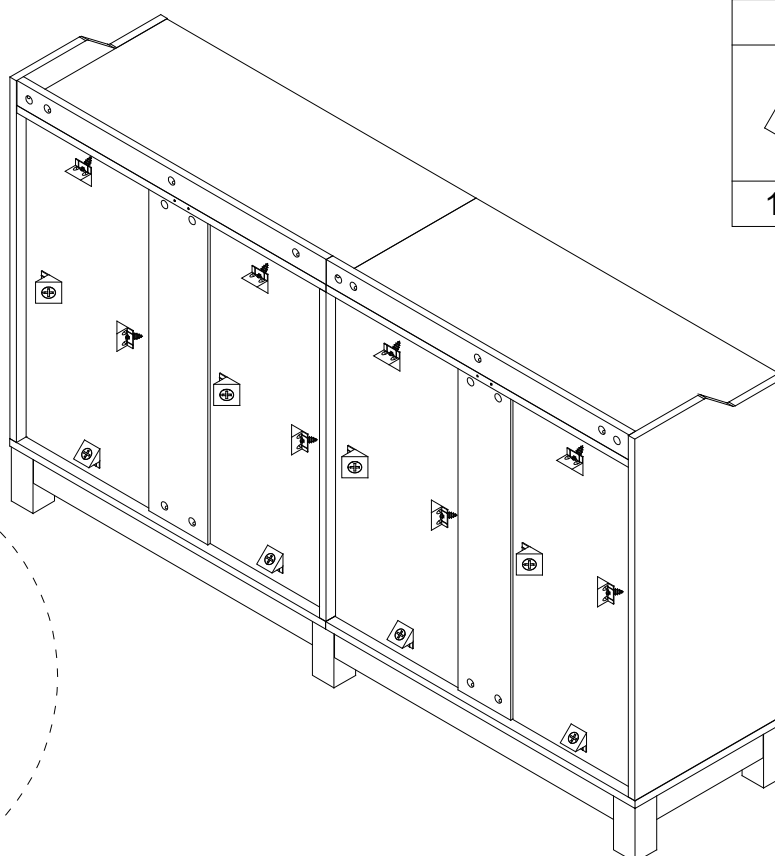


22





I	E
	
16 pcs	16 pcs

Ø3.5x14mm

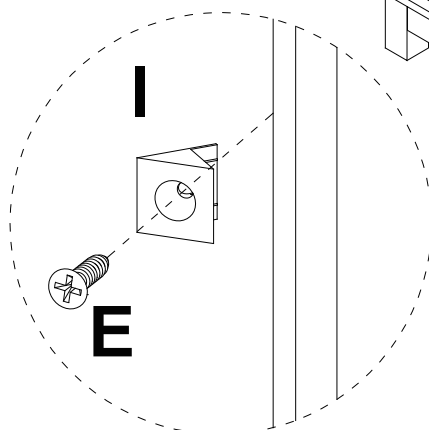


23

H	E
	 Ø3.5x14mm
8 pcs	16 pcs

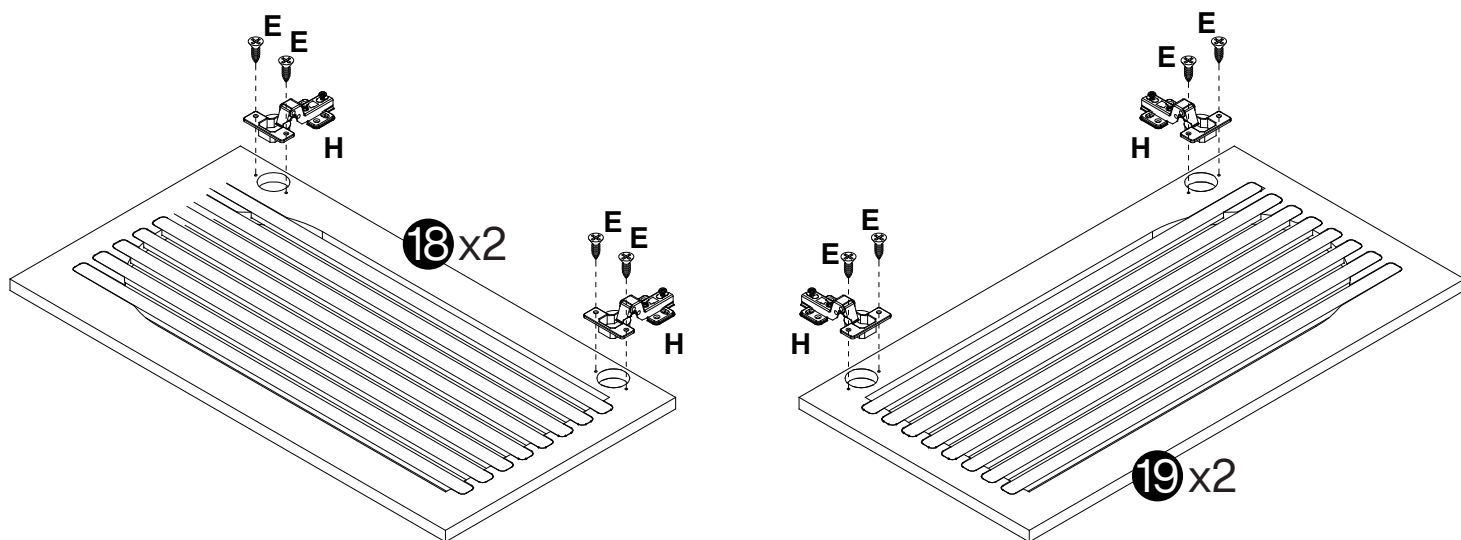

24


E
 Ø3.5x14mm
32 pcs

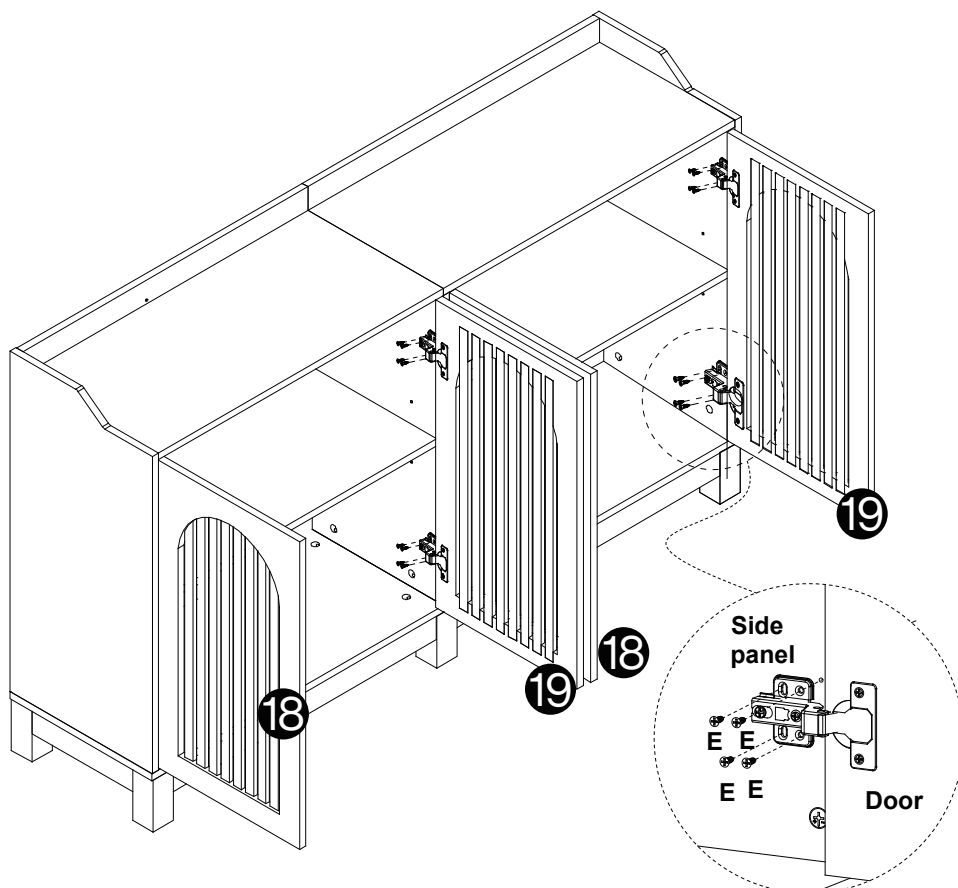

To prevent the door hinge from falling off,
please install 4 screws

Step 1


Open the door.

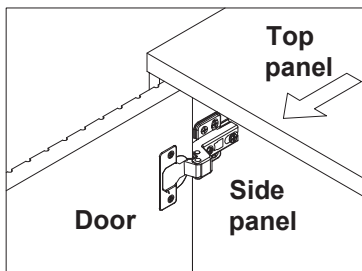

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



Step 2

Adjust the door panel to be flush with side panel and top panel edge.

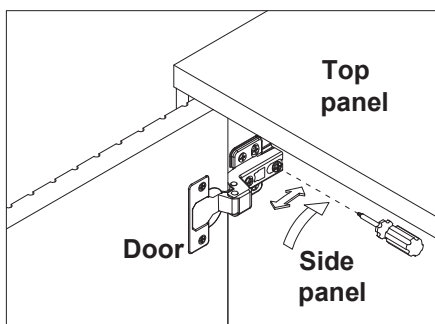



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

Step 2a MOVE DOOR OUT

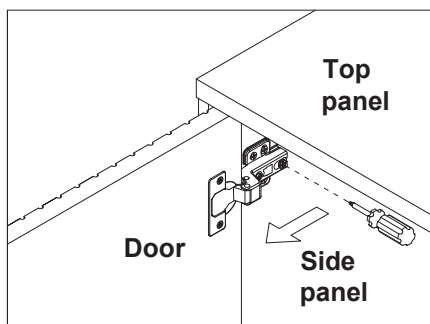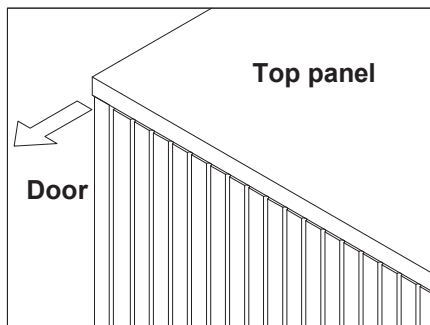

Pull the hinge forward a little.


Step 2b MOVE DOOR IN

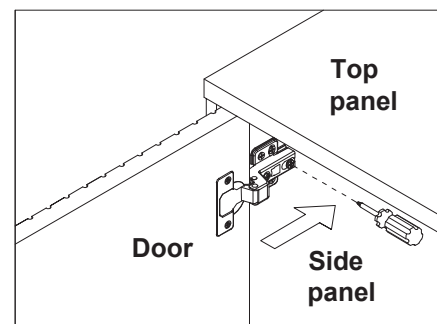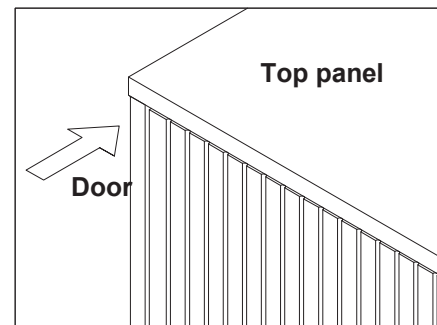

Push the hinge back a little.



Step 3

Adjust the gap between the door panel and the side panel.

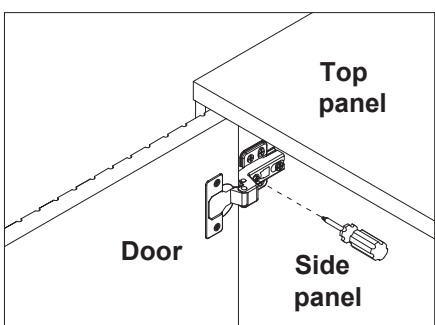



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

Step 3a MOVE DOOR LEFT

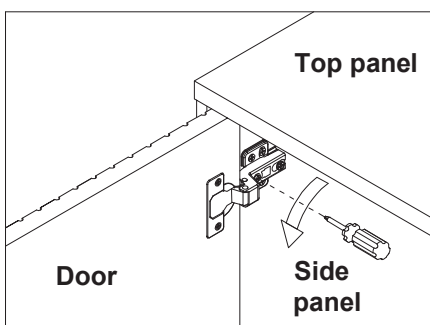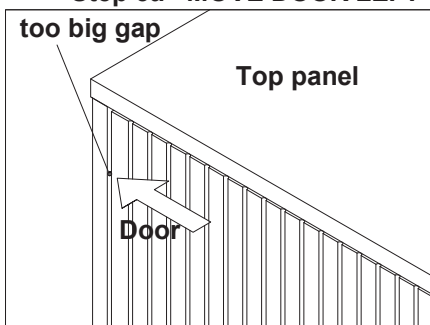


Turn the screw clockwise a little as shown to make the gap smaller

Step 3b MOVE DOOR RIGHT

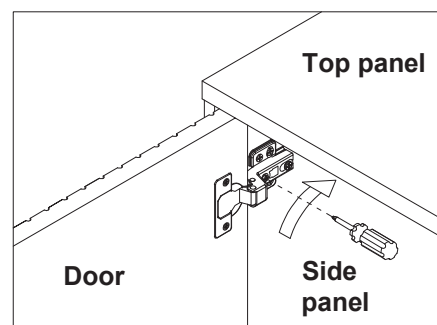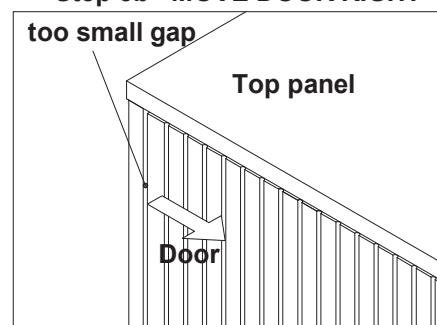


Turn the screw counterclockwise a little as shown to make the gap bigger


K

2 pcs

Wall


Step1

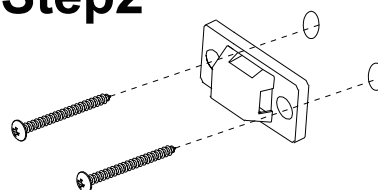


Step2



Step3

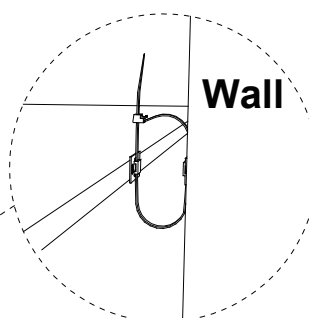

Wall

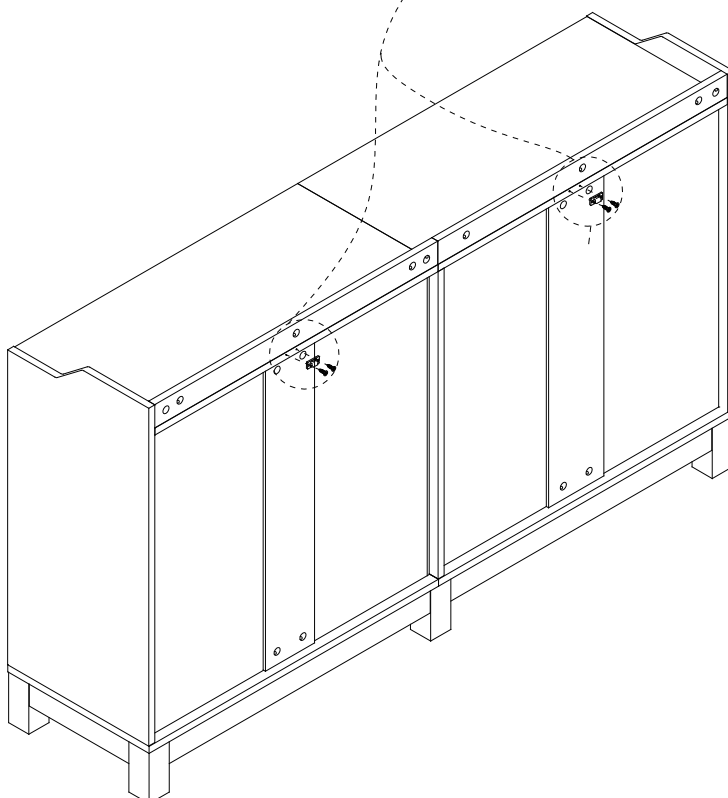

Thank you for your support!

