





Assembly Instructions

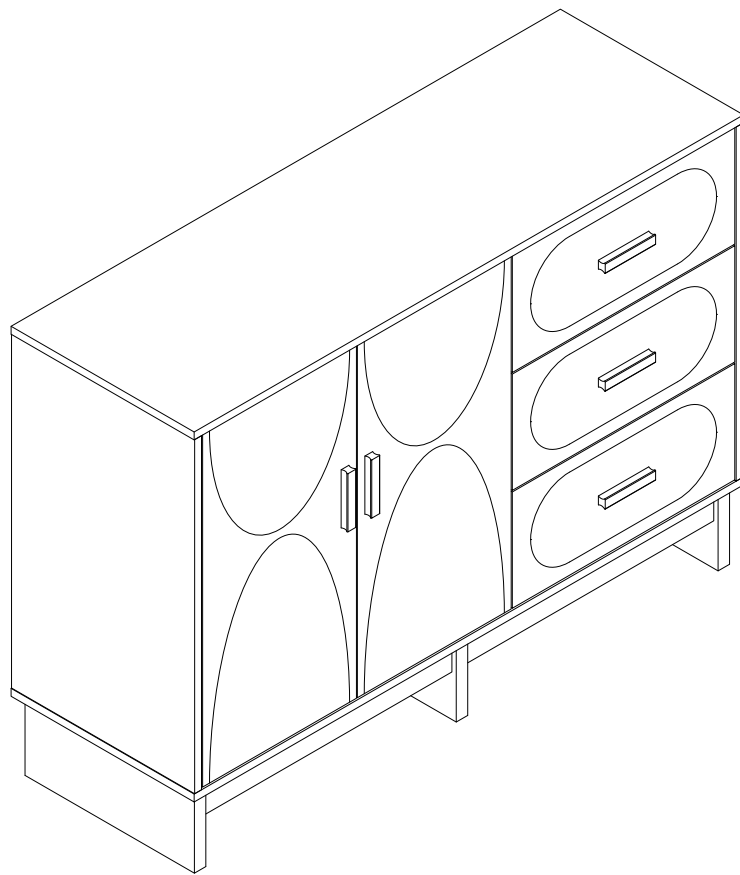

Sideboard 1.5


Model No.
SQ-CBG-7003

The beginning of installation may feel confusing and painful, but it will get better.

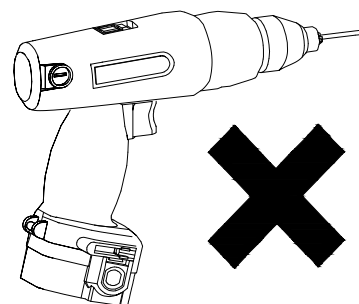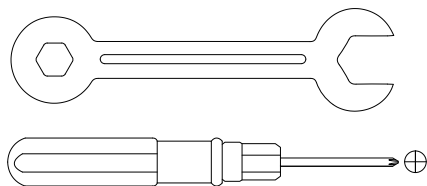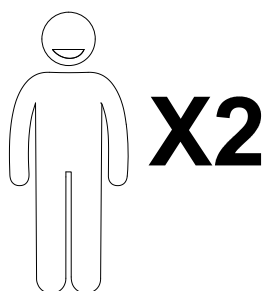



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

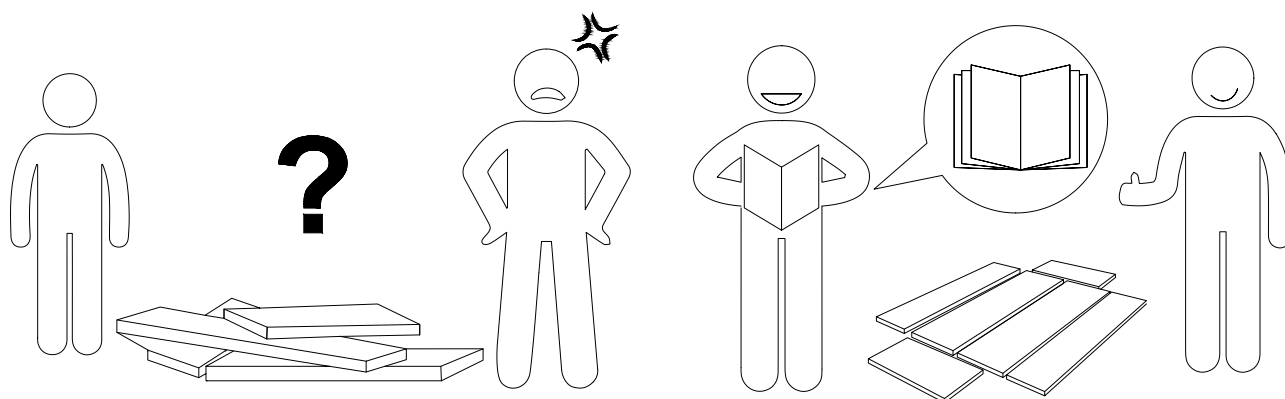

AVOID SCRATCHES






















In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

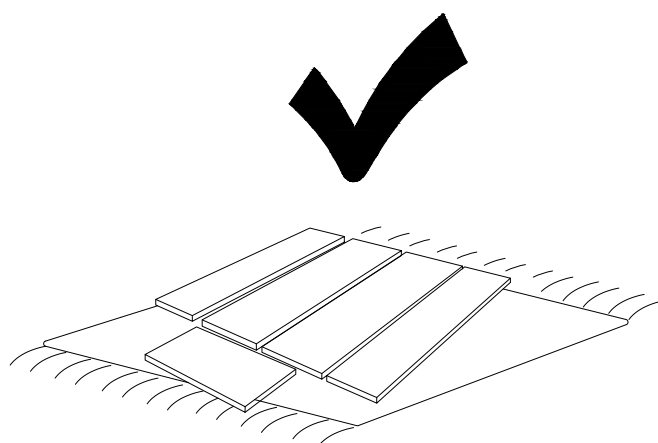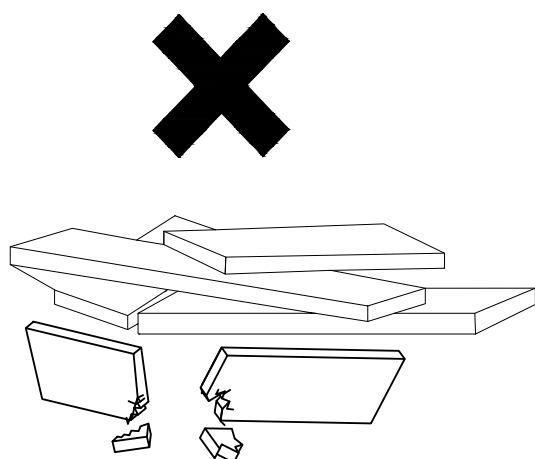





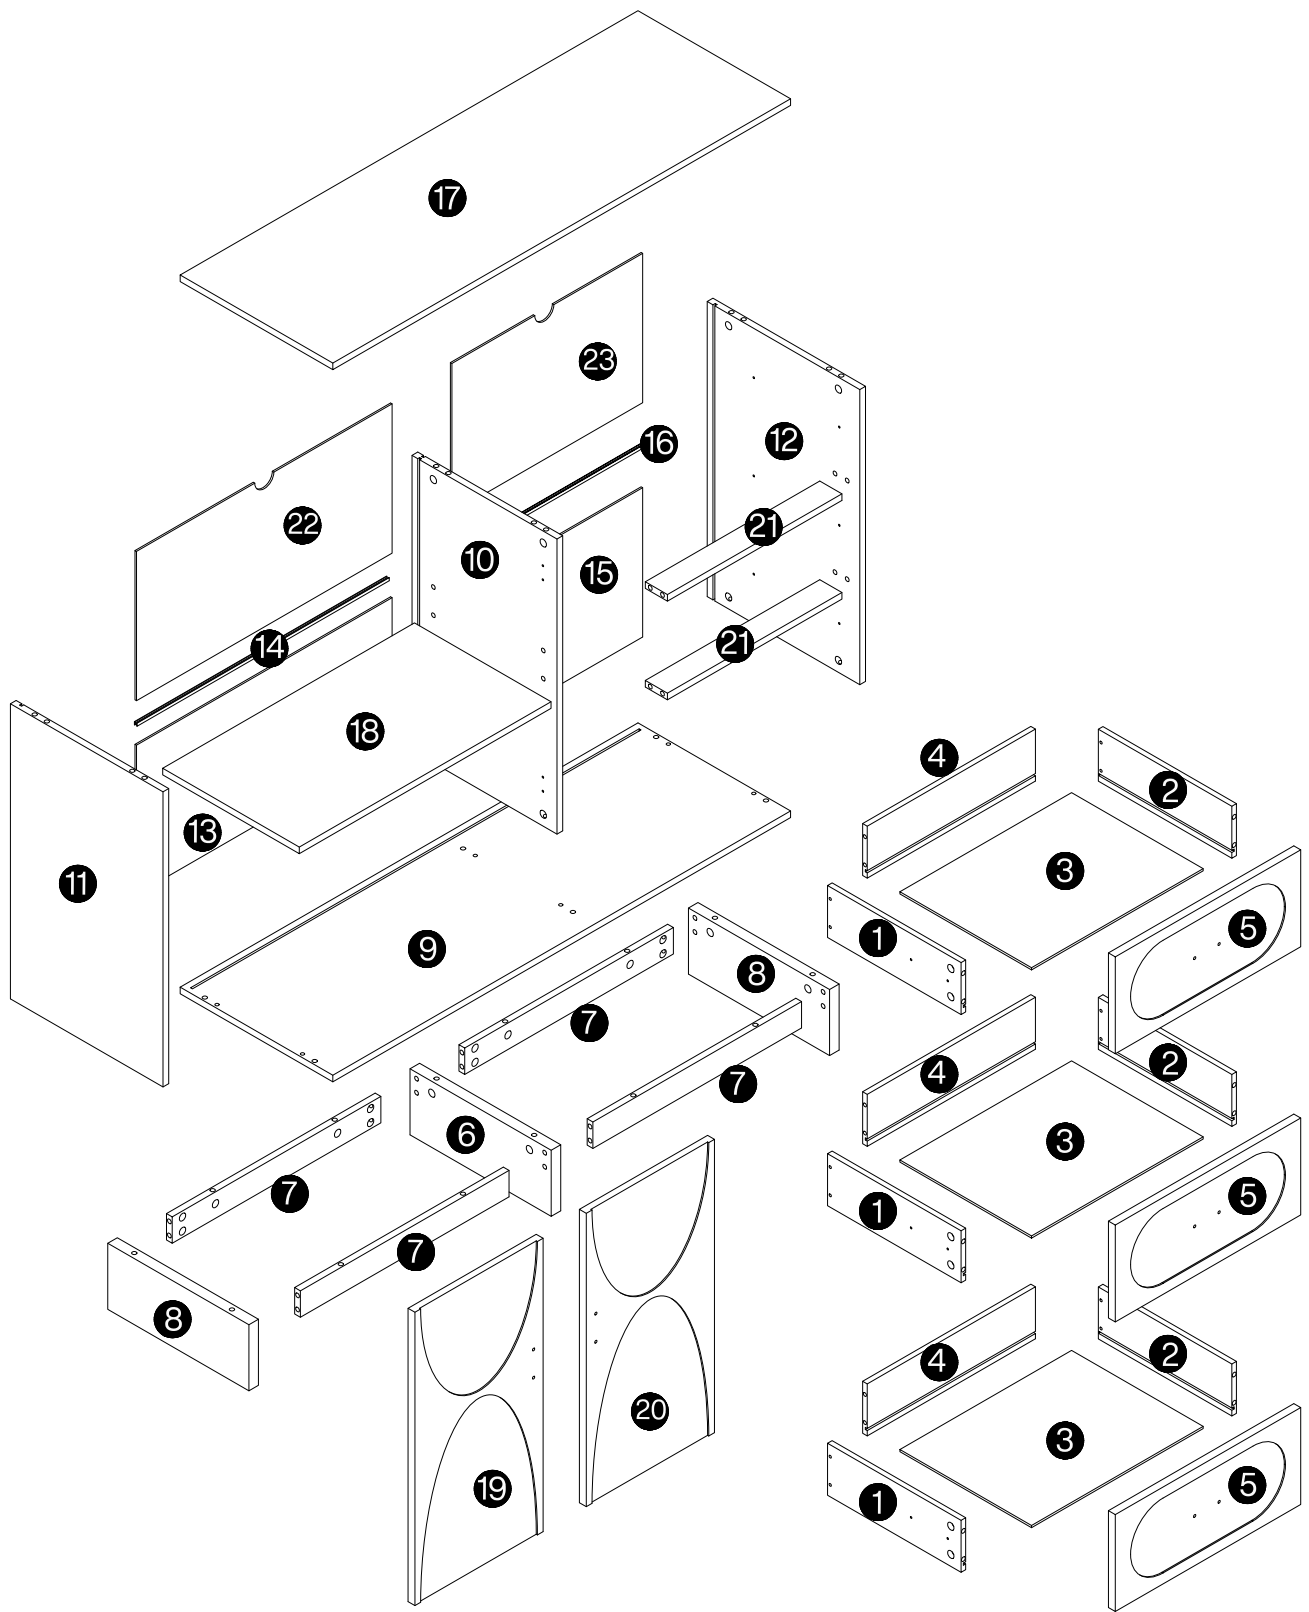







Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
 Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

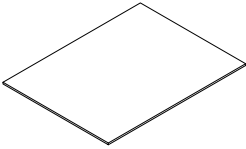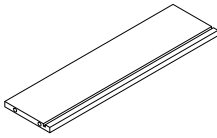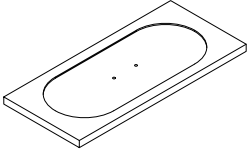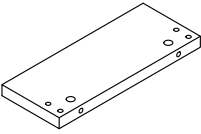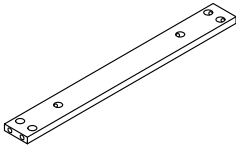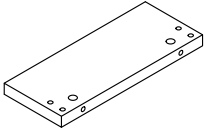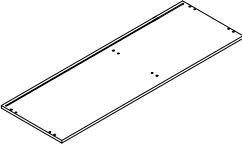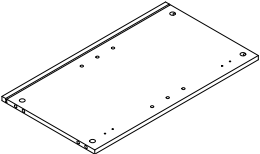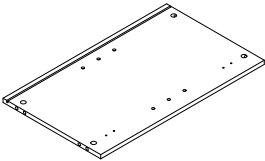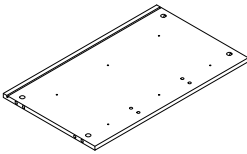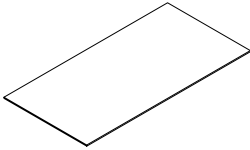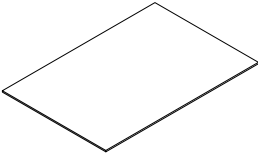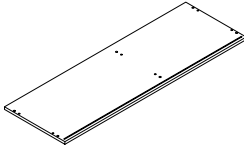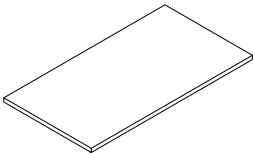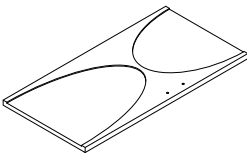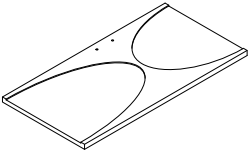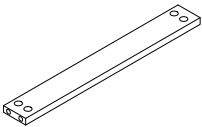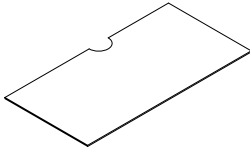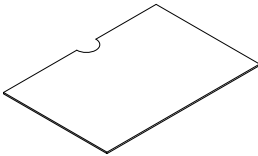1  3pcs	2  3pcs	3  3pcs	4  3pcs	5  3pcs
6  1 pc	7  4pcs	8  2pcs	9  1 pc	10  1 pc
11  1pc	12  1pc	13  1 pc	14  1 pc	15  1 pc
16  1pc	17  1pc	18  1pc	19  1 pc	20  1 pc
21  2pcs	22  1 pc	23  1 pc		

Hardware List

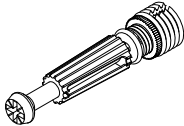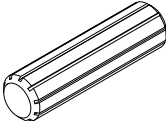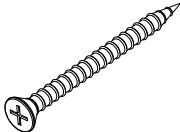
A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	Ø8x30mm	300 mm	Ø3.5x12mm	Ø3.5X35 mm
62+2 pcs	62+2 pcs	12+2 pcs	3 sets	68+4 pcs	12+2 pcs

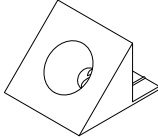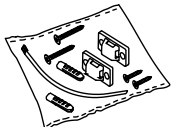G	H	I	J	K	L
					
M5		Dawan Hinge	Straight Hinge	M6X14 mm	
4+2 pcs	8+2 pcs	2 pcs	2 pcs	6pcs	2pcs


M	N	O			
					
64#	Ø4x22mm				
5 pcs	10+2 pcs	1pc			

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

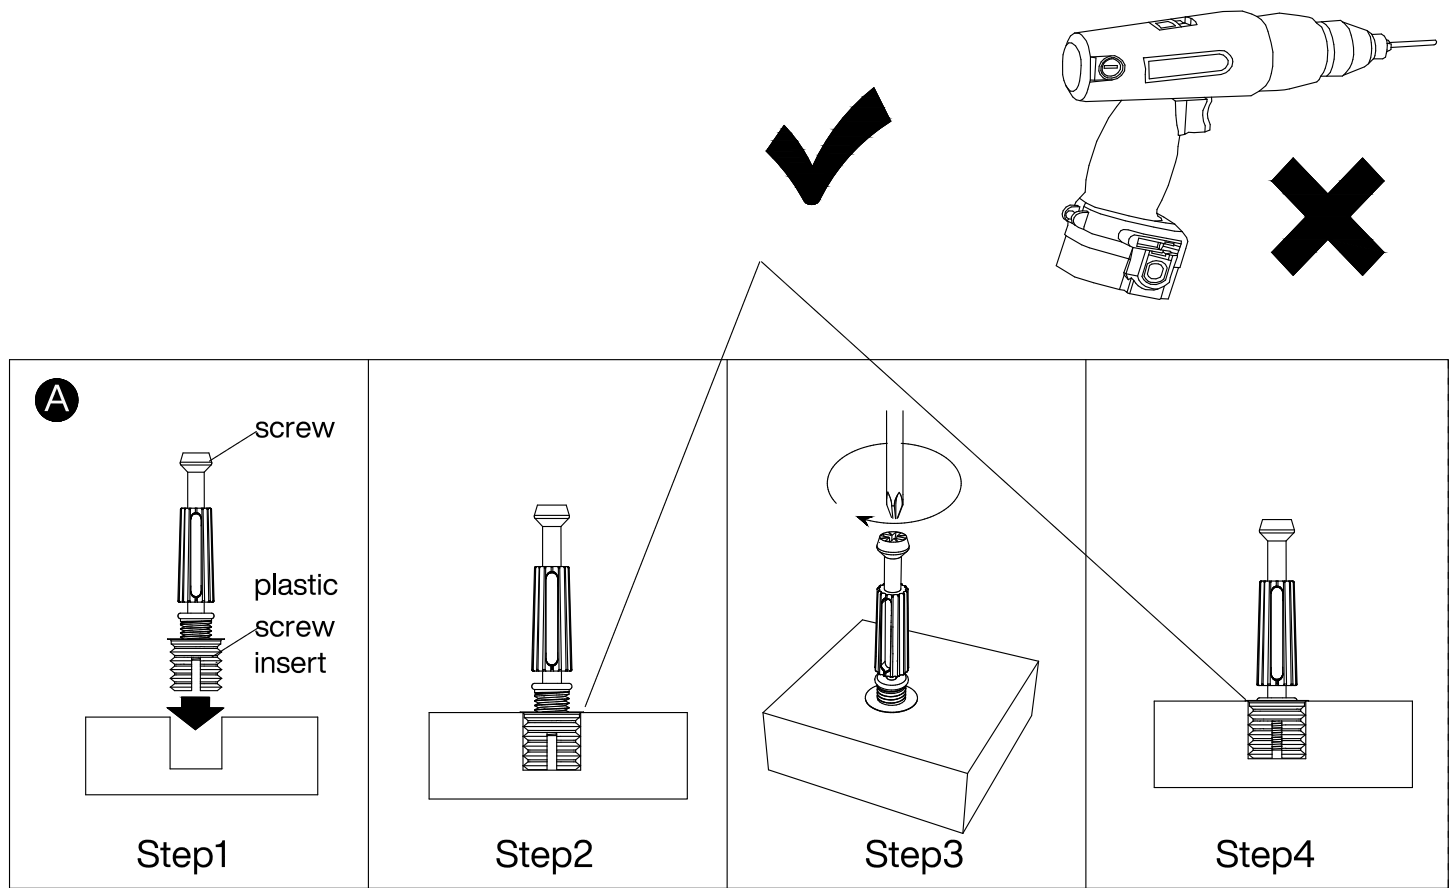


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

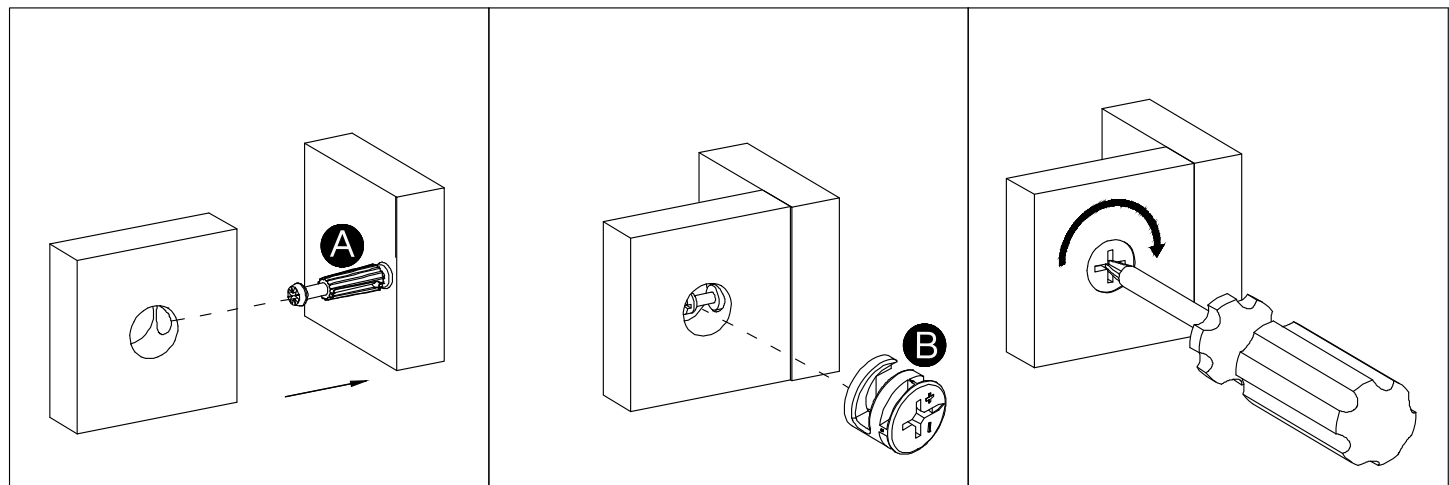

Please split component "D" into "D-1" and "D-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "D" to each side, and then gently push up the lever of component "D-2"

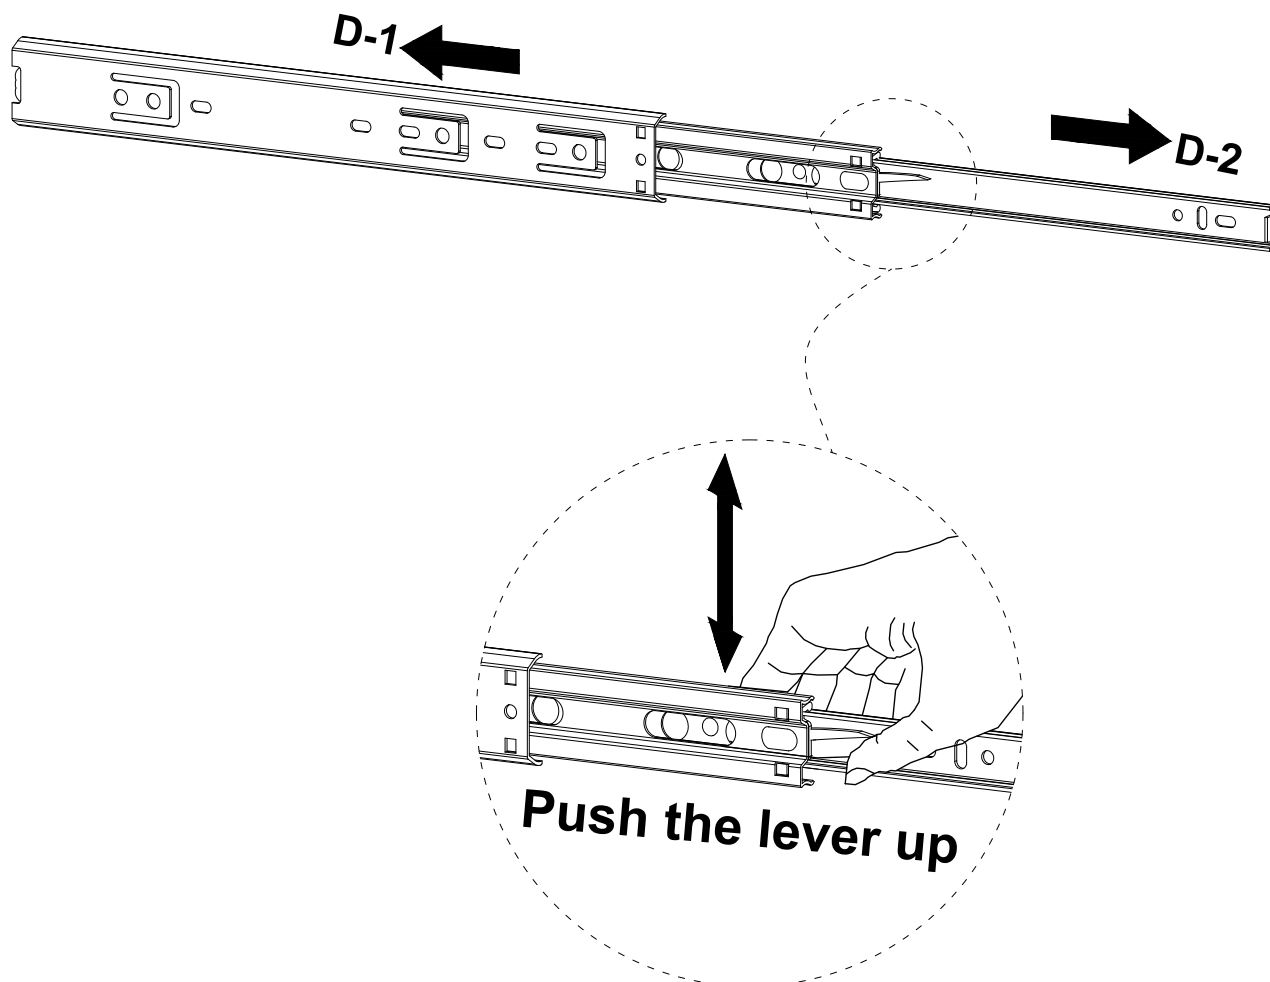


Step 2

Split component "D-1" and "D-2"

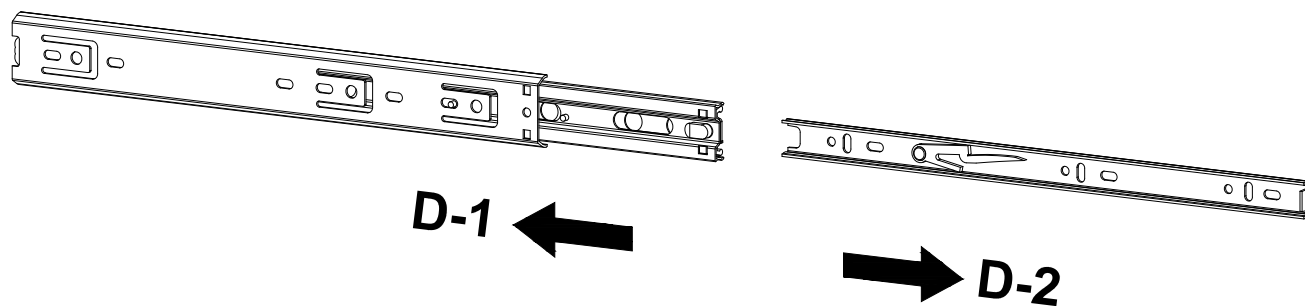


1

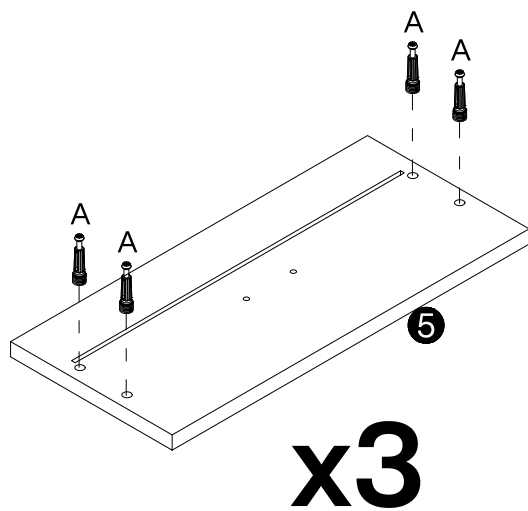



A




M6x40mm
12 pcs

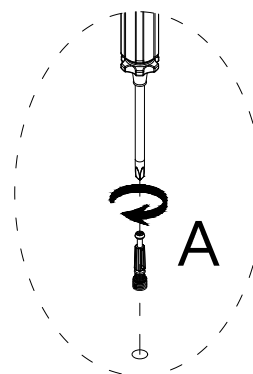


2

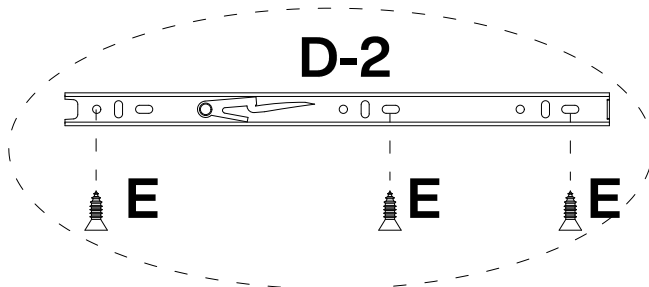

D-2	E
	
6 pcs	Ø3x12mm 24 pcs

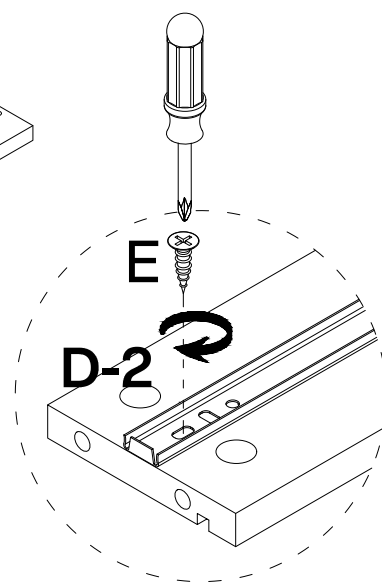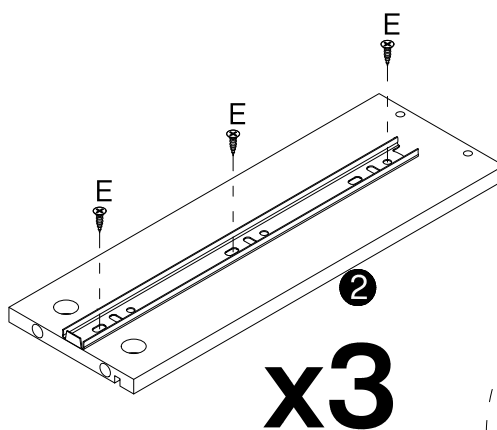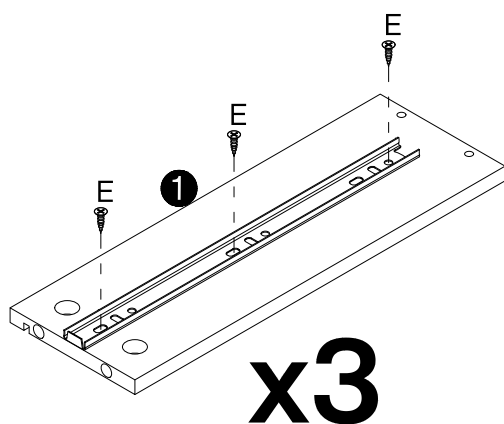


3

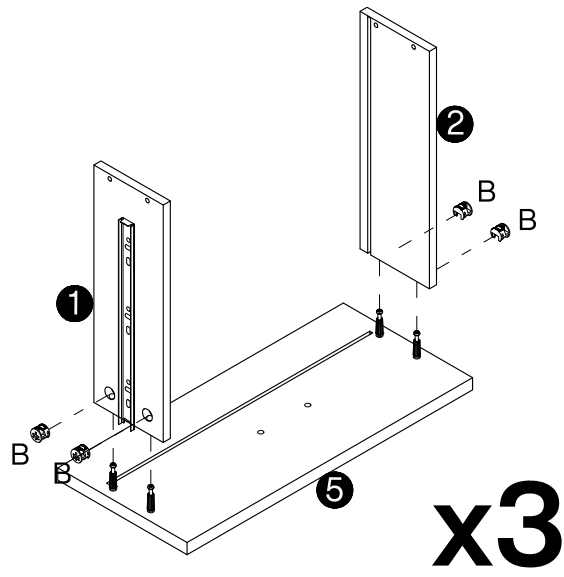


B


Ø15X12 mm
12 pcs

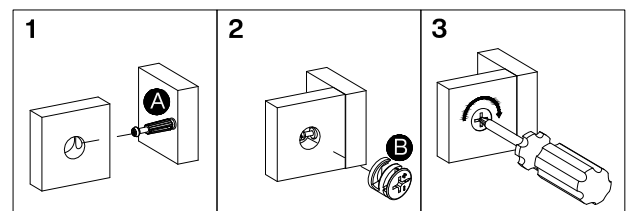

4

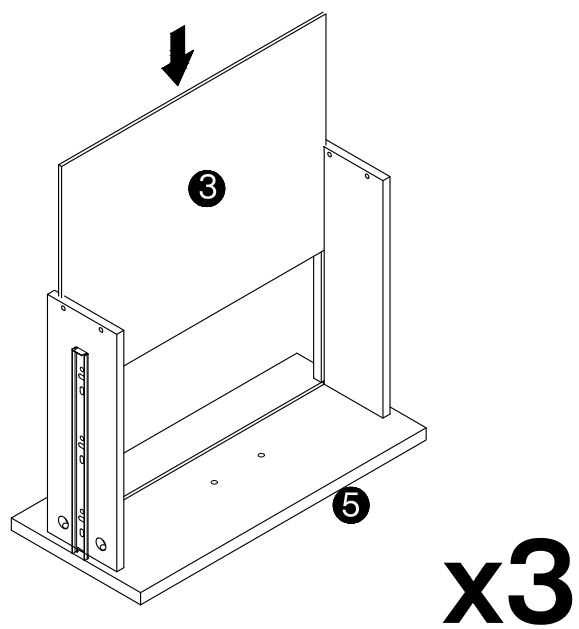


5

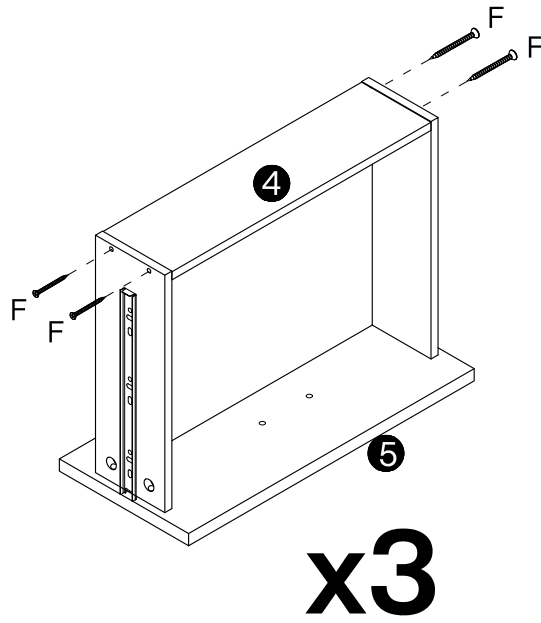




F

Ø3.5x35mm
12 pcs


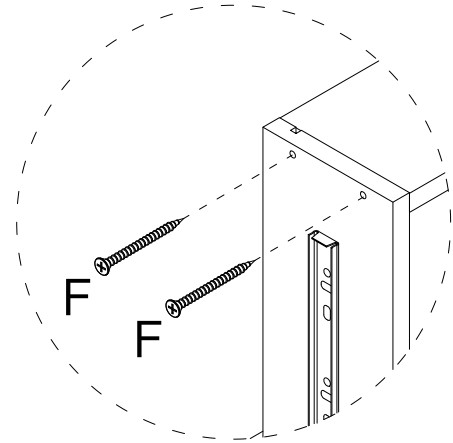


6

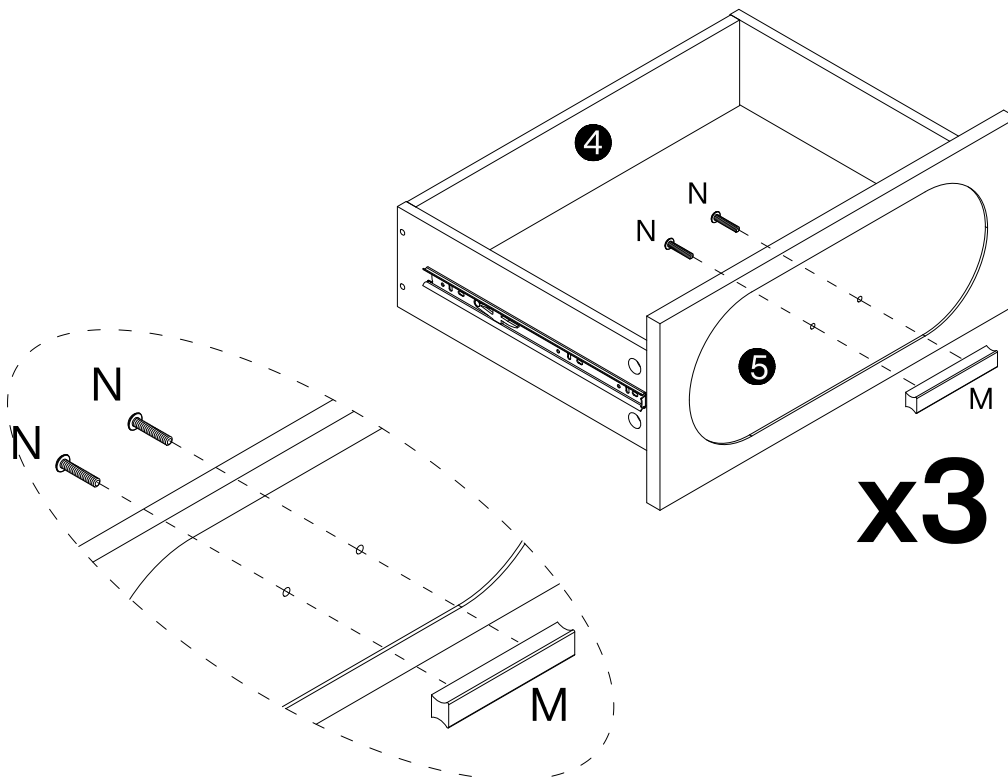

N	M
	
Ø4x22mm	64#
6 pcs	3 pcs


7

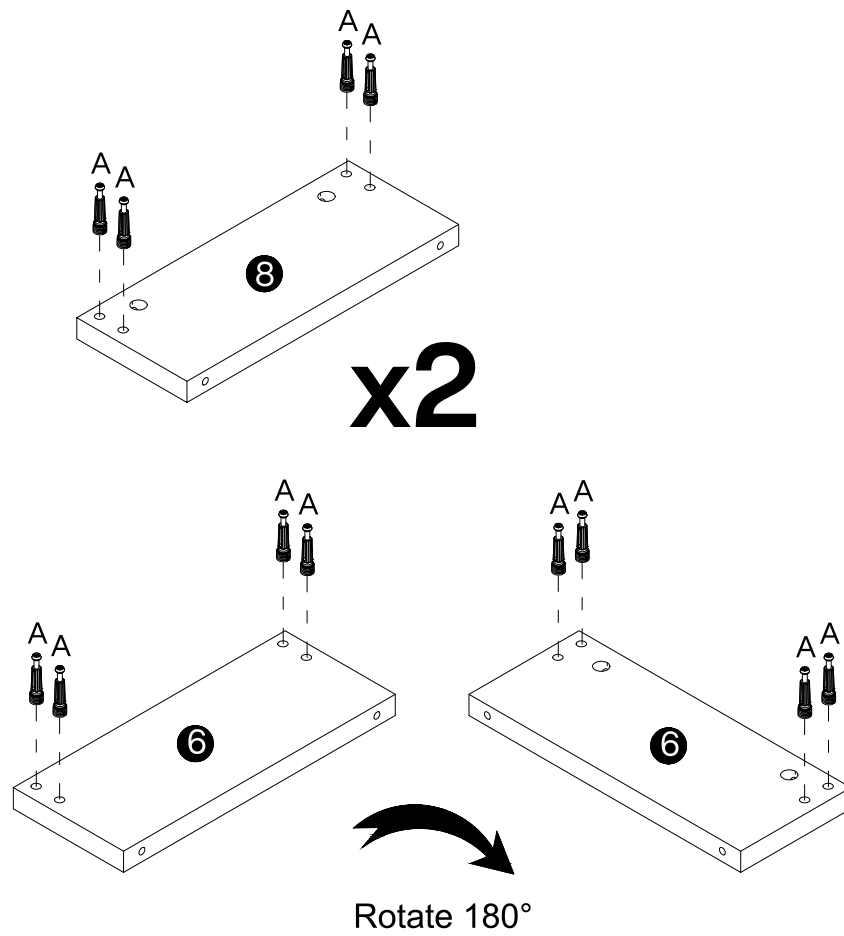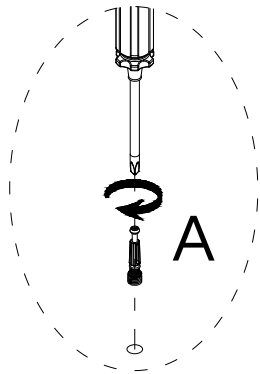

A


M6x40mm
16 pcs

8

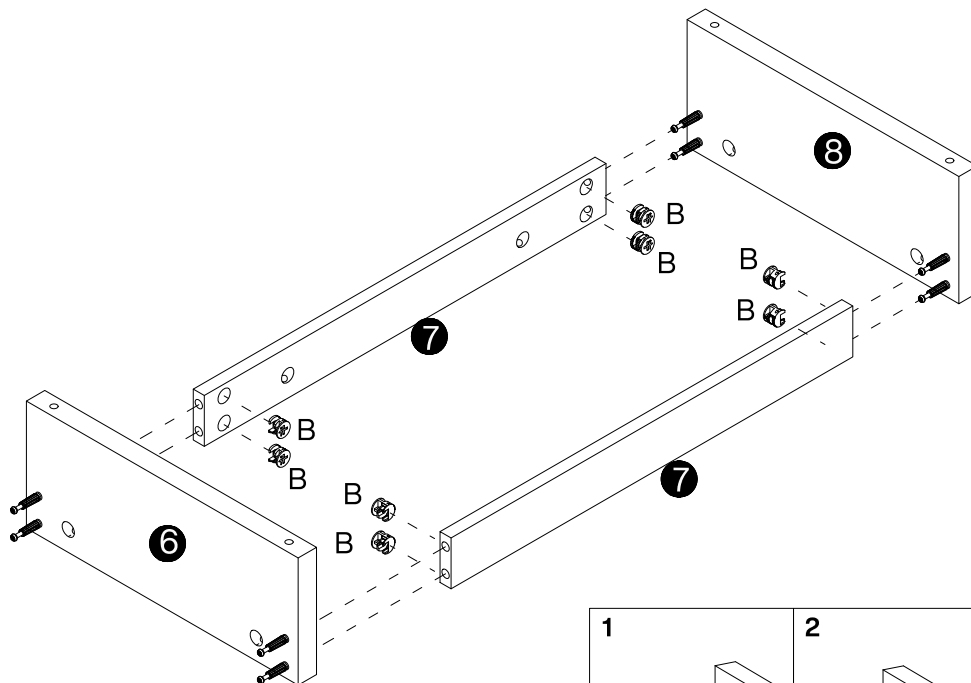


B

Ø15X12 mm
8 pcs

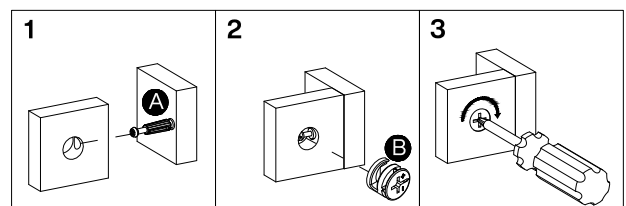


9

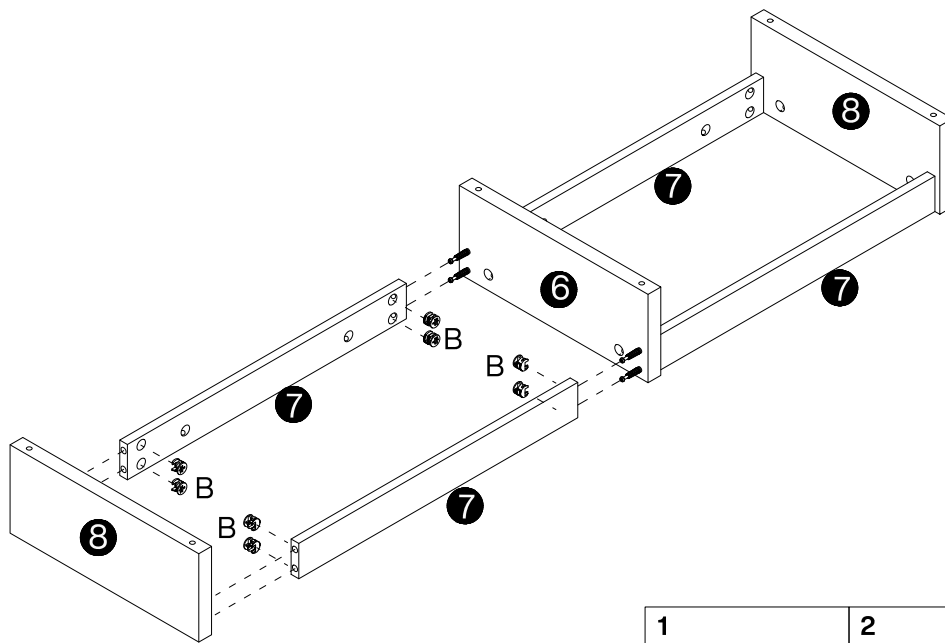


B

Ø15X12 mm
8 pcs

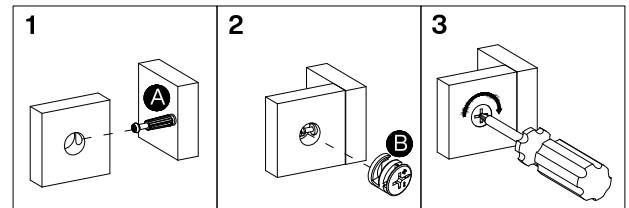


10

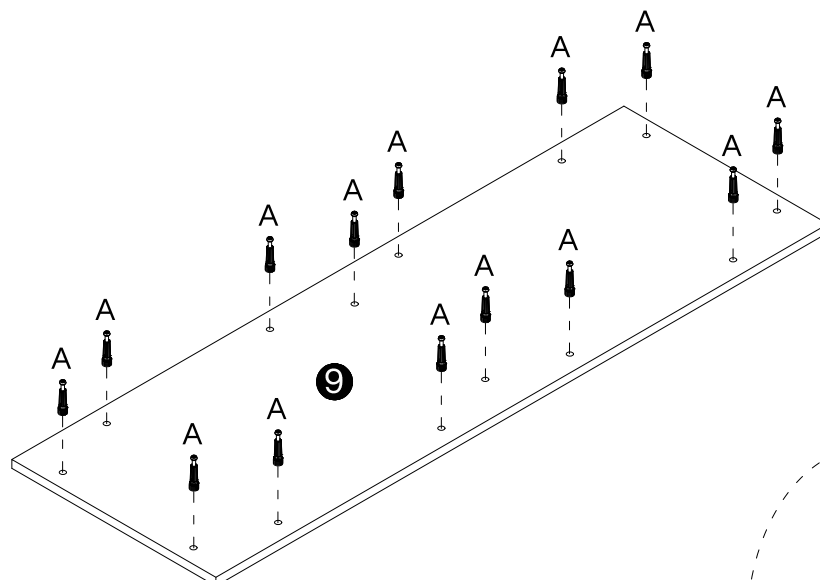


A

M6x40mm
14 pcs

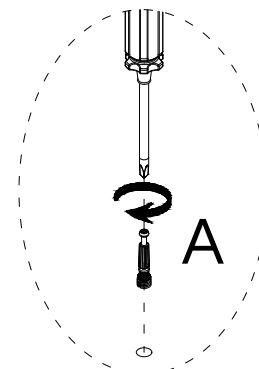


11

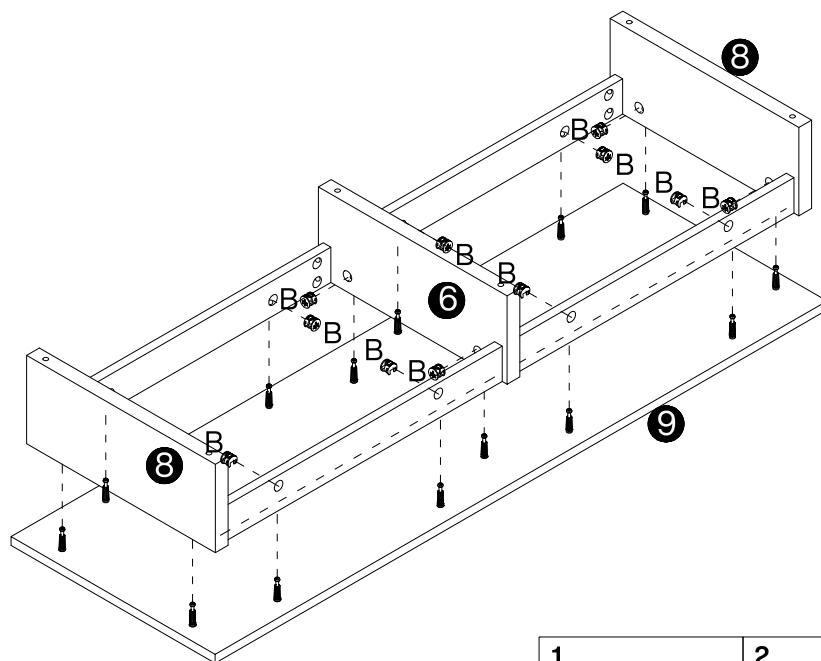


B

Ø15X12 mm
14 pcs

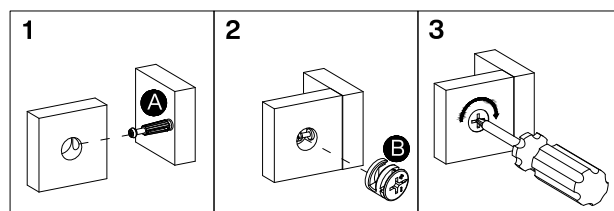

12

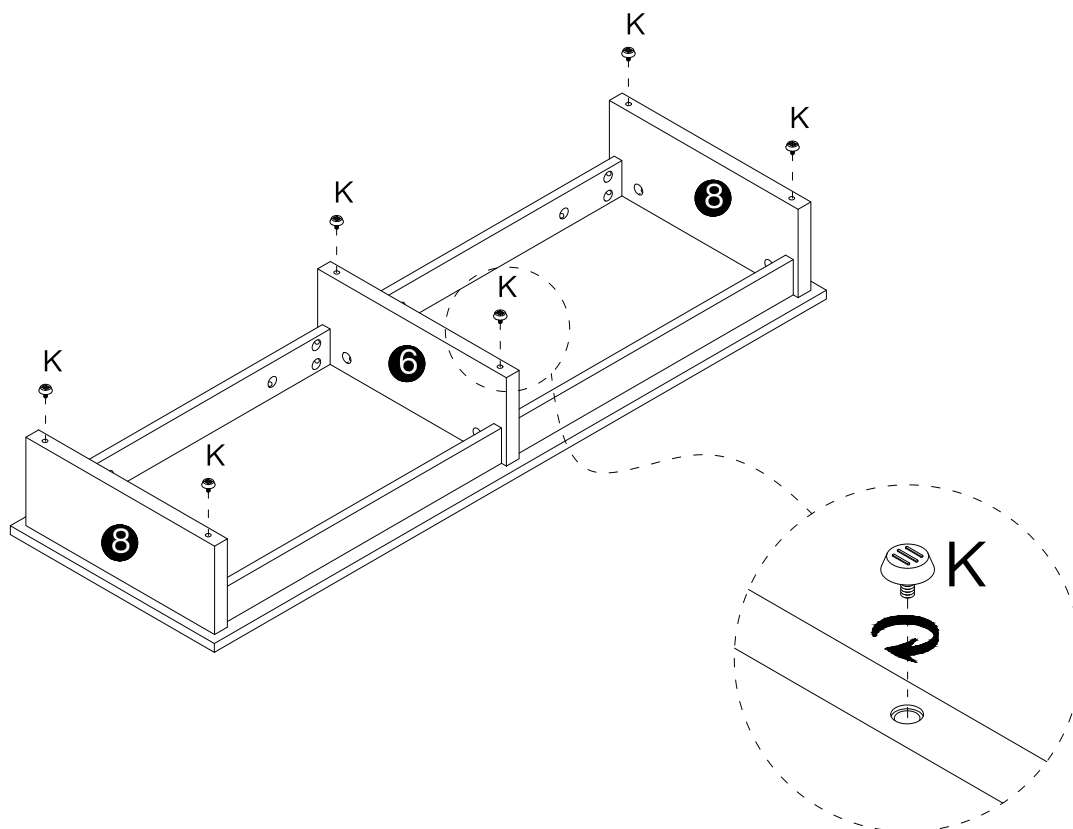


K


M6X14 mm
6 pcs


13

D-1	E
	
3 pcs	6 pcs Ø3x12mm

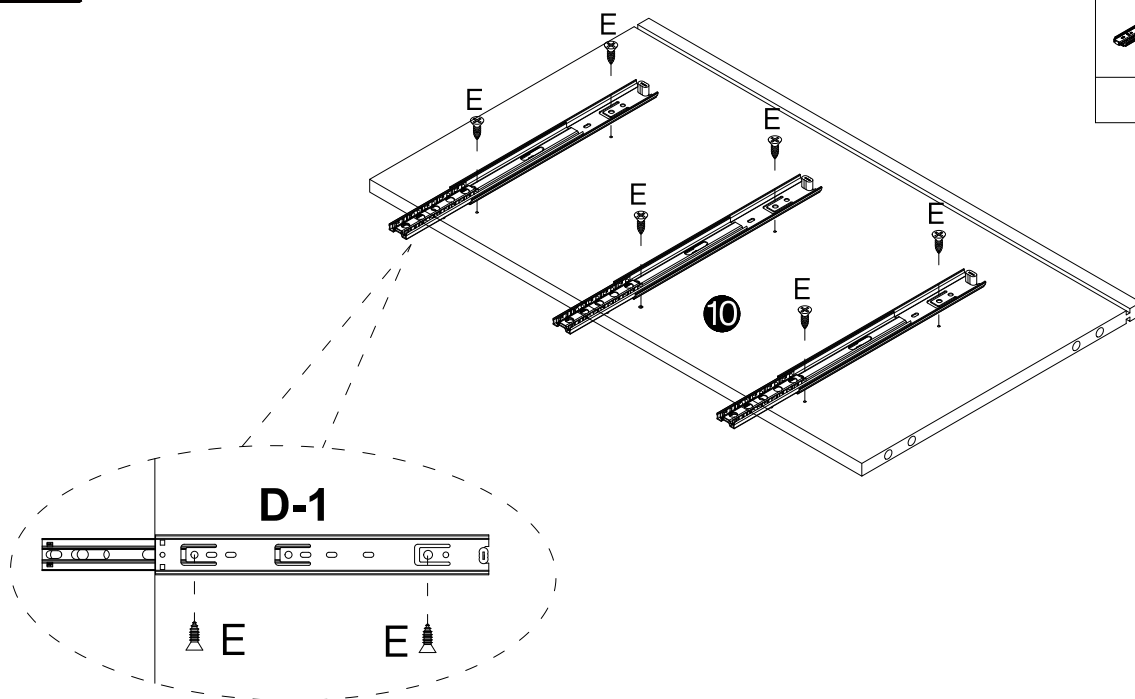


14

C	A
	
4 pcs Ø8x30mm	4 pcs M6x40mm

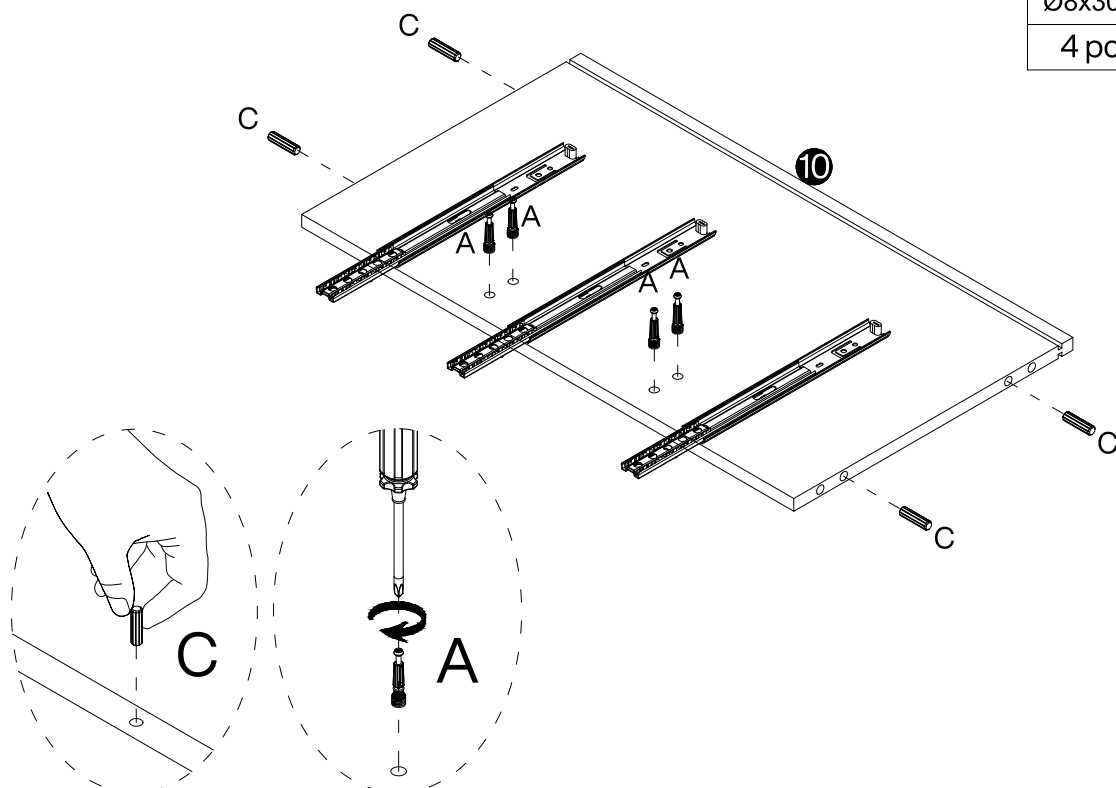



15

D-1	E
	
3 pcs	6 pcs Ø3x12mm

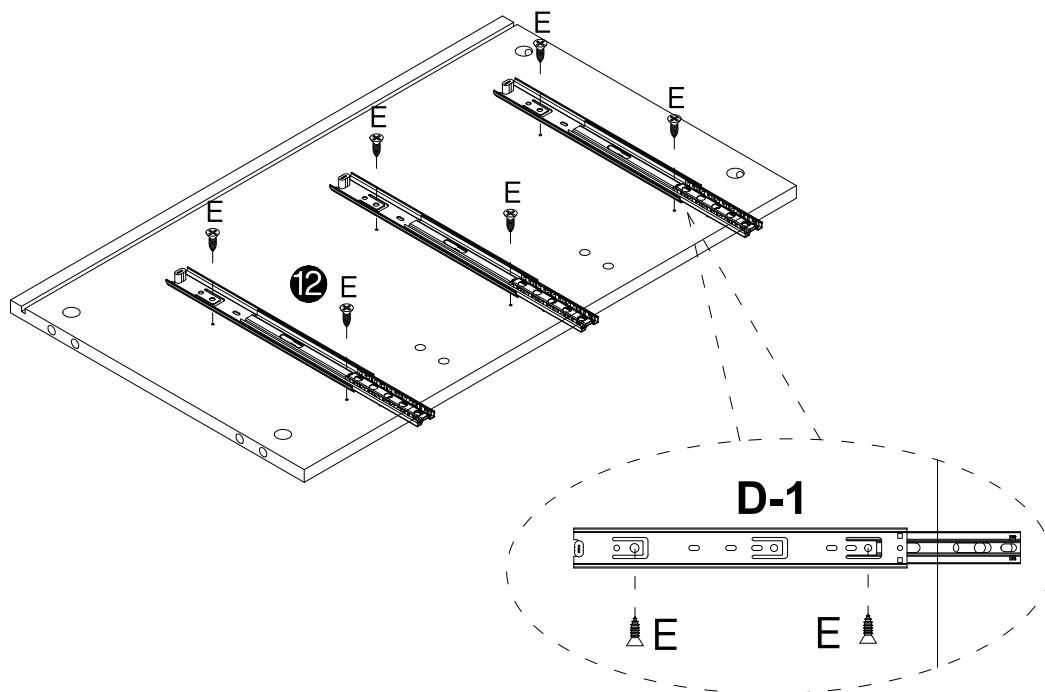


16

C	A
	
4 pcs Ø8x30mm	4 pcs M6x40mm

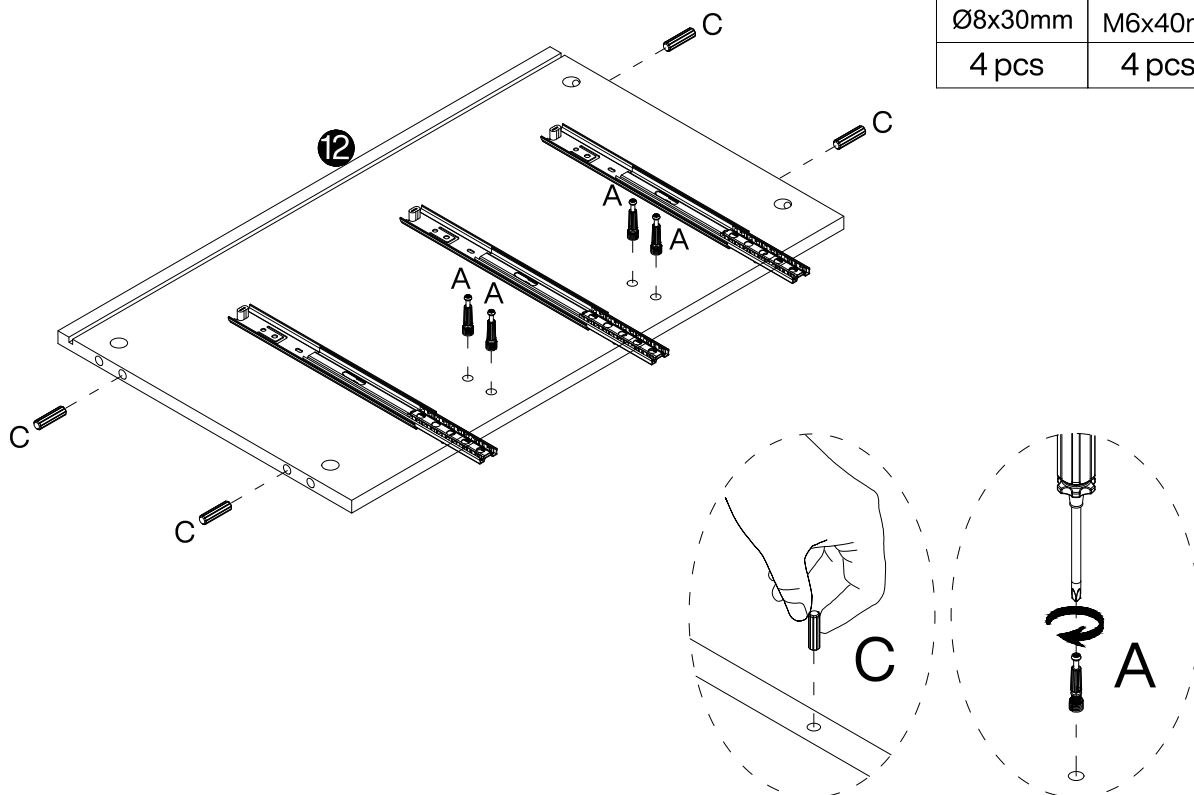


17


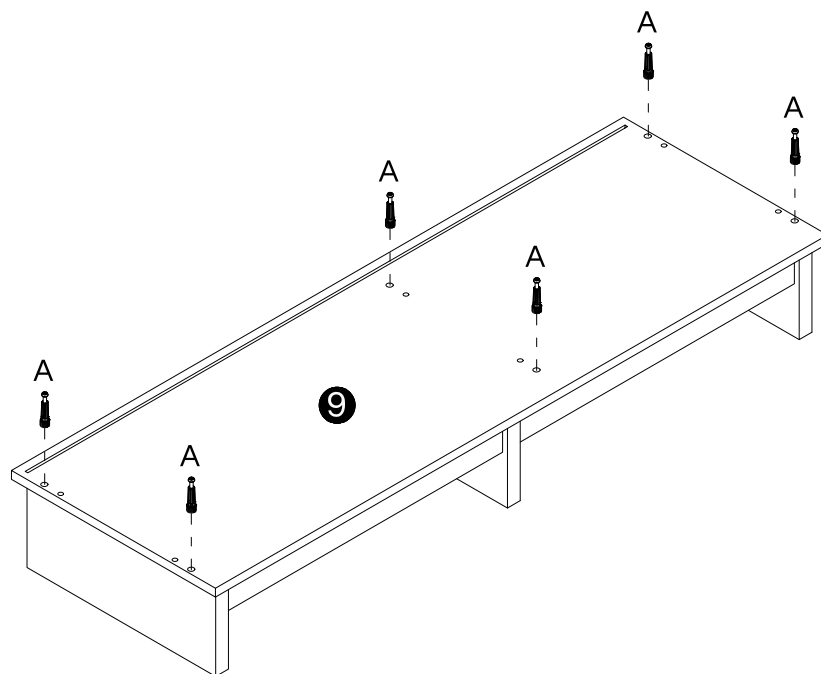


A

M6x40mm
6 pcs

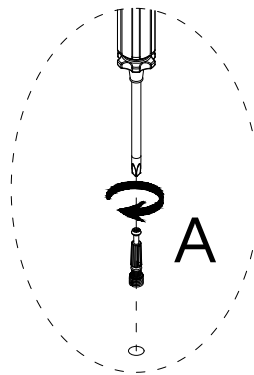



18

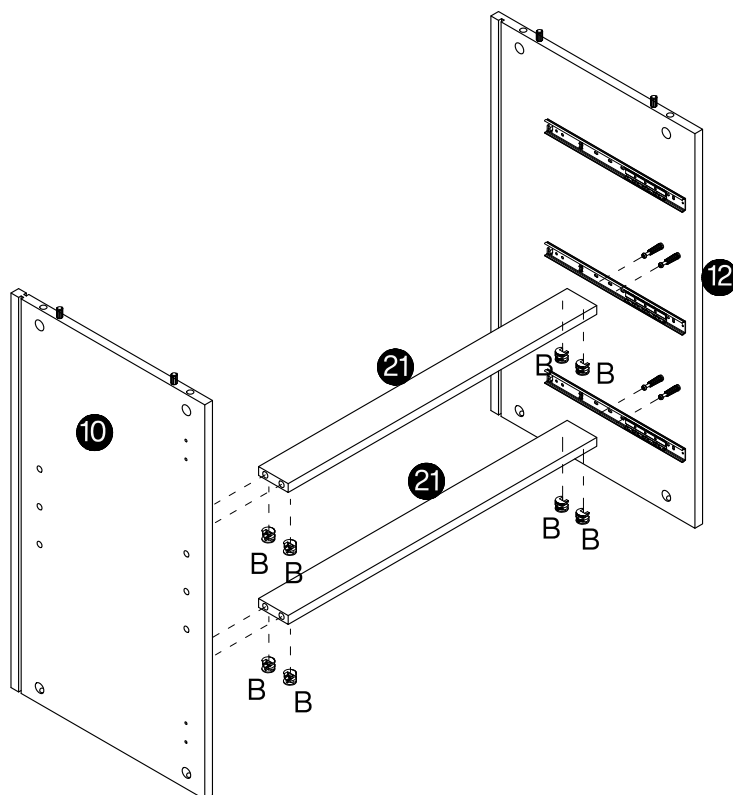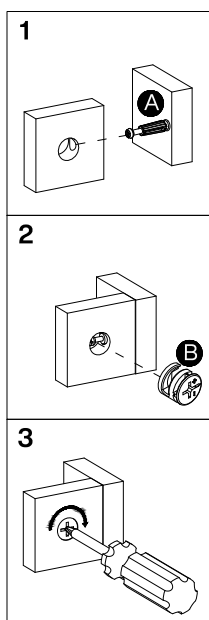

B

Ø15X12 mm
8 pcs


19

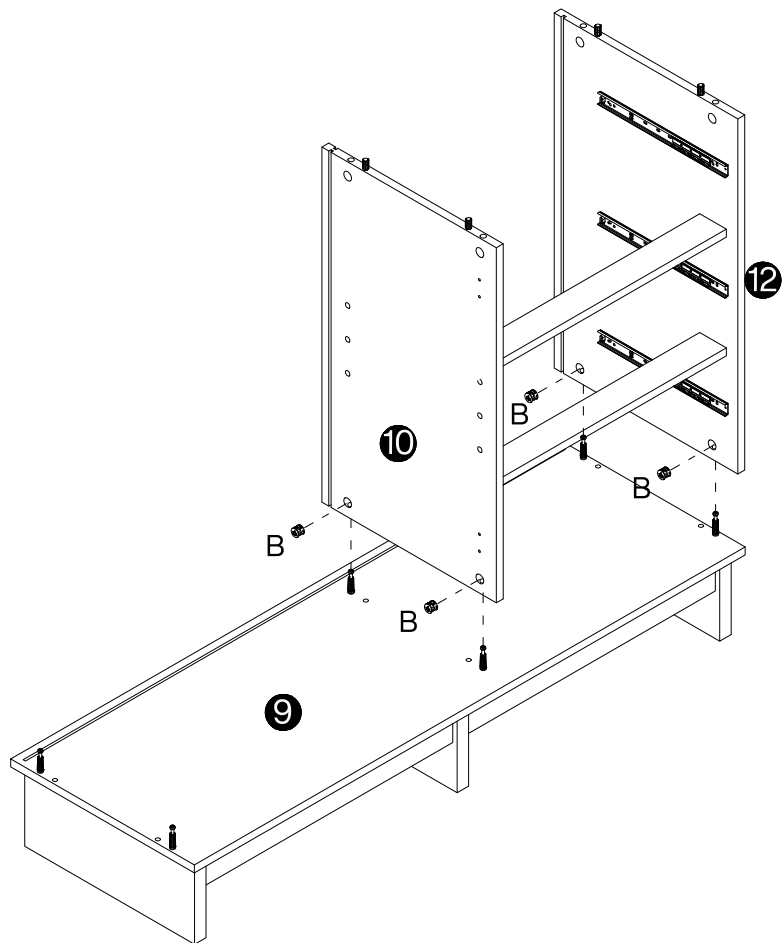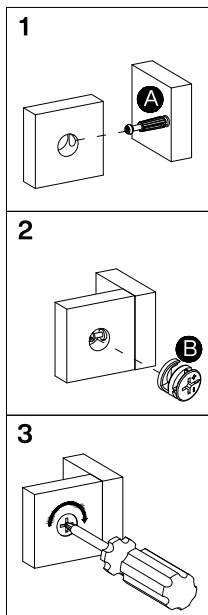




B

Ø15X12 mm
4 pcs


20

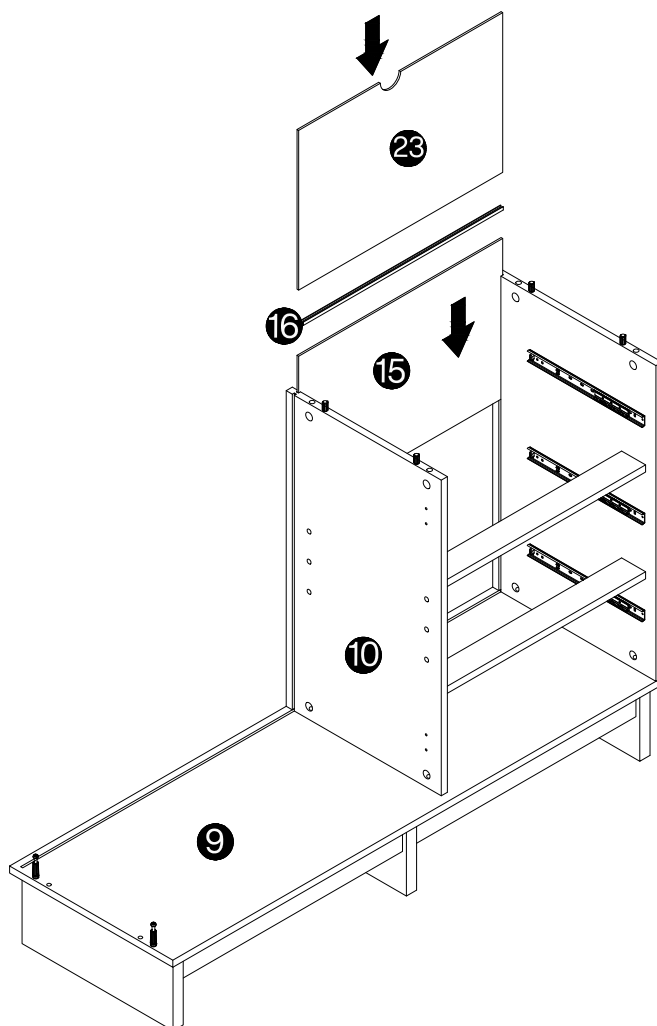


21

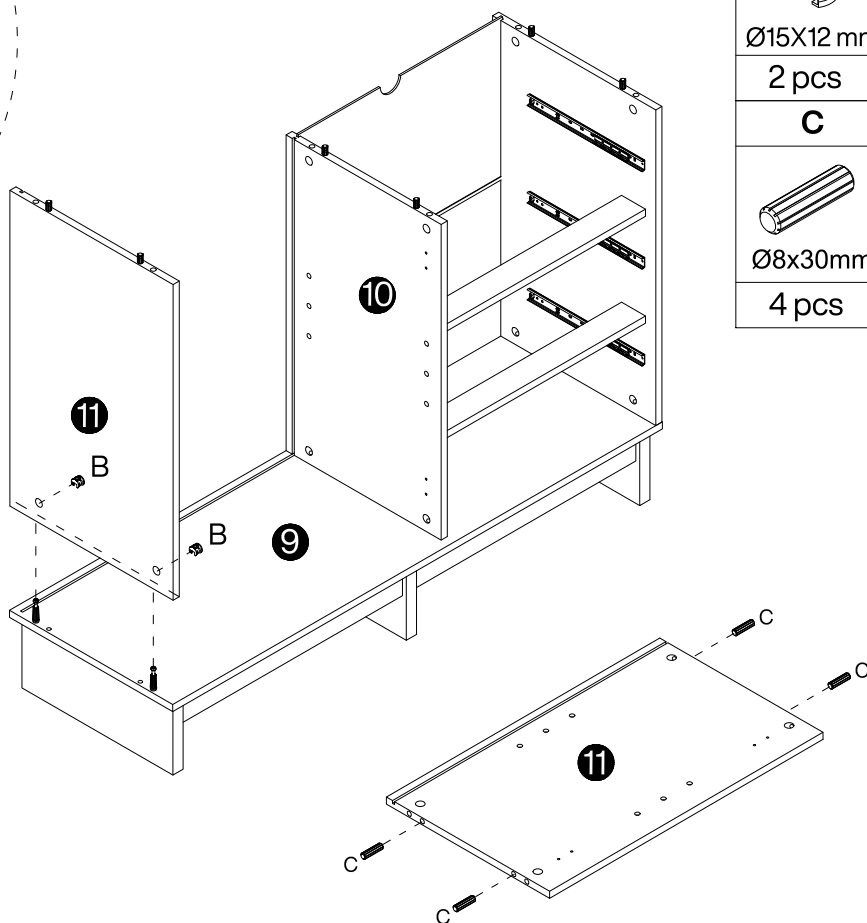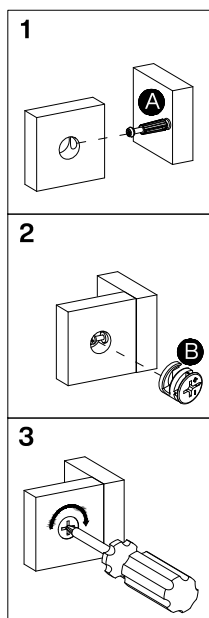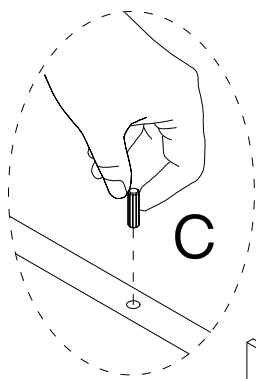


B

Ø15X12 mm
2 pcs
C

Ø8x30mm
4 pcs

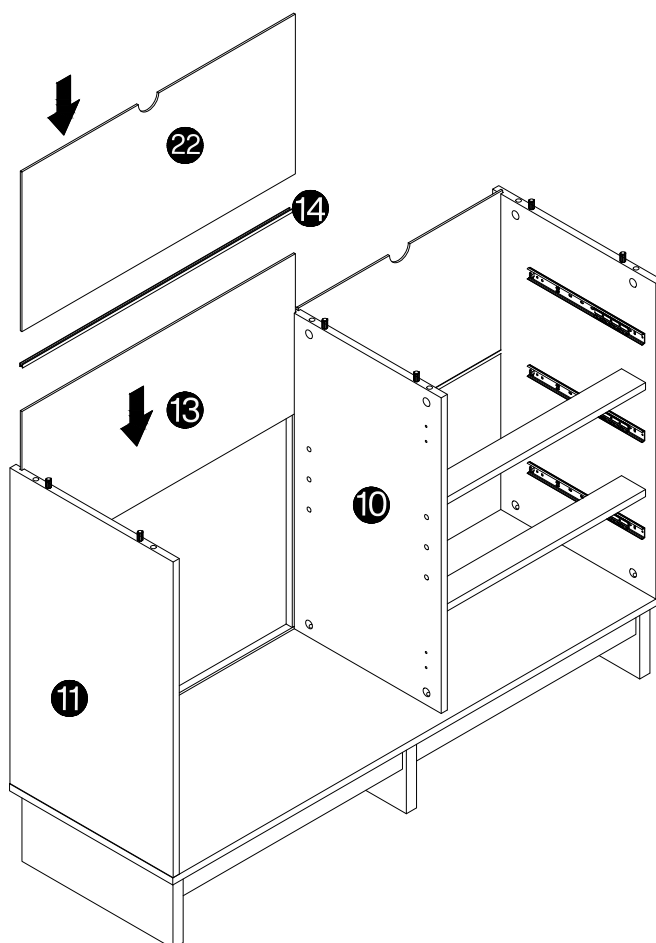22

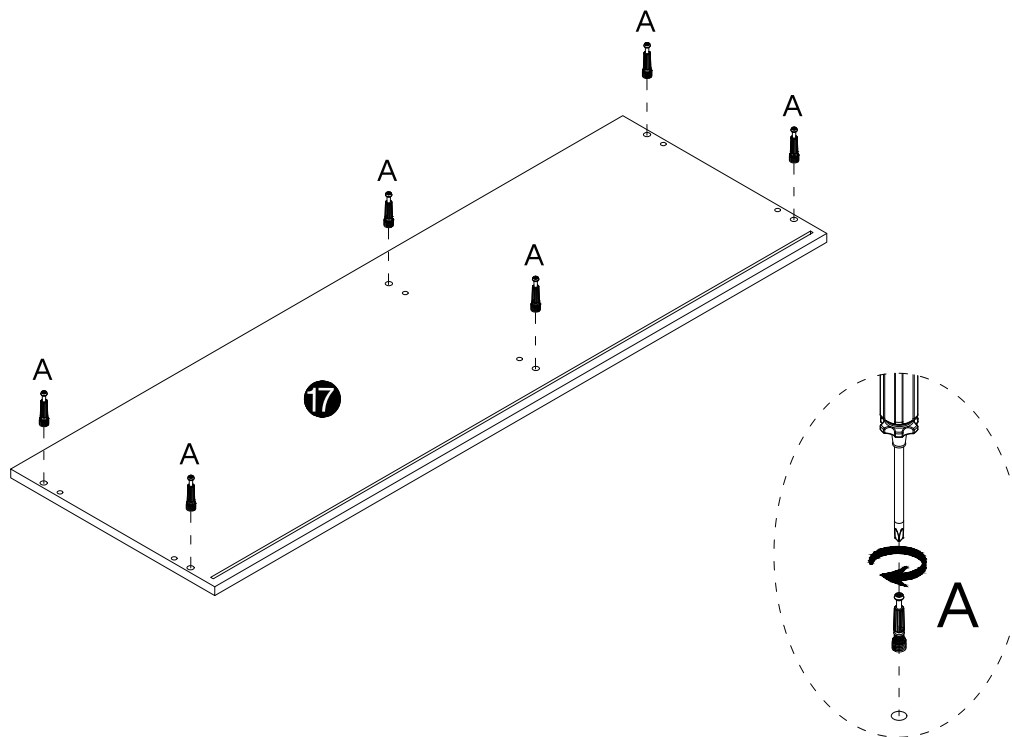



23



A

M6x40mm
6 pcs


24

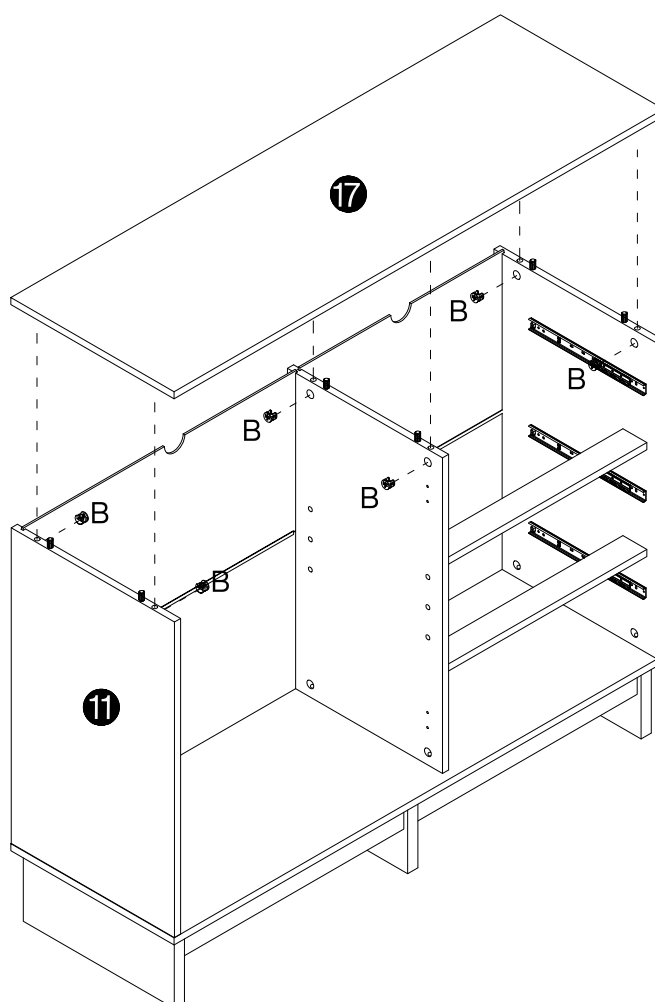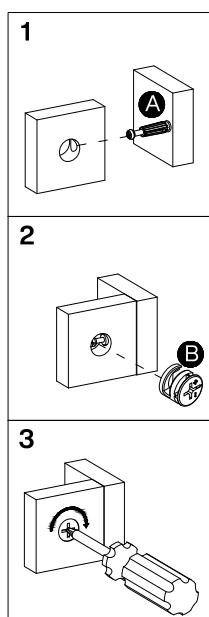


B

Ø15X12 mm
6 pcs


25

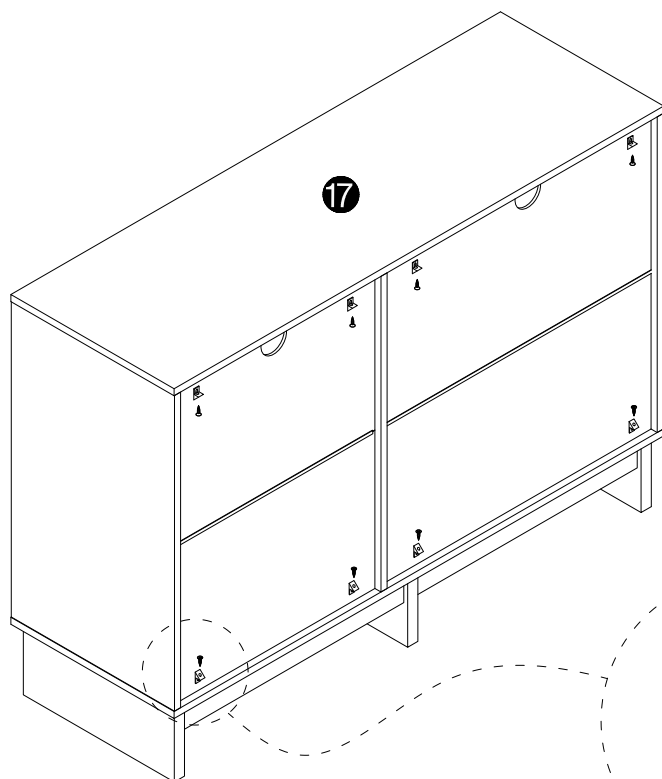

E	H
	
Ø3x12mm	
8 pcs	8 pcs

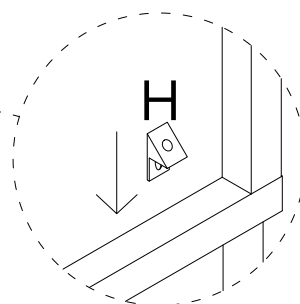


Step 1

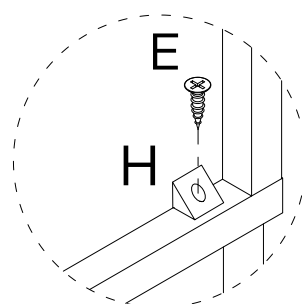


Step 2

26

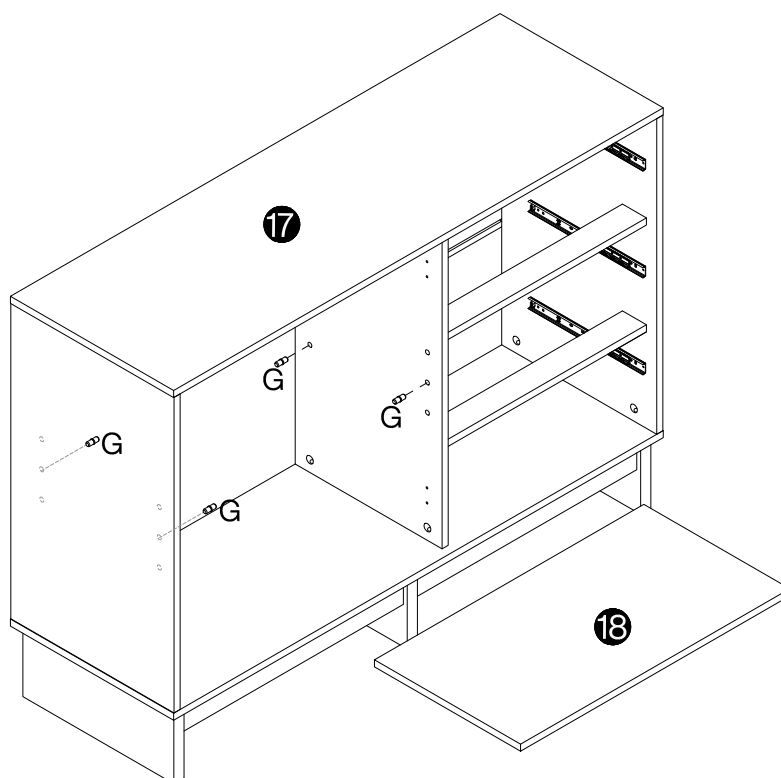


G

M5
4 pcs

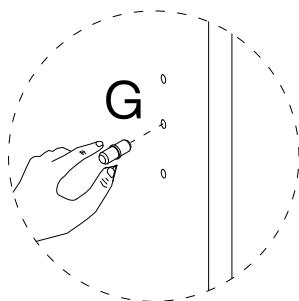


27

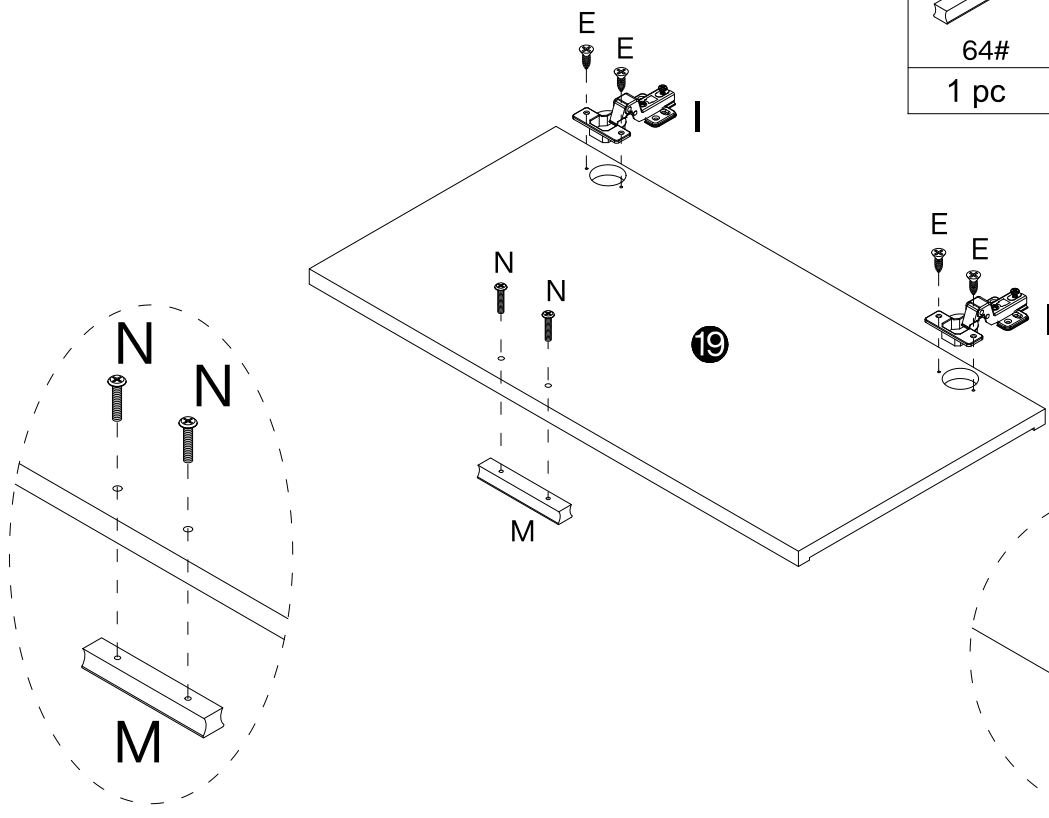


M	I	E
64#	Dawan Hinge	Ø3x12mm
1 pc	2 pcs	4 pcs
		N
		Ø4x22mm
		2 pcs

28

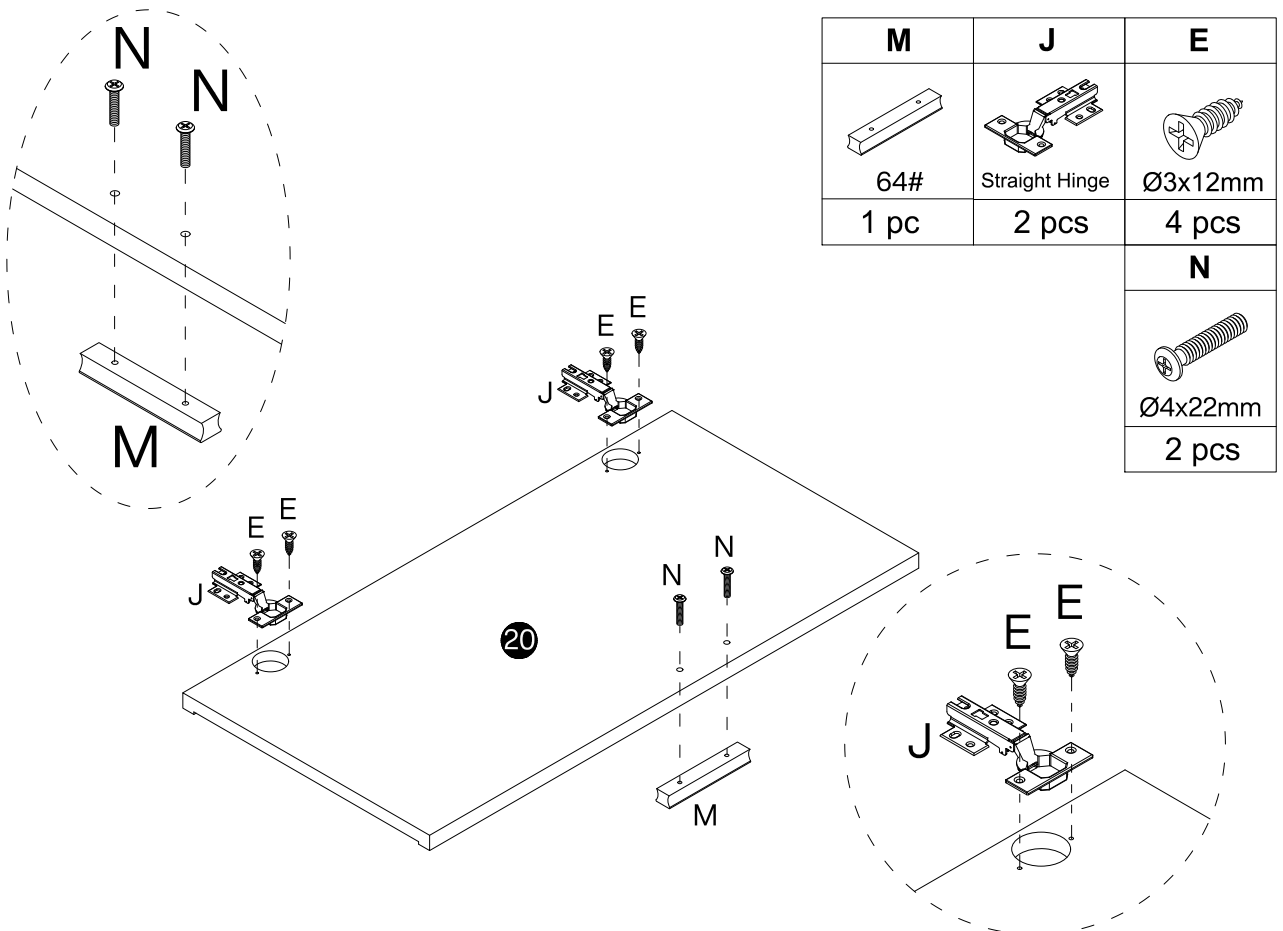


M	J	E
64#	Straight Hinge	Ø3x12mm
1 pc	2 pcs	4 pcs
		N
		Ø4x22mm
		2 pcs

29




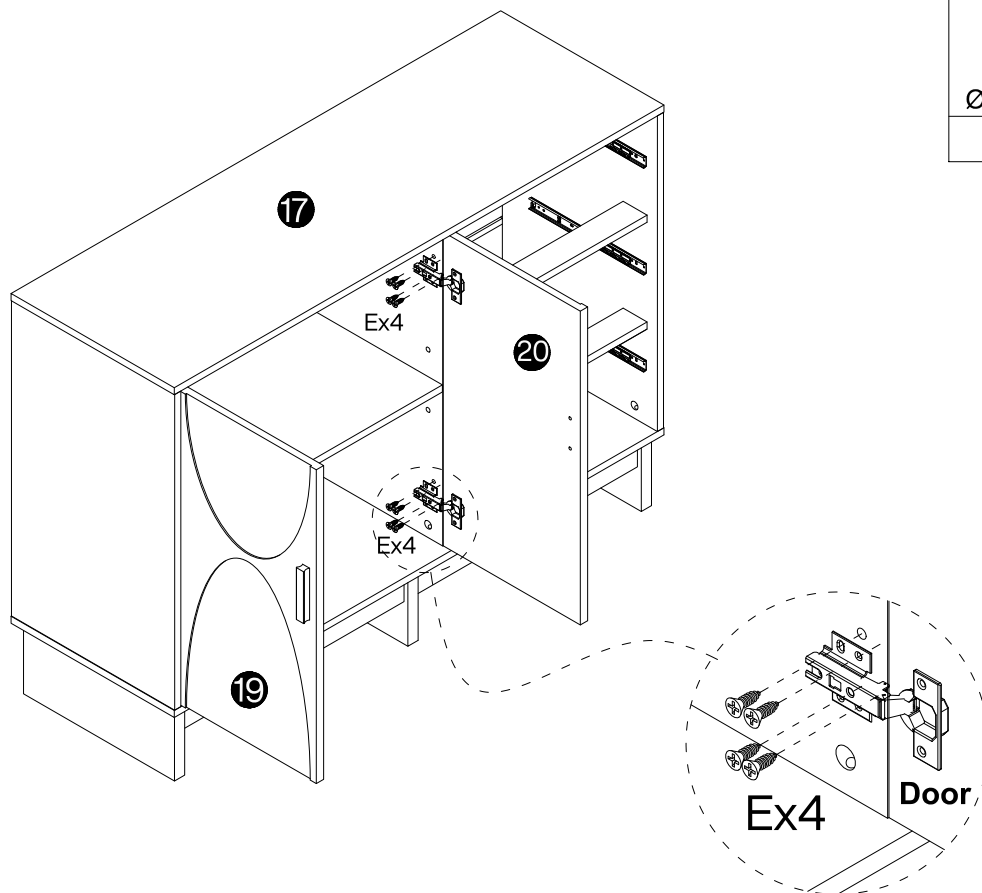


To prevent the door hinge from falling off, please install 4 screws

30




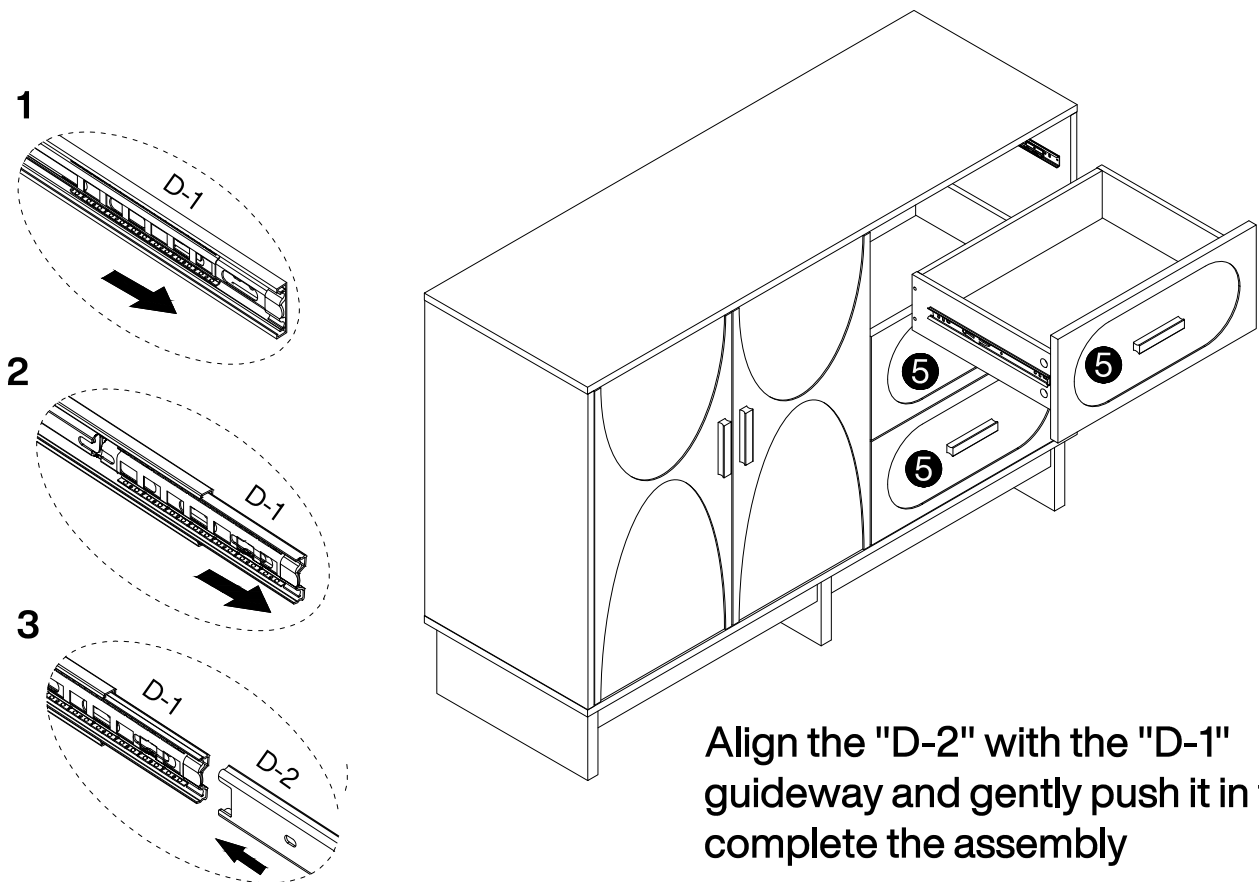


Align the "D-2" with the "D-1" guideway and gently push it in to complete the assembly

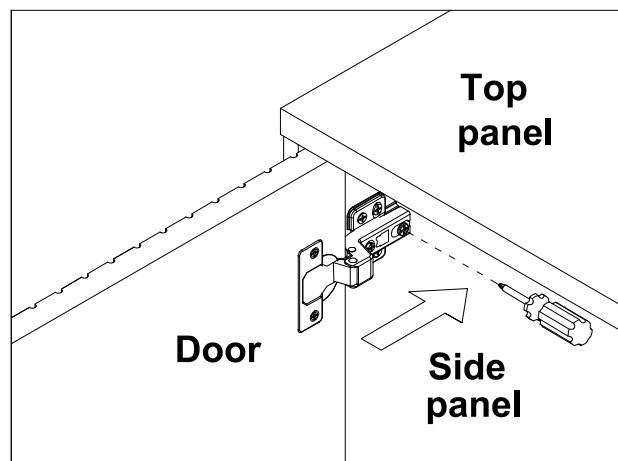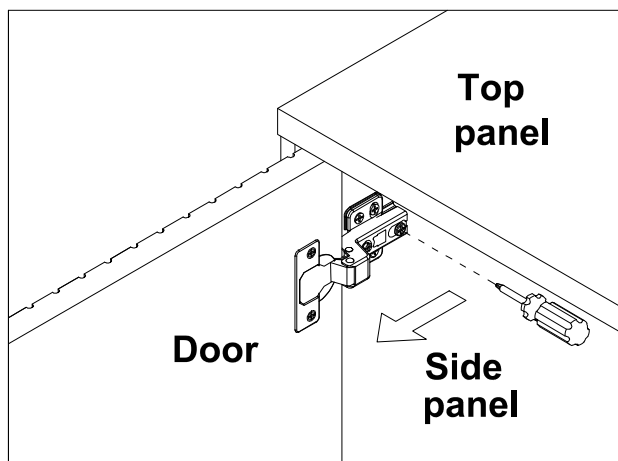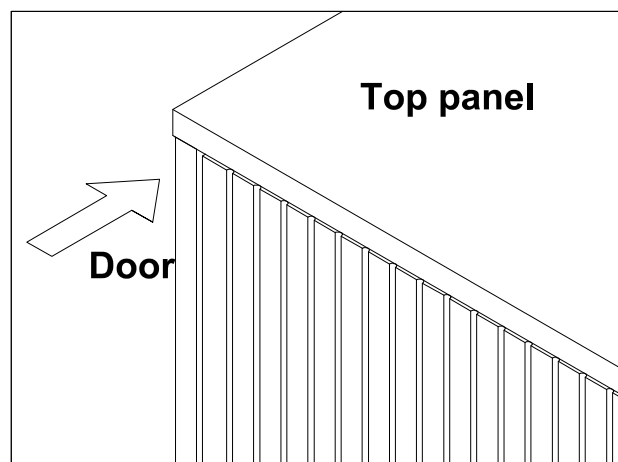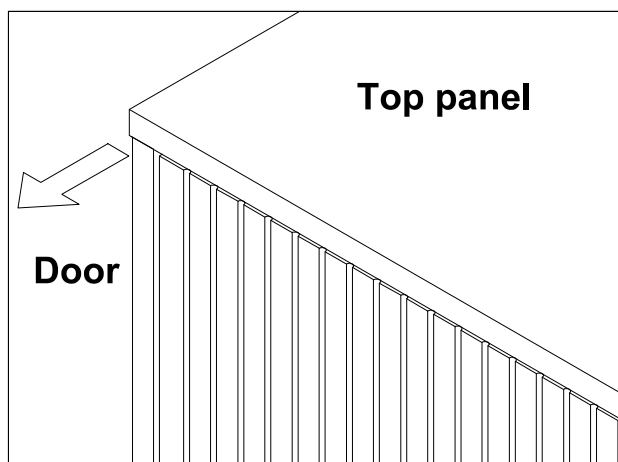


Pull the hinge forward a little.

Push the hinge back a little.

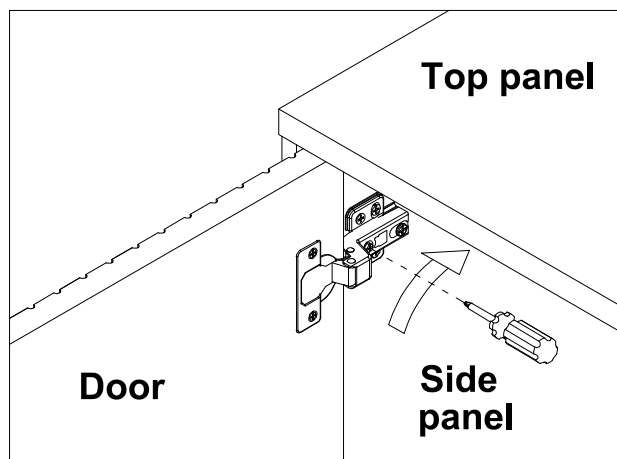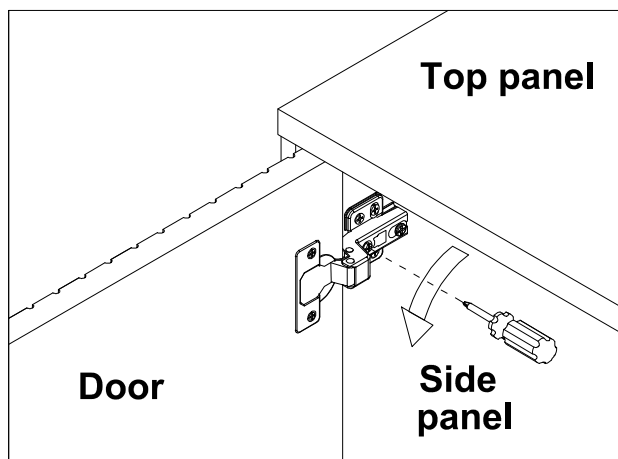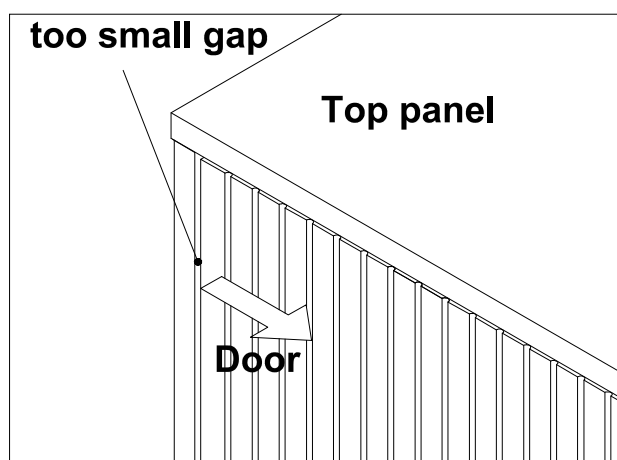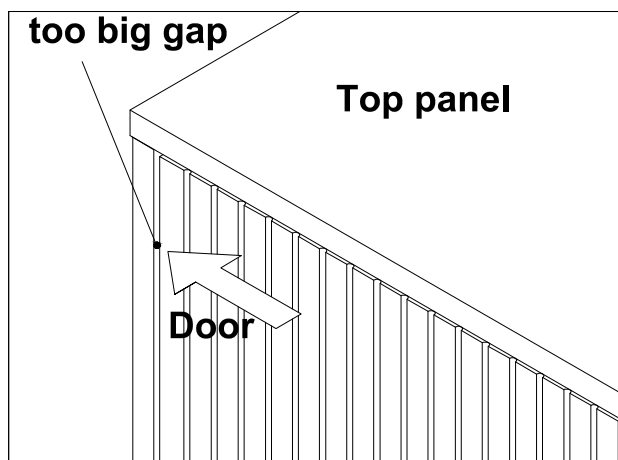


Turn the screw clockwise a little as shown to make the gap smaller

Turn the screw counterclockwise a little as shown to make the gap bigger

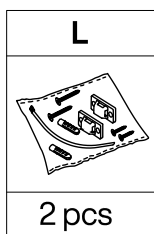


Wall

Step1



Step2

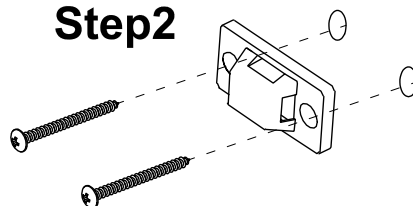

Step3

