

CONVENIENCE CONCEPTS

131450 Desk W/ Two Cabinets



ASSEMBLY INSTRUCTIONS

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.









Please do not return to the store

- . Broken or missing parts?
- . Need help with assembly?

If you have any questions just call 1-800-468-6447 or email us at parts@convenience-concepts.com

Hardware List


| | | | | | |
|---|---|---|---|---|---|
| A | B | C | D | E | F |
|  |  |  |  |  |  |
| Cambolt (17pcs) | Camlock (17pcs) | Wood dowel (16pcs) | Spring Insert (4pcs) | Magnet (2pcs) | Sticker (5pcs) |

Panel List




①

Top Panel (1pc)

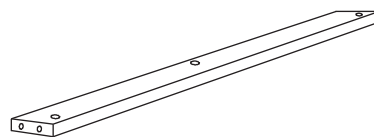


②

Support Panel (1pc)

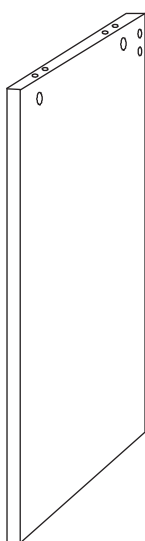


③

Left Panel (1pc)

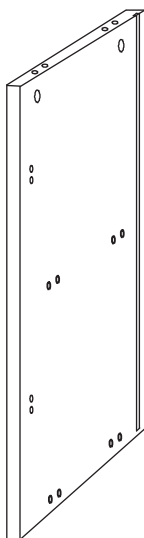

④

Middle Panel (1pc)

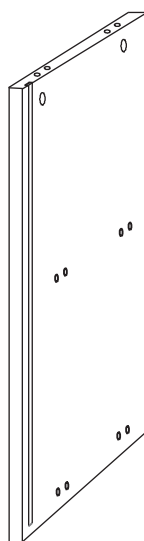


⑤

Right Panel (1pc)




⑥

Back Panel (1pc)

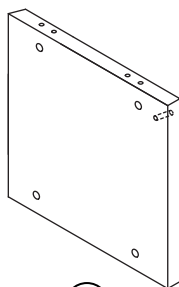


⑦

Center Panel (1pc)

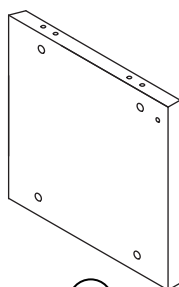


⑧

Bottom Panel (1pc)

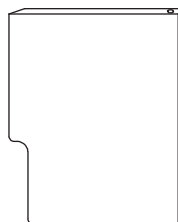





⑨

Door (2pcs)

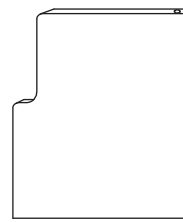


⑩

Assembling the unit with camlocks and wood dowels.

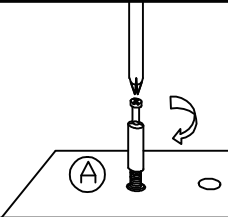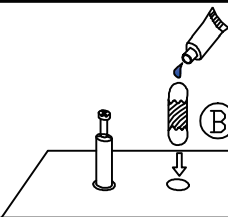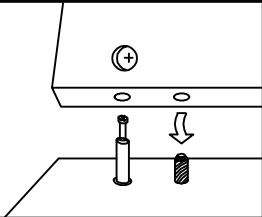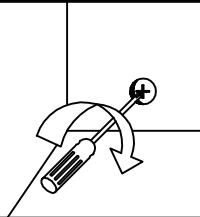
| | | | |
|---|---|--|---|
|  |  |  |  |
| <p>Gently screw cam dowel into the threaded anchor.</p> | <p>Lightly glue one end of the wood dowel and tap halfway into hole.</p> | <p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p> | <p>Screw the camlock firmly into locked position.</p> |

Hardware List

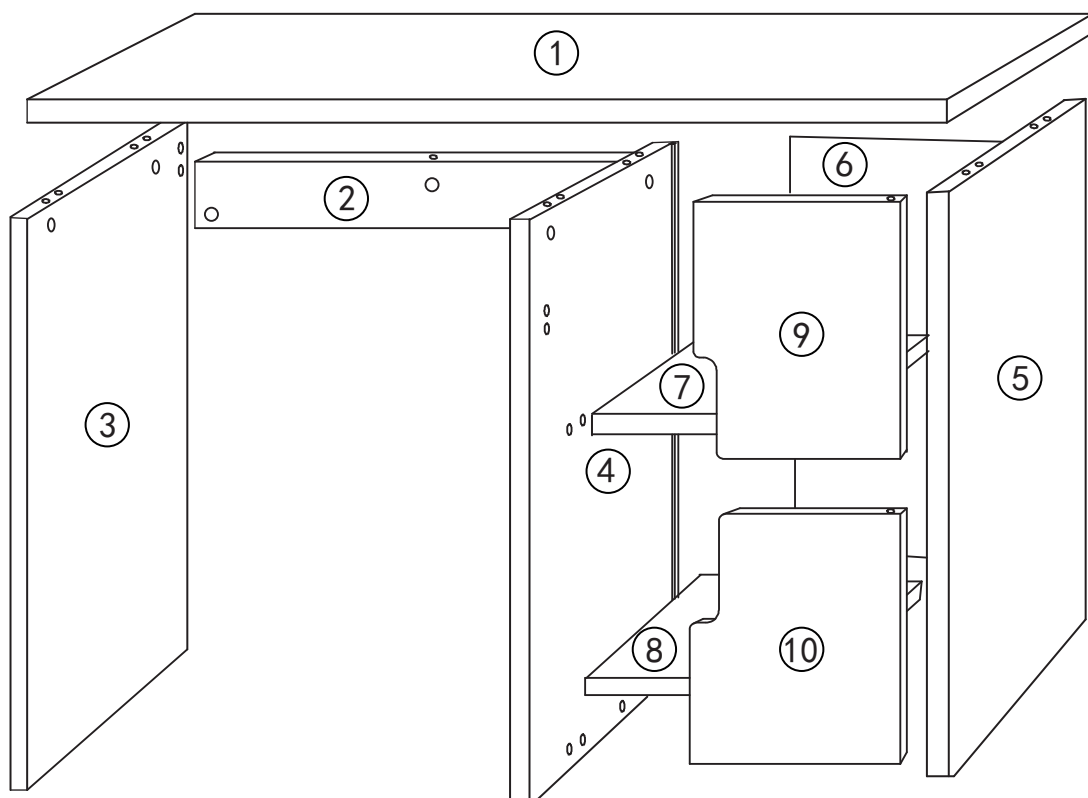

Step 1


Attach hardware to middle panel (4) and right panel (5) as shown.

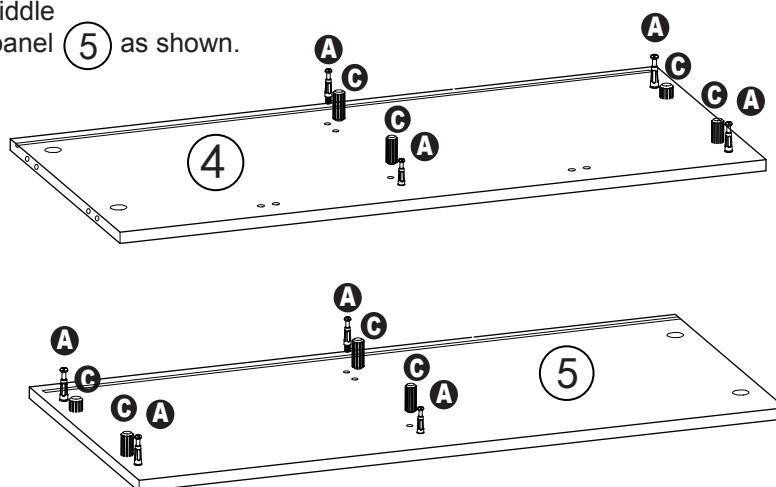

Step 2


1. Insert camlocks (B) into Center Panel (7) and Bottom Panel (8).

2. Connect Center panel (7) and Bottom panel (8) to Middle panel (4). Gently tighten camlocks.

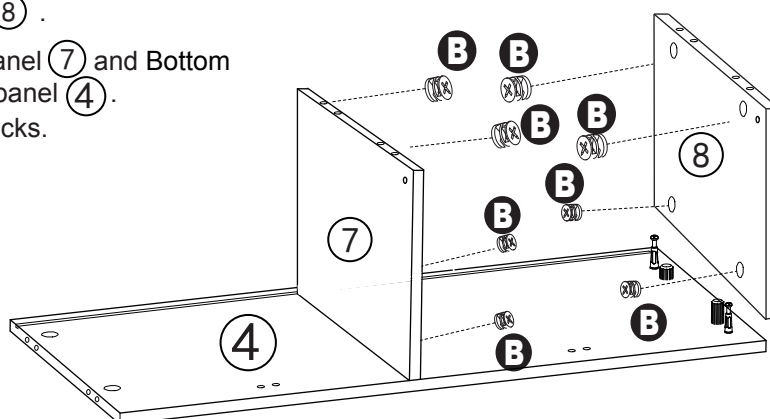

Step 3

1. Place right panel (5) on unit and gently tighten camlocks.


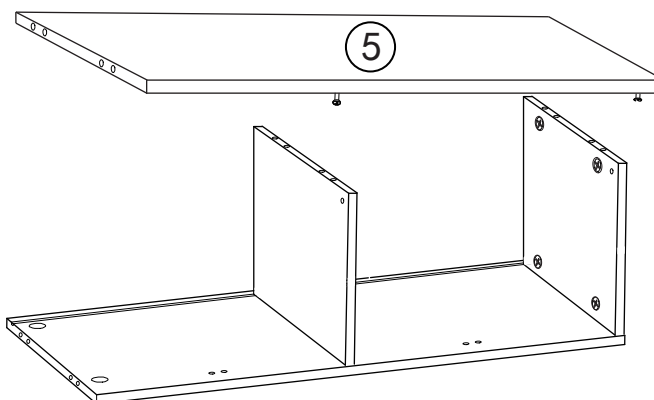


Step 4

1. Slide The back panel (6) into the slot of the middle panel and right panel.

2. Attach left panels (3) and support panel (2) to middle panel (4).

Gently tighten camlocks.

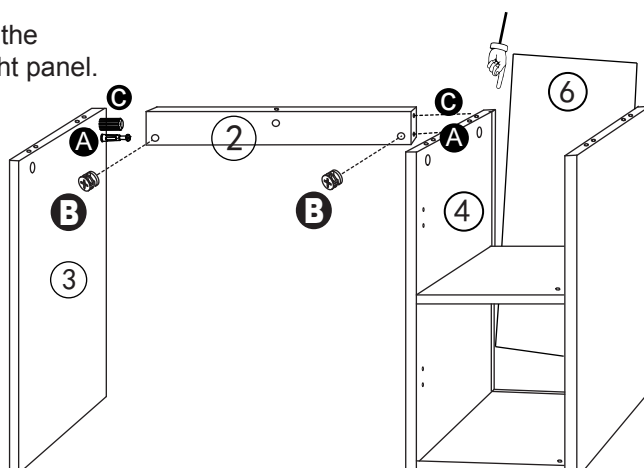

x2




x2



x2

Step 5

Attach hardware to Top panel (1) as shown.

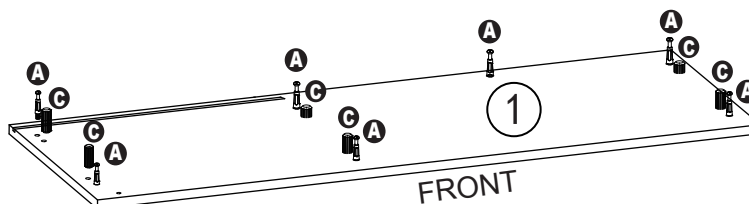


x7



x6

Step 6


Place Top panel (1) on unit and gently tighten camlocks.

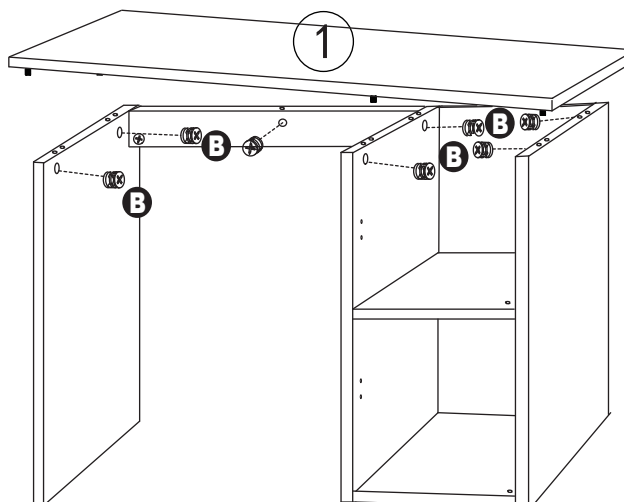

x7

Step 7



Assemble door as shown.

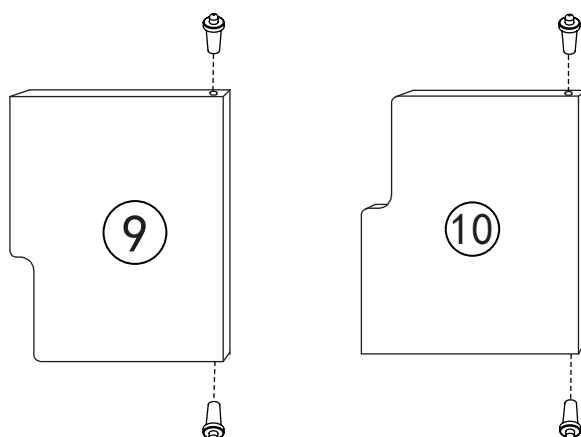

Step 8

1. Attach magnets **E** to middle side panels .

2. Attach stickers **F** to exposed camlock holes.

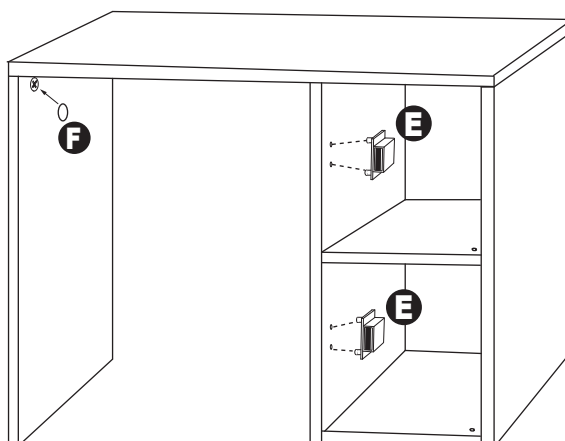

Step 8

Attach doors to unit by placing one end of spring pin into hole, gently compress other end of spring pin so that it will slide into remaining hole.

Finish and enjoy!

