


UltraLatch[®] by SOSS[®]

Fire Rated Intumescent Installation Instructions Models L1, L2 and L3

In order for the UltraLatch[®] to achieve the proper 20 minute fire rating, the supplied intumescent tape needs to be properly installed in the door's bore hole.

In a fire, the tape expands to many times its normal thickness to fill voids in the bore hole.

Please read and follow the directions below.


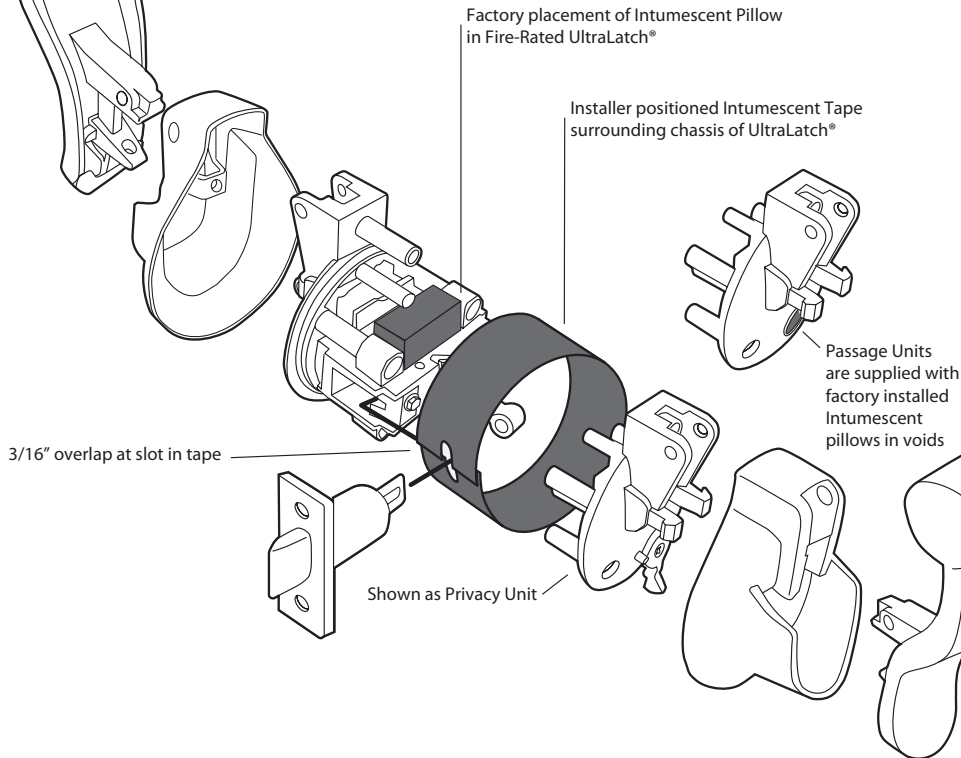


1 Before installation make sure that intumescent is in one piece.

2 Make sure that the bore hole is clear of debris.

3 Gently coil the intumescent so that the slots overlap approximately 3/16" and slide the coil into the bore hole, making sure that the slot faces the bolt hole.

4 Center the coil in the door, leaving approximately a 1/8" gap on each side.

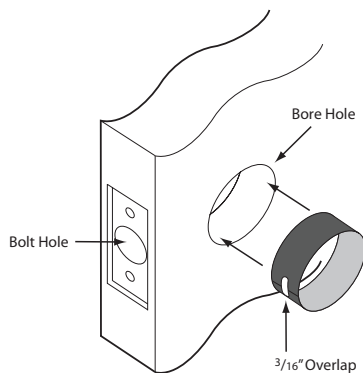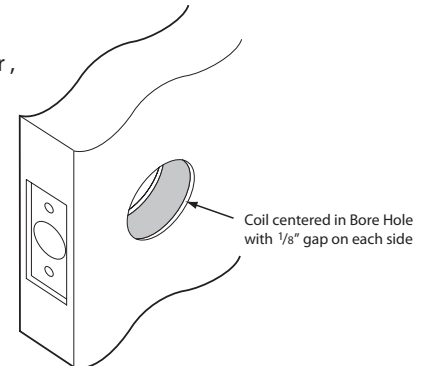

5 Center the slot in the bolt, to allow the tang of the bolt to work.

6 Install the UltraLatch[®] following enclosed instructions.

7 The intumescent must be installed as described to ensure proper 20 minute fire rated certification.

SOSS[®]

Door Hardware

UltraLatch[®] is made in the U.S.A. of domestic and imported components.

Universal Industrial Products, Inc.

One Coreway Drive
Pioneer, OH, USA 43554-0628
Phone: (419) 737-2324 (800) 922-6957
FAX: (419) 737-2130

Email: hinges@sooss.com Internet: www.soss.com

SOSS Asia Pte. Ltd.

#6 Third Chin Bee Road
Jurong, Singapore 618682
Phone: 656 261 3276
FAX: 626 261 5047

Email: sossasia@singnet.com.sg