

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102 P: (866) 845-5451 • F: (866) 816-6165 www.acclaim-lighting.com

# IN41252 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

### **CAUTION**

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## ASSEMBLY AND INSTALLATION

- 1. Thread two mounting screws (8) to the mounting bar (9) and secure with the hex nut (7).
- 2. Secure the mounting bar (9) with box screws (10) to the outlet box (1).
- 3. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections
- --Ribbed wire (w/o marking) from light to White wire (2) from power source.
- --Smooth wire (w/o marking) from light to Black wire (3) from power source.
- --Loop the ground wire (4) to mounting bar (9) with a green screw (6).
- 4. Attach the back plate (11) against the outlet box (1), secure with the ball nut (12).
- 5. Put glass shade (15) onto socket (14), then secure with spacer (16) and socket ring (17)

#### INSTALLATION IS NOW COMPLETE

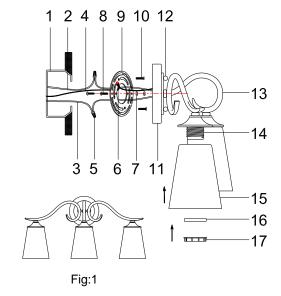

- 1. OUTLET BOX
- 2. WHITE WIRE
- 3. BLACK WIRE
- 4. GROUND WIRE
- 5. WIRE CONNECTOR
- 6. GREEN SCREW
- 7. HEX NUT
- 8. MOUNTING SCREW
- 9. MOUNTING BAR
- 10. BOX SCREW
- 11. BACK PLATE
- 12. BALL NUT
- 13. LAMP BODY
- 14. SOCKET
- 15. GLASS SHADE
- 16. SPACER
- 17. SOCKET RING