


ASSEMBLY INSTRUCTIONS

BED WITH TRUNDLE

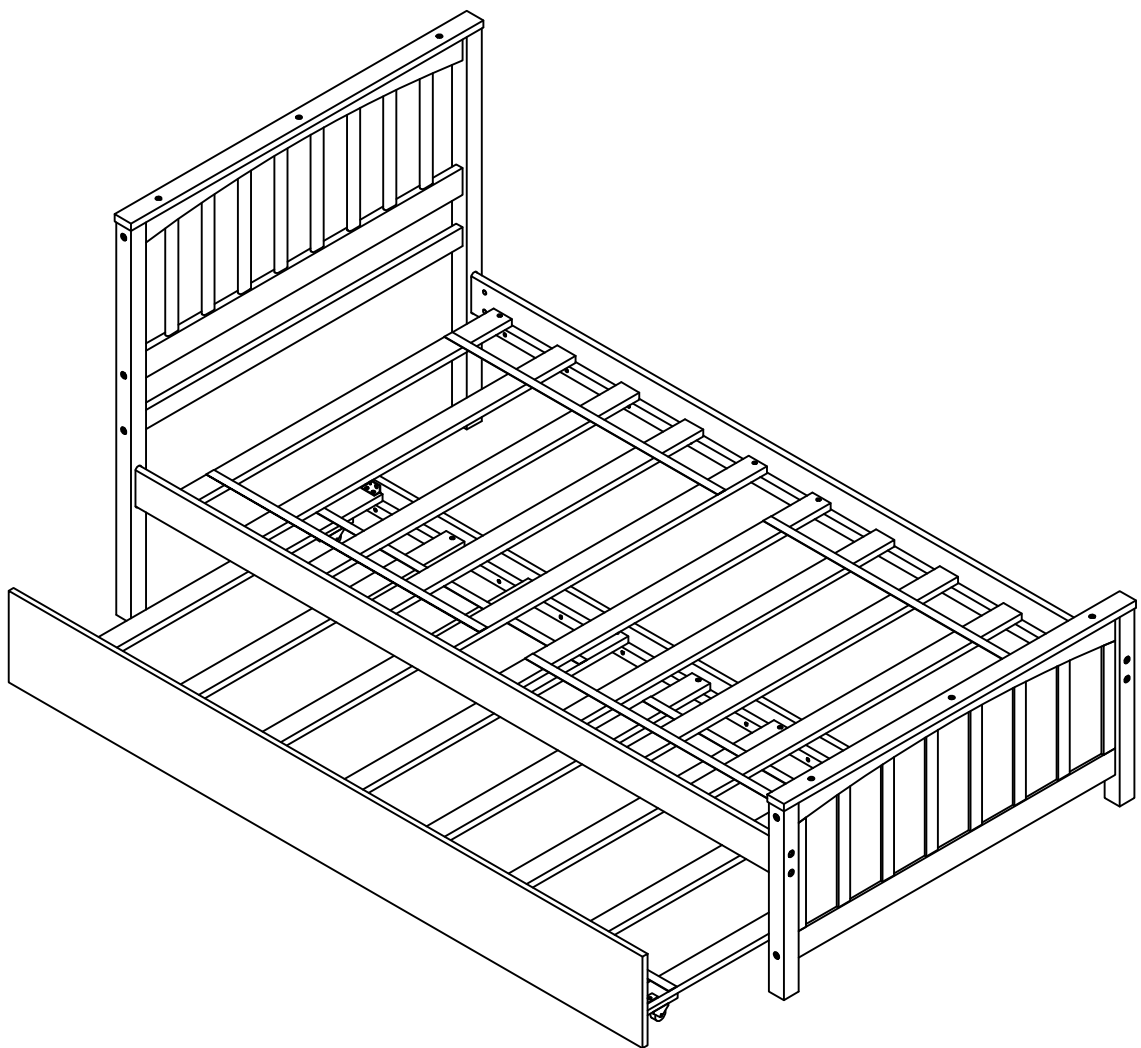


If you have any questions, please feel free to contact us.












Email: service@qualfurn.net

WF195106





Detail View

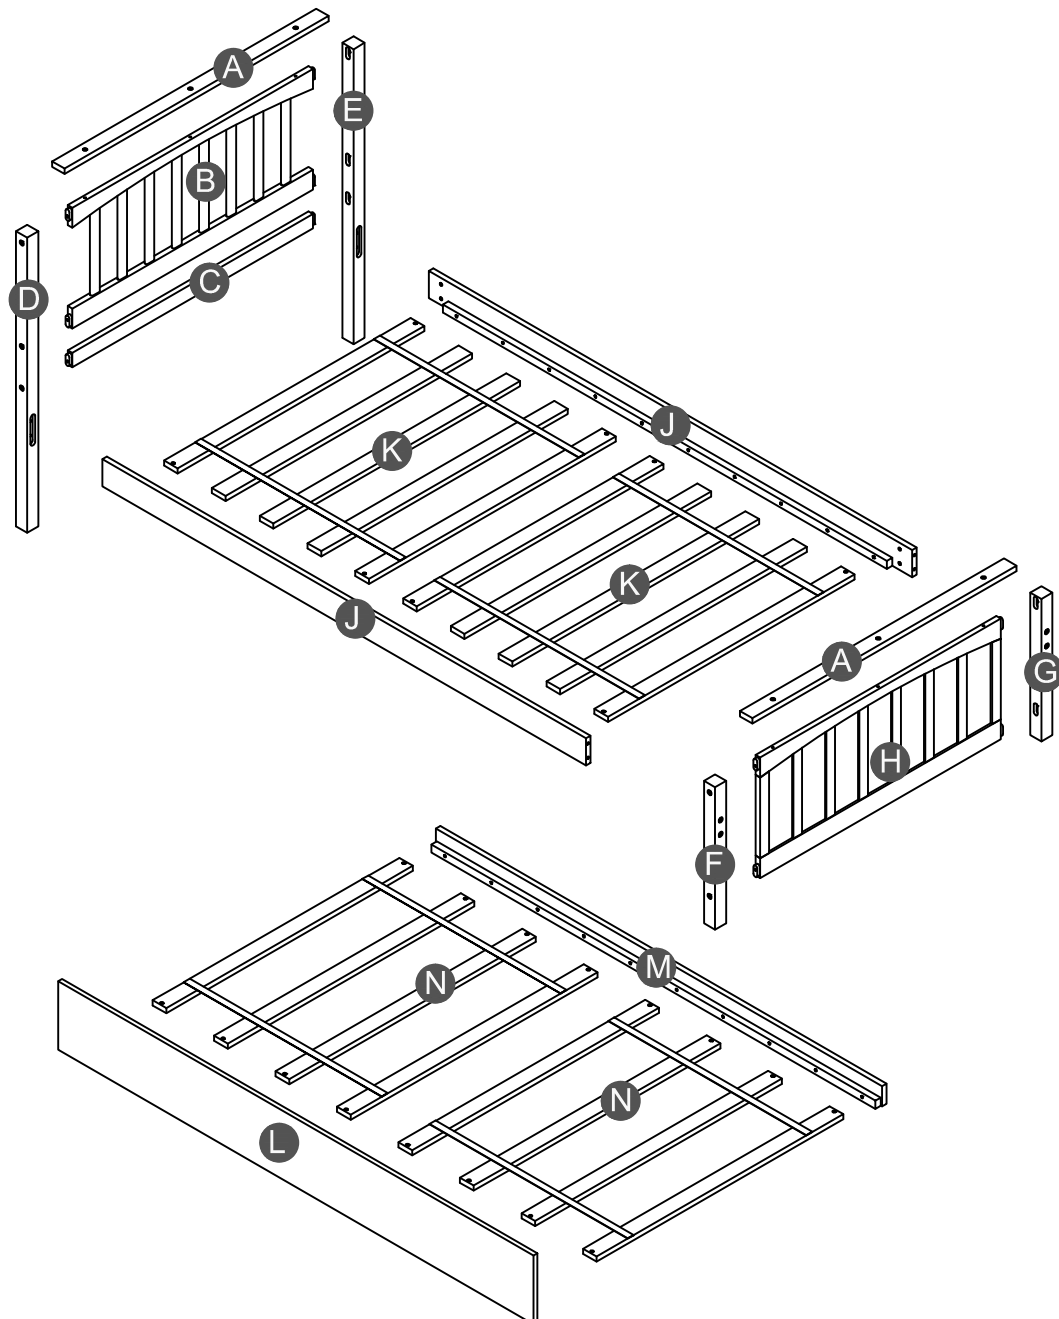



Part List

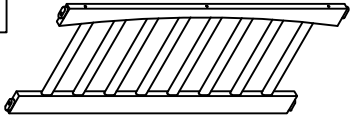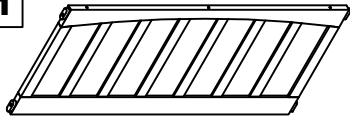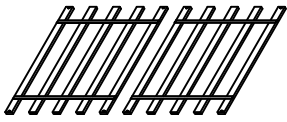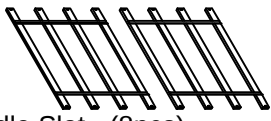A  Cap for HB & FB - 2pcs	B  HB Frame - 1pc	C  HB horizontal bar - 1pc
D  Leg headboard(Left) - 1pc	E  Leg headboard(Right) - 1pc	F  Leg footboard(Right) - 1pc
G  Leg footboard(Left) - 1pc	H  FB Frame - 1pc	J  Side rail - 2pcs
K  Slat - (10pcs)	L  Front panel of trundle - 1pc	M  Back panel side rail of trundle - 1pc
N  Trundle Slat - (8pcs)		

Hardware List


1  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(18pcs)
4  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	5  Ø4*30mm Wood screws (32pcs)	6  40*18*18*2mm Metal bracket (2pcs)
7  100*63*20mm Wheels (4pcs)	8  95*95*18*3mm Metal bracket (2pcs)	9  Ø3.5*15mm Wood screws (16pcs)
10  (1/4")4.5*58mm Allen key (1pc)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

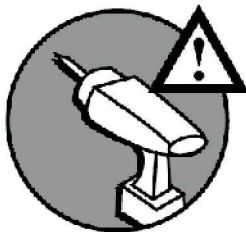


PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

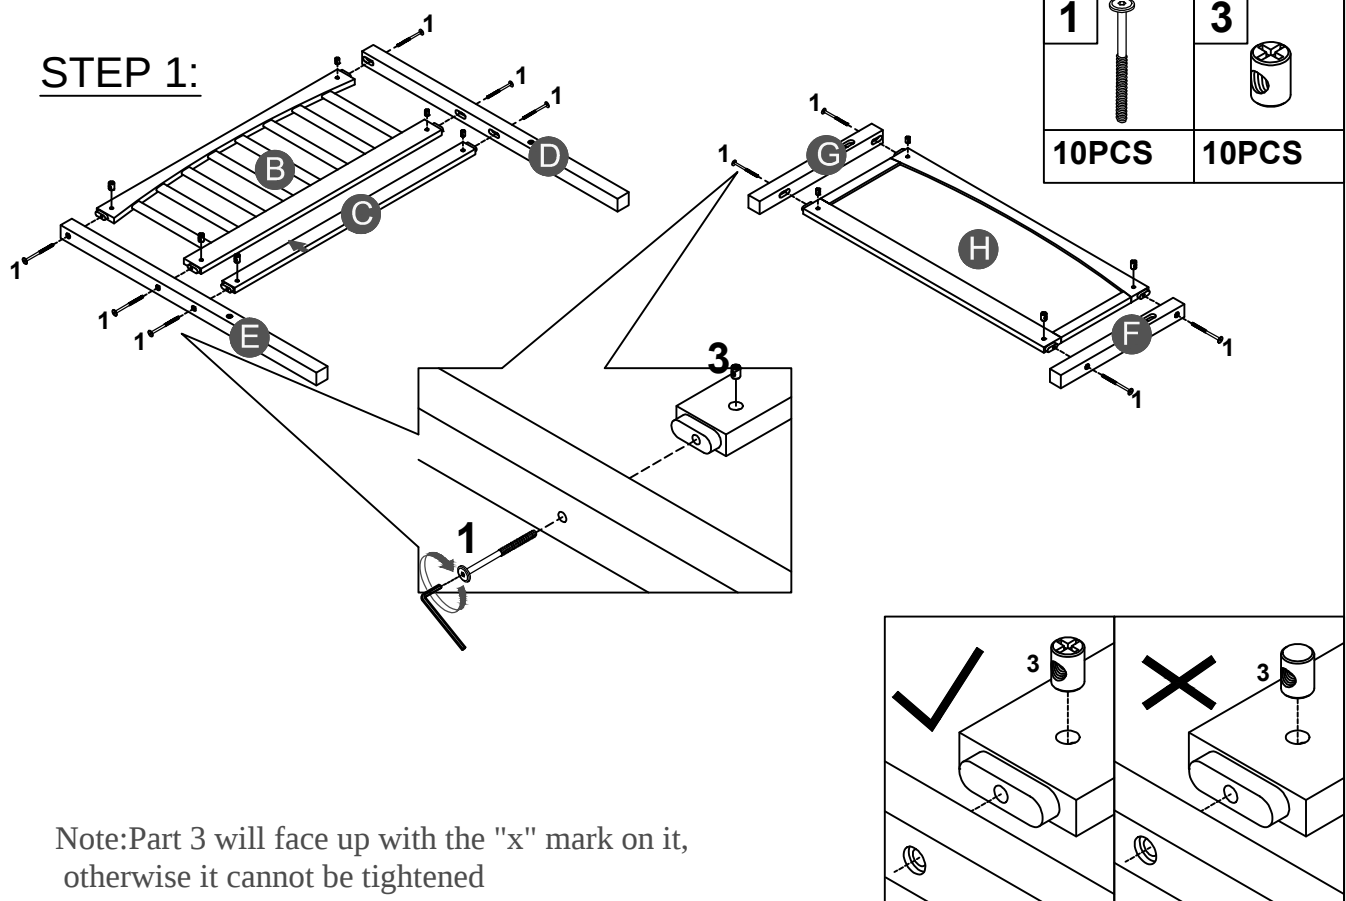


STEP 2:

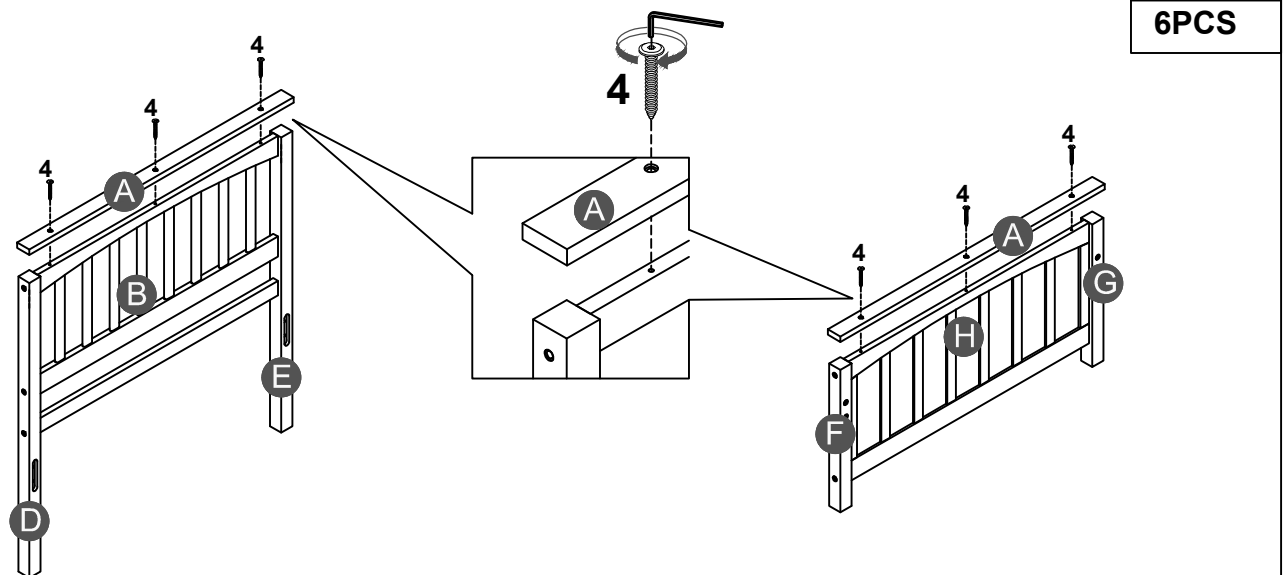

STEP 3:

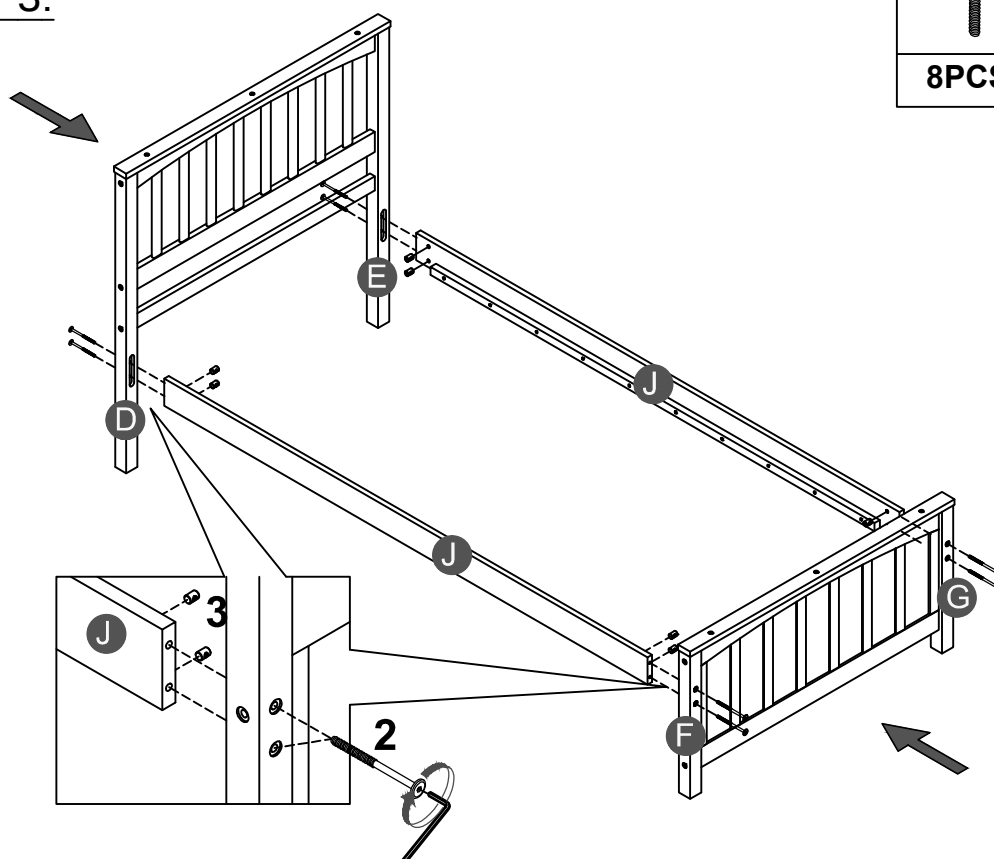

2




8PCS

3



8PCS


STEP 4:

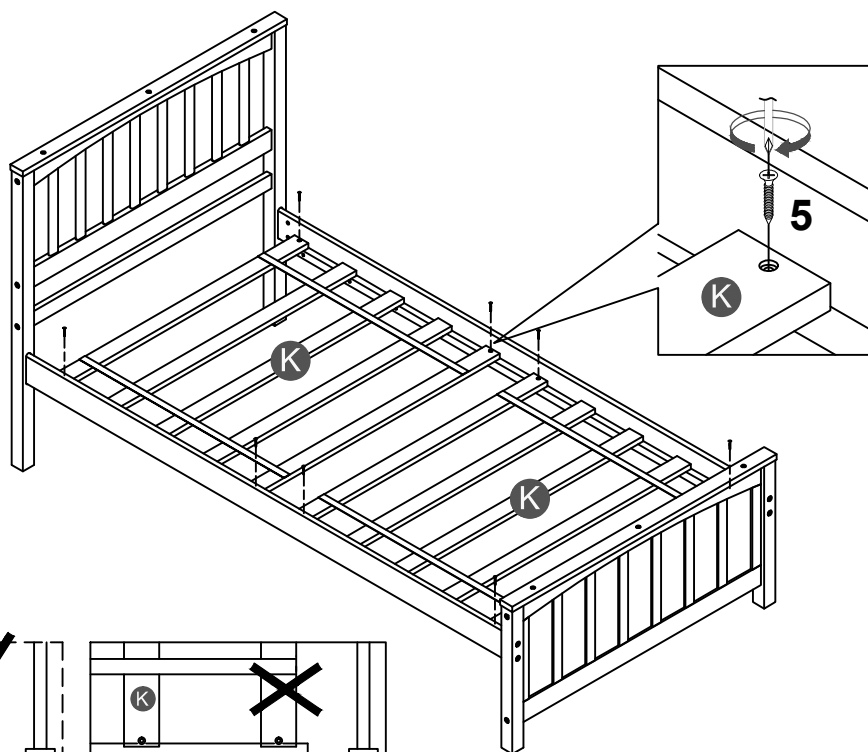

5




8PCS

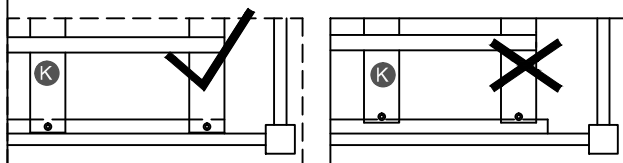

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break

STEP 5:



7	5
	
4PCS	8PCS

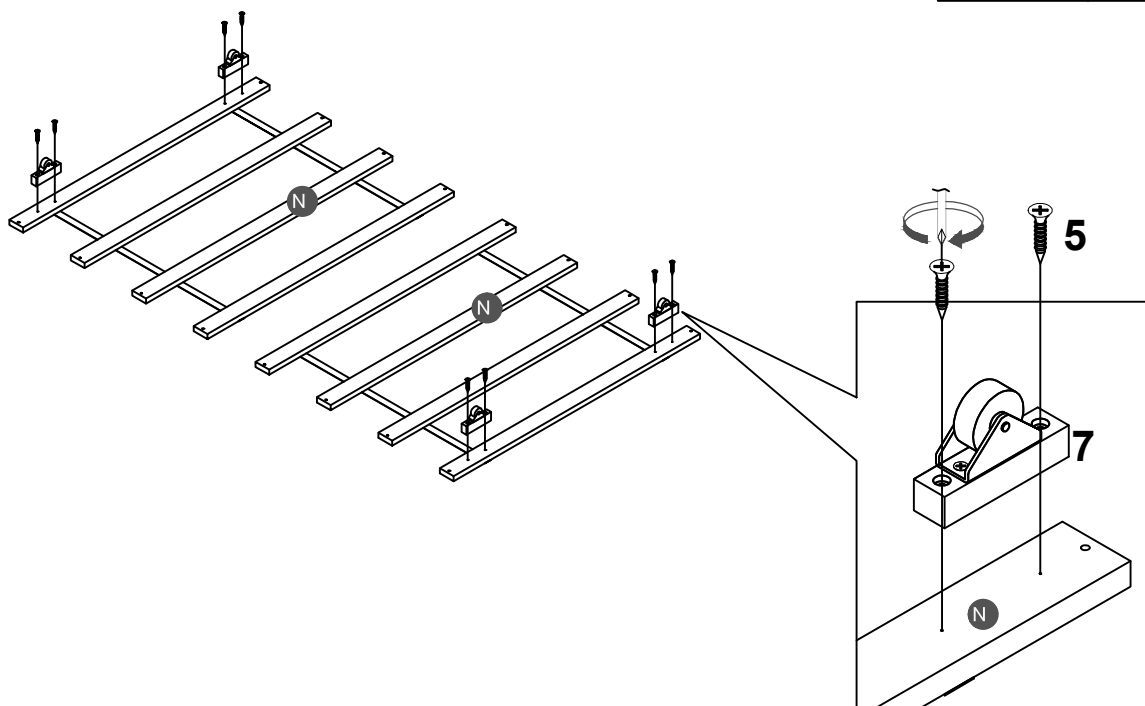

STEP 6:

5


16PCS

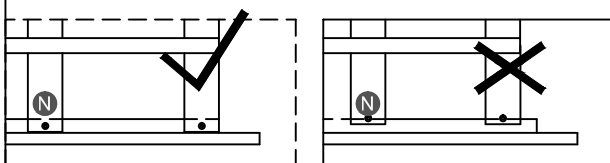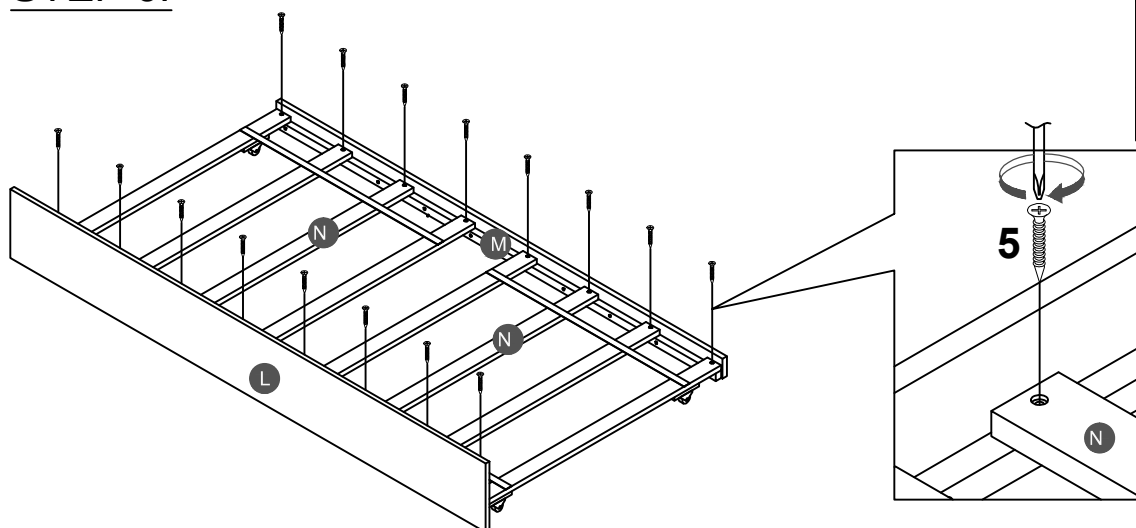

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break


STEP 7:

8	9
	
2PCS	8PCS

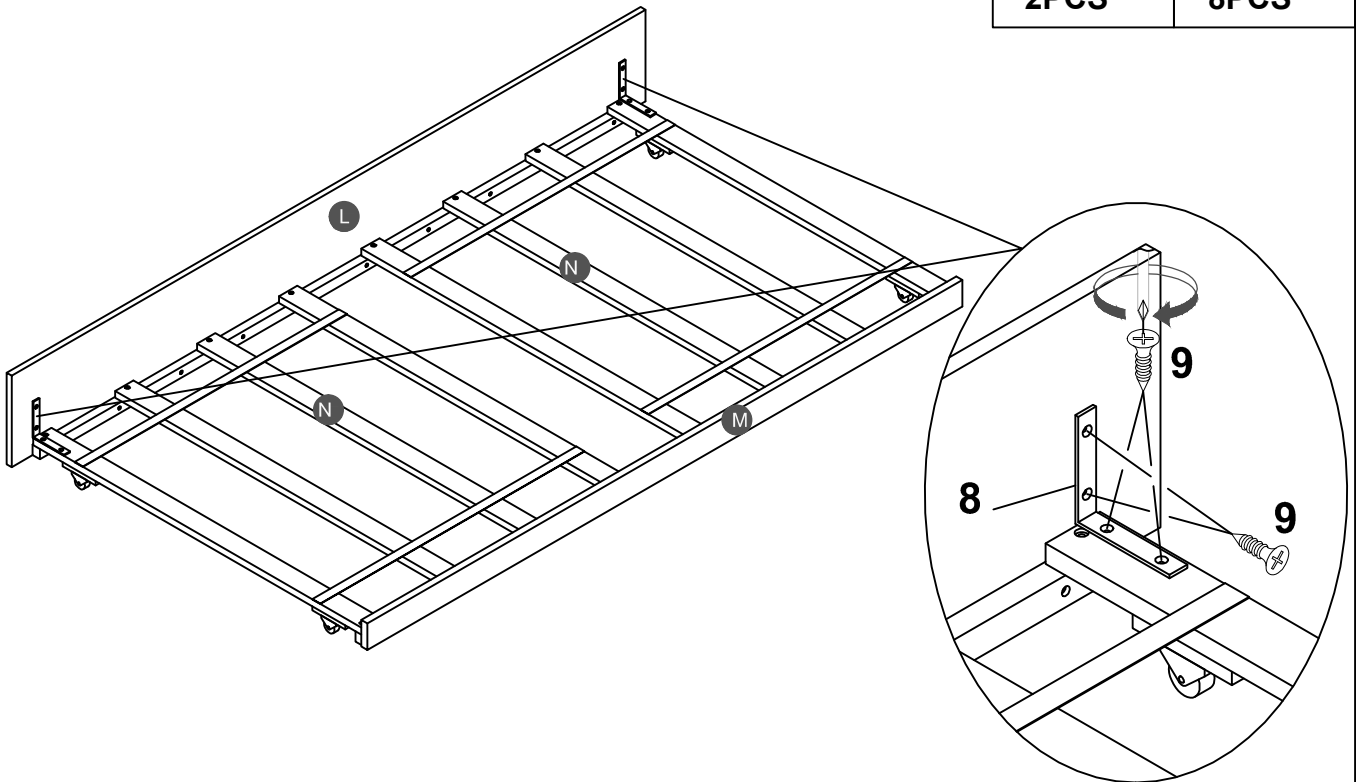


STEP 8:

9	6
	
8PCS	2PCS

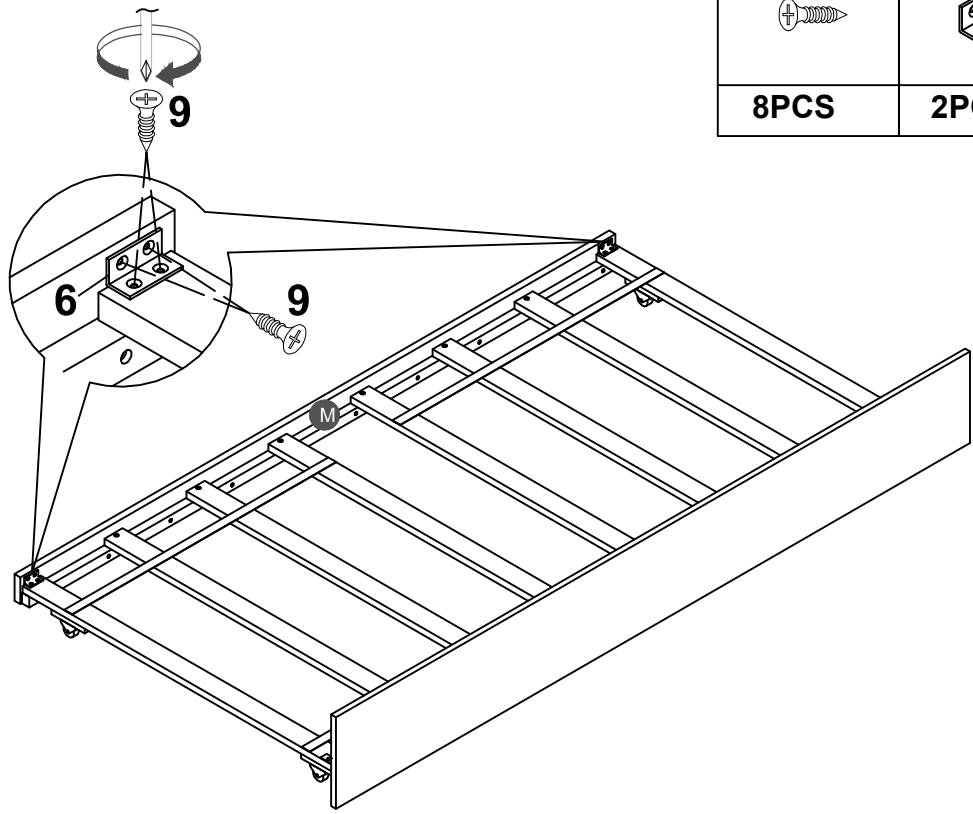

STEP 9:

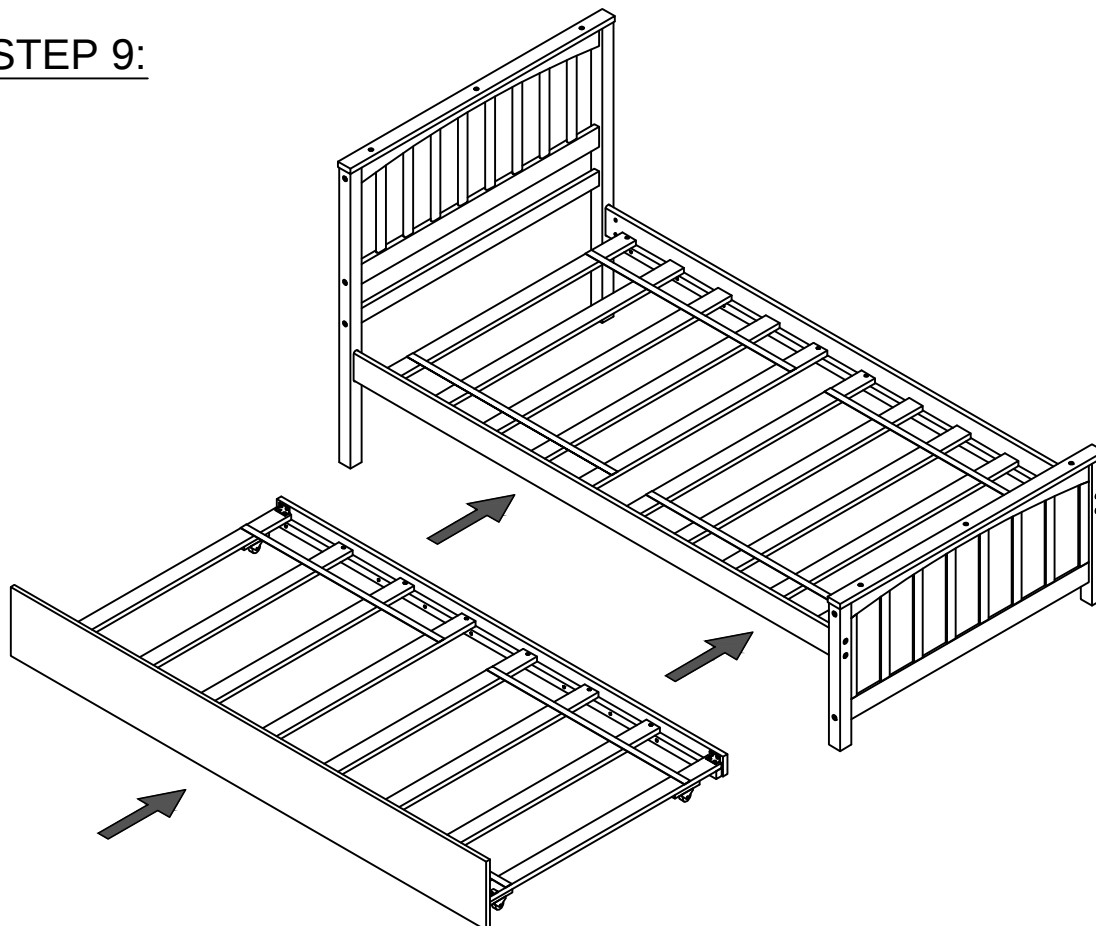

Push Trundle under the bottom of Twin Bed.

