




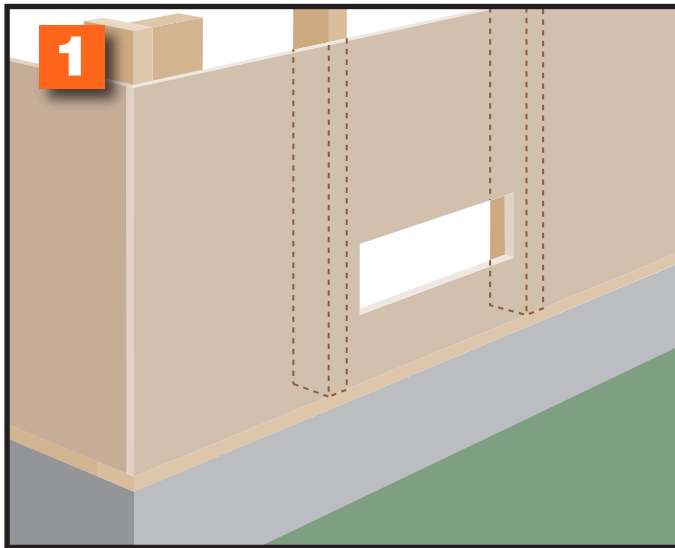

1. Cut a rough opening 14 3/4" x 6", between the wall studs.

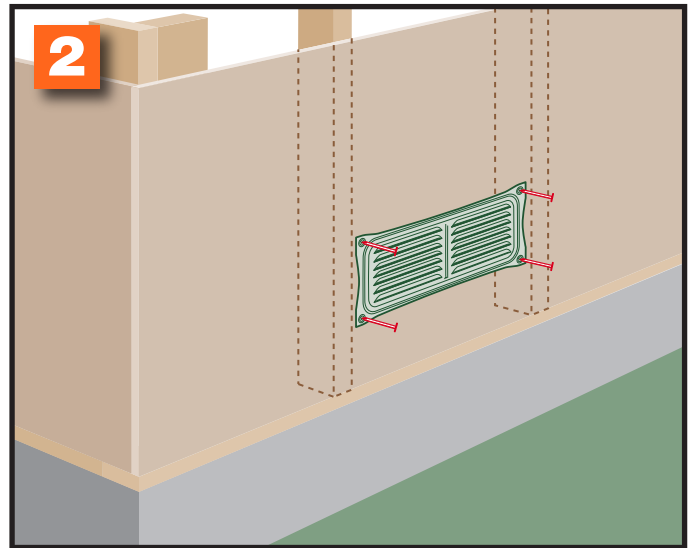


2. Nail or screw the flange to the framing using the punched nail holes provided.

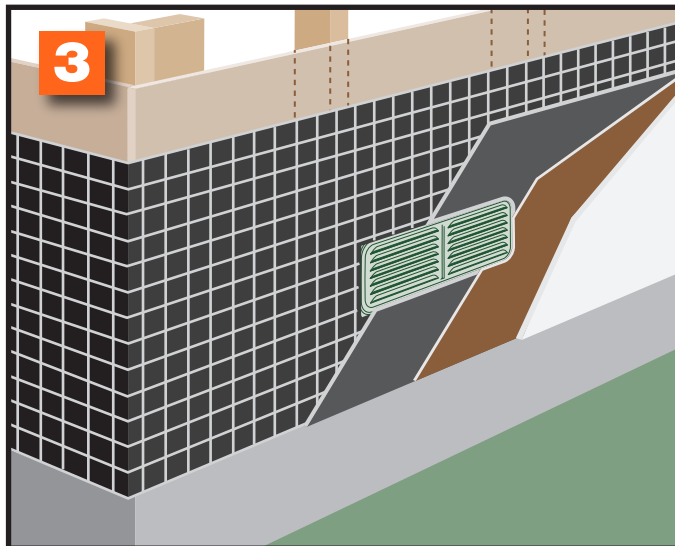

3. Cover the 7/8" reveal with building paper and stucco lath. Apply the scratch, brown and finish stucco coats.



When finished, the stucco surface will be flush with the louvered vent surface.

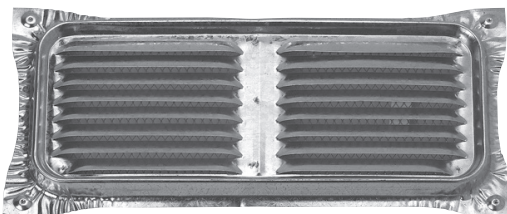

Rough Opening: 14.75" x 6"

Net Free Ventilation: 1/8" screen 42 sq. in.