


CSM2524-ES 24" COSMO SWIVEL METAL BARSTOOL ASSEMBLY INSTRUCTIONS

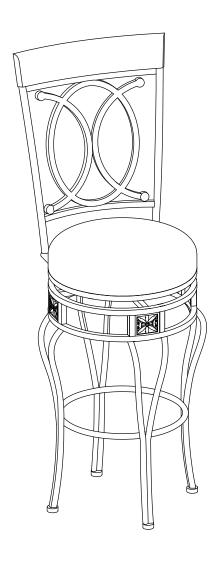

WARNING

- 1. Do not use this product unless all screws and bolts are securely tightened.
- 2. Check that all screws and bolts are tight every three months or as needed.
- 3. Dispose of packing material properly. Do not use plastic cover as head covering. It may cause suffocation.
- 4. Do not use this product as a stepladder.
- 5. Use this product for its intended purpose only.
- 6. Intended for residential use only


LIMITED WARRANTY

OSP Designs Warrants, to the original purchaser its products to be free from defects in material and workmanship for a period of 90 days. Defects and damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control of OSP Designs is not covered. The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To make a warranty claim, contact Customer Service, provide model number, sales receipt and description of the problem. It is the customer's responsibility to prepay freight on any components returned to the factory. OSP Designs will pay return freight on components covered under terms of warranty.

Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try, there are times when hardware is missing. Our Parts Department will do everything possible to promptly remedy the problem. Contact us via email **parts@officestar.net**, by Fax 1-909-930-5629, or toll free parts number 1-800-950-7262, Monday through Friday 8:00 a.m. - 5:00 p.m. Pacific Time. OSP Designs P.O. Box 3520 Ontario, California 91761 USA



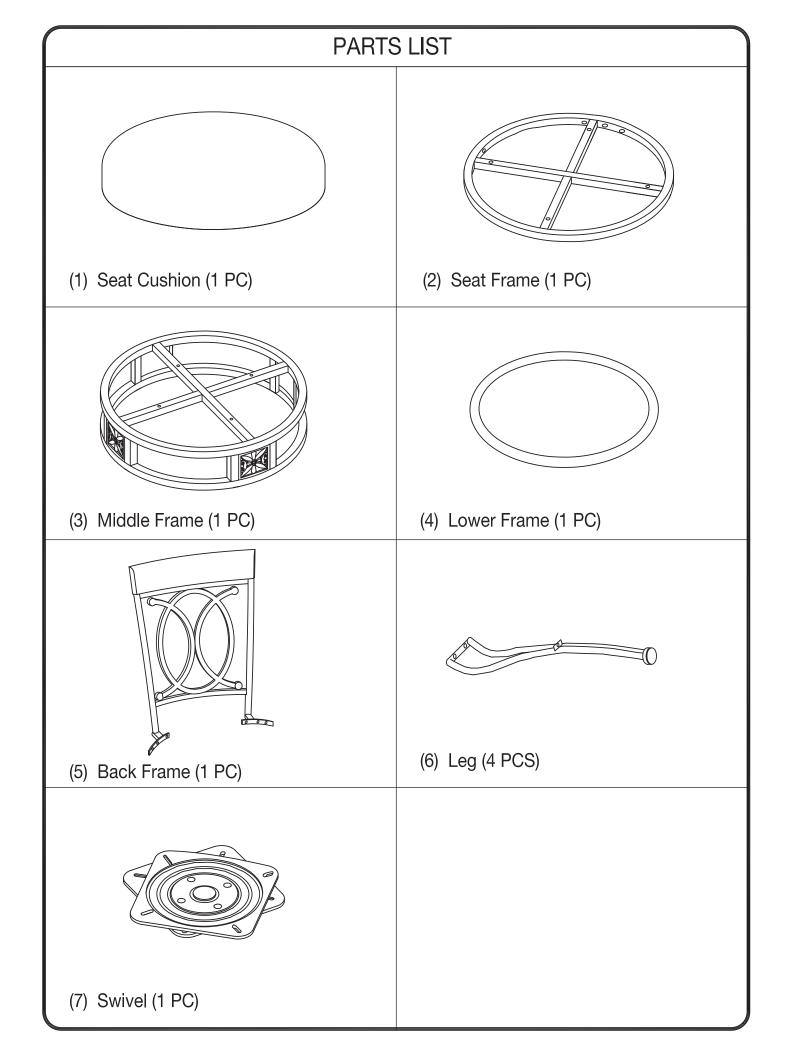


HARDWARE LIST

NO	SKETCH	DESCRIPTION	SIZE	Q'TY
A		Bolt	M6 X 15mm	20 PCS + 2 EXTRA
В		Bolt	M6 X 25mm	6 PCS + 1 EXTRA
С		Flat Washer		20 PCS + 2 EXTRA
D		Spring Washer		20 PCS + 2 EXTRA
E		Wrench	4 mm	1 PC
F		Wrench		6 PCS + 1 EXTRA
G	G	Open Wrench		1 PC
Н	<=====================================	Screw	M5 X 30mm	4 PCS + 1 EXTRA


NOTE: Phillips screwdriver also needed for assembly (not provided).

STEP 1


Secure Legs (6) to bottom of Middle Frame (3) using two Flat Washers (C), two Spring Washers (D) and two Bolts (A) for each Leg (6). **DO NOT FULLY TIGHTEN BOLTS (A).**

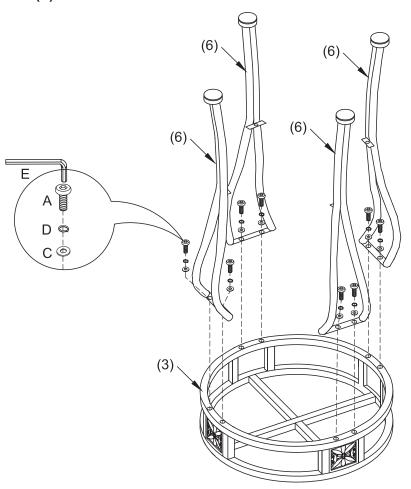


STEP 2
Secure Lower Frame (4) between Legs (6) using four Flat Washers (C), four Spring Washers (D) and four Bolts (A). APPLY FIRM PRESSURE TO ALIGN AND FULLY TIGHTEN ALL BOLTS (A) USING WRENCH (E).

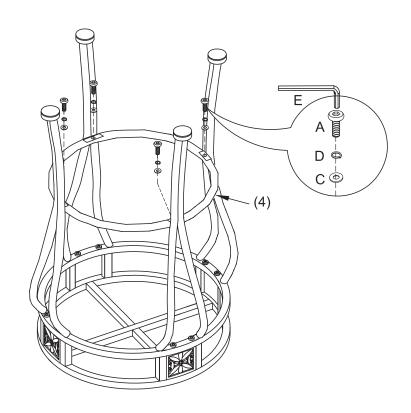


STEP 3
Secure Swivel (7) to Seat Frame (2) using four Flat Washers (C), four Spring Washers (D) and four Bolts (A). FULLY TIGHTEN ALL BOLTS (A) USING WRENCH (E).

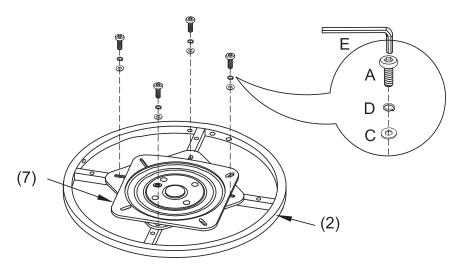

STEP 4
Secure Swivel (7) to assembly using four Flat Washers (C), four Spring Washers (D) and four Bolts (A). FULLY TIGHTEN ALL BOLTS (A) USING WRENCH (E).

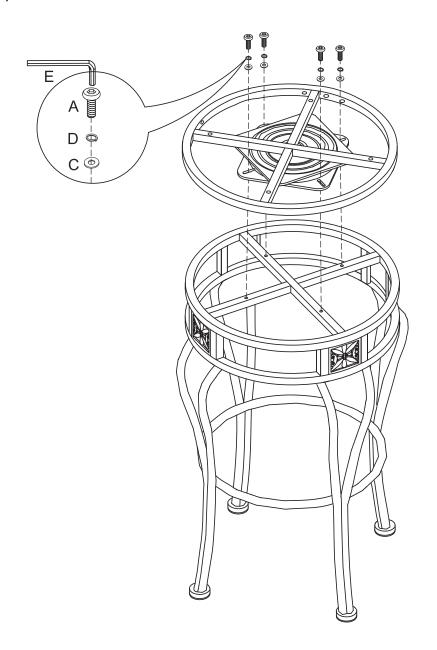

STEP 5
Secure Back Frame (1) to assembly using six Nuts (F) and six Bolts (B). FULLY TIGHTEN <u>ALL</u> NUTS (F) AND BOLTS (B) USING WRENCH (E) AND OPEN WRENCH (G) (as shown).

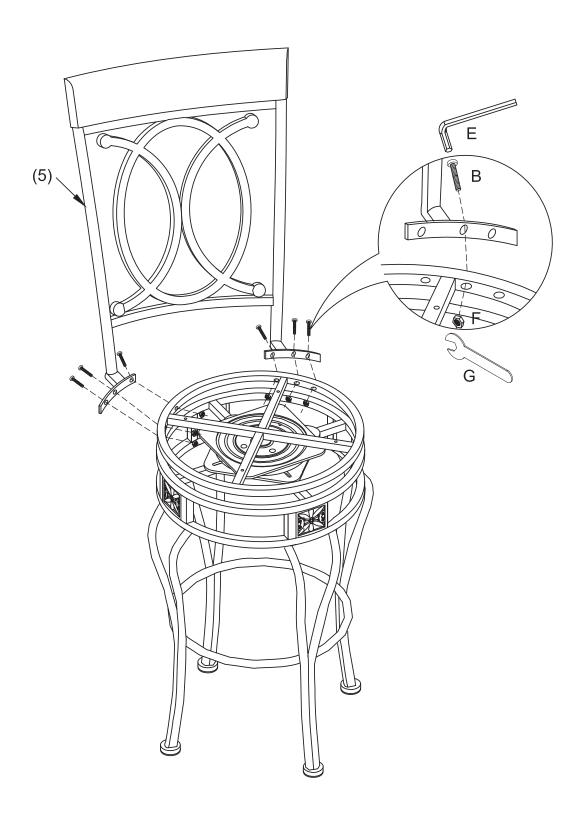

STEP 6
Secure Seat Cushion (1) to assembly using four Screws (H). FULLY TIGHTEN <u>ALL</u> SCREWS (H) USING PHILLIPS SCREWDRIVER (not provided).

