

Post Wrap

Installation Instructions

English Instructions.....	1
Español Instructions	5

FREEDOM[®]
OUTDOOR LIVING



Read all instructions prior to installing product.

Refer to manufacturers safety instructions when operating any tools.

To register your product, please visit: **freedomproduct.com**

⚠ WARNING:

- Always wear safety goggles.
- Refer to local building codes for installation requirements; failure to install this product in accordance with building codes may affect safety of the product and void product warranty.
- Refer to manufacturers safety instructions when operating any tools.

NOTICE:

- DO NOT attempt to assemble the kit if parts are missing or damaged.
- DO NOT return the product to the store, for assistance or replacement parts call: 1-888-418-4400.


TOOLS/MATERIALS NEEDED:

	Safety Goggles		Tape Measure
	Pencil		Power Saw
	Clamps		

Component list:

Quantity	Description
4	Post Wrap Pieces

Includes one set of post wrap pieces

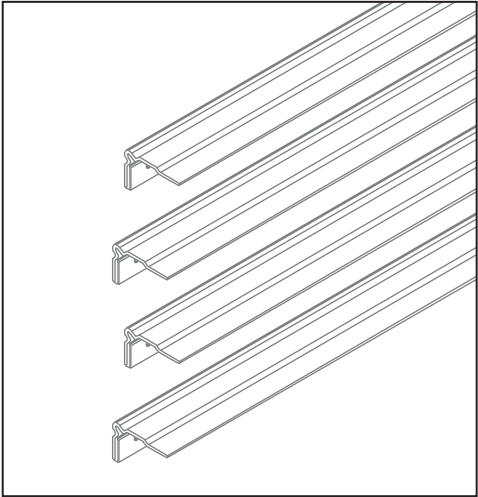

Post Wrap Pieces – 4

1

Measure height of post or newel to wrap. (Fig. 1)
Subtract $\frac{1}{8}$ " to allow for expansion, and cut all four
quarters of post wrap (Fig. 2).

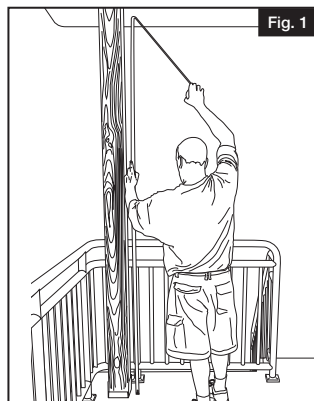


Fig. 1

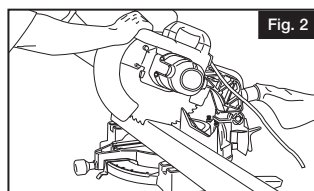


Fig. 2

2

Align and connect two quarters in place around
post (Fig. 3), and compress for a snug fit.

Remove the assembled half and set safely aside.



Fig. 3

3

Align and connect the remaining two quarters (Fig.
4), but DO NOT COMPRESS — leave roughly $\frac{1}{4}$ ".



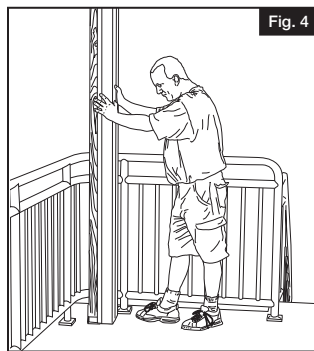


Fig. 4

4

Put the first assembled half into position and clamp in place (Fig. 5).

Align the channels and ribs of the second half to the first and compress until all four sides are equal in width (Fig. 5 & 6).

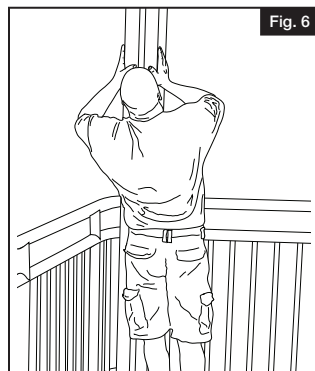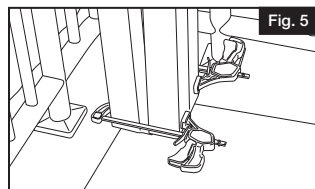

4

Forros de poste

Instrucciones de instalación

English Instructions.....	1
Español Instructions	5

FREEDOM[®]
OUTDOOR LIVING



Lea todas las instrucciones antes de la instalación del producto.

Consulte las instrucciones de seguridad del fabricante cuando se vaya a utilizar alguna herramienta.

Para registrar su producto, visite: **freedomproduct.com**

⚠ ADVERTENCIA:

- Use siempre gafas de seguridad.
- Consulte los códigos de construcción locales para conocer los requisitos de instalación: no instalar este producto de acuerdo con los códigos de construcción puede afectar la seguridad del producto y anular la garantía del mismo.
- Consulte las instrucciones de seguridad del fabricante cuando vaya a utilizar alguna herramienta.

AVISO:

- NO intente ensamblar el kit si faltan piezas o las piezas están dañadas.
- NO devuelva el producto a la tienda; para solicitar ayuda o piezas de repuesto, llame al: 1-888-418-4400.


HERRAMIENTAS/ MATERIALES QUE SE REQUIEREN:

Gafas de seguridad	Cinta métrica
Lápiz	Sierra eléctrica
Abrazaderas	

Lista de componentes:

Cantidad	Descripción
4	Piezas de forro de poste

Incluye un juego de piezas de forro de poste

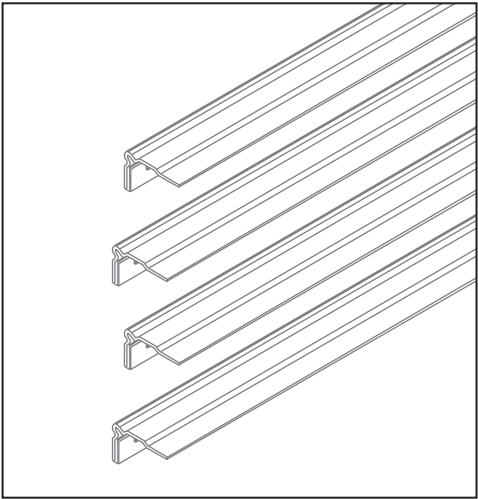

Piezas de forro de poste— 4

1

Mida la altura del poste o barrote que va a forrar.
(Fig. 1) Reste 0,32 cm para tener en cuenta la expansión y corte los cuatro cuartos del forro de poste (Fig. 2).

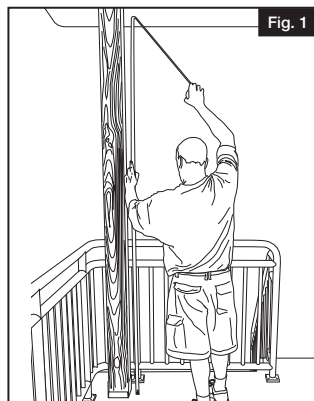


Fig. 1

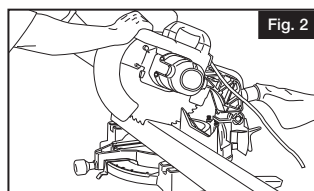


Fig. 2

2

Alinee y conecte dos cuartos en el lugar alrededor del poste (Fig. 3), y comprima para lograr un mejor ajuste.

Quite la mitad ensamblada y colóquela cuidadosamente por un lado.



Fig. 3

3

Alinee y conecte los otros dos cuartos (Fig. 4), pero NO COMPRIMA – deje aproximadamente 0,64cm.

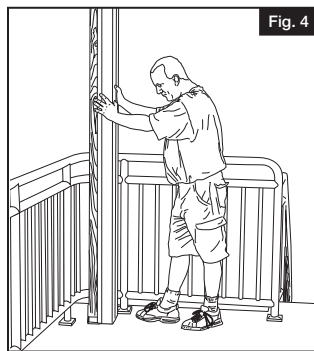


Fig. 4

4

Coloque la primera mitad ensamblada en su posición y fíjela en el lugar con una abrazadera (Fig. 5).

Alinee los canales y los nervios de la segunda mitad con la primera y comprima hasta que los cuatro lados queden iguales de anchura (Fig. 5 y 6)

