


Mcrbeay

Shower Curtain Rod




PRE-INSTALLATION PREPARATION


Choose installation location.
Clean both wall surface and the rubber pad of endcaps.
Make sure no oil or water on the surface.

INSTALLATION STEPS:

- 1 Extend the tension rod **to 2-4"** longer than the size of the opening.

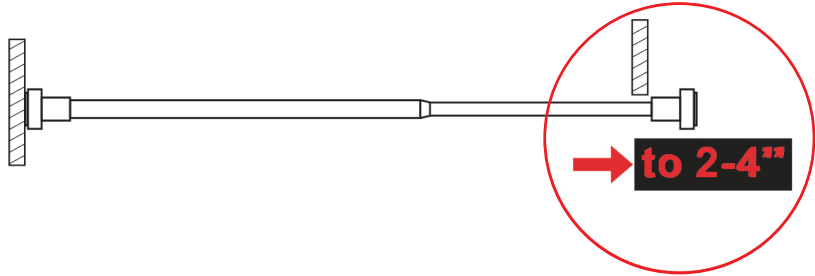


- 2 Pull back the rod to creat compression, and then release it to the opening wall.

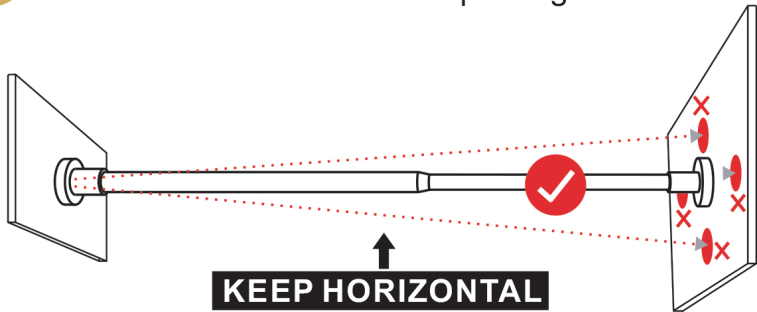

CHECK AFTER INSTALLATION:

- 3 After installation, pull down the middle of the rod to test if the rod is fixed firmly between the walls. If not, user can twist/extend the smaller rod to increase spring force.

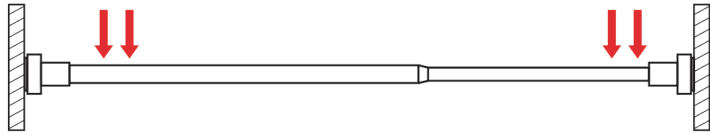

We offer an additional 5.9inch pole to better accommodate different ranges of use.

