


INSTALLATION GUIDE



We recommend testing single sheet sample on desired surface prior to applying entire package of tiles

1. Clean your wall

Lightly sand and clean surface with a strong grease remover like Tri-sodium Phosphate (TSP). Make sure surface is completely dry.

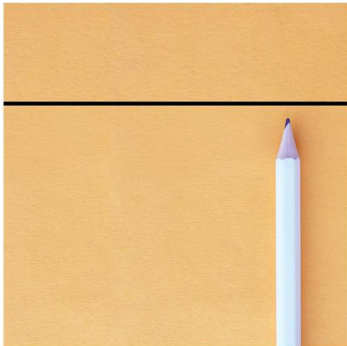


2. Draw guidelines

Very important! Trace guidelines on wall with a leveler or chalk line to help align placement of tiles uniformly. It is difficult to line up and apply tiles uniformly over grout lines without visual aid of a guideline.

3. Cut and save

Using a ruler, cut the left part of your first tile along a straight line. Save the piece for the end to complete your tiled look.


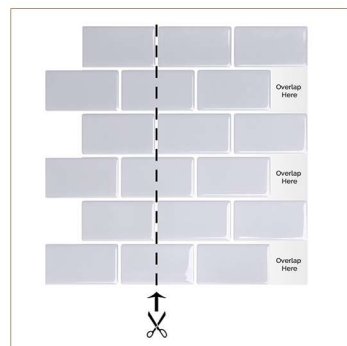


4. Peel and stick

Peel back first two inches of backing **without touching the adhesive surface**. Align tile carefully along guideline while applying light pressure from left to right. Press firmly along the grout lines once applied.

5. Align your tiles

Align tiles carefully from left to right along guidelines and **overlapping only on grout lines**. Do not overlap onto tiles as they may fall off if not applied exactly along the grout.

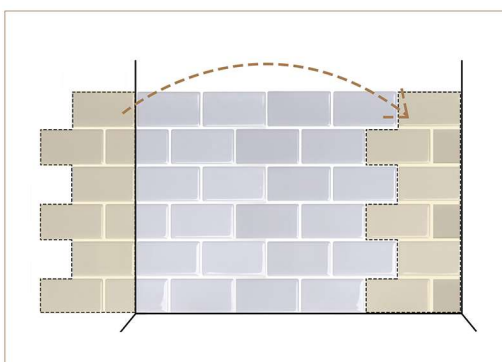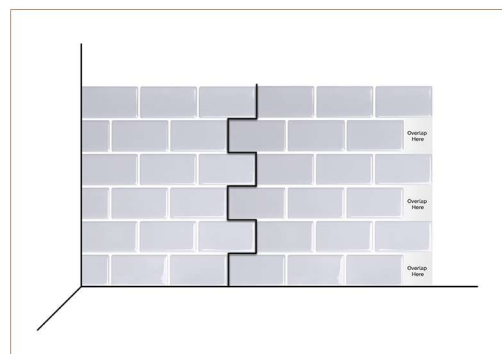

6. Use cut piece to finish



Remember the piece you cut off from your first tile? On last tile, **use the same piece** to fill in empty space on right edge of last tile.

Installation Overlap Tips



Overlap along grout lines, not the tiles for best results. Overlapping on tiles may result in tiles falling off. Press firmly on overlapped grout lines for best results.

! CAUTION : Use Sandpaper to Prep Textured Walls

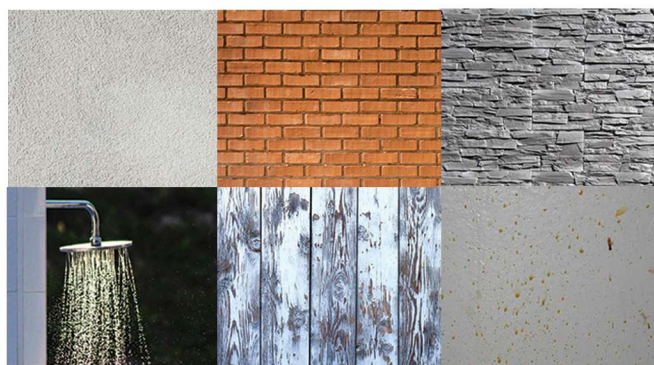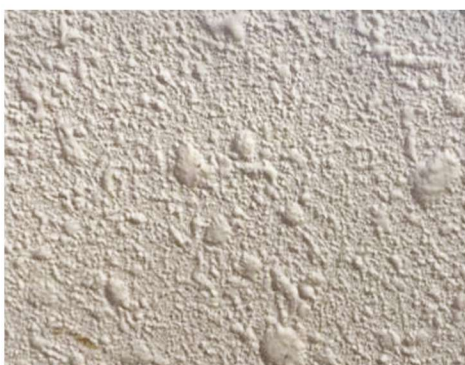

Do not apply on greasy or oily walls directly. Prepare latex or painted surfaces by lightly sanding with sandpaper.

Temperature of the wall and tiles should be at least 70°F for 12 hours before and 24 hours after installation.