
ASSEMBLY INSTRUCTIONS


TWIN BED WITH DRAWER

If you have any questions, please feel free to contact us. Email: lowes.team@qualfurn.net

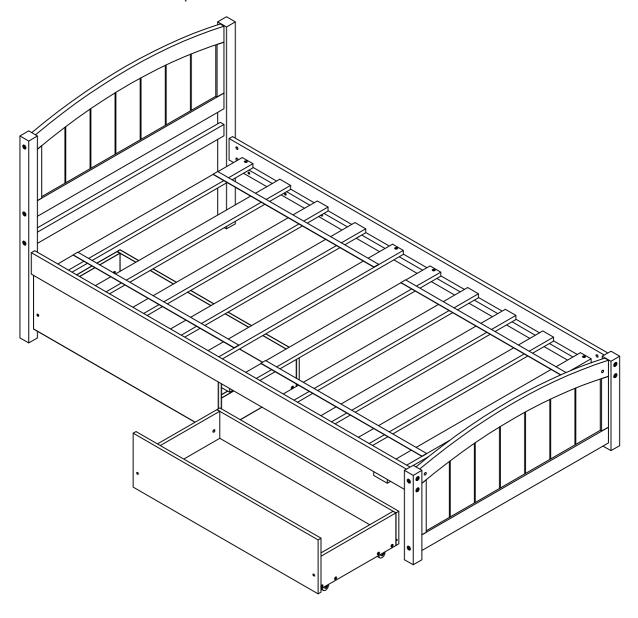


WF194280

Detail View

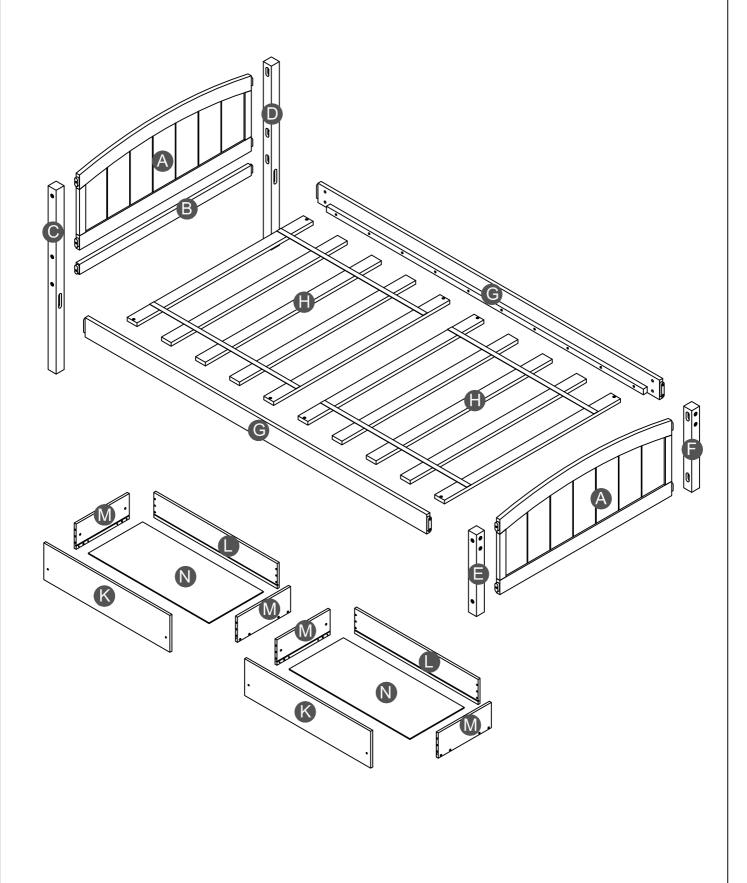


Part List

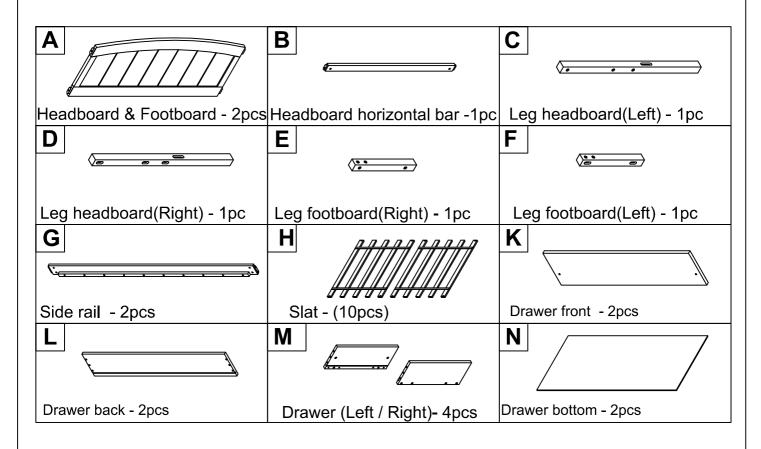

Hardware List


1	2	3
		() () () () () () () () () ()
(Ø15)1/4"*80mm	(Ø15)1/4"*100mm	1/4"*15 (9.5mm)
Hex-Head bolts (10pcs)	Hex-Head bolts (8pcs)	Horizontal-Hole bolts(26pcs)
4	5	[6]
		(a)
(1/4")4.5*58mm	Ø4*30mm	(Ø12)1/4"*60mm
Allen key (1pc)	Wood screws (30pcs)	Hex-Head bolts (8pcs)
7	8	9
0		<u> </u>
100*54*20 mm	70*35 [*] 19 mm	Ø8*30mm
Wheels (8pcs)	Wood support drawer (3pcs)	Wood dowel (16pcs)
10		
Ø10*20mm		
Wood dowel (8pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)







PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

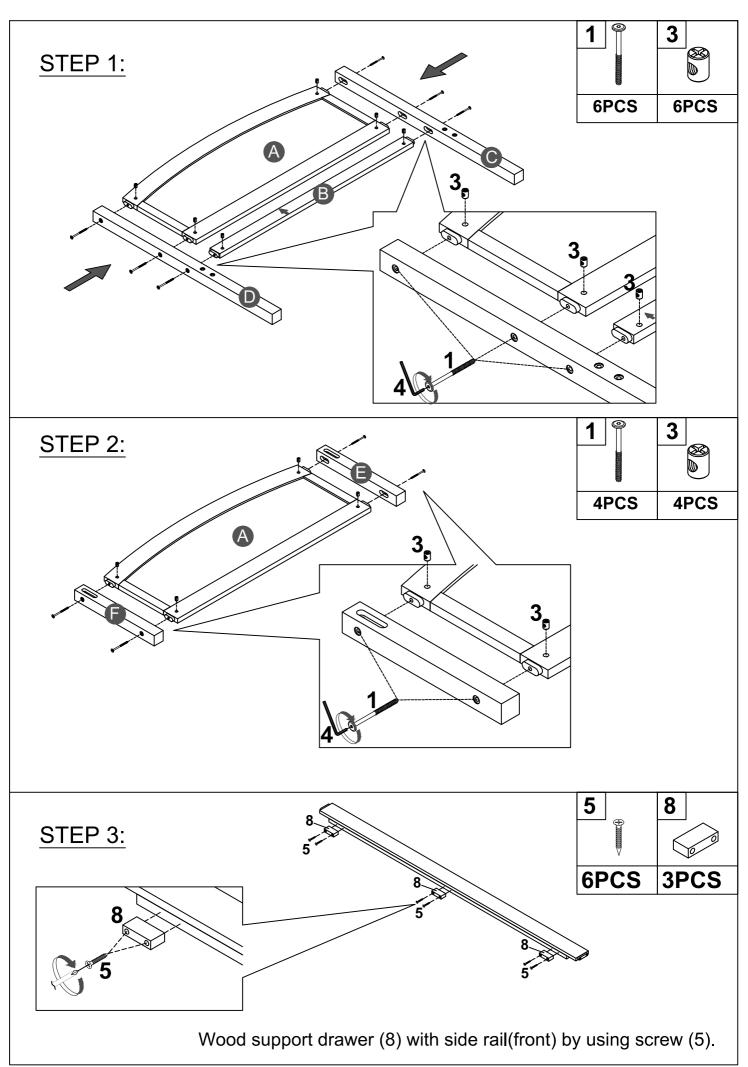

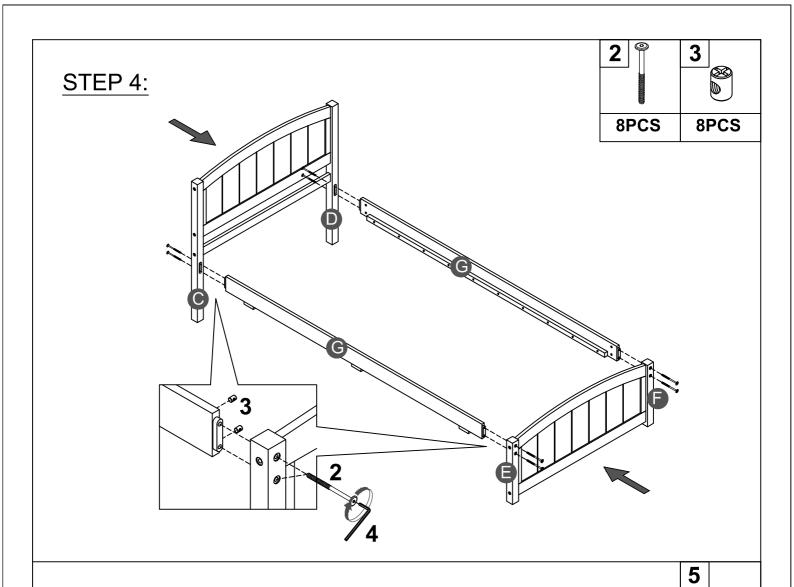


8PCS

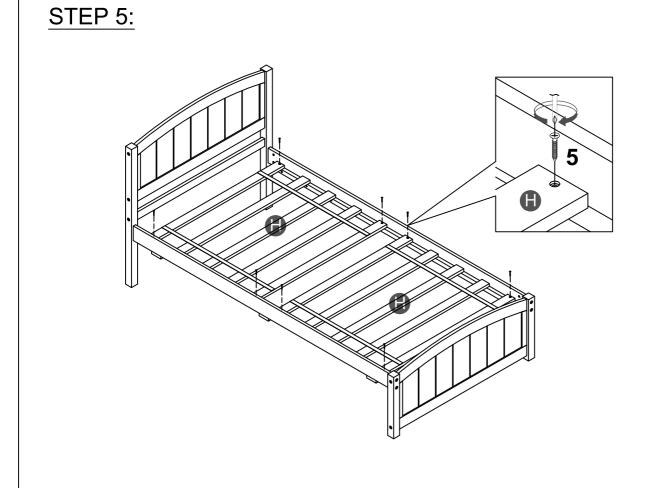

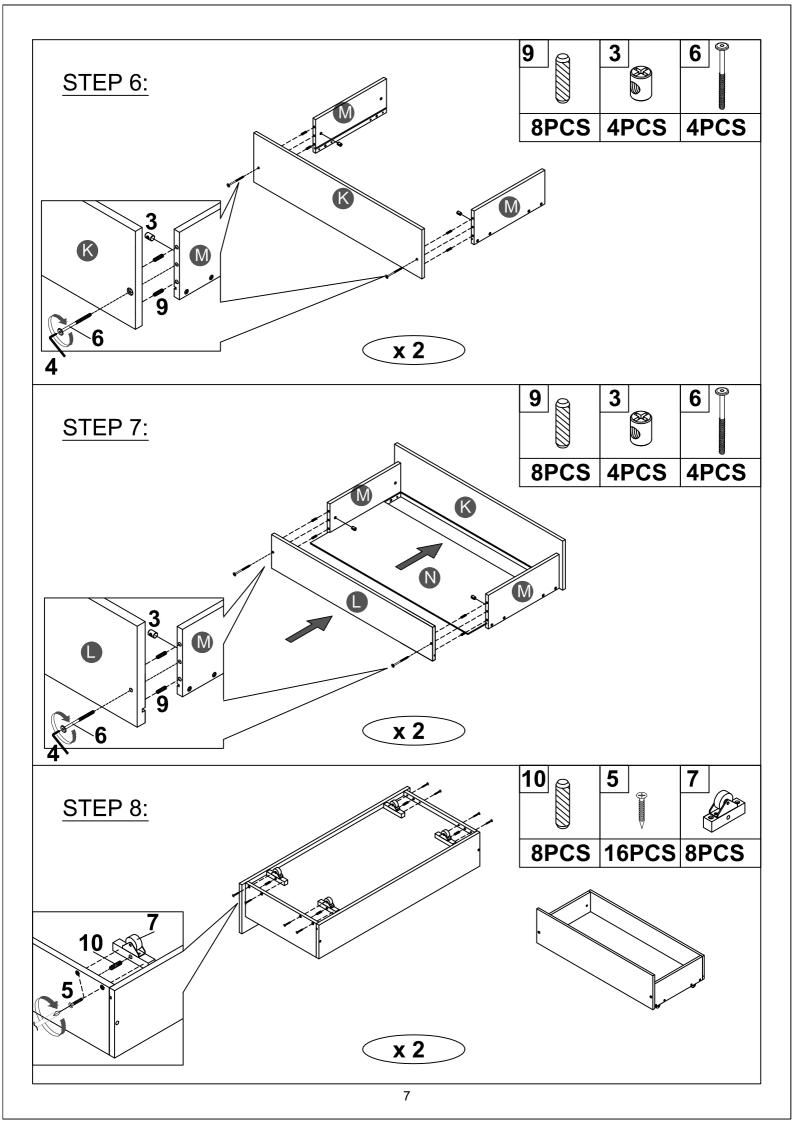

<u>STEP 9:</u>

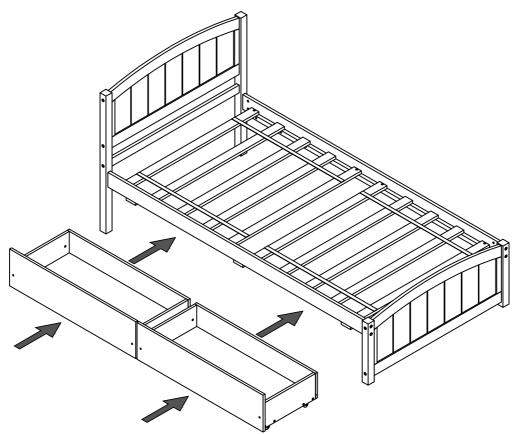

Push Drawer under the bottom of Twin Bed.

