



Post & Frame Installation System


How It Works

Basic Installation Steps

**5½" WPC Fence Slats installed
with 24" Horizontal Fence Kits*
on 52" Posts***



- 1.** Bolt down 1st Post*.
- 2.** Loosely screw **lower** Slat Channels* into pre-drilled Posts. Adjust Channels to Slat thickness and tighten screws.
- 3.** Slide first Slat* into Channels. Secure with Slat Locking Screws. Add 3 more Slats.
- 4.** Attach **upper** Slat Channels to Posts as in Step 2. Add 4 Slats.
- 5.** Add Topper Slat and secure with screws and brace strap. *See detailed instructions included.*

**Sold separately. All hardware is included with Slat Fence Kits and Posts.
Illustrations not to scale.*

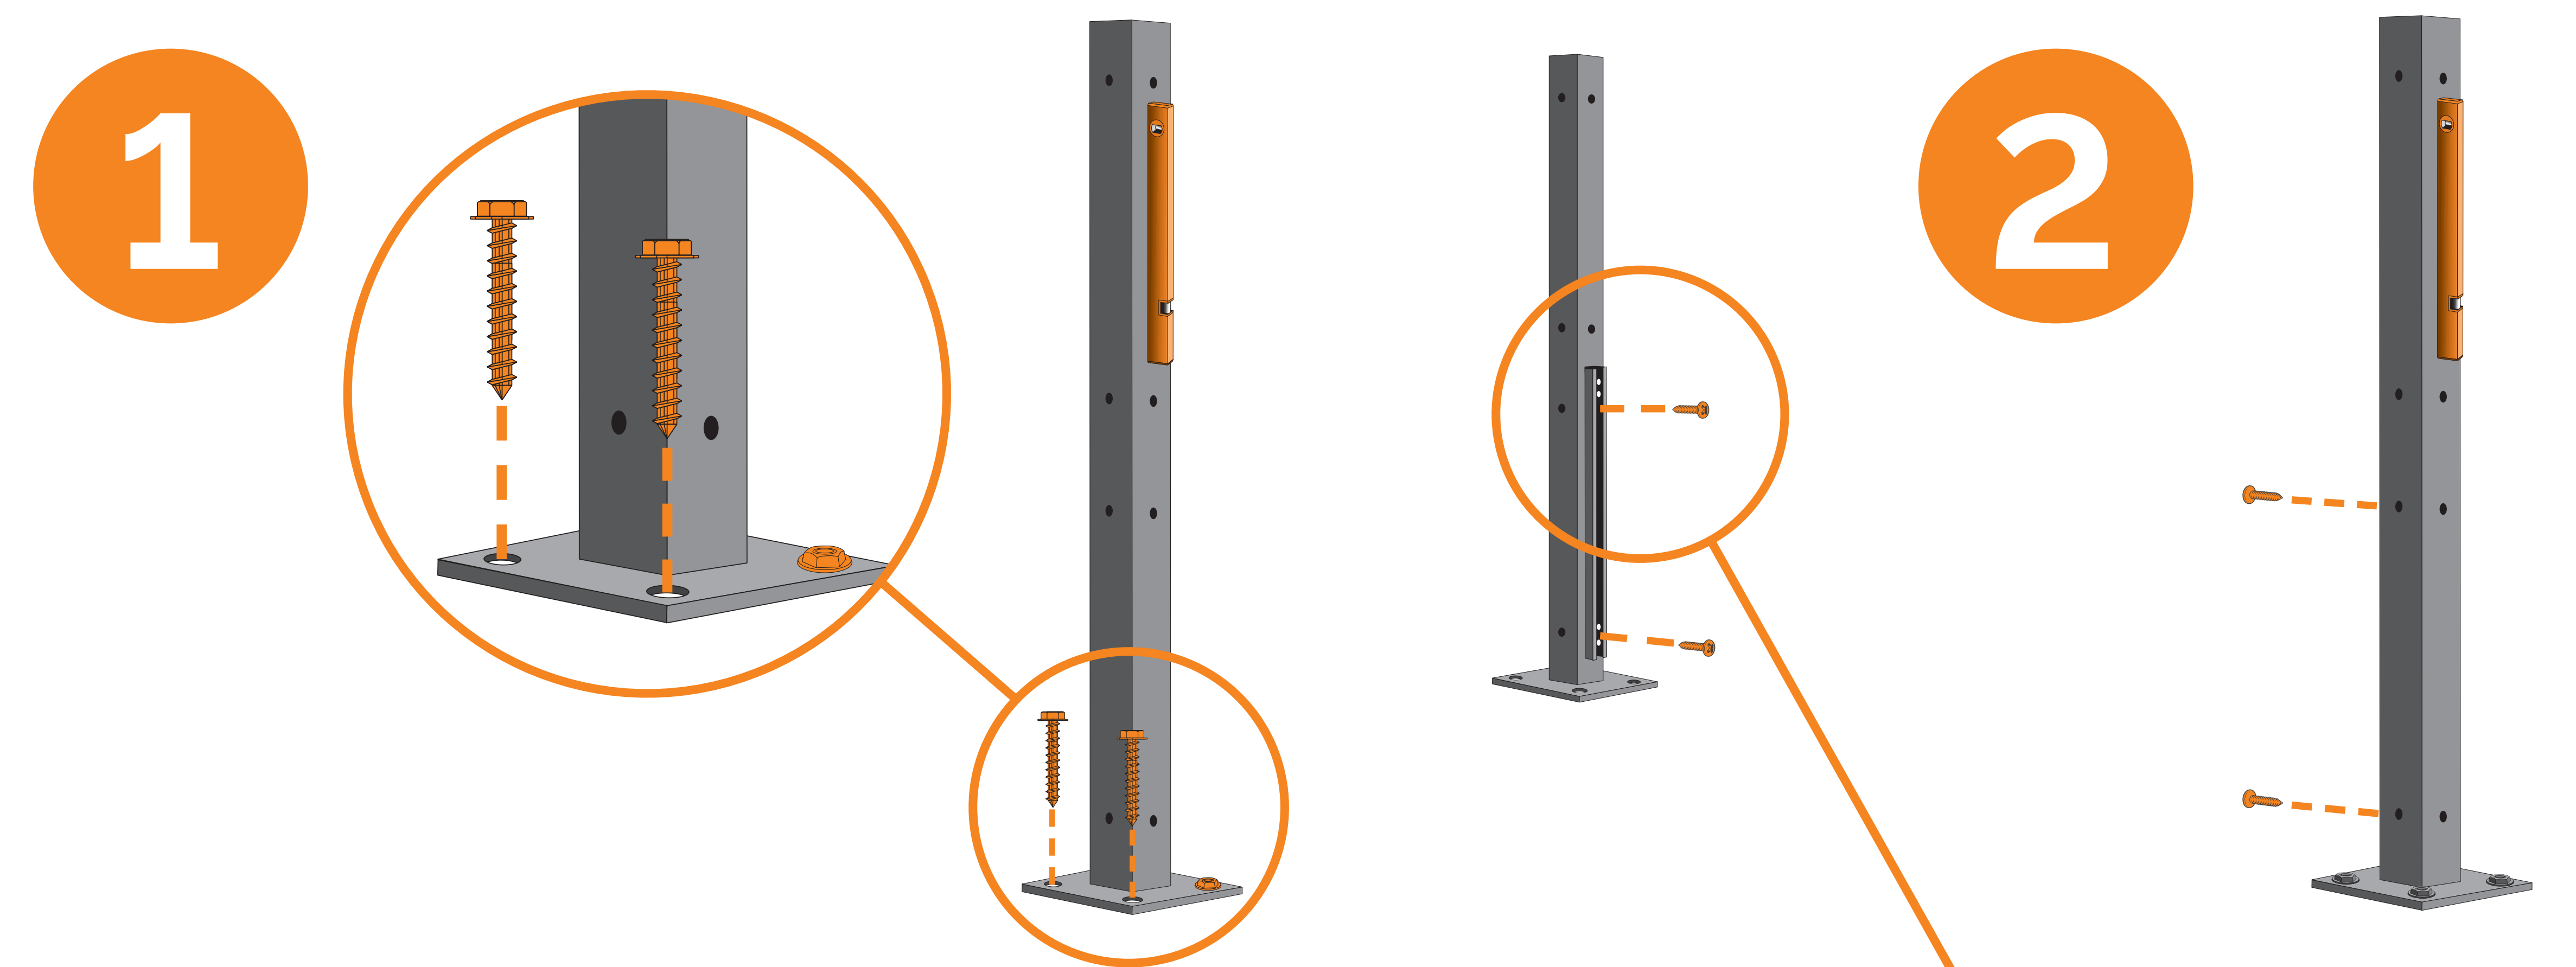

Channel Adjustment

Channel sets adjust to fit Slats ½" to 1" thick.

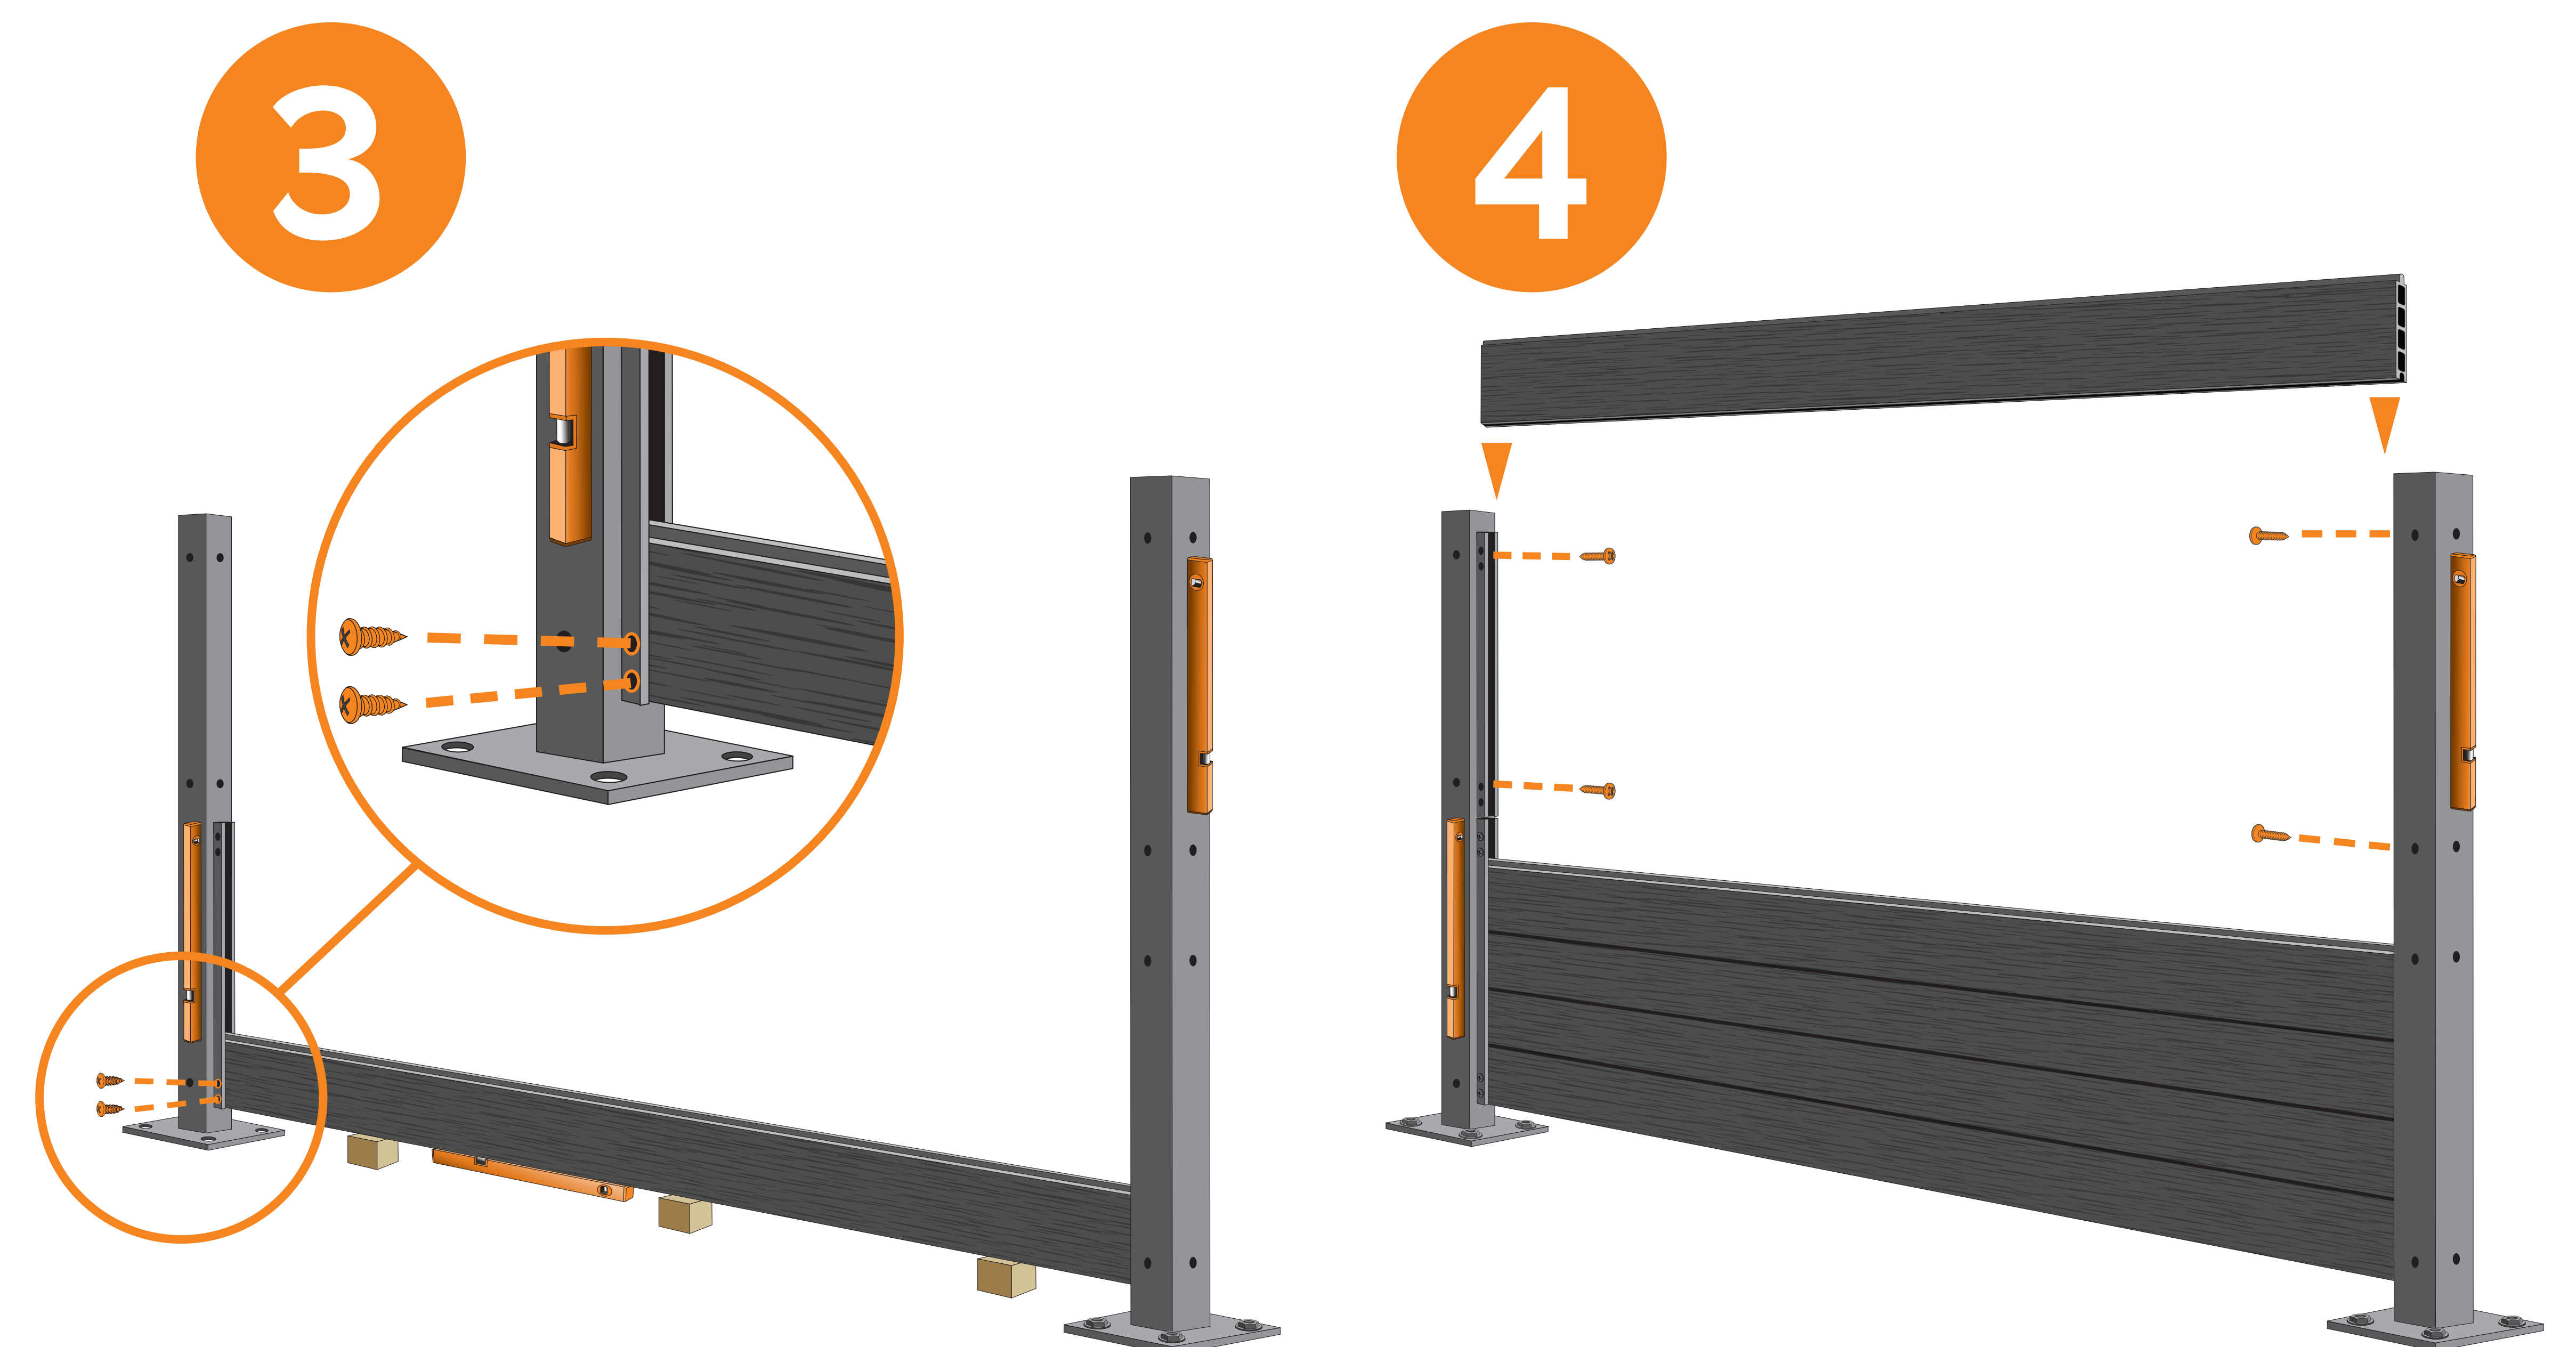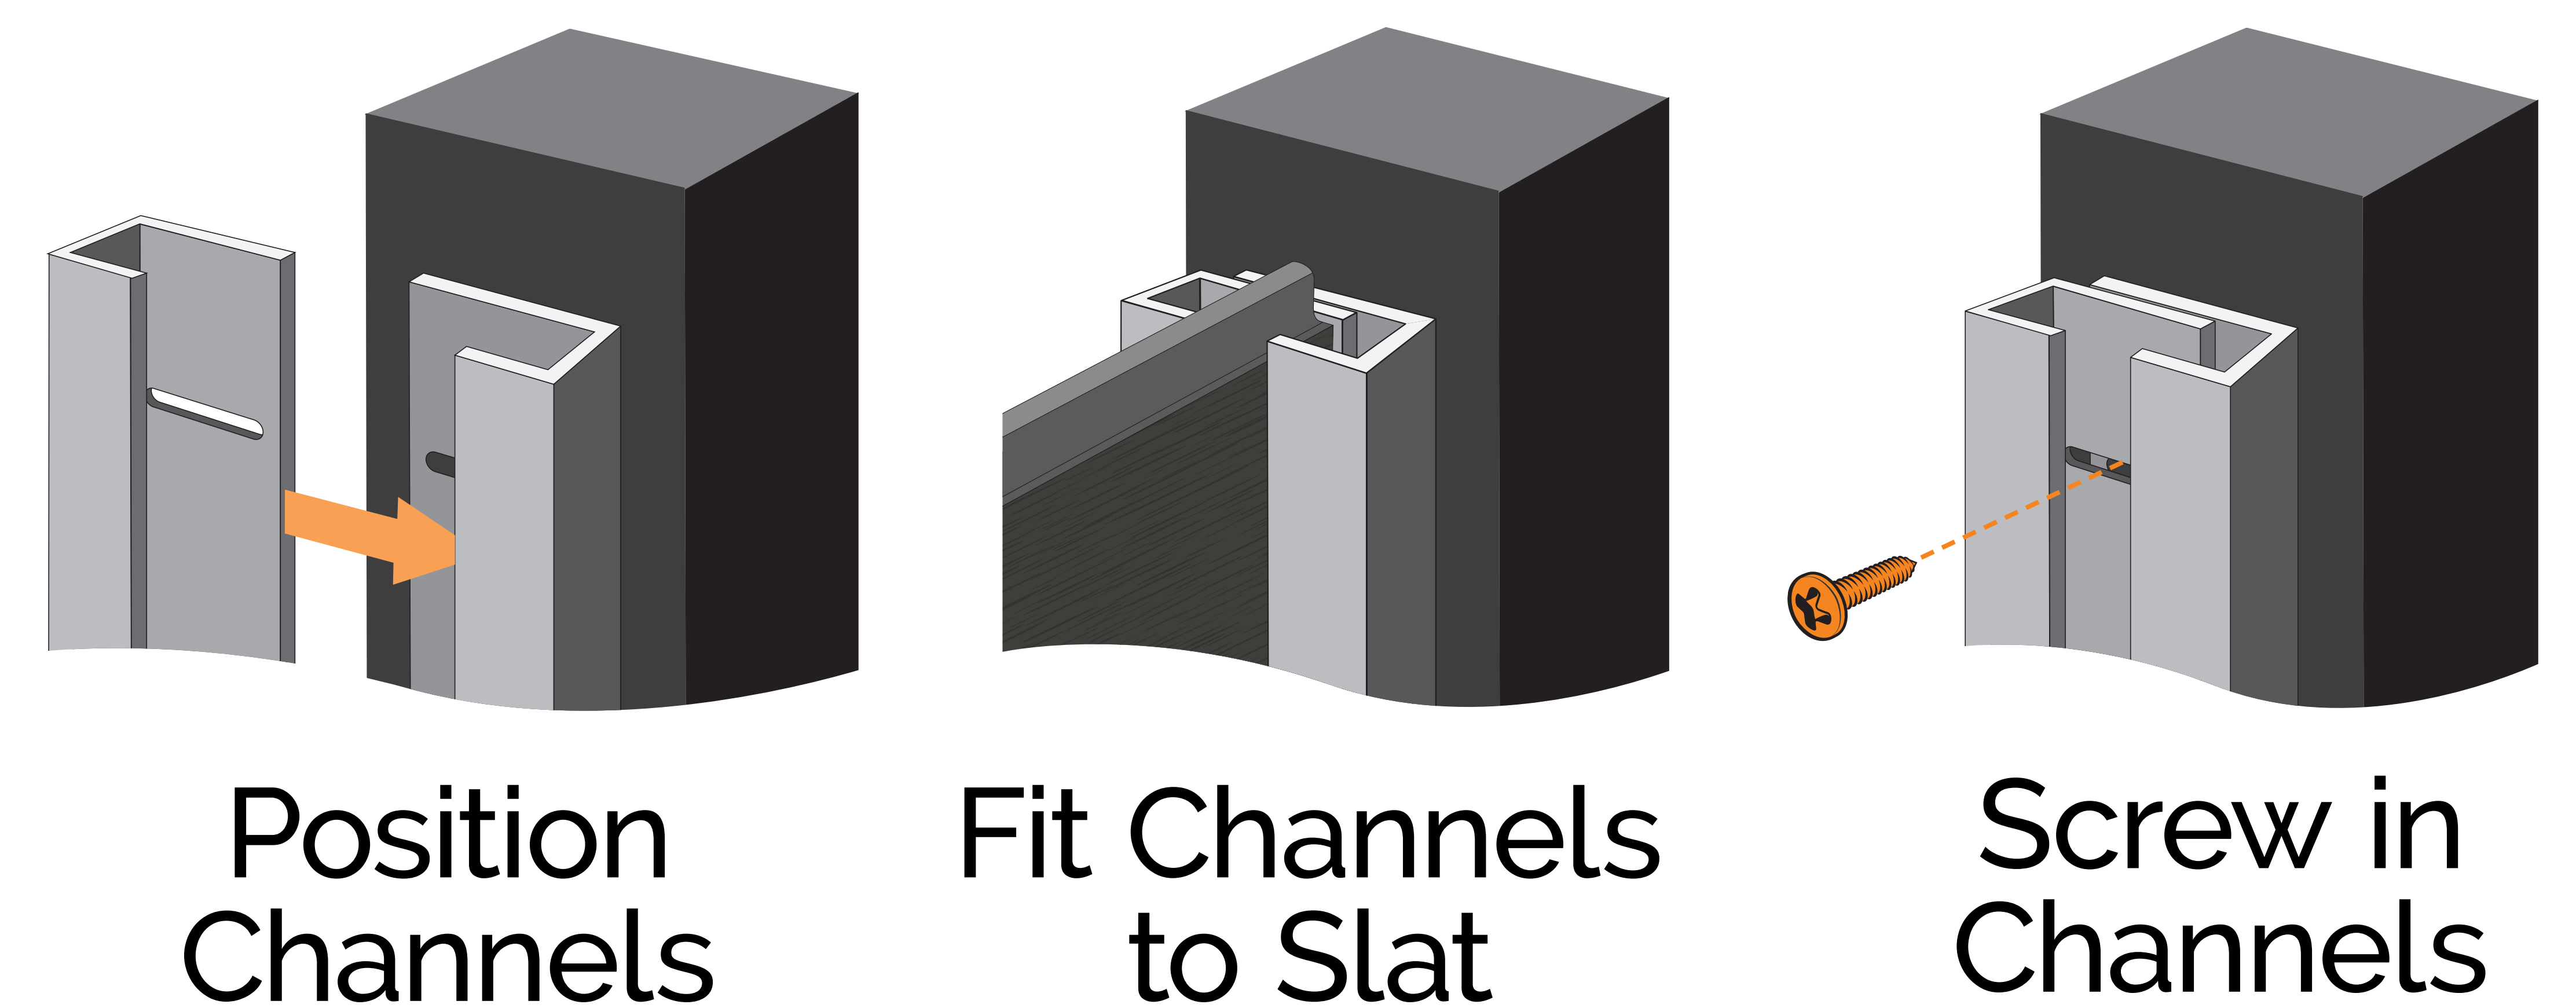

**8 T&G Slats* +
1 Topper Slat**