


Each piece of coordinating Smartcore®PRO molding is 94" long and composed of a waterproof core wrapped in vinyl. The molding can be cut to desired length using a fine-toothed finishing saw blade.

When installing, we recommend using Loctite PL 3X Premium Construction Adhesive (or equivalent). Scuff the underside of the part to receive adhesive with sandpaper and apply in "S" pattern. Use weight to apply pressure until fully cured (usually

48 hours). An alternative method is to use double-sided molding tape such as Hilway Direct Molding Tape. If you choose to use nails (not recommended), carefully pre-drill pilot holes for the nails.


T-MOLDING

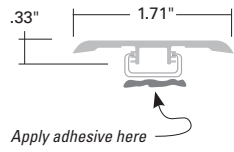

This t-shaped transition piece covers the narrow gap in a doorway between two adjacent floors that are on the same level.

Cut T-molding and Track to same desired length. Secure Track to floor with glue or molding tape, and press or tap T-molding into Track to desired depth using rubber mallet.


MULTI REDUCER

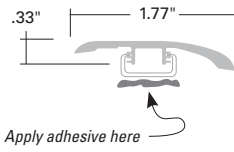

This is used to transition from a higher-profile (or thickness) floor to a lower-profile floor.

Cut Reducer and Track to same desired length. Secure Track to floor with glue or molding tape, and press or tap Reducer into Track to desired depth using rubber mallet.


STAIR CAP

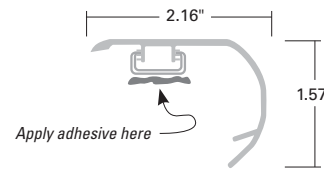

Used when installing Smartcore® PRO on stairs, providing the finishing touch to the front stair edge.

Cut Stair Cap and Track to same desired length. Secure Track to floor with glue or molding tape, and press or tap Stair Cap into Track to desired depth using rubber mallet.


BABY THRESHOLD

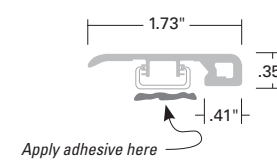

Used to transition from hard surface floors to floors of a different height level or thickness.

Cut Threshold and Track to same desired length. Secure Track to floor with glue or molding tape, and press or tap Threshold into Track to desired depth using rubber mallet.

QUARTER ROUND

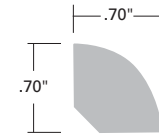

Used to create finishing touch between floor and baseboards.

Measure and cut to fit. Affix molding using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

Product Item #	Description	T-Mold SOE Item #	T-Mold SOS Item #	T-Mold Model #	Reducer SOE Item #	Reducer SOS Item #	Reducer Model #	Staircap SOE Item #	Staircap SOS Item #	Staircap Model #	Threshold SOS Item #	Threshold Model #	Qtr round SOS Item #	Qtr round Model #
1035292	Burbank Oak	1056468	N/A	LXTMD00252	1056474	N/A	LXMPR00252	1056480	N/A	LXSTN00252	1056492	LXBTH00252	1056486	LXQTR00252
1035293	Claremont Oak	1056469	N/A	LXTMD07031	1056475	N/A	LXMPR07031	1056481	N/A	LXSTN07031	1056493	LXBTH07031	1056487	LXQTR07031
1035294	Glendale Pine	1056470	N/A	LXTMD07044	1056476	N/A	LXMPR07044	1056482	N/A	LXSTN07044	1056494	LXBTH07044	1056488	LXQTR07044
1035295	Sugar Valley Maple	1056471	N/A	LXTMD00245	1056477	N/A	LXMPR00245	1056483	N/A	LXSTN00245	1056495	LXBTH00245	1056489	LXQTR00245
1035296	Gardena Marble	1056472	N/A	LXTMD00193	1056478	N/A	LXMPR00193	1056484	N/A	LXSTN00193	1056496	LXBTH00193	1056490	LXQTR00193
1035297	Ashland Gray	1056473	N/A	LXTMD05046	1056479	N/A	LXMPR05046	1056485	N/A	LXSTN05046	1056497	LXBTH05046	1056491	LXQTR05046
1035286	Jackson White Oak	N/A	1056498	LXTMD00186	N/A	1056504	LXMPR00186	N/A	1056510	LXSTN00186	1056522	LXBTH00186	1056516	LXQTR00186
1035287	Springfield Mix	N/A	1056499	LXTMD00263	N/A	1056505	LXMPR00263	N/A	1056511	LXSTN00263	1056523	LXBTH00263	1056517	LXQTR00263
1035288	Covington Oak	N/A	1056500	LXTMD05038	N/A	1056506	LXMPR05038	N/A	1056512	LXSTN05038	1056524	LXBTH05038	1056518	LXQTR05038
1035289	Paramount	N/A	1056501	LXTMD00199	N/A	1056507	LXMPR00199	N/A	1056513	LXSTN00199	1056525	LXBTH00199	1056519	LXQTR00199
1035290	Twilight	N/A	1056502	LXTMD00908	N/A	1056508	LXMPR00908	N/A	1056514	LXSTN00908	1056526	LXBTH00908	1056520	LXQTR00908
1035291	Riverside Granite	N/A	1056503	LXTMD05059	N/A	1056509	LXMPR05059	N/A	1056515	LXSTN05059	1056527	LXBTH05059	1056521	LXQTR05059