
### **ASSEMBLY INSTRUCTIONS**




- Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.


If you need further assistance, please contact us by Email: **customersupport@superiordecorinc.com** 

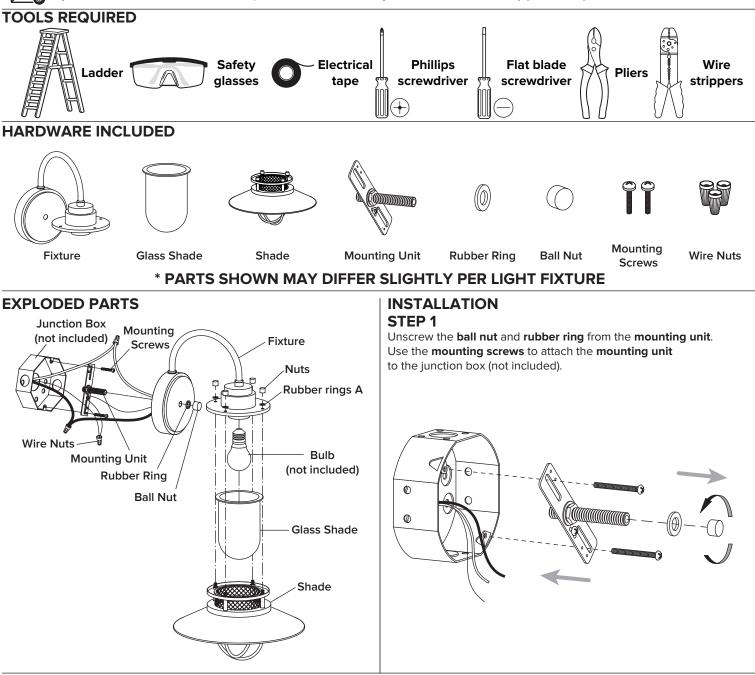

#### STEP 2

Make the electrical connection from the junction box (not included) to the **fixture**. Connect the ground wire to the **mounting unit** using the preinstalled green ground screw. Next, connect the live wire, neutral wire and ground wires with the supplied **wire nuts**. Secure with electrical tape.

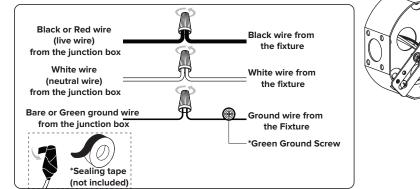


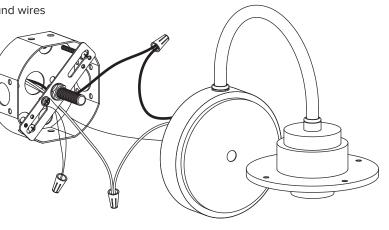


## STEP 3

Attach the **fixture** to the **mounting unit** through screw holes as shown, and secure it with **rubber ring** and **ball nut**.

NOTICE: Please use caulk in the back plate and wall mounting surface to prevent water from entering.

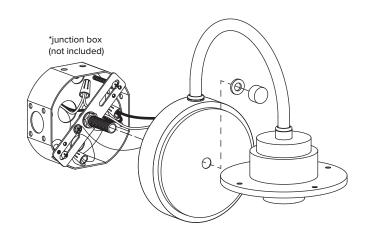


# STEP 4

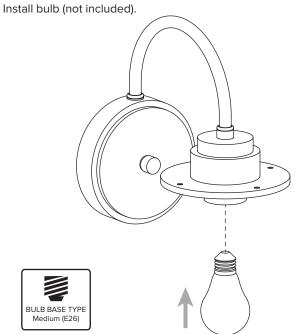

### STEP 5

Remove the **rubber rings A** and **nuts** from the **shade**.

\* Rubber rings must be removed or may cause water leaking!

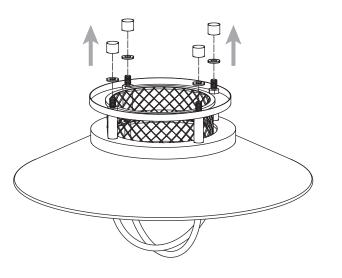

## STEP 6

Attach the **shade** and **Glass Shade** to the **fixture** through screw holes as shown, and secure it with **rubber rings A** and **nuts**.

