


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.

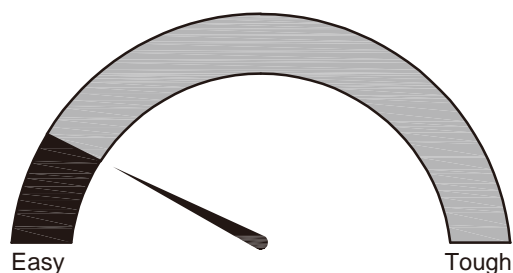

Assembly Difficulty Meter

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1 - 2
ESTIMATED ASSEMBLY TIME: 1 HOUR

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.



Before You Start

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Hammer
- Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.




<div>1</div> <div></div>	<div>2</div> <div></div>	<div>3</div> <div></div>	<div>4</div> <div></div>										
<div>5</div> <div></div>	<div>6</div> <div></div>	<div>7</div> <div></div> <div>2 PCS</div>	<div>8</div> <div></div> <div>2 PCS</div>										
<div>9</div> <div></div> <div>2 PCS</div>	<div>10</div> <div></div> <div>2 PCS</div>	<div>11</div> <div></div> <div>2 PCS</div>	<div>12</div> <div></div> <div>4 PCS</div>										
<div>13</div> <div></div> <div>12" 45W 2 SET</div>		<table><tr><td>A M5*45 16 PCS+1</td><td>B Ø15*10 16 PCS+1</td></tr><tr><td>C M5*40 12 PCS+1</td><td>D M3.5*12 16 PCS+2</td></tr><tr><td>E Ø8*40 12 PCS+1</td><td>F M4*18 2 PCS</td></tr><tr><td>G 2 PCS</td><td>H 4 PCS+1</td></tr><tr><td>I M3.5*14 20 PCS+2</td><td> 1 PCS</td></tr></table>		A M5*45 16 PCS+1	B Ø15*10 16 PCS+1	C M5*40 12 PCS+1	D M3.5*12 16 PCS+2	E Ø8*40 12 PCS+1	F M4*18 2 PCS	G 2 PCS	H 4 PCS+1	I M3.5*14 20 PCS+2	 1 PCS
A M5*45 16 PCS+1	B Ø15*10 16 PCS+1												
C M5*40 12 PCS+1	D M3.5*12 16 PCS+2												
E Ø8*40 12 PCS+1	F M4*18 2 PCS												
G 2 PCS	H 4 PCS+1												
I M3.5*14 20 PCS+2	 1 PCS												
<div></div>													

1

D M3.5*12




8 PCS

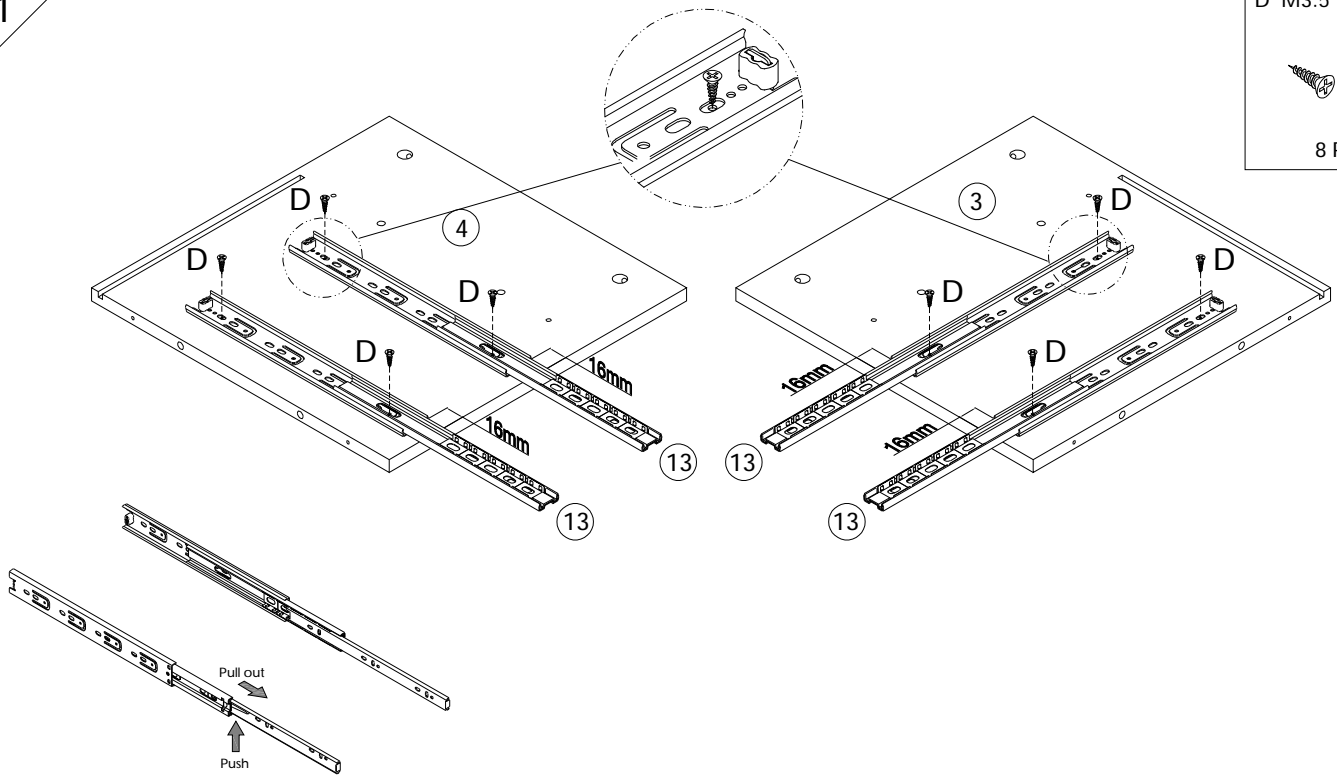


Disconnect the keyboard rail with the BLACK PLASTIC PART. It needs to be pulled down to disconnect the runners.

2

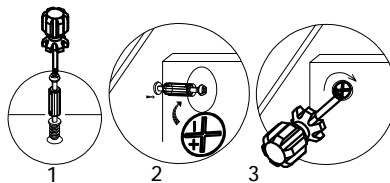


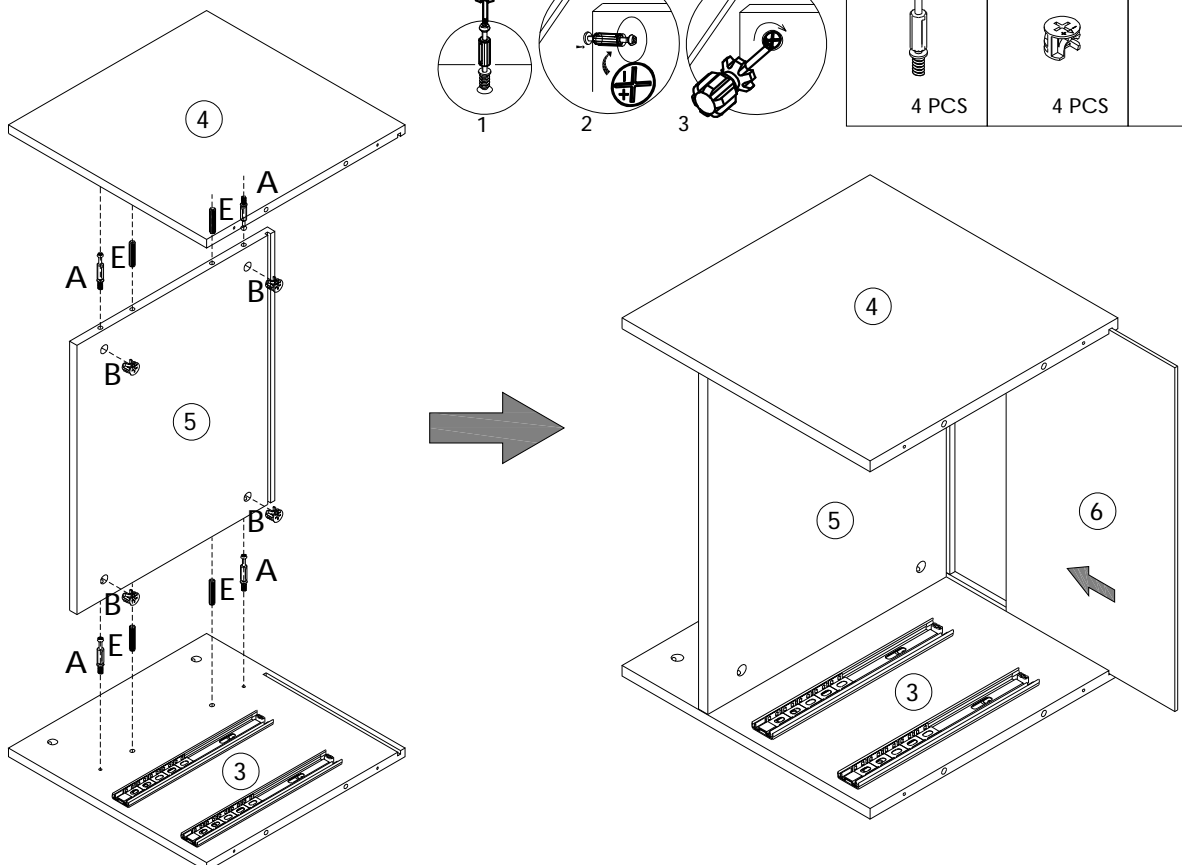

A M5*45	B Ø15*10	E Ø8*40
4 PCS	4 PCS	4 PCS



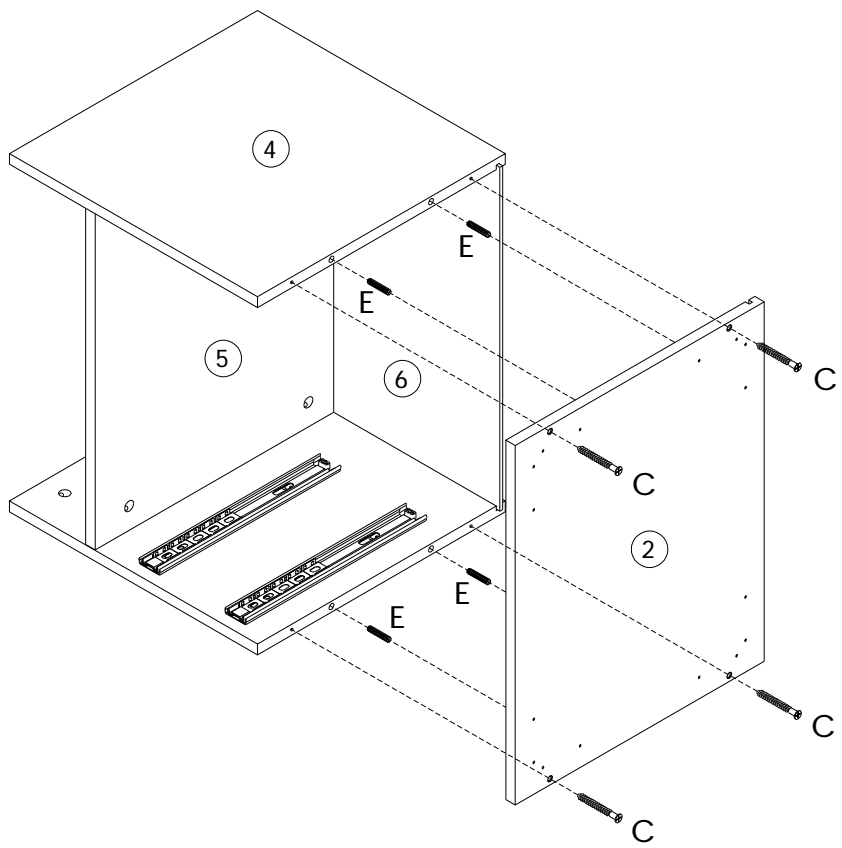



3




C	M5*40	E	Ø8*40
			
4 PCS		4 PCS	

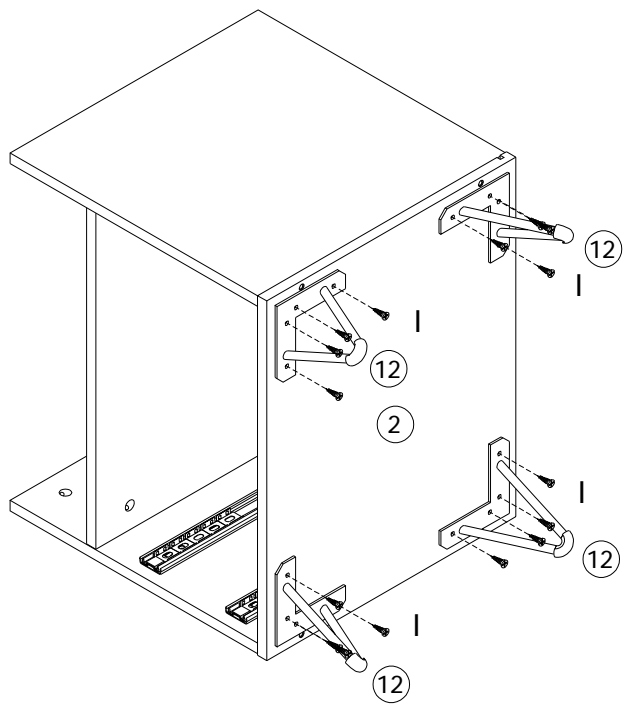


4




I	M3.5*14
	
16 PCS	

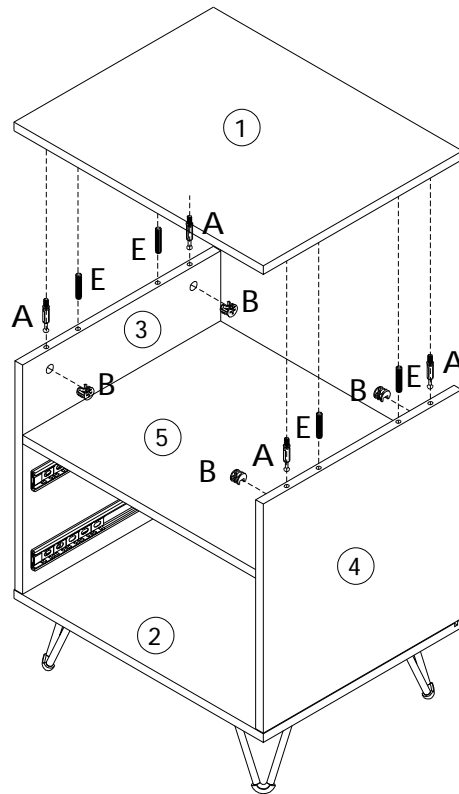
5




A	M5*45	B	Ø15*10	E	Ø8*40
					
4 PCS		4 PCS		4 PCS	

6

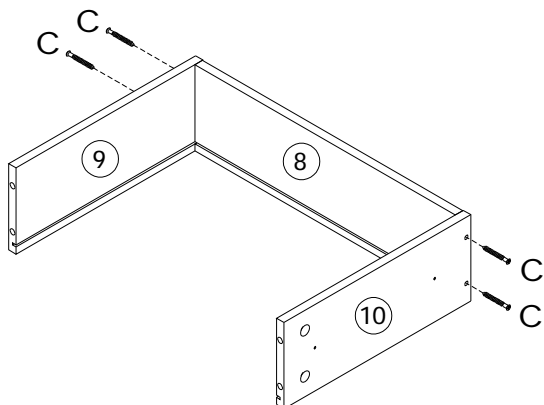


C	M5*40
	
8 PCS	

7

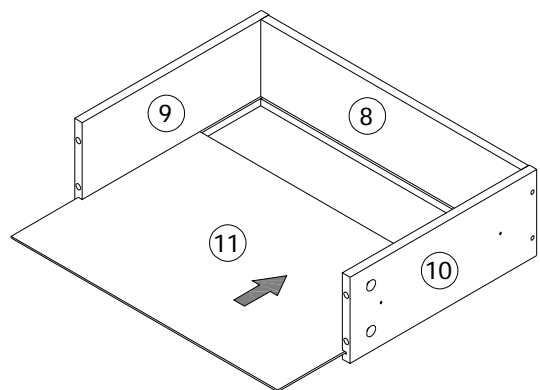






x2

x2




8


A M5*45	B Ø15*10	F M4*18	G
			
8 PCS	8 PCS	2 PCS	2 PCS

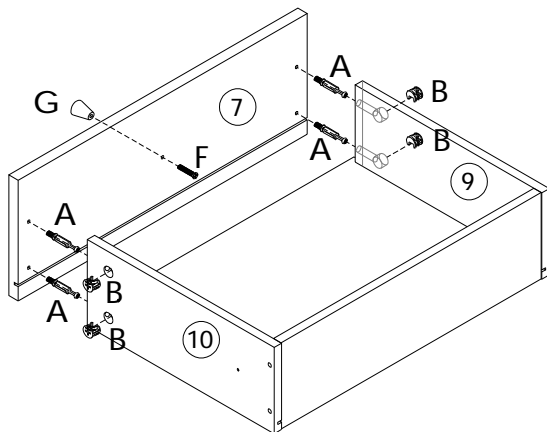

x2


9

D M3.5*12

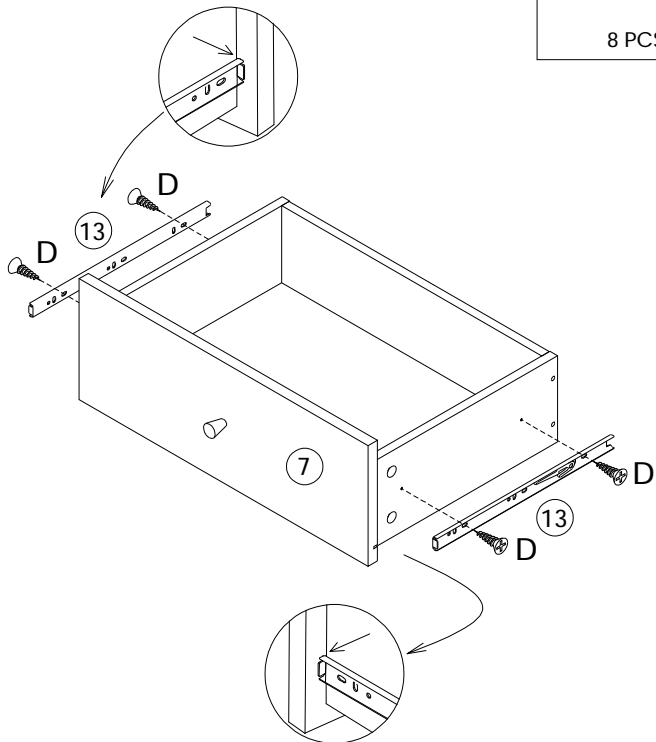8 PCS





x2

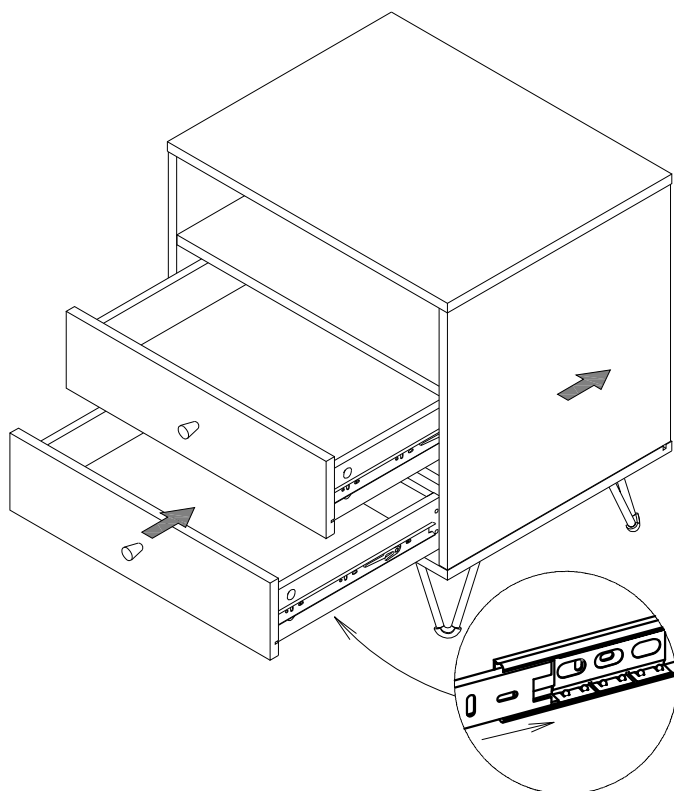10



11

I M3.5*14	H
	
4 PCS	4 PCS

