


ROLL-OUT TRASH BIN

Installation guide

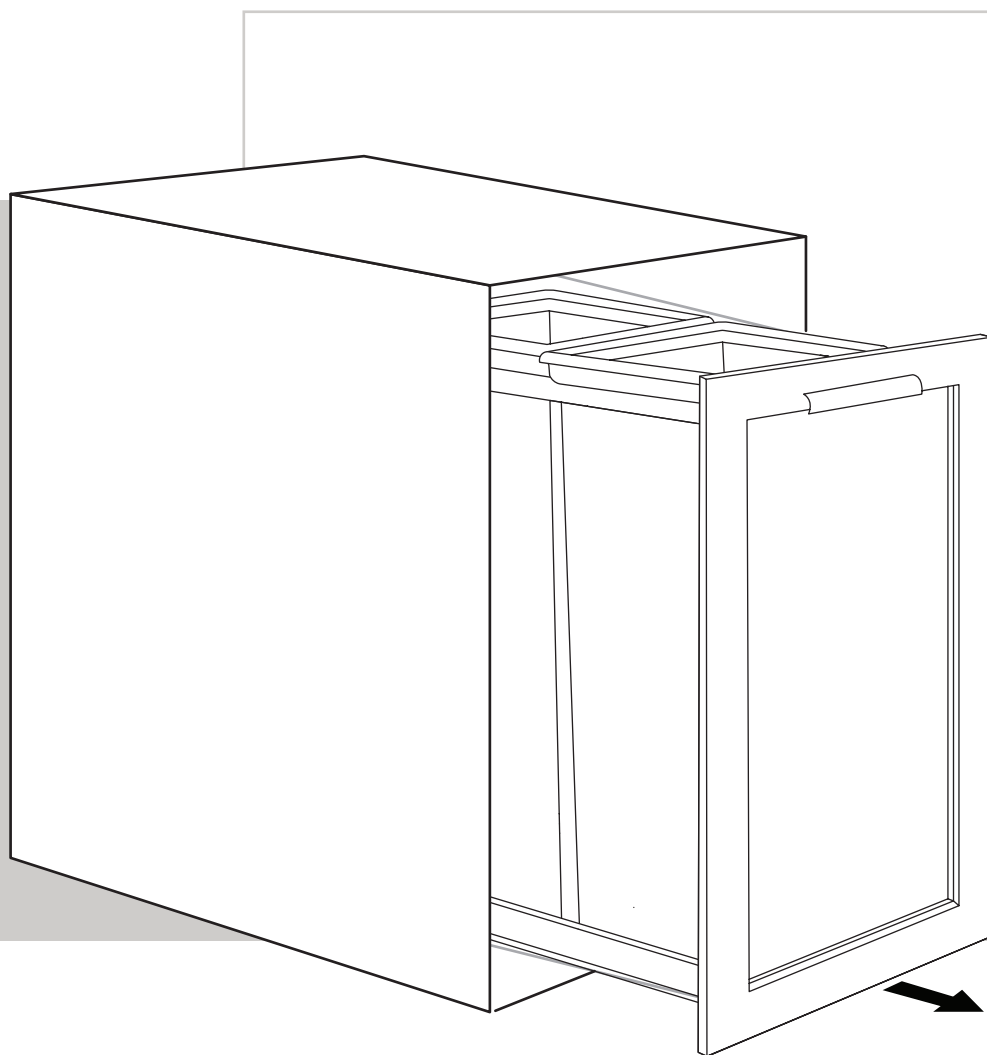

Model # 315-02-SS



CONTENTS

1.

BEFORE YOU BEGIN

| | |
|----------------------|---|
| INTRODUCTION | 4 |
| KIT CONTENTS..... | 5 |
| REQUIRED TOOLS | 5 |

2.

INSTALLATION: PULL-OUT CABINET DOOR STYLE

| | |
|--|----|
| REMOVE BIN HOLDER FROM ROLL-OUT BASE | 6 |
| ATTACH BASE TO CABINET | 7 |
| ATTACH BIN HOLDER TO BASE | 8 |
| PREPARE DOOR PANEL | 9 |
| ATTACH DOOR PANEL | 10 |
| INSERT BINS..... | 11 |

3.

INSTALLATION: HINGED CABINET DOOR STYLE

| | |
|--|----|
| REMOVE BIN HOLDER FROM ROLL-OUT BASE | 13 |
| ATTACH BASE TO CABINET | 14 |
| ATTACH BIN HOLDER TO BASE | 15 |
| INSERT BINS..... | 16 |




cs@adirhome.com



+1 866-676-6221


INTRODUCTION

The AdirHome Roll-Out Trash/Recycling Bin is designed to be used in a cabinet with either a hinged door or by mounting the door onto the mechanism.

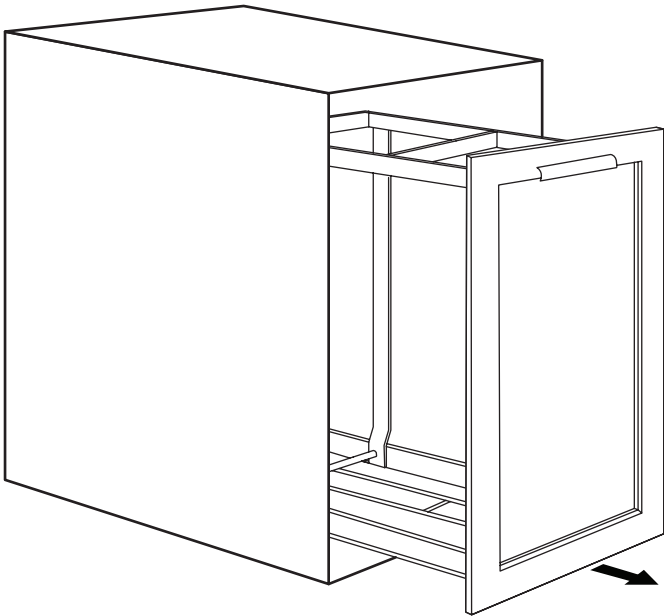

Pull-Out Cabinet Door

For a built-in look, attach a cabinet door panel to the front of your roll-out unit. This works great with narrow cabinets.

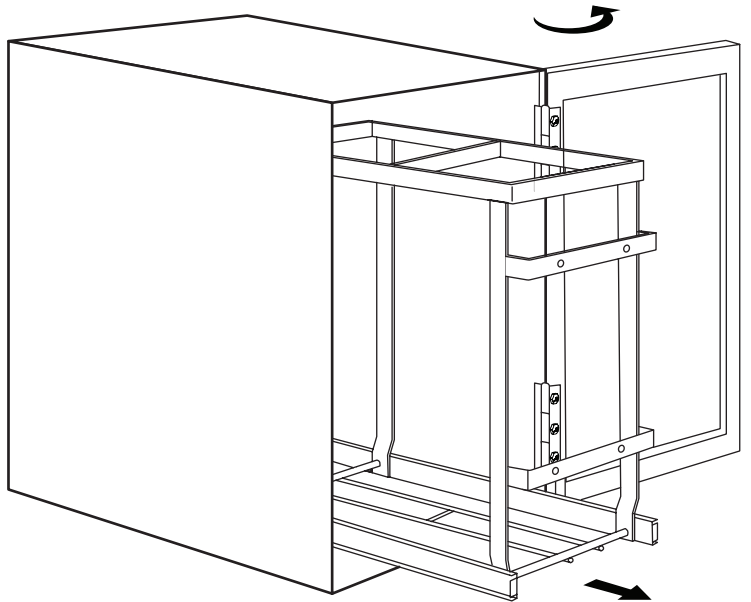

Hinged Cabinet Door

Install your roll-out system behind closed doors. This style is best for wide or double-door cabinets.




BEFORE YOU BEGIN

MINIMUM CABINET SIZE: 10" wide x 19.5" high x 20.5" deep. Before you begin, measure your cabinet to ensure your AdirHome Roll-Out Trash/Recycling Bin will fit!


PERSONS REQUIRED: 1 - 2. Assembly can be completed by 1 person. 2 people are recommended if you are mounting a cabinet door to your roll-out assembly.

KIT CONTENTS:

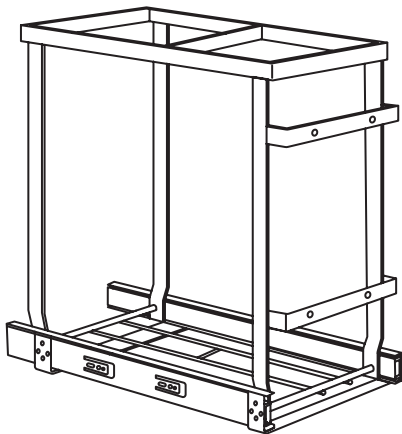


Roll-out Assembly (x1)

1x roll-out assembly mechanism.

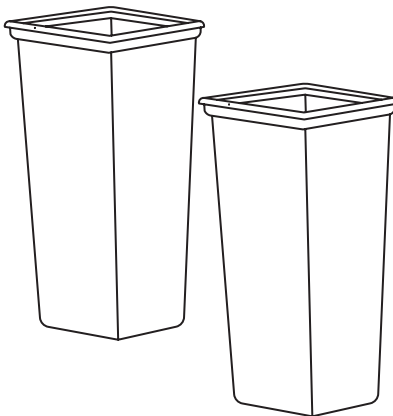

Heavy Duty Bins (x2)

2x heavy duty washable plastic trash/recycling bins.

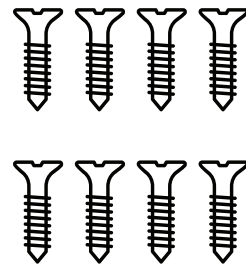


Phillips Screws (x8)


8x 5x20mm Phillips screws.

REQUIRED TOOLS:


Not included



Phillips Screwdriver

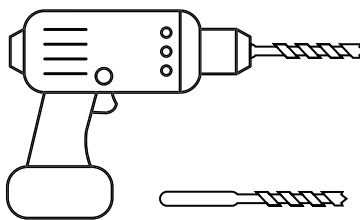

Drill + Drill Bit

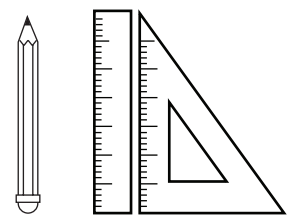

Pencil + Ruler



cs@adirhome.com



+1 866-676-6221

INSTRUCTIONS


Pull-Out Cabinet Door Style

! Before you begin

Ensure that the door panel is thick enough to accommodate the mounting screws for the slide-out bin holder. We recommend the thickness exceed at least 1/4" beyond the length of the screw shaft to avoid the screws penetrating the door panel.

1. Remove bin holder from roll-out base

Disassemble the roll-out bin holder and base by releasing the locking levers as shown.

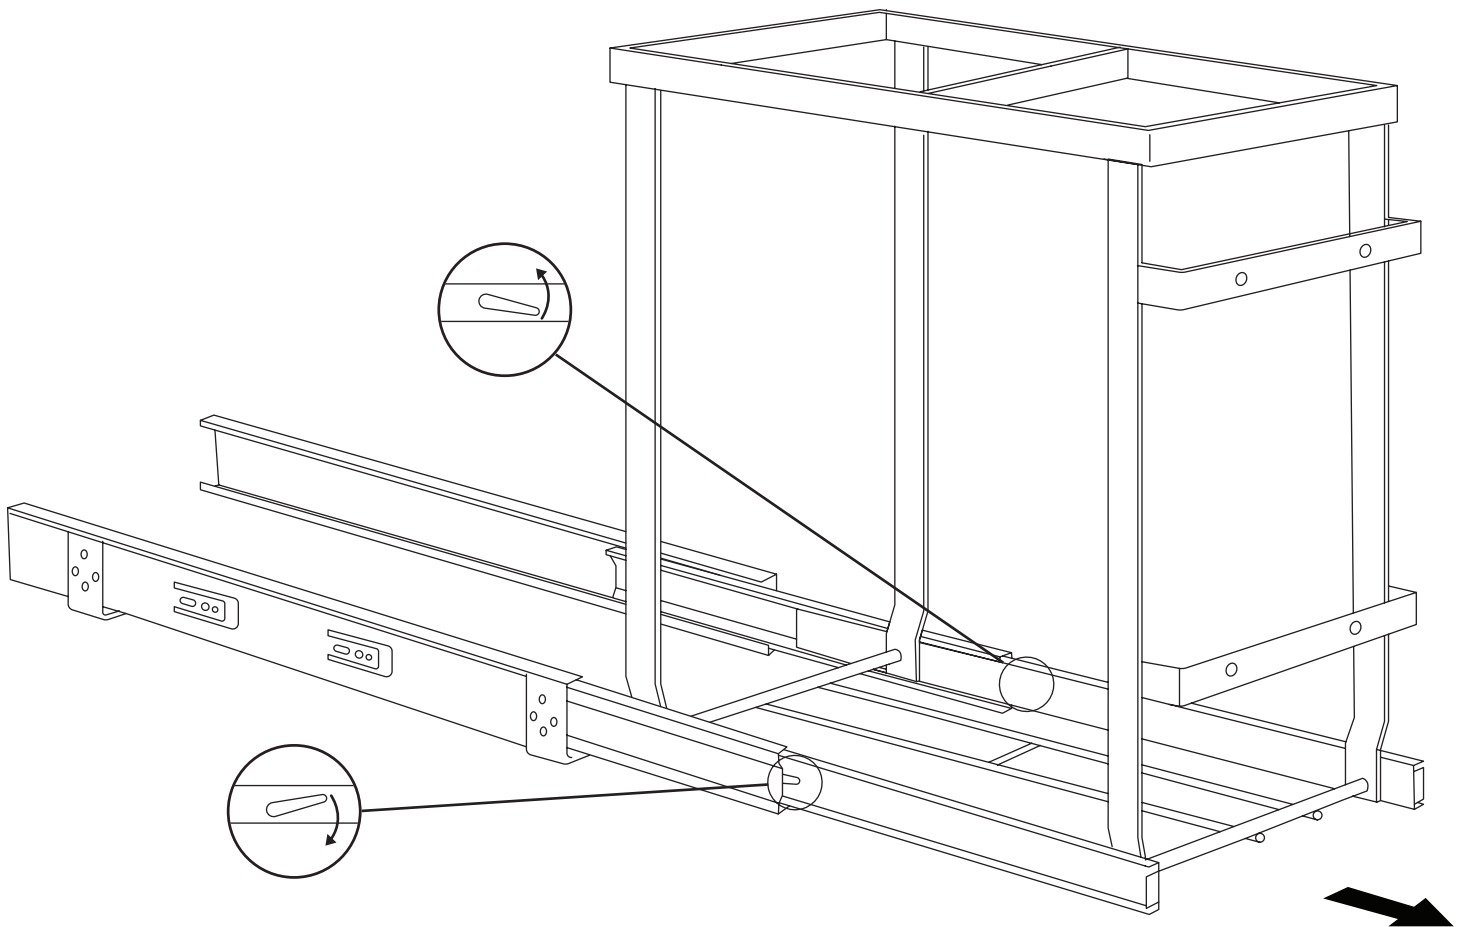


INSTRUCTIONS

Pull-Out Cabinet Door Style

2. Attach base to cabinet

- Place the base in the center of the cabinet floor 2" from the front of the cabinet as shown.
- With a pencil, mark the location of the 4 mounting holes.
- Remove the base and drill starting holes for the 4 Phillips screws. Do not drill deep.
- Attach the base to the cabinet floor using a Phillips screwdriver.

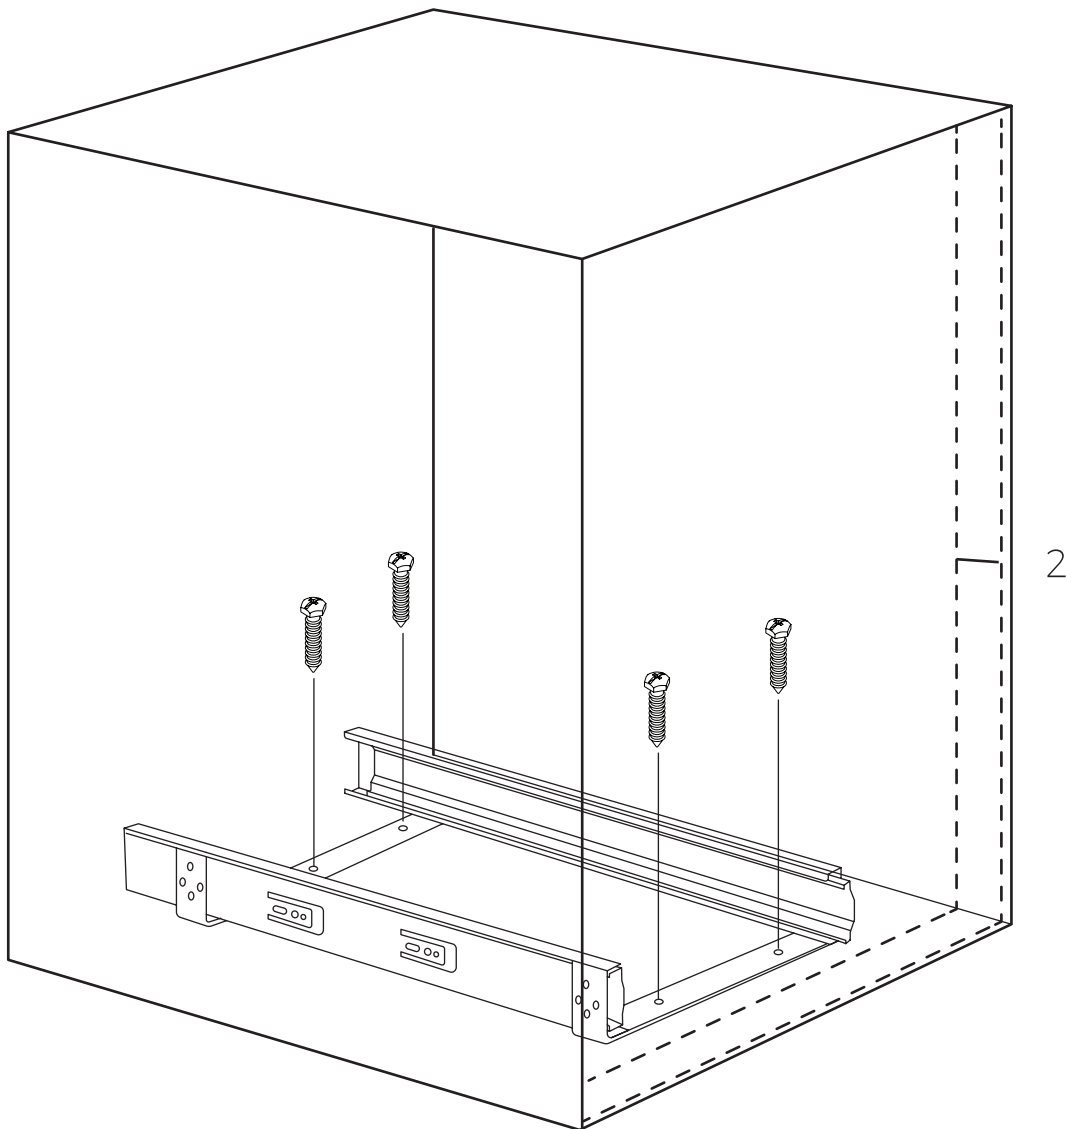


INSTRUCTIONS

Pull-Out Cabinet Door Style

3. Attach bin holder to base

- Carefully 'thread' the roll-out bin holder from Step 1 into the rail slots on the base, as shown.
- Push it in to set the locking levers.

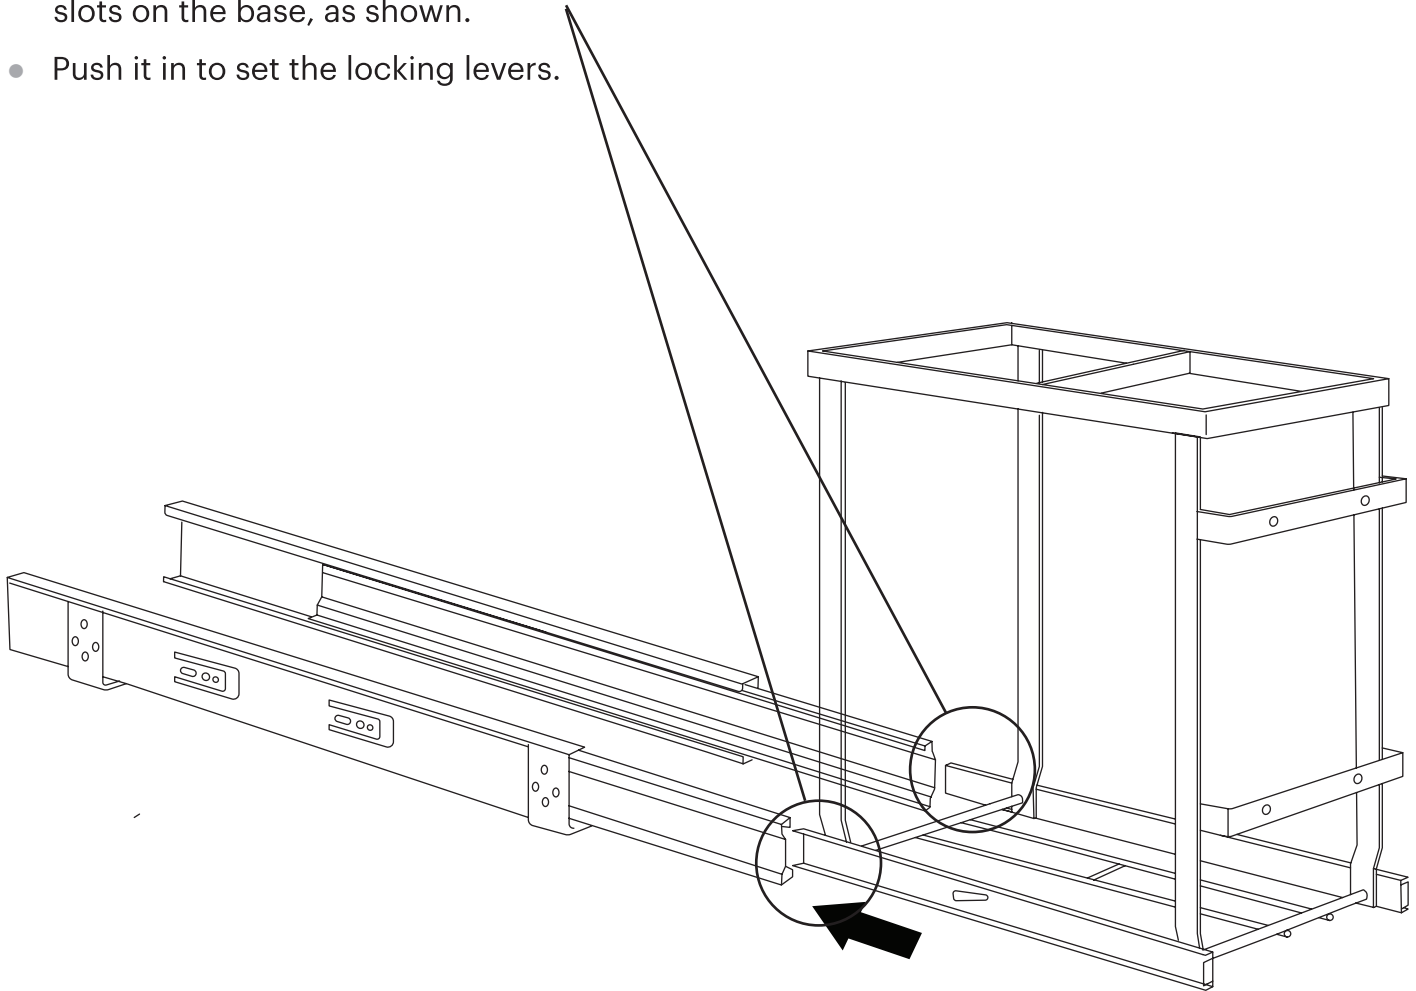


INSTRUCTIONS

Pull-Out Cabinet Door Style

4. Prepare door panel

- Lay the pull-out cabinet door face down on a flat, firm surface such as a worktable. Be sure to protect the front of the door with padding.
- Using a ruler, draw a pencil line 5 inches up from the bottom of the door panel.
- Following the measurements illustrated, draw a rectangle on the inside of the door panel.
- Double check the location of the holes as compared to the roll-out base and how the door lines up on your cabinet. Adjust as needed.
- At the 4 corners shown, drill starting holes for the 4 mounting screws. **Do not drill too deep** to avoid penetrating the front panel.

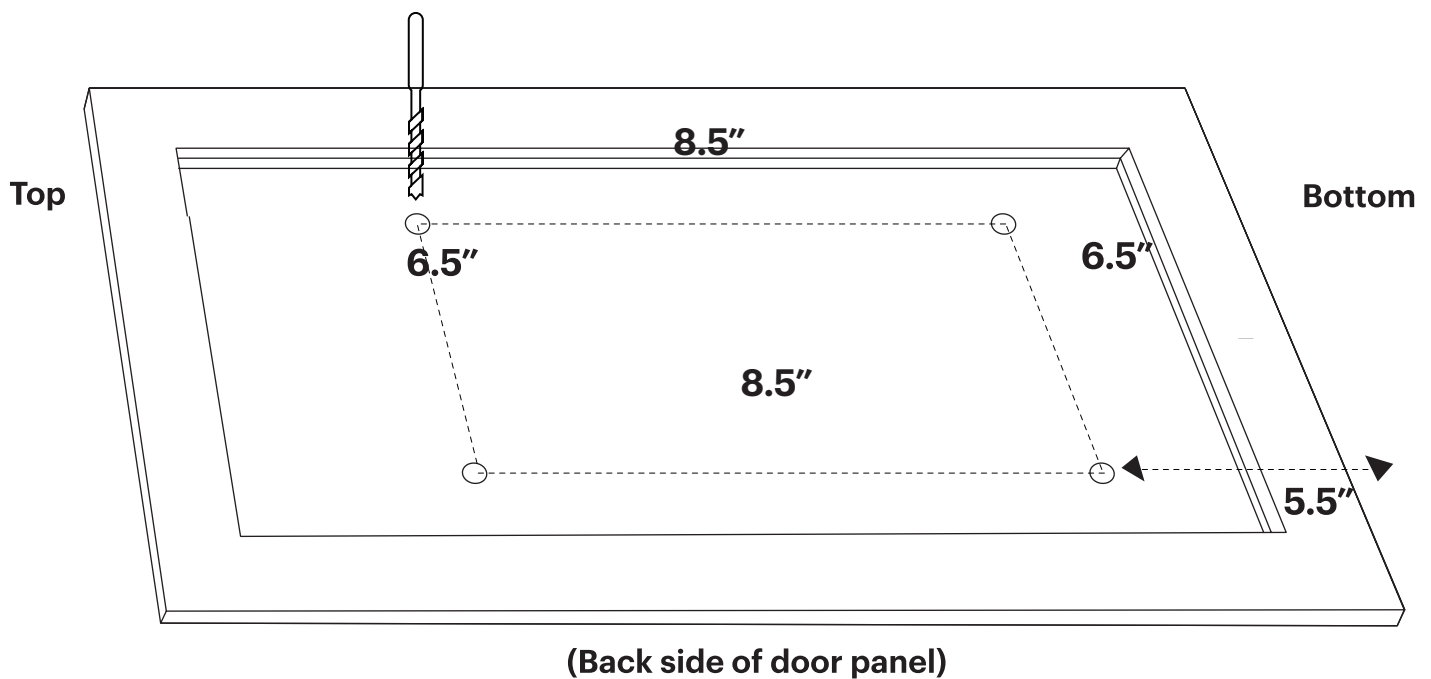


INSTRUCTIONS

Pull-Out Cabinet Door Style

5 Attach door panel

- Attach the bin holder to the door using a Phillips screwdriver and the four mounting screws as shown.
- A second person can assist by holding the panel sturdy while you attach the mounting screws.
- You are now ready to insert the bins.

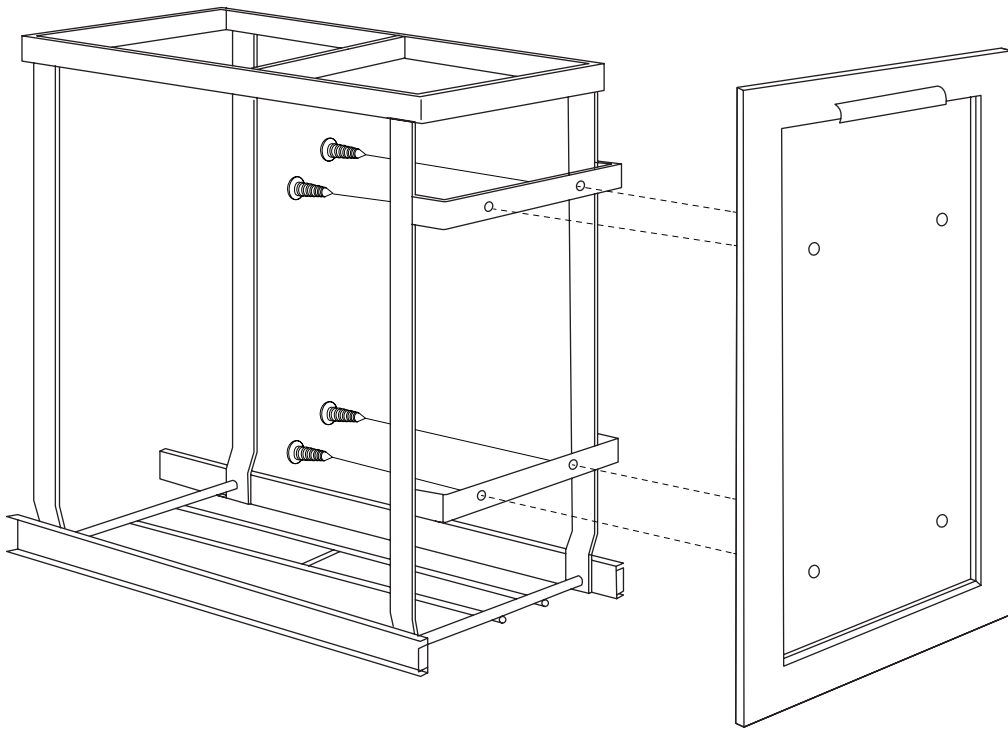


INSTRUCTIONS

Pull-Out Cabinet Door Style

6. Insert trash/recycle bins

Insert the bins by dropping them straight down into the mechanism as shown.

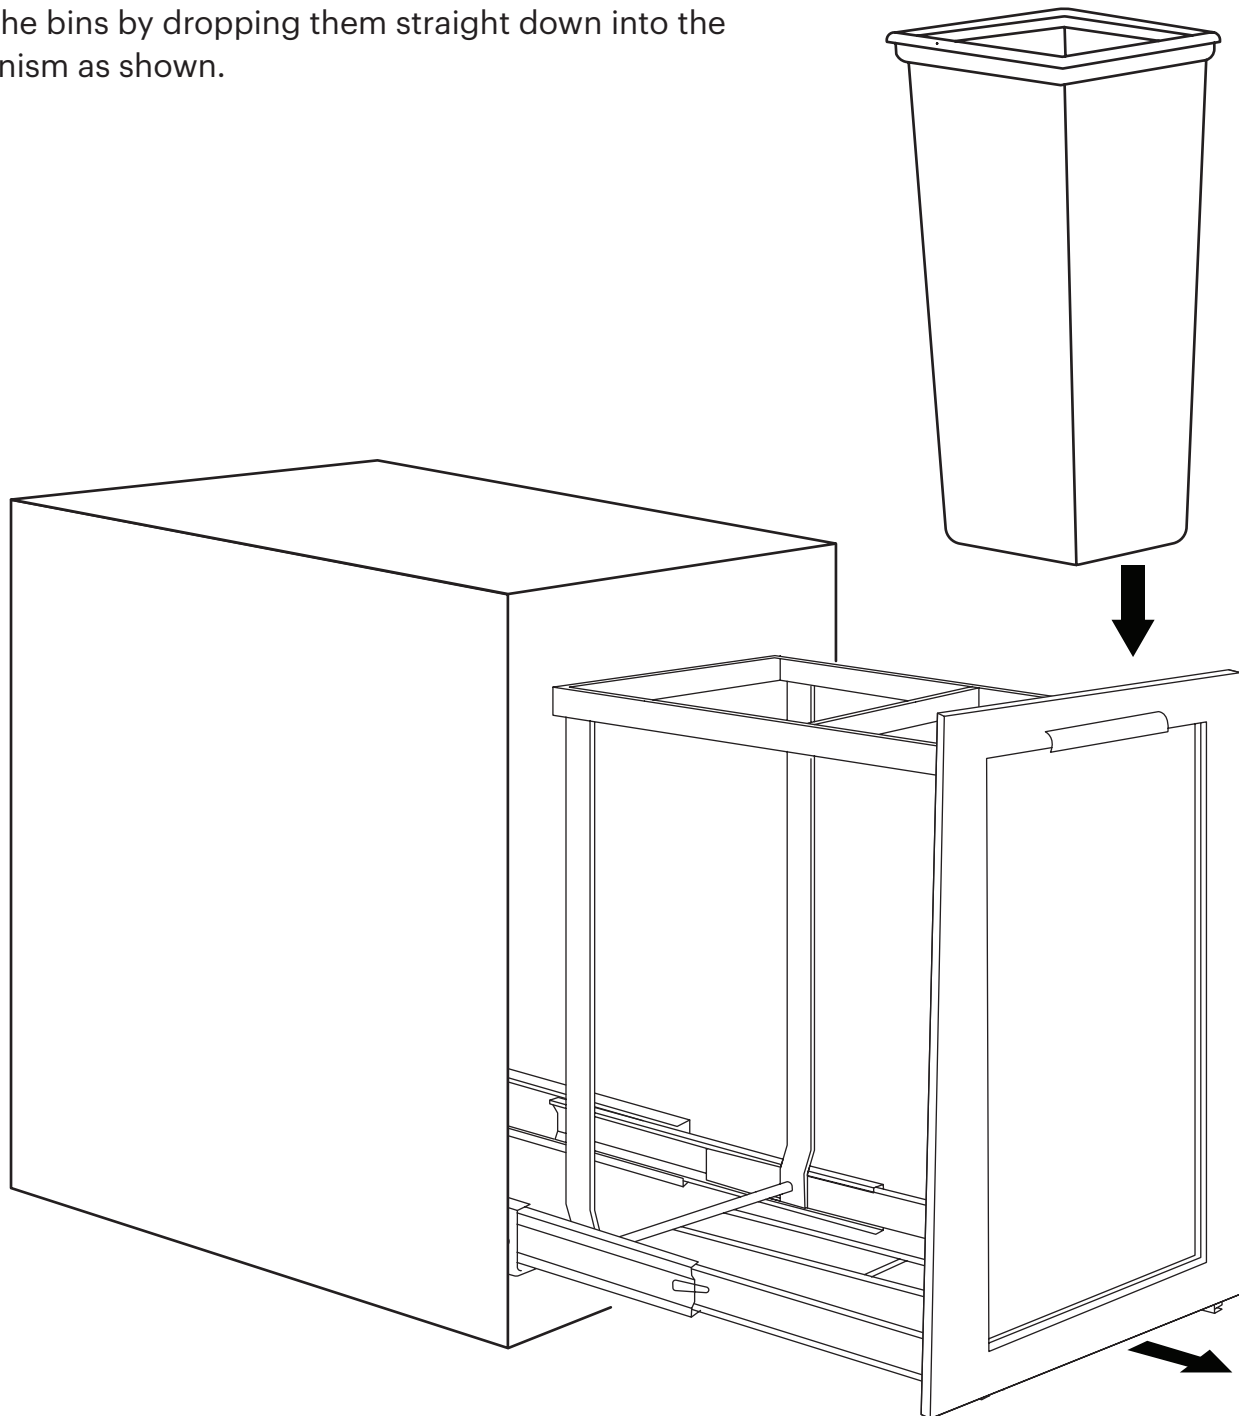


INSTRUCTIONS

Pull-Out Cabinet Door Style

Congratulations!

Your AdirHome Roll-Out Trash/Recycle Bin is ready to use.

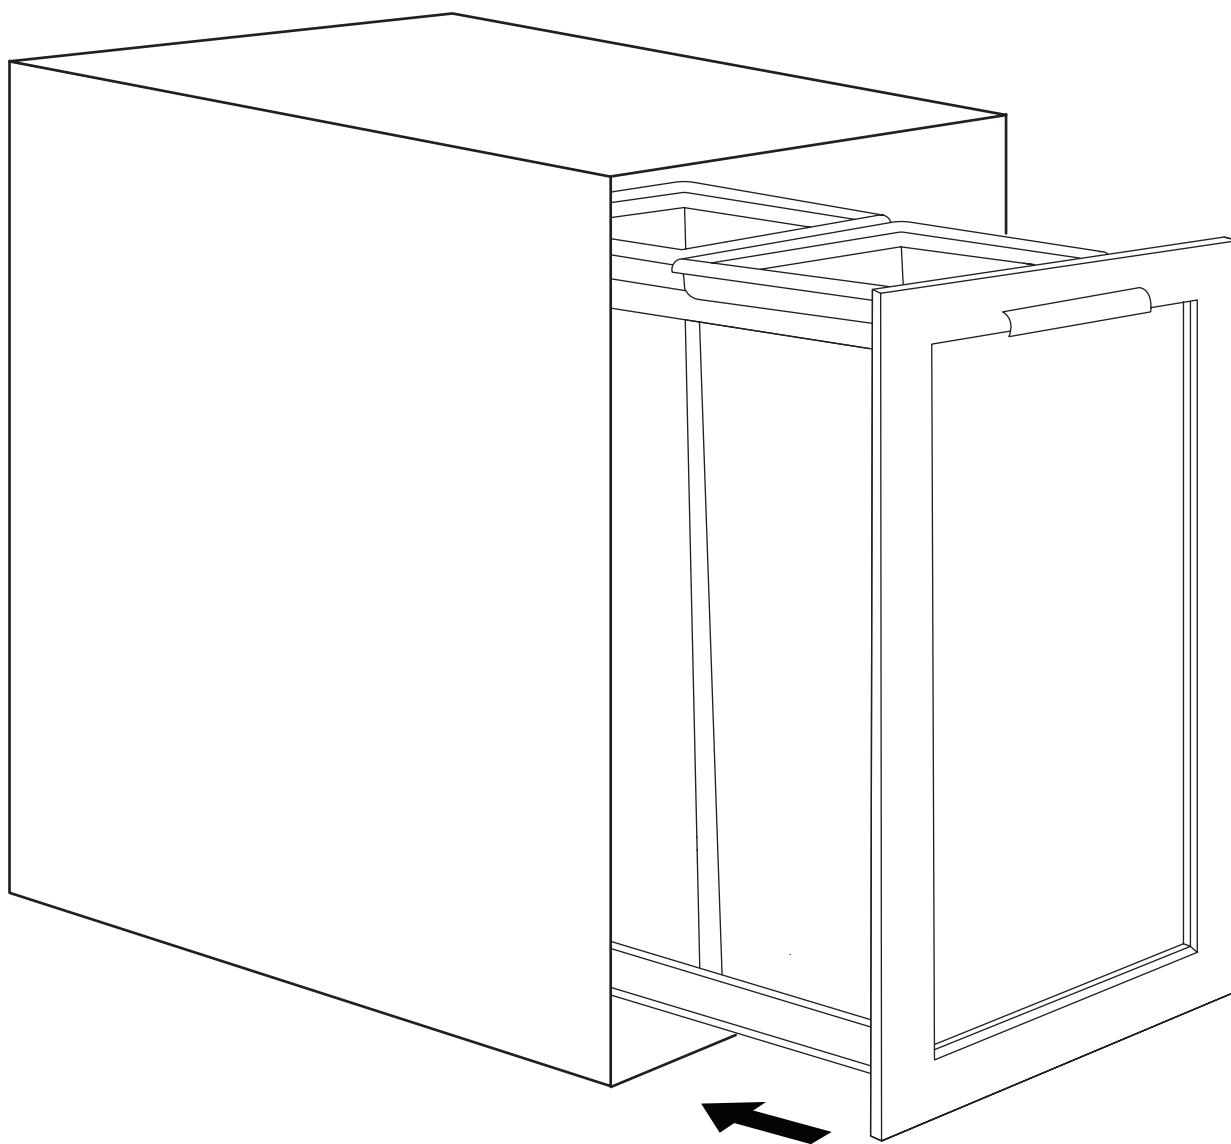

INSTRUCTIONS


Hinged Cabinet Door Style

! Before you begin

Ensure that your cabinet is large enough to fit the AdirHome Roll-Out Trash/Recycle Bin by placing the entire component plus bins in the cabinet before installation. **Minimum cabinet size** is 10" wide x 19.5" high x 20.5" deep.

1. Remove bin holder from roll-out base

Disassemble the roll-out bin holder and base by releasing the locking levers as shown.

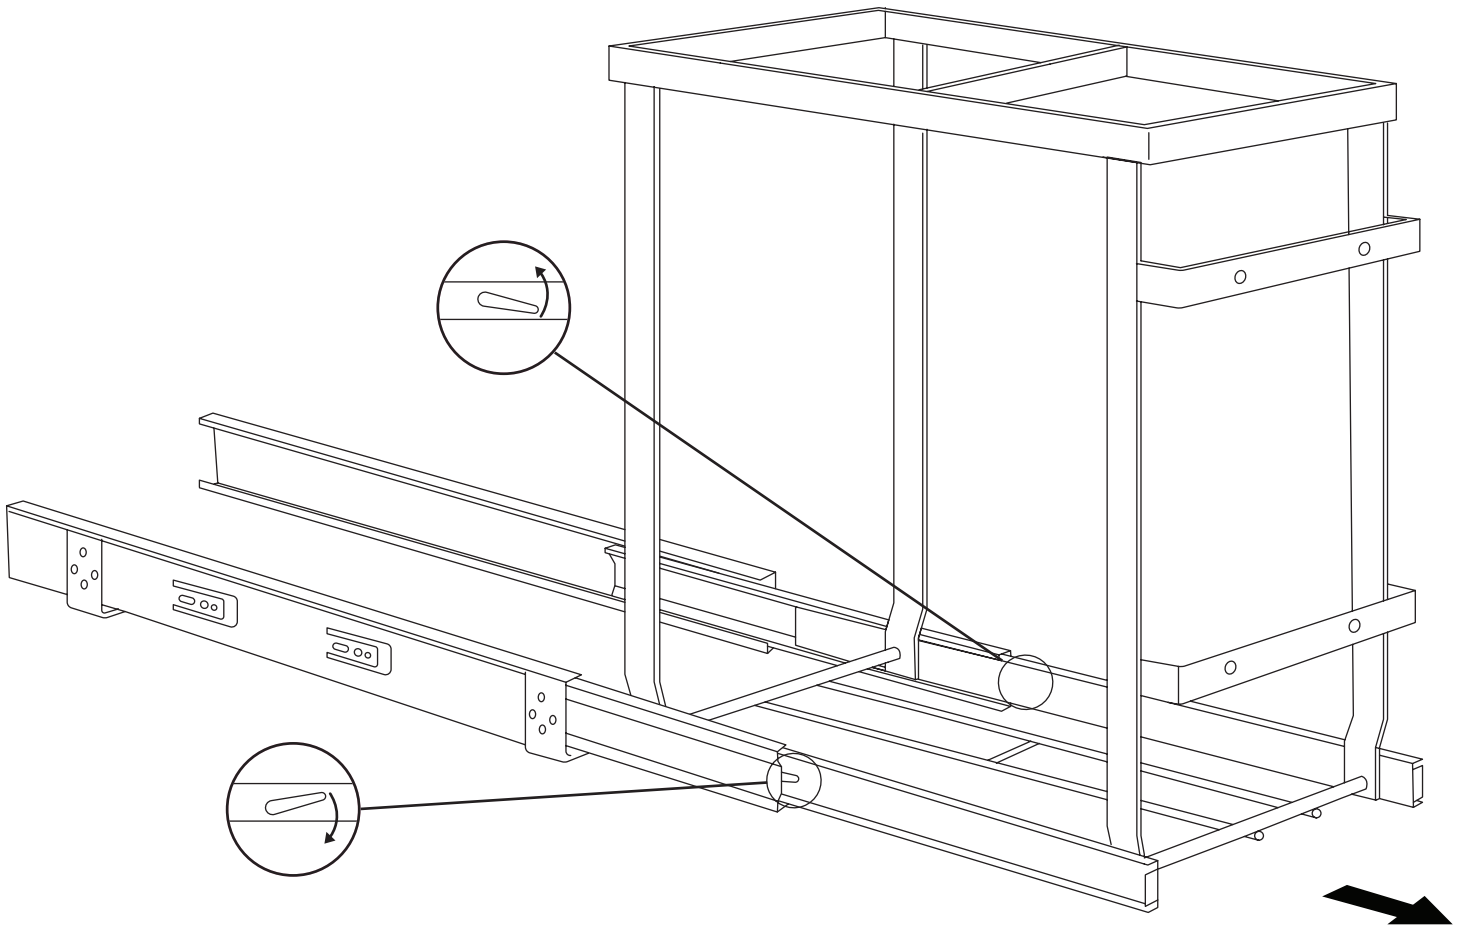


INSTRUCTIONS

Hinged Cabinet Door Style

2. Attach base to cabinet

- Place the base in the center of the cabinet floor 2" from the front of the cabinet as shown.
- With a pencil, mark the location of the 4 mounting holes.
- Remove the base and drill starting holes for the 4 Phillips screws. Do not drill deep.
- Attach the base to the cabinet floor using a Phillips screwdriver.

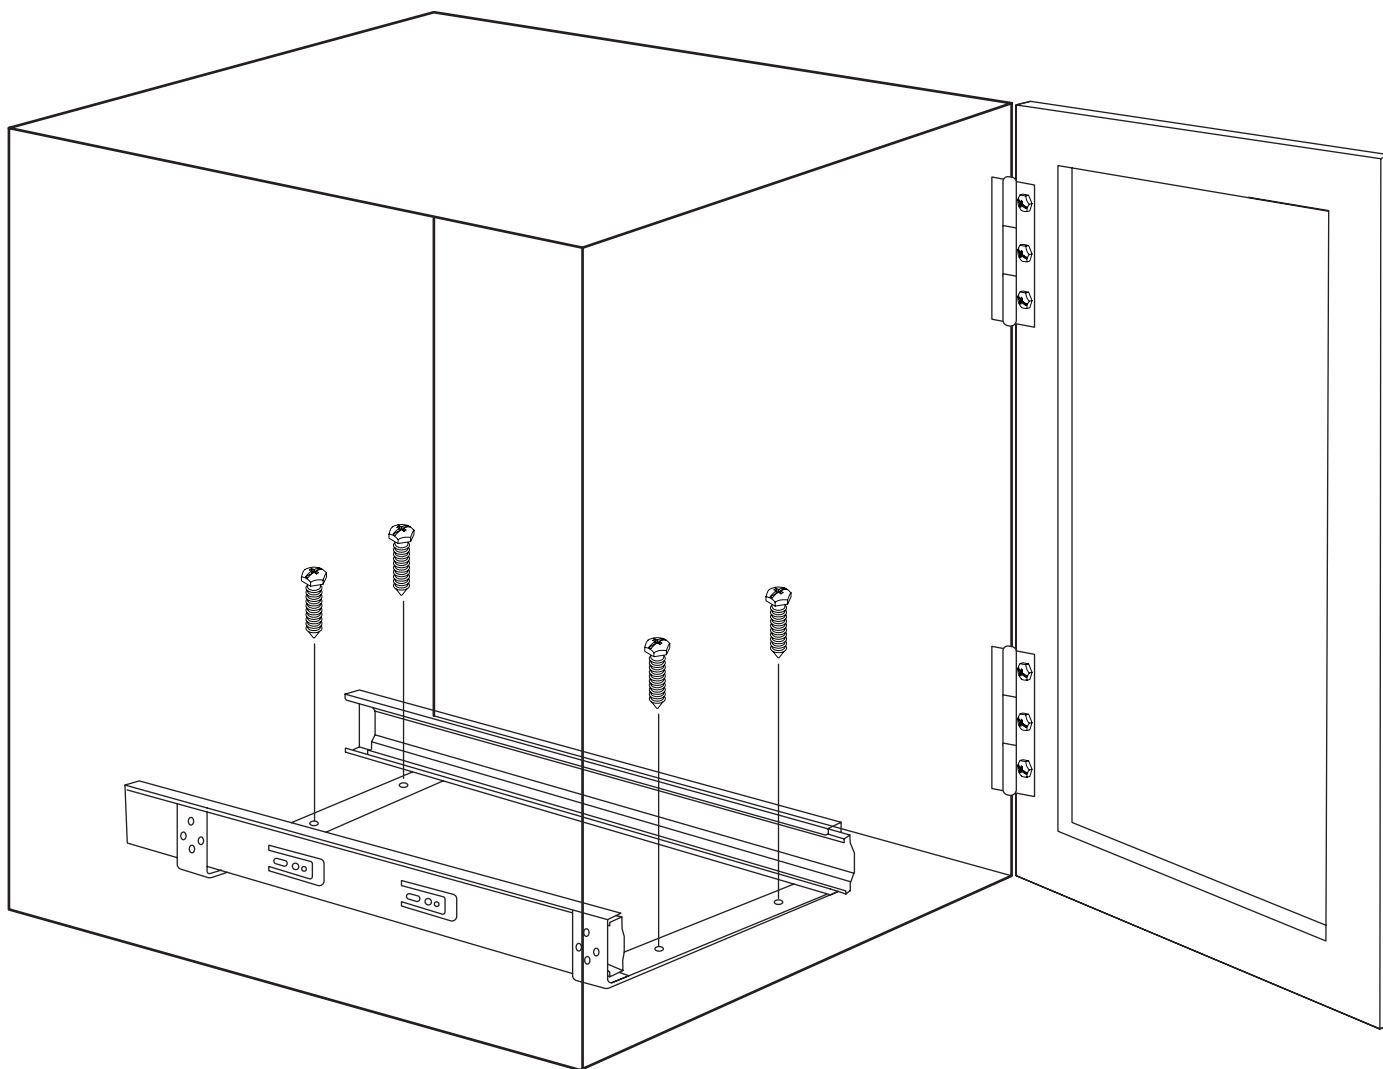


INSTRUCTIONS

Hinged Cabinet Door Style

3. Attach bin holder to base

- Carefully 'thread' the roll-out bin holder from Step 1 into the rail slots on the base, as shown.
- Push it in to set the locking levers.

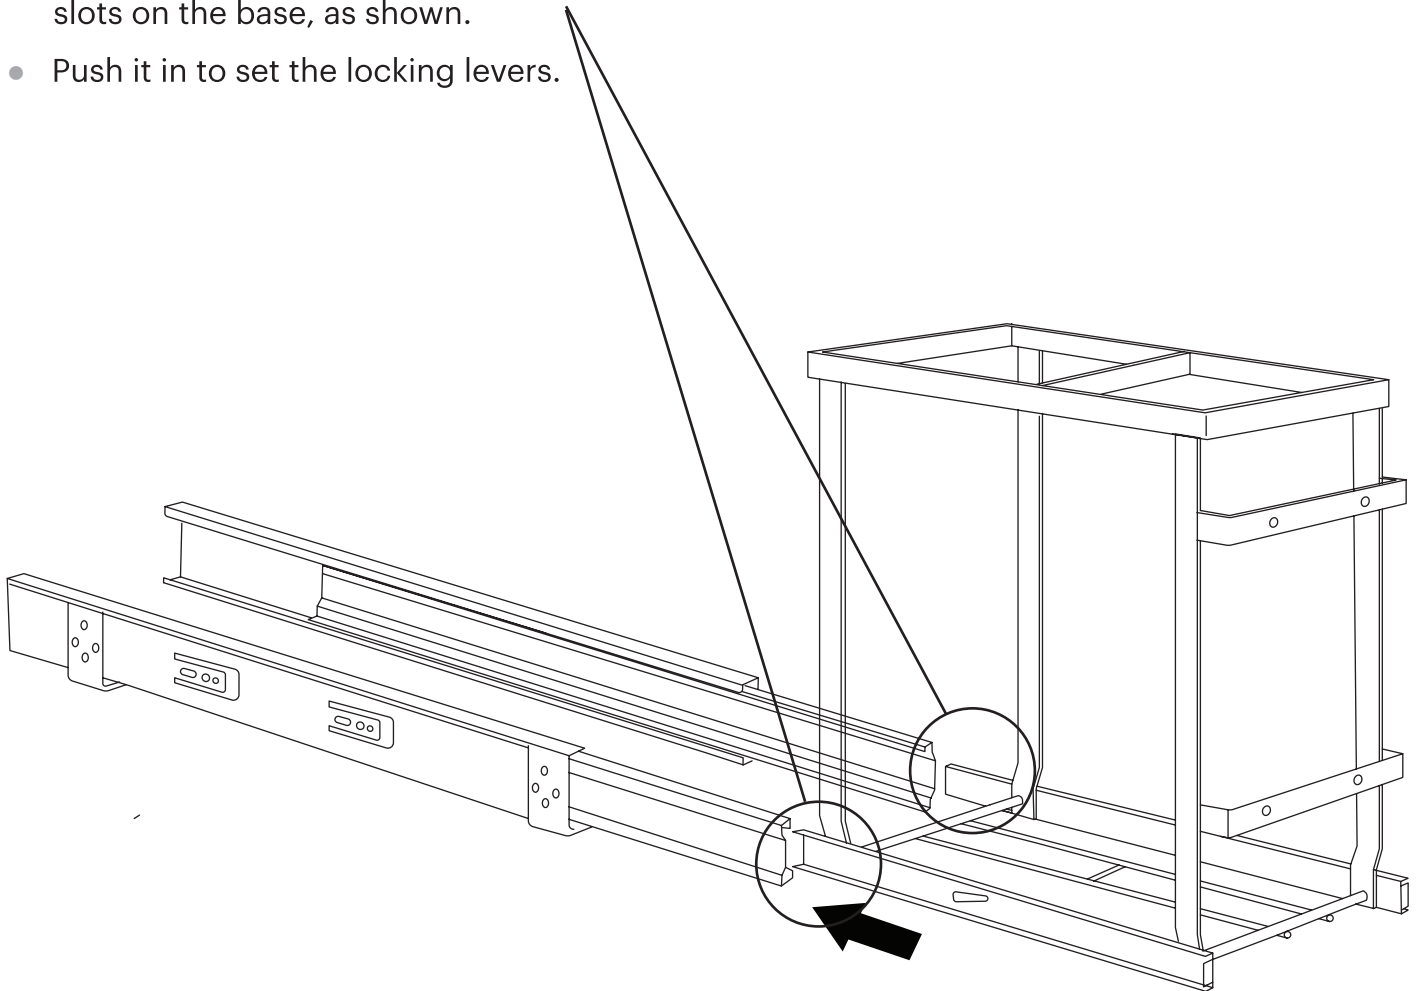


INSTRUCTIONS

Hinged Cabinet Door Style

6. Insert trash/recycle bins

Insert the bins by dropping them straight down into the mechanism as shown.

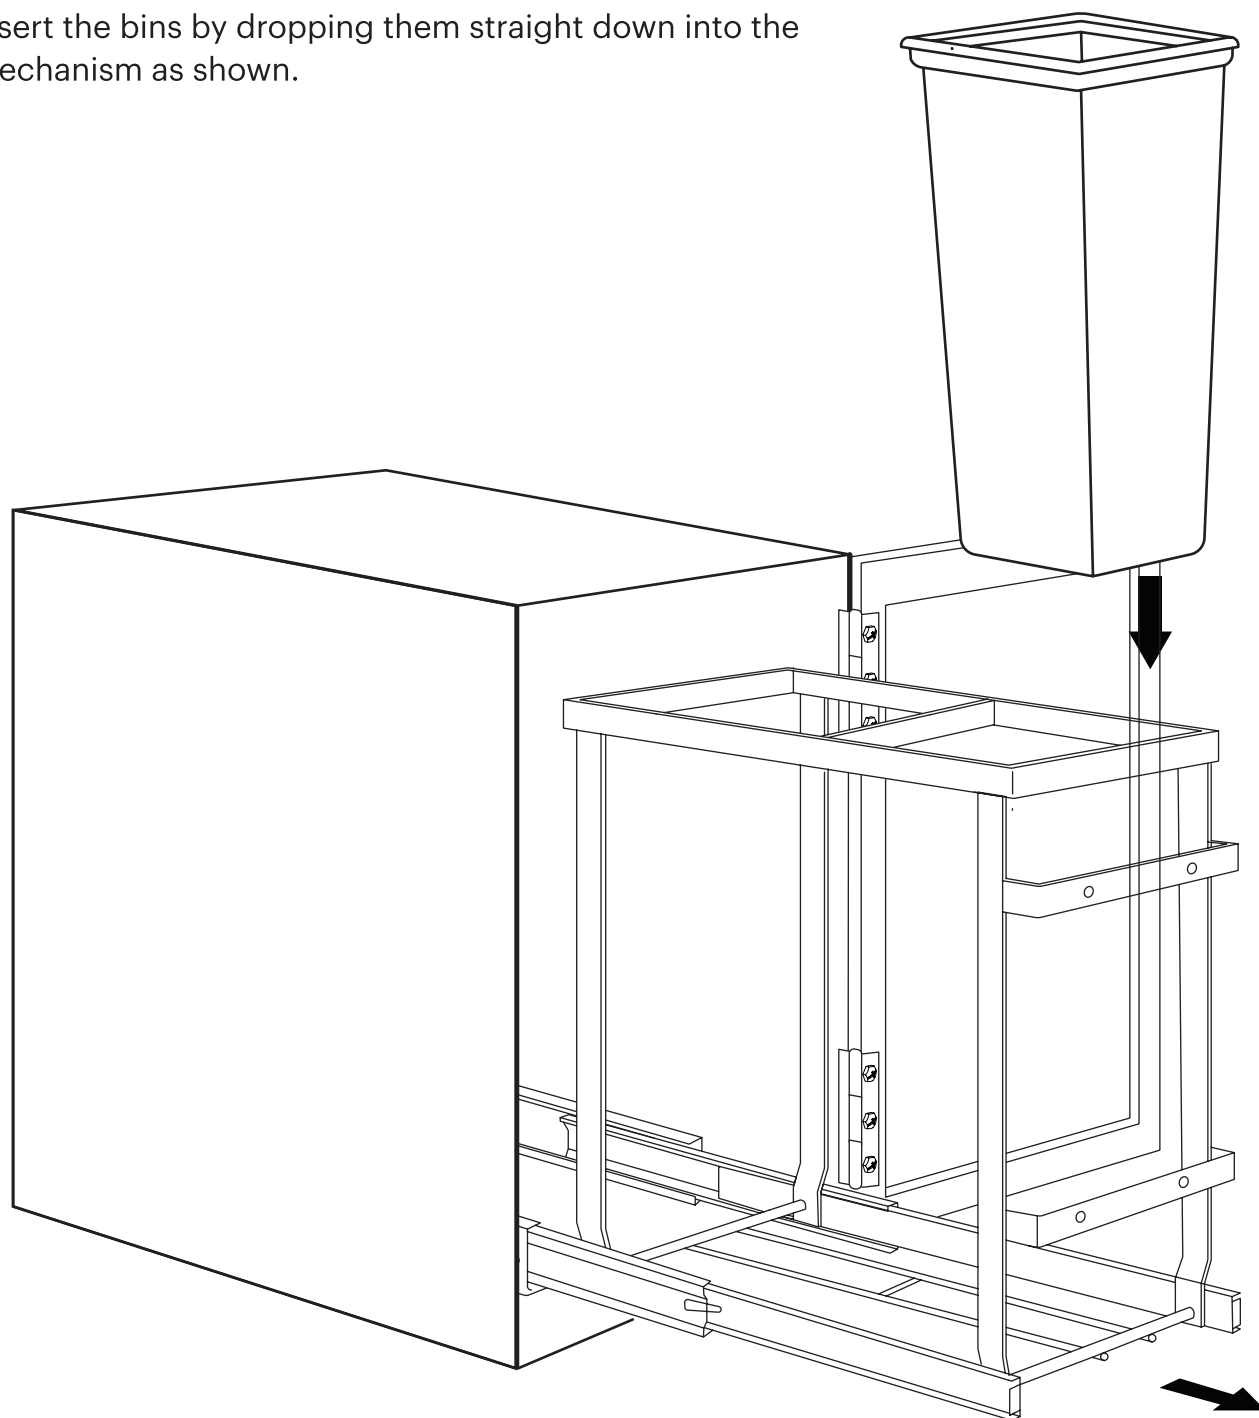


INSTRUCTIONS

Hinged Cabinet Door Style

Congratulations!

Your AdirHome Roll-Out Trash/Recycle Bin is ready to use.

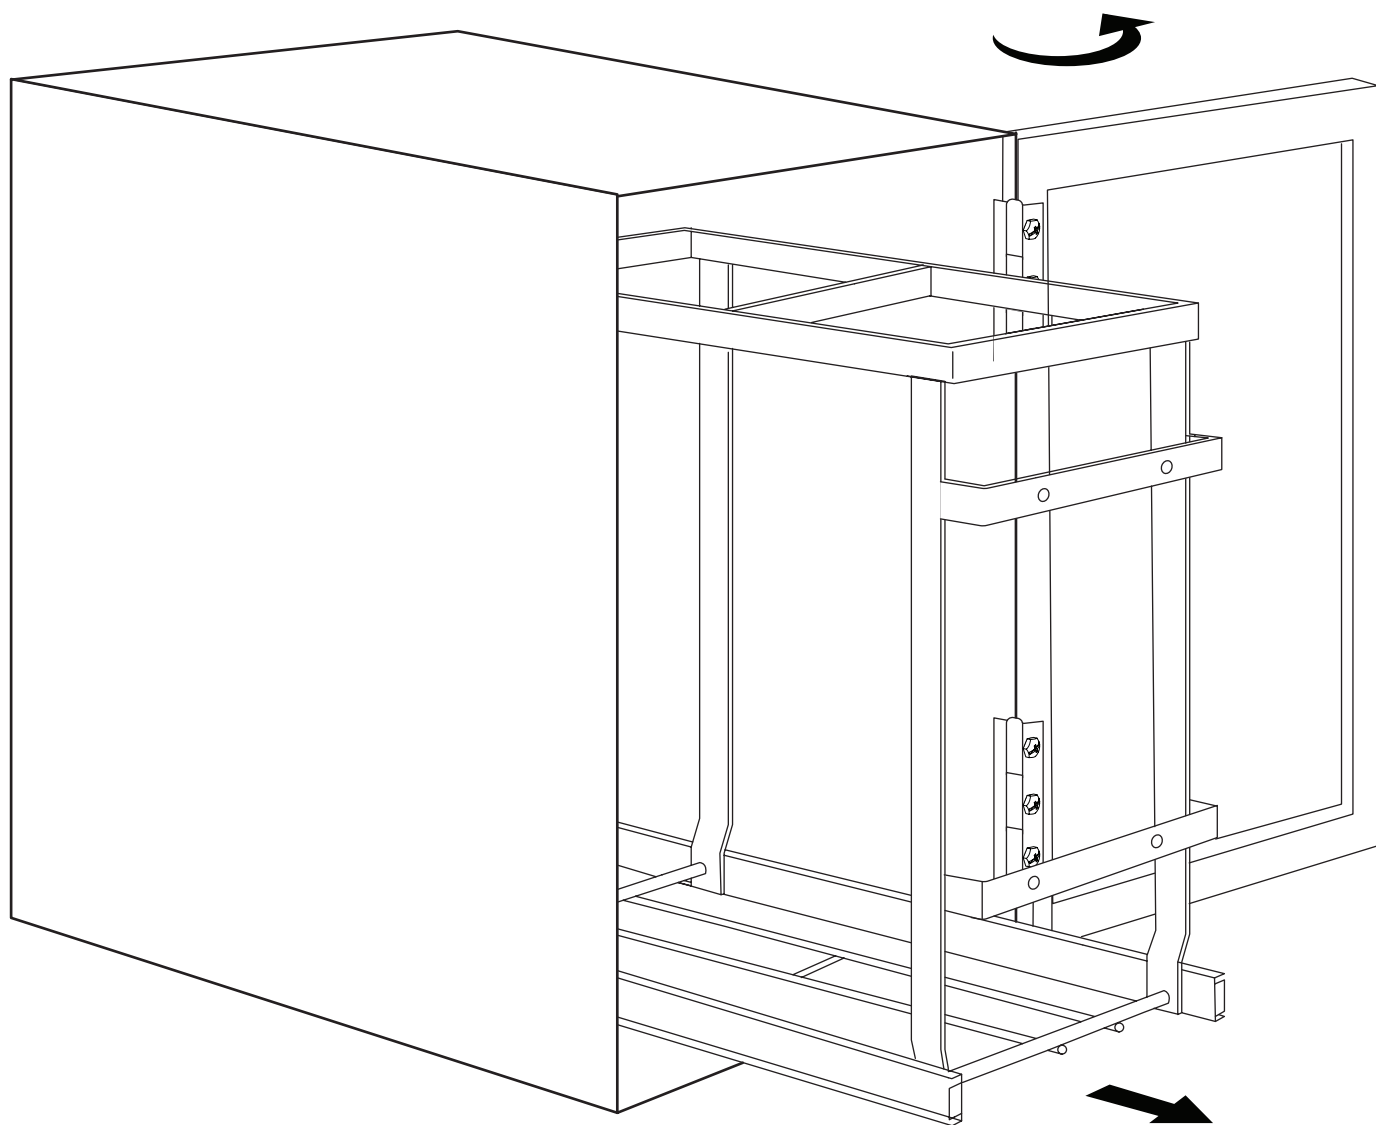



© 2019 AdirCorp, all rights reserved.



cs@adirhome.com



+1 866-676-6221