

INSTALLATION

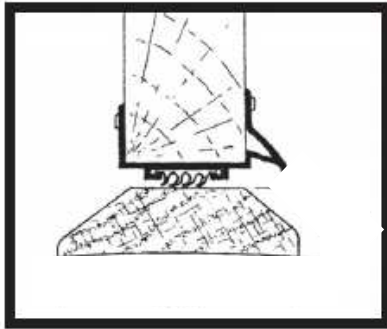


Illustration shows two ways to use hardwood threshold. Measure door opening between jambs and cut to fit with saw. For neatest job, cut threshold to fit around door stop. Or cut door stop to fit threshold.


Tools Required: Herramientas Requeridas



After threshold is cut to fit, and if installing with nails, drill small pilot hole in threshold before nailing, if installing with screws drill hole for size screw to be used.

Construction adhesive may be used to install wood thresholds on wood or concrete floors.

INSTALACIÓN

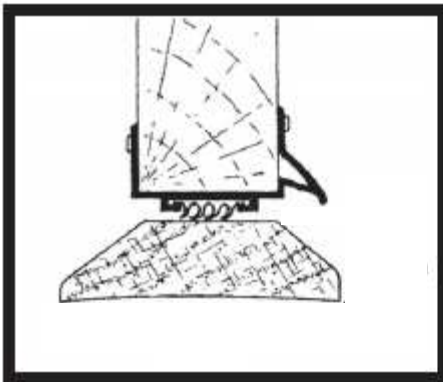

Tome la medida entre las jambas de la puerta y corte a la medida con un serrucho. Para un trabajo bien terminado, corte el sardinel a la medida alrededor del tope de la puerta o corte el tope de la puerta a la medida del sardinel.

Después de que se ha cortado el sardinel al tamaño y se si instalara con clavos, taladre un pequeño orificio piloto en el sardinel antes do clavarlo. Si se instalara con tornillos, taladre un orificio al tamaño del tornillo que se usara.

Se puede utilizae adhesivo para contrucción para instalar sardineles de madera sobre pisos de madera o concreto.