


Assembly Instruction

SKU CODE : WF303313 / WF303314


If you have any questions,
please feel free to contact us.

Email: lowesteam@aminalife.com

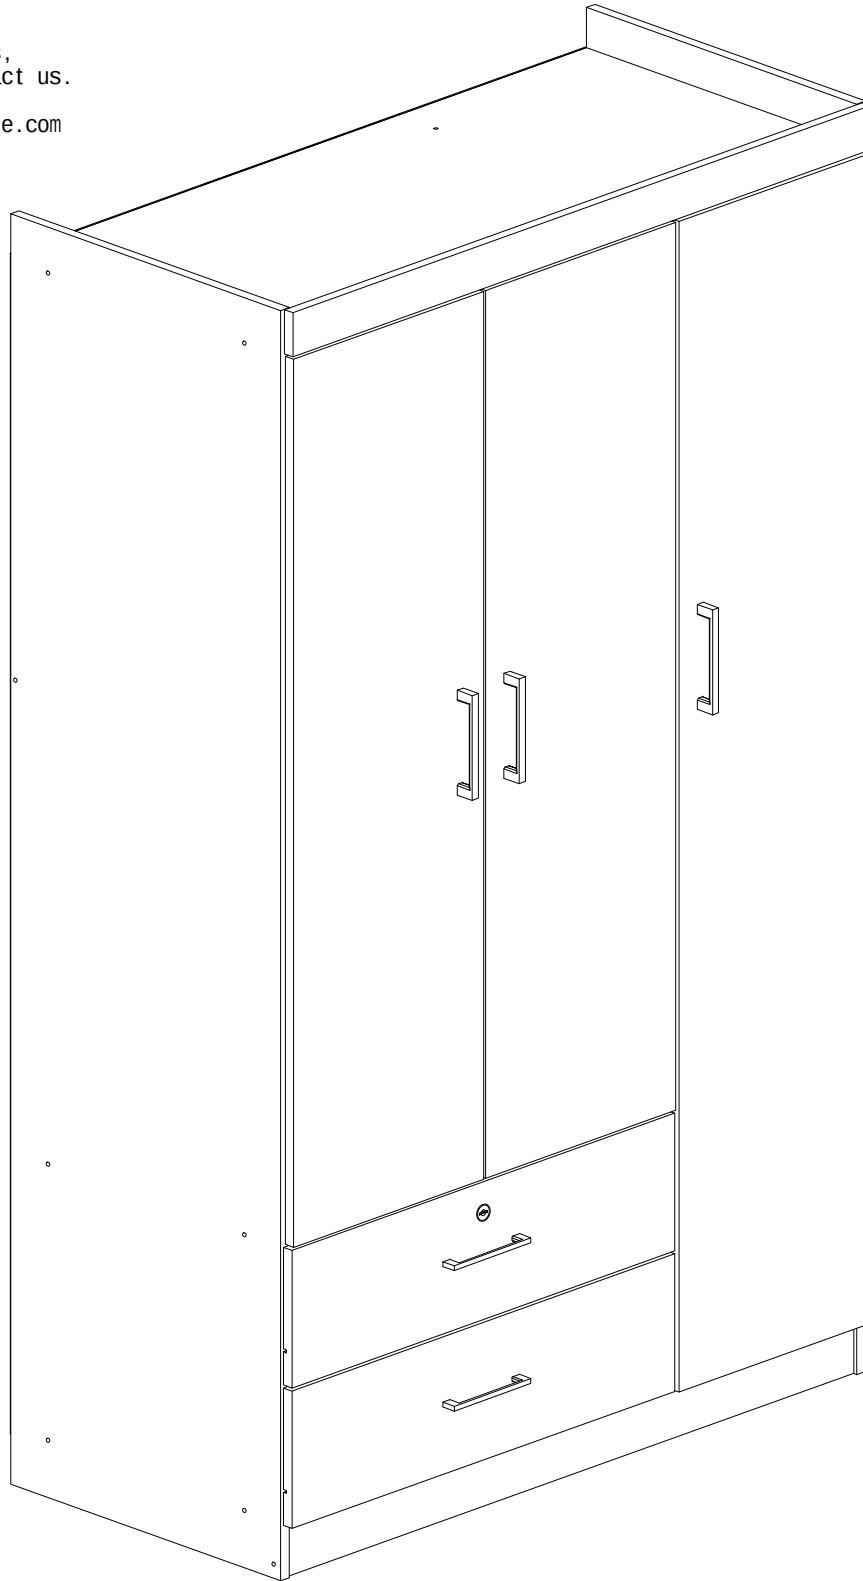

Assembly Instruction


Detail :

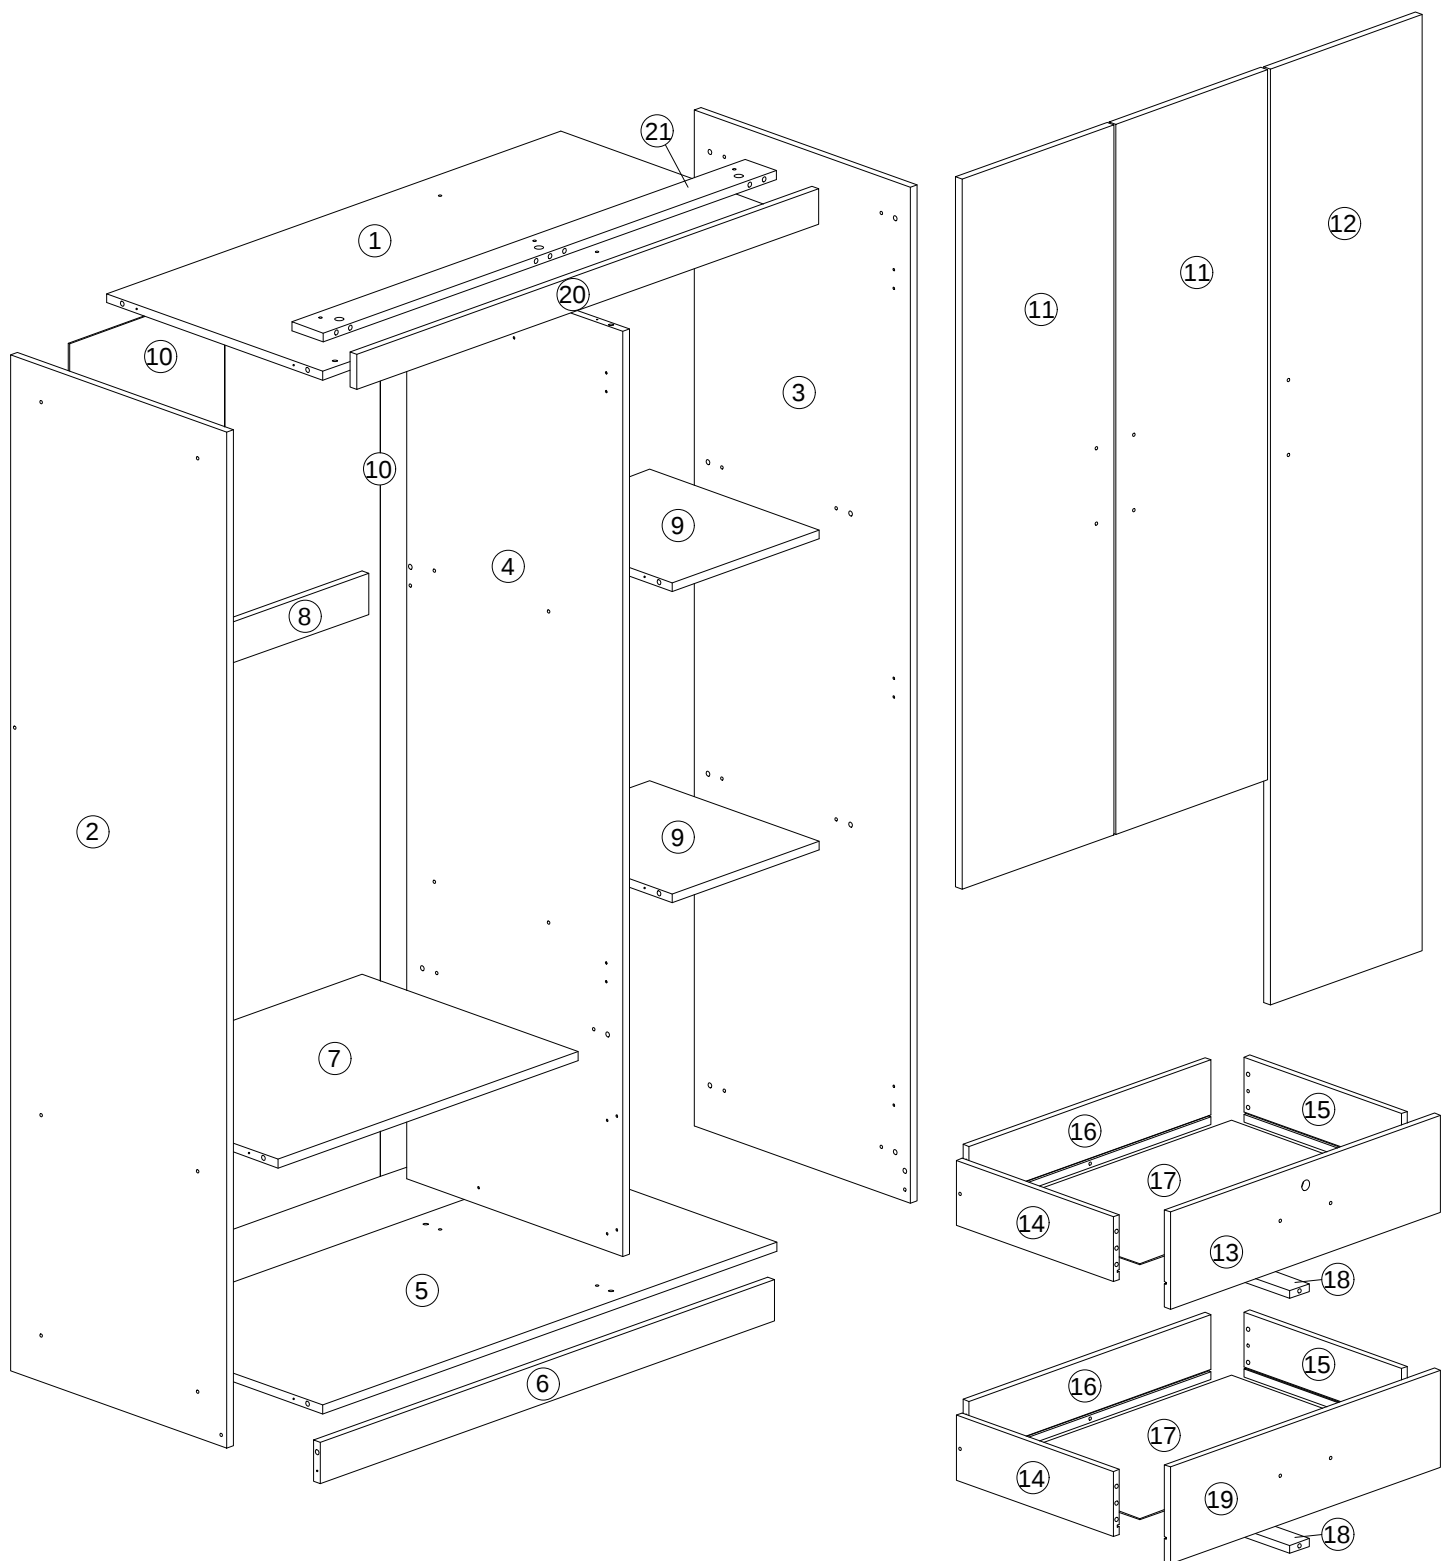

Assembly Instruction


Part List (WF303313)

② X 1

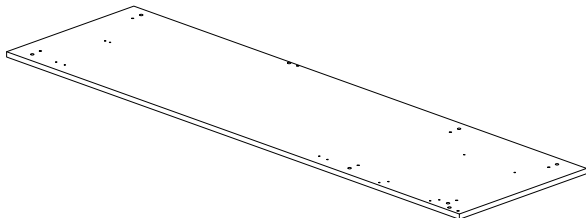


Side Left Panel

③ X 1

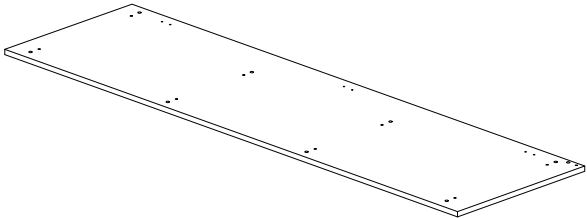


Side Right Panel

④ X 1

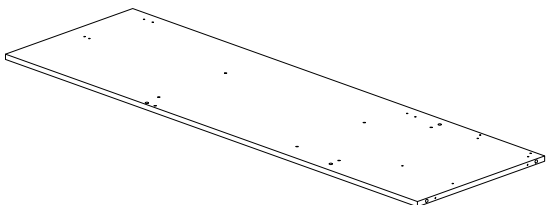


Center Panel

⑩ X 3

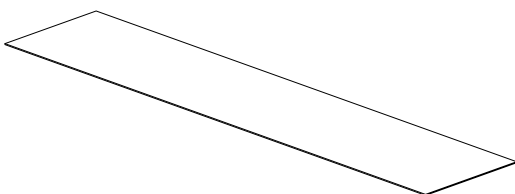


Back Panel

⑫ X 1

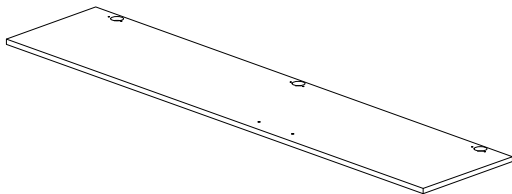

Door Panel - Big

⑳ X 1




Front Panel

Assembly Instruction


Part List (WF303314)

① X 1

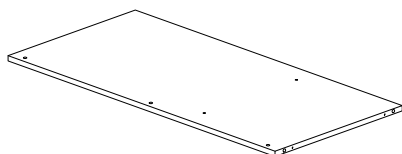


Top Panel

⑤ X 1

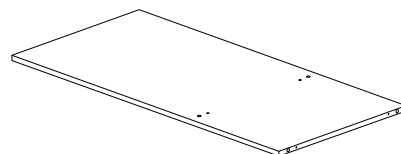


Bottom Panel

⑥ X 1




Bottom Support Panel

⑦ X 1

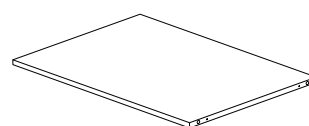


Partition Big Panel

⑧ X 1




Back Support Panel

⑨ X 2




Partition Small Panel

⑪ X 2

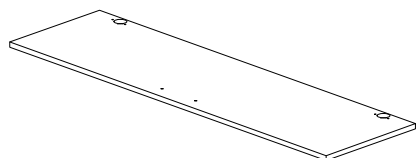


Door Panel - Small

⑬ X 1



Drawer Up Front Panel

⑯ X 2




Drawer Back Panel

⑭ X 2




Drawer Side Left Panel

⑰ X 1




Drawer Down Front Panel

⑮ X 2




Drawer Side Right Panel

⑱ X 2




Drawer Support Panel

⑳ X 1



Top Support Panel









㉑ X 2



Drawer Bottom Panel

Assembly Instruction

Hardware List (WF303314)

No.	SHAPE	DESCRIPTION	Qty.
A		8x25mm Dowel	48Pcs
B		8x20mm Dowel	3Pcs
C		15mm Myfix Minifix	9Sets
D		M3.5x16mm Screw	80Pcs
E		M4x45mm Screw	34Pcs
F		V Bracket	2Pcs
G		L Bracket	1Pc
H		Handle KT179.128mm	5Pcs
I		M4x28mm Screw	13Pcs
J		Hinges 2/8	7Pcs
K		5/8 Nail With Pin	6Pcs
L		6/8 Power Pin	50Pcs
M		Drawer Lock	1Pc
N		Drawer Lock Support H10.9	1Pc
O		Drawer Slide (350mm)	2Sets
P		Aluminium Pipe(667mm)	1Pc
Q		Sticker	17Pcs


Anti Tipping Hardware (WF303314)

No.	SHAPE	DESCRIPTION	Qty.
a		Mounting Bracket	2Pcs
b		TP 6# x 5/8" Screw	1Pc
c		TP 8# x 2" Screw	1Pc
d		Restraint Strap	1Pc

Assembly Instruction


Left Drawer Silde (O)

Flat Shaped - Left

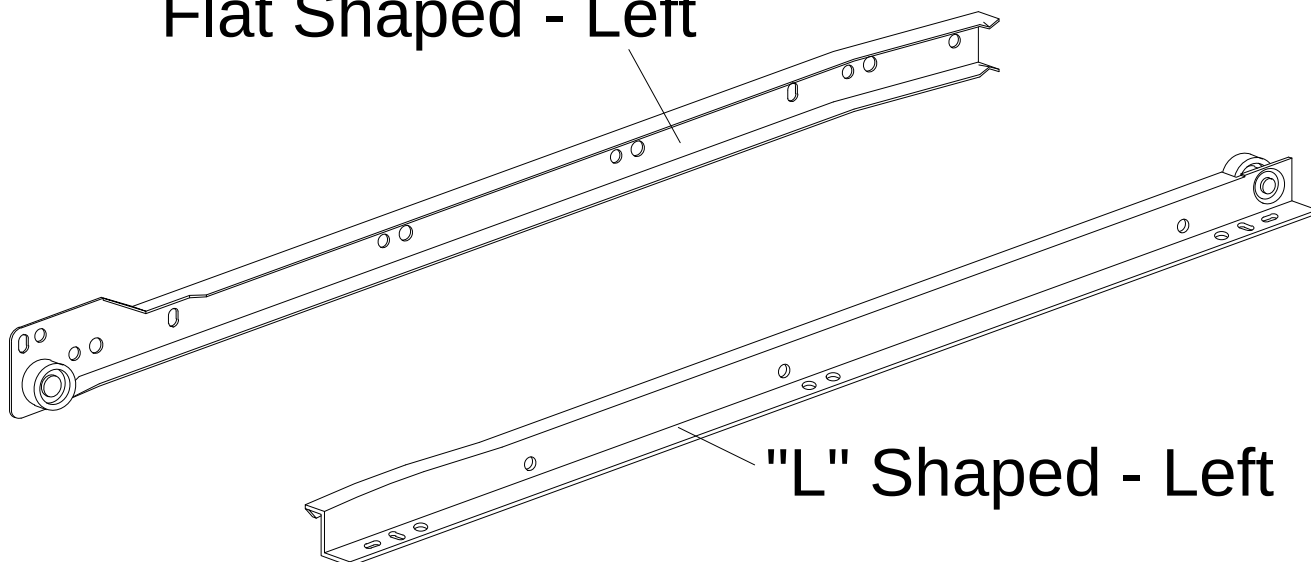

Right Drawer Silde (O)


"L" Shaped - Right

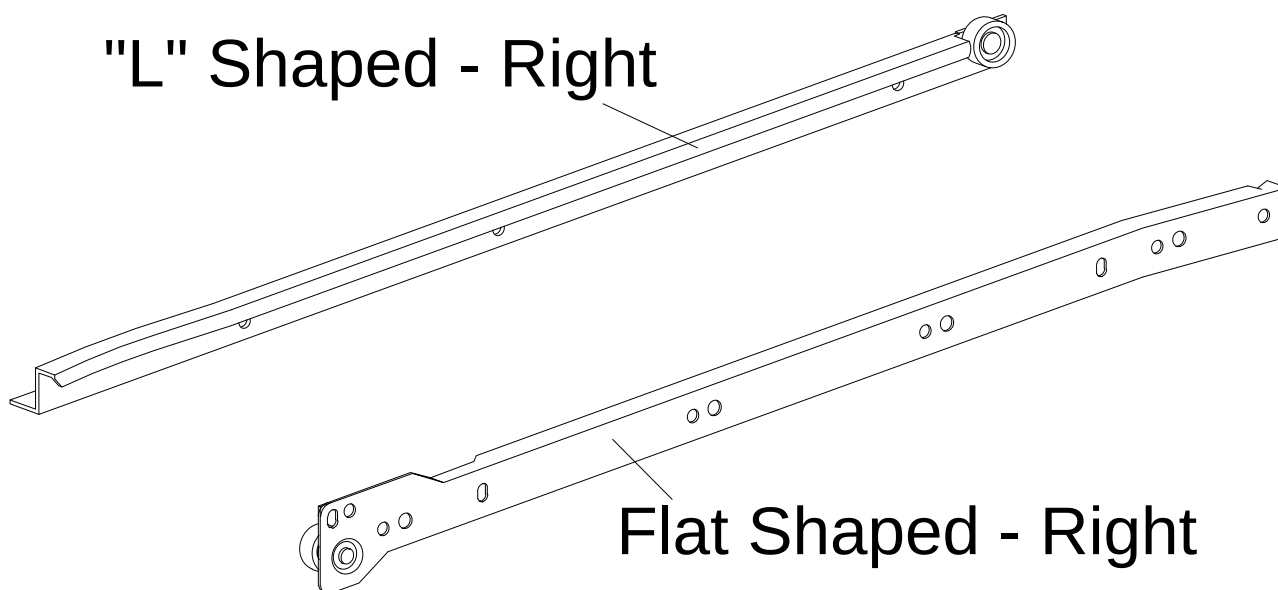

Assembly Instruction


Step 1

A		8x25mm Dowel	48Pcs
---	---	--------------	-------

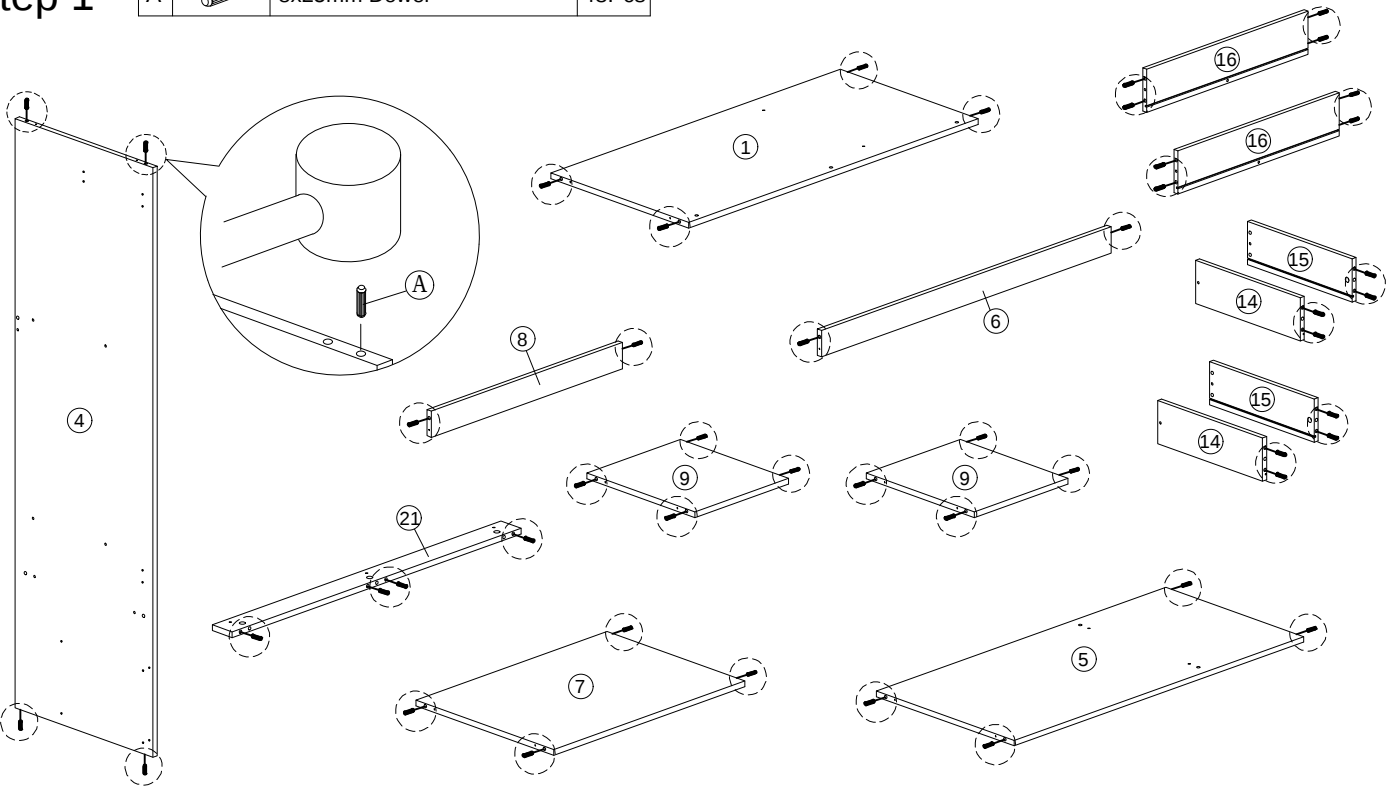


Step 2

B		8x20mm Dowel	3Pcs
---	---	--------------	------

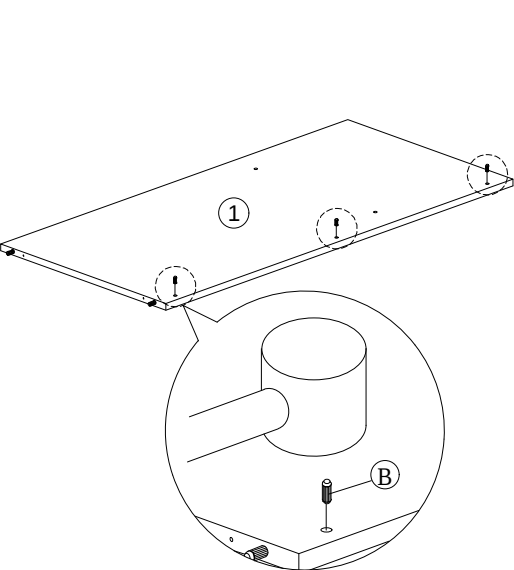

Step 3

C		Myfix	9Pcs
---	---	-------	------

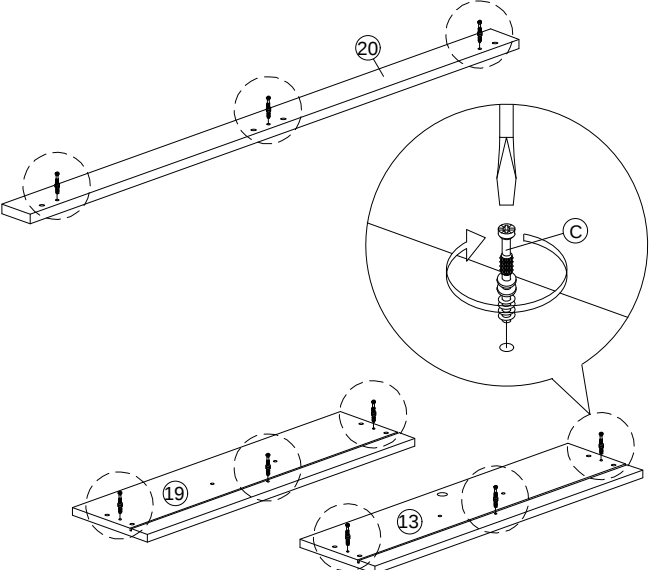


Assembly Instruction

Step 4


D		M3.5x16mm Screw	12Pcs
O		Drawer Slide 350mm - R	2Pcs

O		Drawer Slide 350mm - L	2Pcs
---	---	------------------------	------

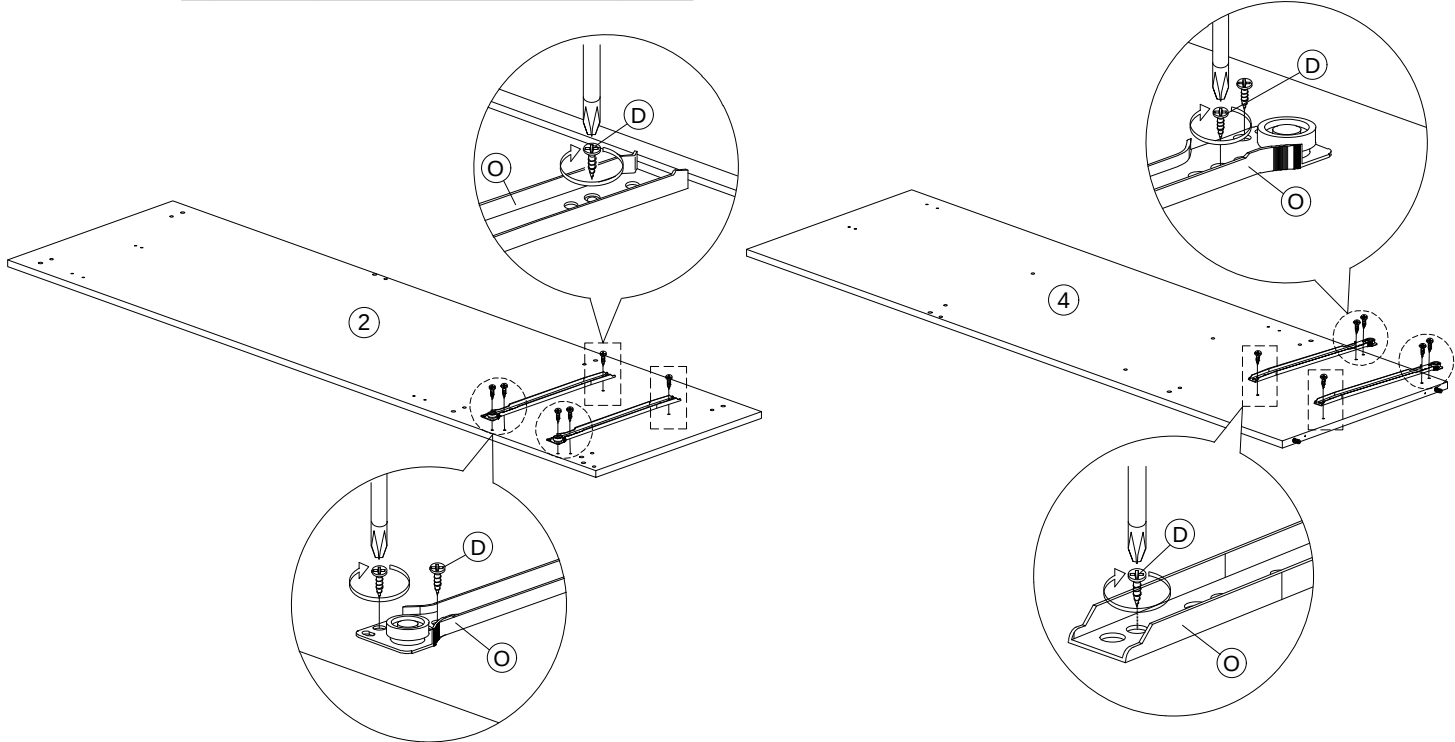


Step 5

D		M3.5x16mm Screw	4Pcs
F		V Bracket	2Pcs

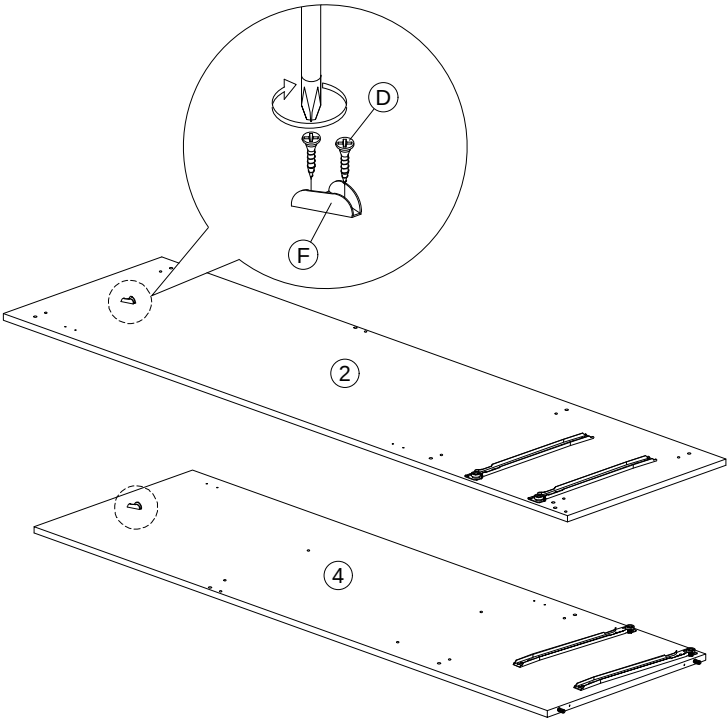

Step 6


D		M3.5x16mm Screw	2Pcs
N		Drawer Lock Support H10.9	1Pc

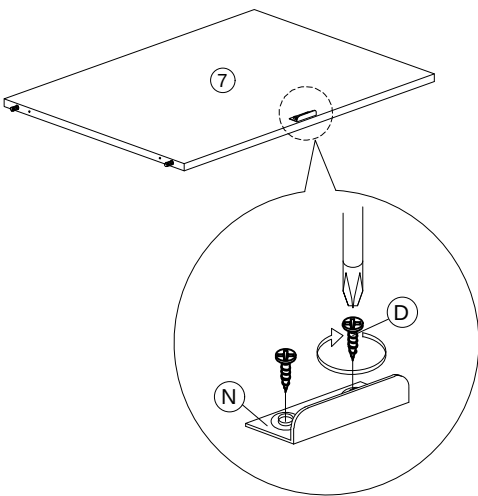

Assembly Instruction


Step 7

E		M4x45mm Screw	2Pcs
---	---	---------------	------

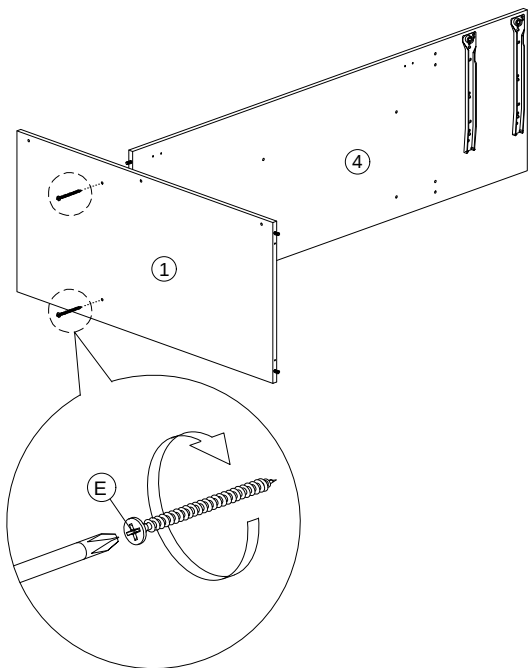


Step 8

I		M4x28mm Screw	3Pcs
---	---	---------------	------

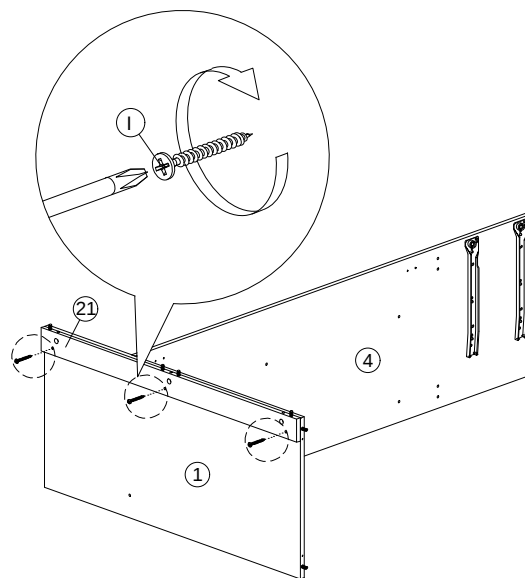


Step 9

C		Minifix	3Pcs
---	---	---------	------

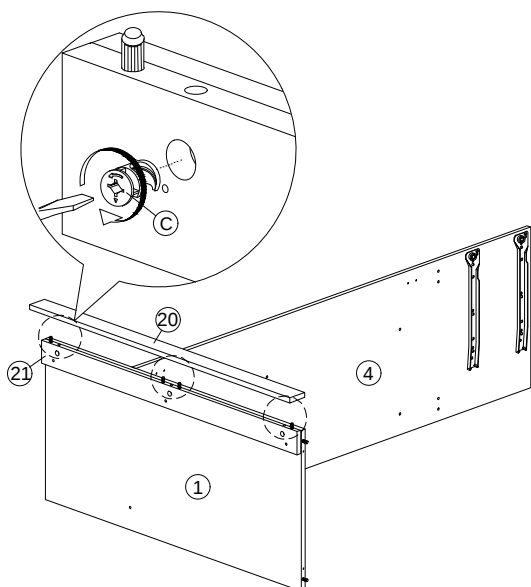

Step 10


E		M4x45mm Screw	4Pcs
---	---	---------------	------

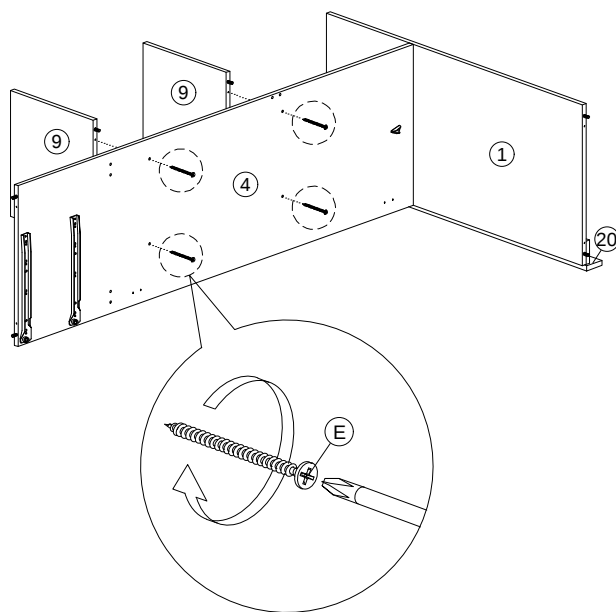

Assembly Instruction


Step 11

E		M4x45mm Screw	3Pcs
---	---	---------------	------

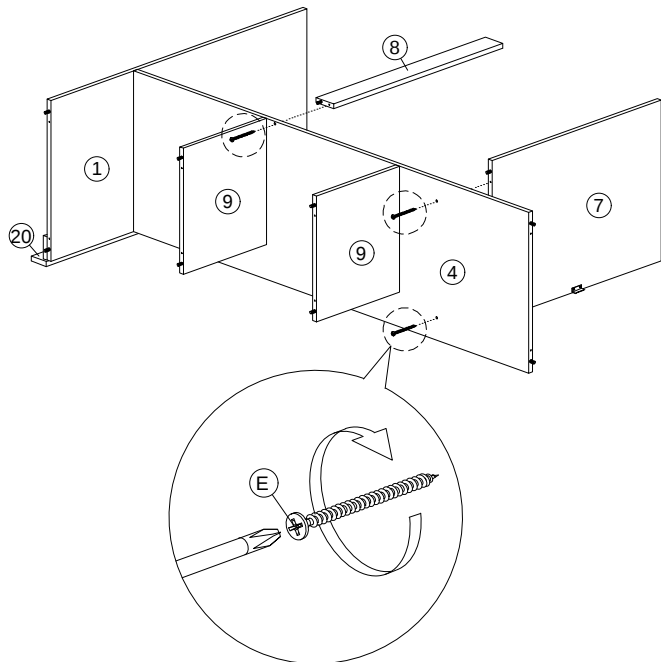

Step 12


E		M4x45mm Screw	2Pcs
---	---	---------------	------

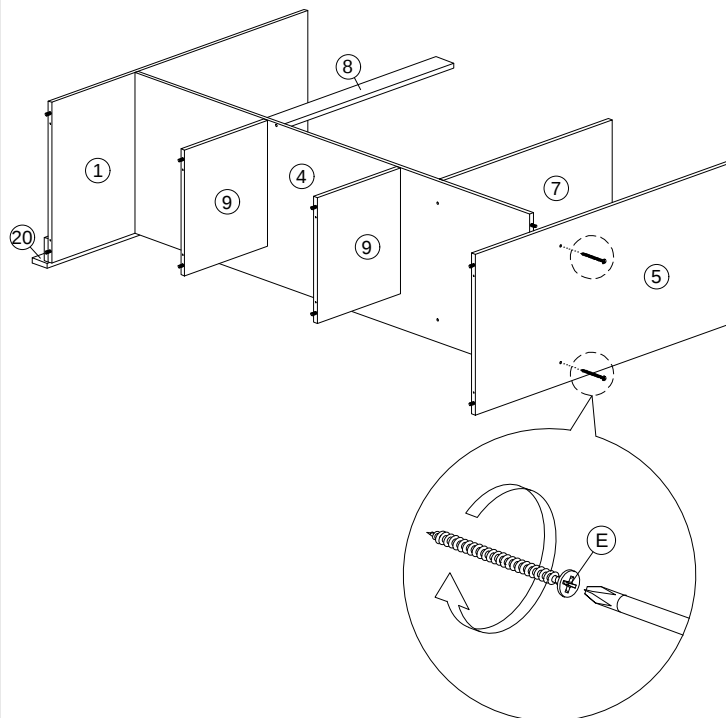

Step 13

E		M4x45mm Screw	9Pcs
---	---	---------------	------

Q		Sticker	9Pcs
---	---	---------	------

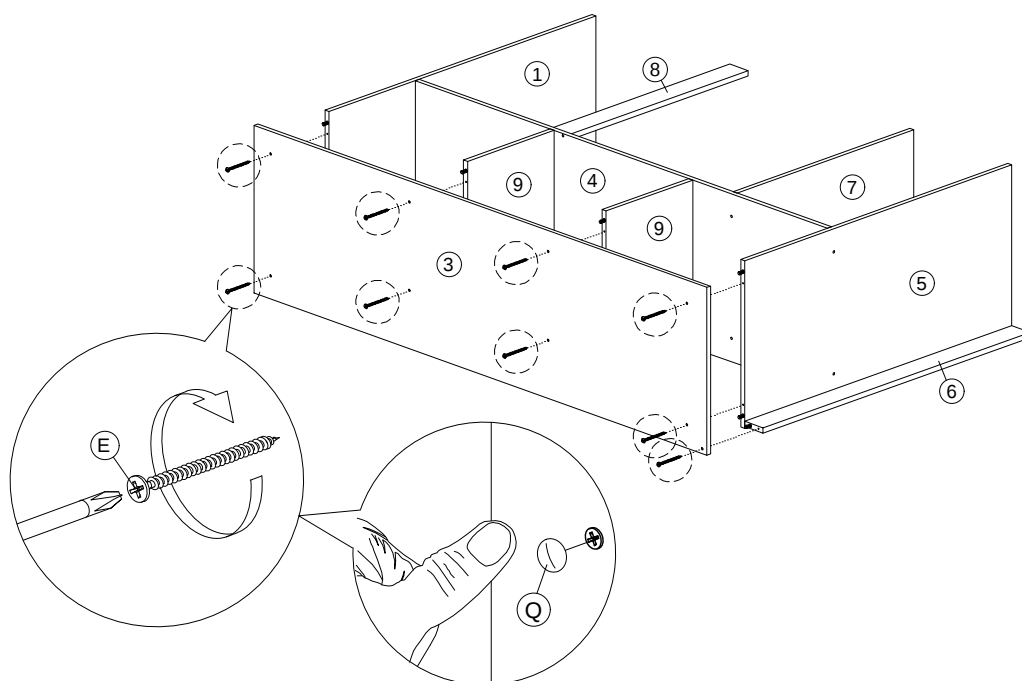


Assembly Instruction

Step 14


E		M4x45mm Screw	8Pcs
---	---	---------------	------

Q		Sticker	8Pcs
---	---	---------	------

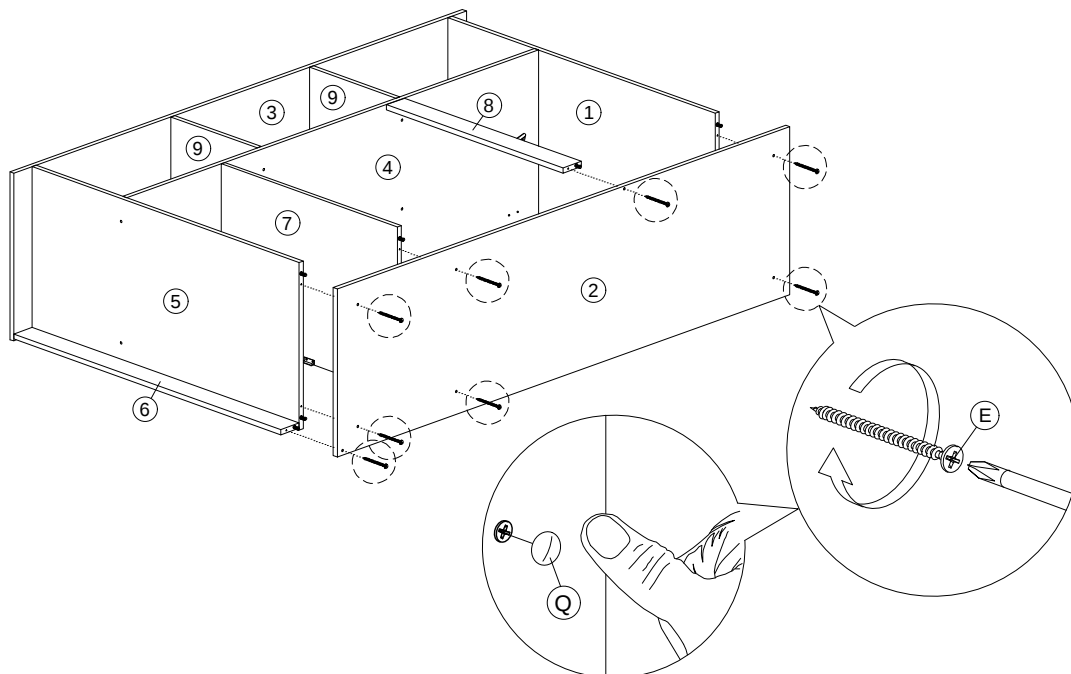

Step 15

L		6/8 Power Pin	50Pcs
---	---	---------------	-------

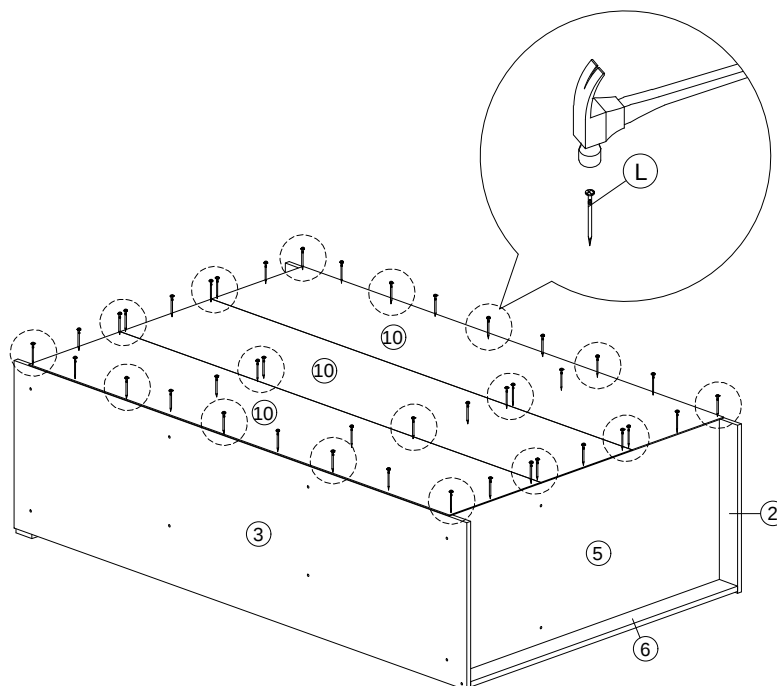


Assembly Instruction

Step 16


D		M3.5x16mm Screw	4Pcs
---	---	-----------------	------

G		L Bracket	1Pc
---	---	-----------	-----

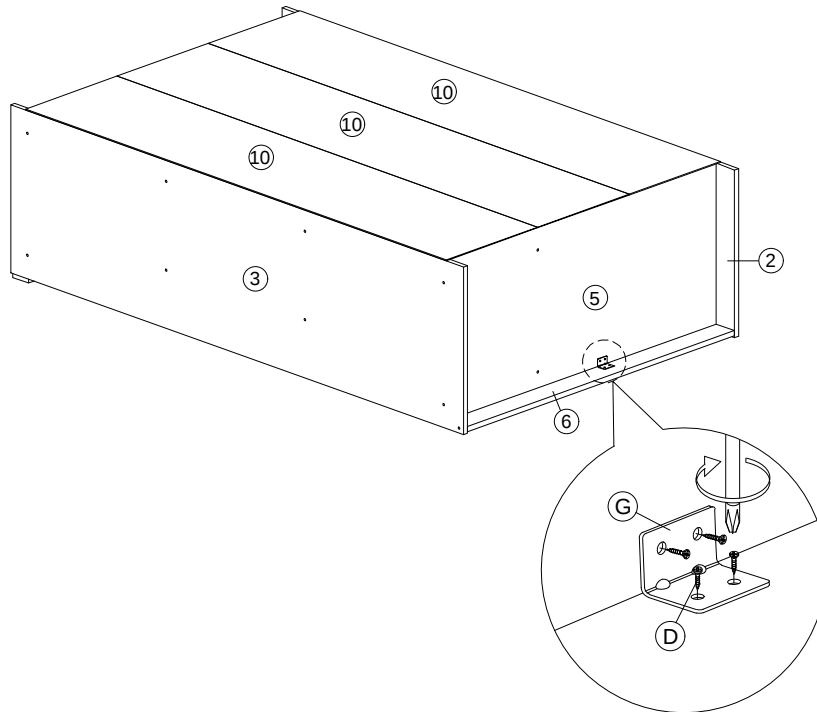

Step 17


K		5/8 Nail With Pin	6Pcs
---	---	-------------------	------

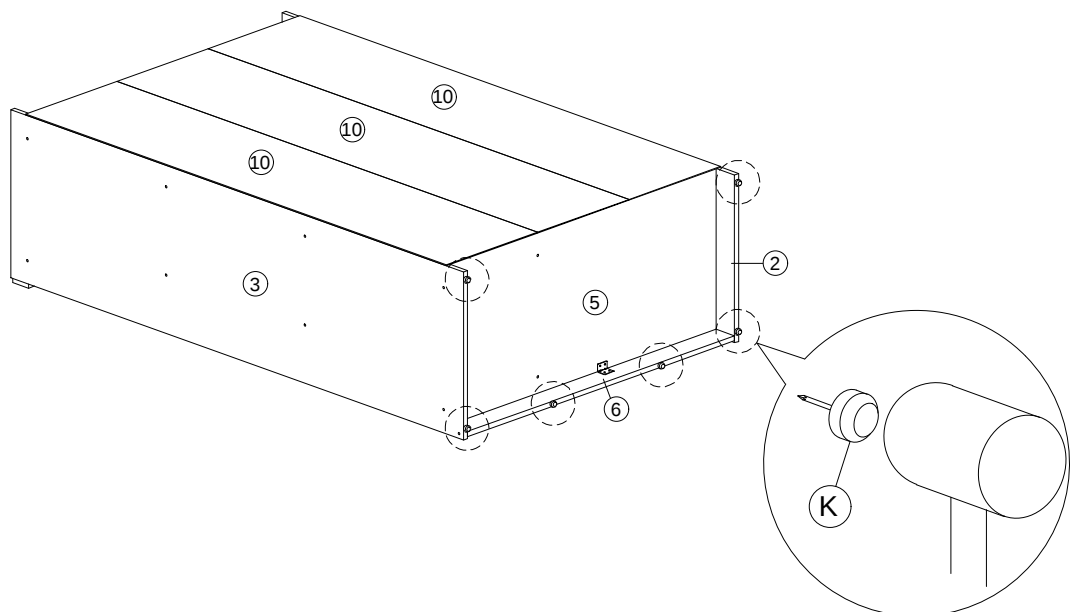

Assembly Instruction

Step 18


P		Aluminium Pipe 667mm	1Pc
---	---	----------------------	-----

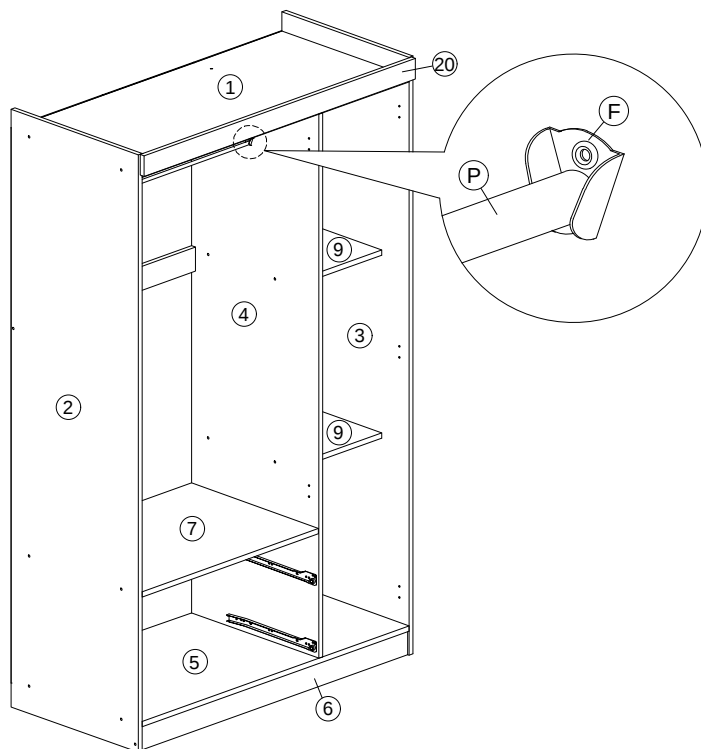

Step 19

D		M3.5x16mm Screw	18Pcs
---	---	-----------------	-------

J		Hinges 2/8	3Pcs
---	---	------------	------

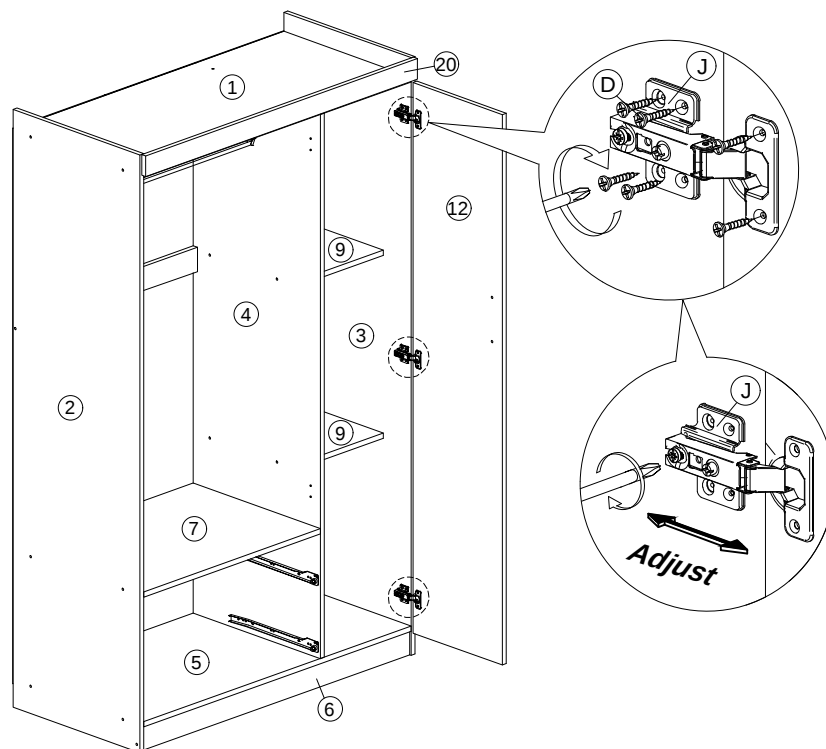


Assembly Instruction

Step 20

H		Handle KT179.128mm	1Pc
---	---	--------------------	-----


I		M4x28mm Screw	2Pcs
---	---	---------------	------

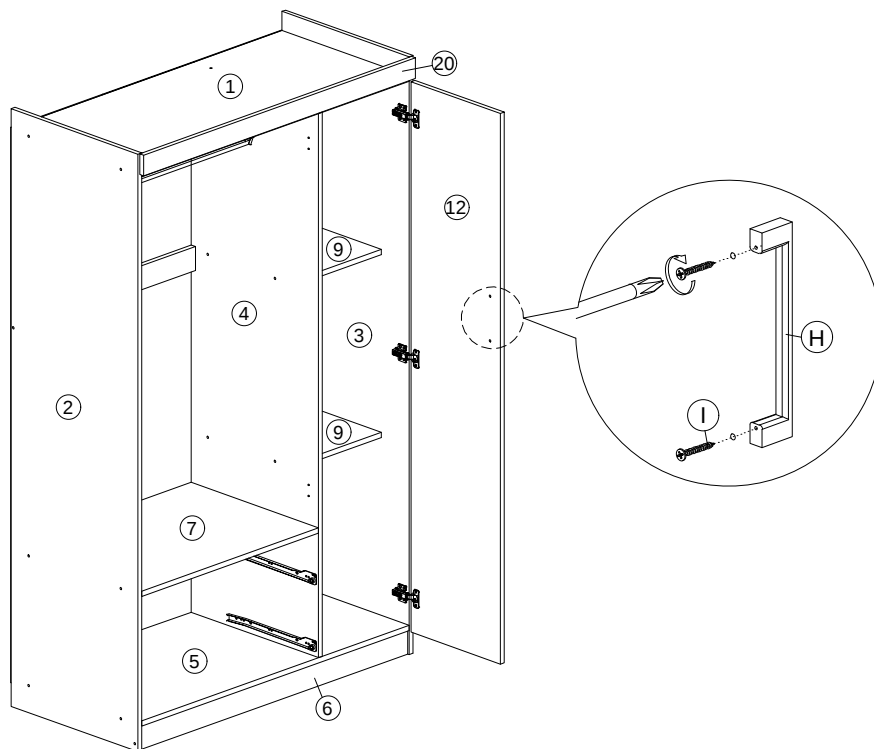

Step 21

D		M3.5x16mm Screw	12Pcs
---	---	-----------------	-------

J		Hinges 2/8	2Pcs
---	---	------------	------

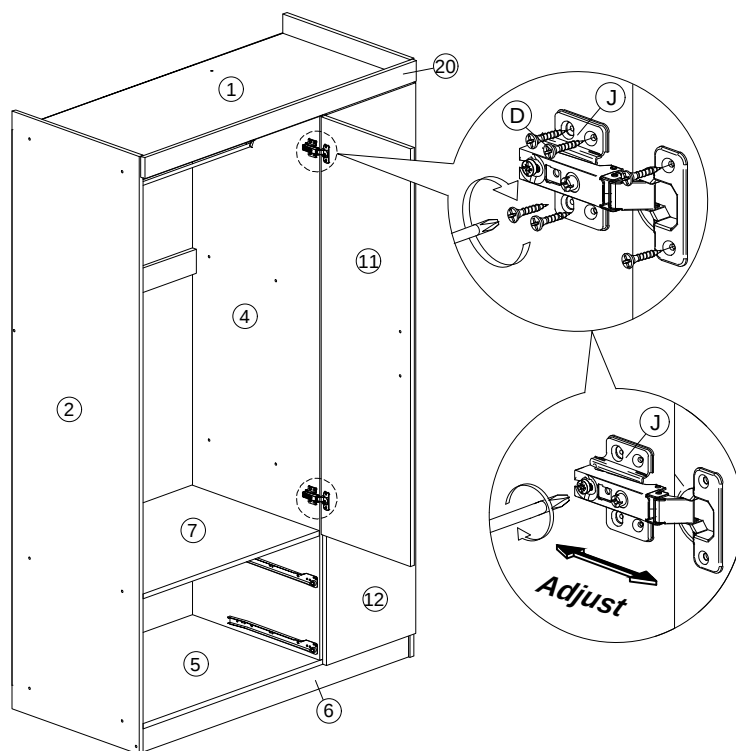


Assembly Instruction

Step 22

H		Handle KT179.128mm	1Pc
---	---	--------------------	-----


I		M4x28mm Screw	2Pcs
---	---	---------------	------

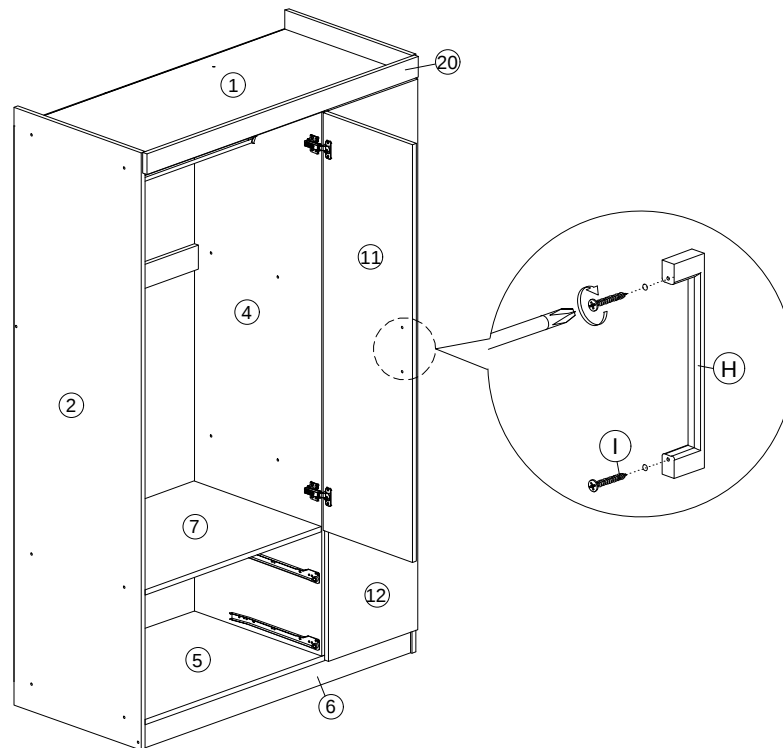

Step 23

D		M3.5x16mm Screw	12Pcs
---	---	-----------------	-------

J		Hinges 2/8	2Pcs
---	---	------------	------

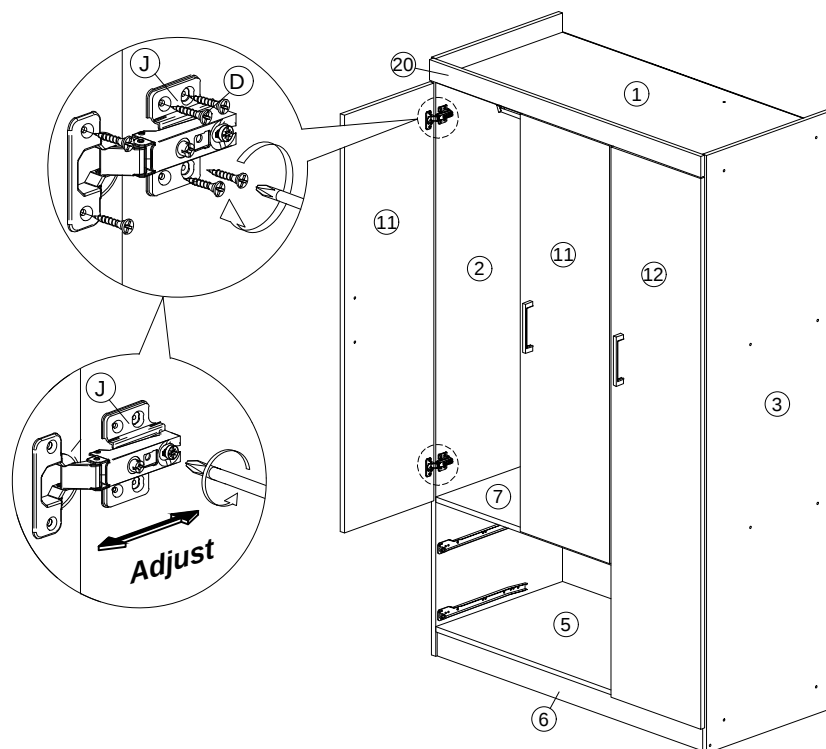


Assembly Instruction

Step 24


H		Handle KT179.128mm	1Pc
---	---	--------------------	-----

I		M4x28mm Screw	2Pcs
---	---	---------------	------

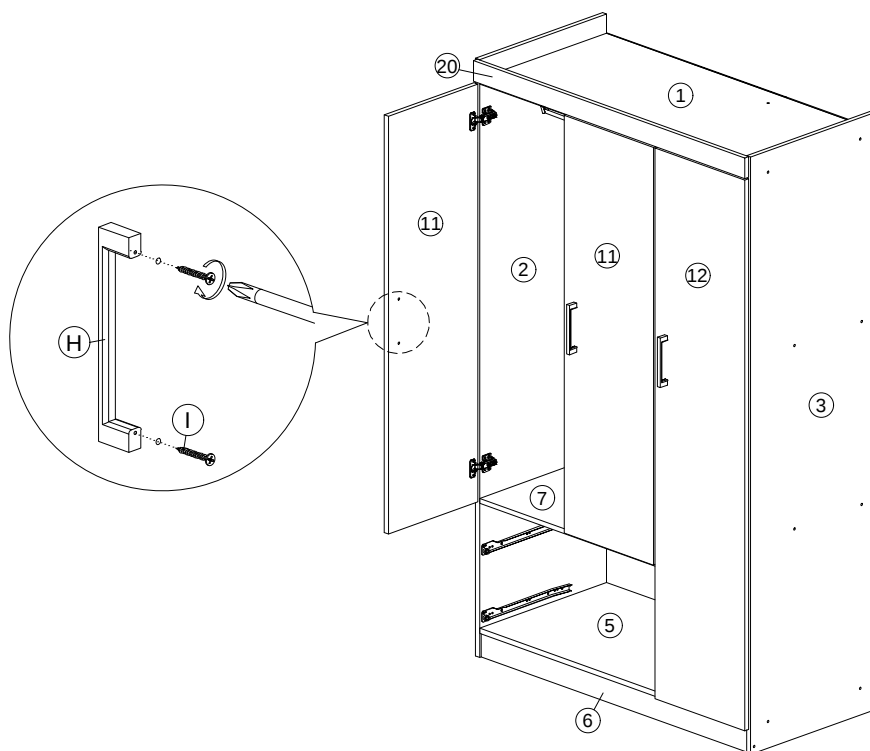


Step 25

E		M4x45mm Screw	4Pcs
---	---	---------------	------

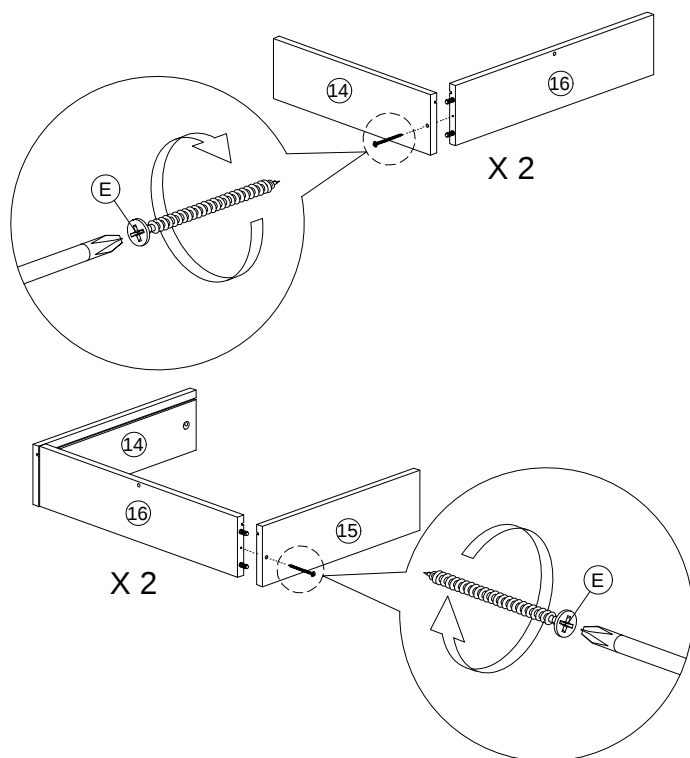


Step 26

E		M4x45mm Screw	2Pcs
---	---	---------------	------

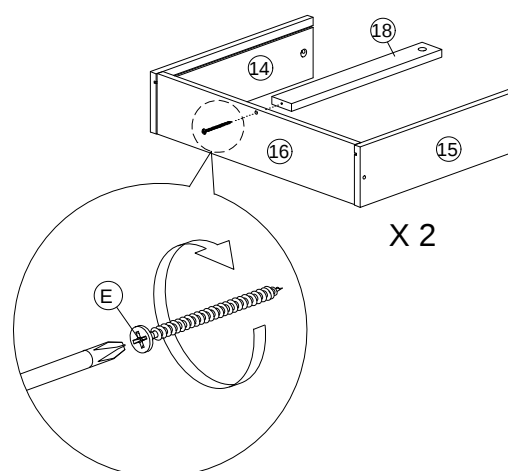


Assembly Instruction

Step 27

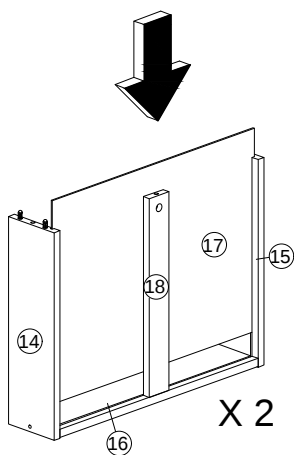


Step 28

C		Minifix	1Pc
---	--	---------	-----

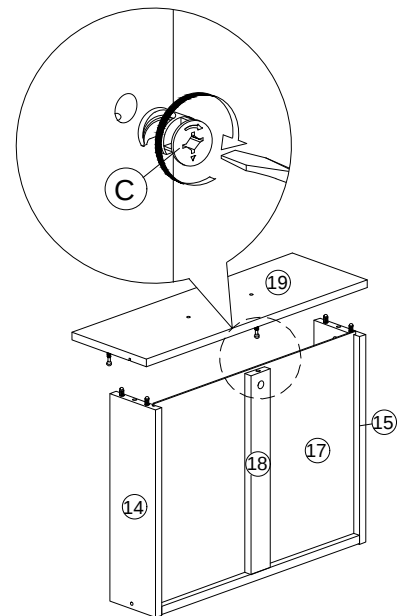


Step 29

C		Minifix	2Pcs
---	--	---------	------

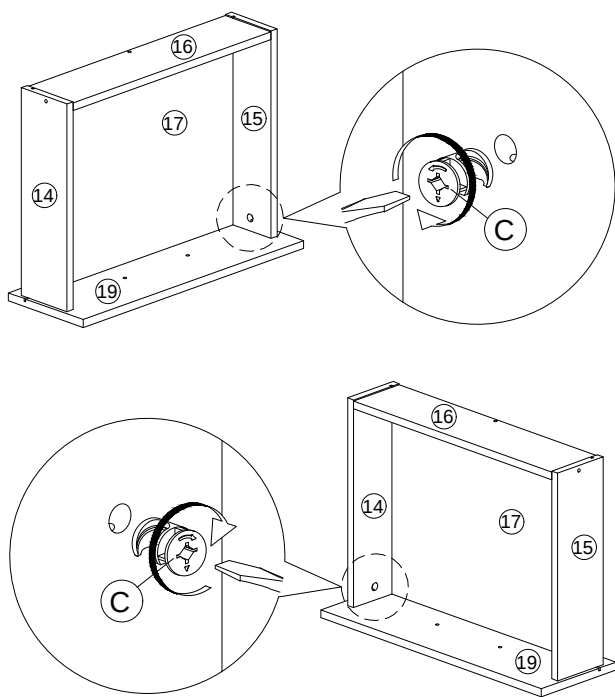

Step 30

H		Handle KT179.128mm	1Pc
I		M4x28mm Screw	2Pcs

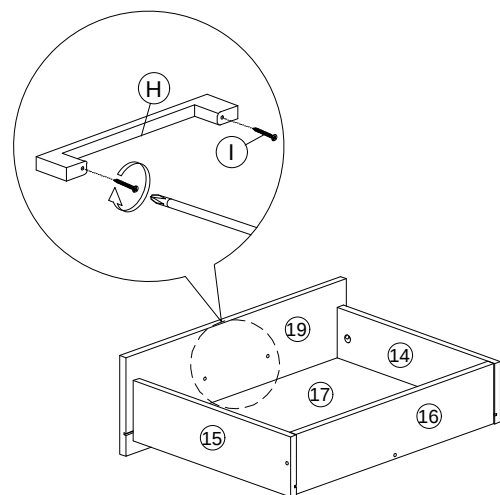

Assembly Instruction


Step 31

C



Minifix

1Pc

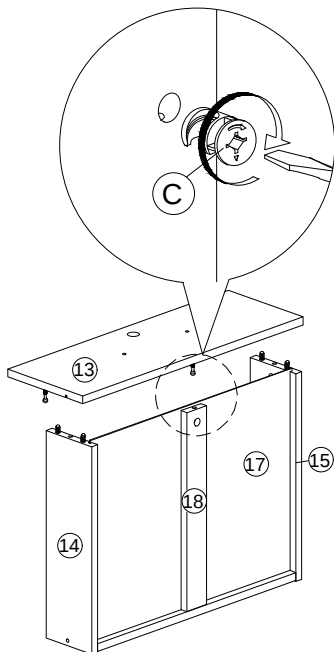


Step 32

C



Minifix

2Pcs

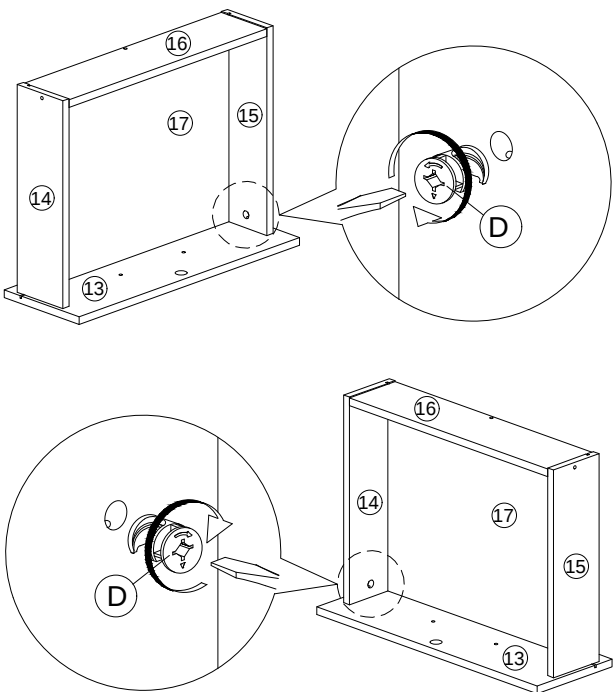

Step 33

H



Handle KT179.128mm


1Pc

I



M4x28mm Screw

2Pcs

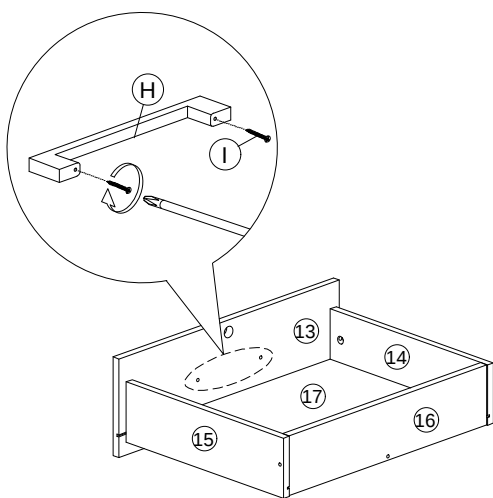

Step 34

D



M3.5x16mm Screw


4Pcs

N



Drawer Lock


1Pc

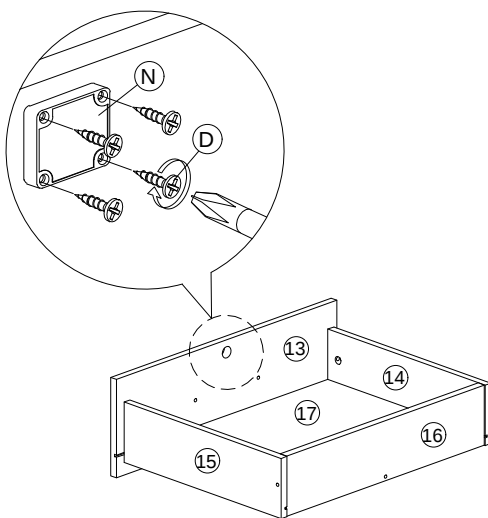

Assembly Instruction


Step 35

D		M3.5x16mm Screw	6Pcs
O		Drawer Slide 350mm - R	2Pcs

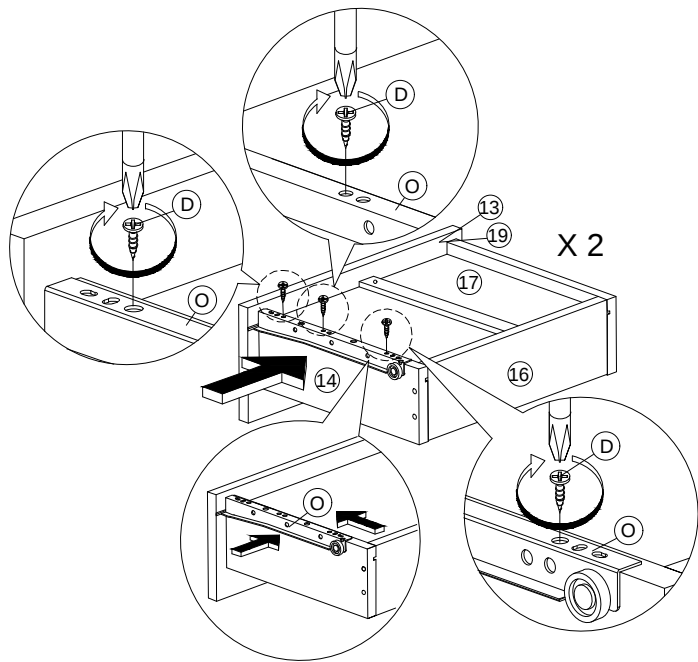


Step 36

D		M3.5x16mm Screw	6Pcs
O		Drawer Slide 350mm - L	2Pcs

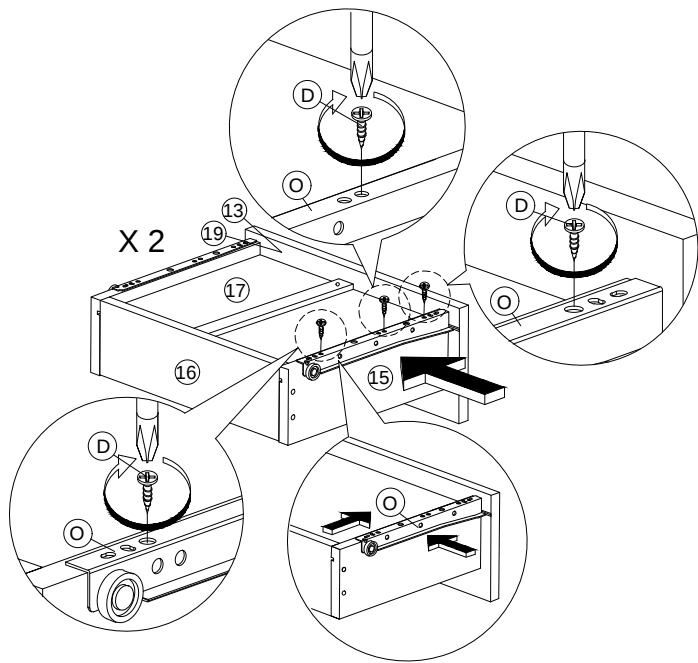

Step 37

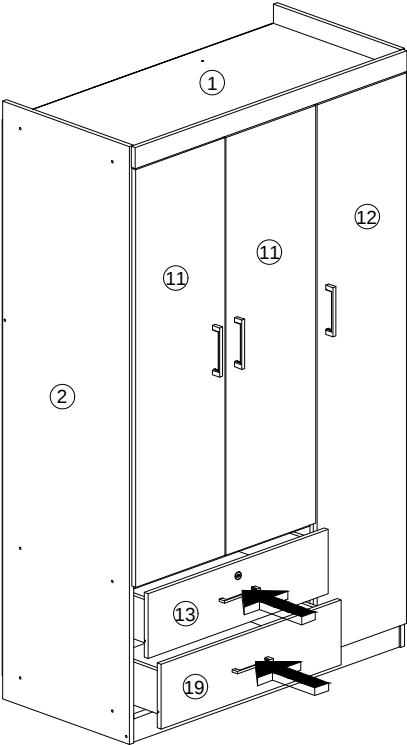

FITTING OF ANTI-TIP SAFETY STRAP

STEP 1:

- Attach the mounting bracket (a) to the furniture in the solid part below the top panel a few inches away from the side of the unit.
- Screw (b) through the smallest hole of (a).

STEP 2:

- Locate a stud in behind the have to
- Place the other mounting bracket (a) on the wall stud 2 inches below the mounting bracket secured to the back of your unit.
- Attach to the wall stud using (c) through the smaller hole of (a).

STEP 3:

- Repeat the same step a few inches away from the other side of the unit.
- Place the furniture into position so both mounting brackets are vertically in line.
- Lace the end of the restraint strap through the larger holes in each mounting bracket.
- Secure the straps and lock into place.

