






SHOWER STOOL ASSEMBLY INSTRUCTIONS

Please keep for future reference

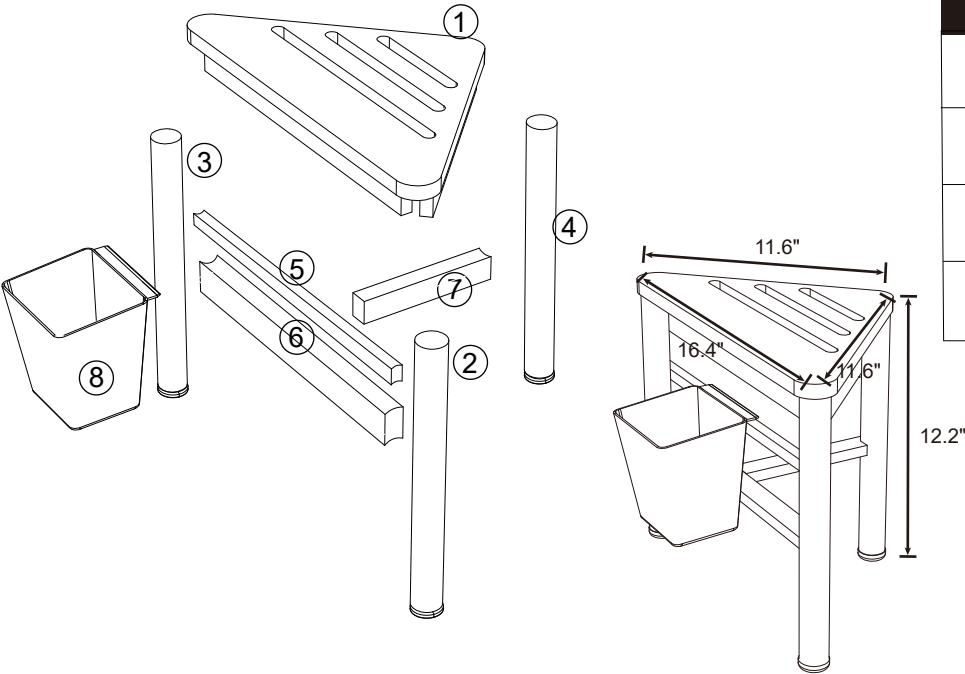


HARDWARE LIST

A		M6X40	3pcs
B		M4X65	1pc
C		Dia10X10	3pcs
D		M5X35	4pcs


We recommend
air-drying the wet
teak shower
bench and NOT
leaving in the sun.


STEP 1

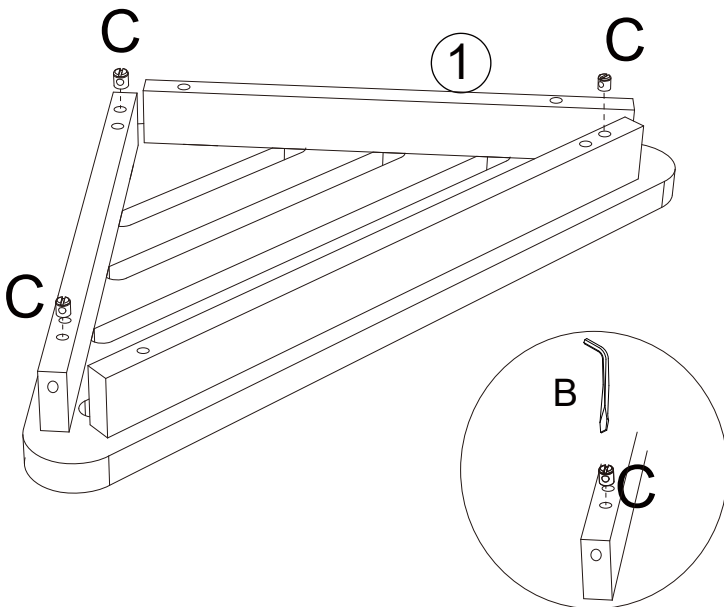

C		3 pcs
---	---	-------


STEP 2

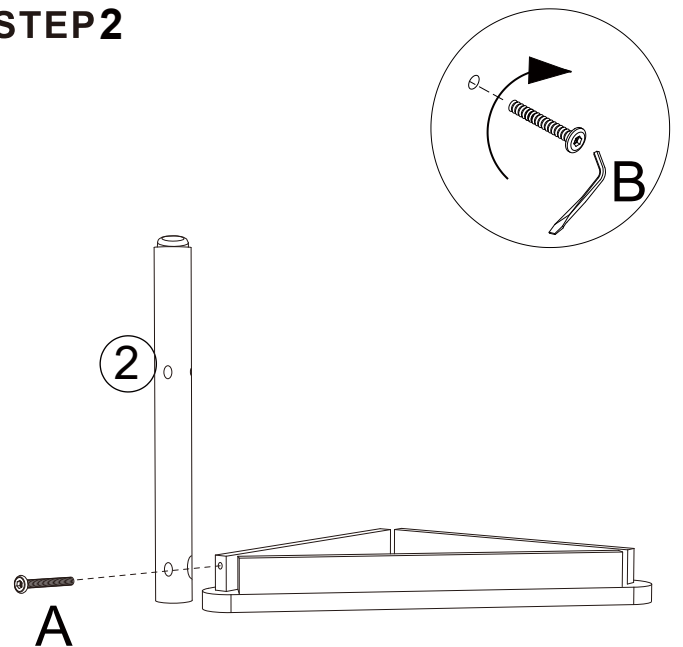


A		1 pc
---	---	------


ASSEMBLY INSTRUCTIONS



STEP 3

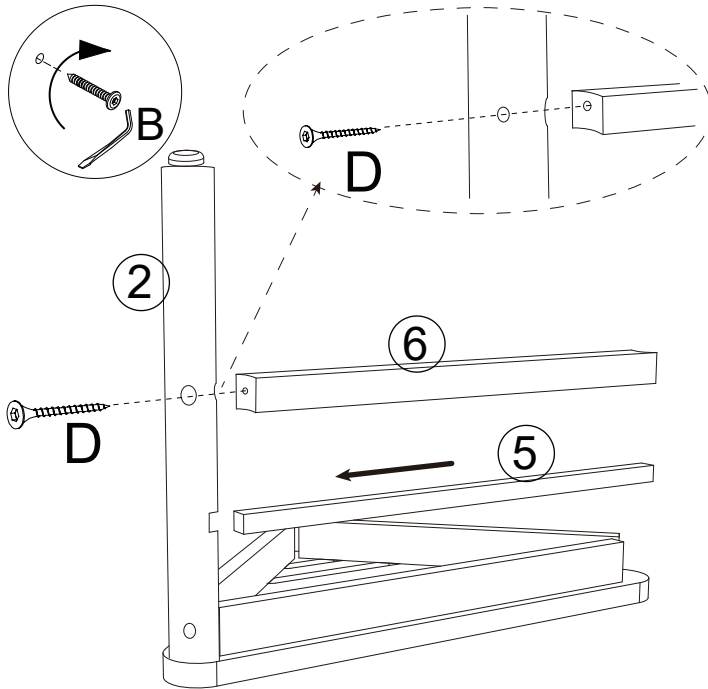


D		1 pc
---	---	------


STEP 4

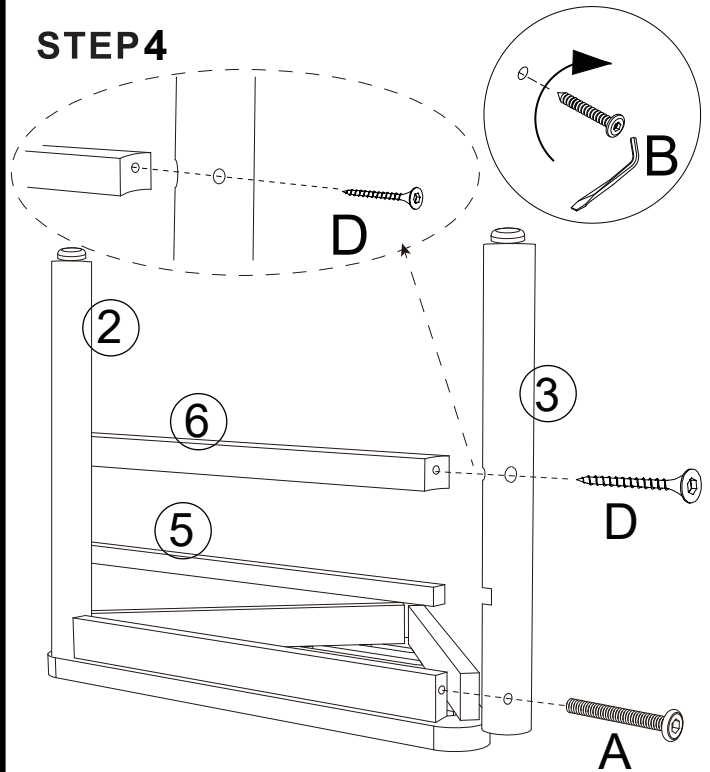


D		1 pc
A		1 pc



STEP 5

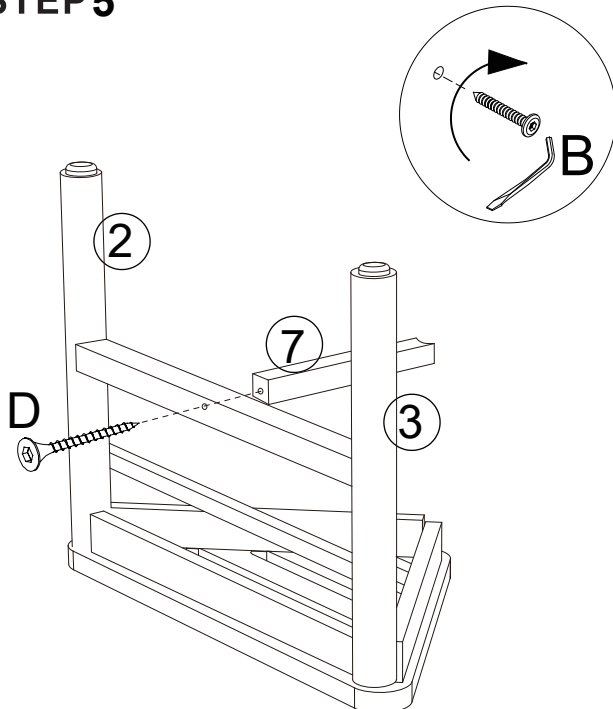

D		1 pc
---	---	------


STEP 6

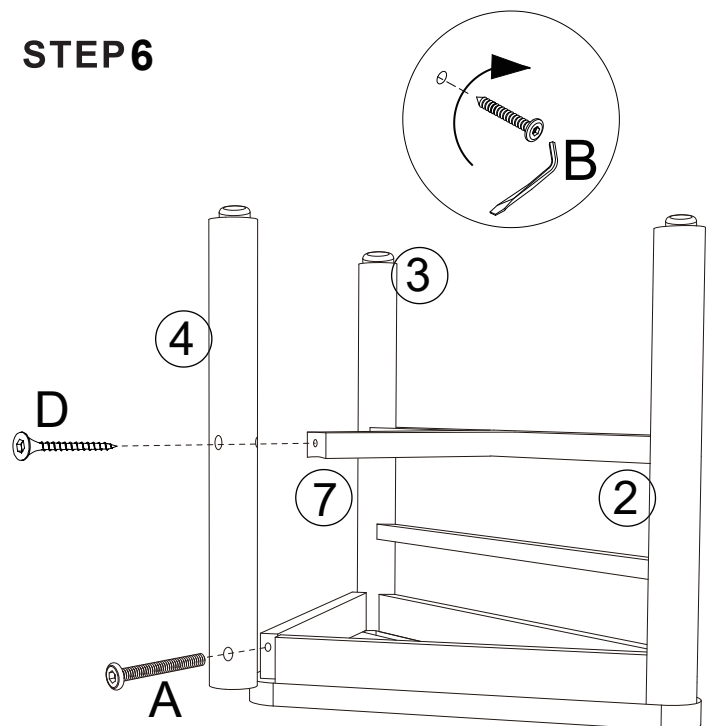


D		1 pc
A		1 pc

ASSEMBLY INSTRUCTIONS

STEP 7

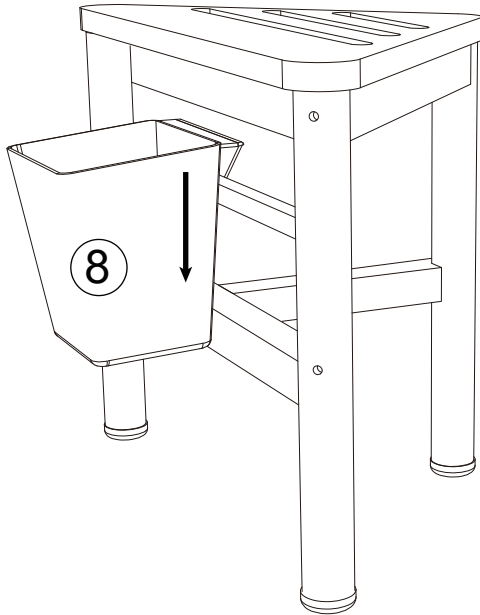

STEP 8

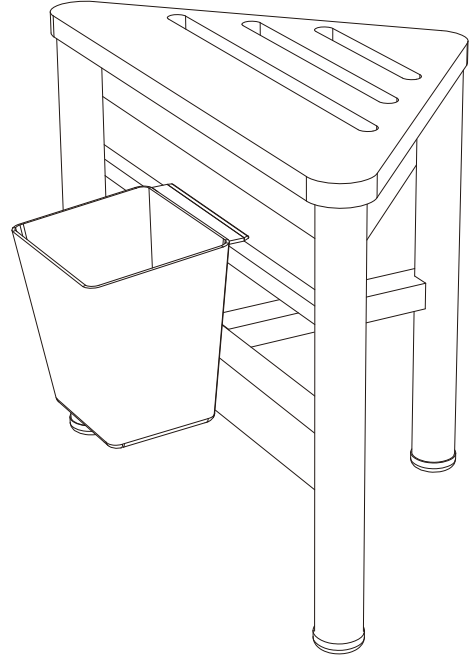

We value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us at email cs@lovitgoshop.com . Please provide your name and order no. so that we can better assist you. To help expedite the service, please have the assembly instructions available along with your order receipt.