


# ASSEMBLY INSTRUCTIONS

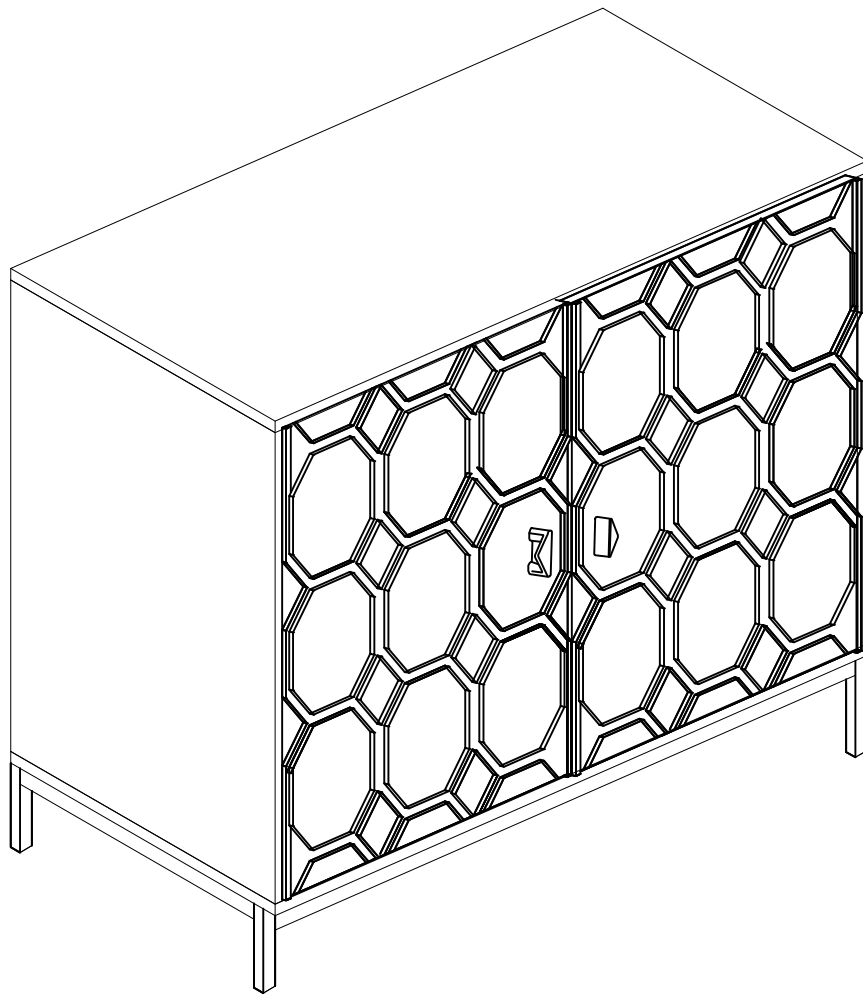

Phone number:303-747-4421







service@alipuinc.com

Web:<https://clihome.net/>






MADE IN CHINA

## ASSEMBLY INSTRUCTIONS

## Part List:

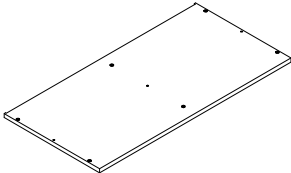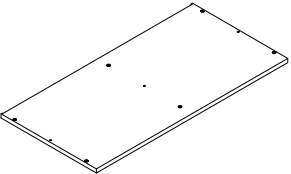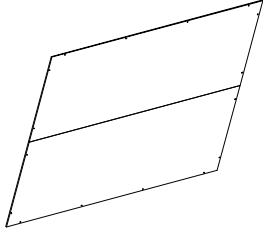ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Middle side plate		1
6	Back panel		1




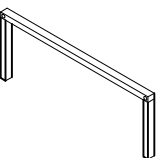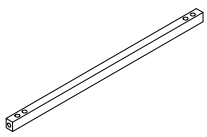





## Part List:

ITEM	DESCRIPTION	PART	QTY
7	Left door		1
8	Right door		1
9	Adjustable shelf		2
10	Leg		2
11	Leg		2








# ASSEMBLY INSTRUCTION

Page 3 of 10

## Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		12
B	Camlock		12
C	Wooden dowel	 Φ6*30mm	6
D	Bolt	 Φ1/4"*1-1/5"	10
E	Allen wrench		1
F	Bolt	 Φ1/4"*1-1/2"	4
G	Handle		2
H	Machine screw	 Φ5/32"*1 3/5"	2
I	Door fitting		4

## Hardware List:



ITEM	DESCRIPTION	PART	QTY
J	Round head screw	 Φ4*12mm	24
K	Back screw	 Φ3*12mm	16
L	Shelf support		8
M	Safety wall strap		2
N	Plastic anchor		2
O	Mounting screw	 Φ4*38mm	2
P	Washer		2

MADE IN CHINA

## ASSEMBLY INSTRUCTION

- \* Required screwdriver & mallet, not included.
- \* Before discarding packing materials, please check to make sure that all parts and hardware is present.
- \* Two people needed for assembly.
- \* Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- \* After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

### Guideline For Assembling of Cam Lock(A & B)

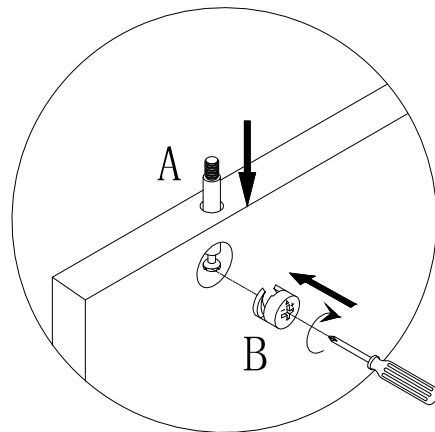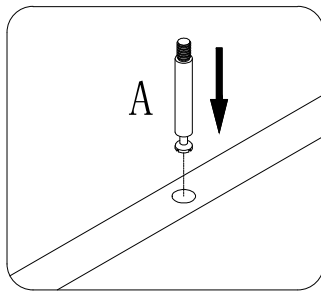




Screw camlock bolt (A) to wood part.


Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

# ASSEMBLY INSTRUCTION




## STEP 1

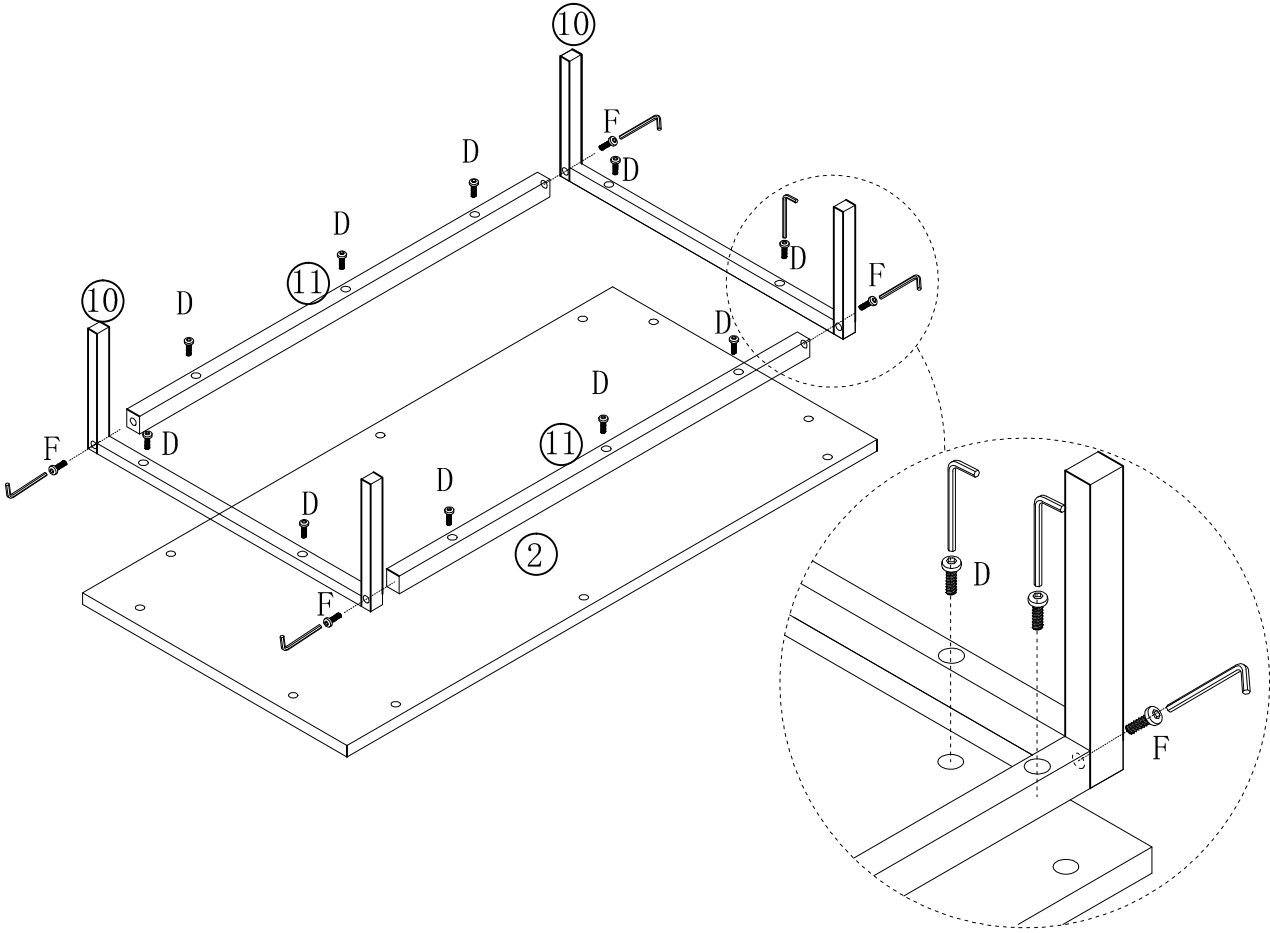
D:		10PCS
E:		1PC
F:		4PCS



ASSEMBLY INSTRUCTION



STEP 2

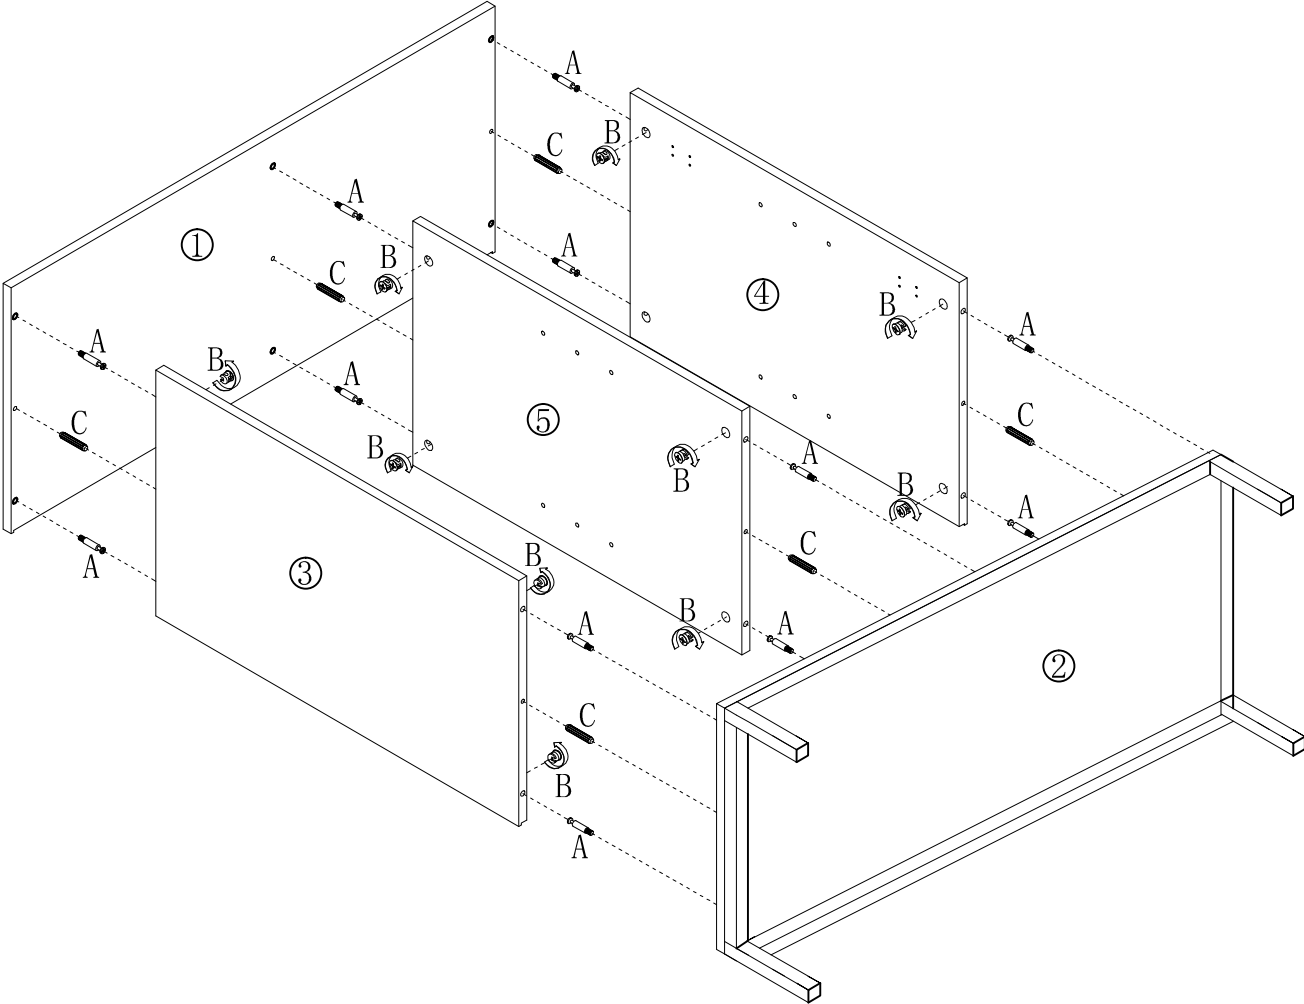
A:		12PCS
B:		12PCS
C:		6PCS







# ASSEMBLY INSTRUCTION

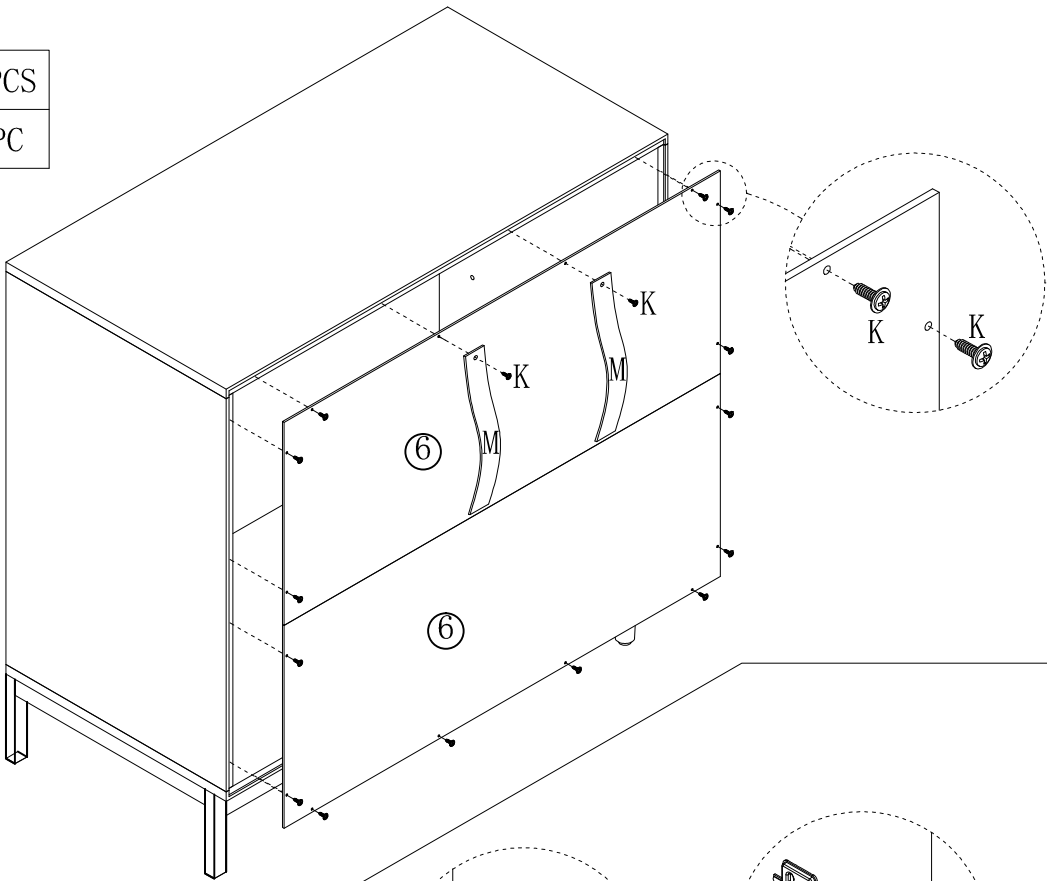
## STEP 3

K:		16PCS
M:		2PC



## STEP 4



G:		2PCS
H:		4PCS
I:		4PCS
J:		8PCS

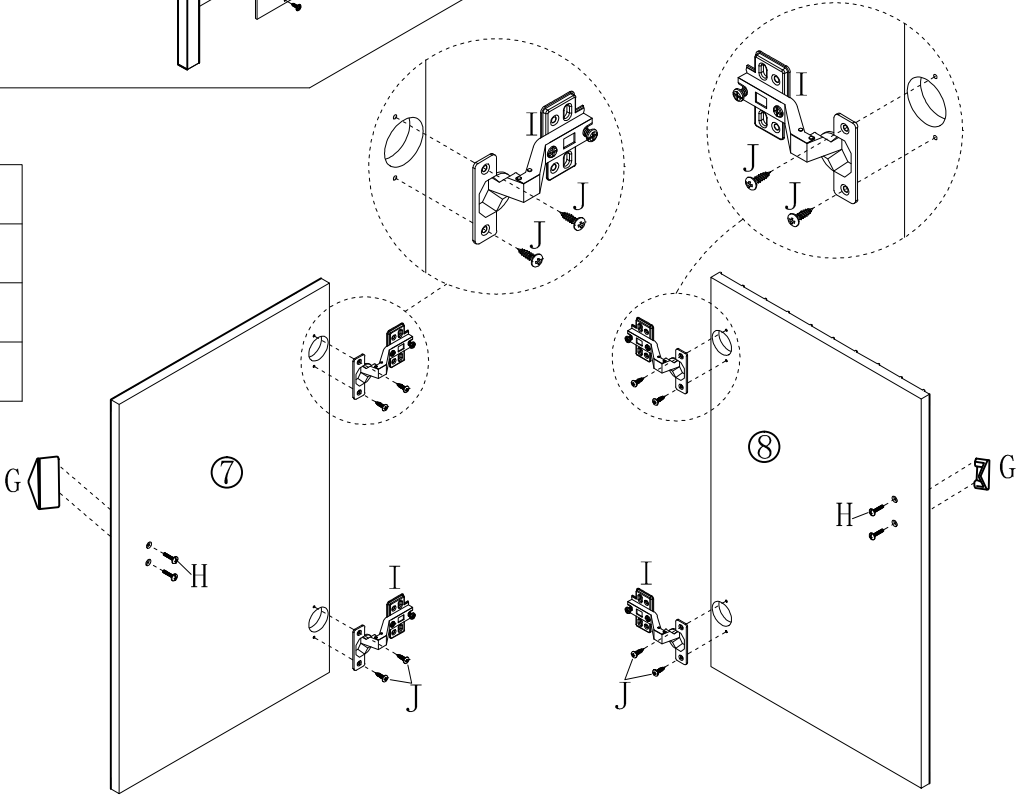


ASSEMBLY INSTRUCTION

STEP 5


J:  16PCS

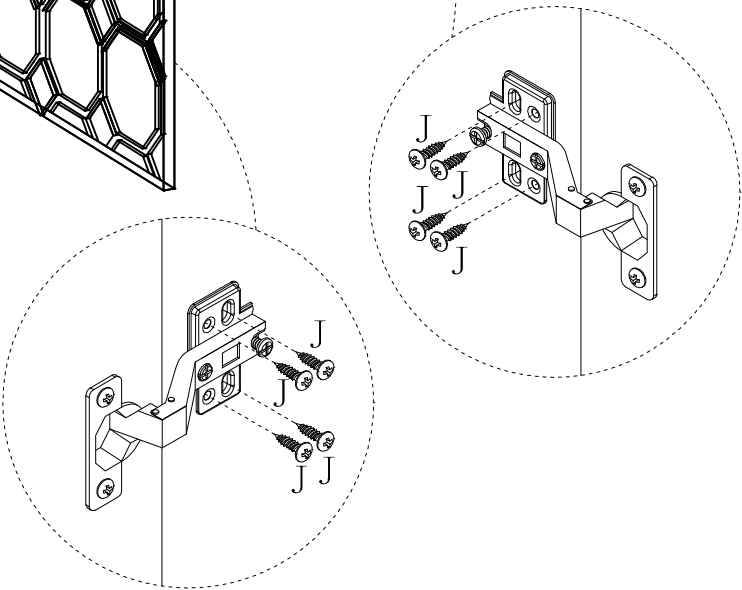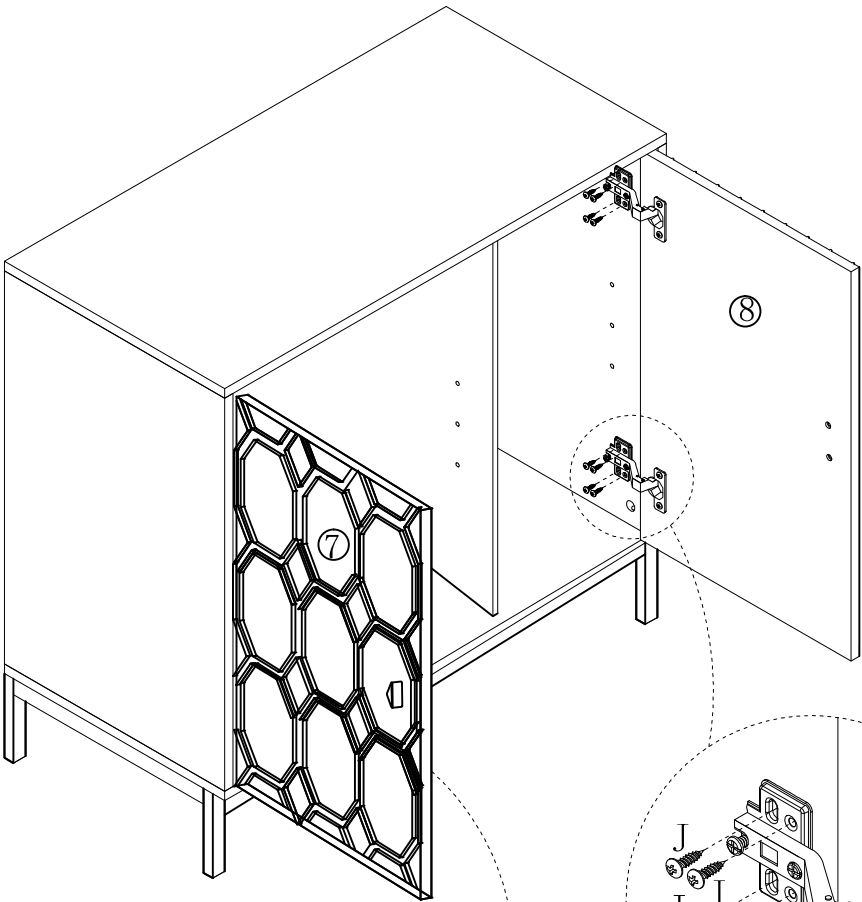


DOOR FITTING

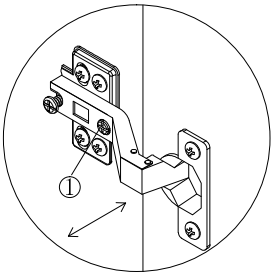

To adjust in width

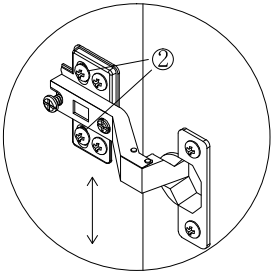


To adjust in height

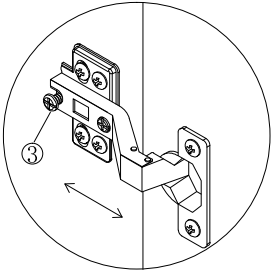


To adjust in depth






STEP 6

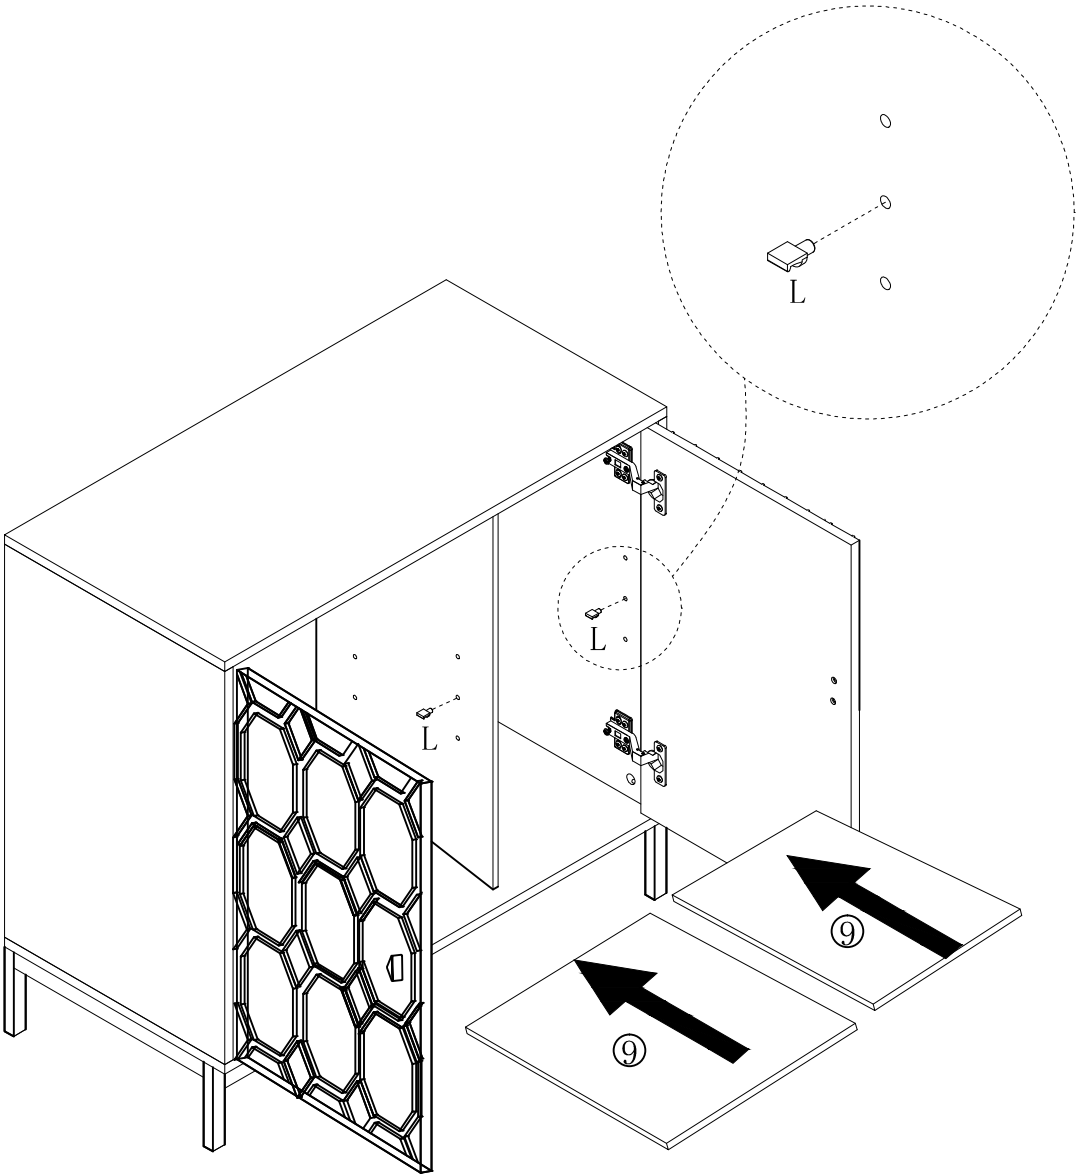L:  8PCS



# ASSEMBLY INSTRUCTION

## STEP 7

N:		2PC
O:		2PC
P:		2PC

