

# Designs2Go™

## Swivel TV Stand

By Convenience Concepts, Inc  
Style 151283/151283LO



### Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

- . Broken or Missing Hardware?
- . Need help with Assembly?


If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

**Warning!** This TV Stand is designed to accommodate most **32"** Flat/Plasma TV sets.  
Maximum weight capacity is **80** lbs.

Hardware List


Part List

A

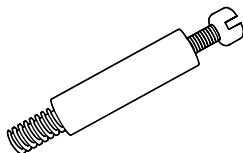


Cam bolt (16pcs)

B

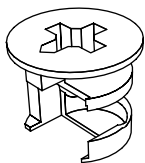


Cam lock (16pcs)

C

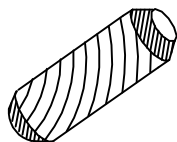


Wood dowel (16pcs)


D

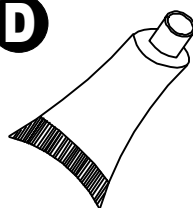


Glue (1pc)

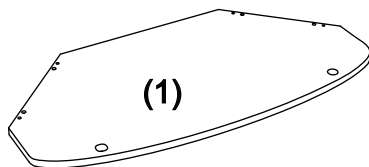


Top Panel (1pc)

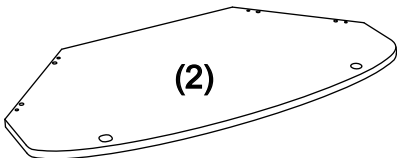


Middle Panel (1pc)

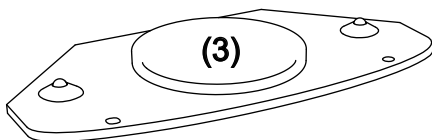


Bottom Panel (1pc)

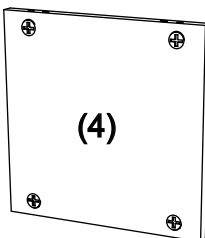


Large Divider Panel (2pcs)

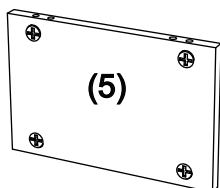


Small Divider Panel (2pcs)

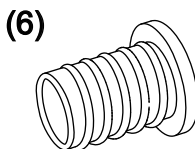

End Cap (4pcs)

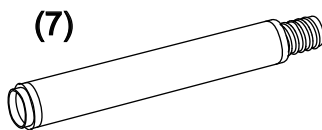


Small Metal Pole (2pcs)

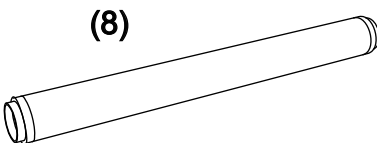


Long Metal Pole (2pcs)


Assembling the unit with camlocks and wood dowels.

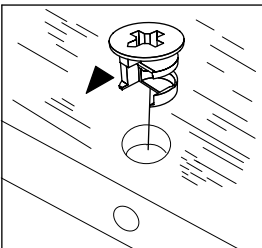


Insert camlock, camlock must face bolt hole

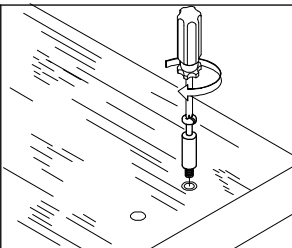


Gently screw cam dowel into the threaded anchor

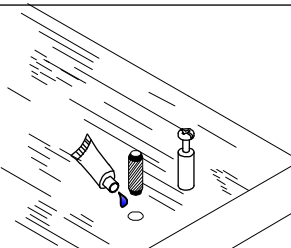

Lightly glue one end of wood dowel and tap into hole.

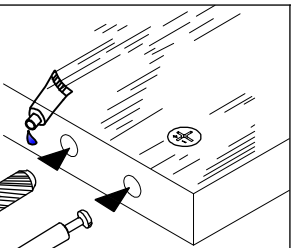


Lightly glue dowel and connect to second panel by inserting dowels into holes

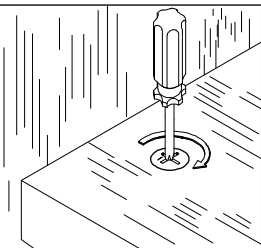

Gently screw the cam clockwise into locked position. Do not overtighten.


## step1

1. Attach Cambolts (A) and Wood dowels (C) to Bottom Panel (3) as shown.
2. Thread End Caps (6) through the holes on Bottom Panel (3) and gently screw Long Metal Poles (8) into End Caps (6) using care not to over tighten.

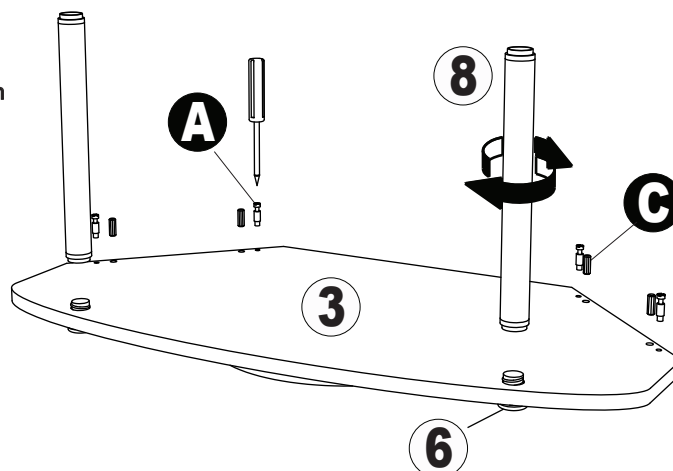


## step2

1. Connect Large Divider Panel (4) to Bottom Panel (3) . Gently tighten camlocks on bottom of Panel (4) until snug.

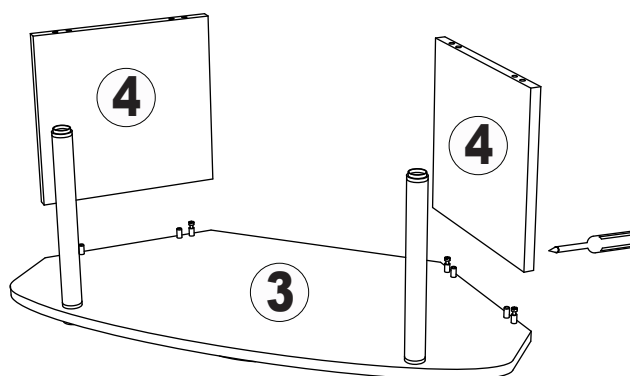


## step3

- Attach Cambolts (A) and Wood dowels (C) to the bottom of Middle Panel (2) as shown.

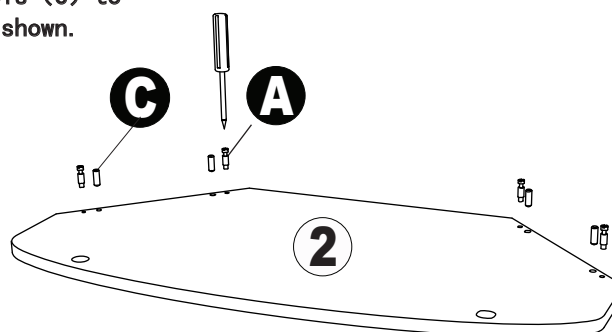


## step4

1. Turn over and connect Middle Panel (2) to unit.  
Gently tighten camlocks on top of Panel (4).
2. Attach Cambolts (A) and Wooden dowels (C) to the top of Middle Panel (2).

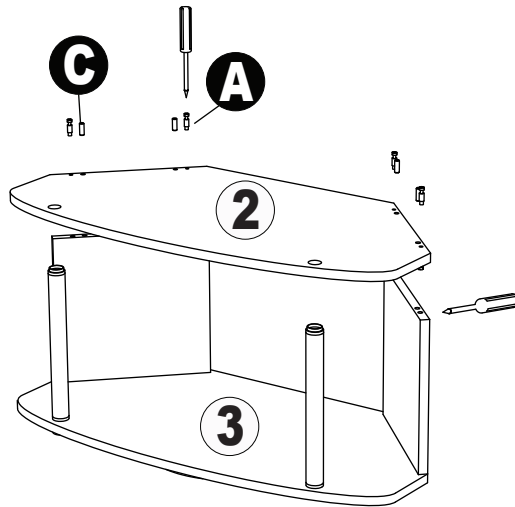


## step5

1. Connect Small Divider Panels (5) to Middle Panel (2) .  
Gently tighten camlocks on bottom of Panel (5).
2. Gently screw Small Metal Poles (7) into unit.

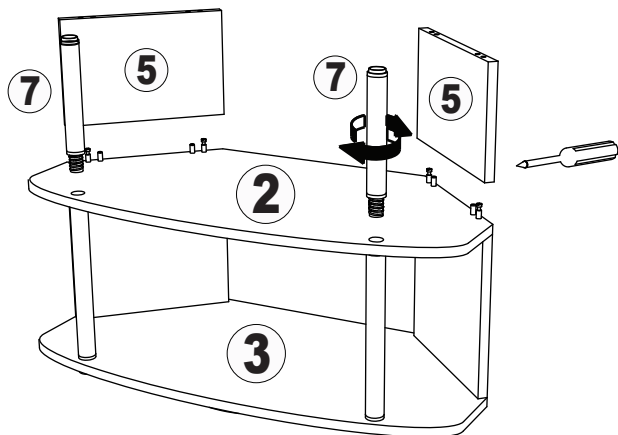

## step6


- Attach Cambolt (A) and Wood dowels (C) to the bottom of Top Panel (1) as shown.

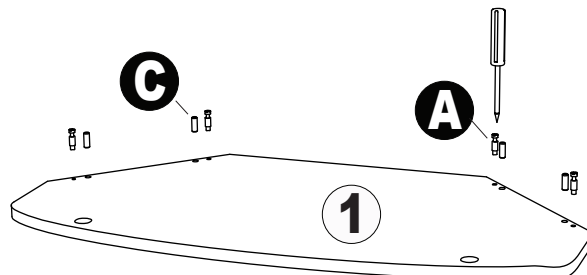

\*Lay flat on carpet or other soft surface to prevent scratches.


## step7

Connect Top Panel (1) with flat surface facing up to unit.  
Gently tighten camlocks on top of panel (5).

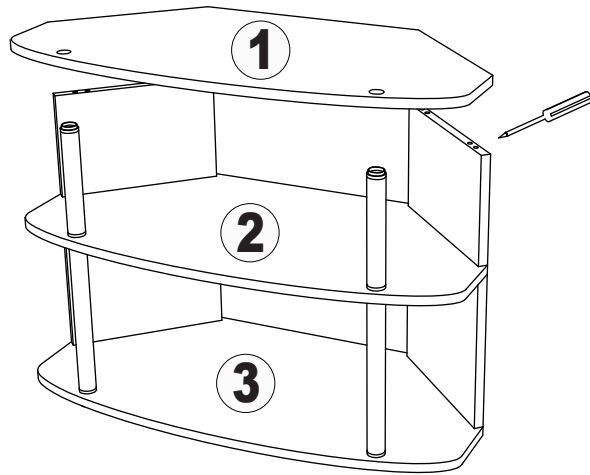

## step8

Gently screw End Caps (6) into unit.

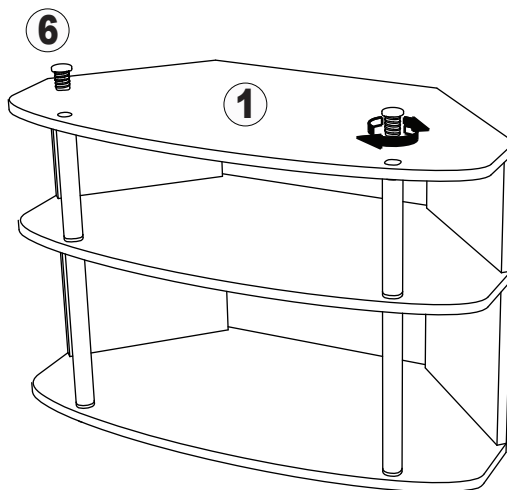

## step9

Enjoy your new TV Stand.

