


ASSEMBLY INSTRUCTIONS

WF 302058/ WF 302059/ WF 302060

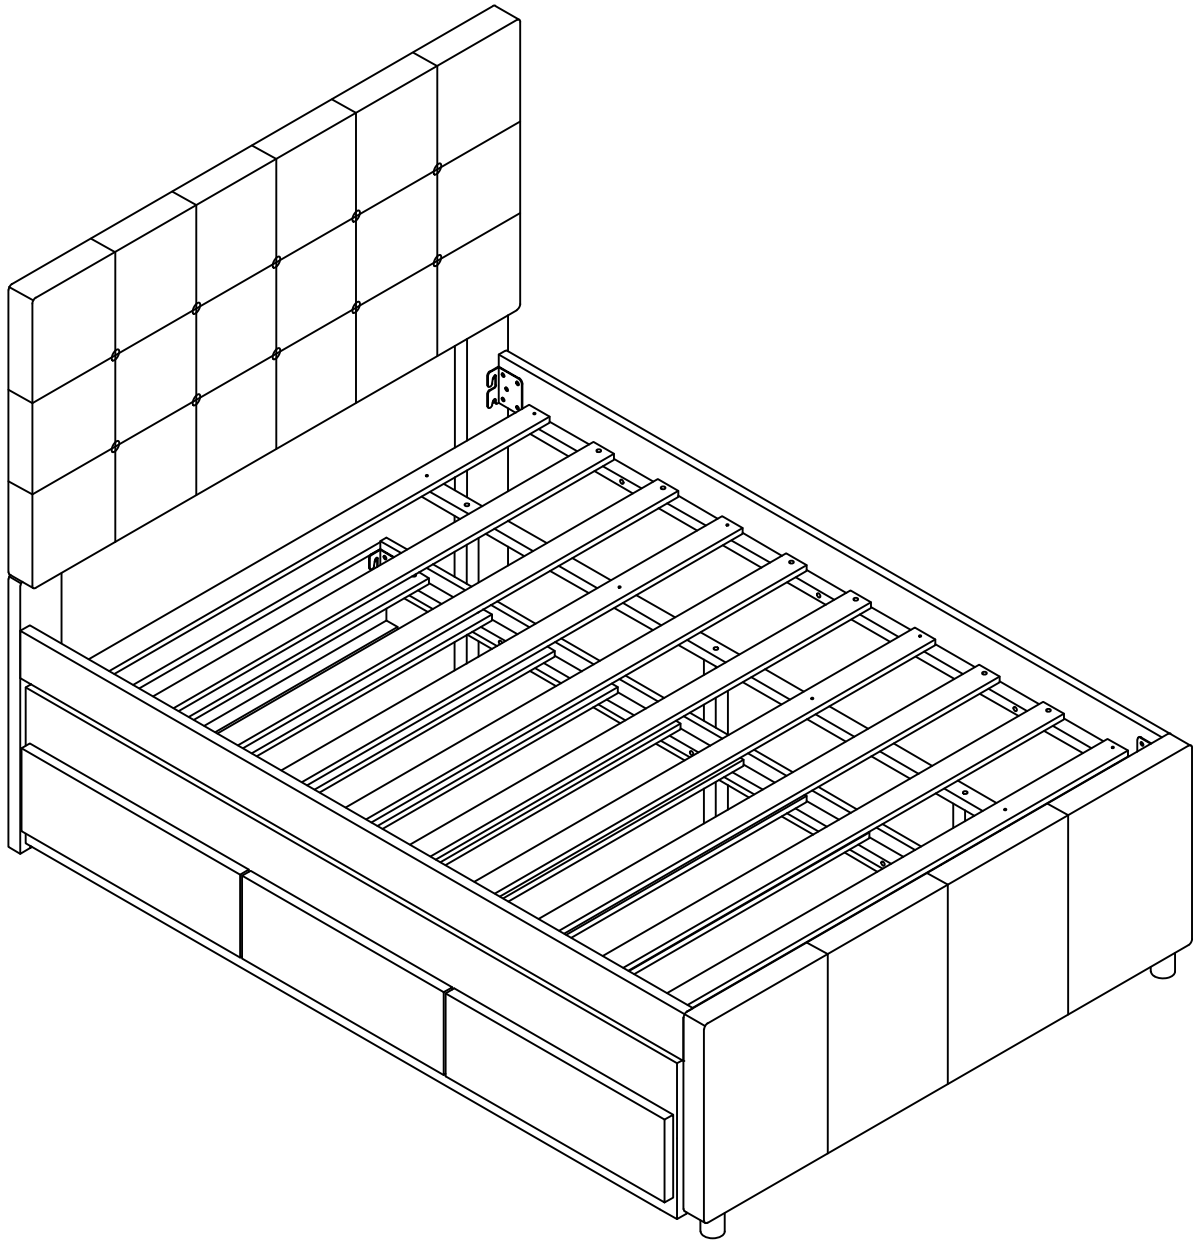

IMPORTANT NOTE

****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED**

**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**




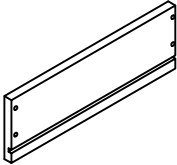
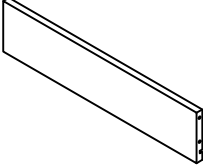


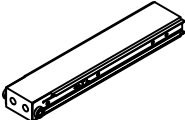
****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

If you have any questions, please feel free to contact us.
Email: service@qualfurn.net









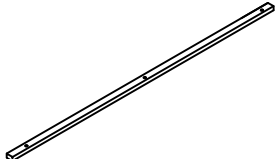

ASSEMBLY INSTRUCTIONS

WF 302058/ WF 302059/WF 302060

PART LIST BOX 1: WF 302058

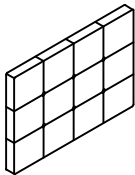1		2		3	
	Headboard (1 pcs)		Left Headboard Leg (1 pcs)		Right Headboard Leg (1 pcs)
4		5		6	
	Side Pull Box (6 pcs)		Back Panel Pull Box (3 pcs)		Stand in Pull Box (6 pcs)
7		8			
	Pull Box Bottom Board (3 pcs)		Wheel Board (2 pcs)		






PART LIST BOX 3: WF 302060

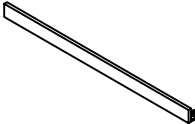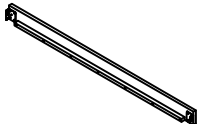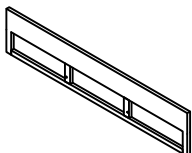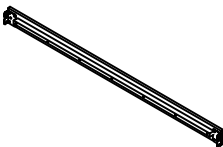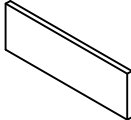13		14		15	
	Left Lower Rail (1 pc)		Right Lower Rail (1pc)		Front Panel Trundle (1 pc)
16		17		18	
	Back Panel Trundle (1 pc)		Pull Box Bottom Board (3pcs)		Side Pull Box (1 pc)
19		20		21	
	Leg (2 pcs)		(m59x42mmx66mm) Wheels (4 pcs)		Center Rail (1 pc)
22					
	Slat Support With Leveler (3 pcs)				












ASSEMBLY INSTRUCTIONS

WF 302058/ WF 302059/WF 302060

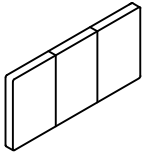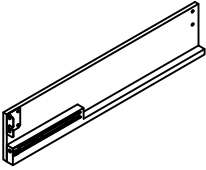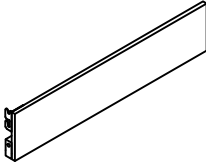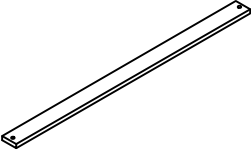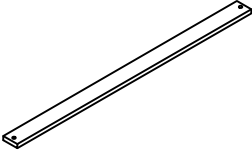
PART LIST BOX 2: WF 302059

<p>9</p>  <p>Footboard (1 pcs)</p>	<p>10</p>  <p>Left Trundle End Panel (1 pc)</p>	<p>11</p>  <p>Right Trundle End Panel (1 pc)</p>
<p>12</p>  <p>Roll Slat (10 pcs) 985*60*15</p>	<p>23</p>  <p>Roll Slat (10 pcs) 1365*60*15</p>	

HARDWARE LIST IN WF 302060


<p>A</p>  <p>(Ø 5/16 "X20mm) Short Bolt (16pcs)</p>	<p>B</p>  <p>(m4x30mm-RBW) Flat Head Screw (56 pcs)</p>	<p>C</p>  <p>(Ø 5/16 "X45mm) Long Bolt (8 pcs)</p>
<p>D</p>  <p>(Ø 5/16 "-RBW) Flat Washer (30 pcs)</p>	<p>E</p>  <p>(Ø 5/16 "-RBW) Spring Washer (30 pcs)</p>	<p>F</p>  <p>(M4x75mm x32mm) Allen Wrench (1 pc)</p>
<p>G</p>  <p>(m4x20mm-RBW) Flat Head Screw (16 pcs)</p>	<p>H</p>  <p>(m4x38mm-RBW) Flat Head Screw (24 pcs)</p>	<p>I</p>  <p>(Ø 10 X 40mm) Wood dowel (4 pcs)</p>
<p>J</p>  <p>(Ø 5/16 "X38mm) Long Bolt (6 pcs)</p>	<p>K</p>  <p>(Ø10x10mm x10mm) Plastic Button (24 pcs)</p>	



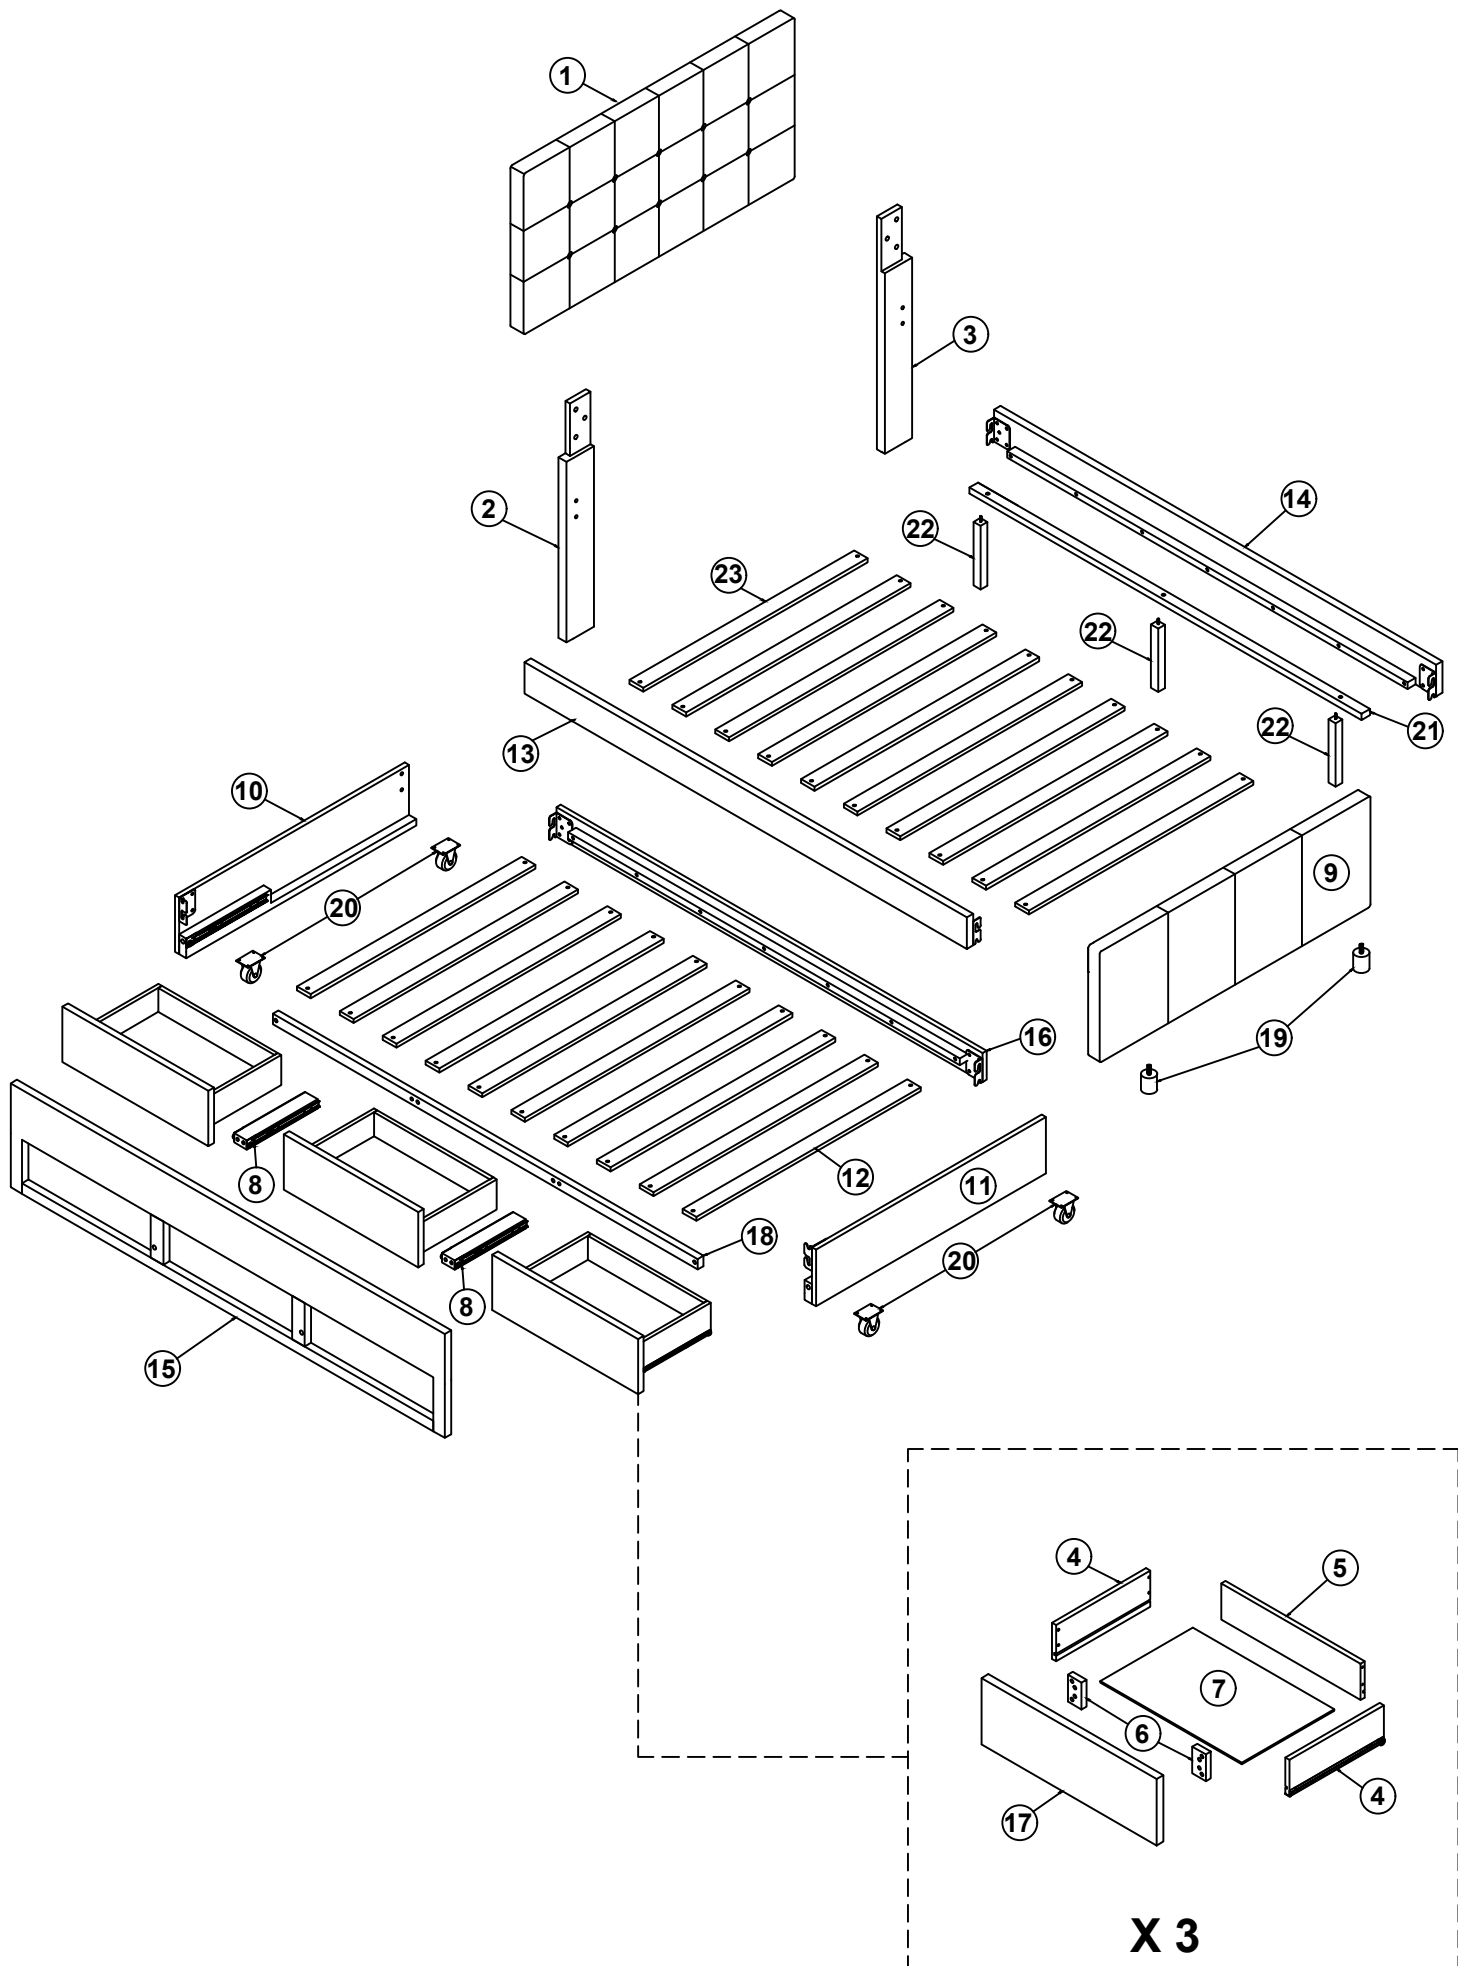

Exploded View

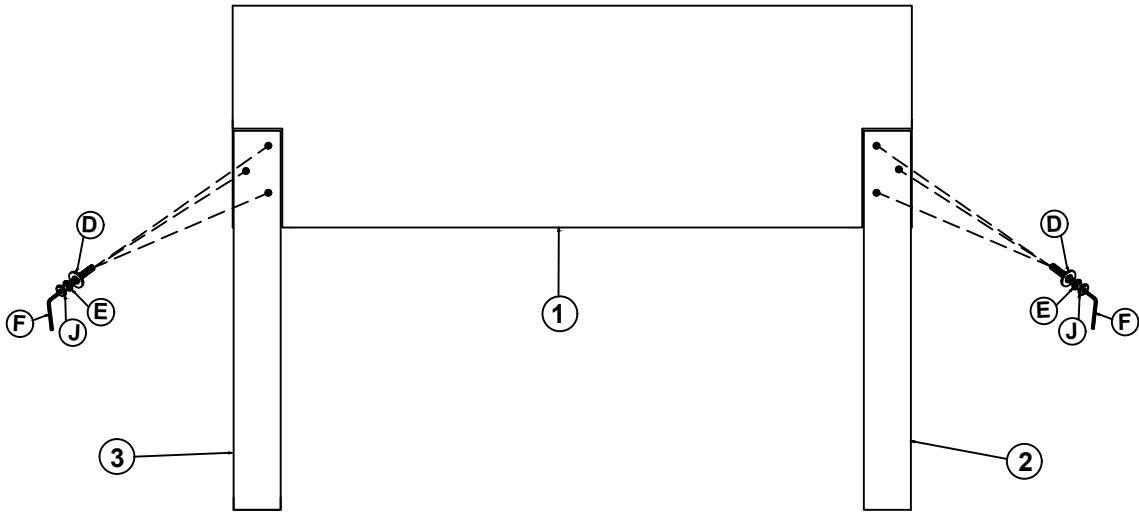


ASSEMBLY INSTRUCTIONS

STEP 1




J	Bolt (Ø 5/16 "X38mm)		6pcs	D	Flat Washer (Ø 5/16 "-RBW)		6pcs
E	Spring Washer (Ø 5/16 "-RBW)		6pcs	F	Allen Wrench (M4x75mm x32mm)		1pc



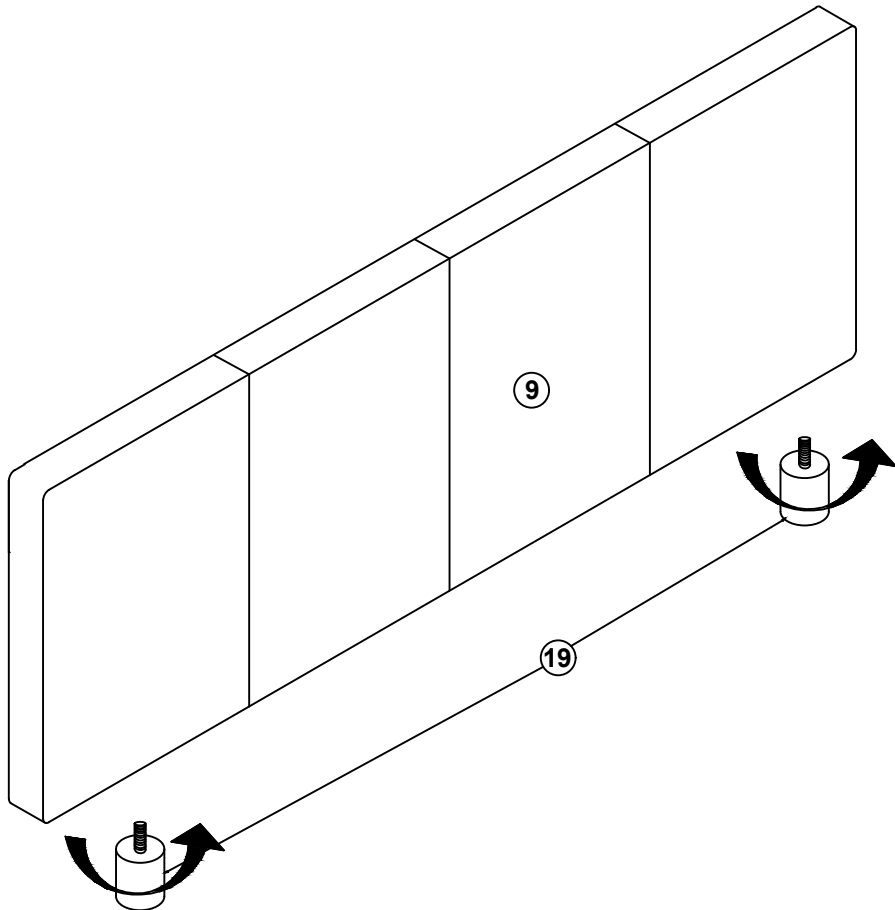

STEP 2

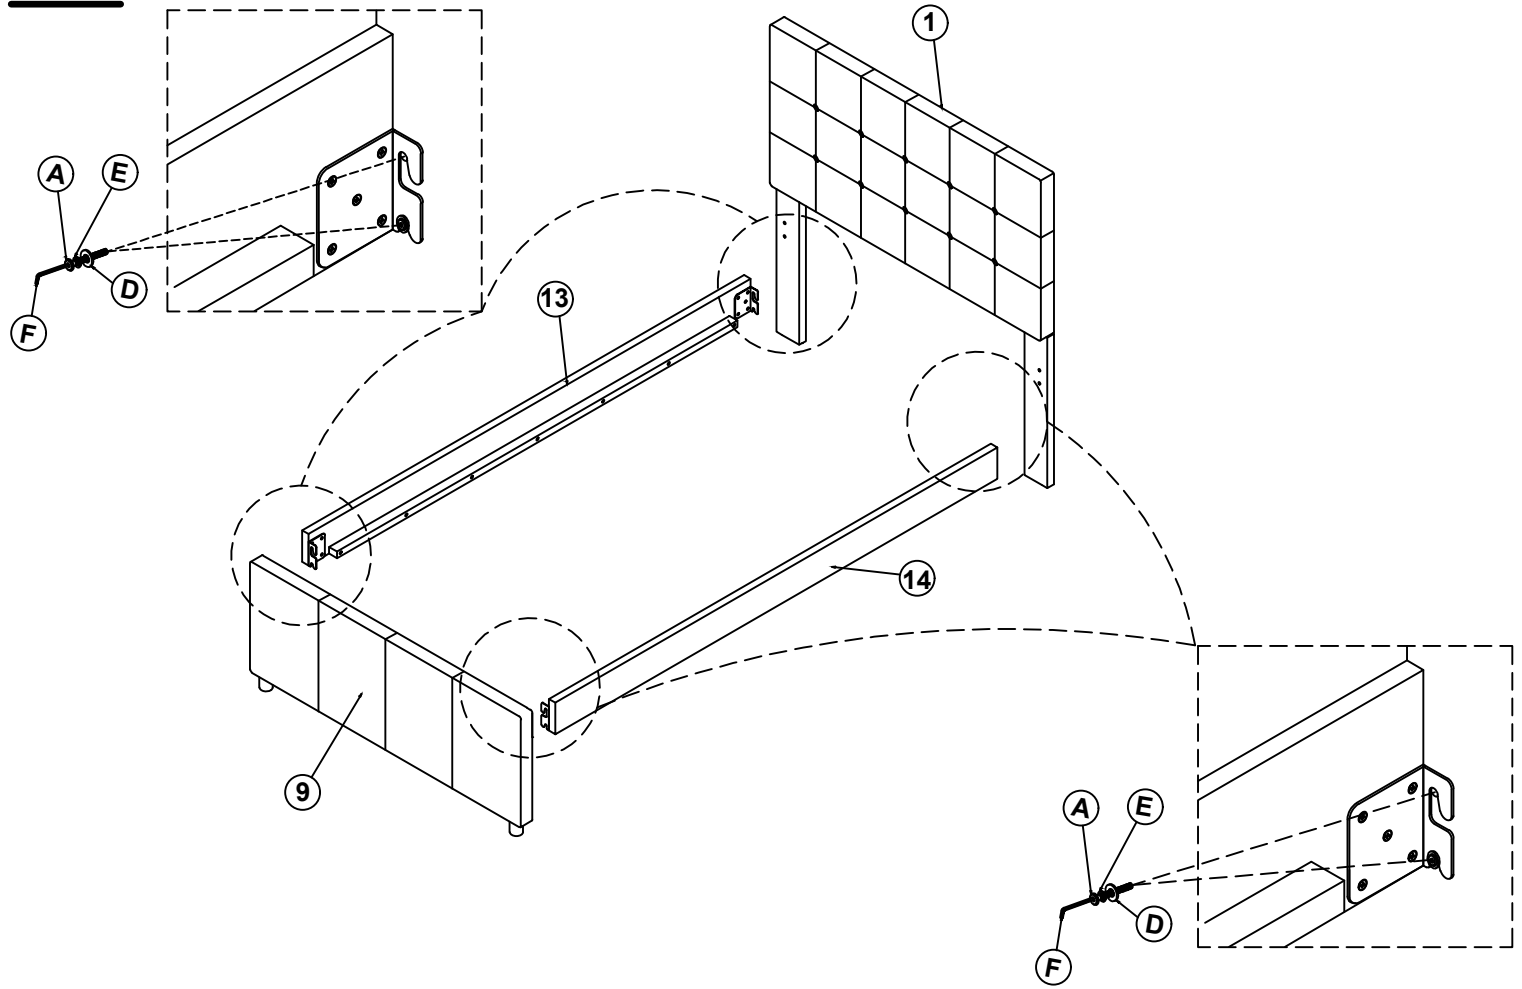




ASSEMBLY INSTRUCTIONS

STEP 3




A	Bolt (Ø 5/16 "X20mm)		8pcs	D	Flat Washer (Ø 5/16 "-RBW)		8pcs
E	Spring Washer (Ø 5/16 "-RBW)		8pcs	F	Allen Wrench (M4x75mm x32mm)		1pc

STEP 4

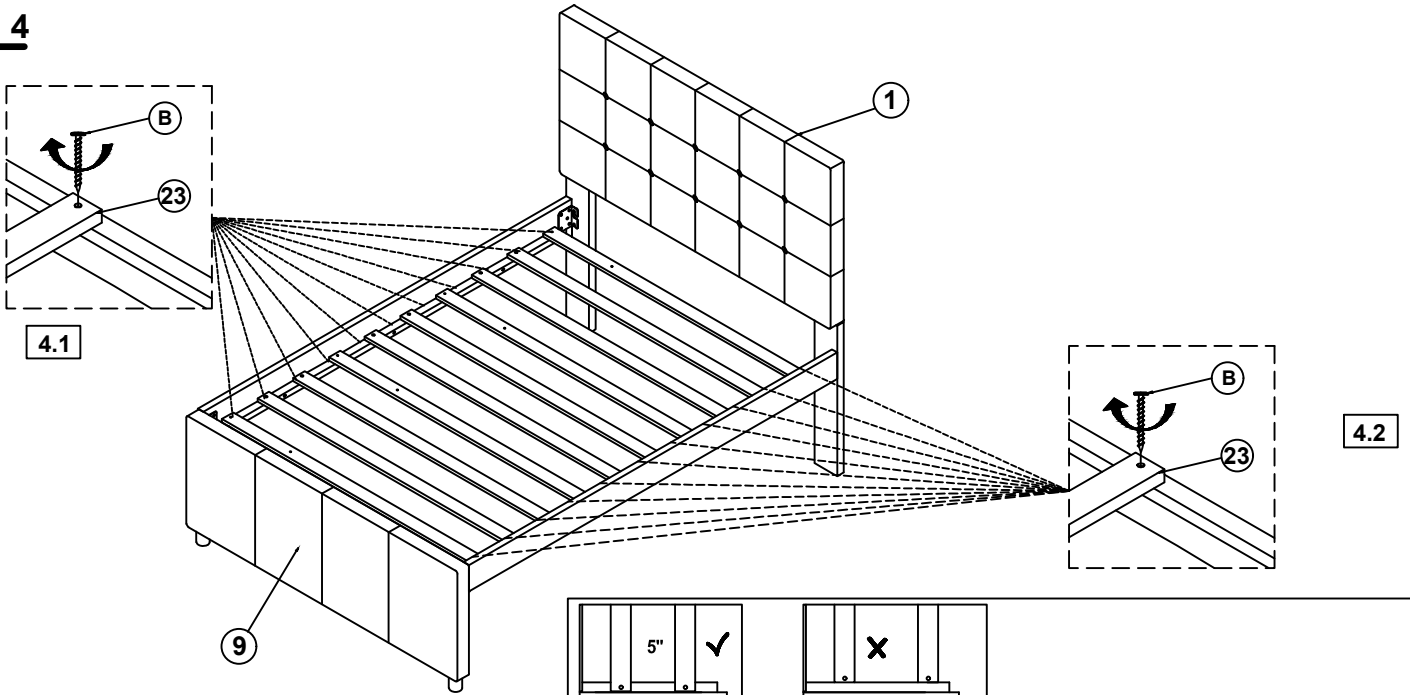


NOTE: Do not lock the screws of the trundle slats to the utermost edge the trundle slats,you need to leave a certain space at the edges, otherwise it will cause the board to break.


B	Flat Head Screw (m4x30mm-RBW)		20pcs
---	--	---	-------


ASSEMBLY INSTRUCTIONS

STEP 5

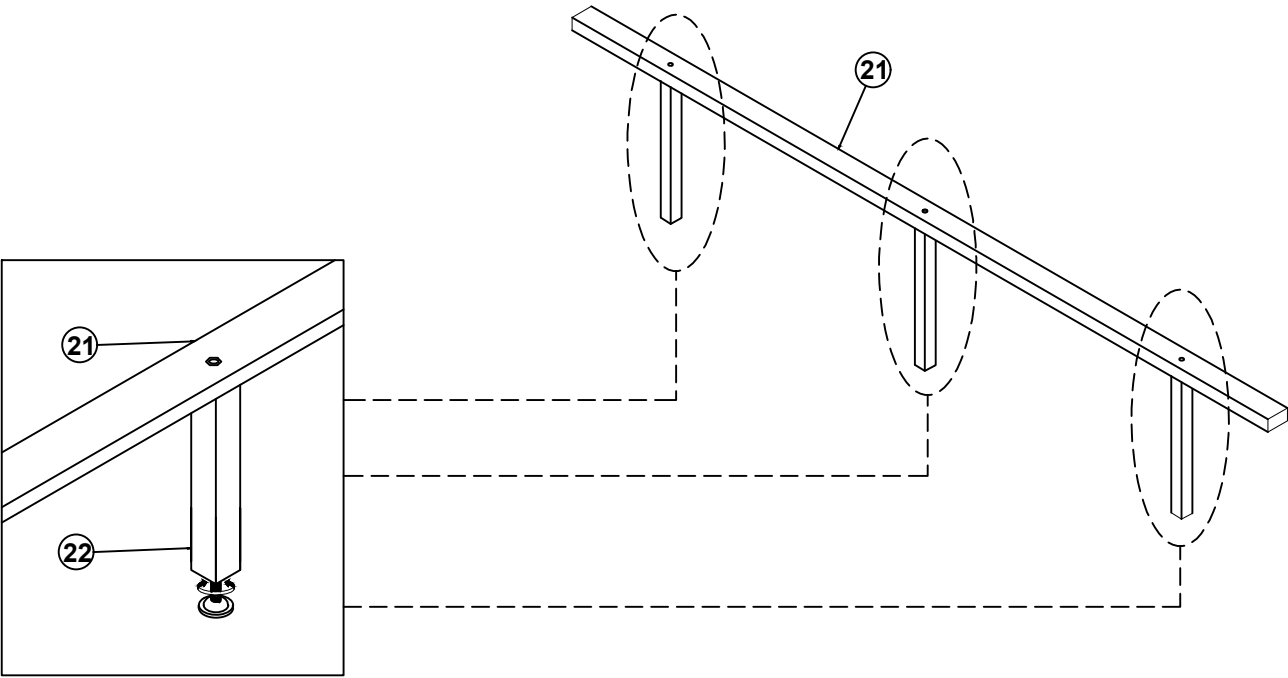

STEP 6

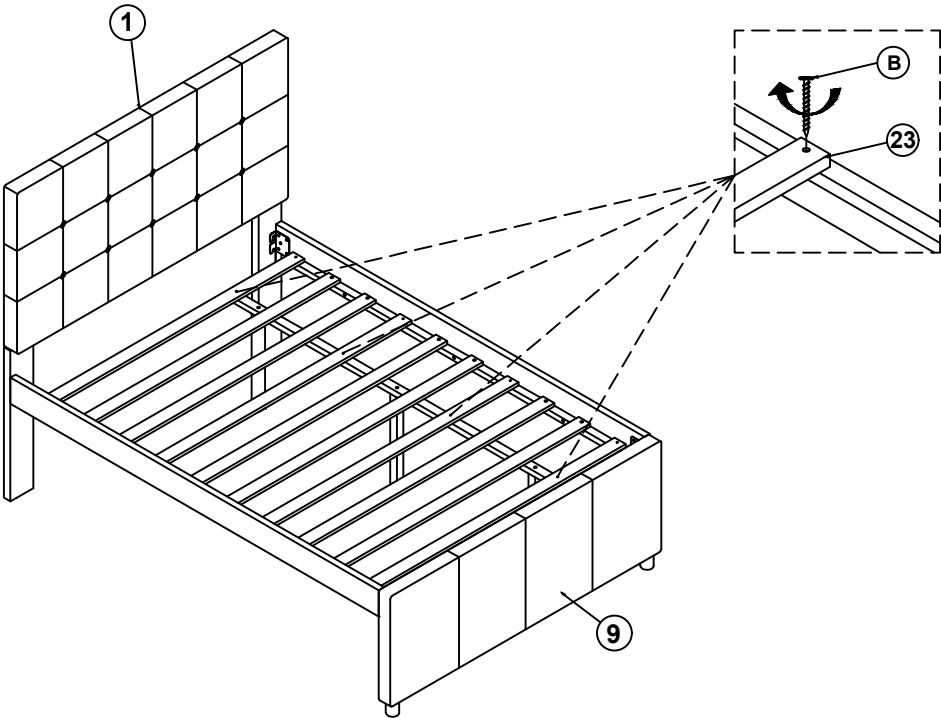



B	Flat Head Screw (m4x30mm-RBW)		4pcs
----------	--	---	-------------

ASSEMBLY INSTRUCTIONS

STEP 7


X 3

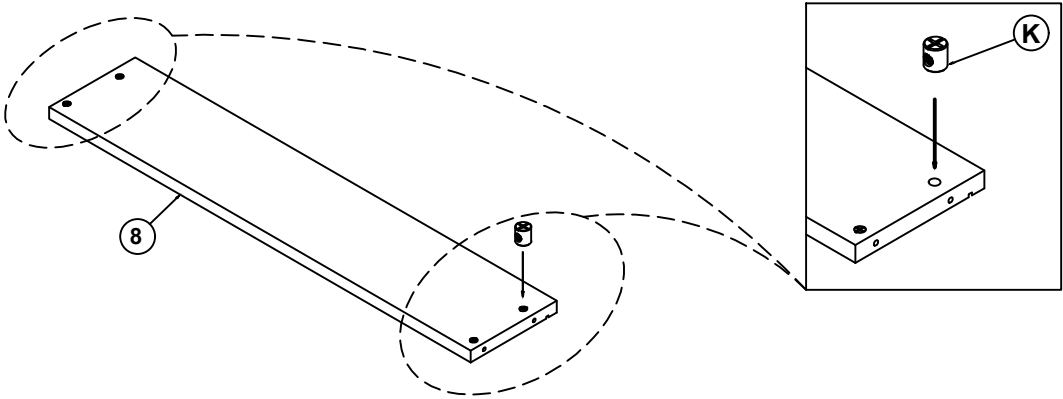

K	Plastic Button (Ø10x10mmx10mm)		12pcs
---	------------------------------------	---	-------

STEP 8


X 3

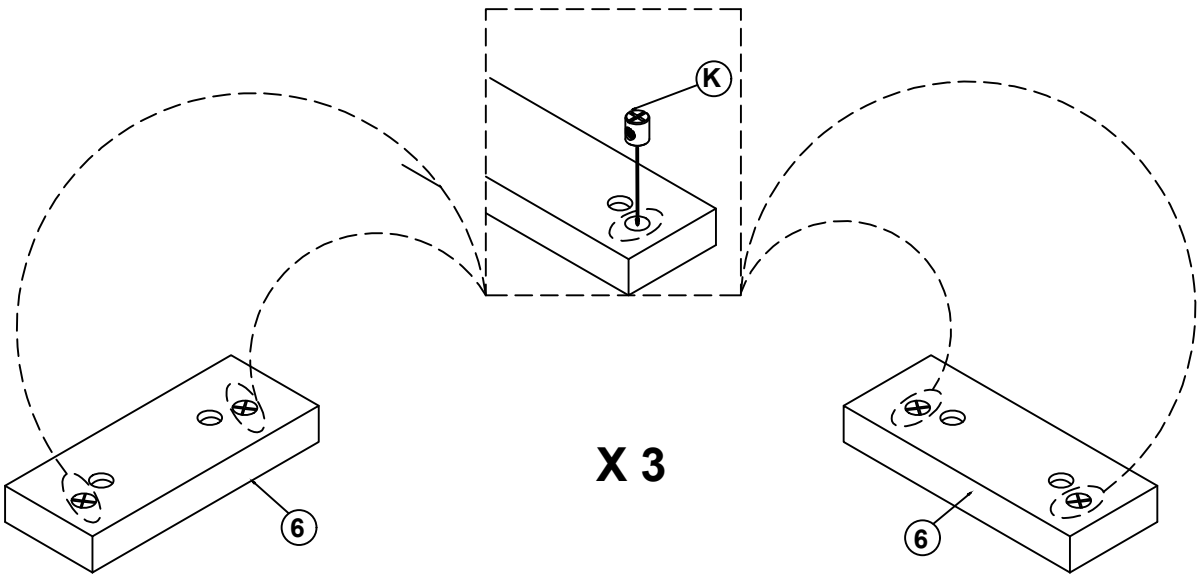


K	Plastic Button (Ø10x10mmx10mm)		12pcs
---	------------------------------------	---	-------

STEP 9


X 3

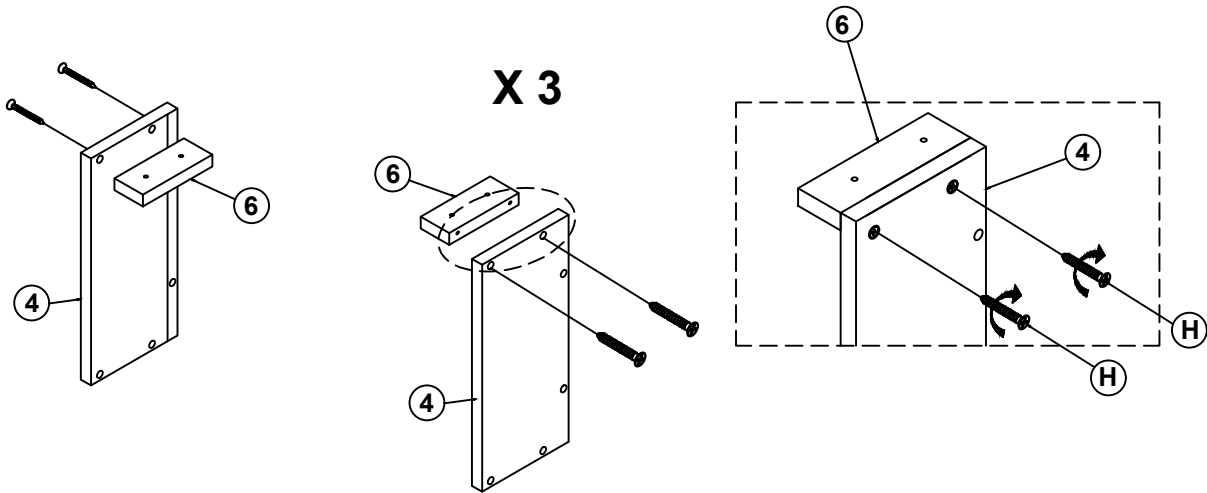


H	Flat Head Screw (m4x38mm-RBW)		12pcs
---	-----------------------------------	---	-------

ASSEMBLY INSTRUCTIONS

STEP 10

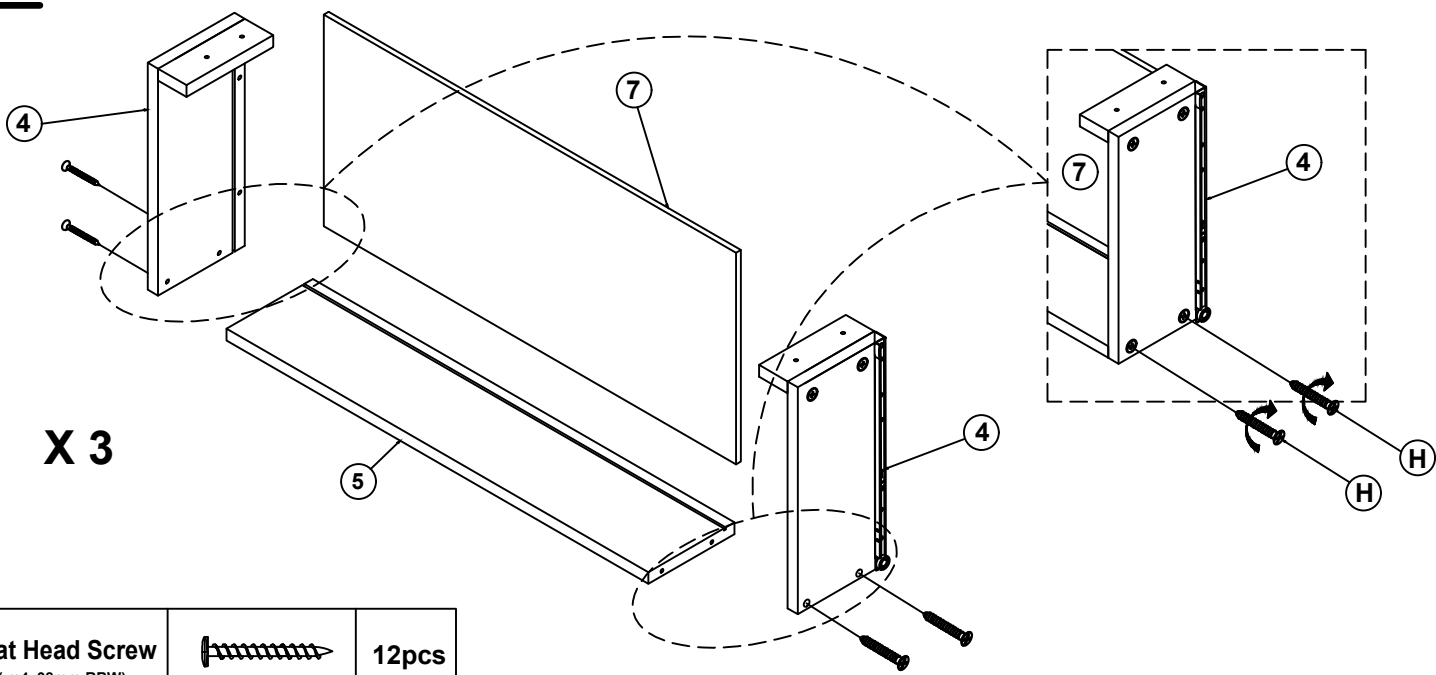


STEP 11

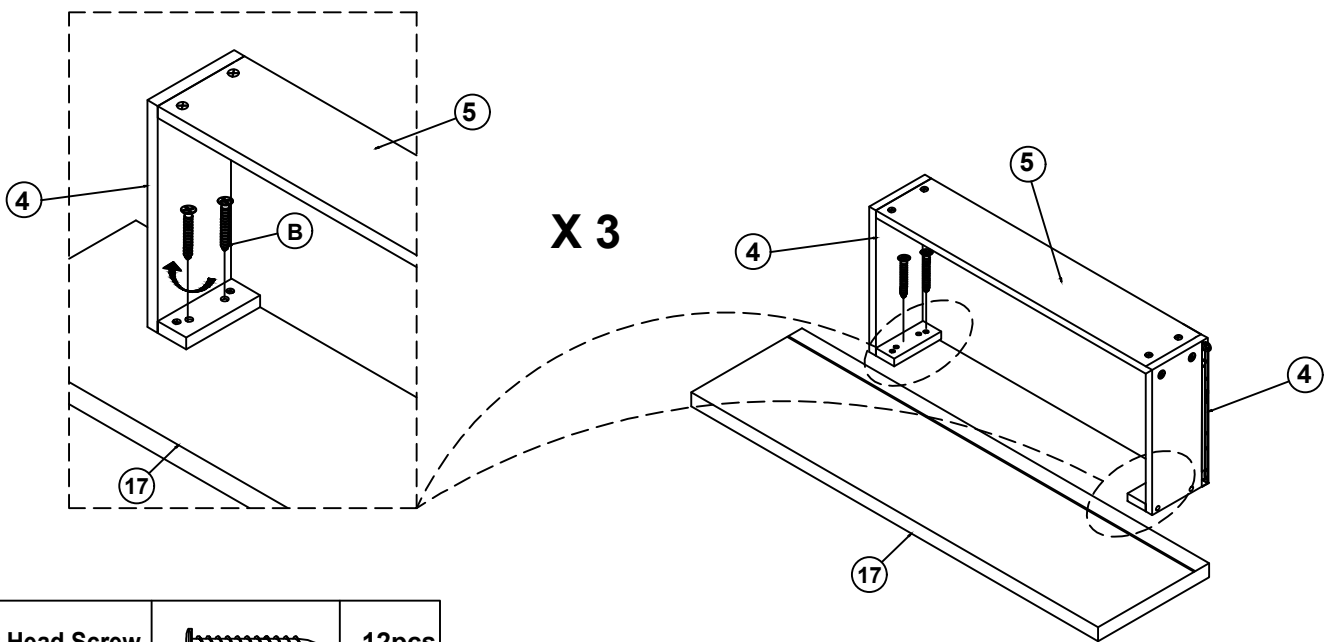


STEP 12



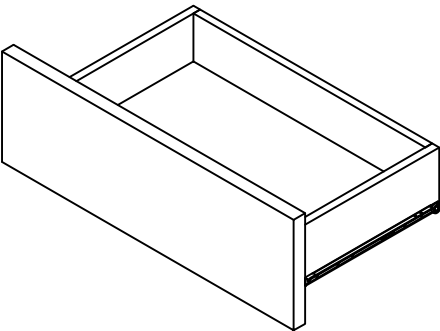

COMPLETE PULL BOX

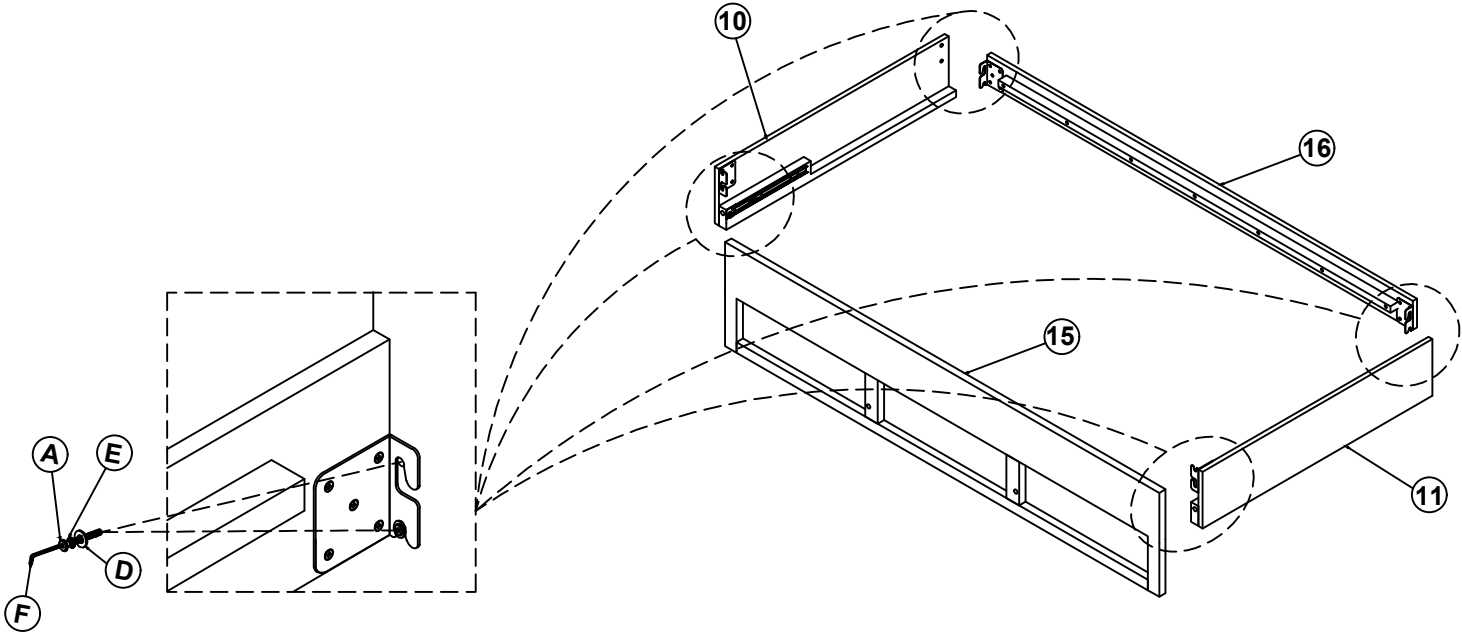


ASSEMBLY INSTRUCTIONS






STEP 13

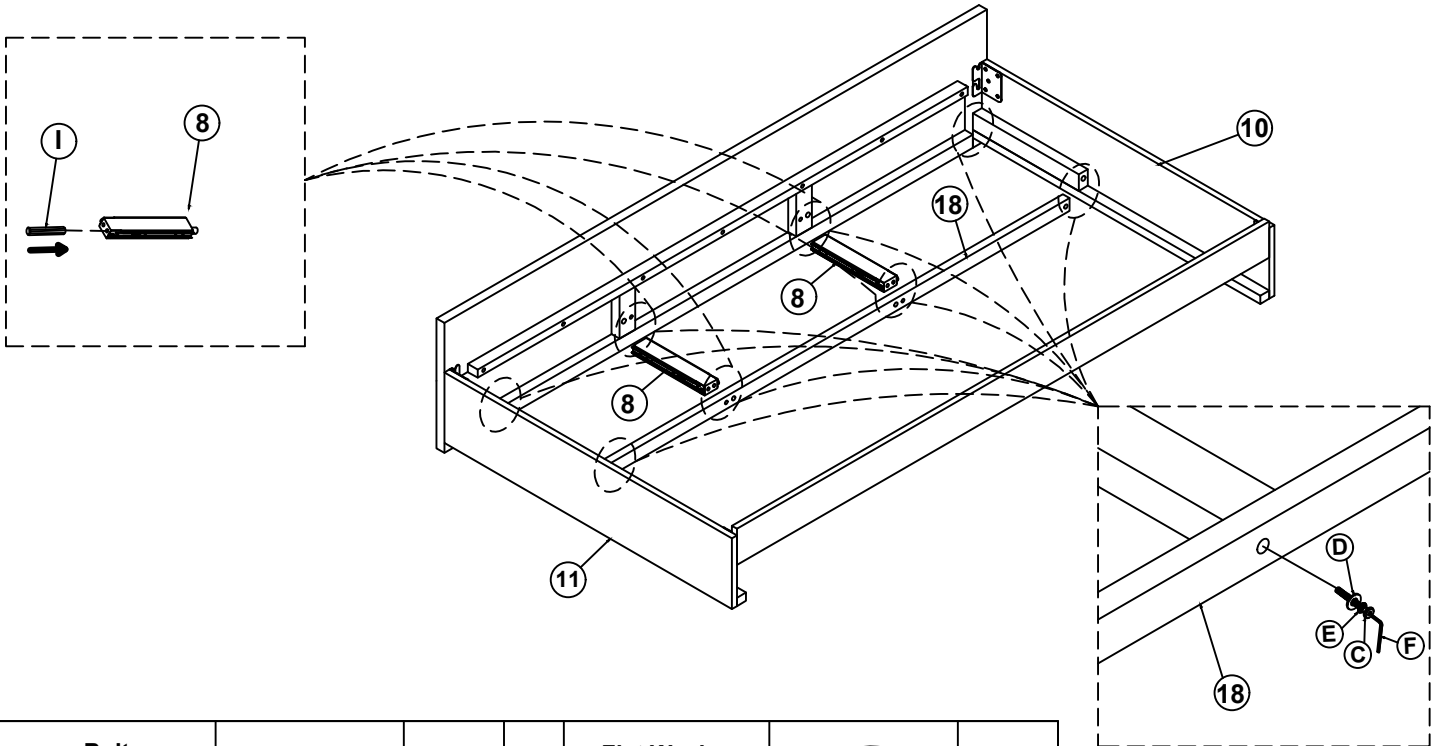

A	Bolt (Ø 5/16 "X20mm)		8pcs	D	Flat Washer (Ø 5/16 "-RBW)		8pcs
E	Spring Washer (Ø 5/16 "-RBW)		8pcs	F	Allen Wrench (M4x75mm x32mm)		1pc


STEP 14



C	Bolt (Ø 5/16 "X45mm)		8pcs	D	Flat Washer (Ø 5/16 "-RBW)		8pcs
E	Spring Washer (Ø 5/16 "-RBW)		8pcs	F	Allen Wrench (M4x75mm x32mm)		1pc
I	Wood dowel (Ø 10 X 40mm)		4pcs				



ASSEMBLY INSTRUCTIONS

STEP 15

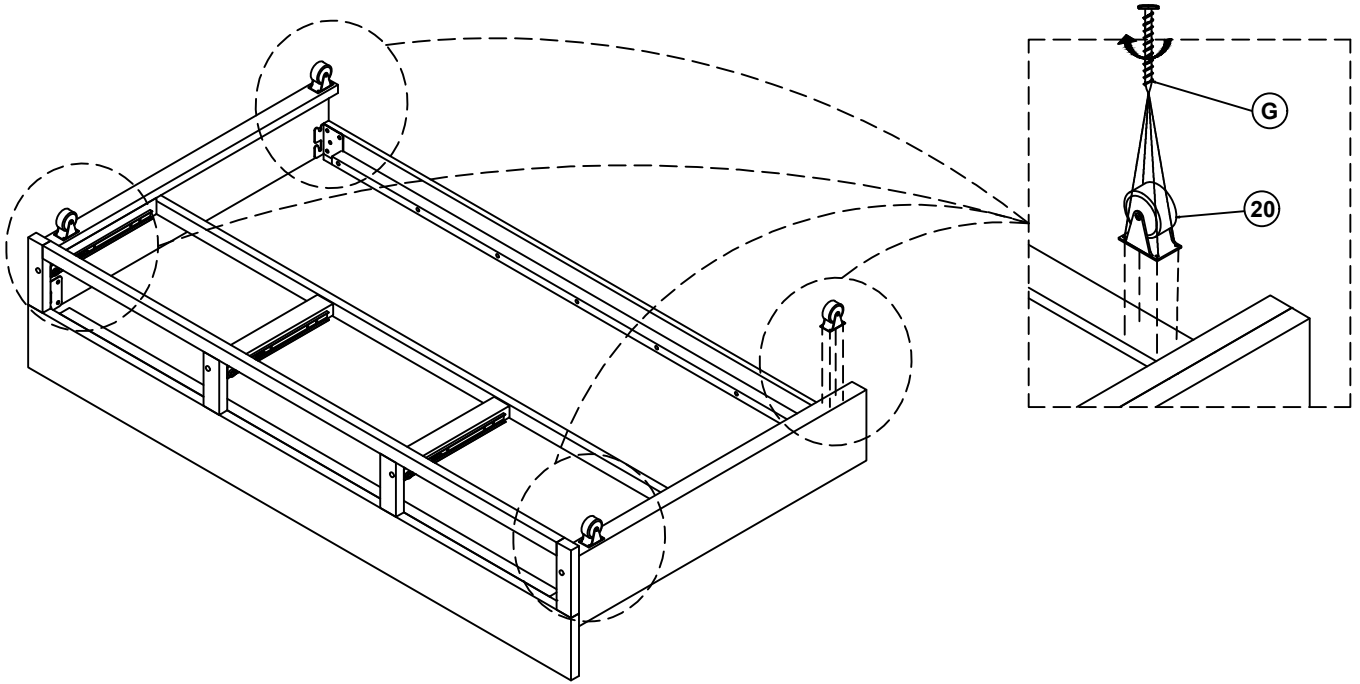


G	Flat Head Screw (m4x20mm-RBW)		16pcs
----------	--	---	--------------

STEP 16

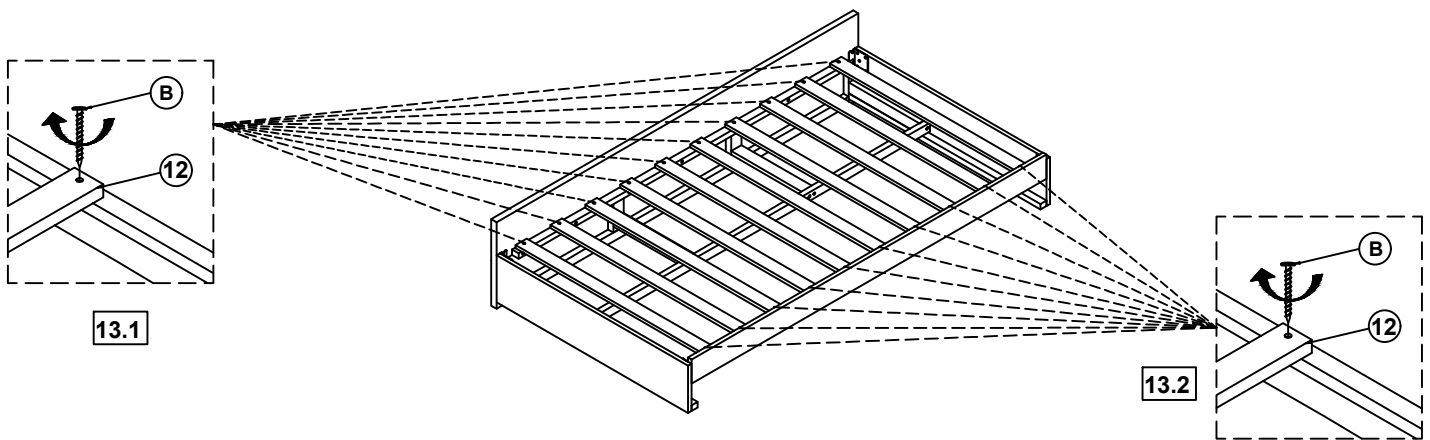


NOTE: Do not lock the screws of the trundle slats to the utermost edge the trundle slats,you need to leave a certain space at the edges, otherwise it will cause the board to break.

B	Flat Head Screw (m4x30mm-RBW)		20pcs
----------	--	---	--------------

ASSEMBLY INSTRUCTIONS

STEP 17

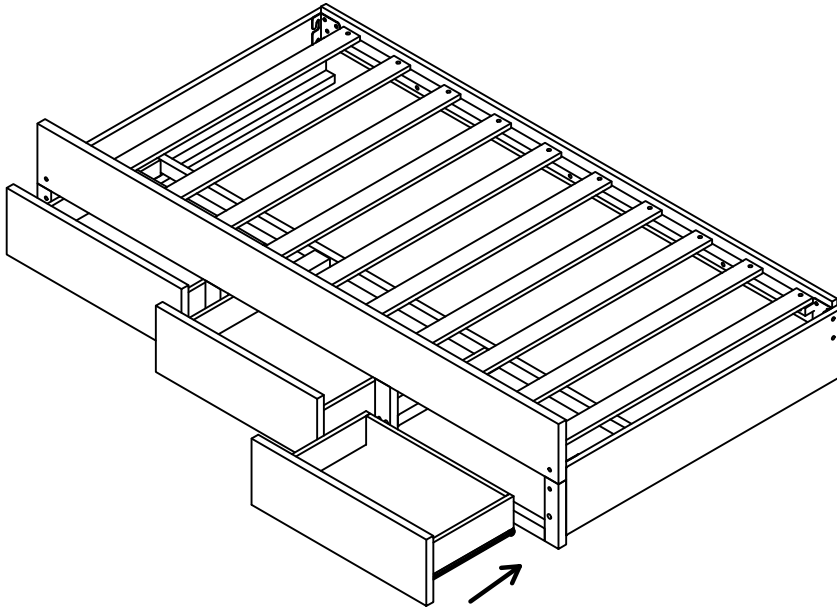

STEP 18 COMPLETE

