


# ASSEMBLY INSTRUCTIONS

If you have any  
questions,  
please feel free  
to contact us.  
Email: lowesteam  
@aminalife.com

**WF297945**

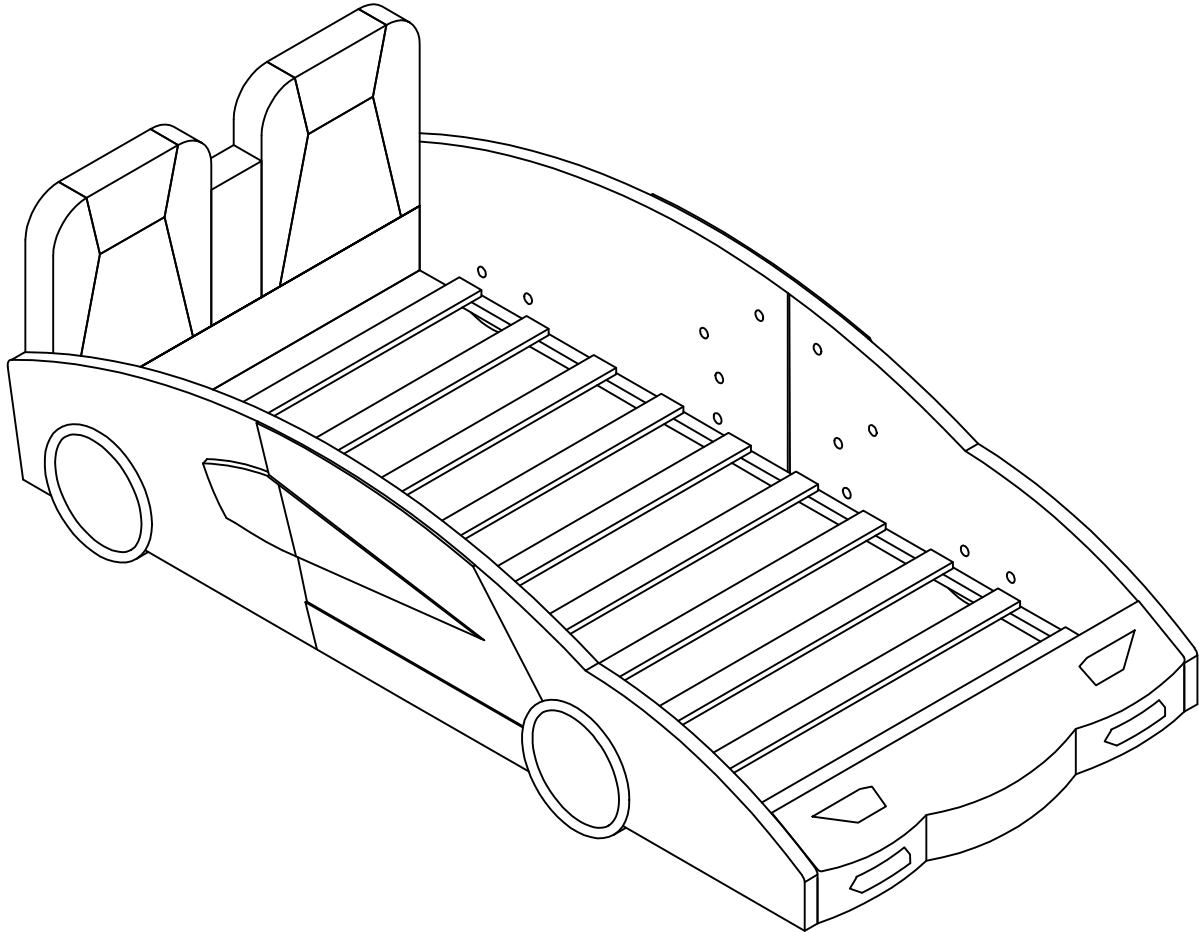

## **IMPORTANT NOTE**

**\*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO  
AVOID THE PARTS FROM BEING SCRATCHED**




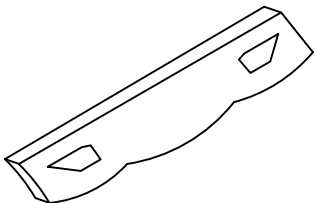
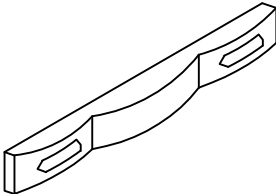
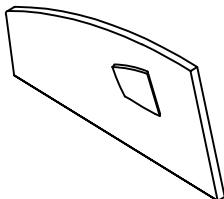
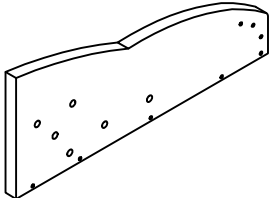
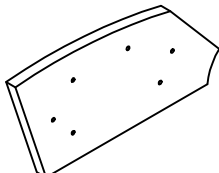
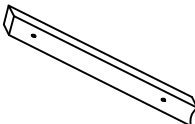
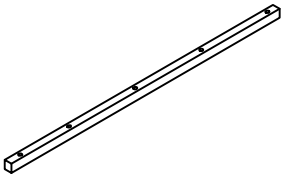
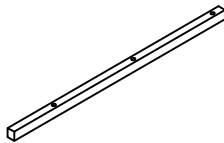
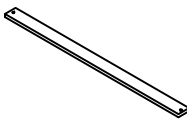
**\*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

**\*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

# ASSEMBLY INSTRUCTIONS

## WF297945









### PART LIST BOX 1: WF 297945

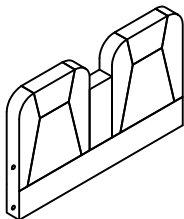1	 <p>Headboard Panel (1 pc)</p>	2	 <p>Headboard Connector (1 pc)</p>	3	 <p>Leg (4 pcs)</p>
4	 <p>Footboard Top Panel (1 pc)</p>	5	 <p>Footboard Bottom Panel (1 pc)</p>	6	 <p>Side Rail Front Panel (2 pcs)</p>
7	 <p>Side Rail Back Panel (2 pcs)</p>	8	 <p>Side Rail Big Support (2 pcs)</p>	9	 <p>Side Rail Small Support (2 pcs)</p>
10	 <p>Side Rail Long Support (2 pcs)</p>	11	 <p>Side Rail Short Support (2 pcs)</p>	12	 <p>Roll Slat (10 pcs)</p>

# ASSEMBLY INSTRUCTIONS


WF297945





## HARDWARE LIST IN WF297945

<div>A</div> <div></div> <div>Short Bolt (24pcs) (Ø 5/16 "X25mm)</div>	<div>B</div> <div></div> <div>Short Bolt (8pcs) (Ø 5/16 "X20mm)</div>	<div>C</div> <div></div> <div>Long Bolt (5 pcs) (Ø 5/16 "X32mm)</div>
<div>D</div> <div></div> <div>Long Bolt (16pcs) (Ø 5/16 "X45mm)</div>	<div>E</div> <div></div> <div>Flat Washer (53 pcs) ( Ø 5/16 "-RBW )</div>	<div>F</div> <div></div> <div>Allen Wrench (1 pc) (M4x75mm x32mm)</div>
<div>G</div> <div></div> <div>Flat Head Screw (20 pcs) ( m4x30mm-RBW)</div>	<div>H</div> <div></div> <div>Flat Head Screw (6 pcs) ( m4x15mm-RBW)</div>	


# ASSEMBLY INSTRUCTIONS

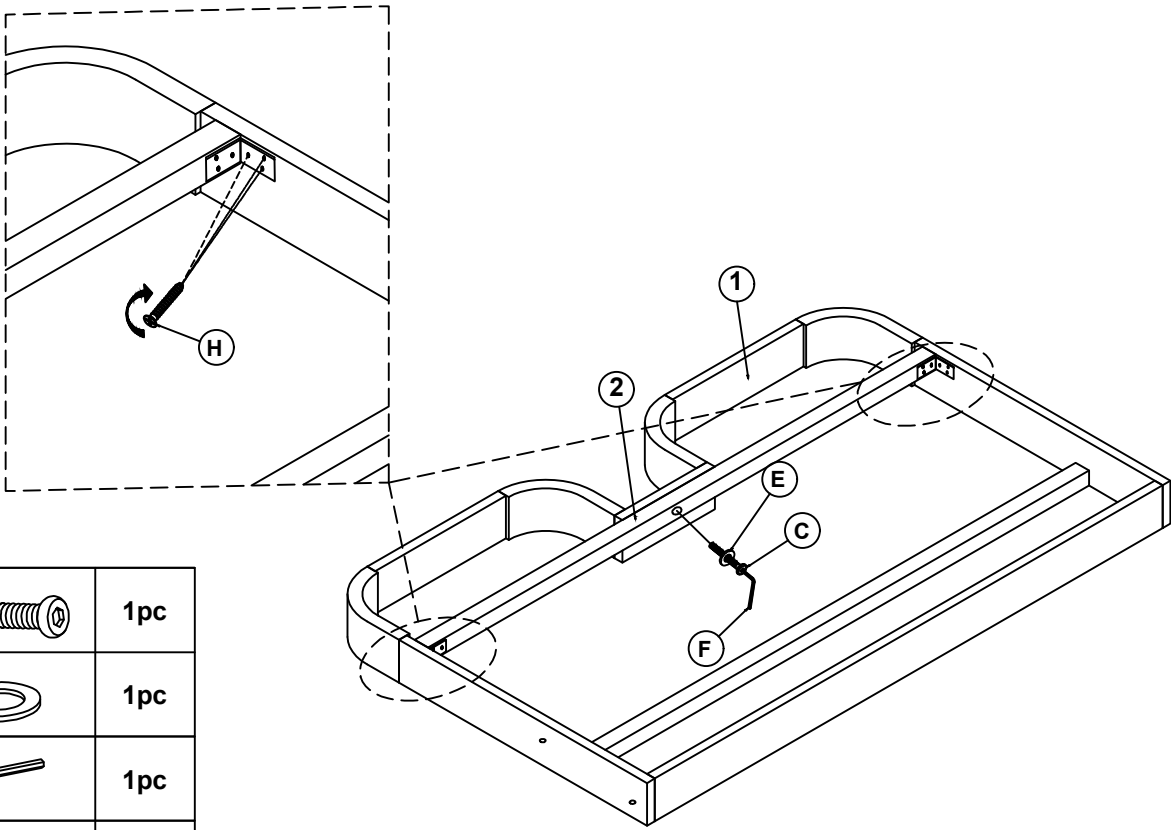


## STEP 1



C	<b>Bolt</b> (Ø 5/16 "X32mm)		1pc
E	<b>Flat Washer</b> (Ø 5/16 "-RBW )		1pc
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc
H	<b>Flat Head Screw</b> ( m4x15mm-RBW)		6pcs

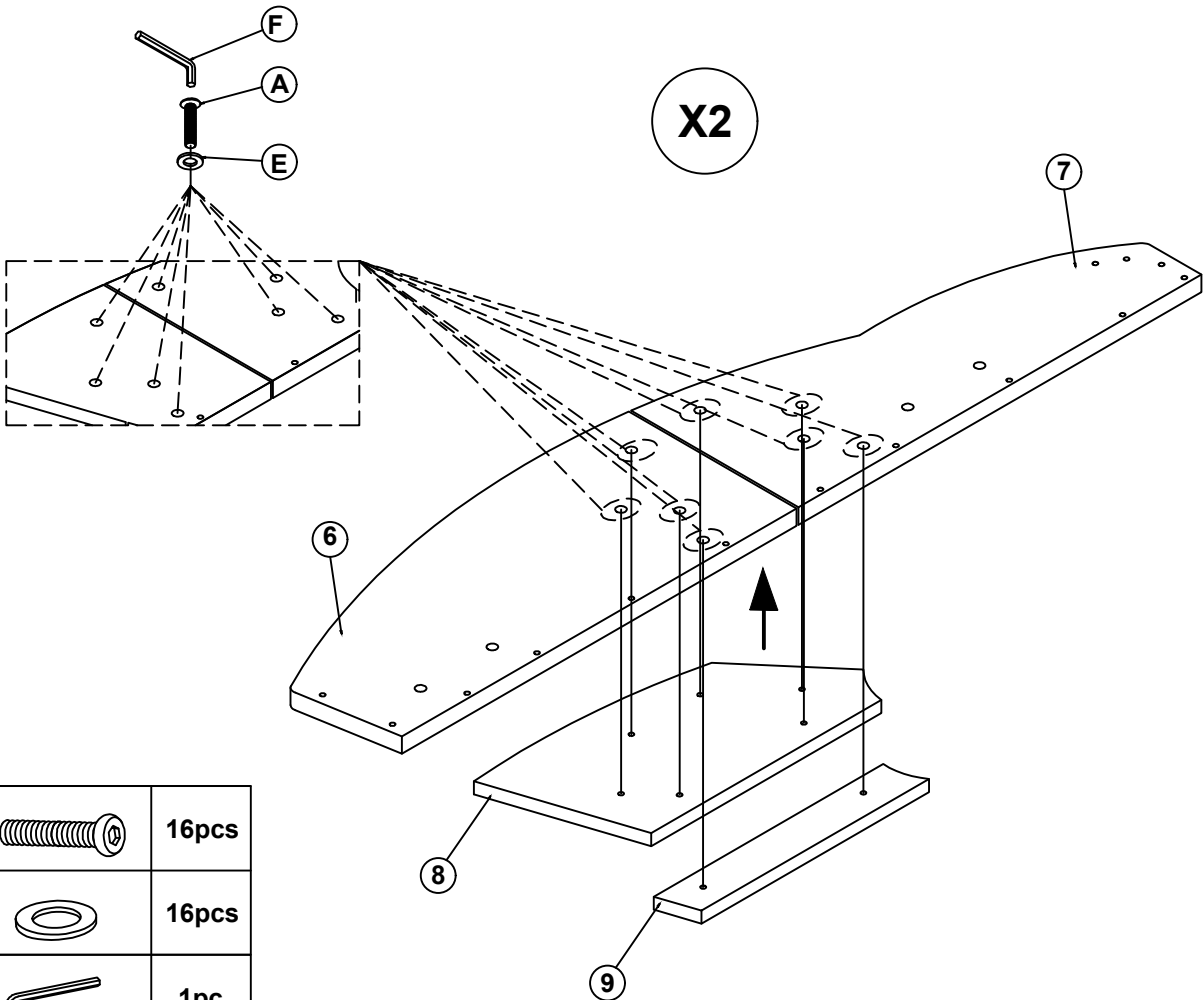
## STEP 2







A	<b>Bolt</b> (Ø 5/16 "X25mm)		16pcs
E	<b>Flat Washer</b> (Ø 5/16 "-RBW )		16pcs
F	<b>Allen Wrench</b> (M4x75mm x32mm)		1pc

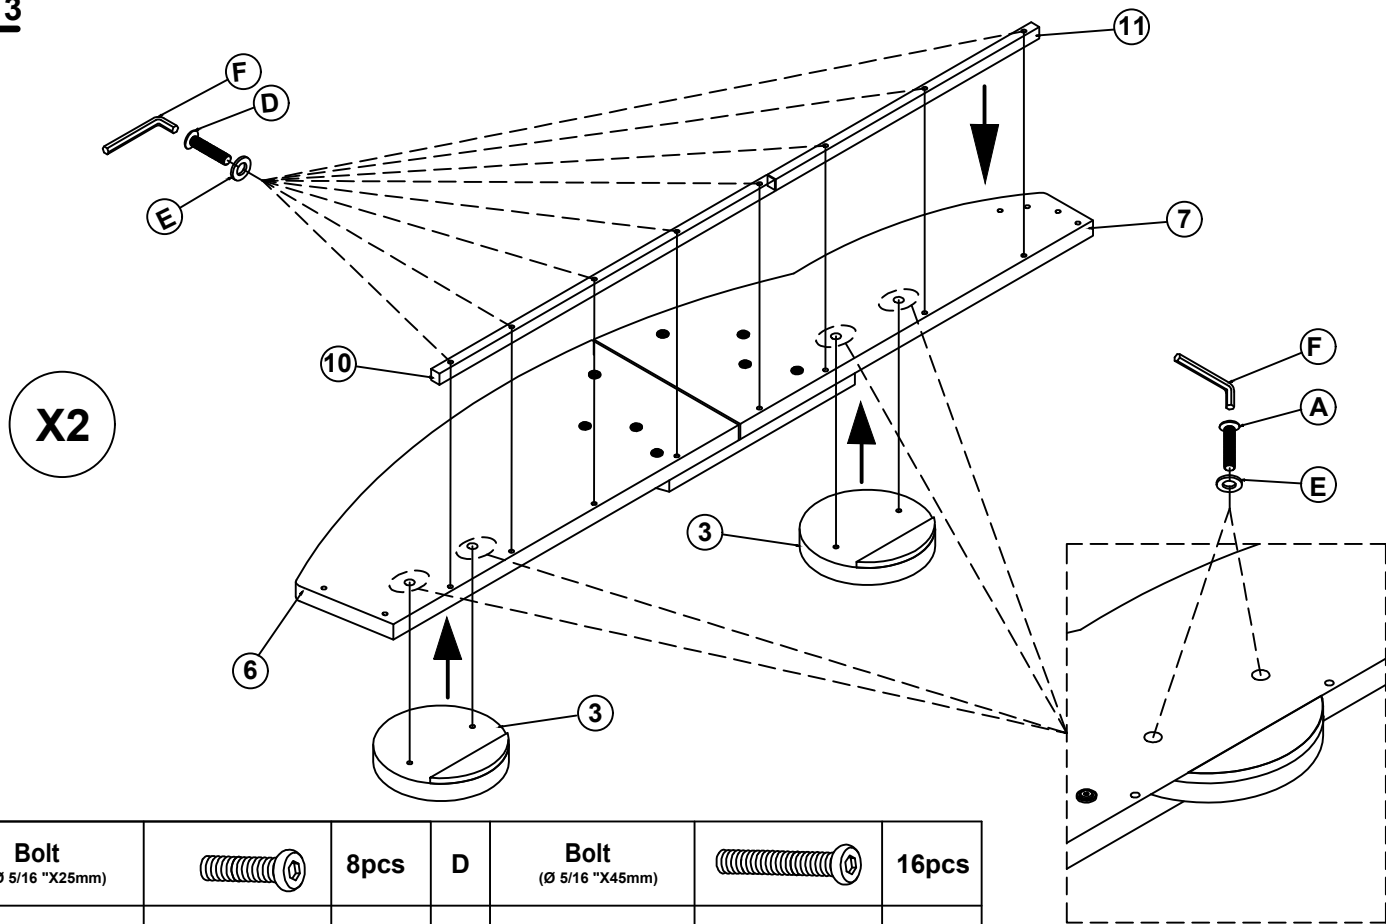
# ASSEMBLY INSTRUCTIONS

## STEP 3




A	Bolt (Ø 5/16 "X25mm)		8pcs	D	Bolt (Ø 5/16 "X45mm)		16pcs
E	Flat Washer (Ø 5/16 " -RBW )		24pcs	F	Allen Wrench (M4x75mm x32mm)		1pc



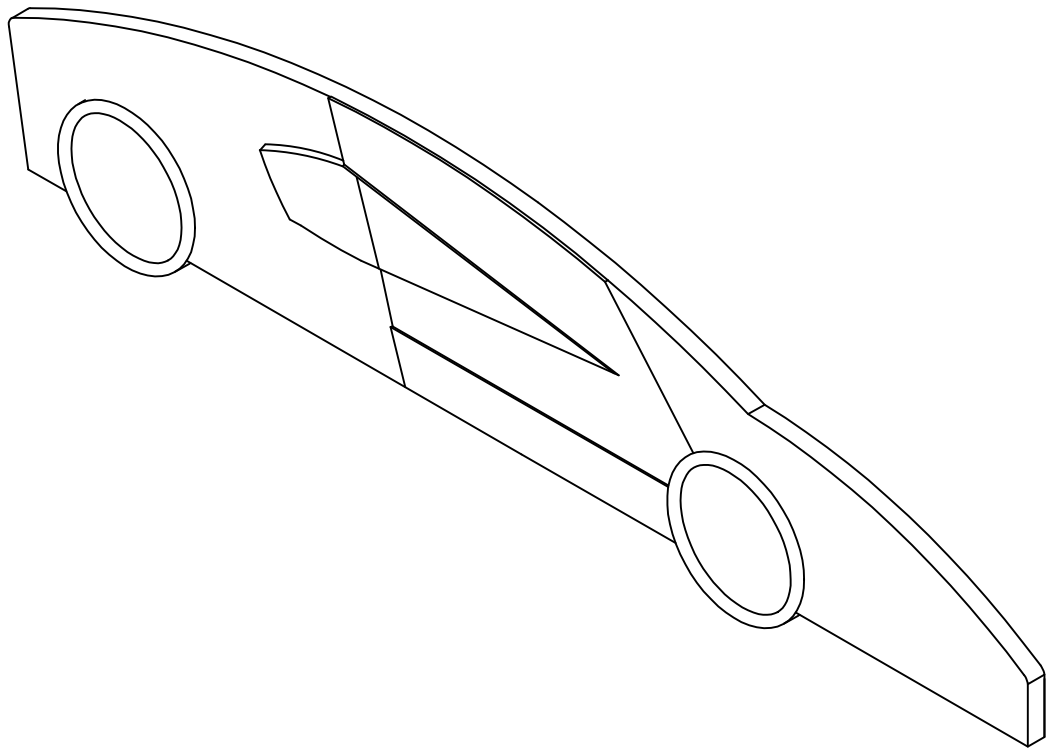

## STEP 4

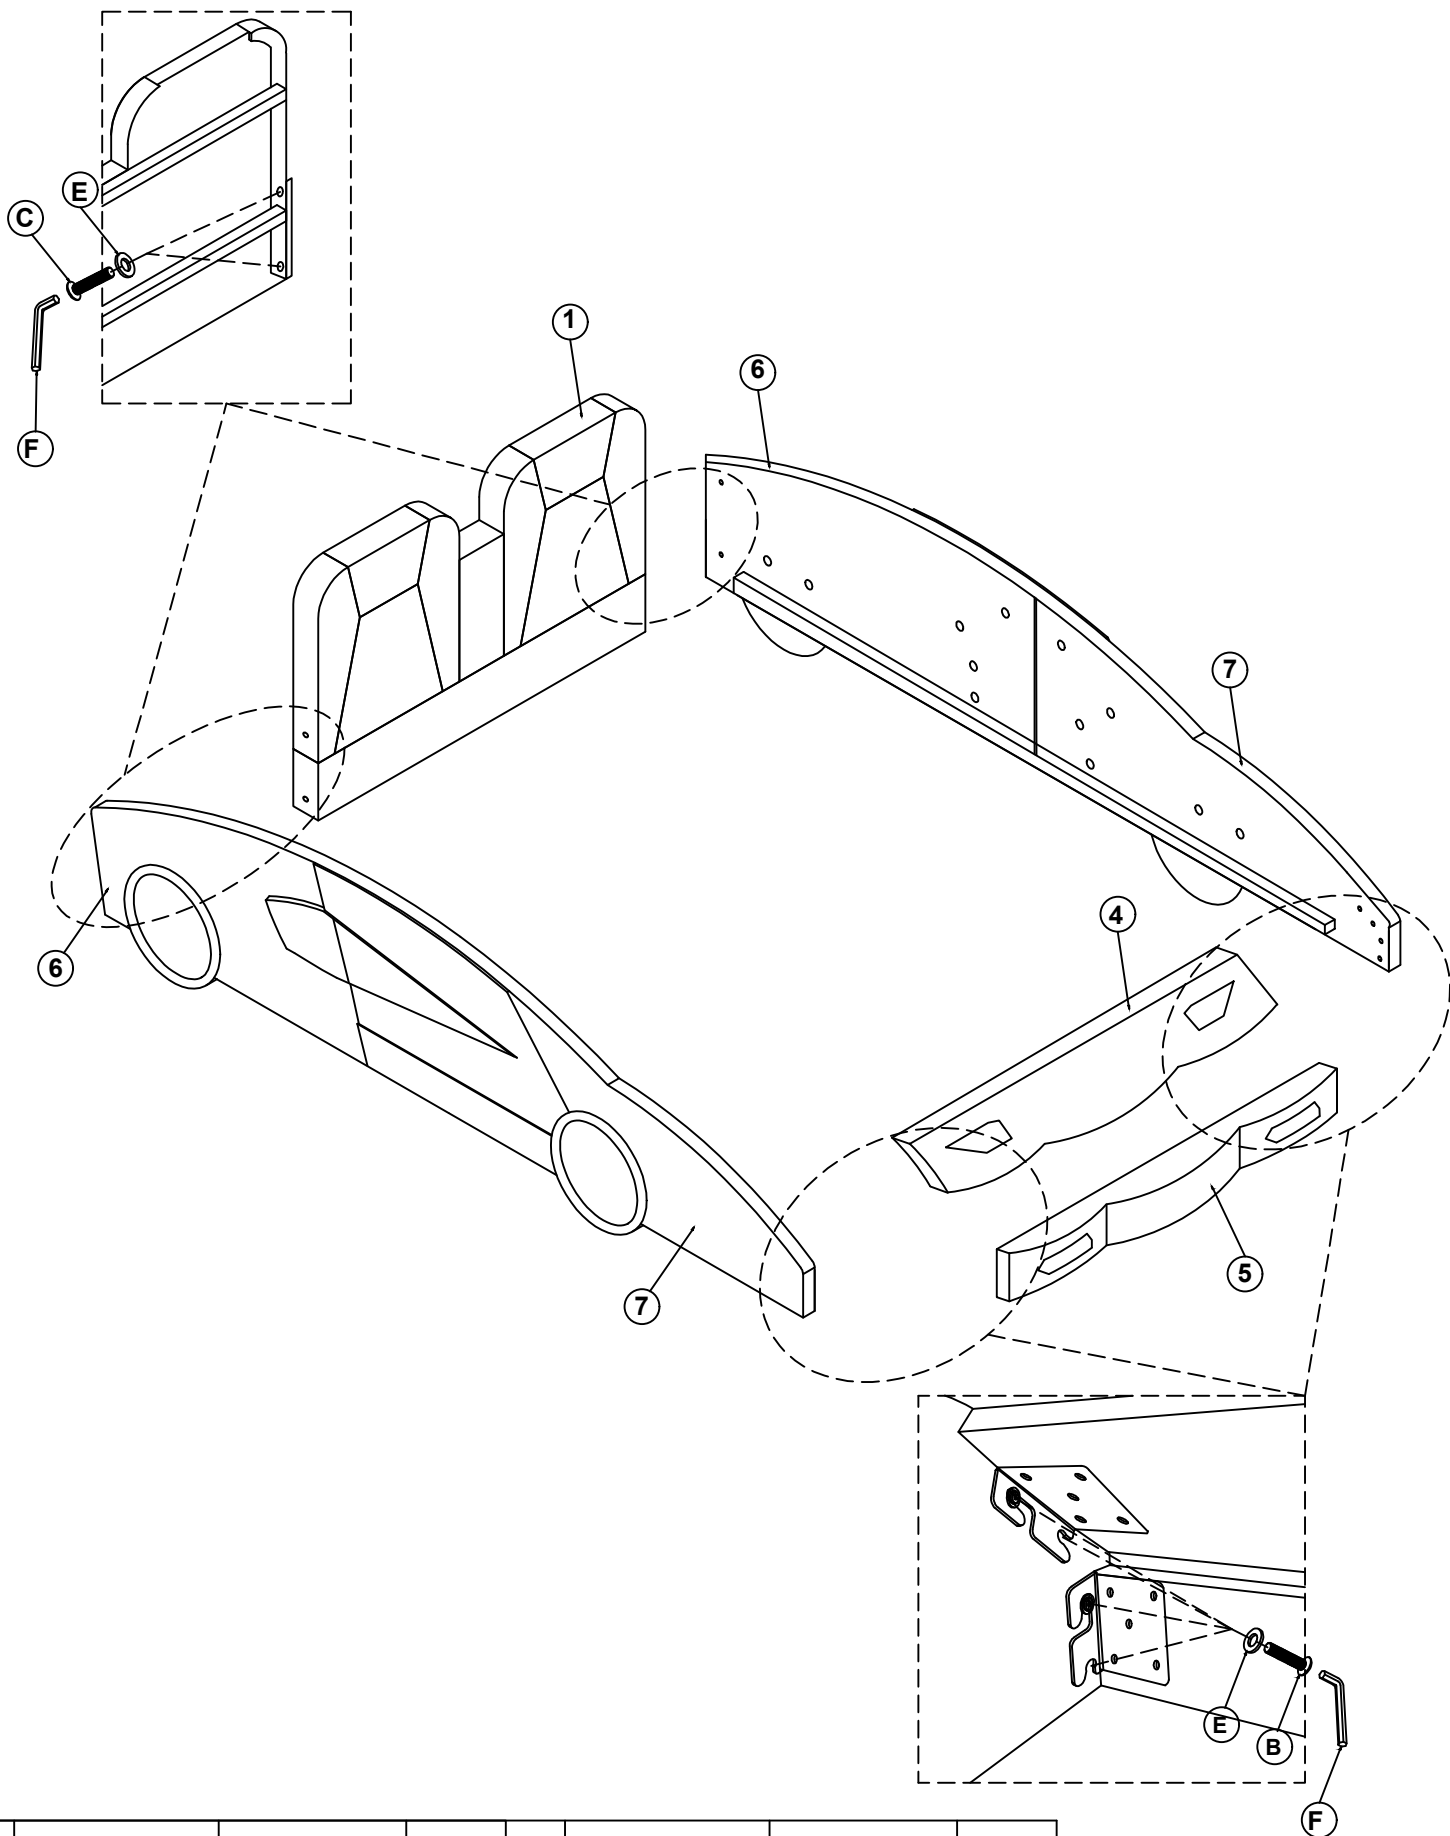

# ASSEMBLY INSTRUCTIONS


## STEP 5




B	Bolt (Ø 5/16 "X20mm)		8pcs	C	Bolt (Ø 5/16 "X32mm)		4pcs
E	Flat Washer (Ø 5/16 "xRBW)		12pcs	F	Allen Wrench (M4x75mm x32mm)		1pc

# ASSEMBLY INSTRUCTIONS

## STEP 6

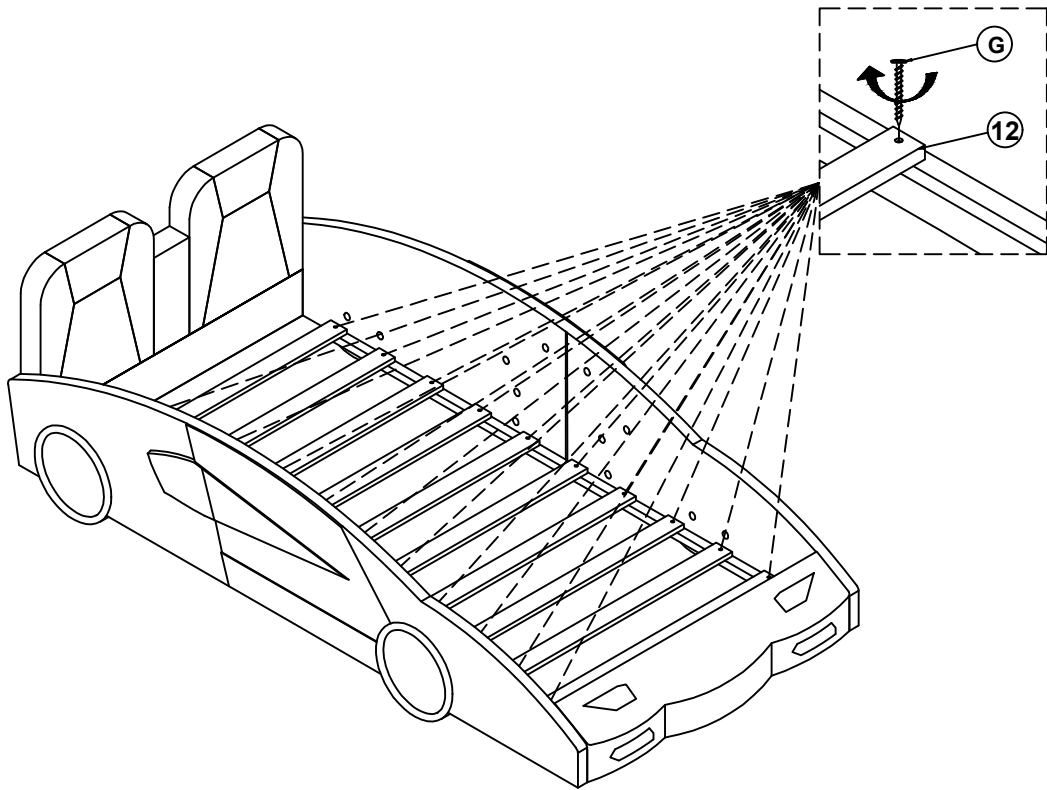

G	Flat Head Screw ( m4x30mm-RBW)		20pcs
---	-----------------------------------	---	-------

## STEP 7 COMPLETE

