

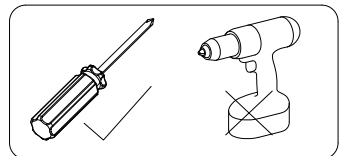
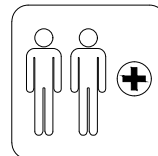


Kitchen Island Cart


Assembly instructions-Please keep for future reference

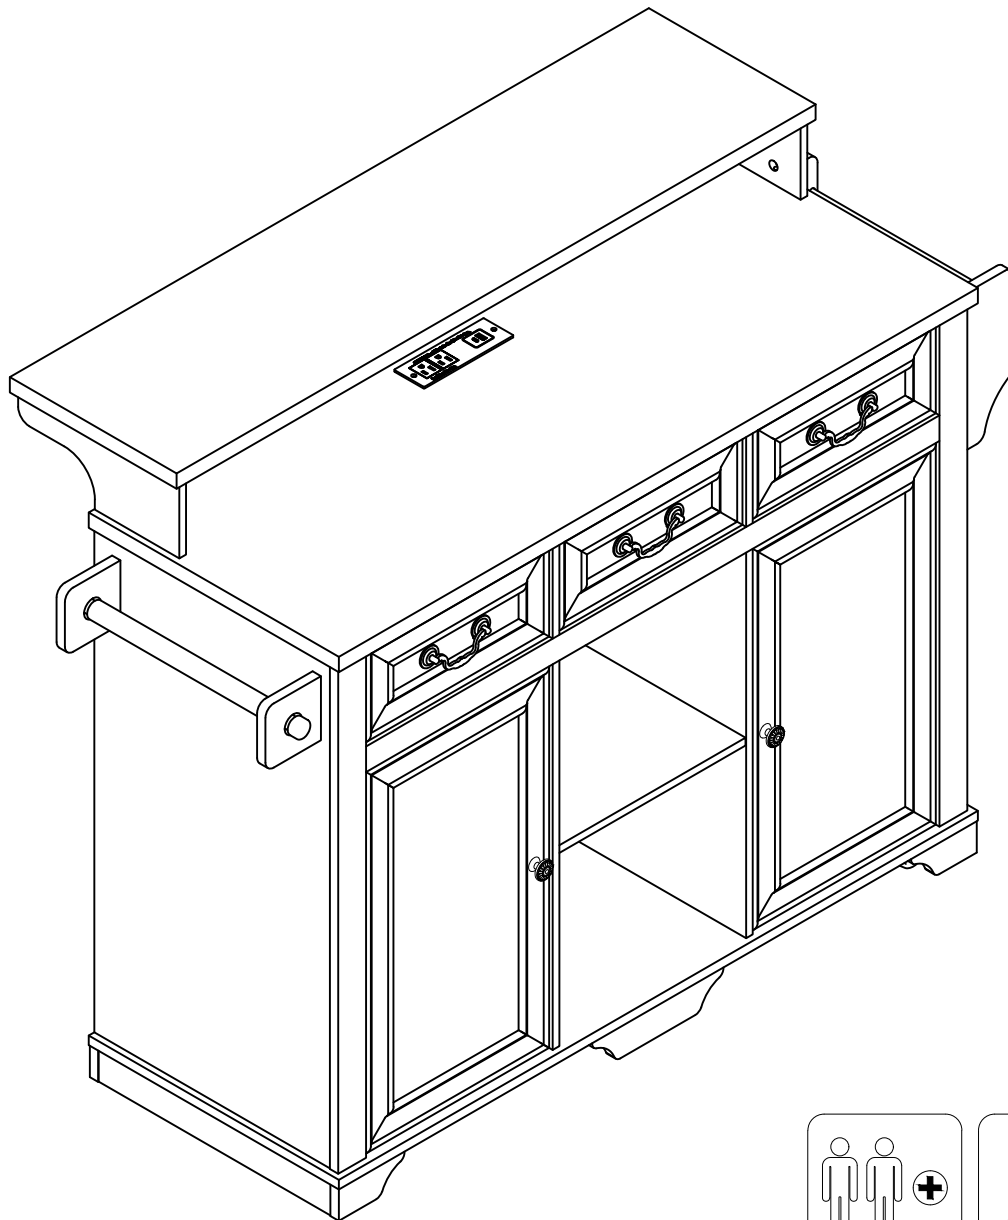


Important-Please read these instructions fully before starting assembly

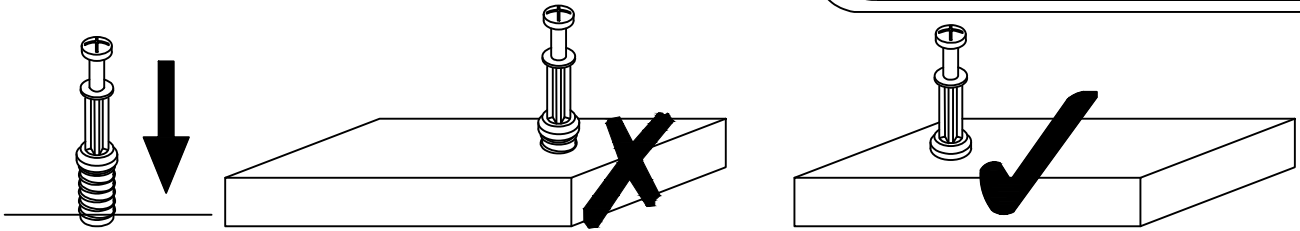


QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

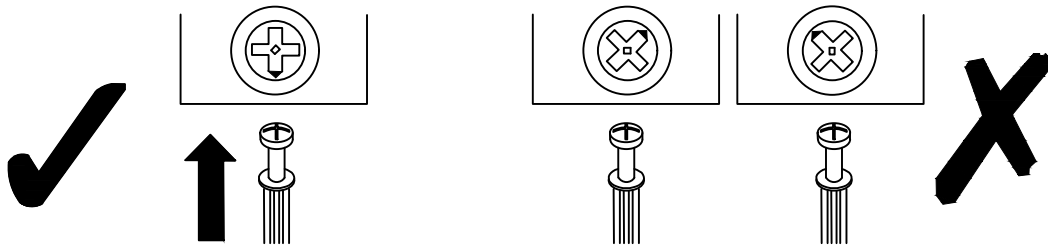

LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.


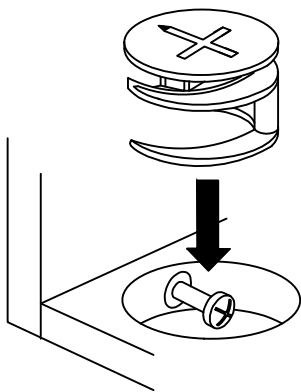


Quickfit head should be in the centre of the cam lock when the two panels are joined. Cam lock should be inserted before quickfit.

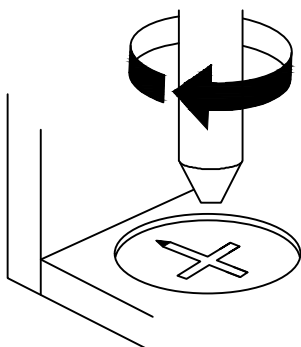


Turn cam lock clockwise to tighten.

Assembly Instructions































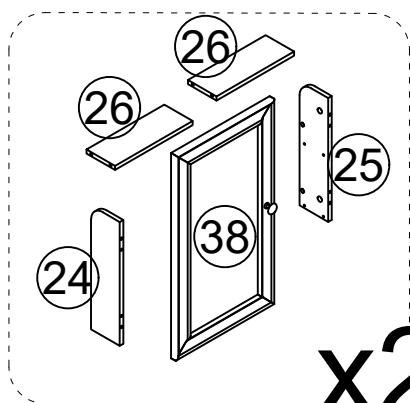
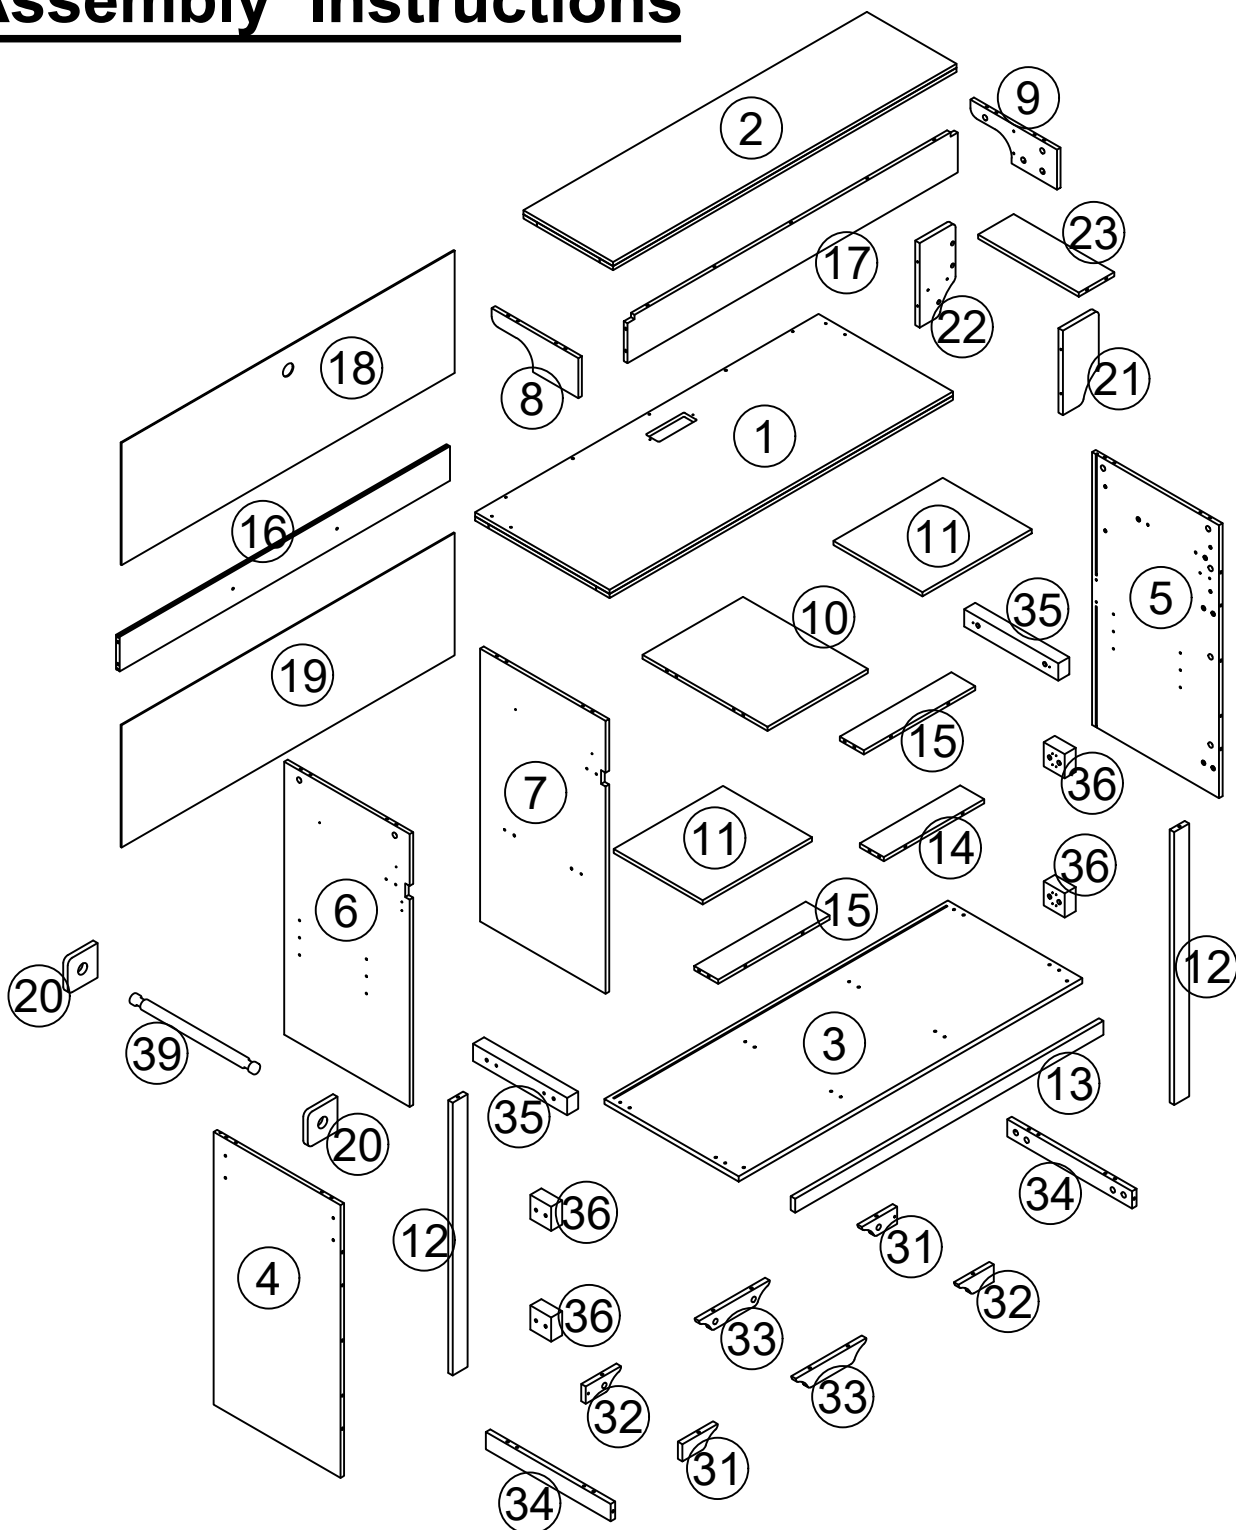


x2










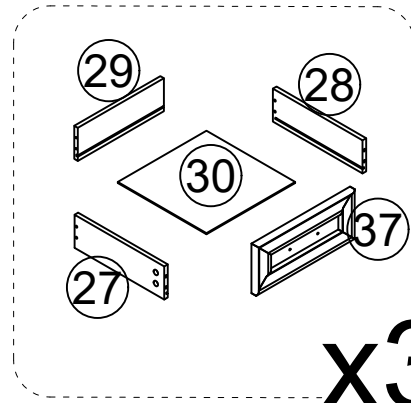


x3
























Parts List

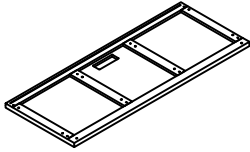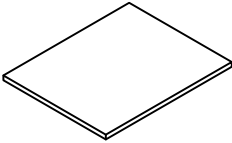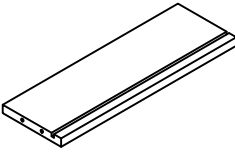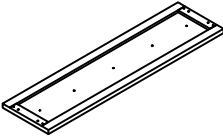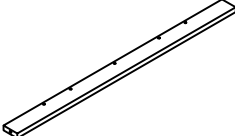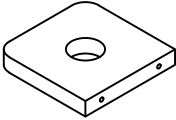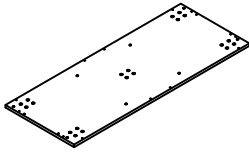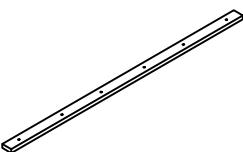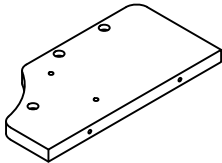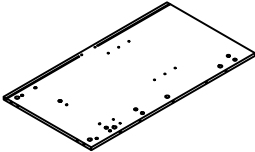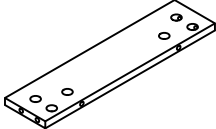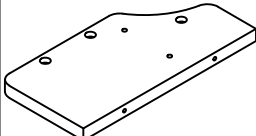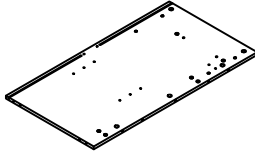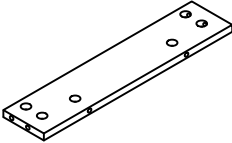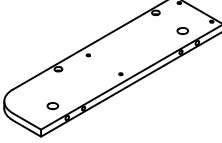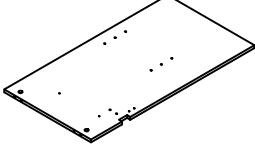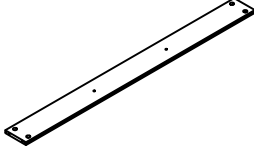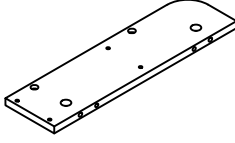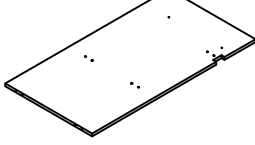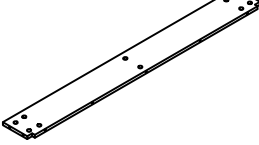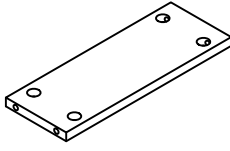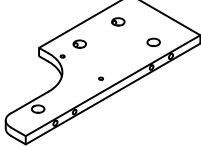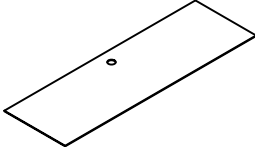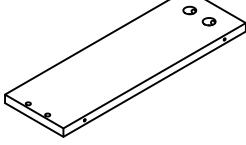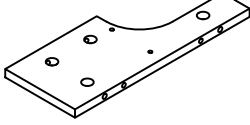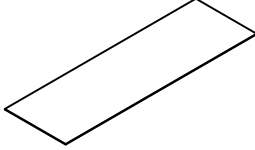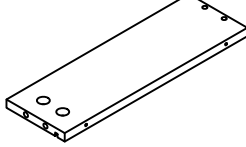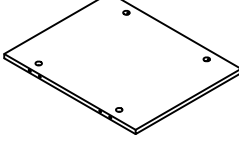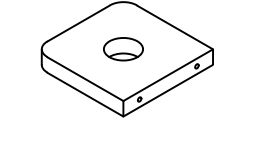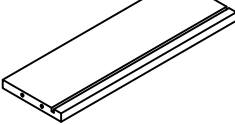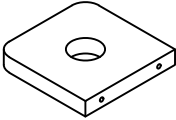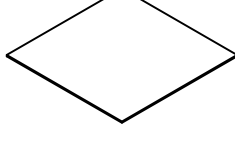
NO.	PARTS	QTY	NO.	PARTS	QTY	NO.	PARTS	QTY
①		x1	⑪		x2	⑲		x3
②		x1	⑫		x2	⑳		x2
③		x1	⑬		x1	㉑		x1
④		x1	⑭		x1	㉒		x1
⑤		x1	⑮		x2	㉓		x2
⑥		x1	⑯		x1	㉔		x2
⑦		x1	㉑		x1	㉕		x4
⑧		x1	㉒		x1	㉖		x3
⑨		x1	㉓		x1	㉗		x3
⑩		x1	㉔		x1	㉘		x3
			㉕		x2	㉙		x3

Parts List

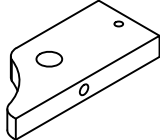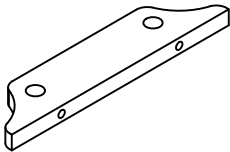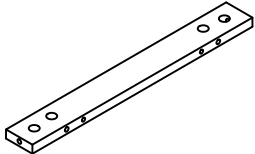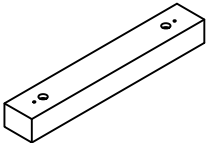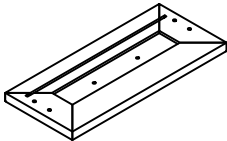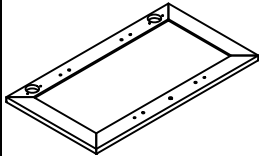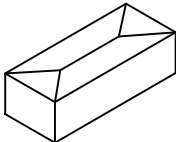
NO.	PARTS	QTY
③1		x2
③2		x2
③3		x2
③4		x2
③5		x2
③6		x4
③7		x3
③8		x2
③9		x1
	 Accessory box	x1

Hardware

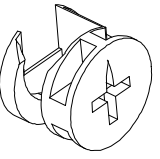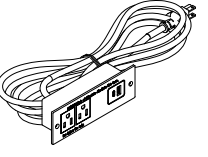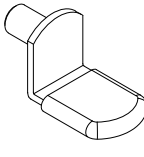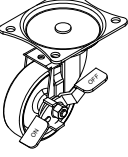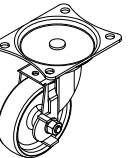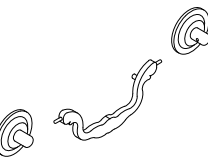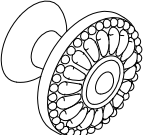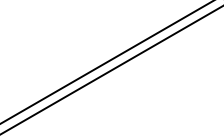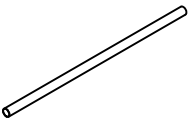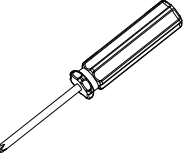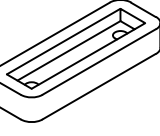
A x114+5 	B x114+5 	C x52+4 Ø6x30mm 	D x30+2 Ø5x38mm 	E x4 
F x1 	G x12+1 M6x40mm 	H x30+3 Ø6xØ3x12mm 	I x8+1 	J x2 
K x3 	L x3 	M x2 	N x6+1 M4x8mm 	O x2+1 M4x16mm 
P x92+8 Ø20mm 	Q x3 L=348mm 	R x4 L=271mm 	S x20+2 M6x10mm 	T x1 
U x1 4mm 	V x2 	W x24+3 Ø7xØ3.5x14mm 	X x14+2 Ø6xØ3x16mm 	
 L=300  L=300  L=300  L=300 x3				




CL




CR



DL



DR

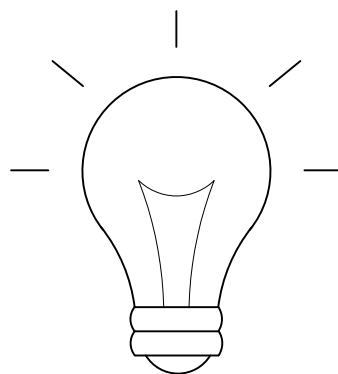


friendly reminder


To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

Um Fehler und Verwirrung bei der Installation von Zubehör zu vermeiden, verwenden Sie die Art und Menge der Hardware-Zubehörteile gemäß der in der Anleitung beschriebenen Installationsprozedur. Öffnen Sie zunächst den Zubehörbeutel, breiten Sie die Hardware-Zubehörteile aus, schneiden Sie das Loch an der Seite und entnehmen Sie die Hardware-Zubehörteile


Pour éviter les erreurs et la confusion lors de l'installation des accessoires, utilisez le type et la quantité d'accessoires matériels conformément à la procédure d'installation décrite dans les instructions. Tout d'abord, déroulez le sac d'accessoires, étalez les accessoires matériels, coupez les trous sur le côté et retirez les accessoires matériels.

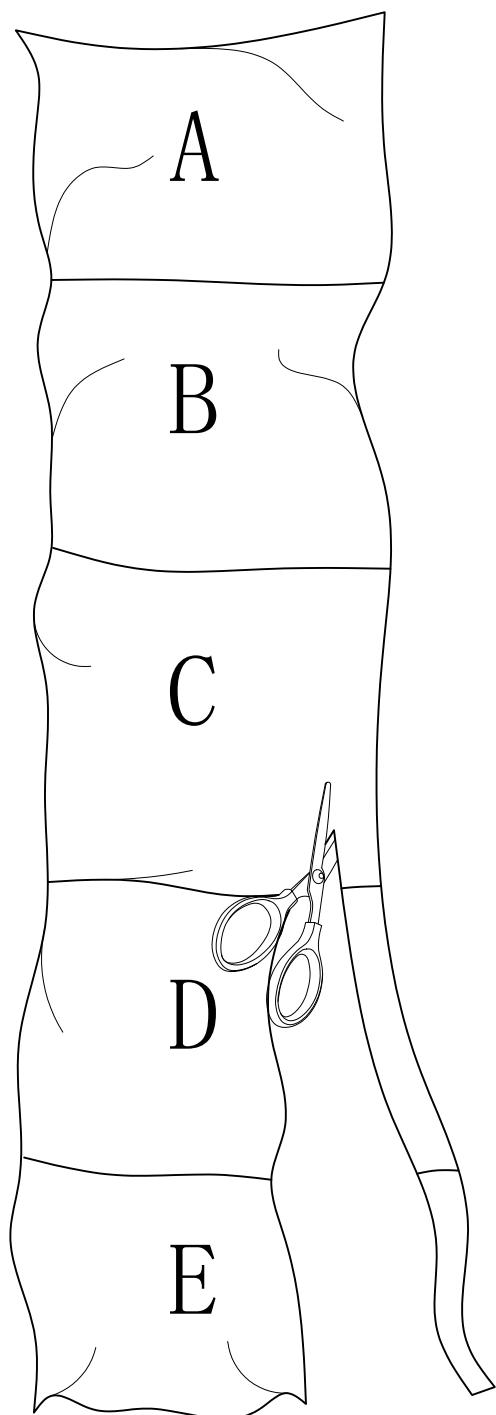


01

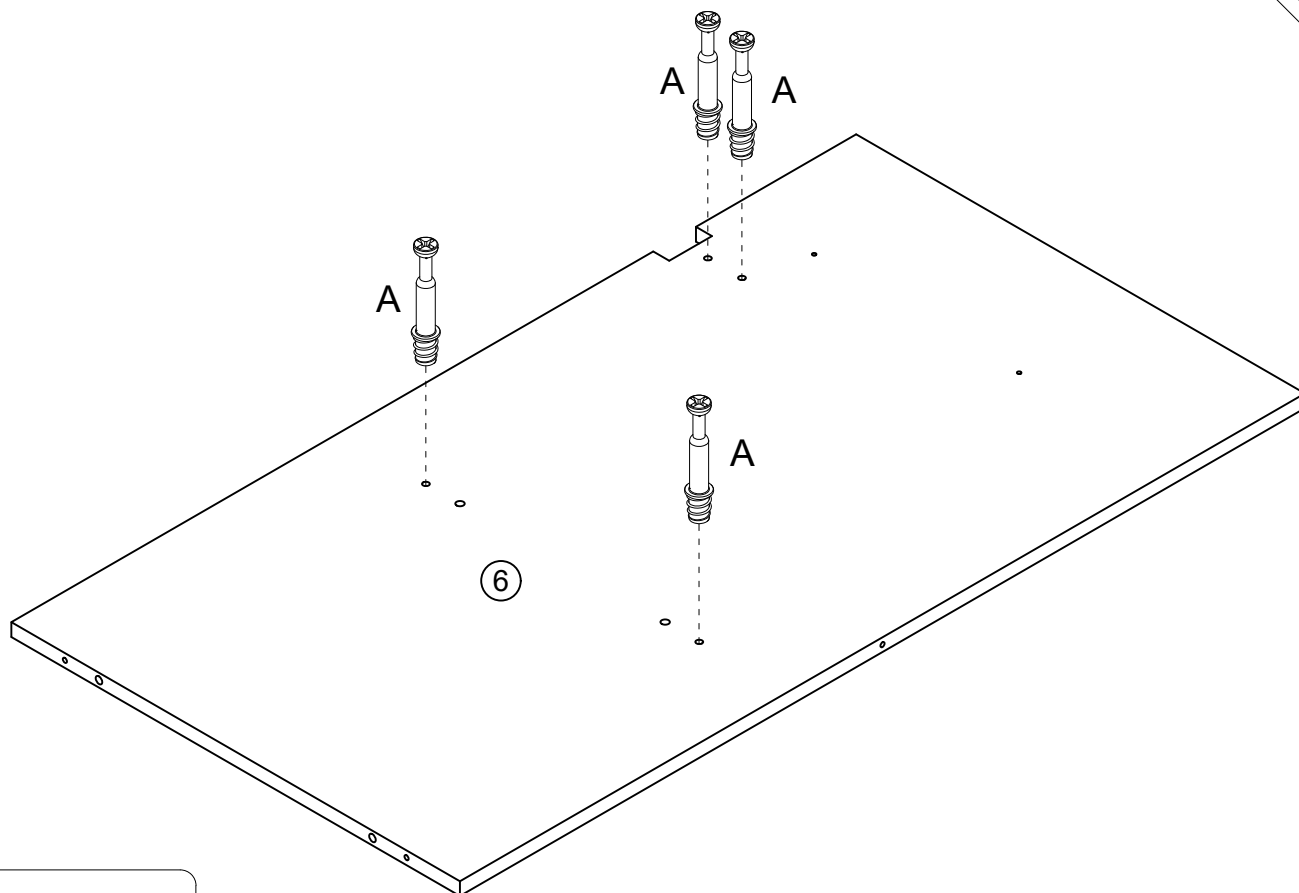

Ax4



02

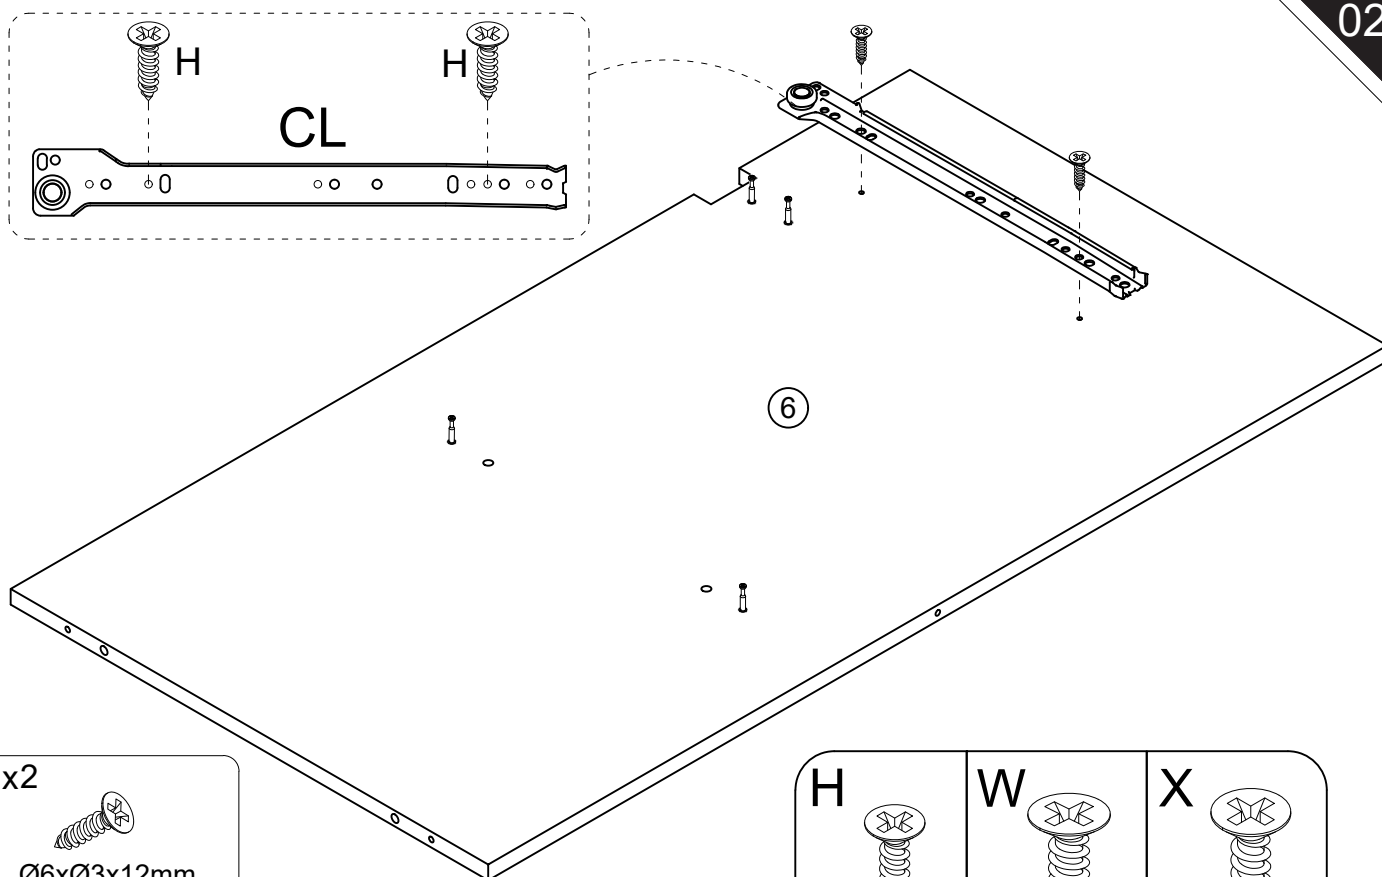



Hx2





Ø6xØ3x12mm

CLx1

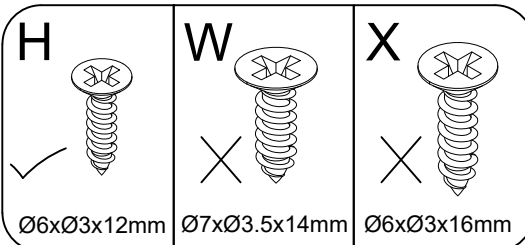

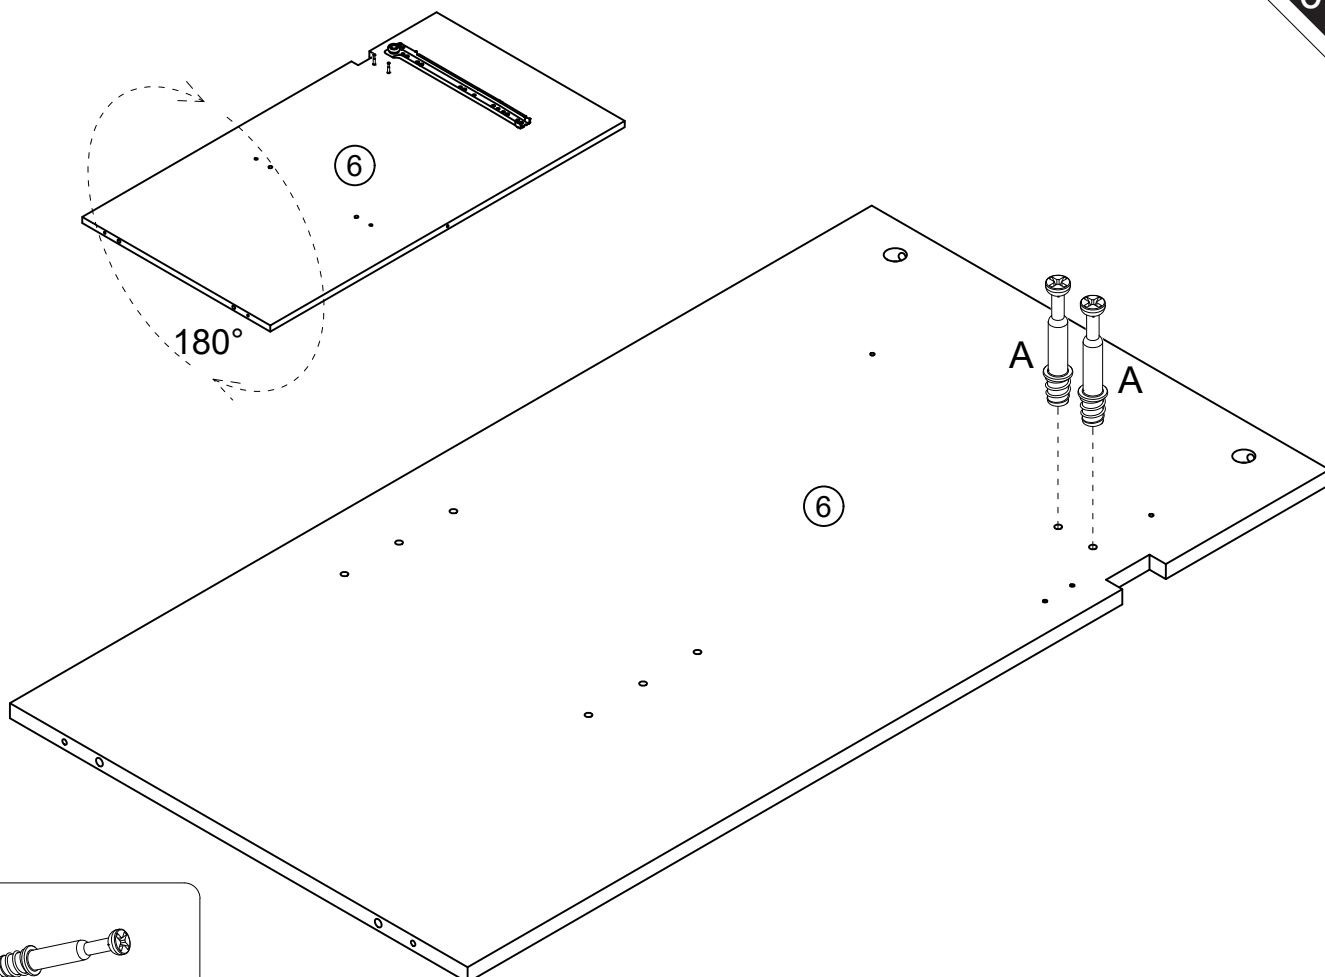


A x 2

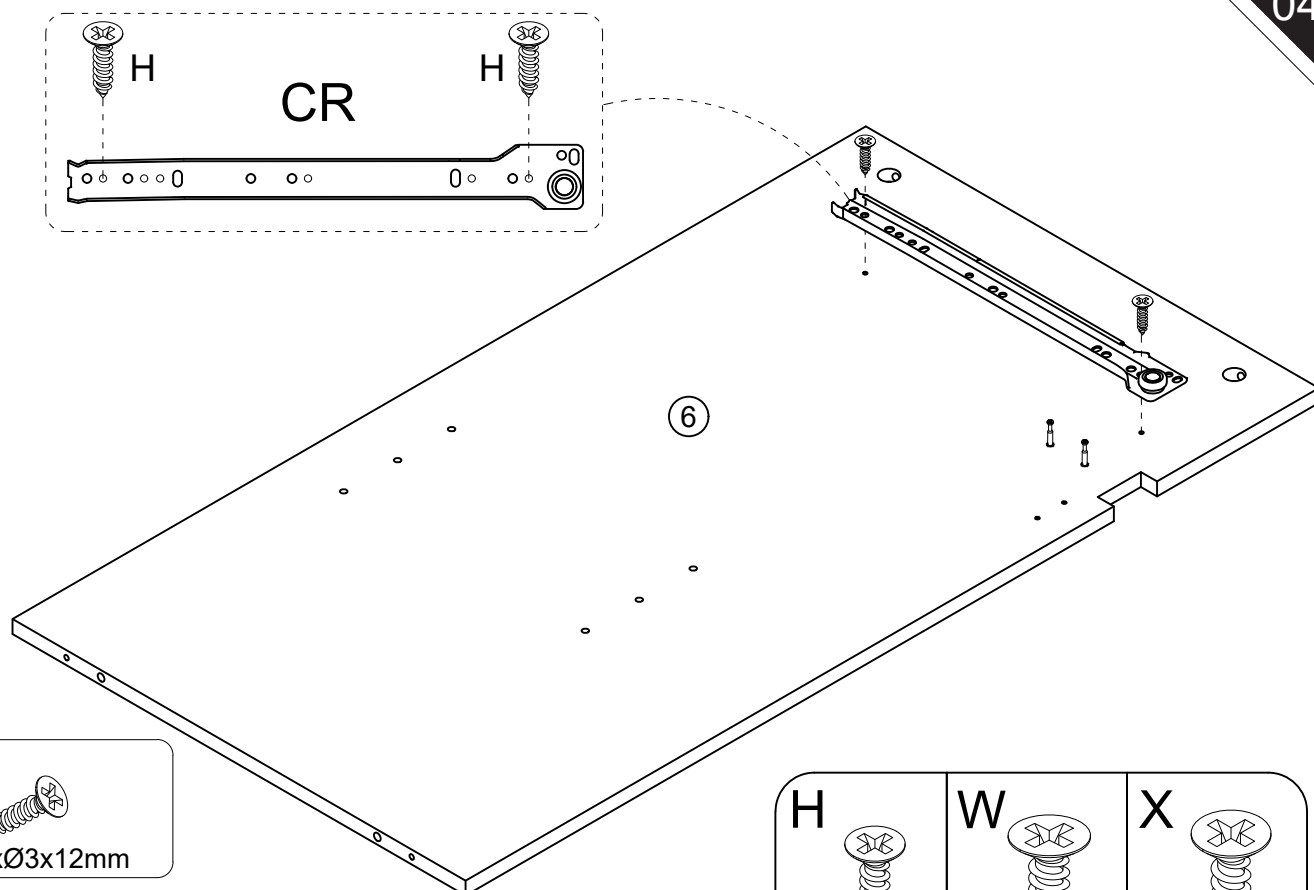


H x 2




CR x 1

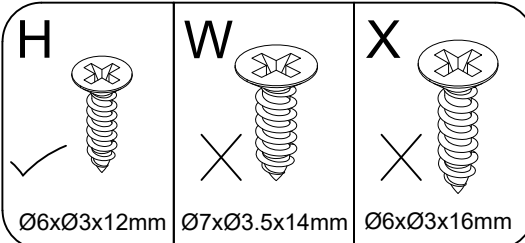

05

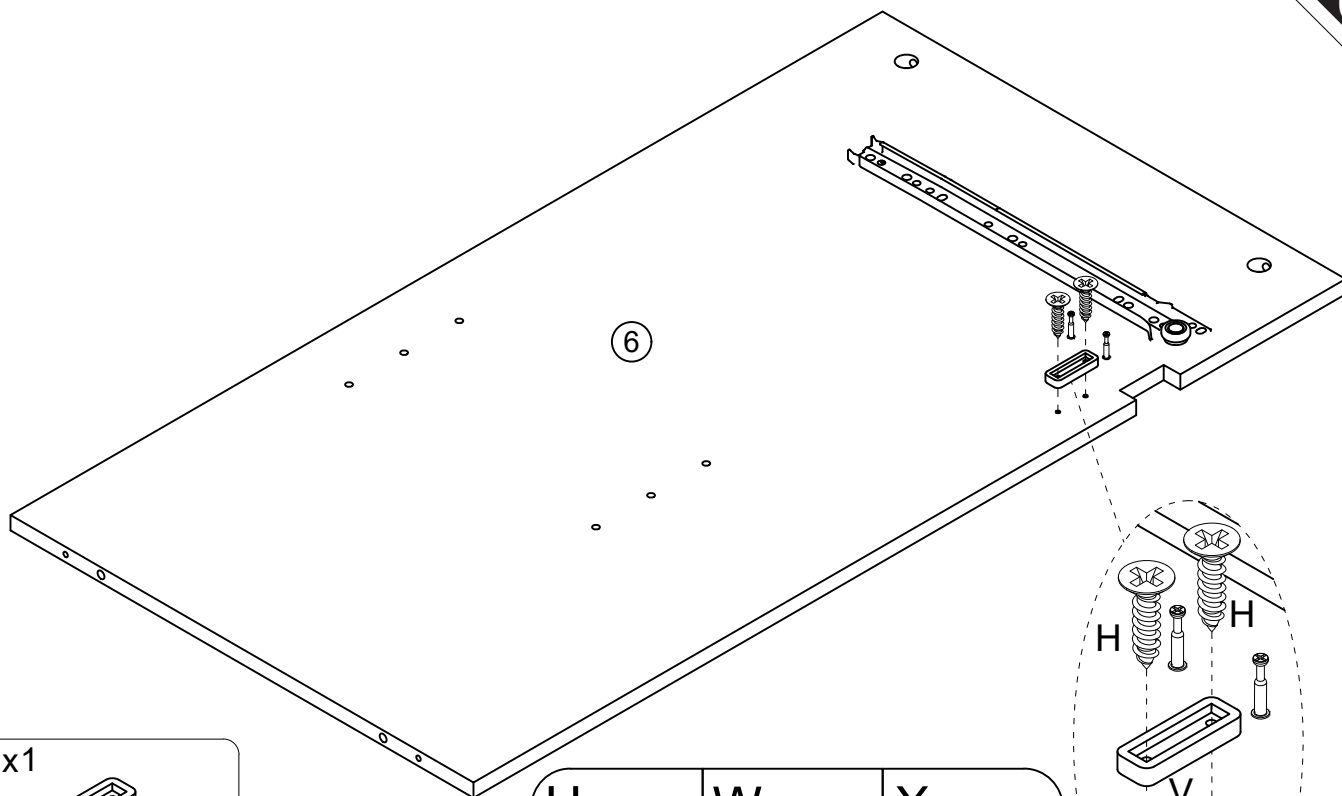

Vx1




Hx2




Ø6xØ3x12mm

H




Ø6xØ3x12mm

W




Ø7xØ3.5x14mm


X




Ø6xØ3x16mm

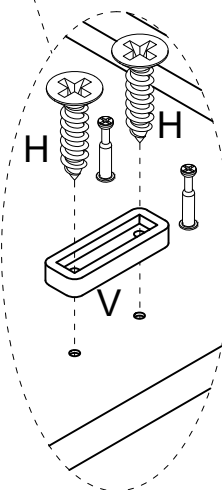

06

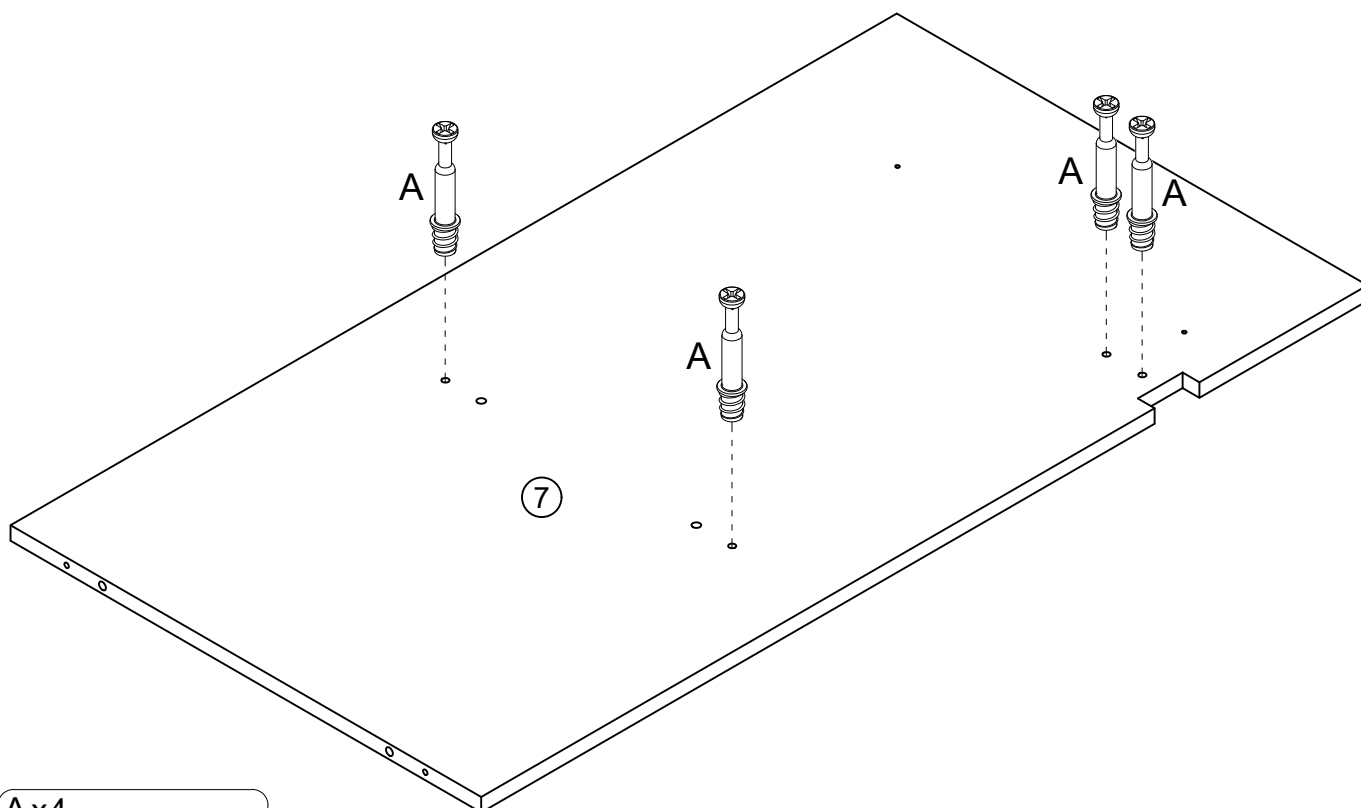


Ax4



Ø6x35mm

07

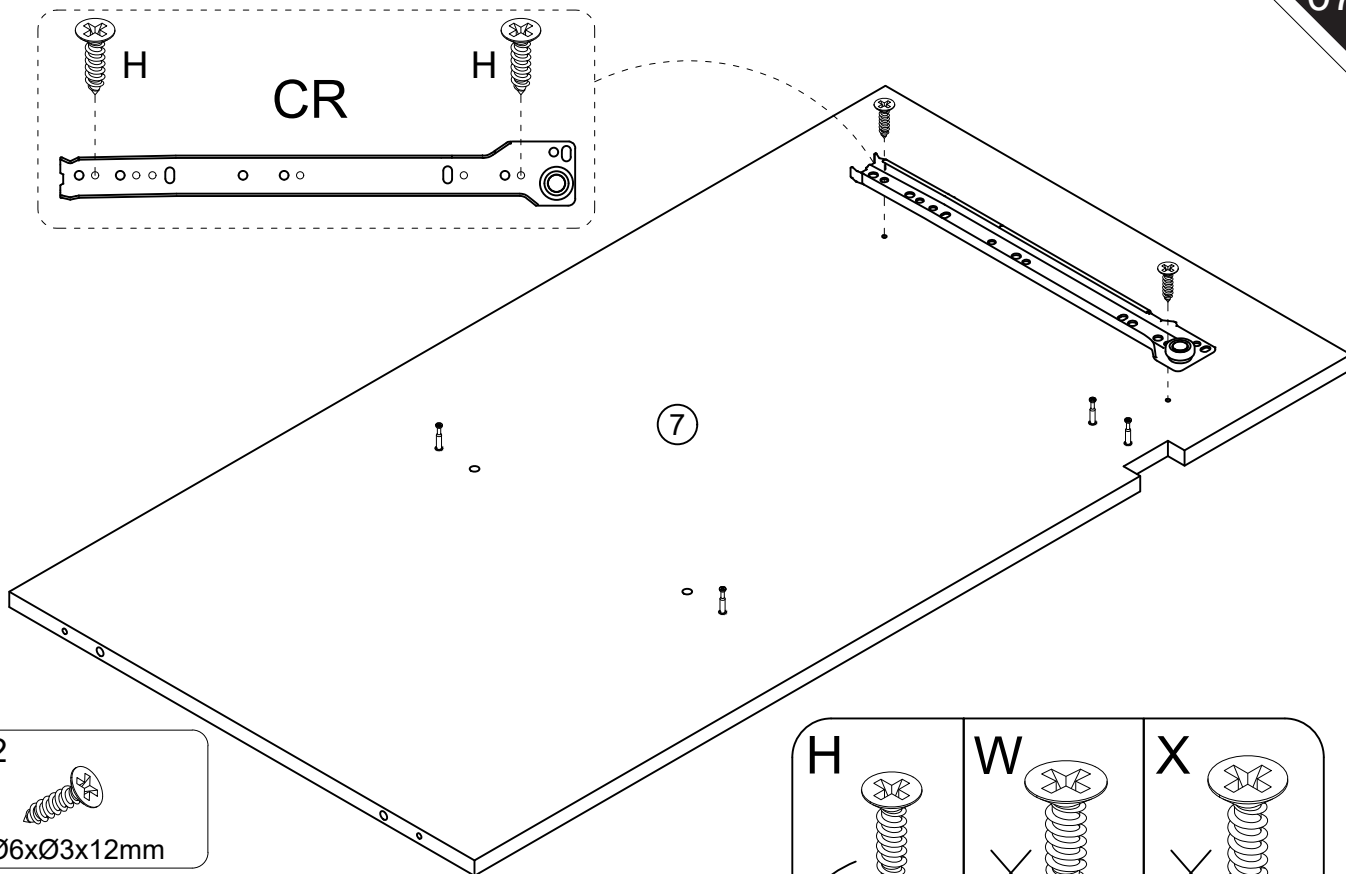

Hx2




Ø6xØ3x12mm

CRx1




H




Ø6xØ3x12mm

W




Ø7xØ3.5x14mm

X




Ø6xØ3x16mm



08

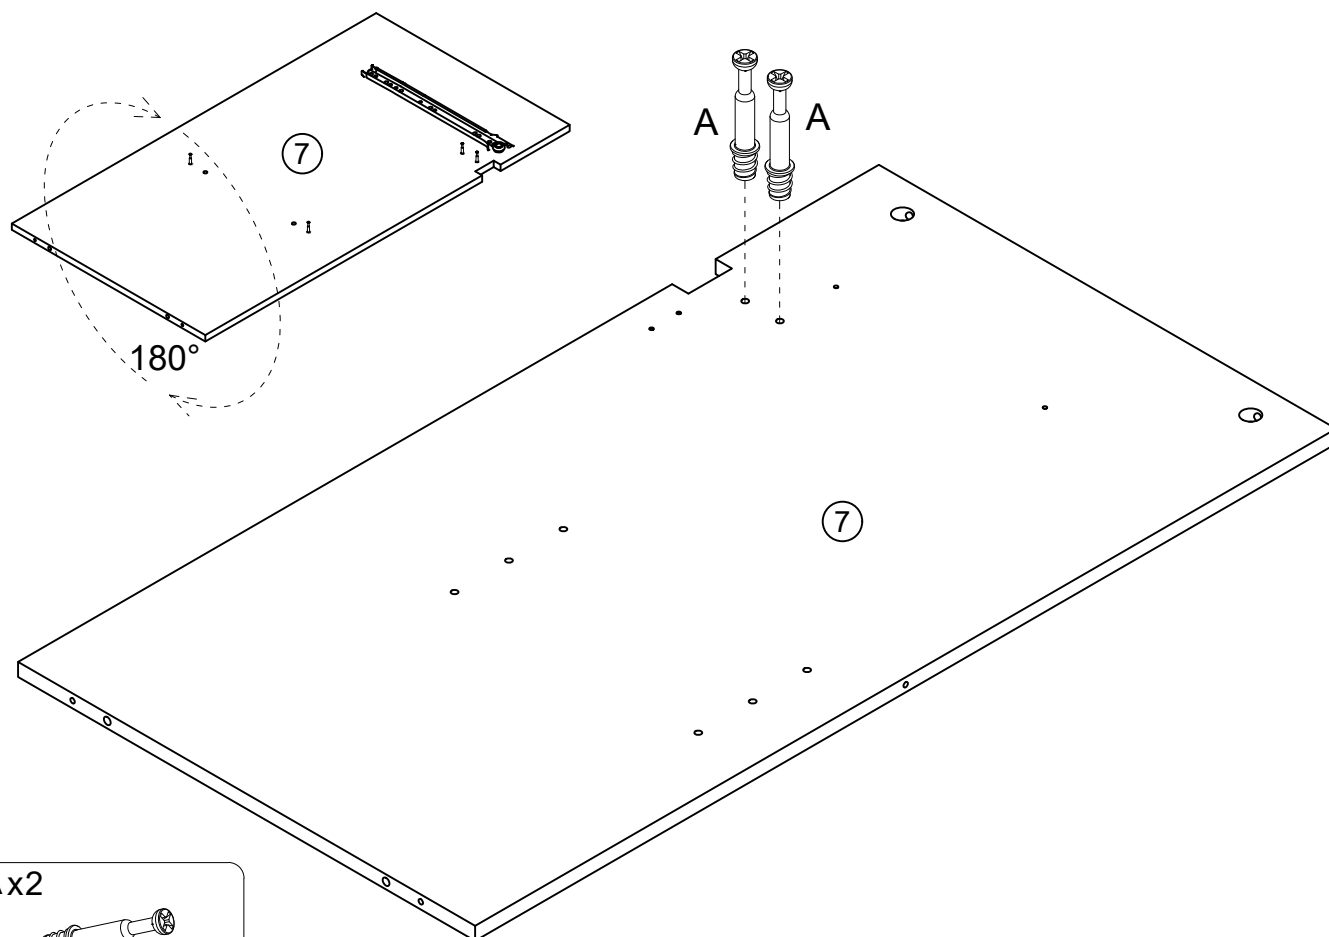

Ax2



Ø6x35mm

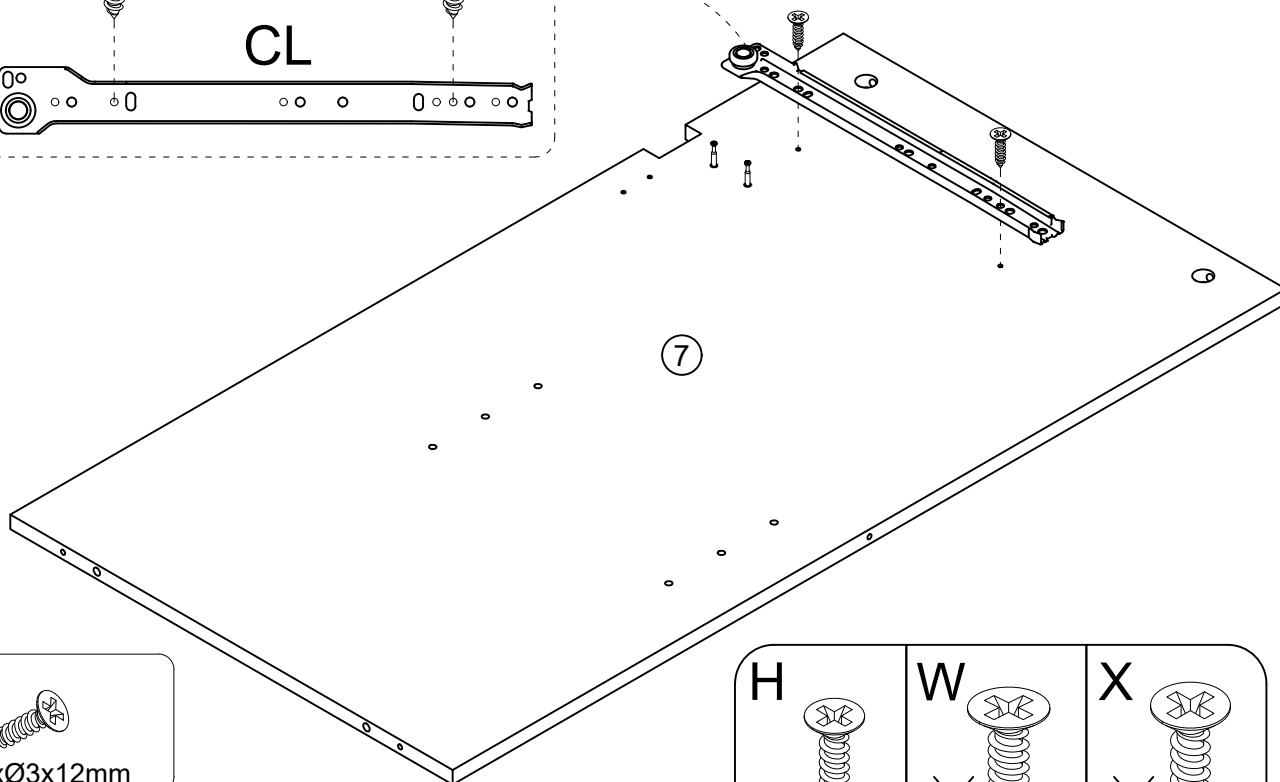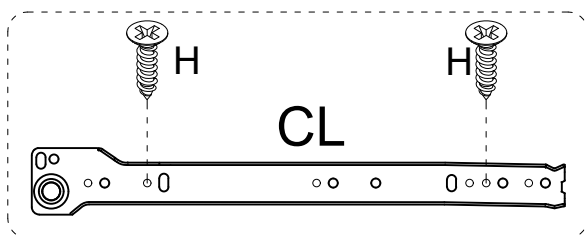

Hx2




Ø6xØ3x12mm

CLx1




H




Ø6xØ3x12mm

W





Ø7xØ3.5x14mm


X



Ø6xØ3x16mm

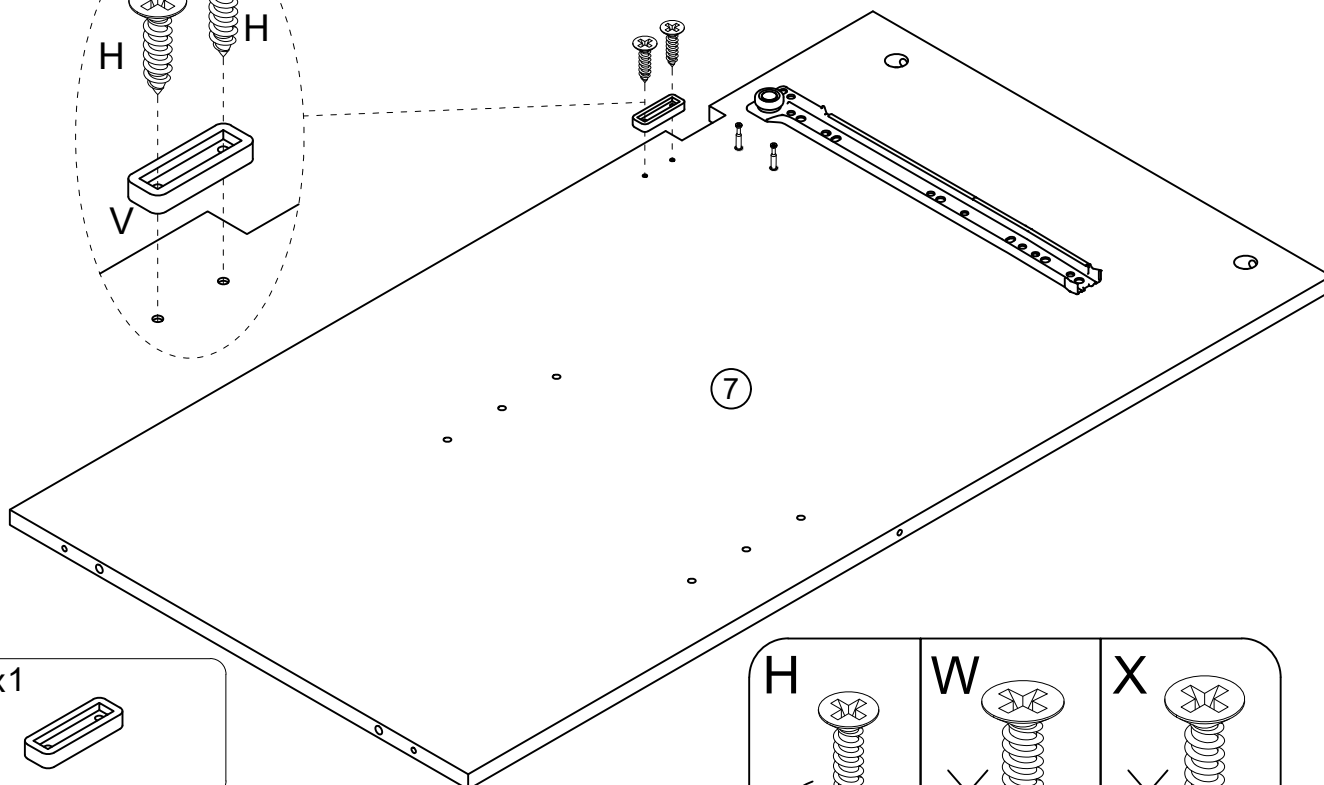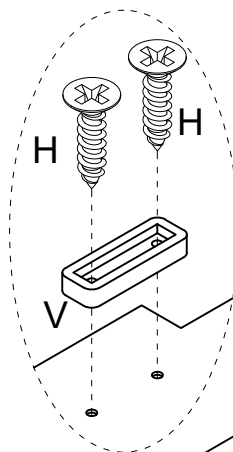

Vx1



Hx2



Ø6xØ3x12mm

H



Ø6xØ3x12mm

W






Ø7xØ3.5x14mm

X





Ø6xØ3x16mm

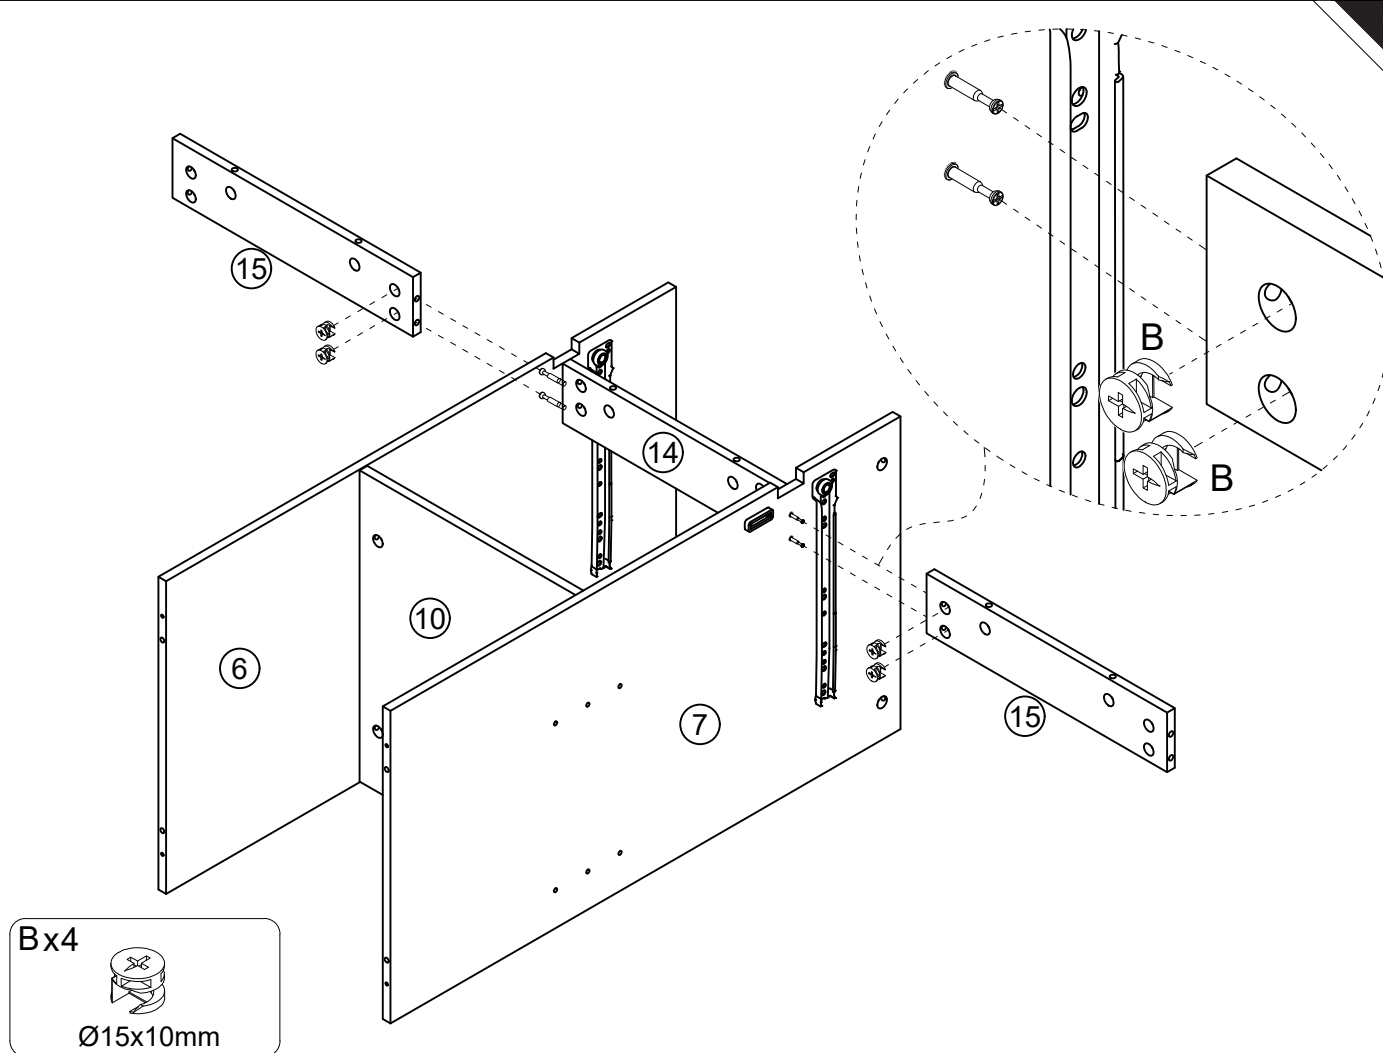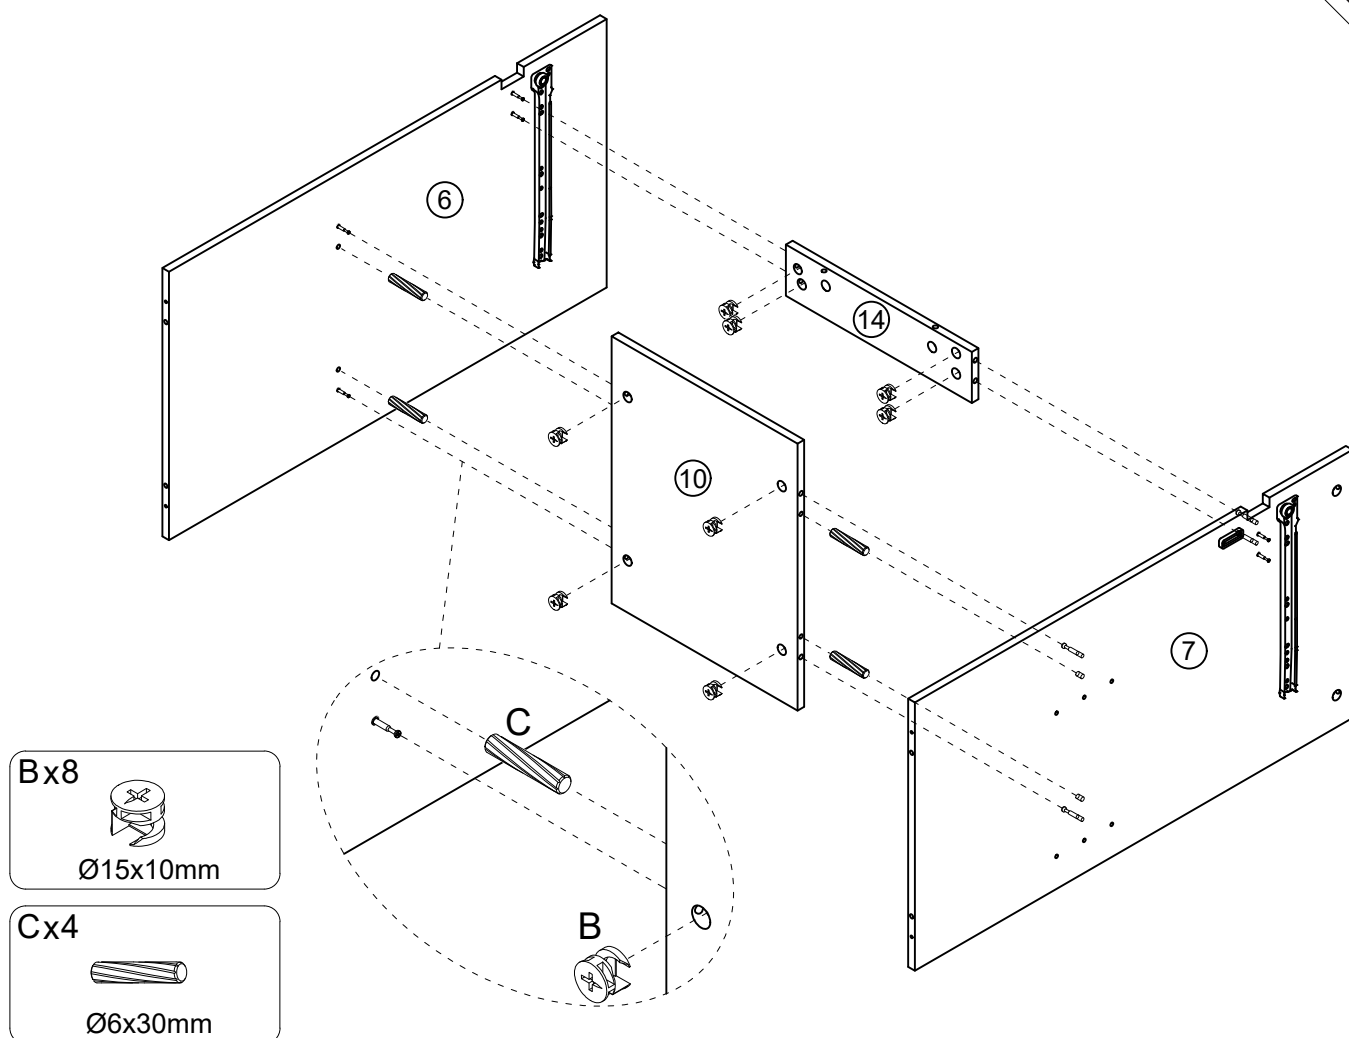

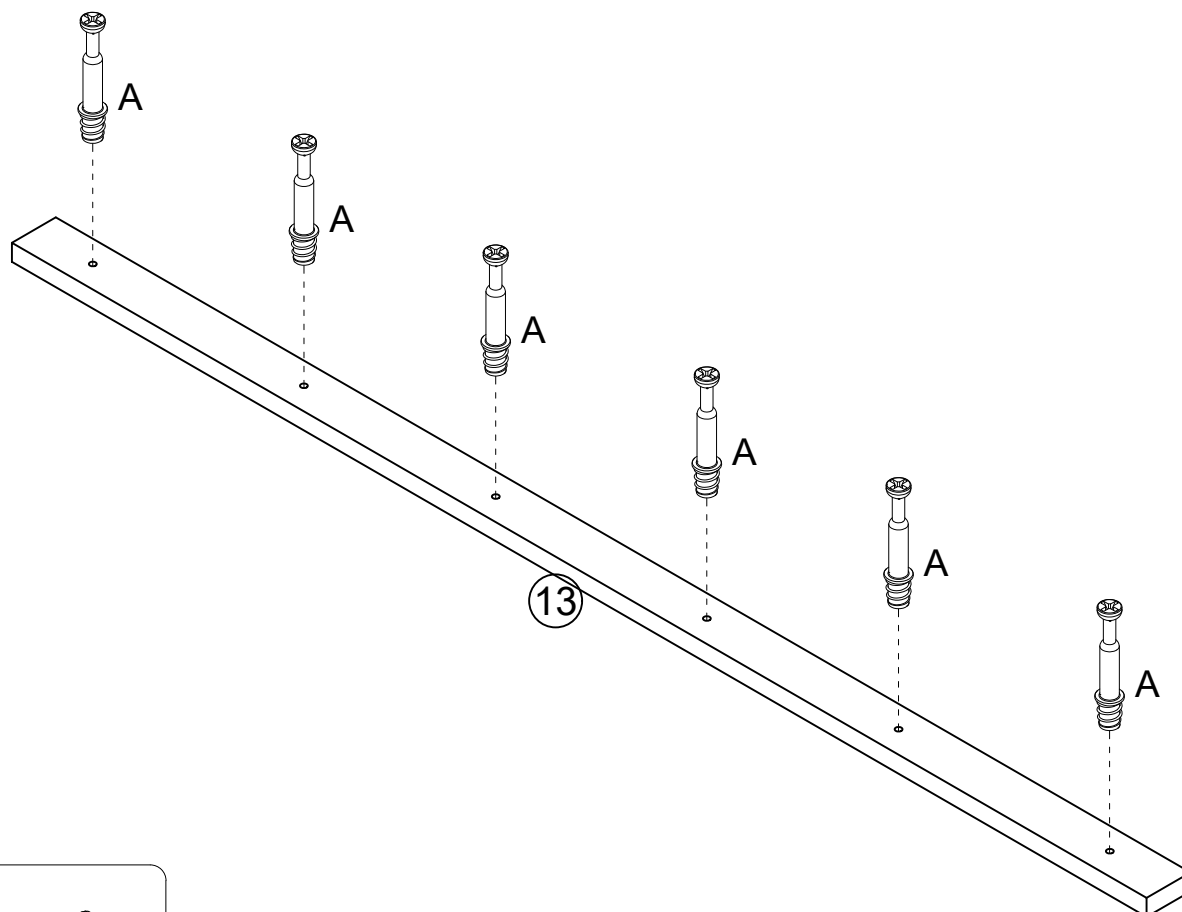


A x 6

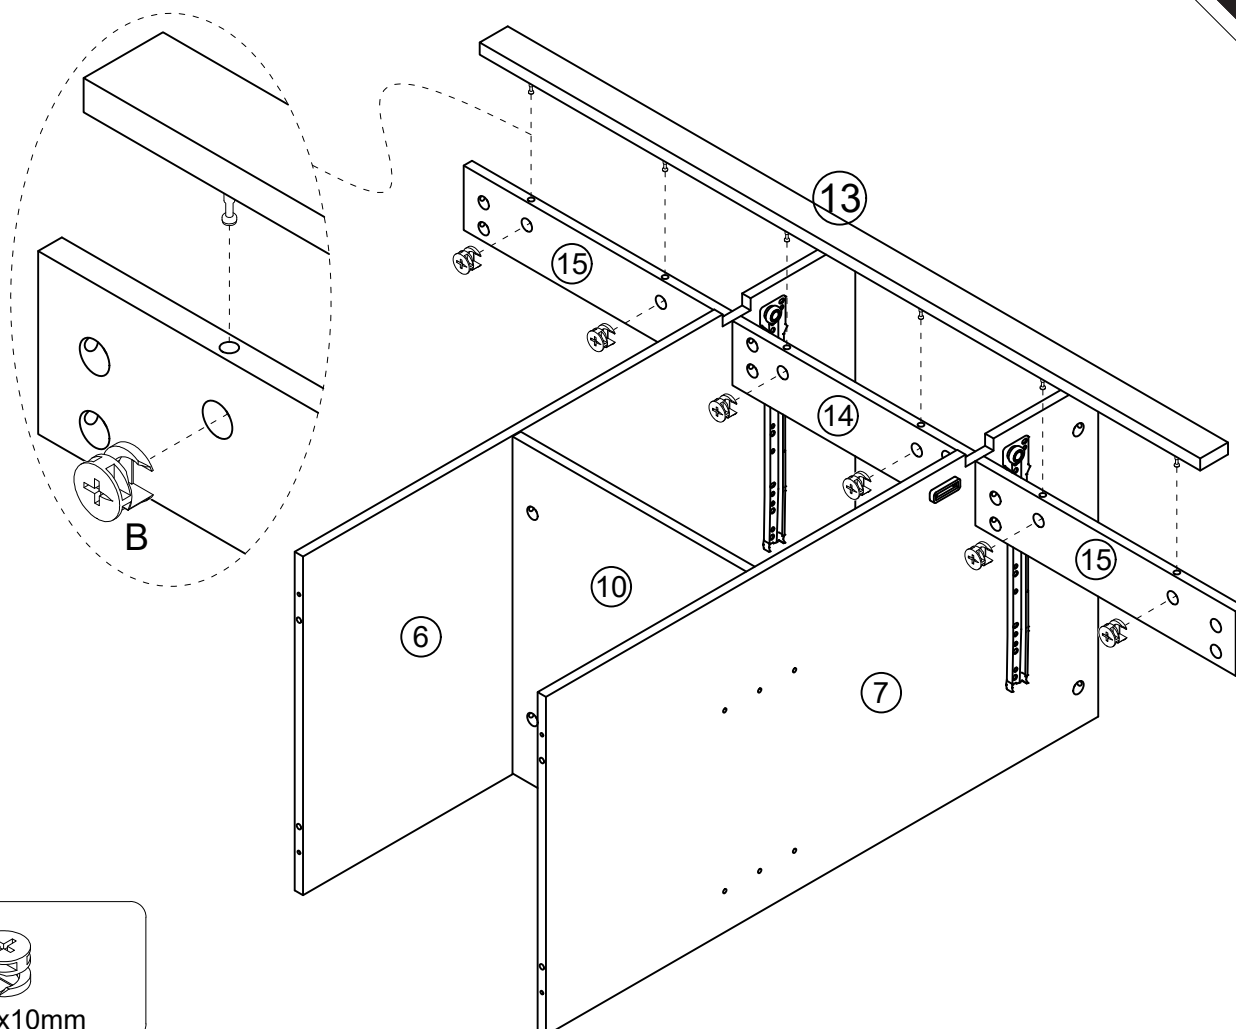

B x 6




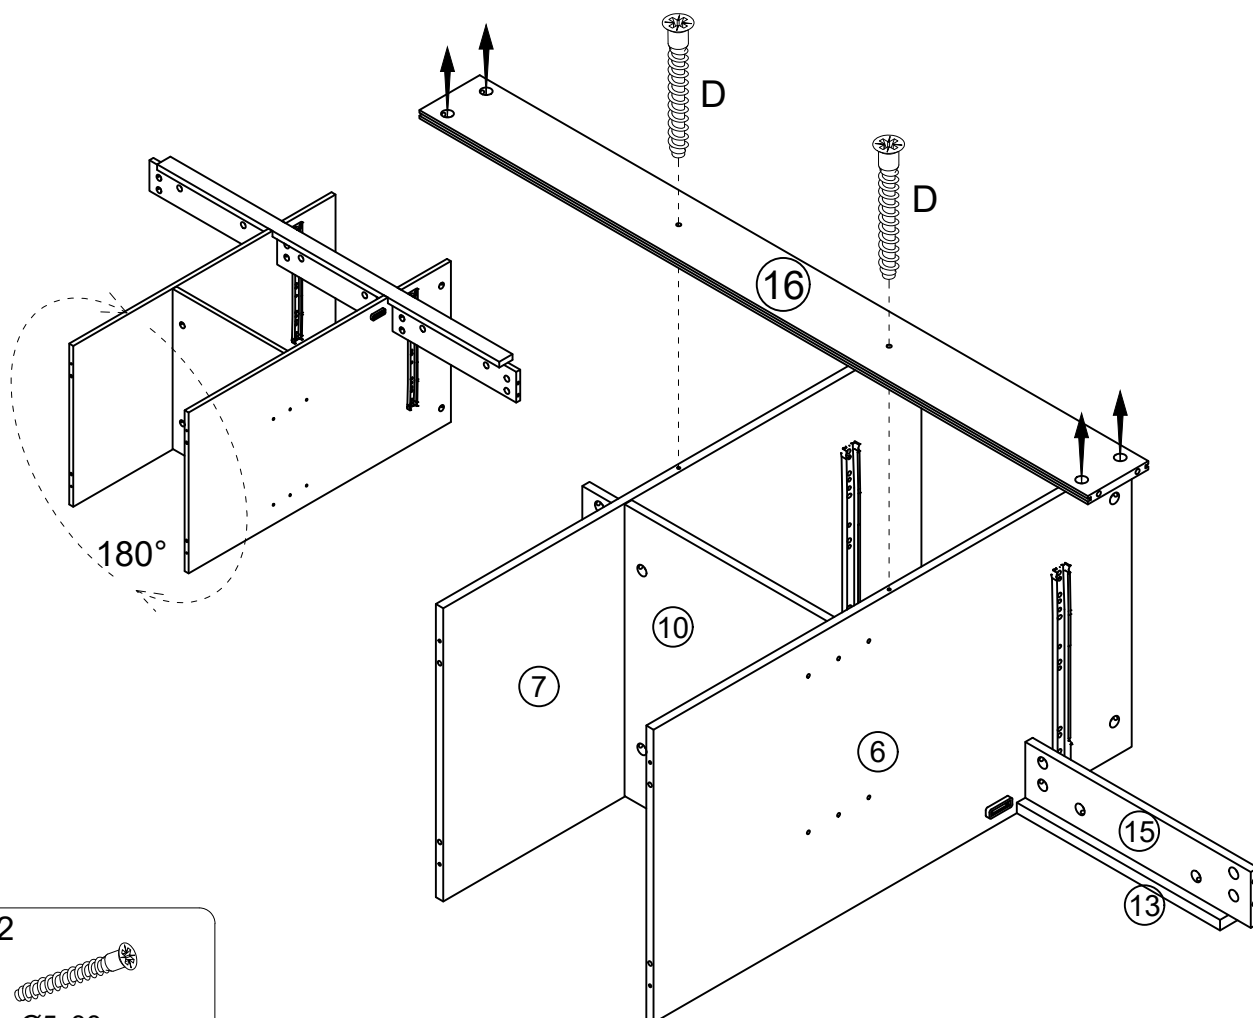


Dx2




Ø5x38mm

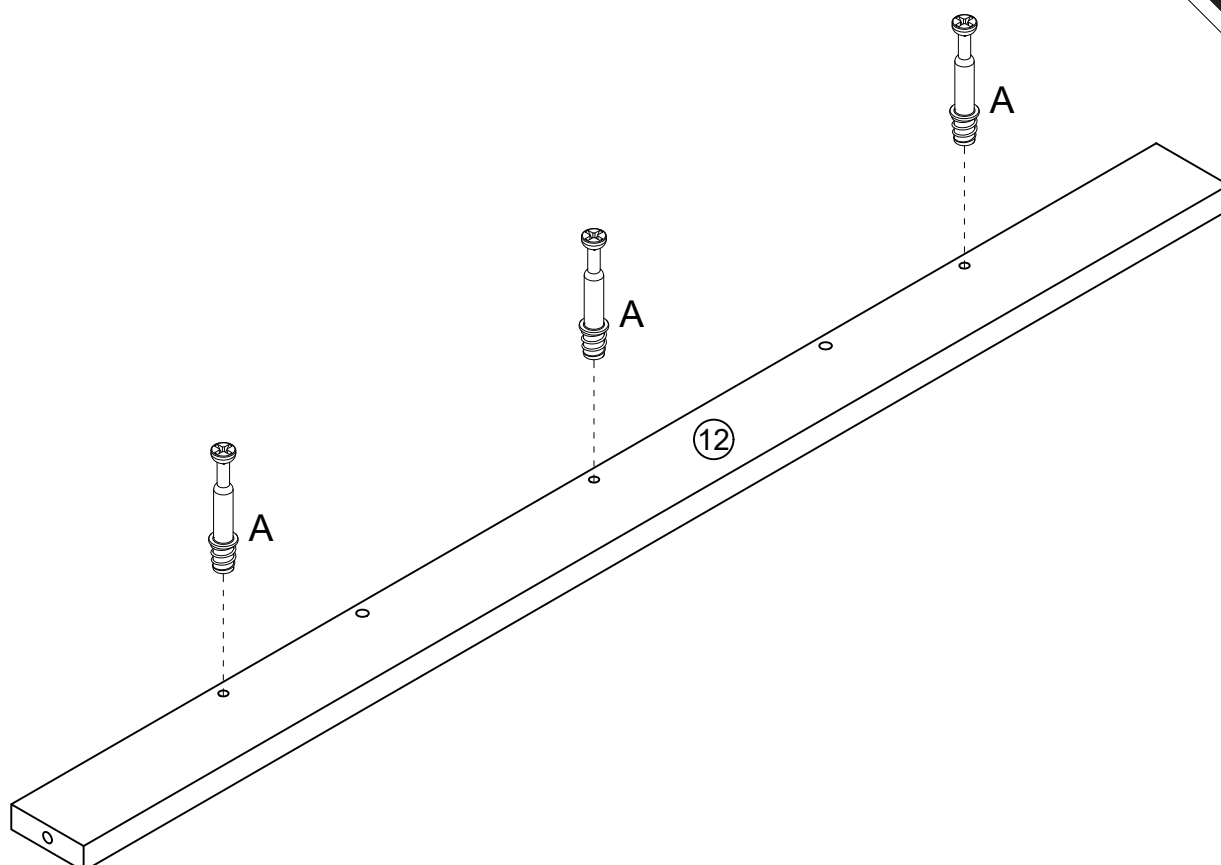


Ax3



Ø6x35mm

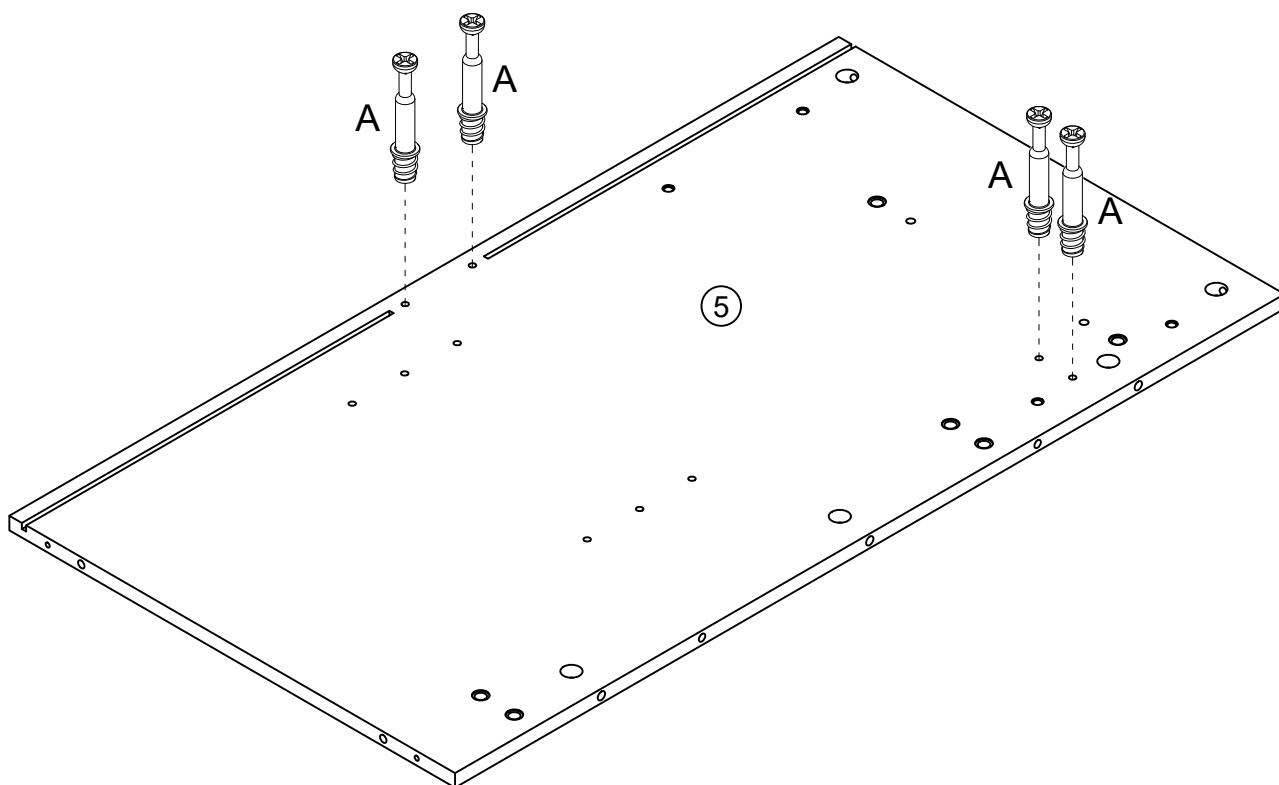

A x 4

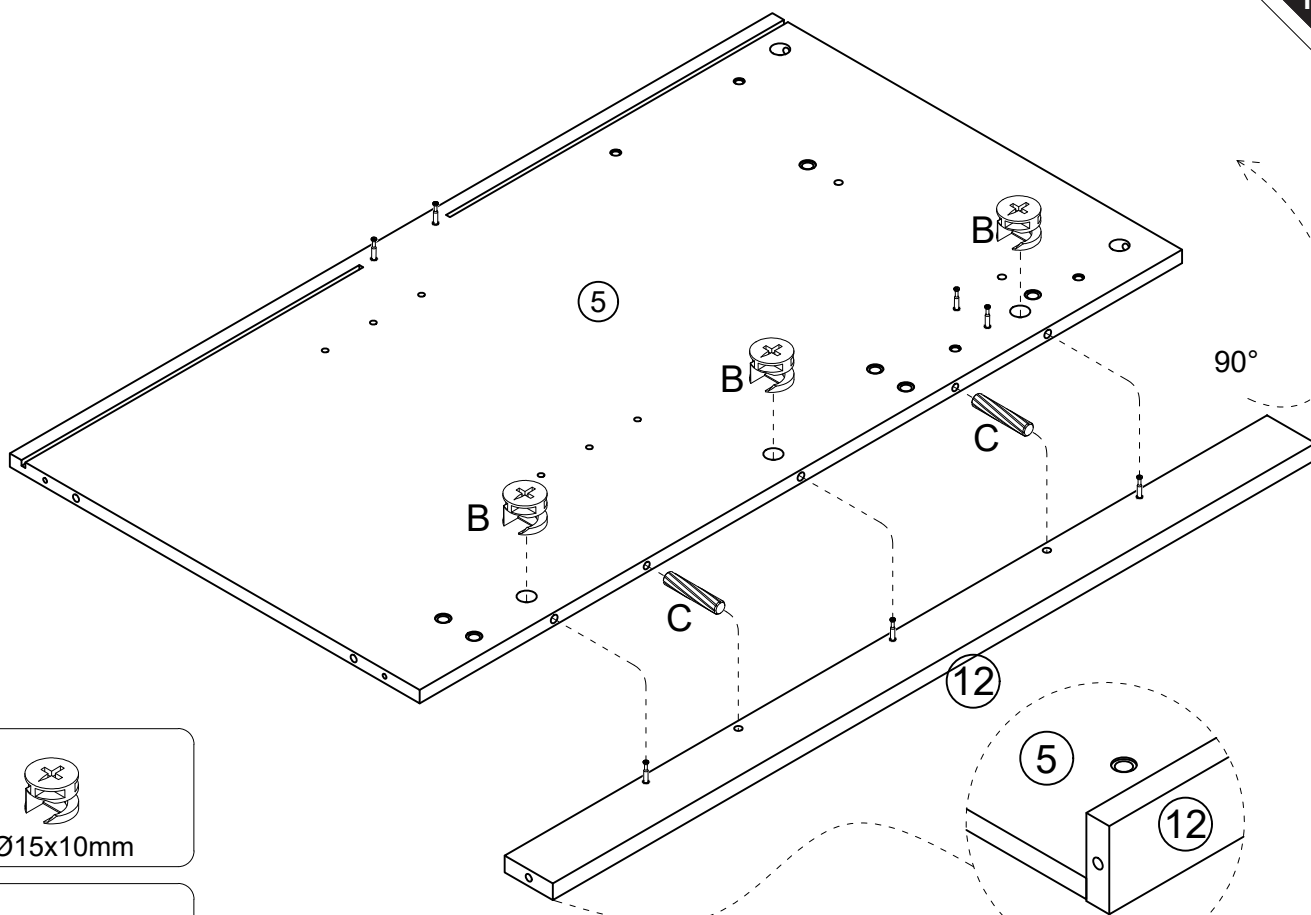

B x 3




Ø15x10mm

C x 2




Ø6x30mm


Installation completed illustration

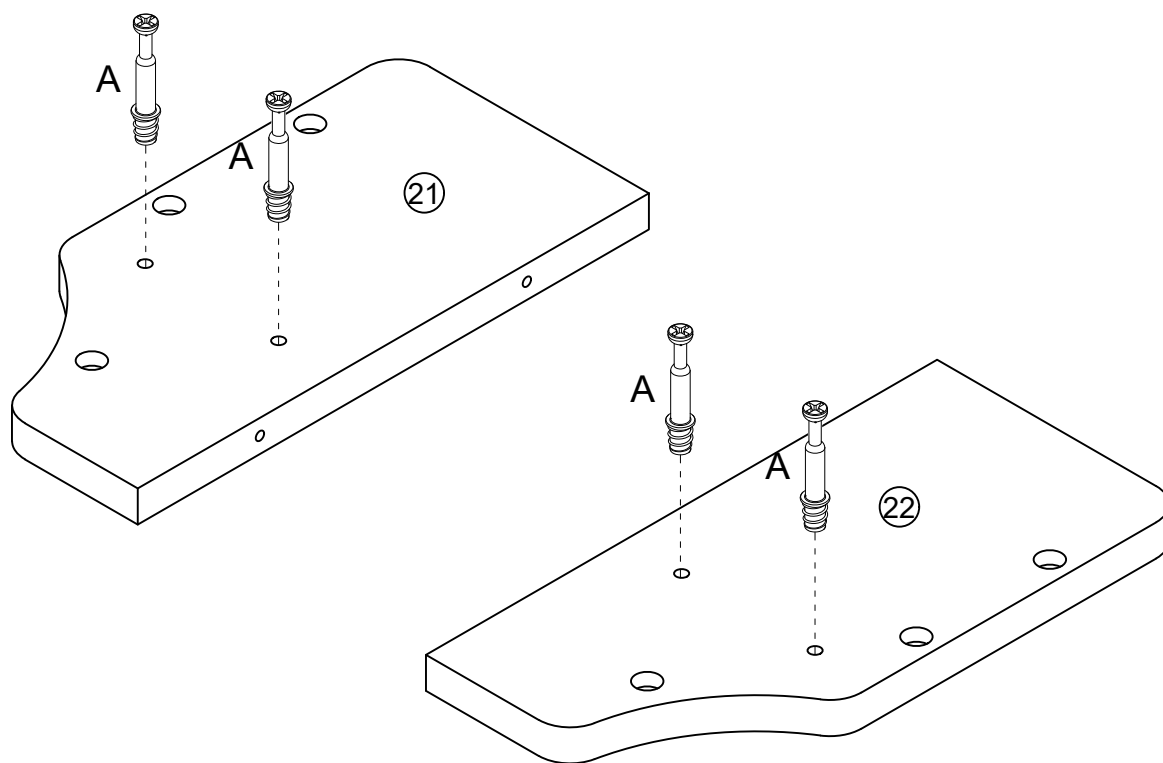

A x 4



Ø6x35mm

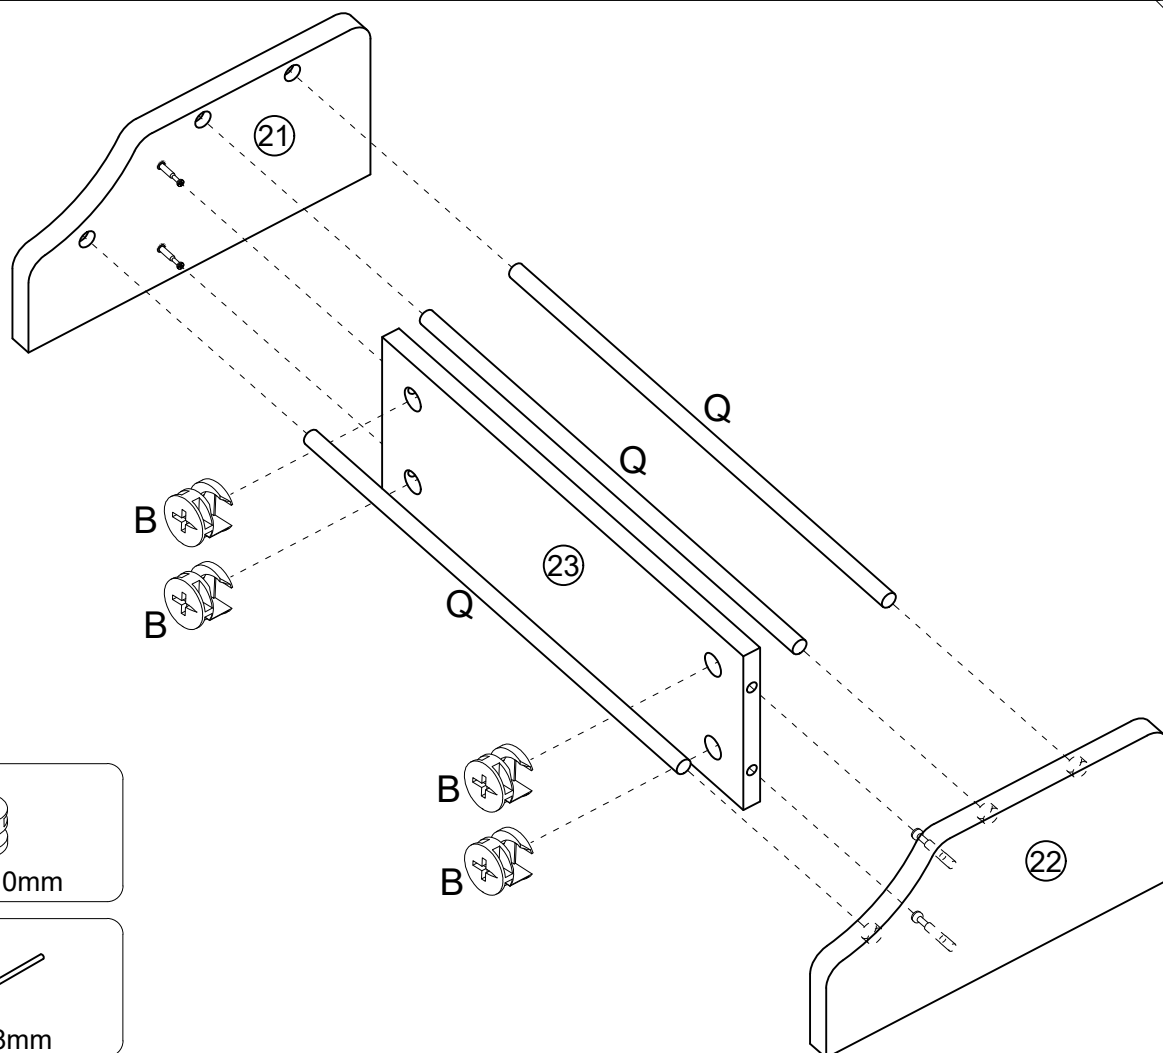


B x 4




Ø15x10mm

Q x 3




L=348mm


Dx4

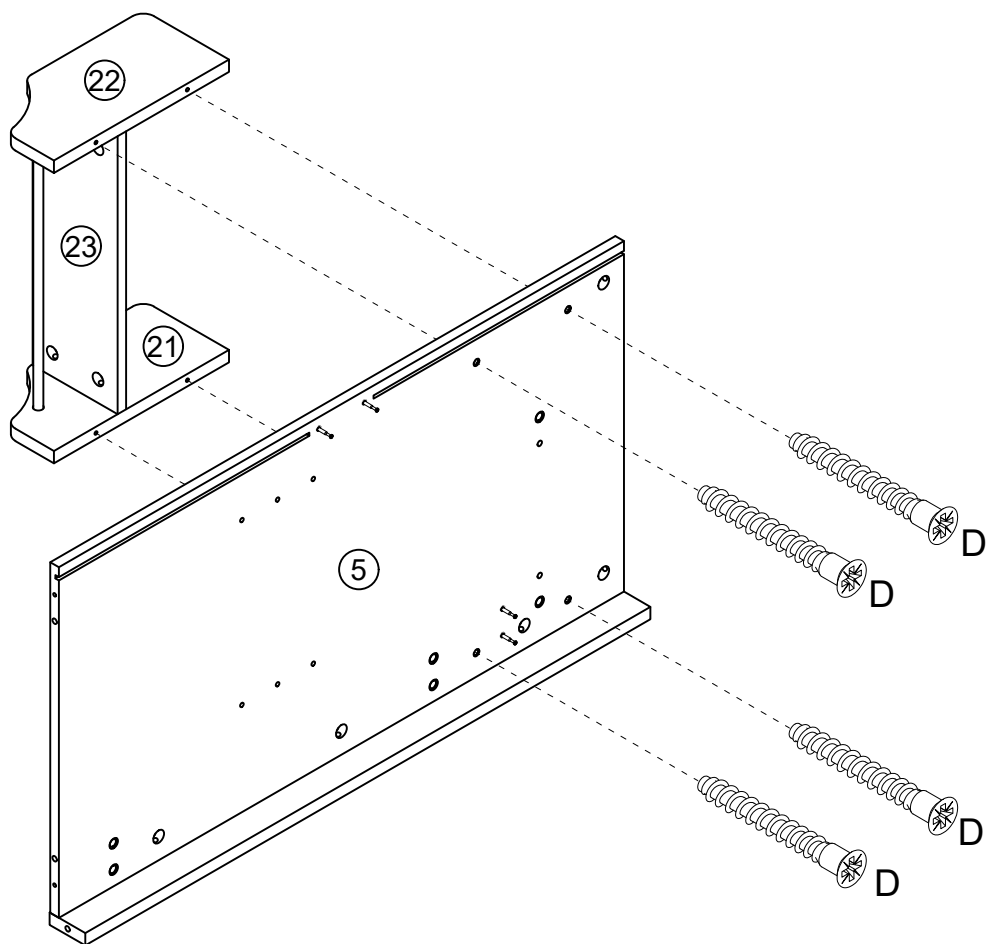


Cx2



Gx2

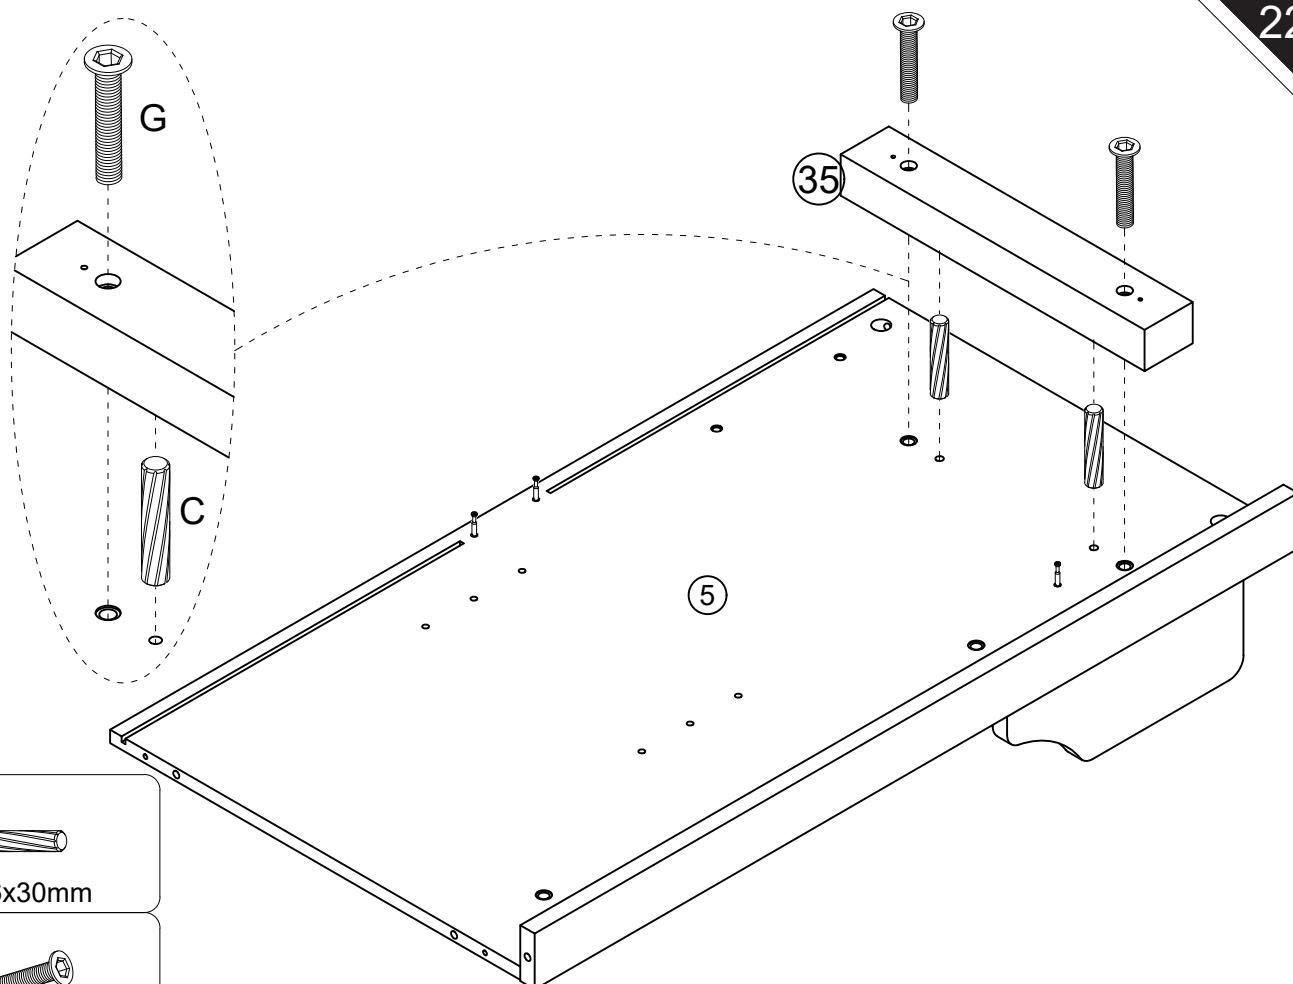


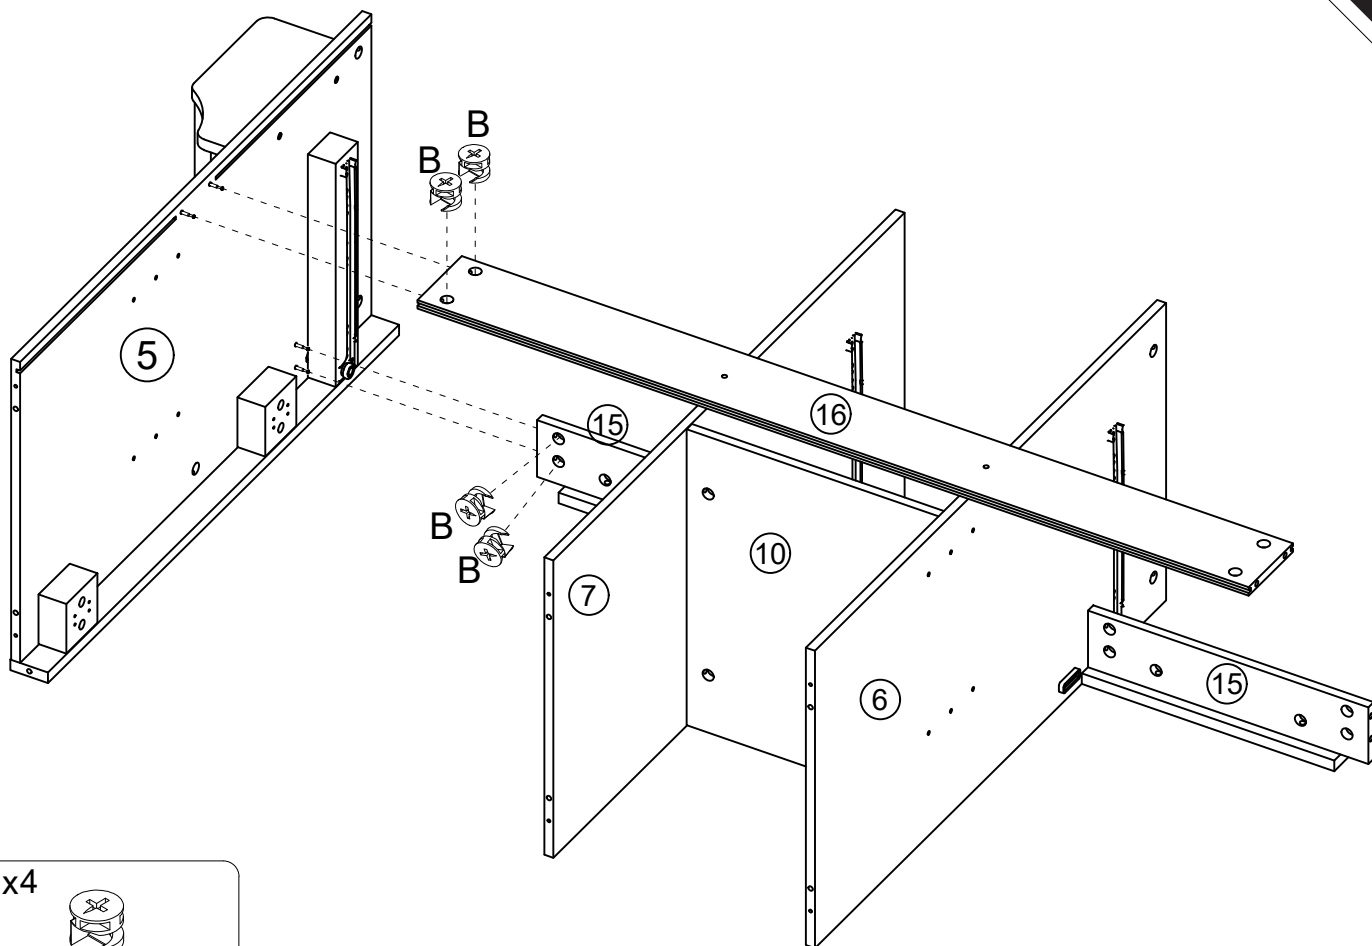


Bx4




Ø15x10mm

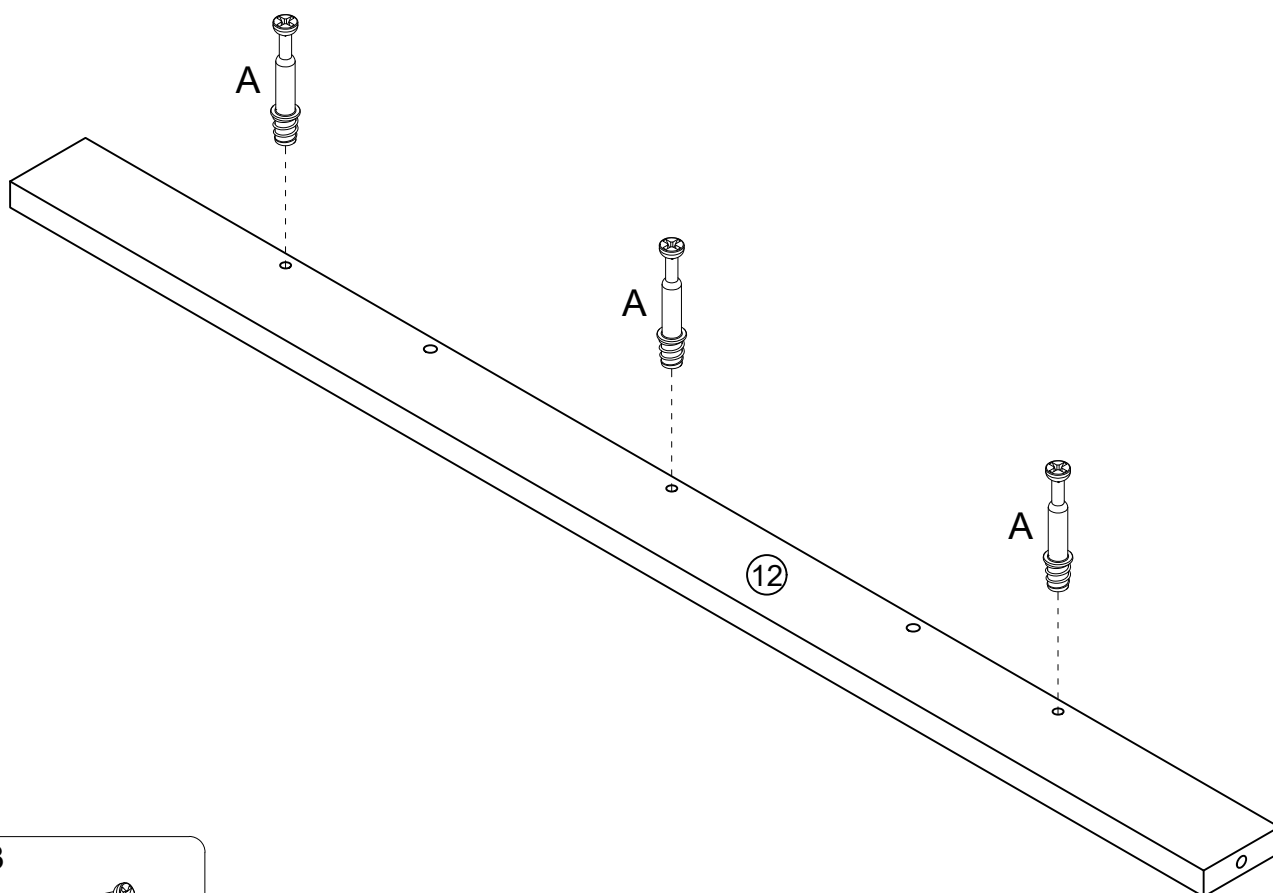



Ax3



Ø6x35mm

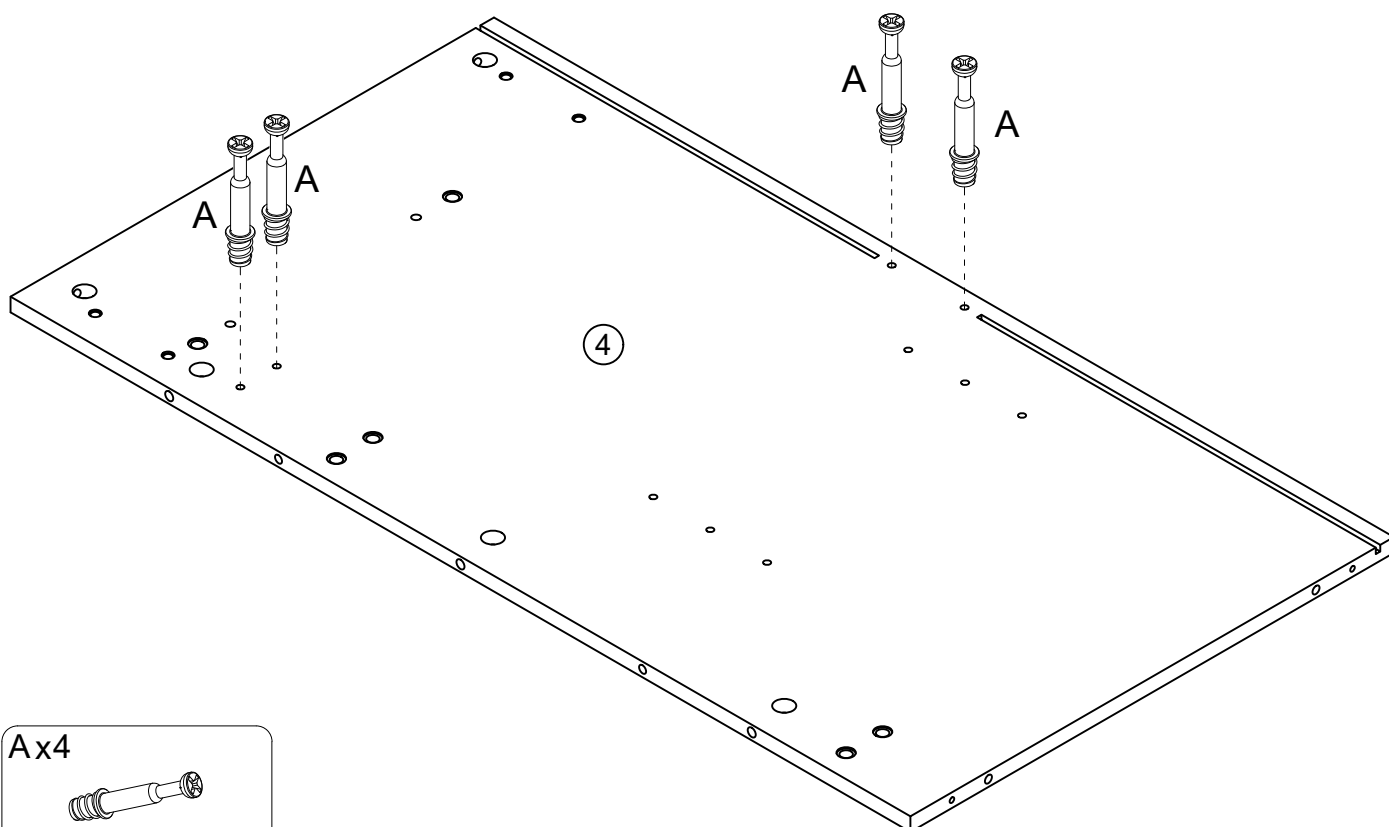

A x4

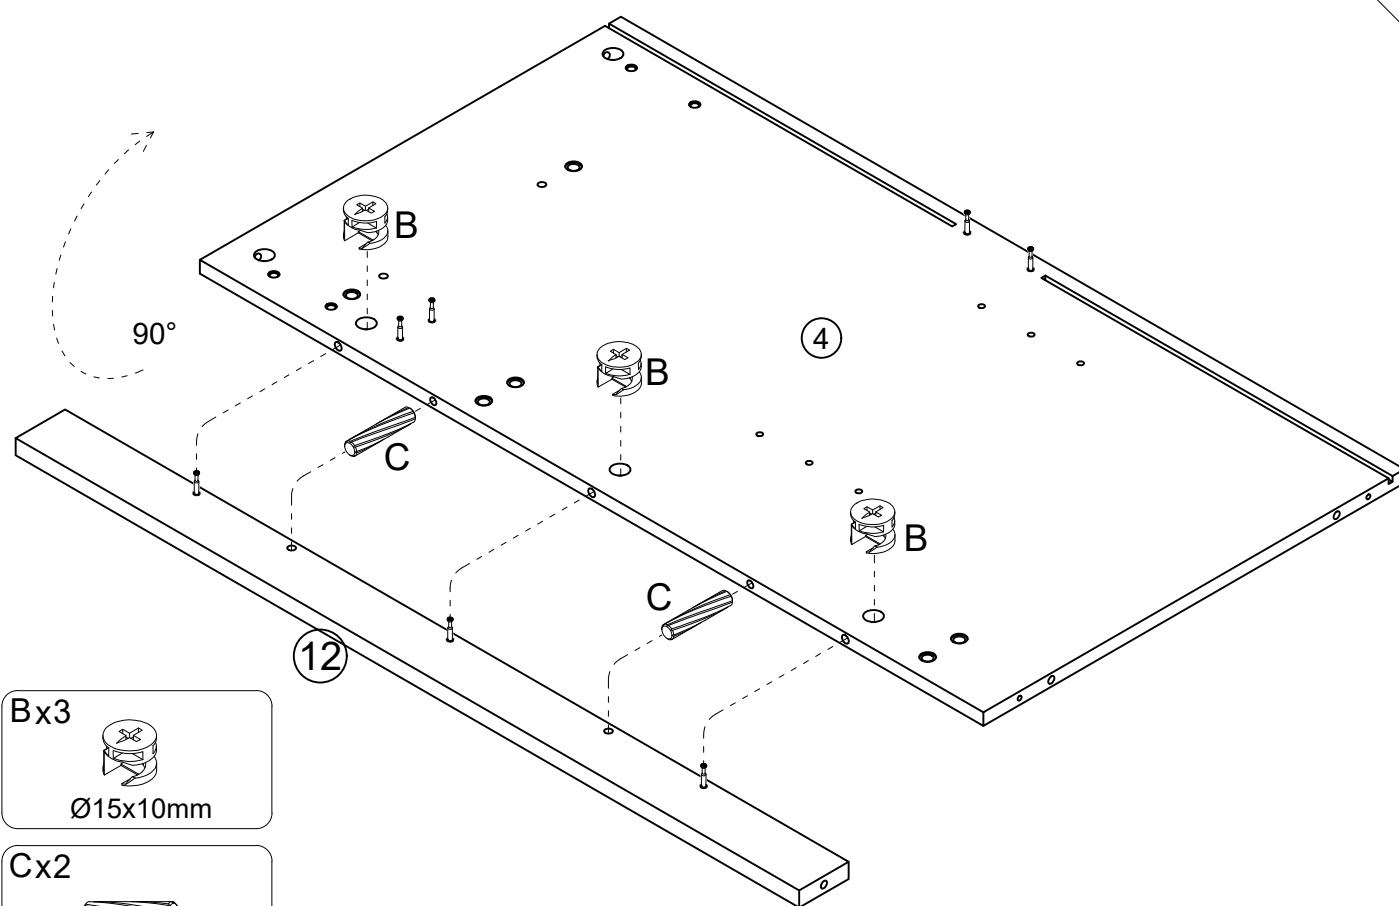


B x3

 $\text{Ø}15 \times 10\text{mm}$

C x2


 $\text{Ø}6 \times 30\text{mm}$

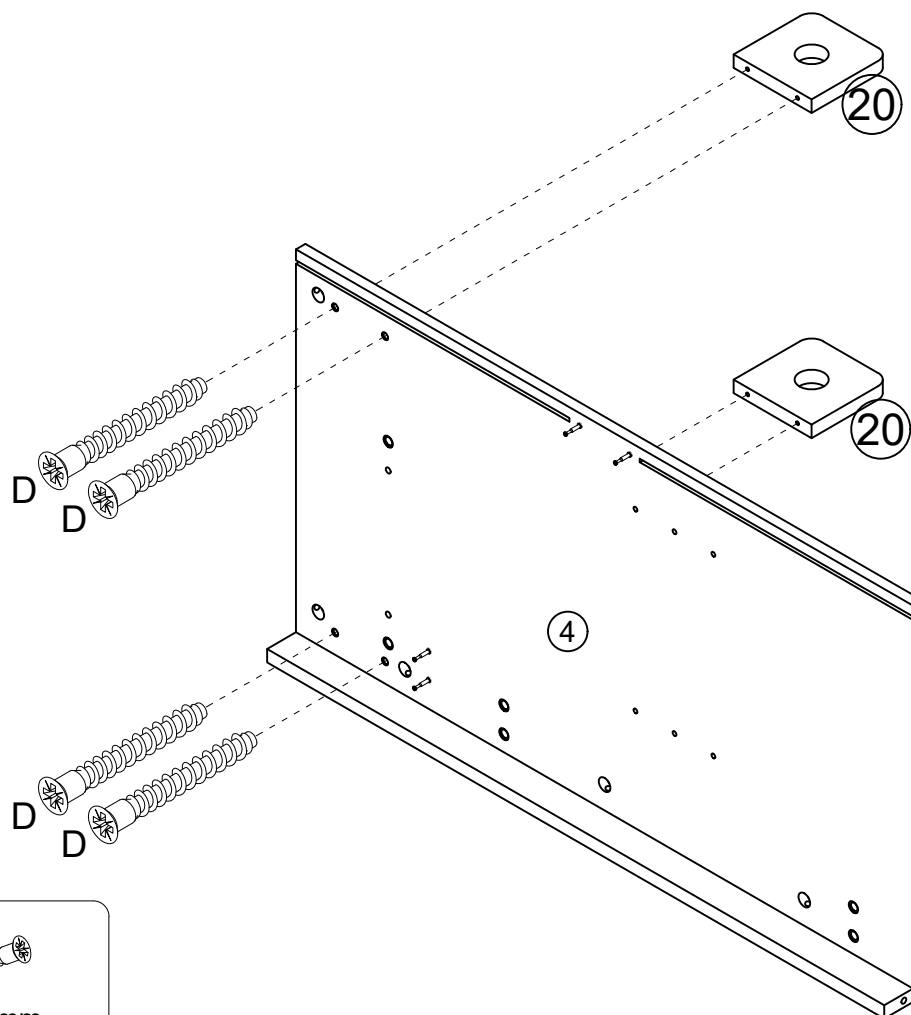

Dx4



Ø5x38mm

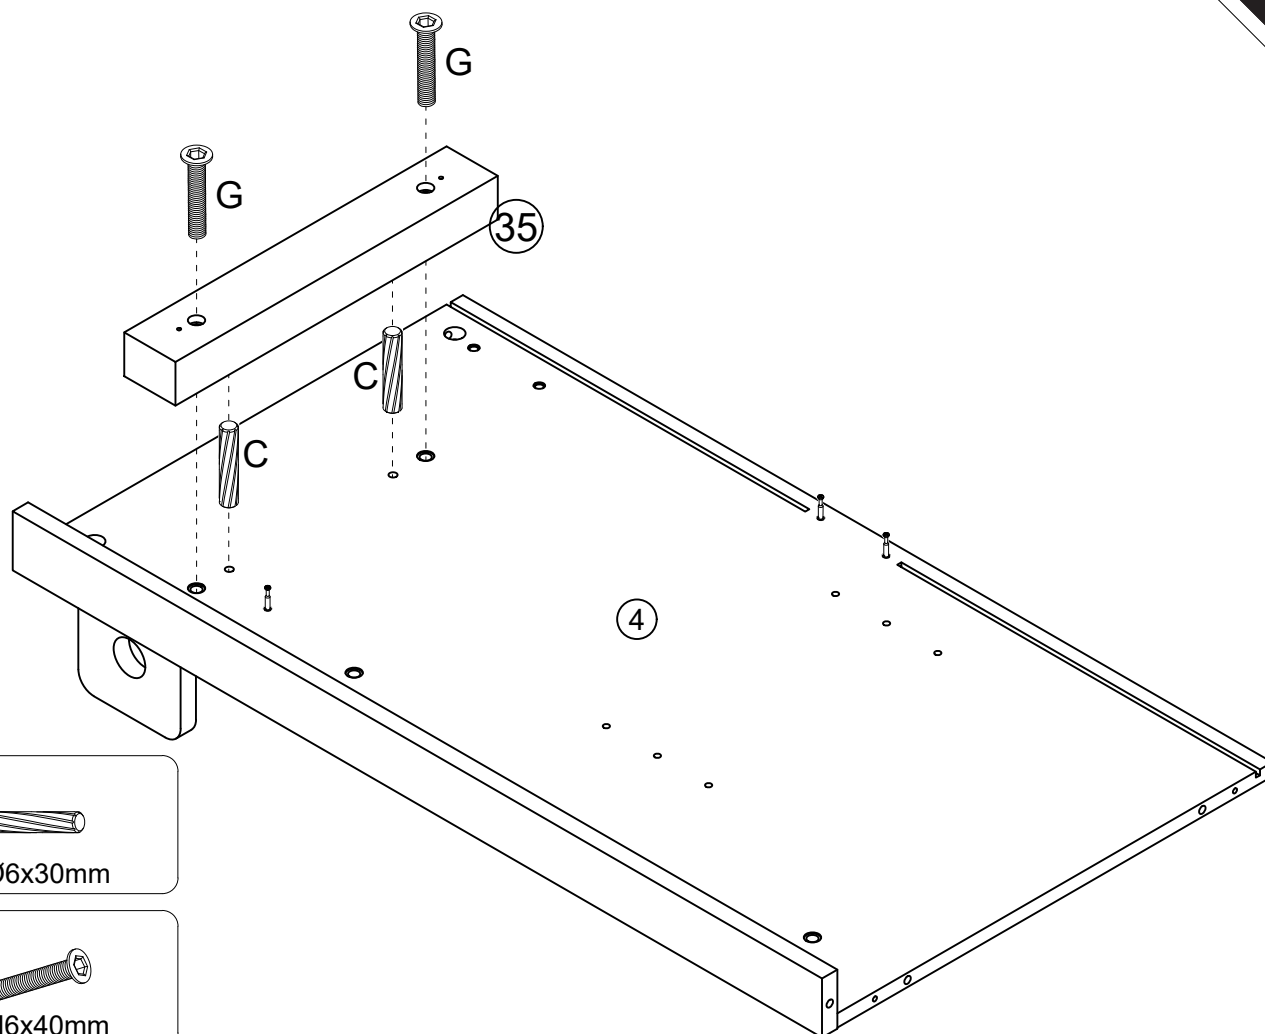

Cx2




Ø6x30mm

Gx2




M6x40mm

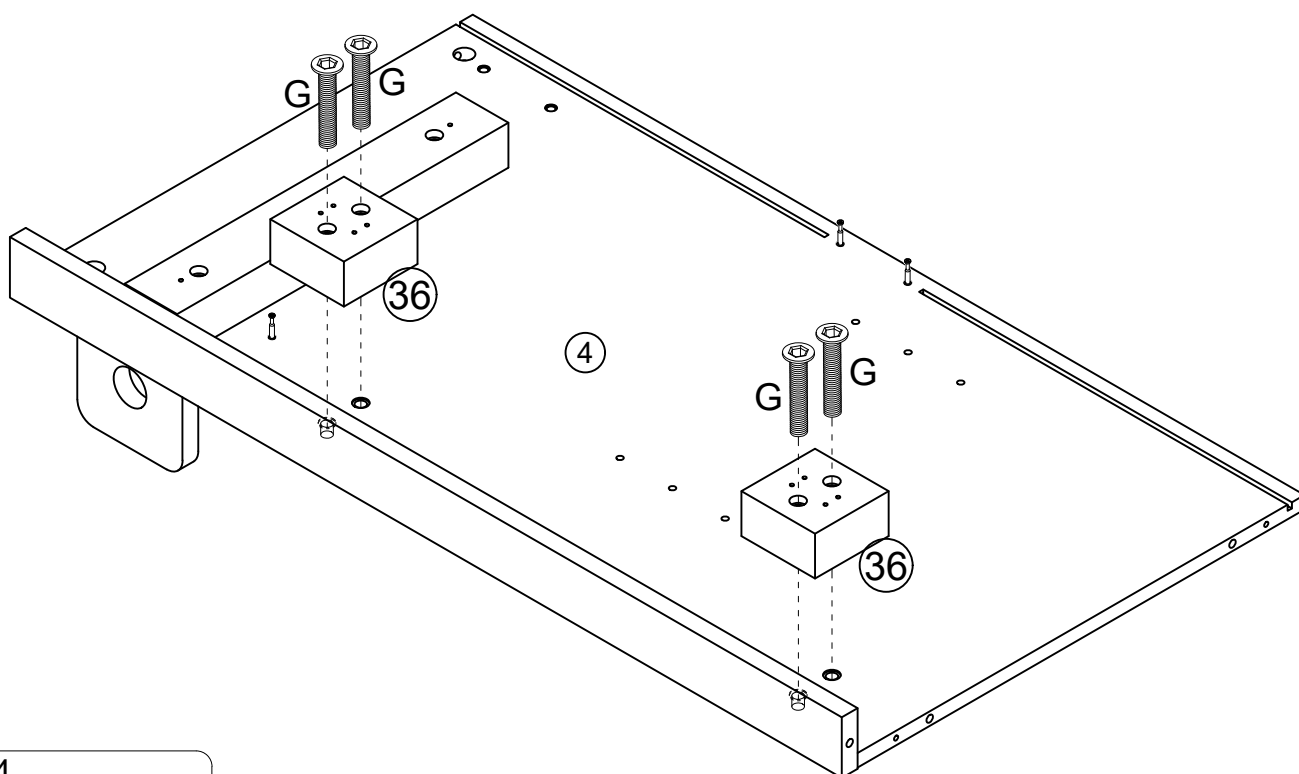

Gx4



M6x40mm

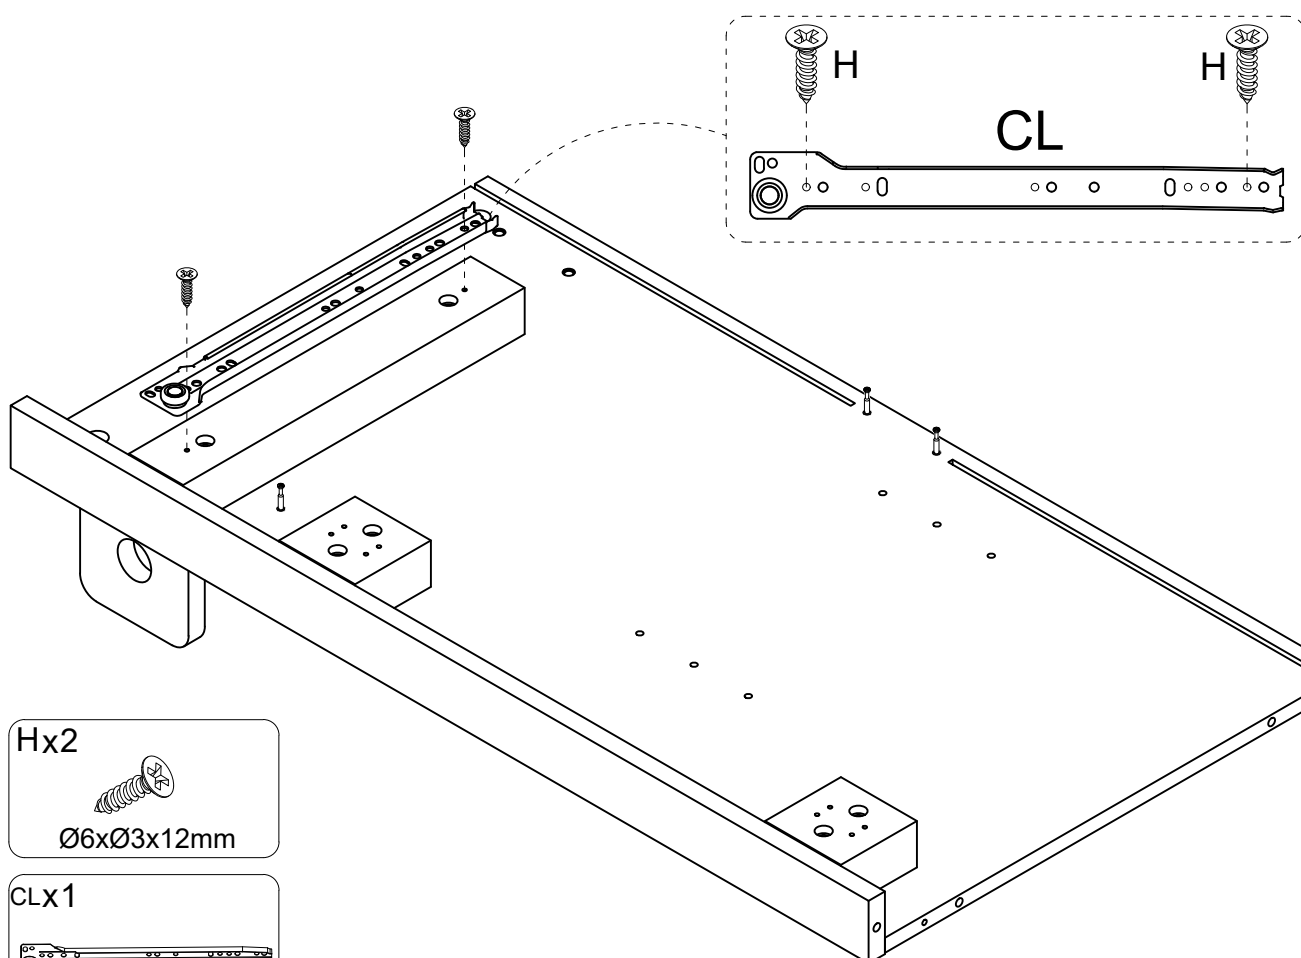


Hx2



Ø6xØ3x12mm

CLx1




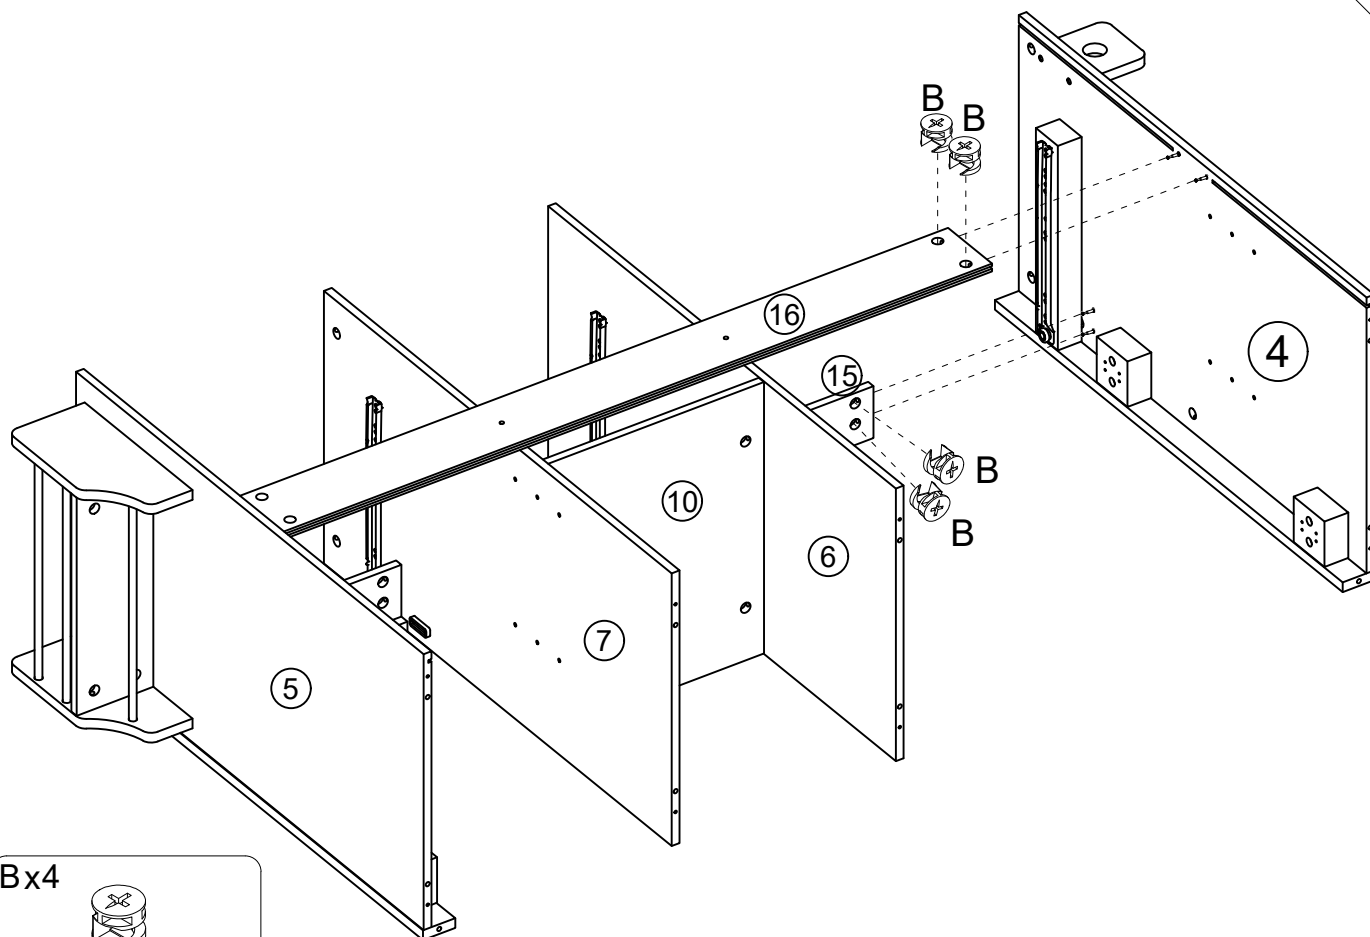

Bx4




Ø15x10mm

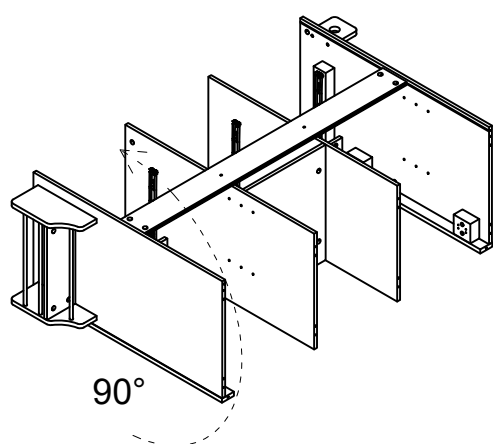


90°

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

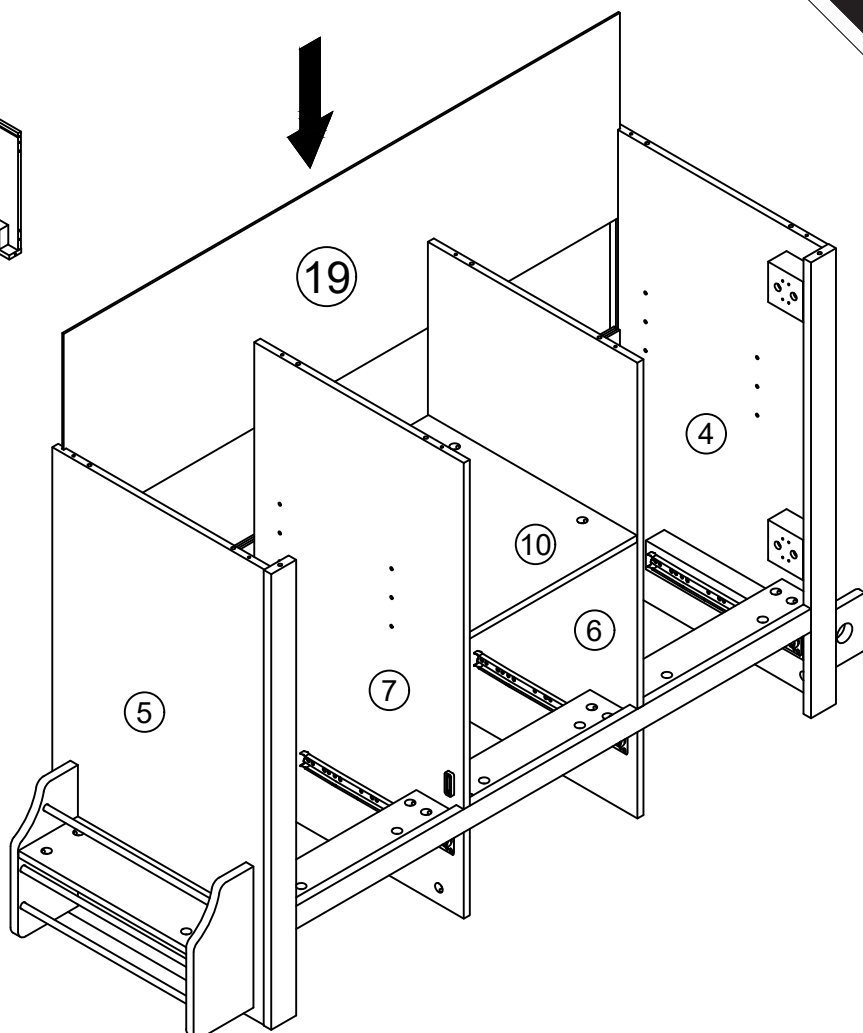

Pay attention to the direction of the slots on the back side.

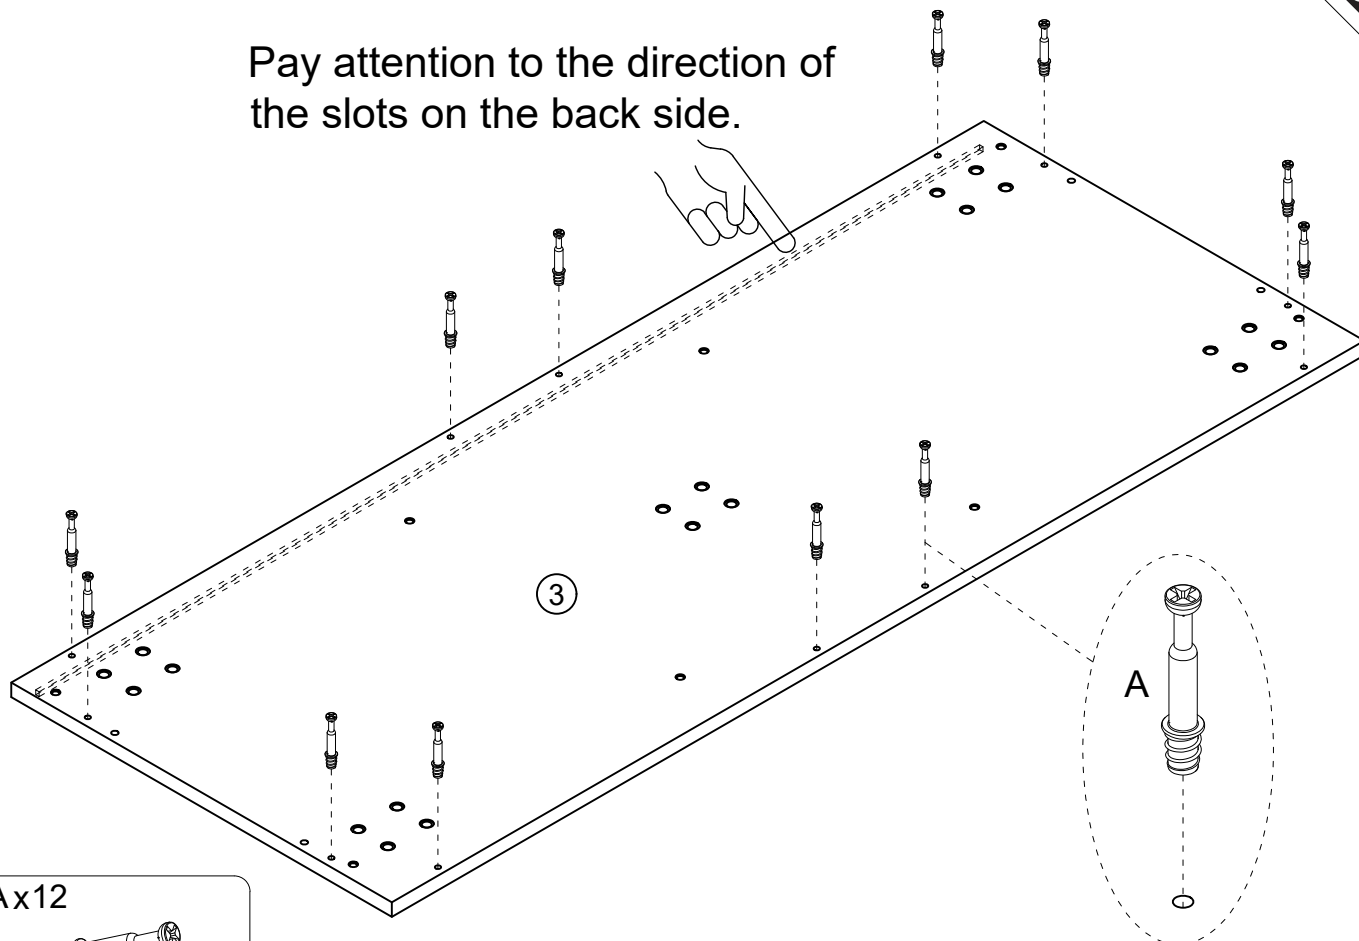

Ax12



Ø6x35mm

Pay attention to the direction of the slots on the back side.



The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.



Cx10





Ø6x30mm


Dx8



Ø5x38mm

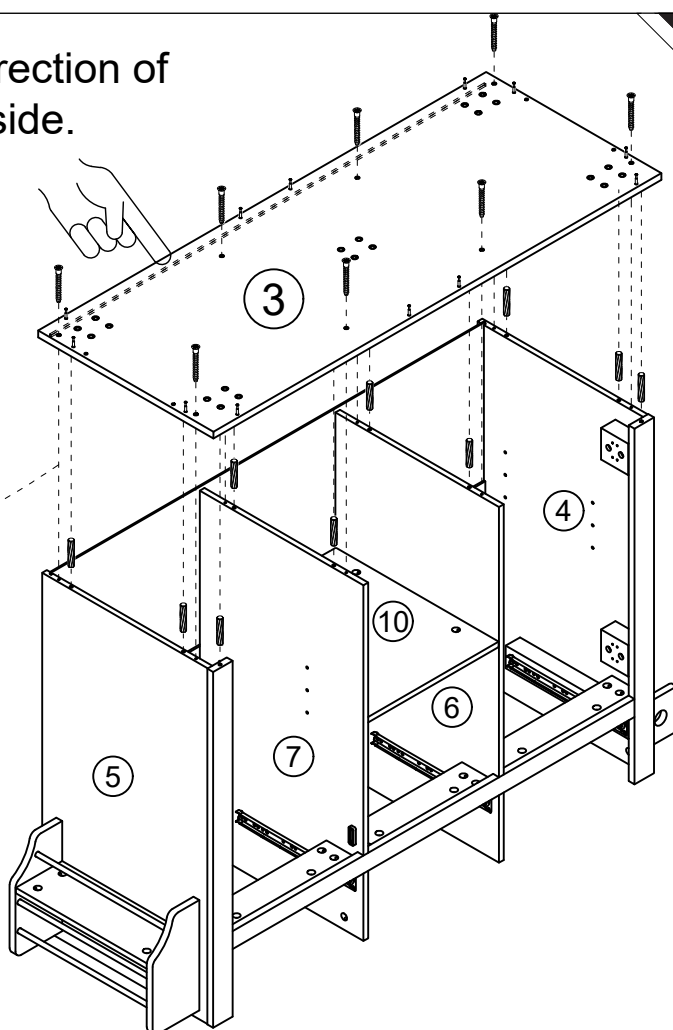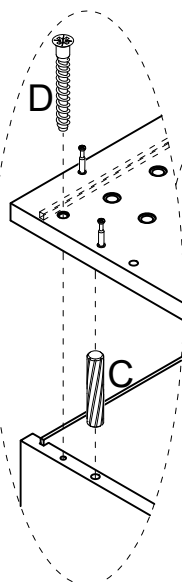


x2

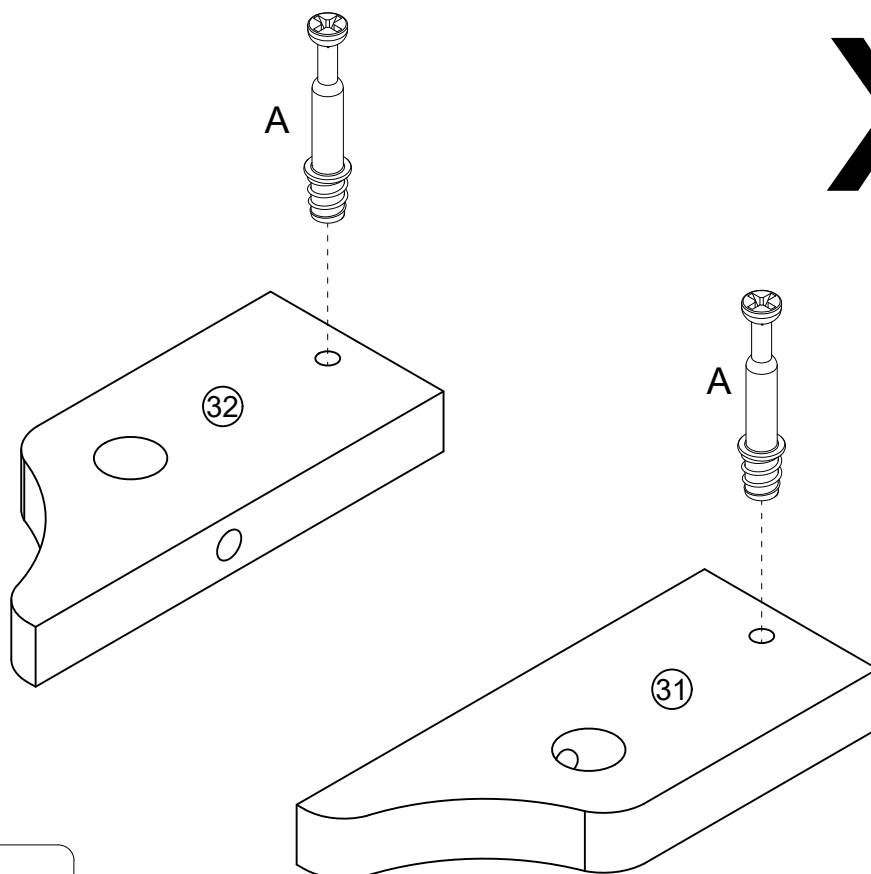

A x4




x2

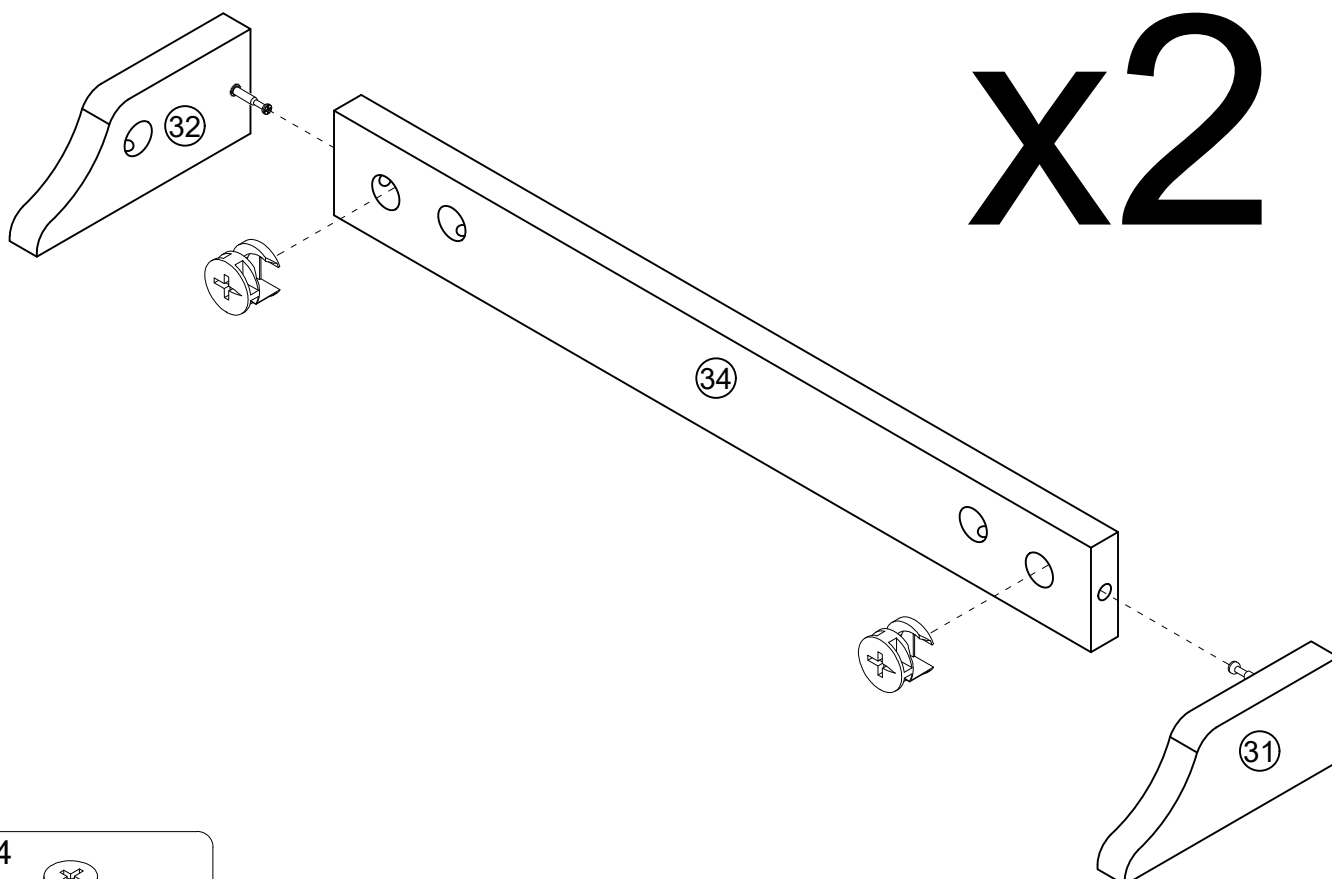

B x4



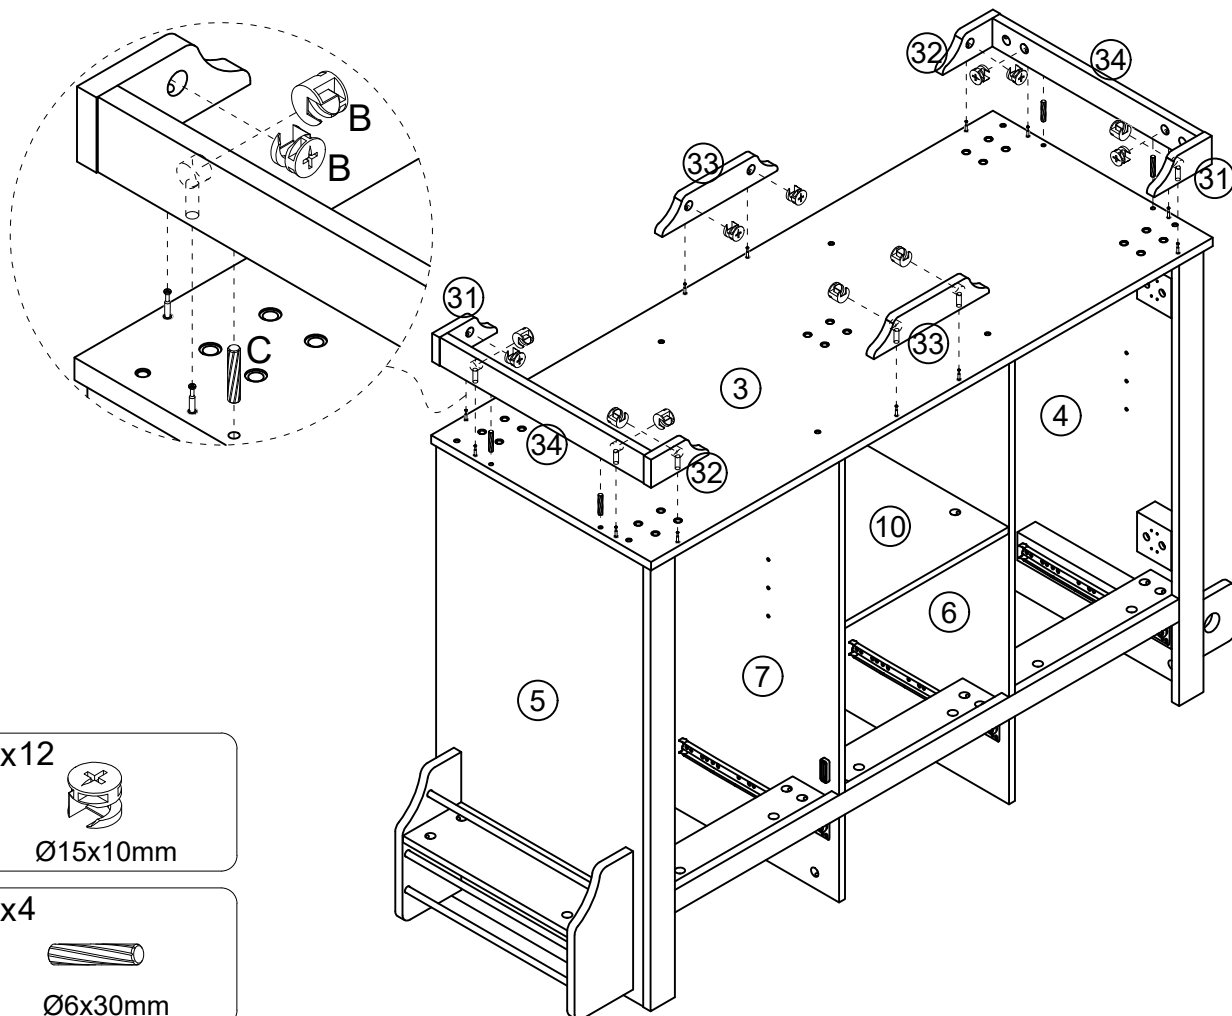

Bx12




Ø15x10mm


Cx4



Ø6x30mm

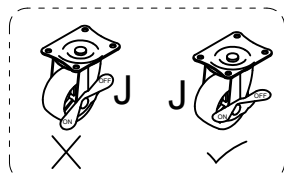

Before installation, please make sure to adjust component **J** to the non-braking position.

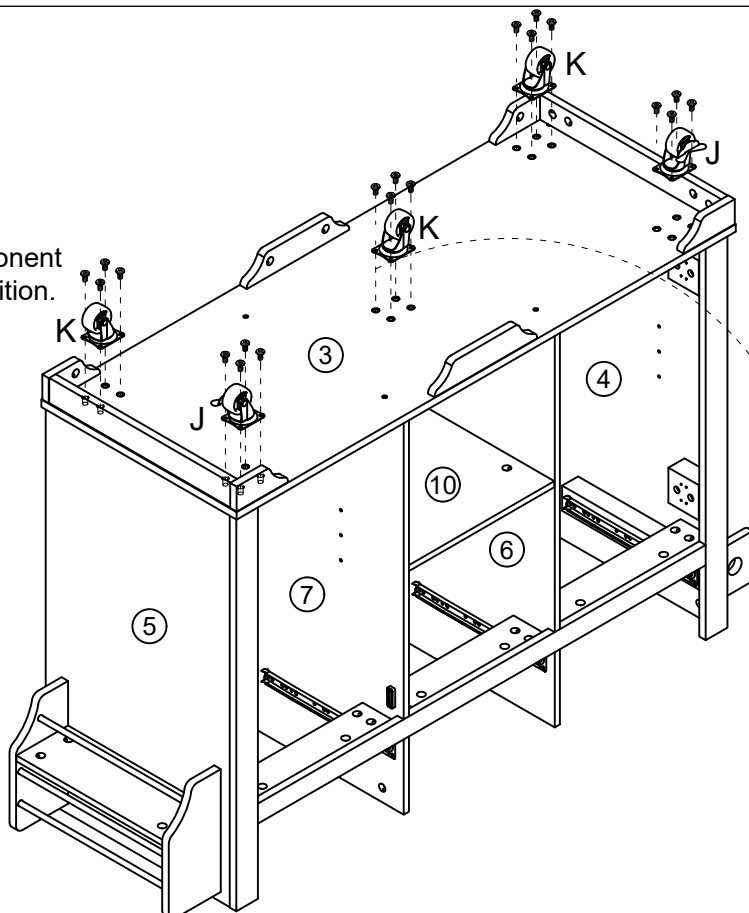

Jx2




Kx3




Sx20




M6x10mm


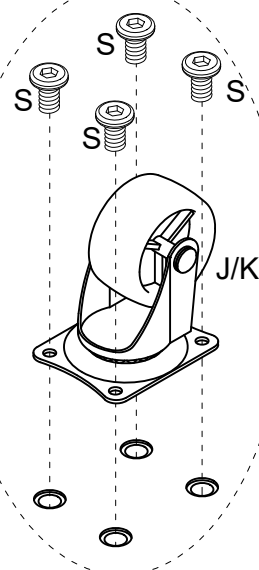


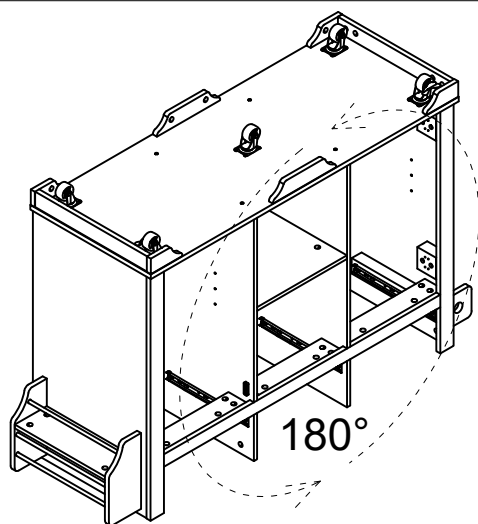


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

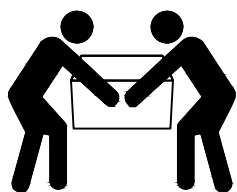


Recommended installers: 2

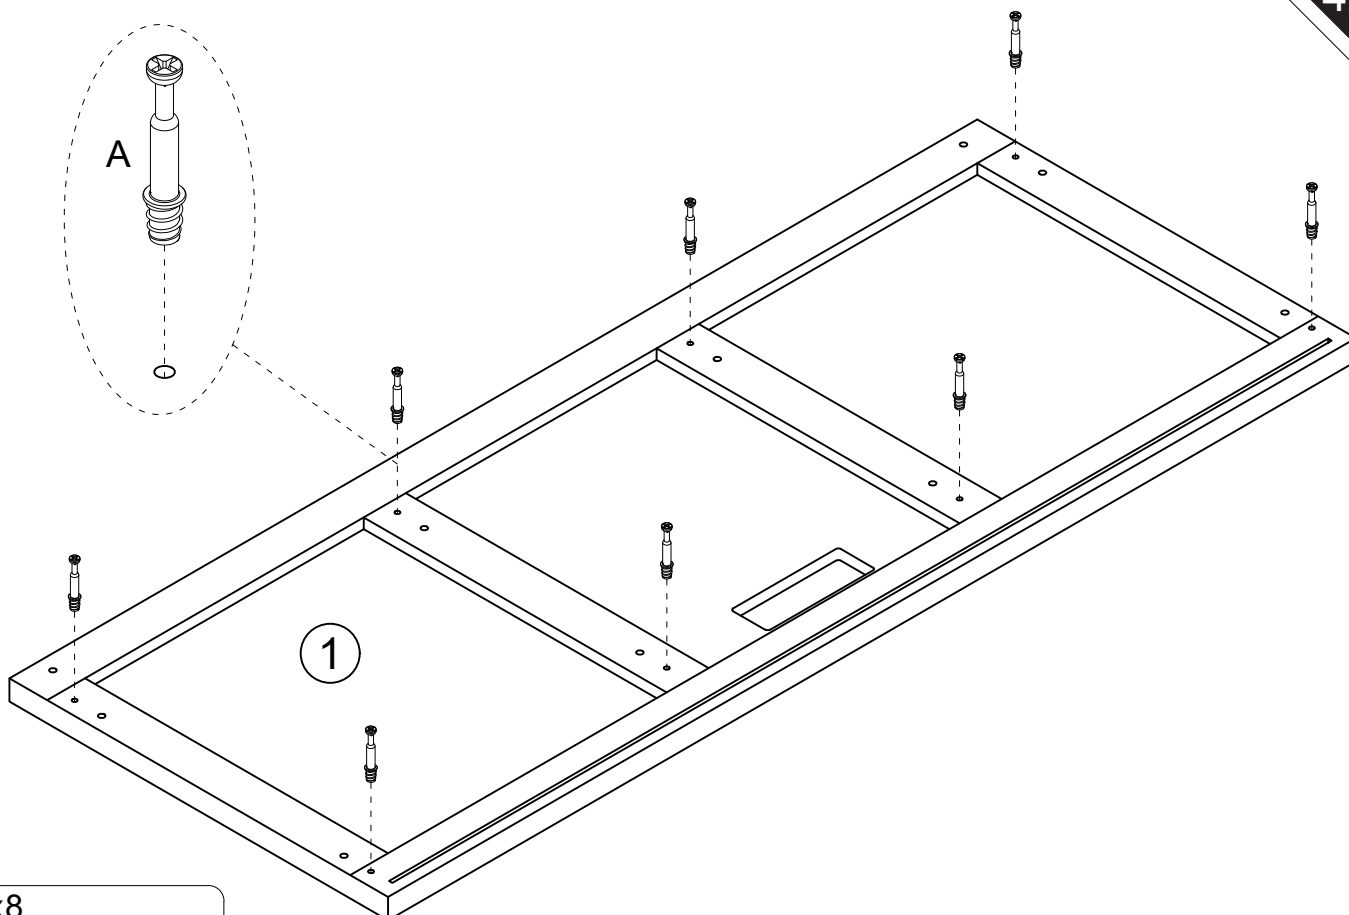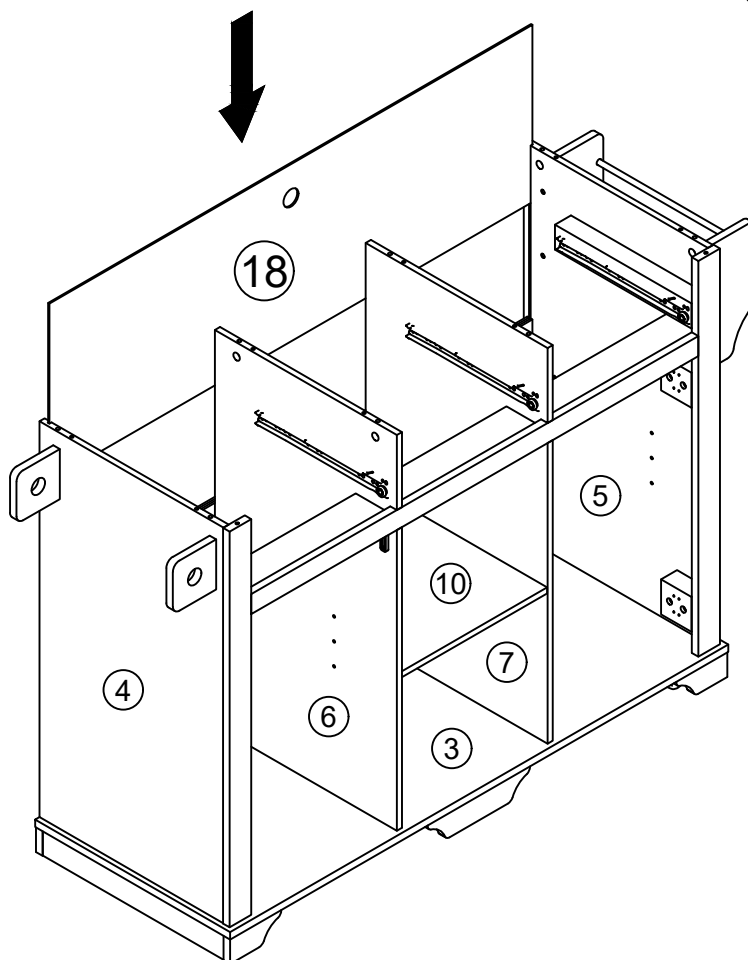

Ax8



Ø6x35mm

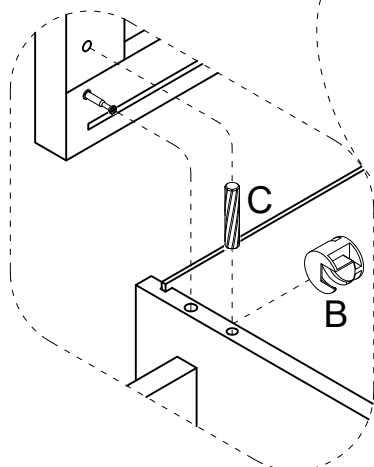

Bx8





Ø15x10mm


Cx10




Ø6x30mm

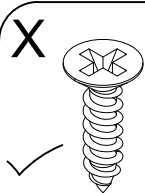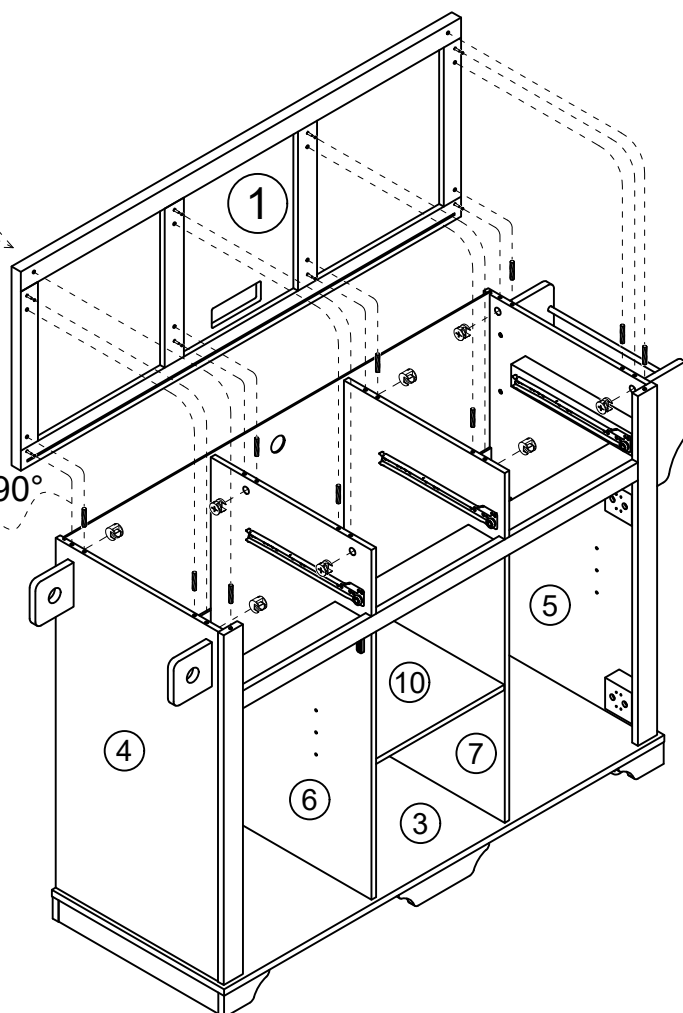


Ø6xØ3x16mm

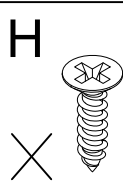

Ø6xØ3x12mm

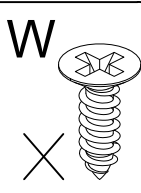


Ø7xØ3.5x14mm


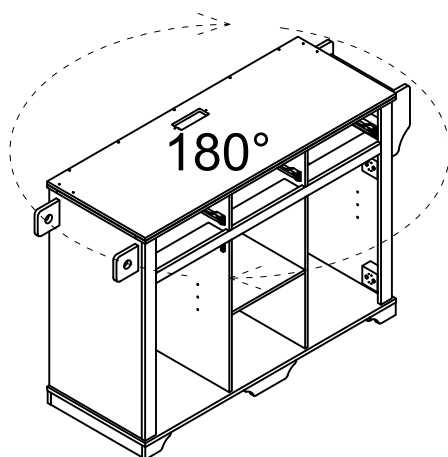


Xx14




Ø6xØ3x16mm

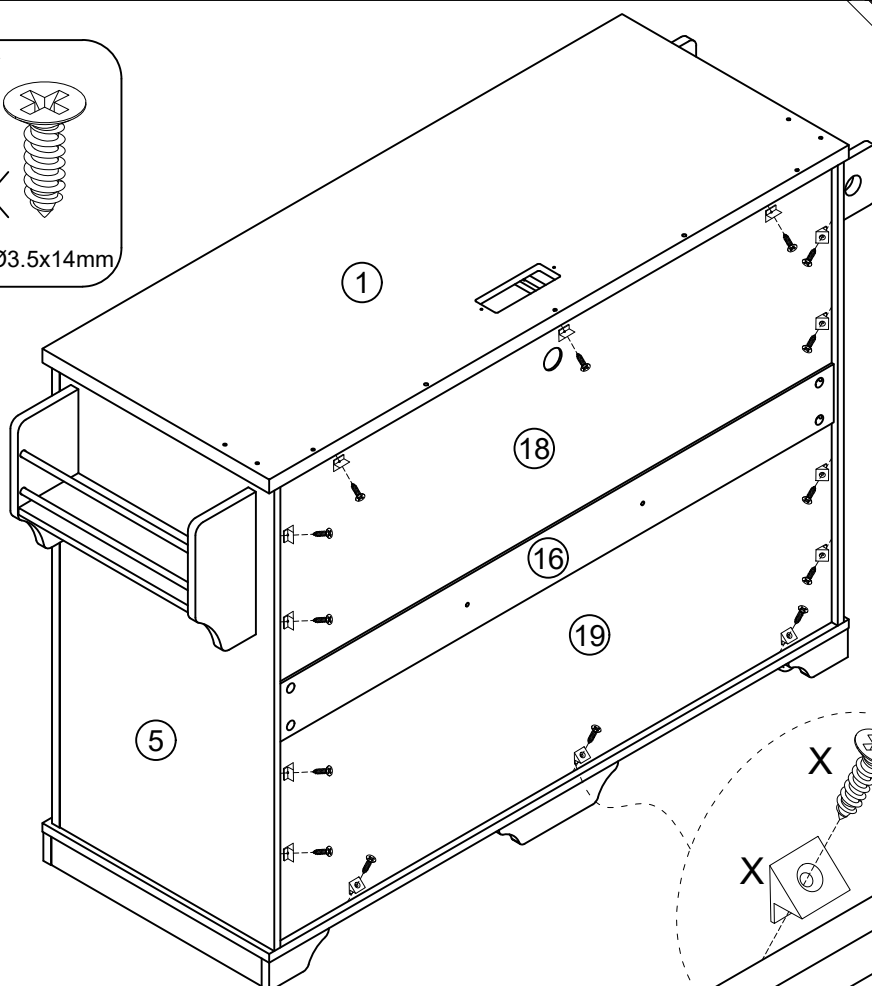


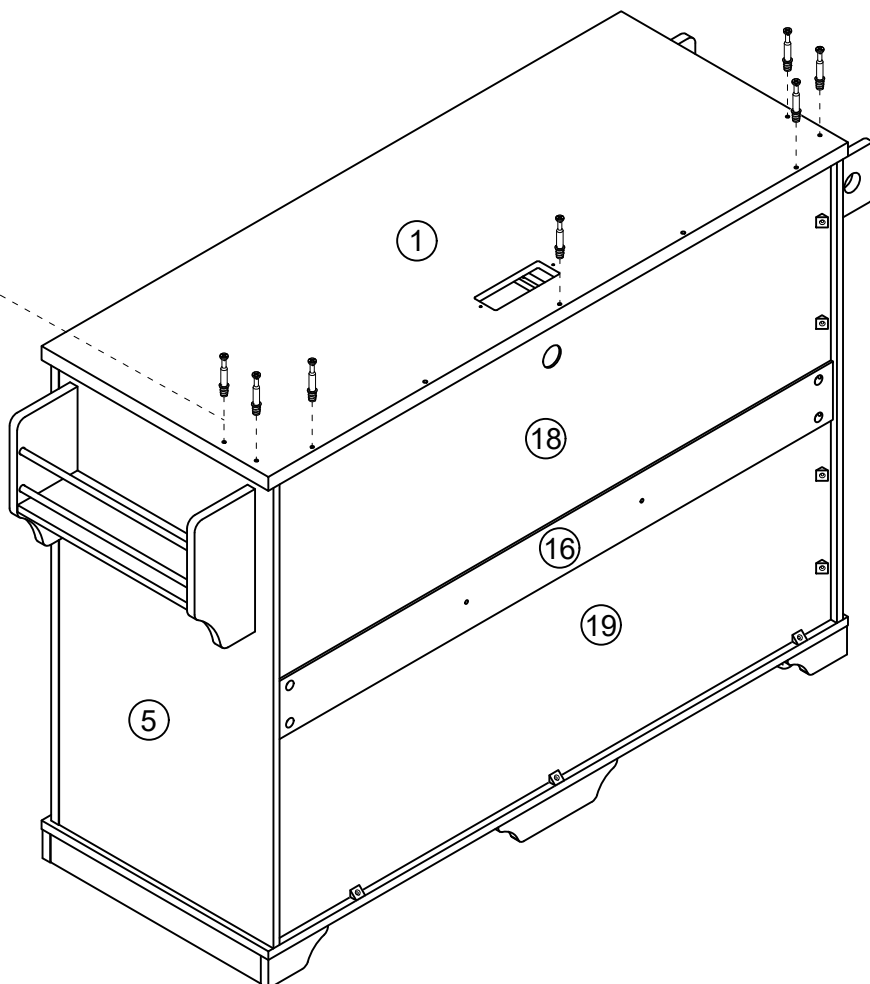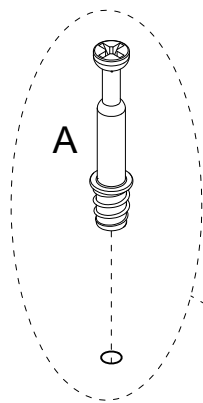

Ax7

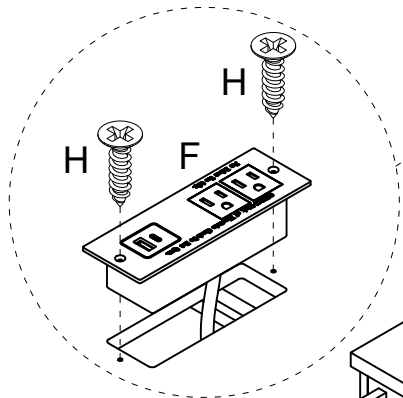



Before installation,
please first insert
the socket wire
through the hole on
the back panel.

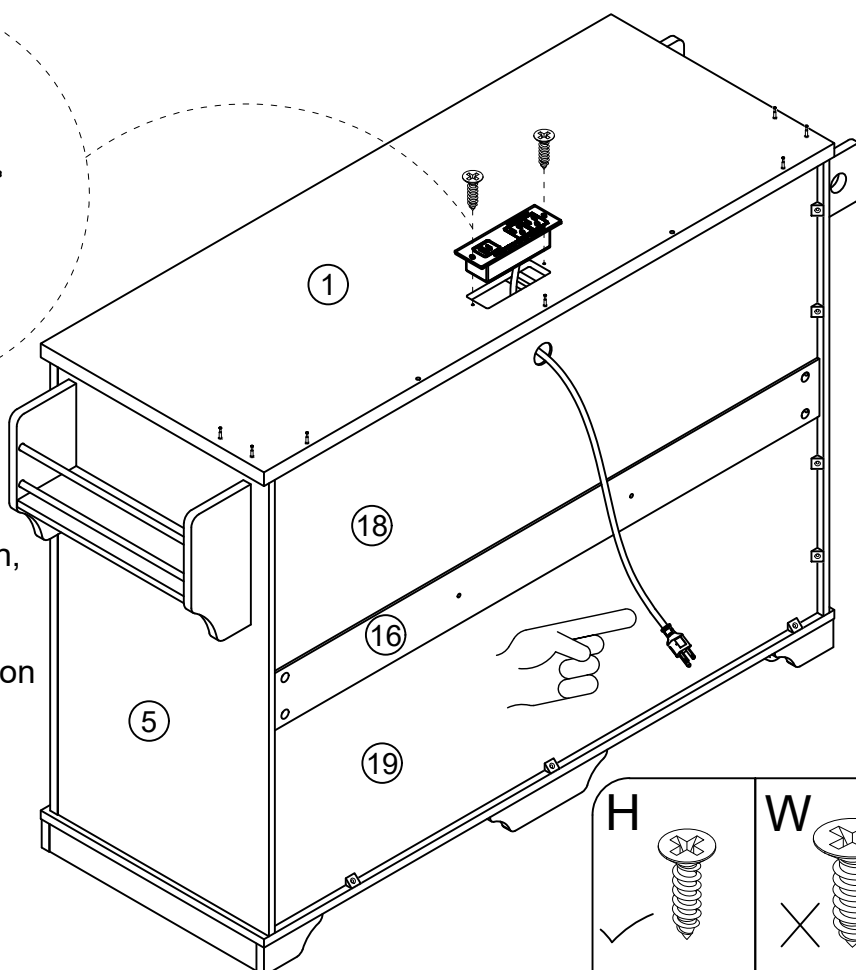


Hx2




Fx1

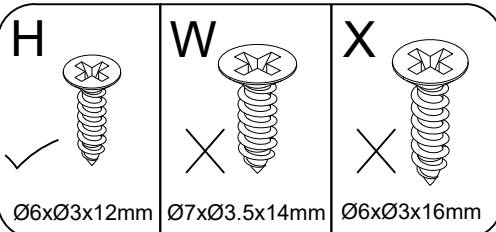


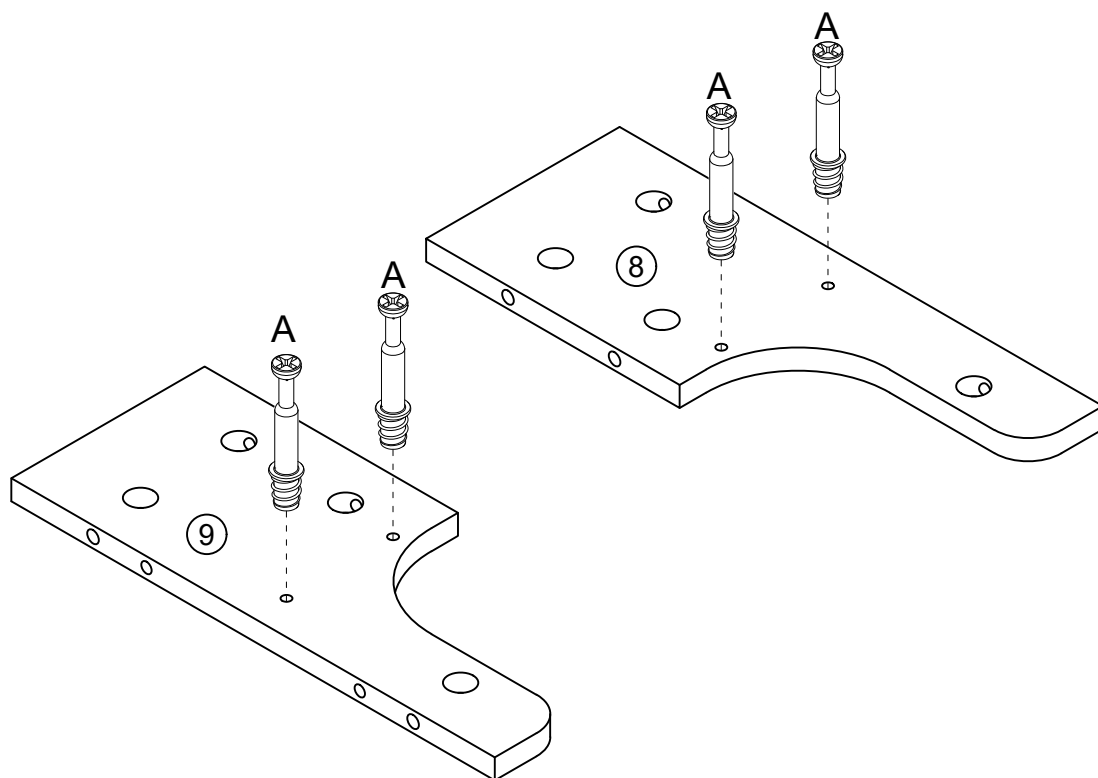

A x4





Ø6x35mm


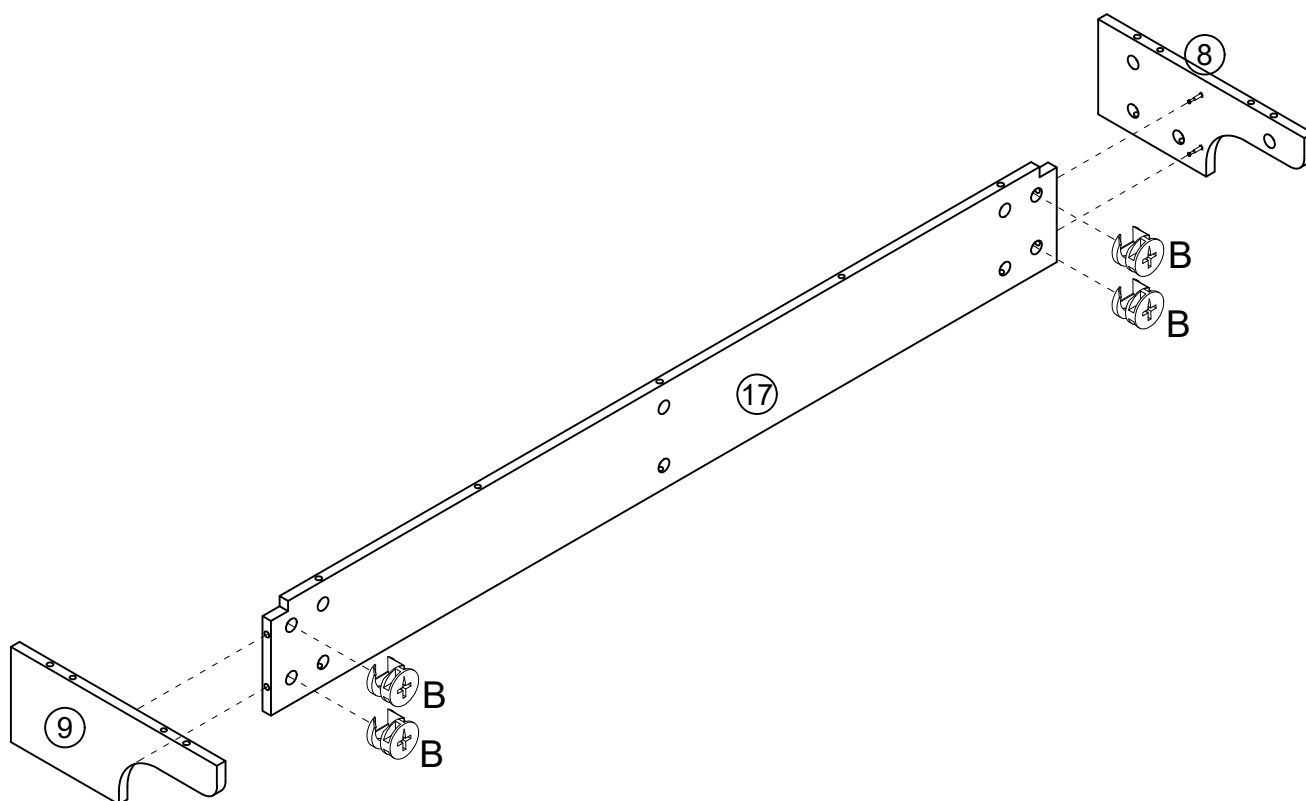


B x4




Ø15x10mm

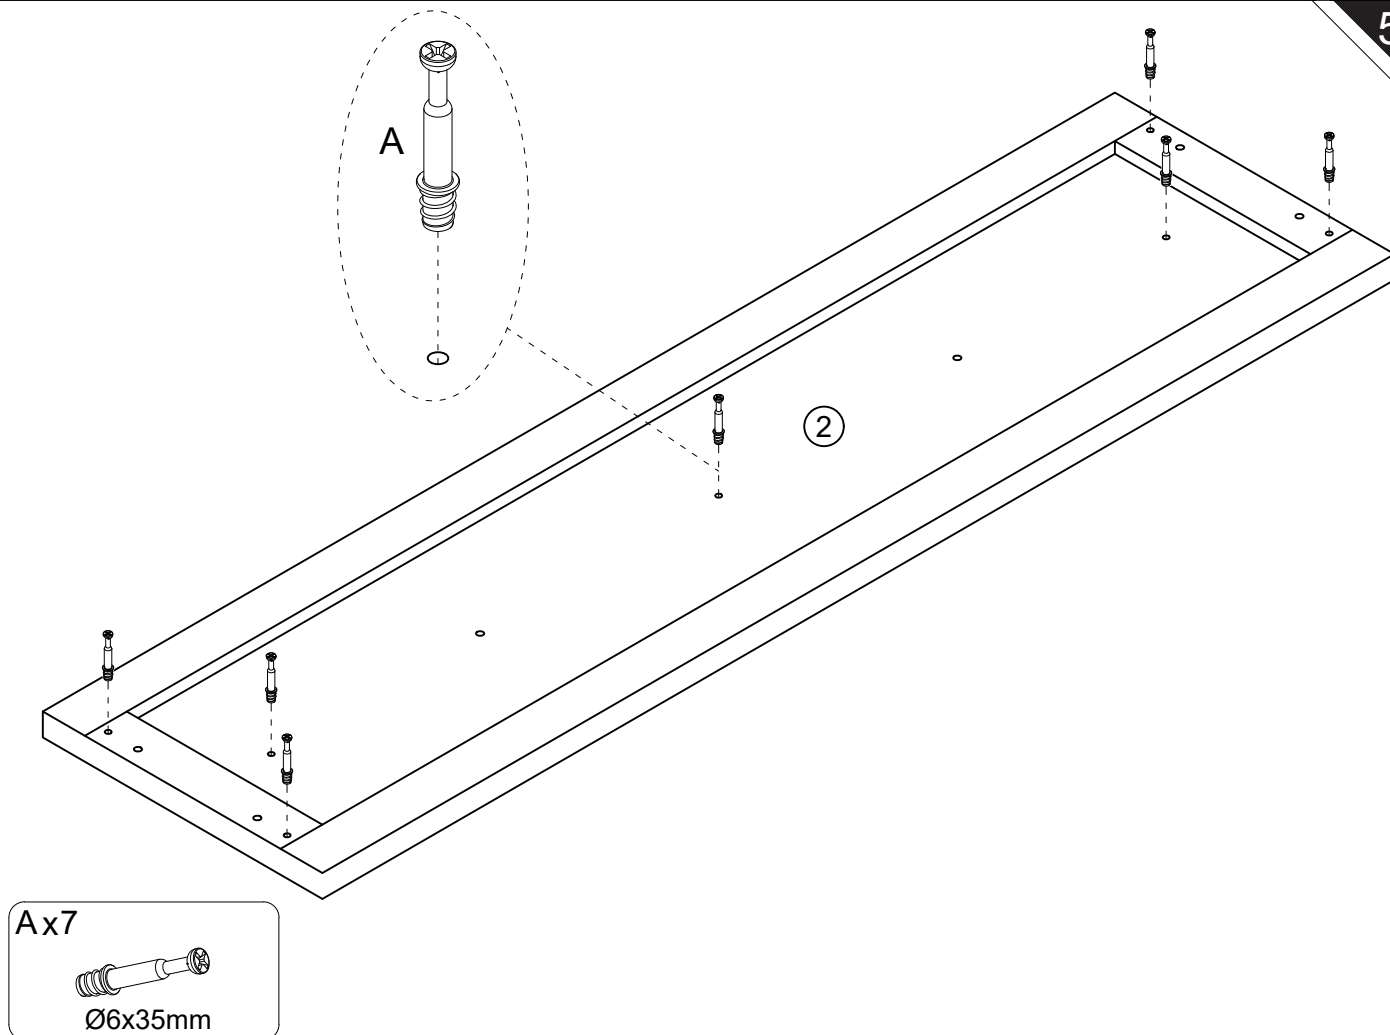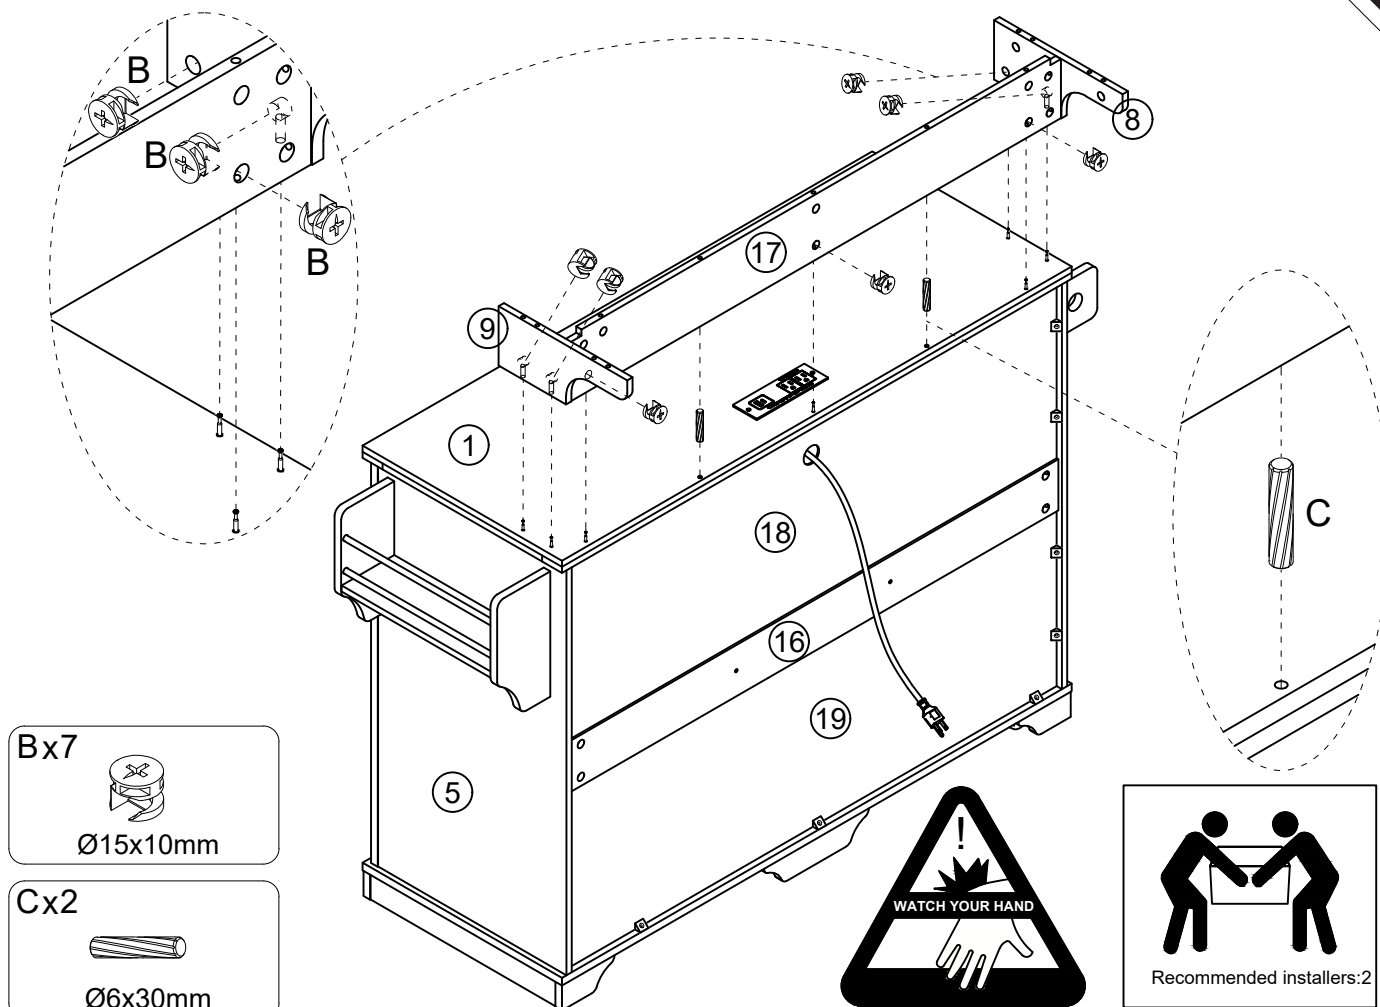


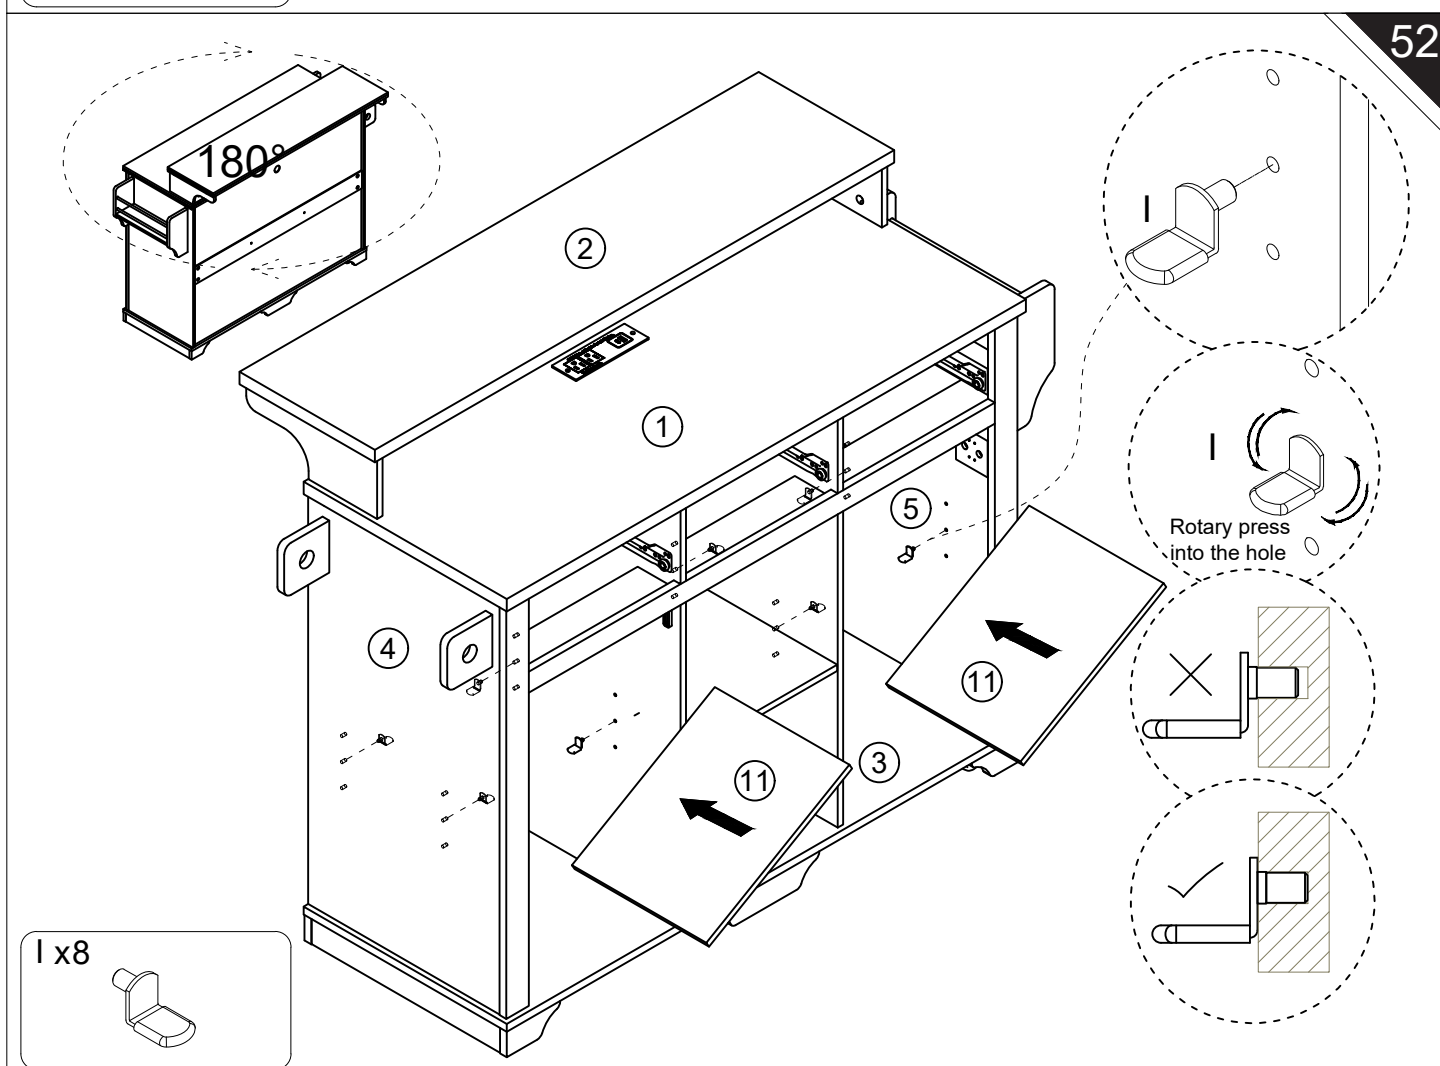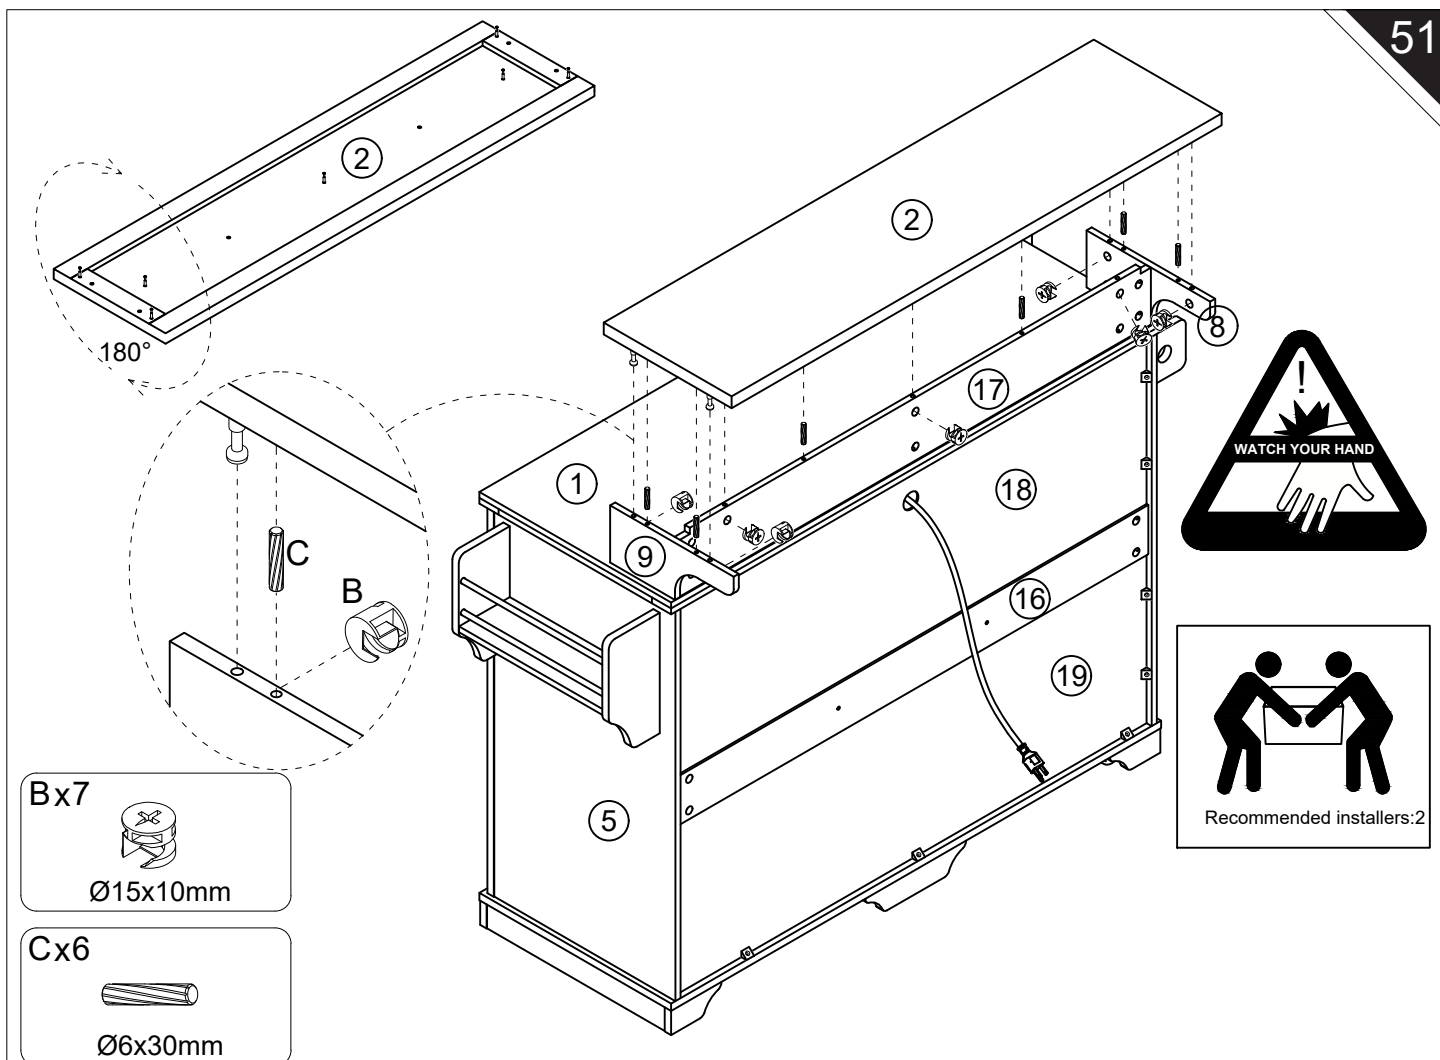


x2

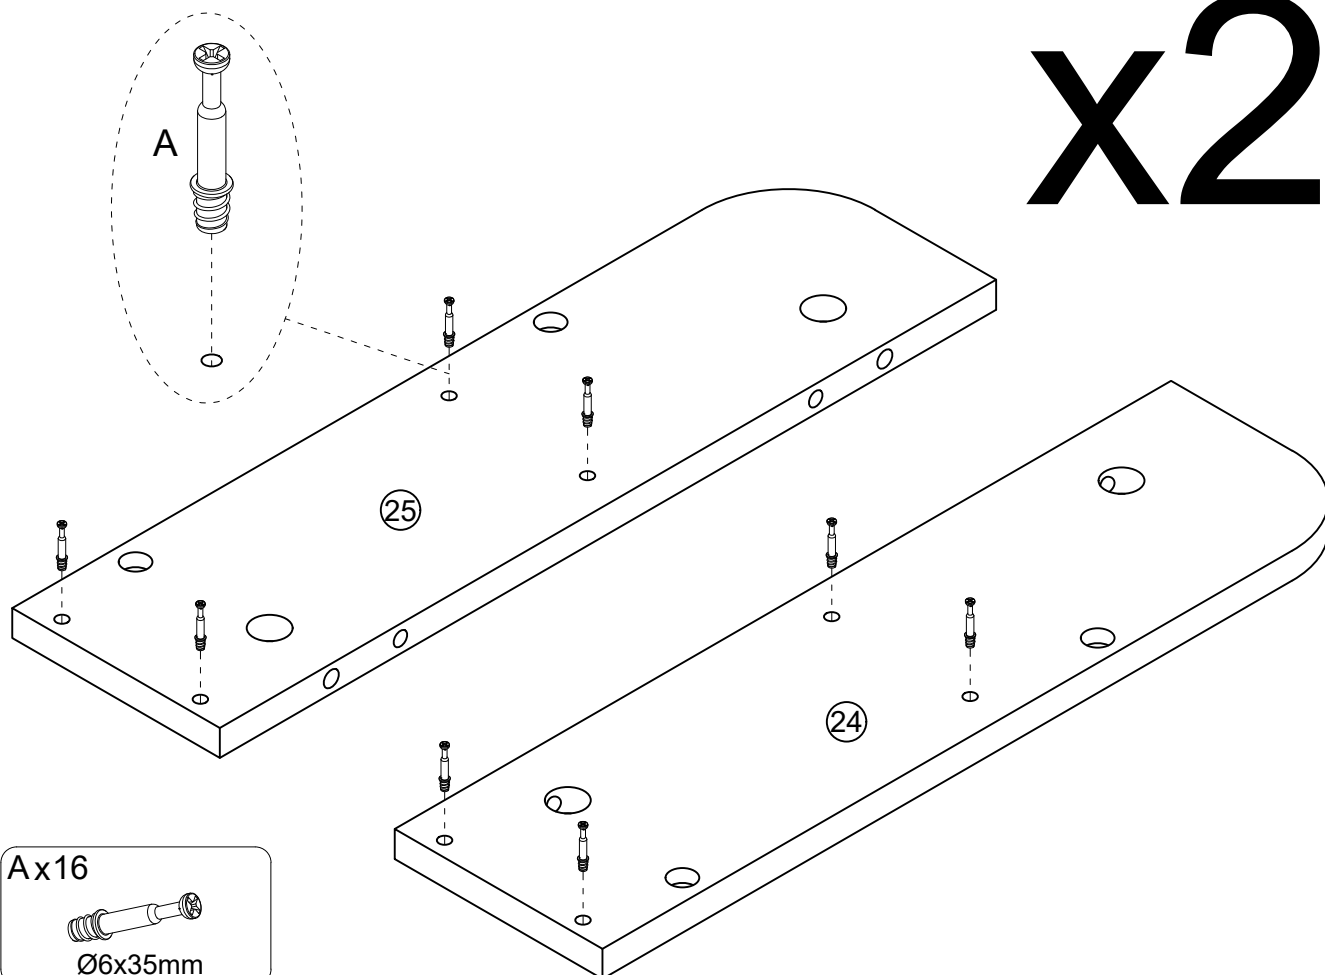

x2

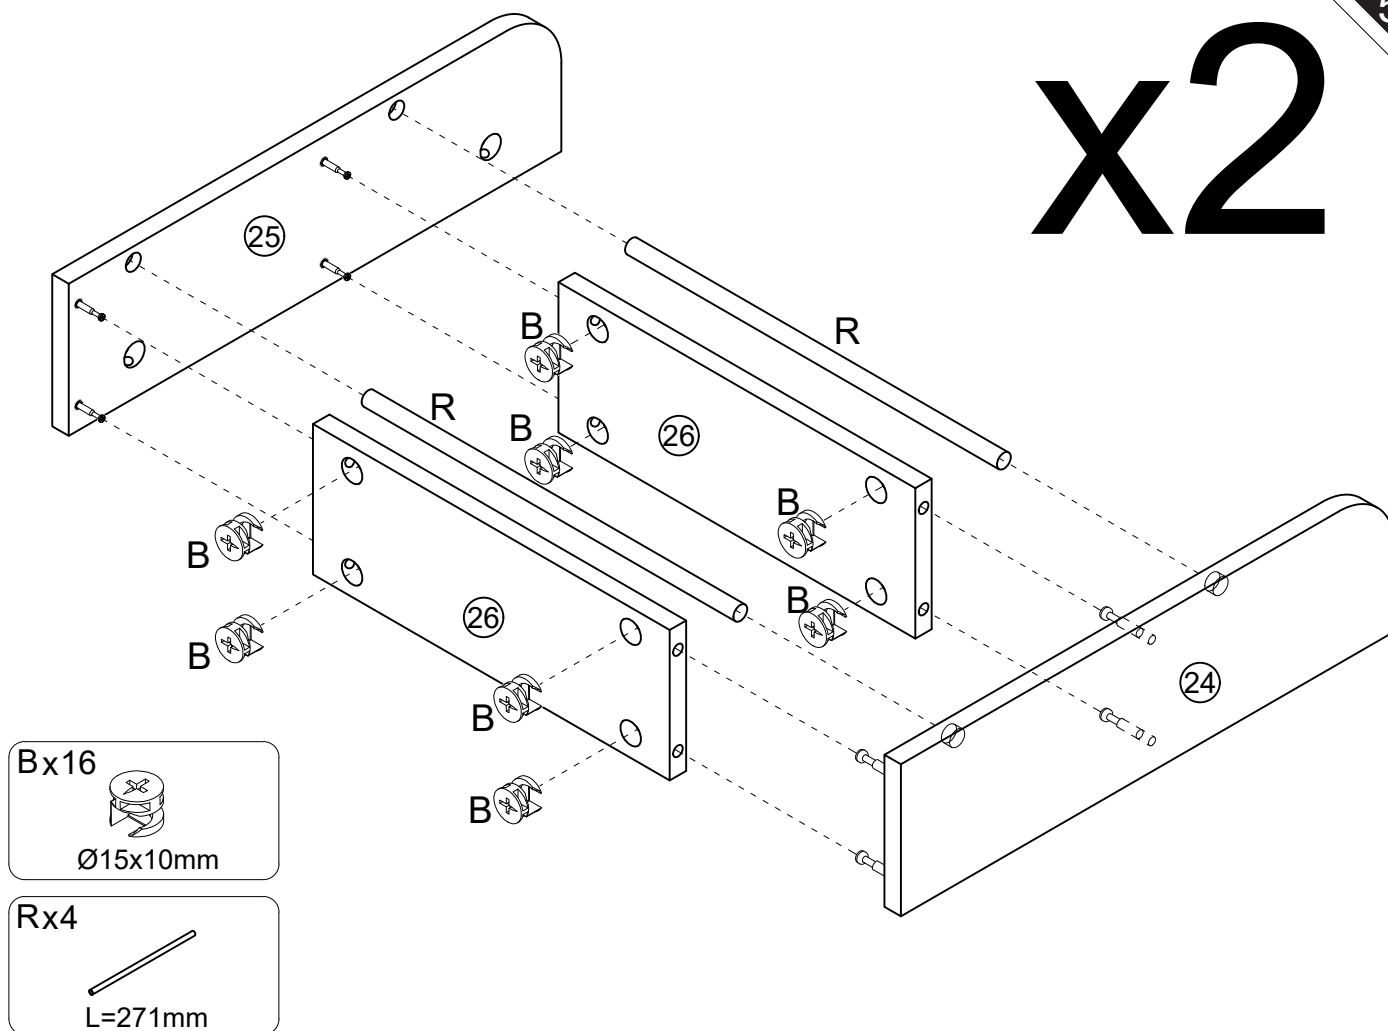


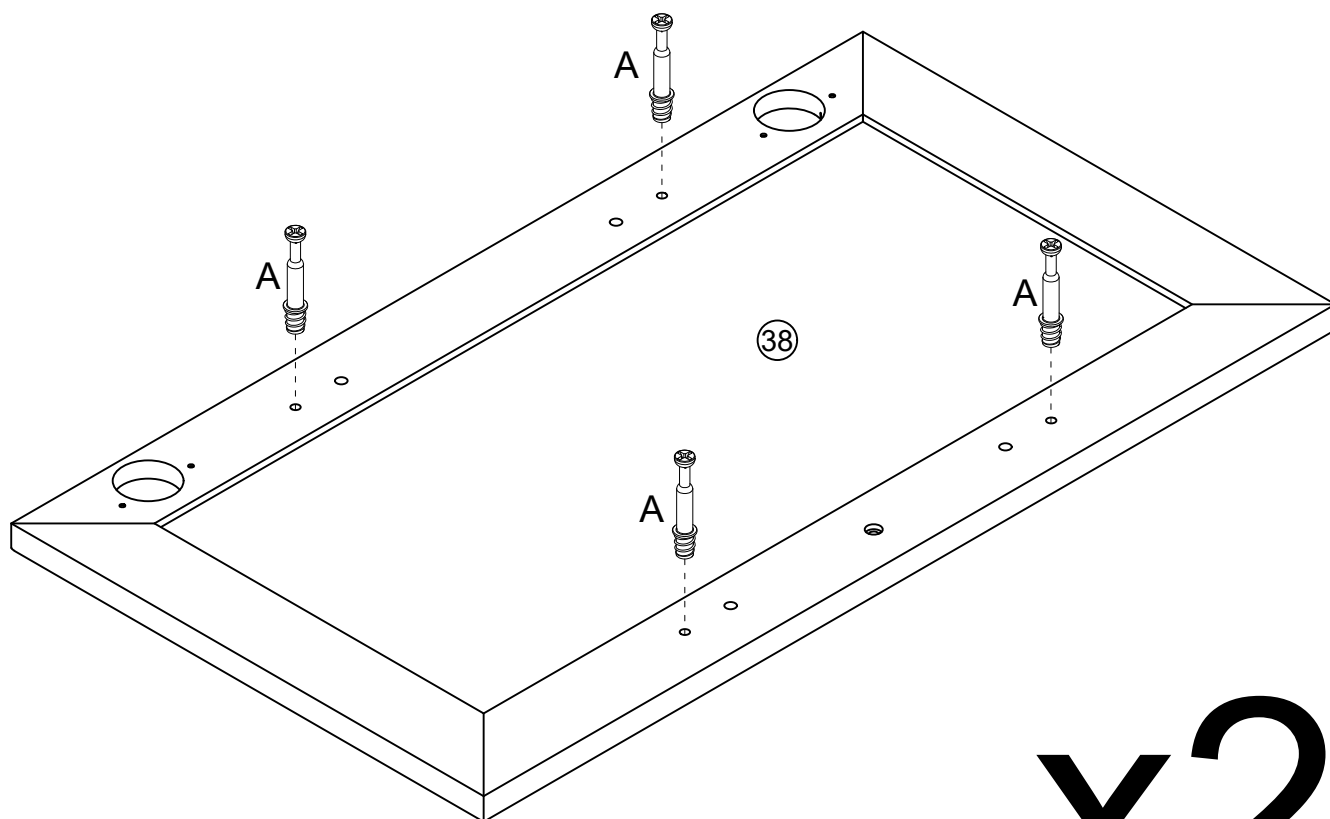


Ax8




Ø6x35mm

x2

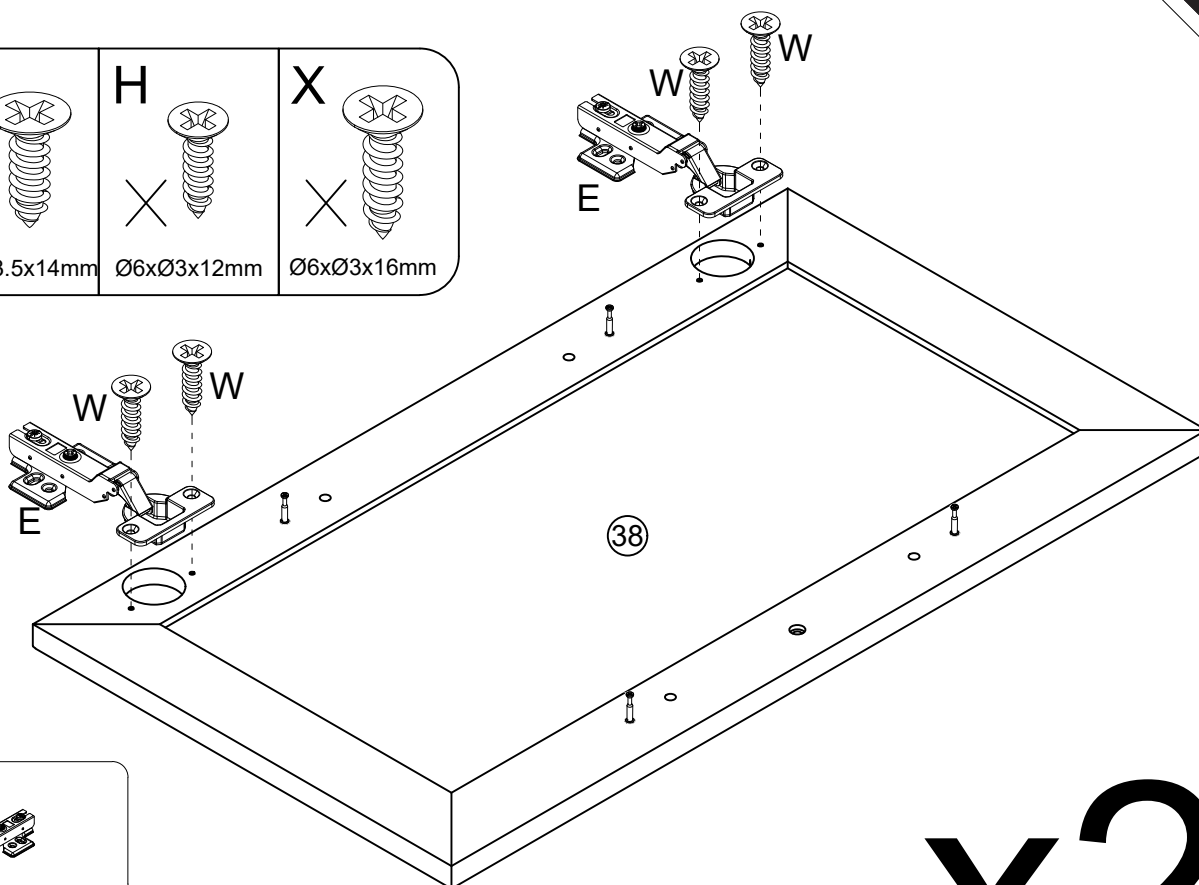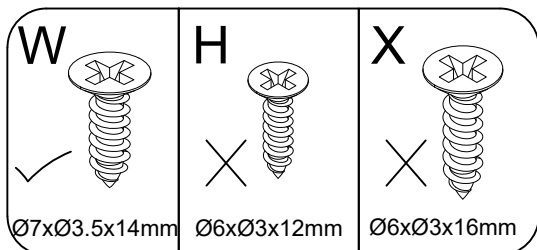

Ex4




Wx8



Ø7x3.5x14mm

x2

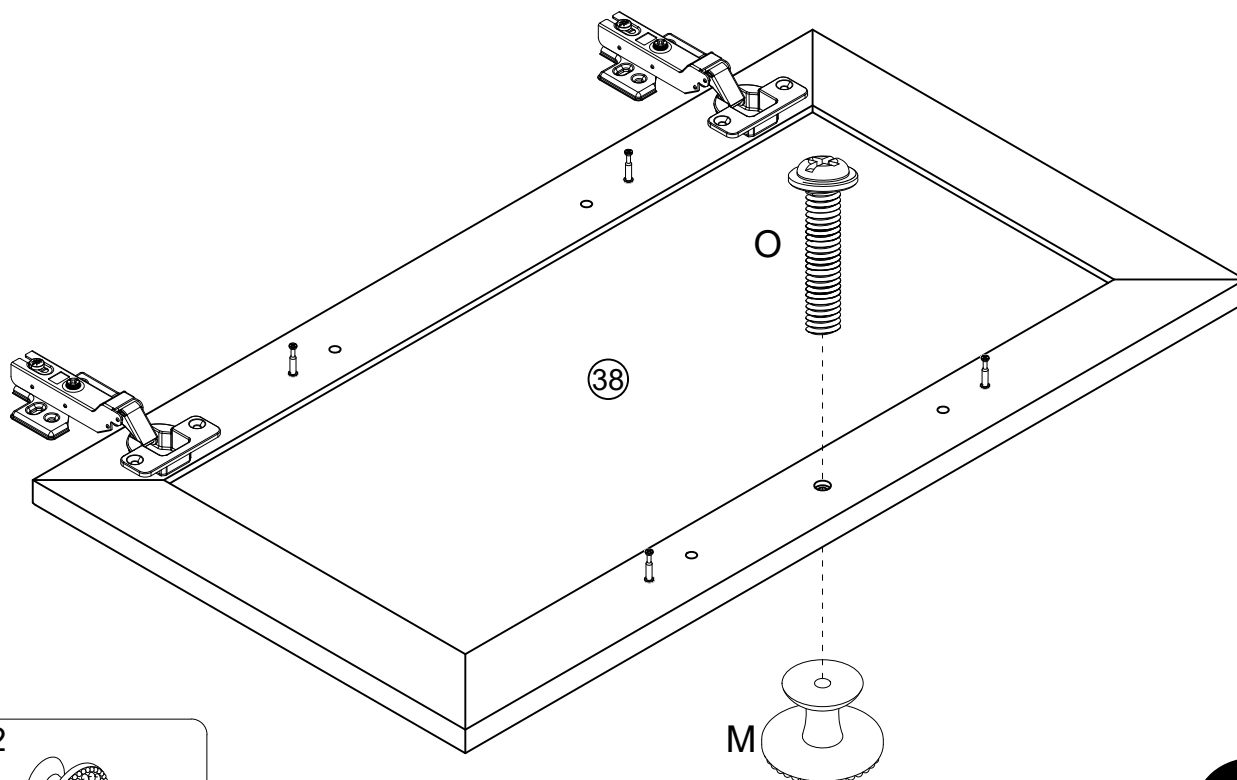

Mx2





Ox2



M4x16mm

x2

When installing, please follow the direction of the components as shown in the figure.

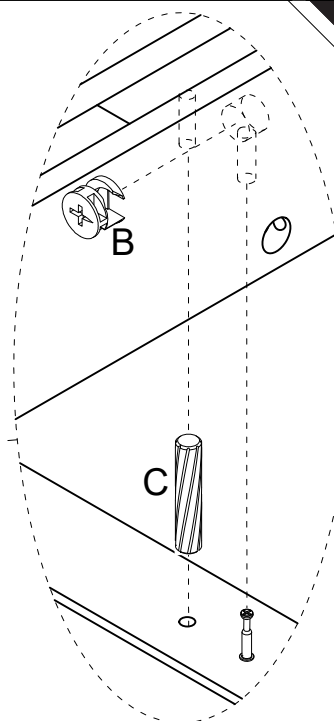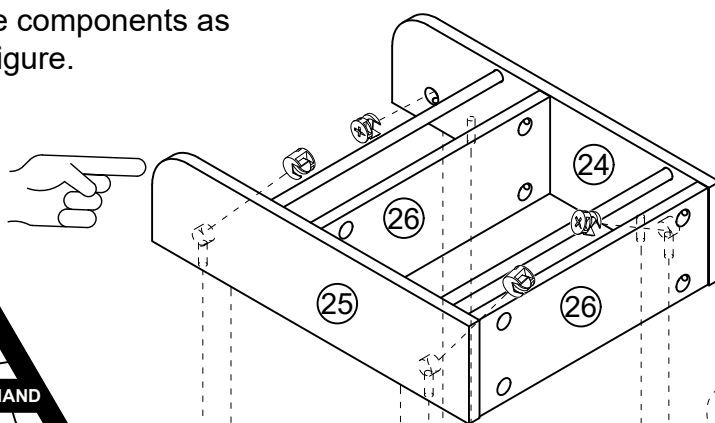

Bx4




Ø15x10mm

Cx4



Ø6x30mm

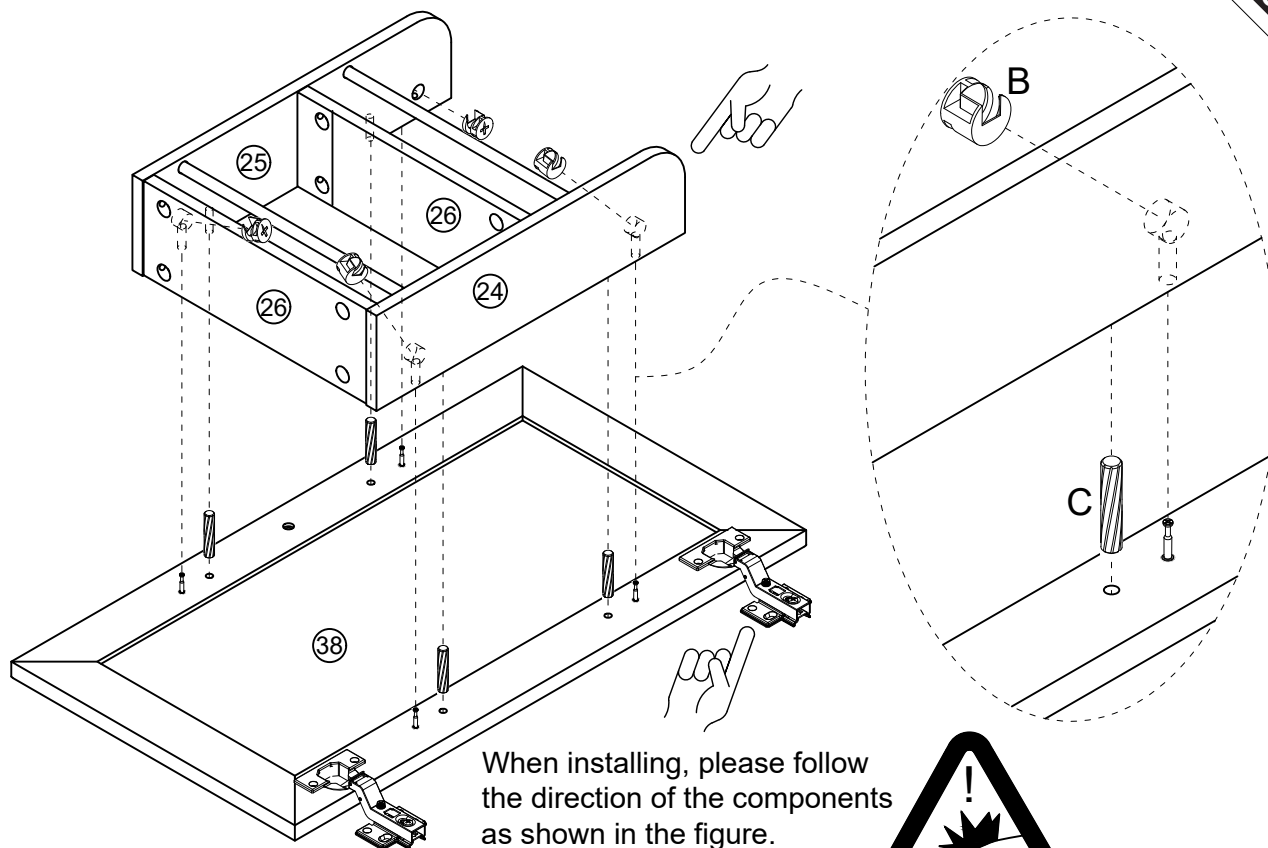

Cx4




Ø6x30mm


Bx4




Ø15x10mm

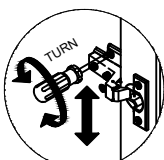


Loosen this screw and push up/down for a slight up-down adjustment of the door.

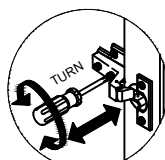


Loosen this screw for a slight left-right adjustment of the door.

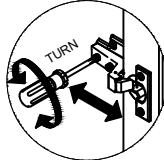


Loosen this screw and push forward/backward for a slight front-back adjustment of the door.

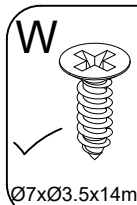




Ø7xØ3.5x14mm

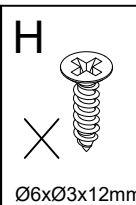

Ø6xØ3x12mm

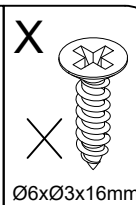

Ø6xØ3x16mm

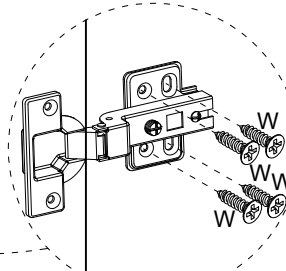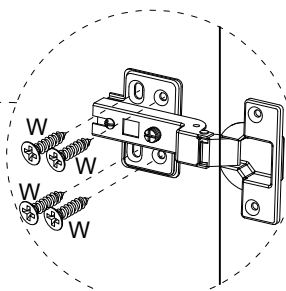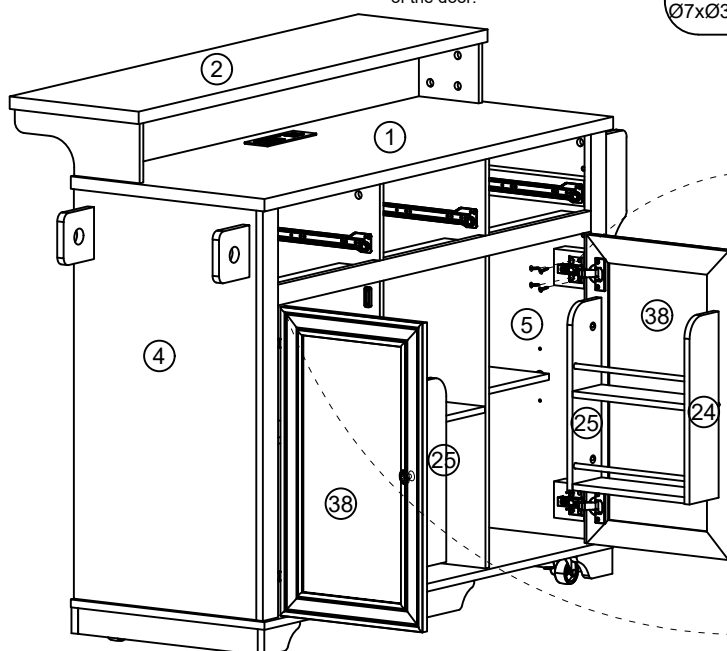


Wx16



Ø7x3.5x14mm

Be sure to check the orientation of the components.

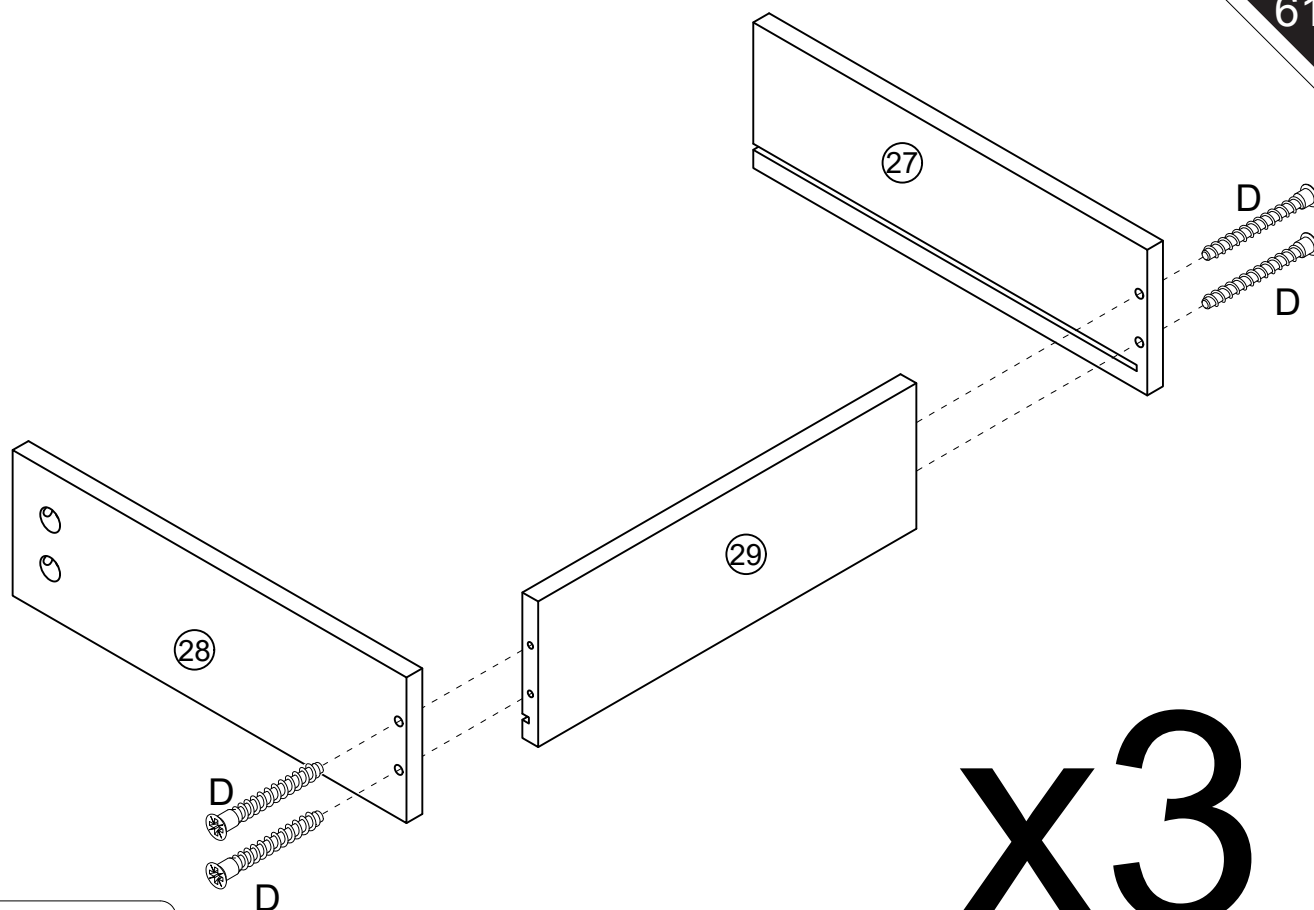



Dx12



Ø5x38mm

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

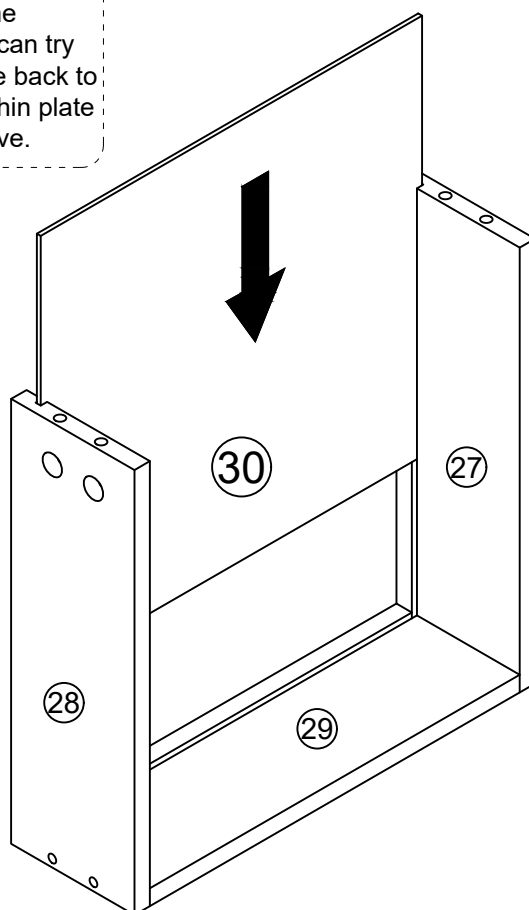

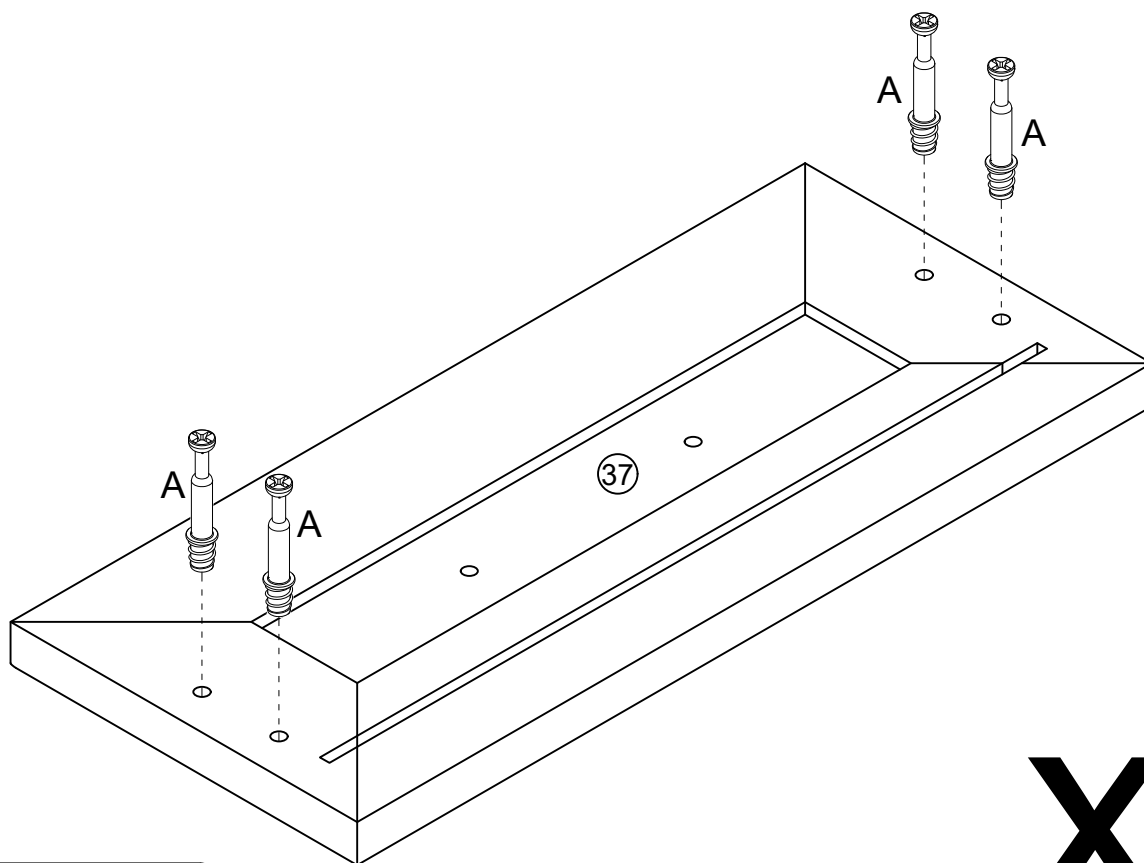


Ax12



Ø6x35mm

x3

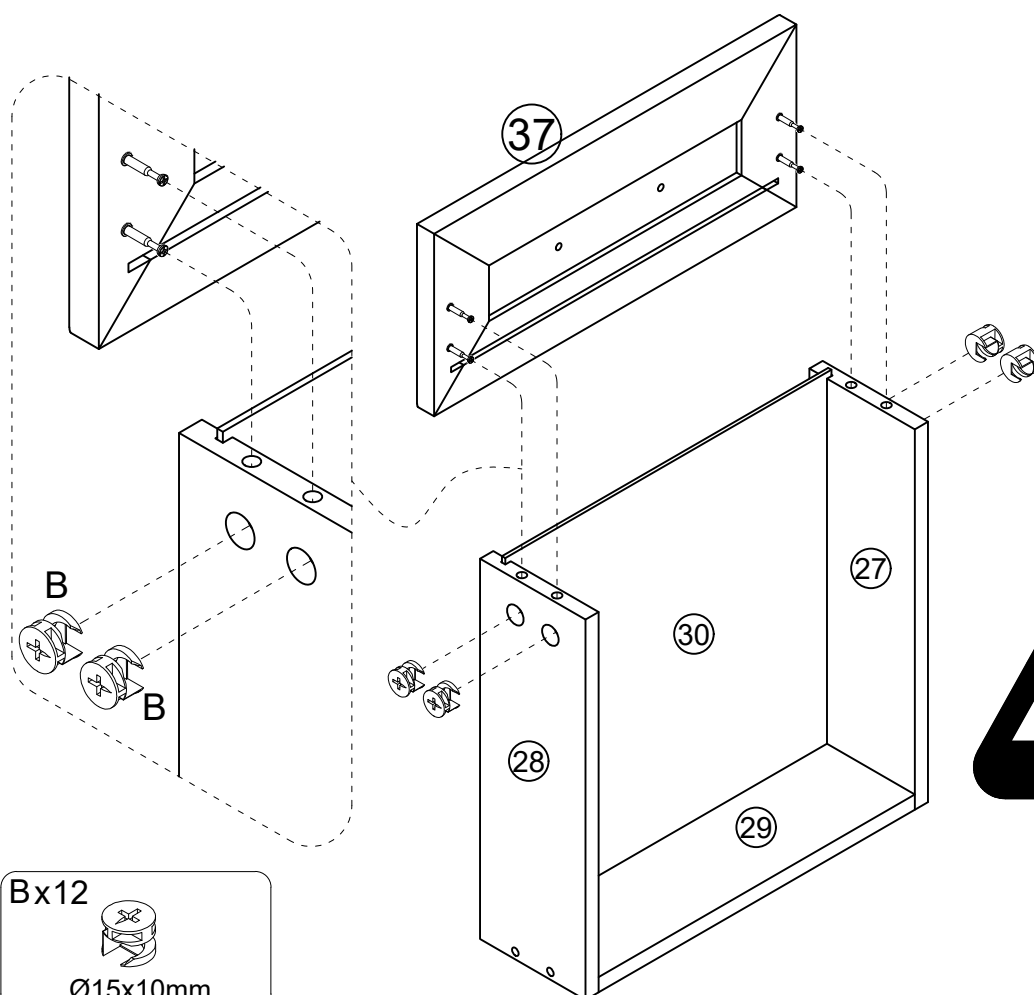



Bx12



Ø15x10mm

x3



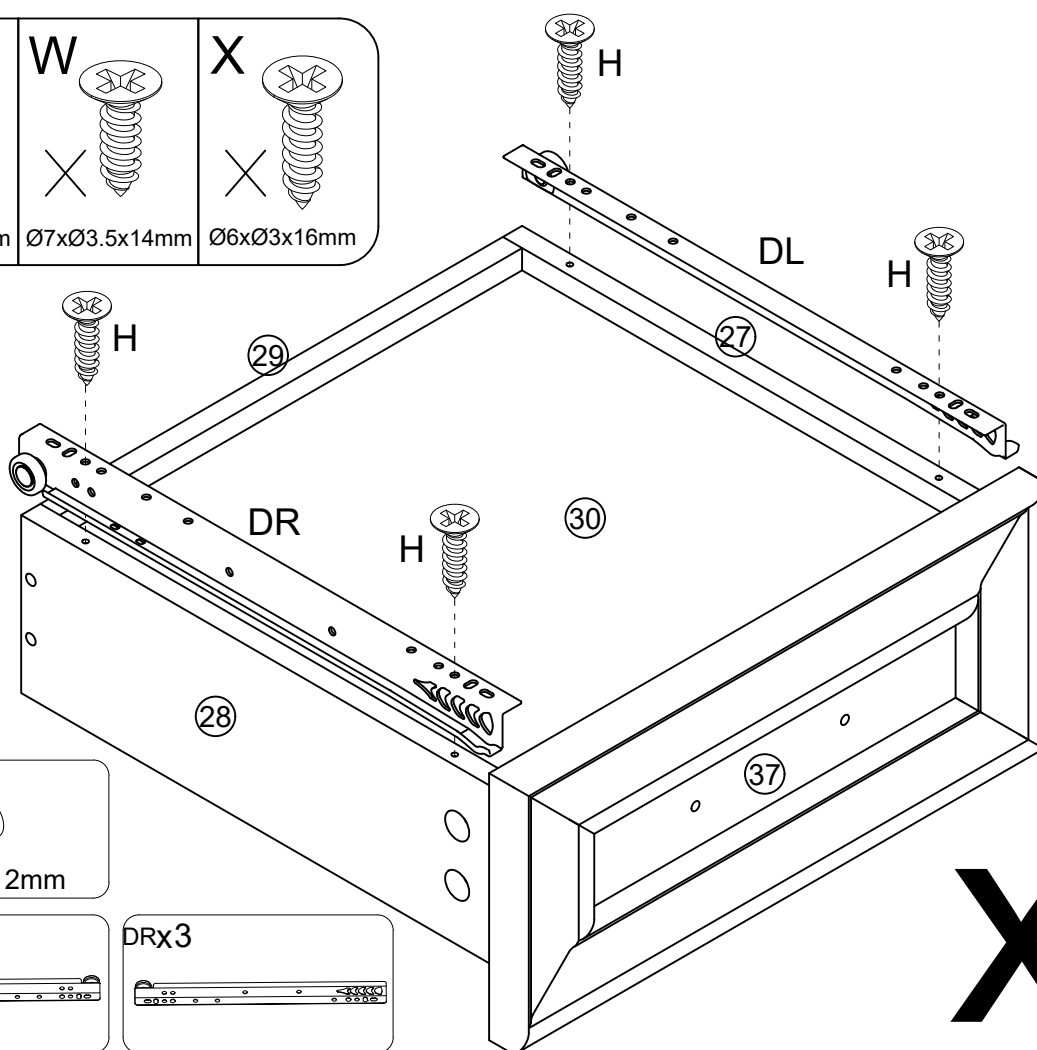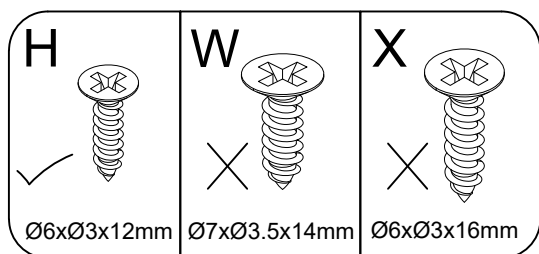


Hx12




Ø6xØ3x12mm



DLx3



DRx3



x3

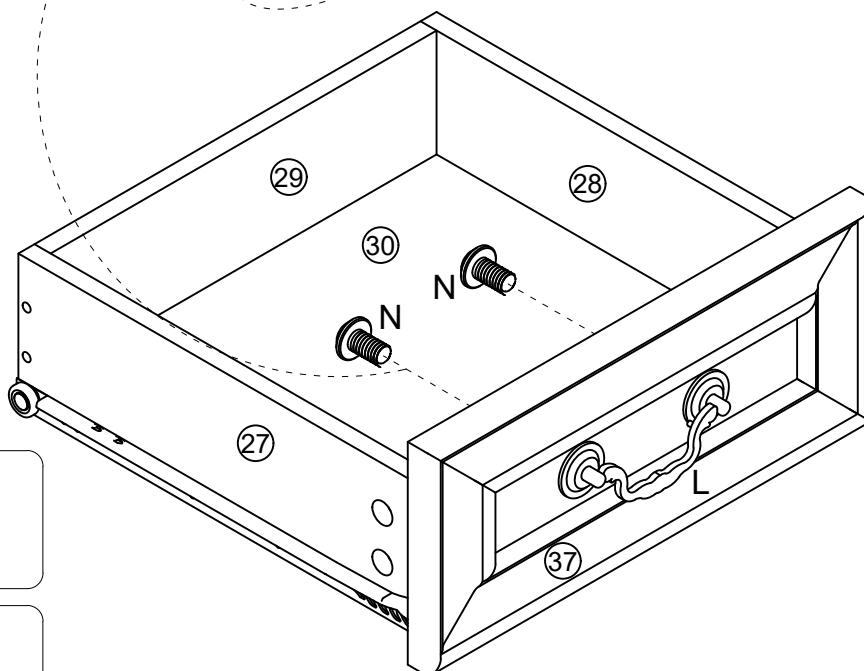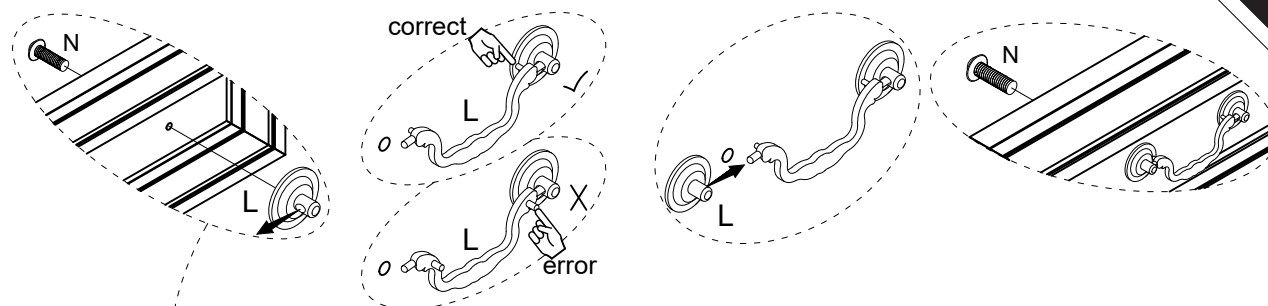

Lx3









Nx6



M4x8mm

x3

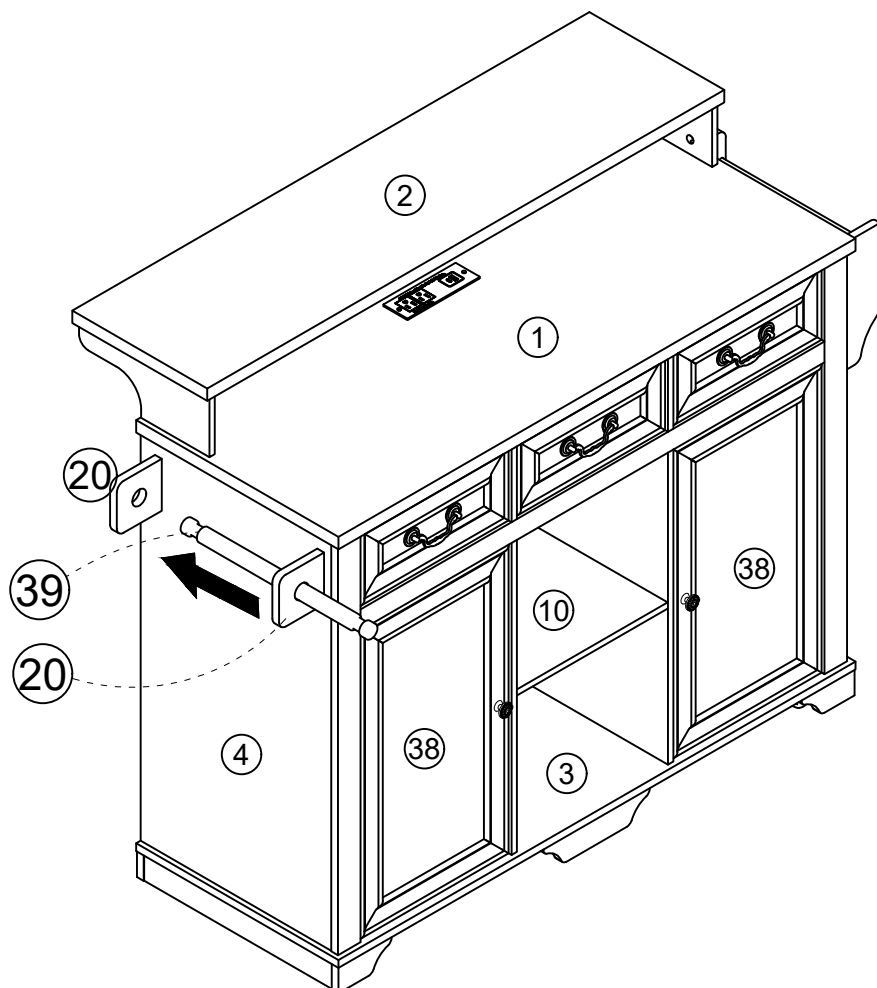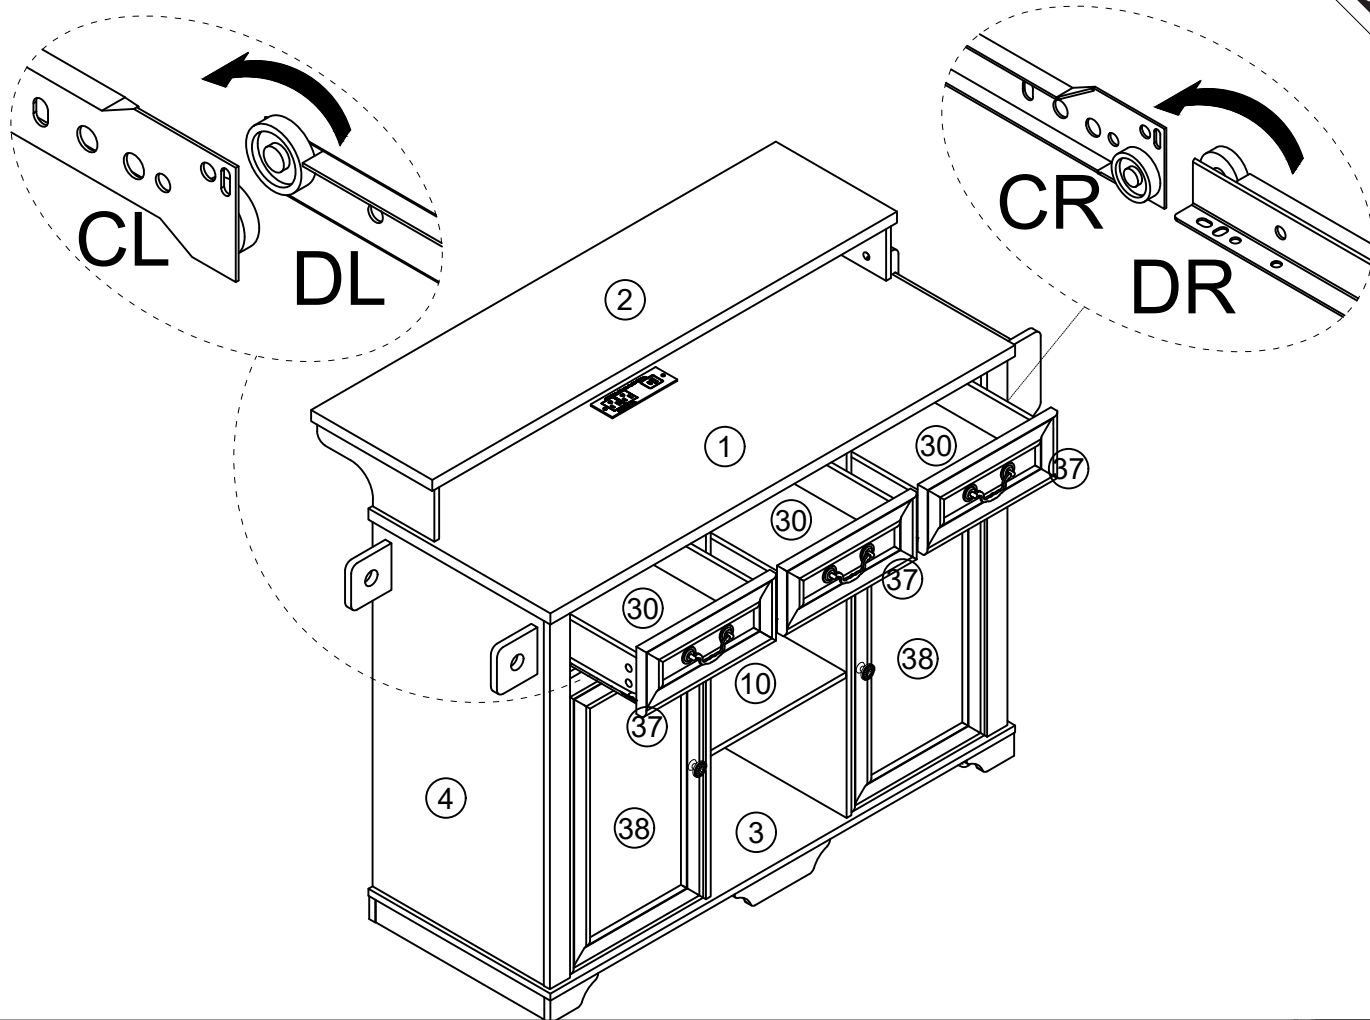

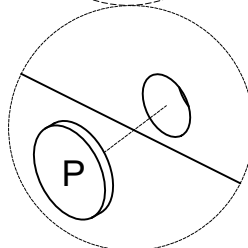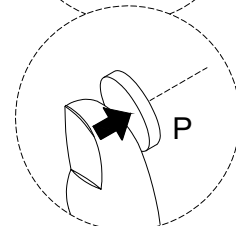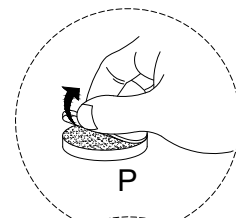
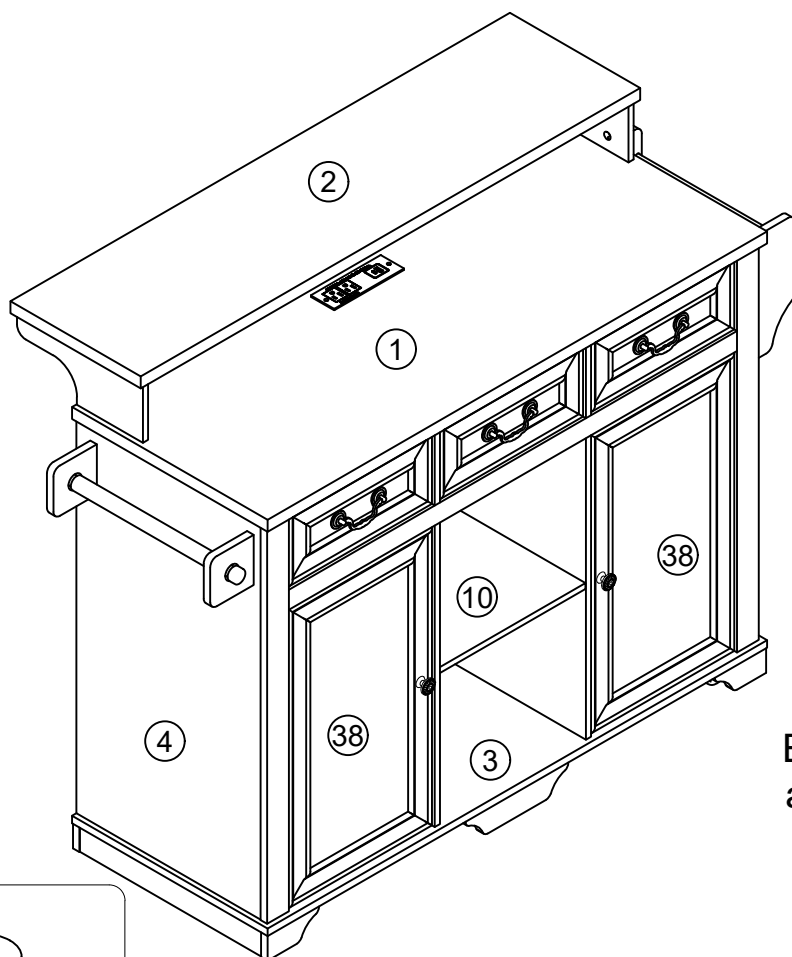


Exposed holes can be attached with stickers **P**

Px92



Ø20mm

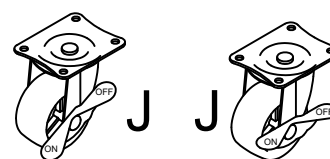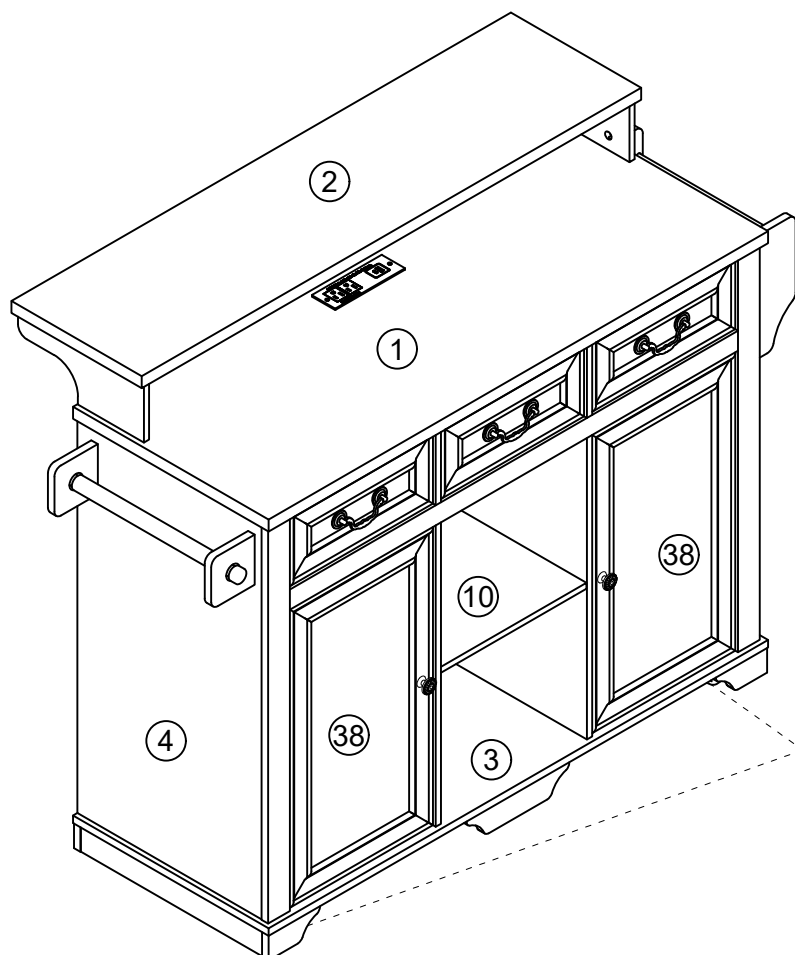

OFF

ON

The table can be moved or fixed by adjusting component **J**'s brake system.

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance




● Not for commercial use. For residential use only.



● Furniture may scratch floors. We recommend using furniture pads to protect your floors.




● Do not put hot items directly on furniture surface.



● Do not clean furniture with harsh cleansers or polish.



● Do not place furniture under direct sunlight.




● Do not place furniture near heating or cooling vents.



● Do not write on furniture without a padded barrier to protect the surface.



● Do not place furniture outside . For indoor use only.



● Stains may be removed with mild soap solution and damp cloth.



● Children should not climb or jump on the furniture.



● Dust and pick-up spills using a clean, non-colored, lint-free cloth.