


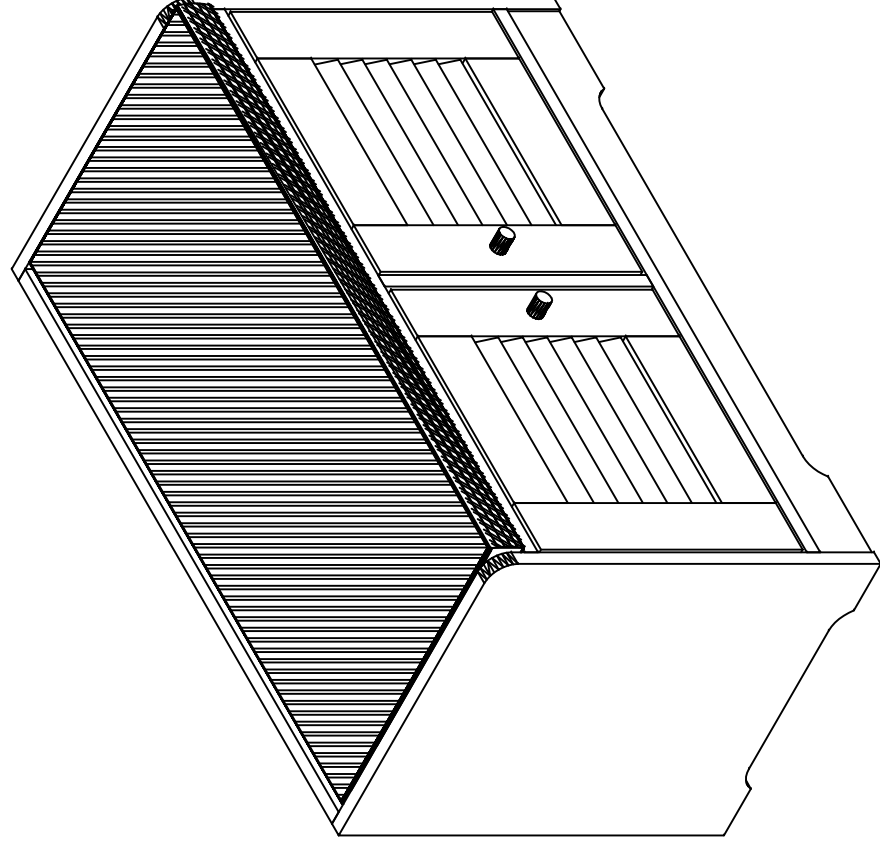


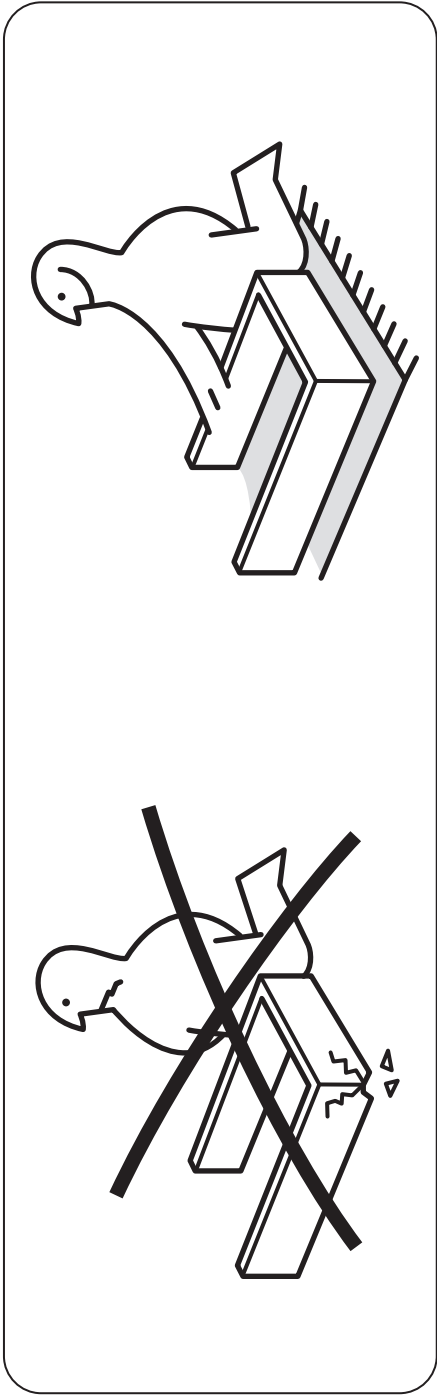

Thanks for purchasing one of our products,
please carefully read the assembly instructions
before installation(Attention:Do not tighten
the screws before all screws are in place).

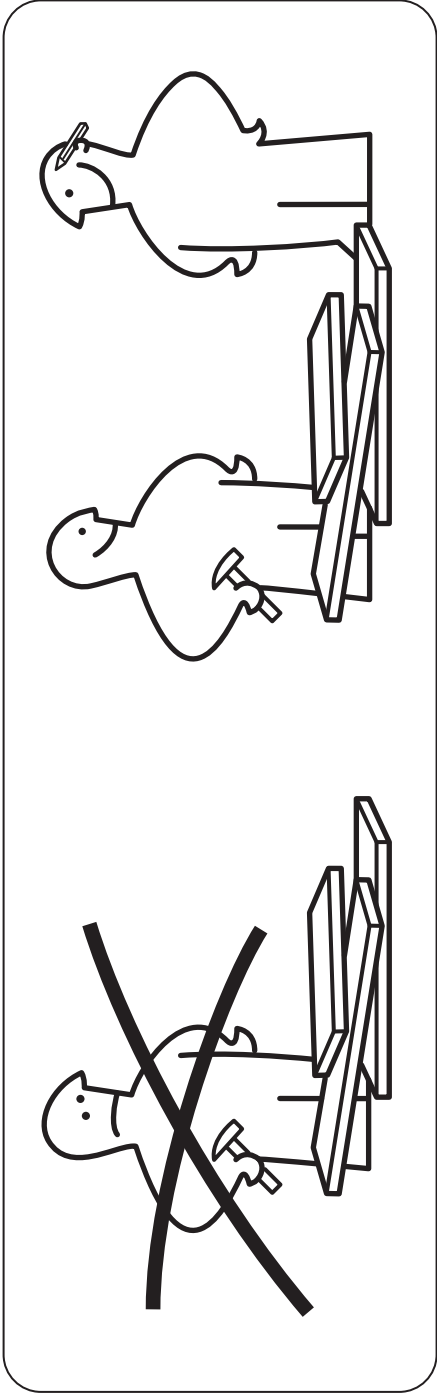


(Tools not provided)
Flat Blade Screwdriver
Phillips Head Screwdriver
Wooden Hammer




To Assemble the Unit
Wooden Hammer


PAGE1
Exploded View

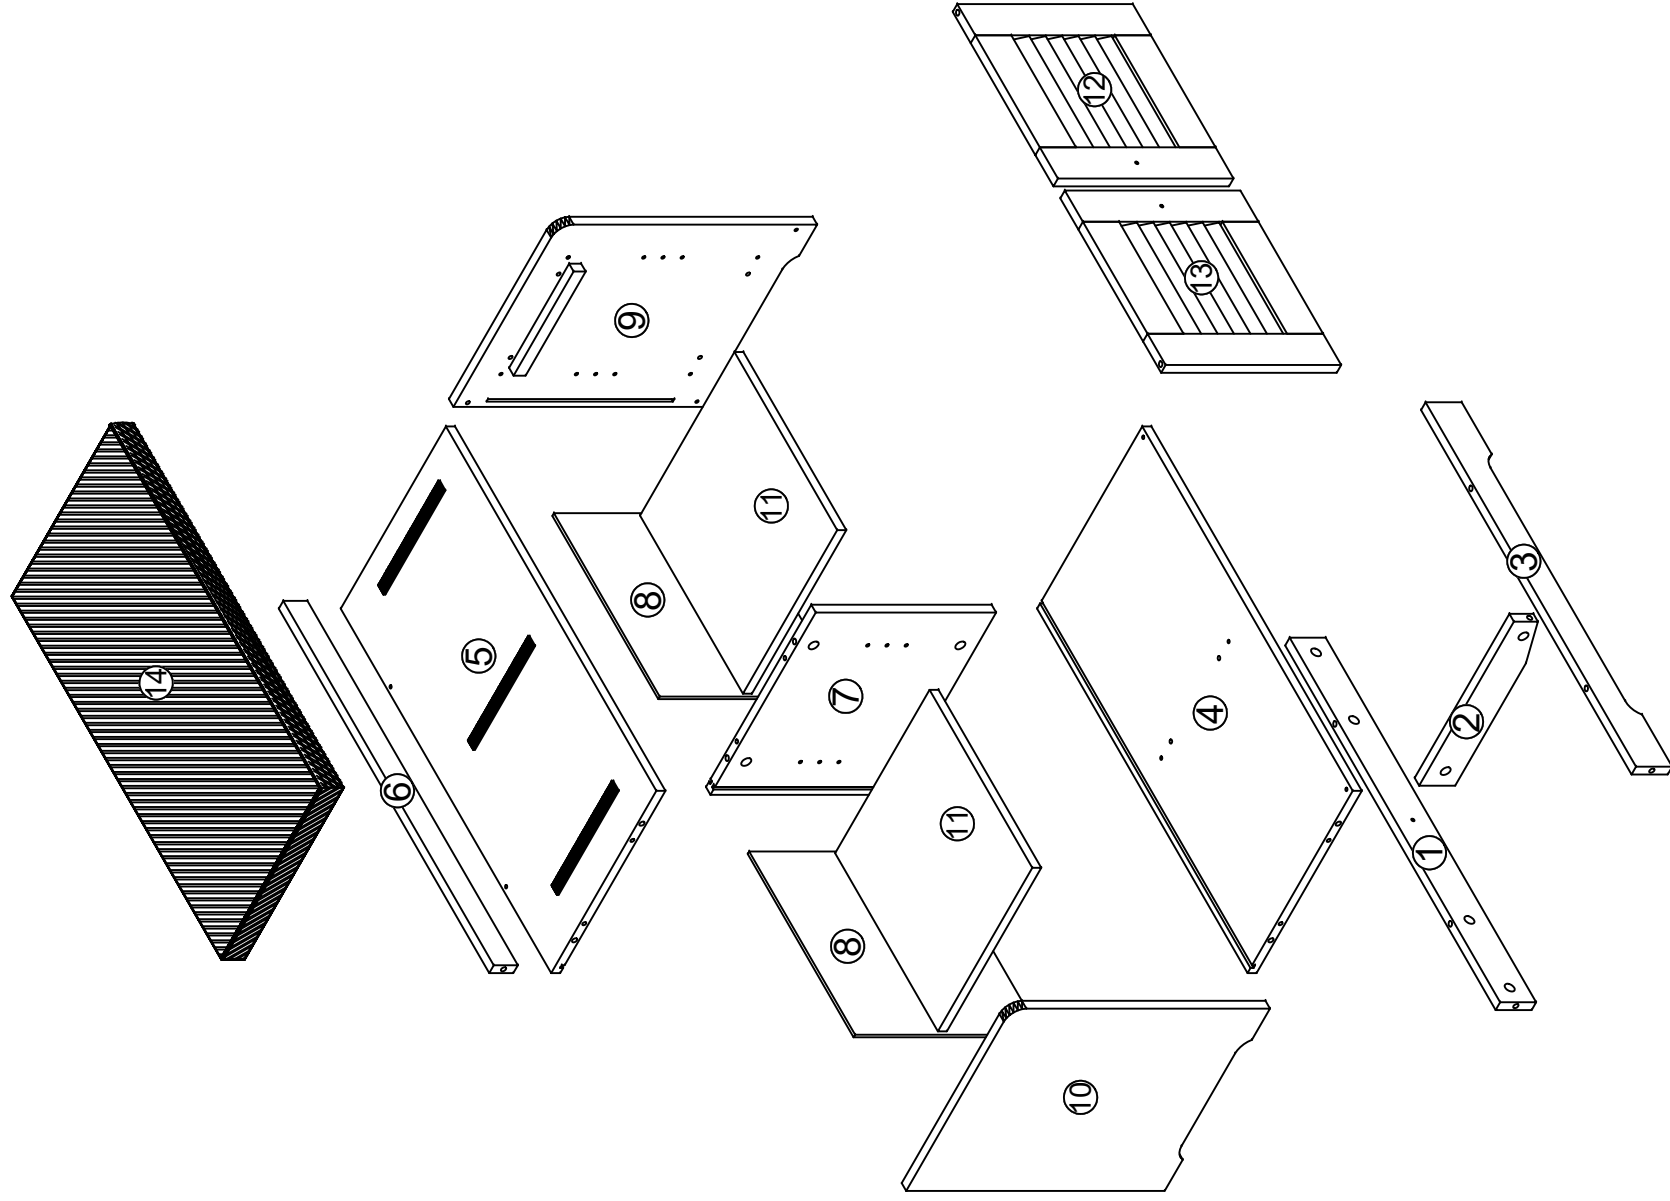

STEP1 PAEG3 will require these parts

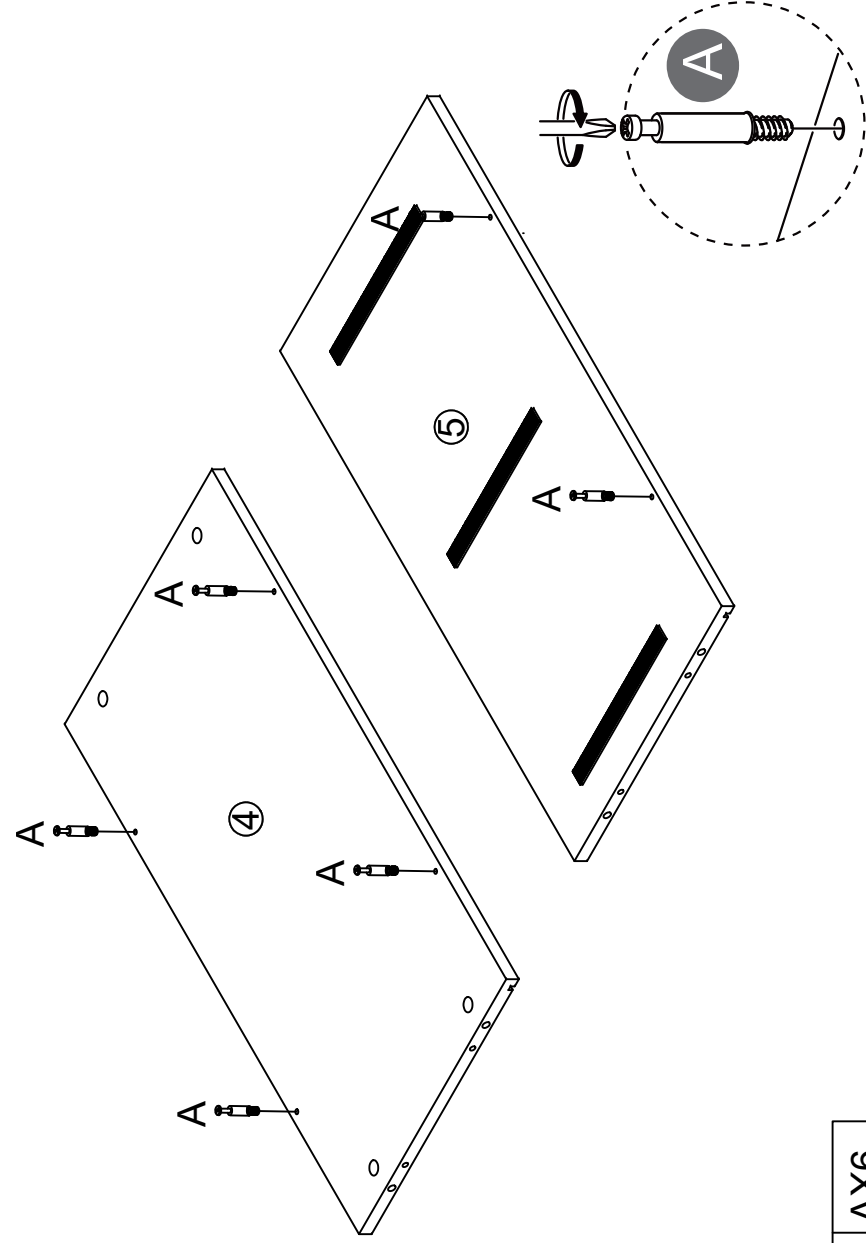


AX6

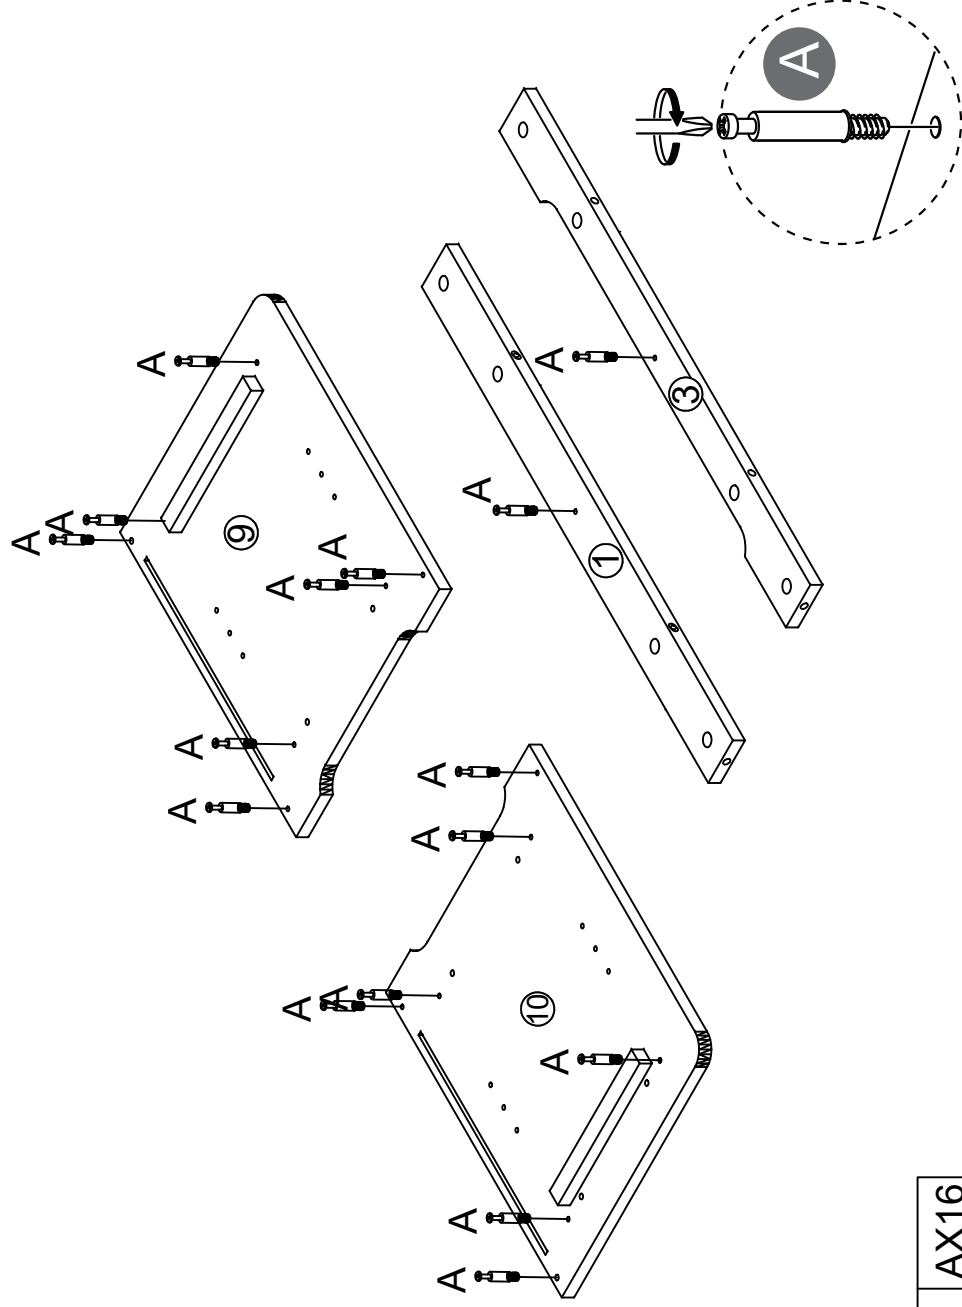


AX16

STEP2


PAEG4
will require these parts

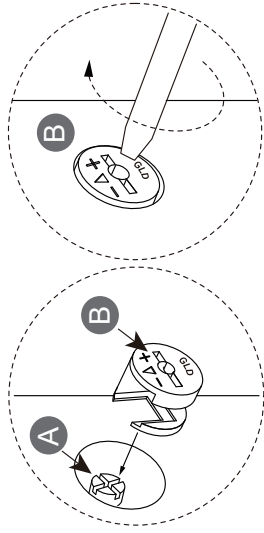



Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

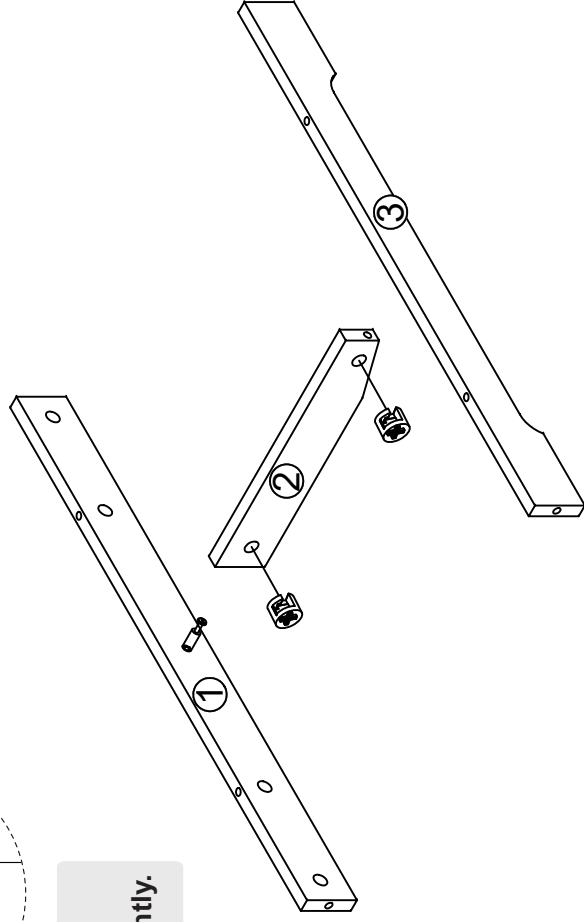


BX2

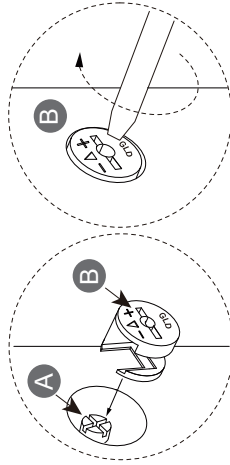

Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

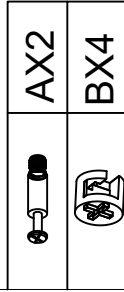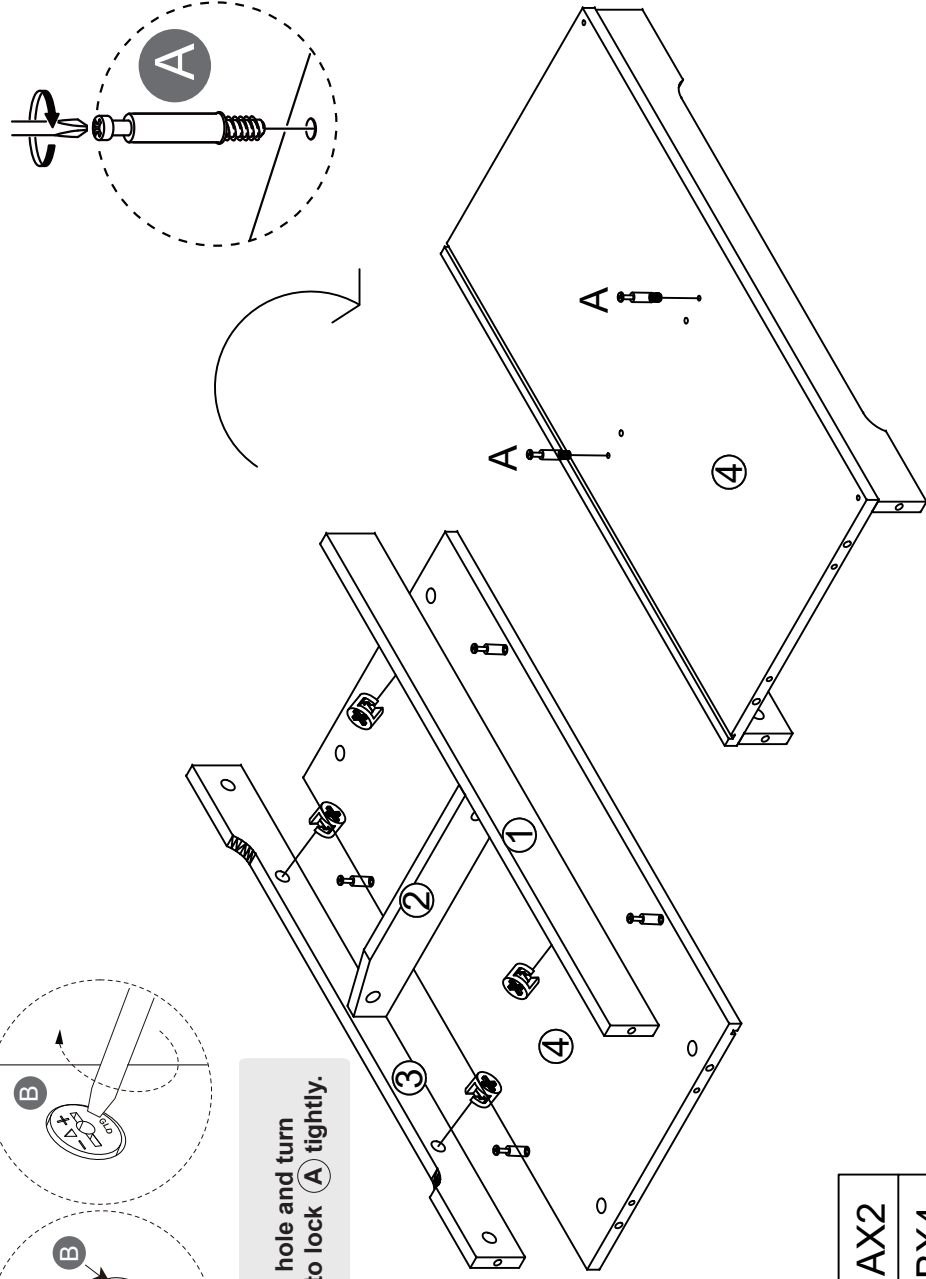


AX2




BX4

STEP3


PAEG5
will require these parts

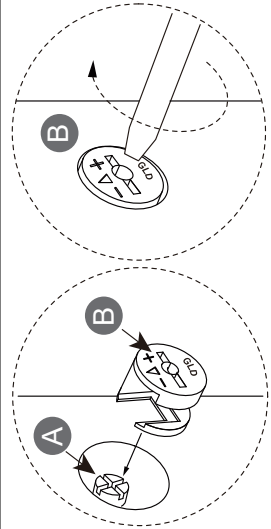


Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

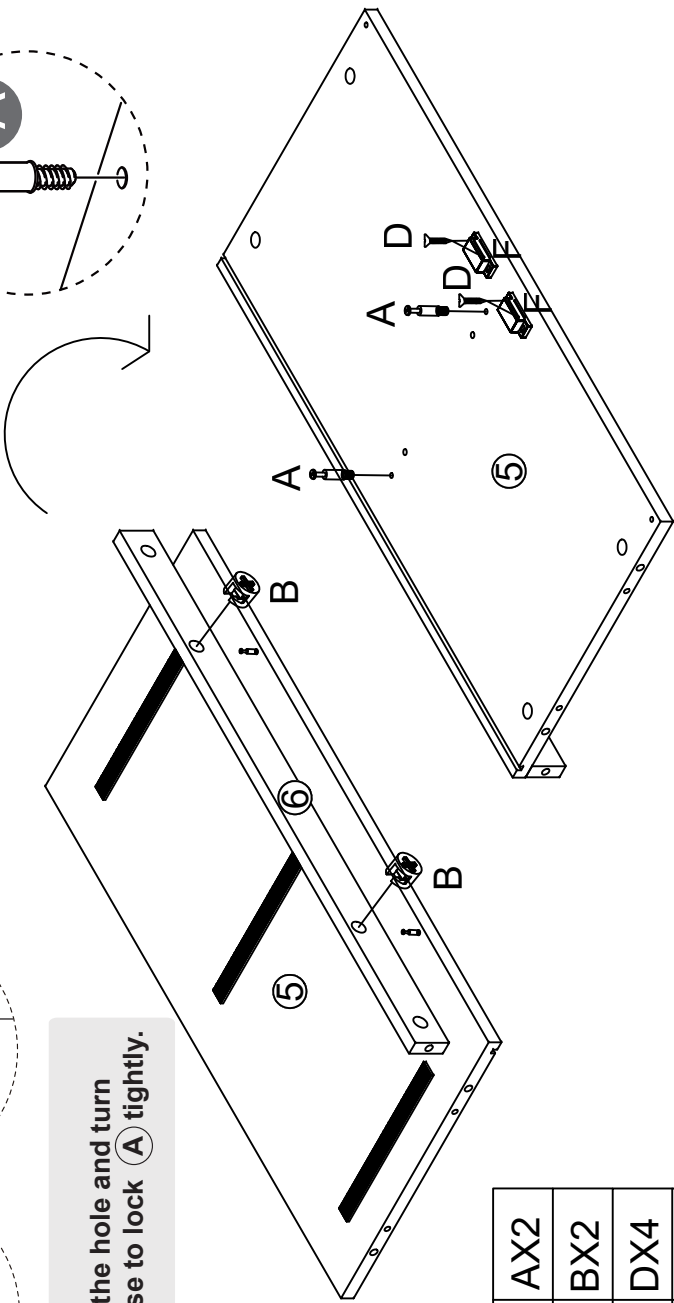


	AX2
	BX2
	DX4
	FX2

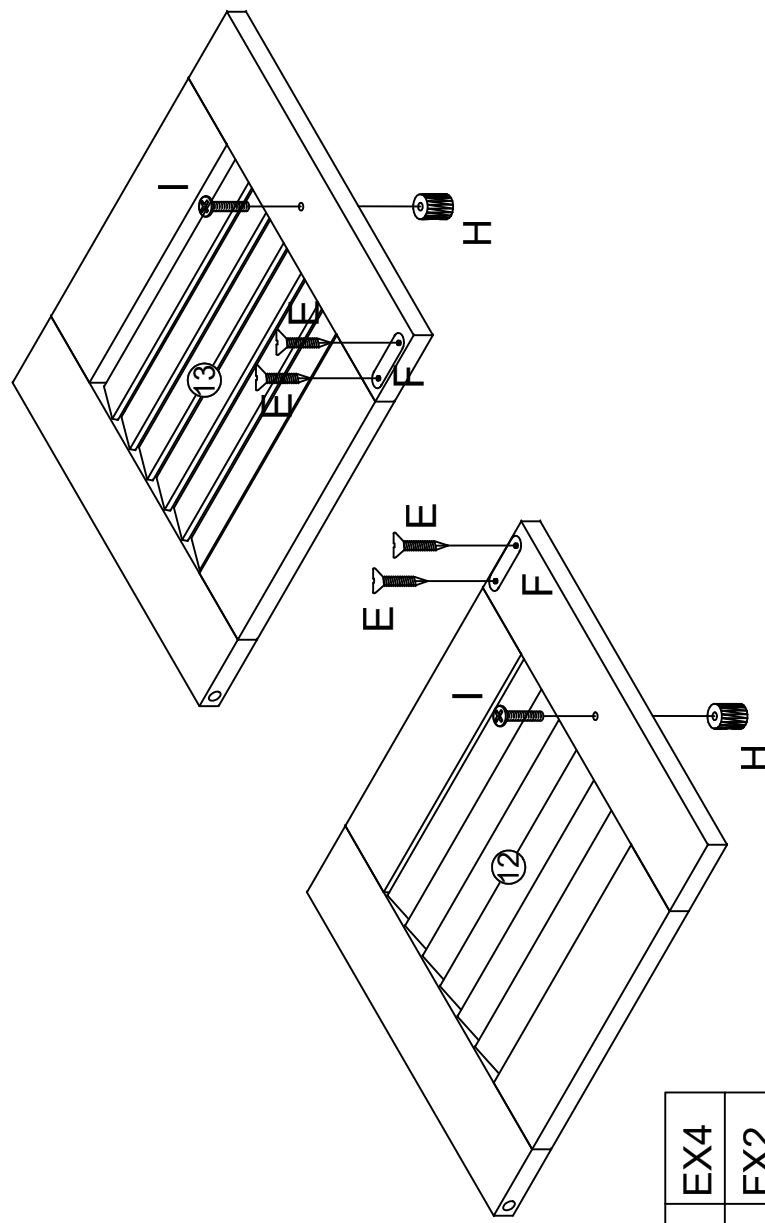

	EX4
	FX2
	HX2
	IX2


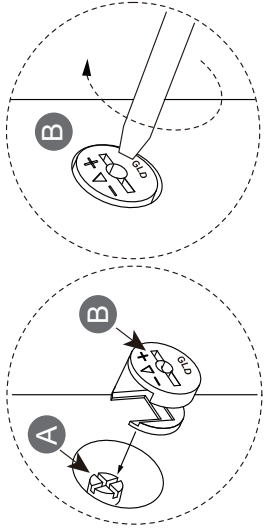


Attention:
Put (B) into the hole and turn
(B) clockwise to lock (A) tightly.

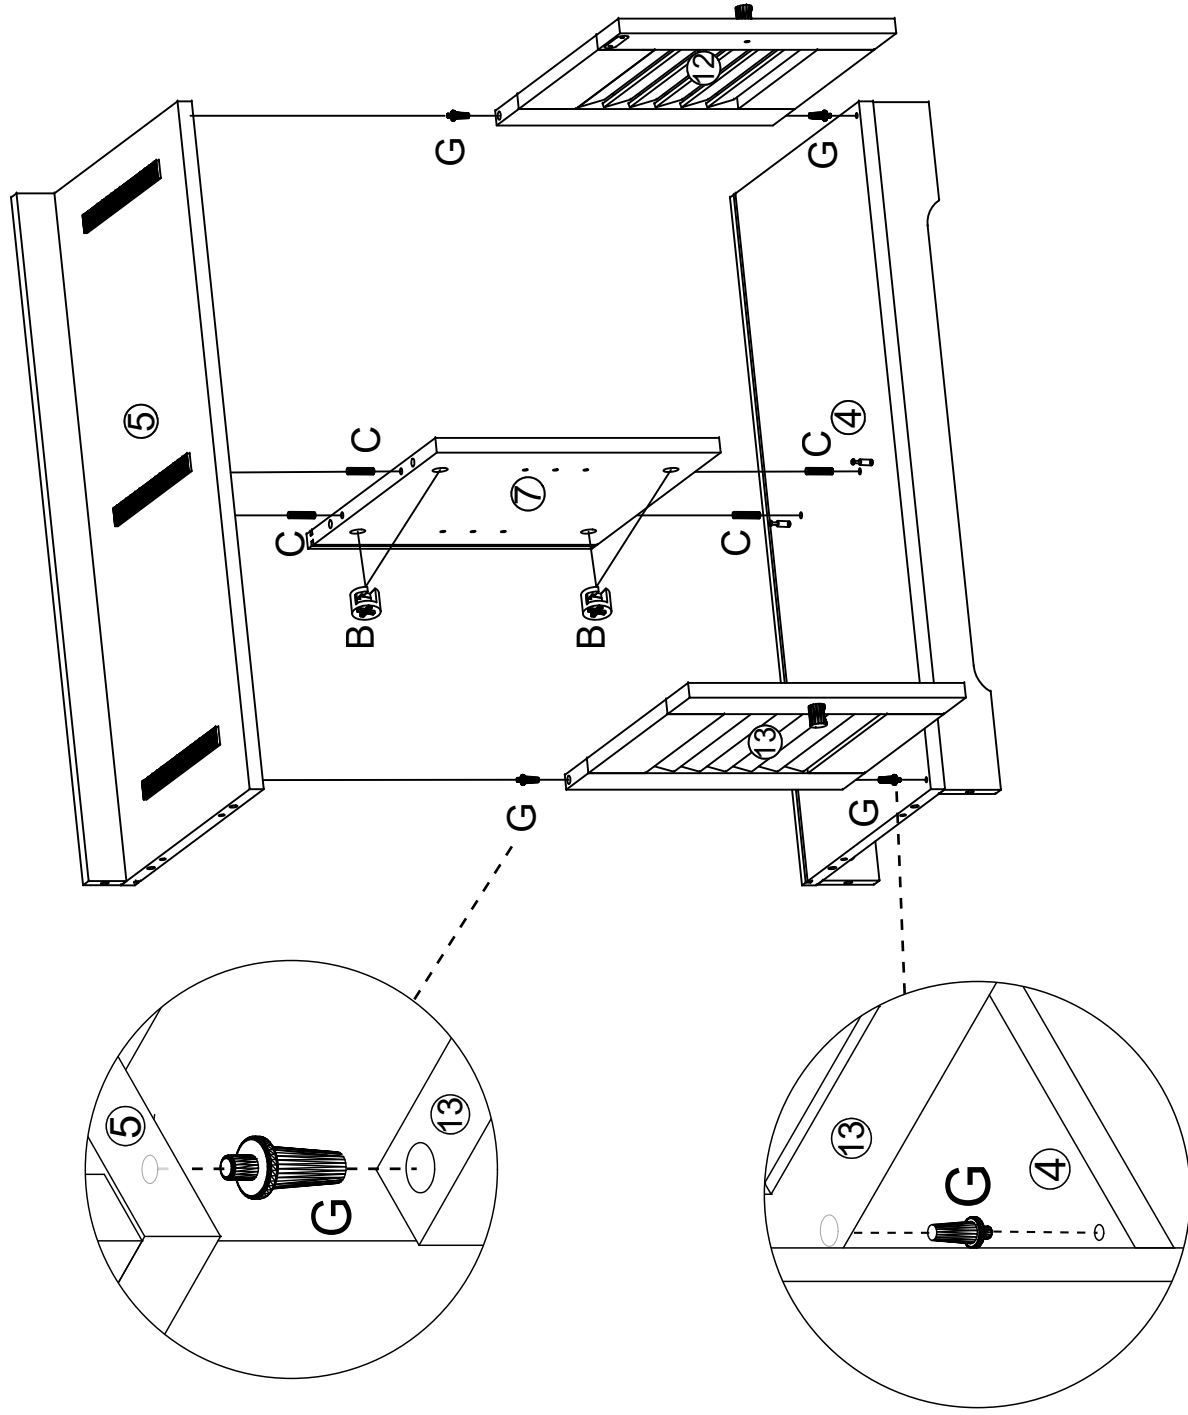

	BX2
	CX8
	GX4


STEP5 PAEG7 will require these parts

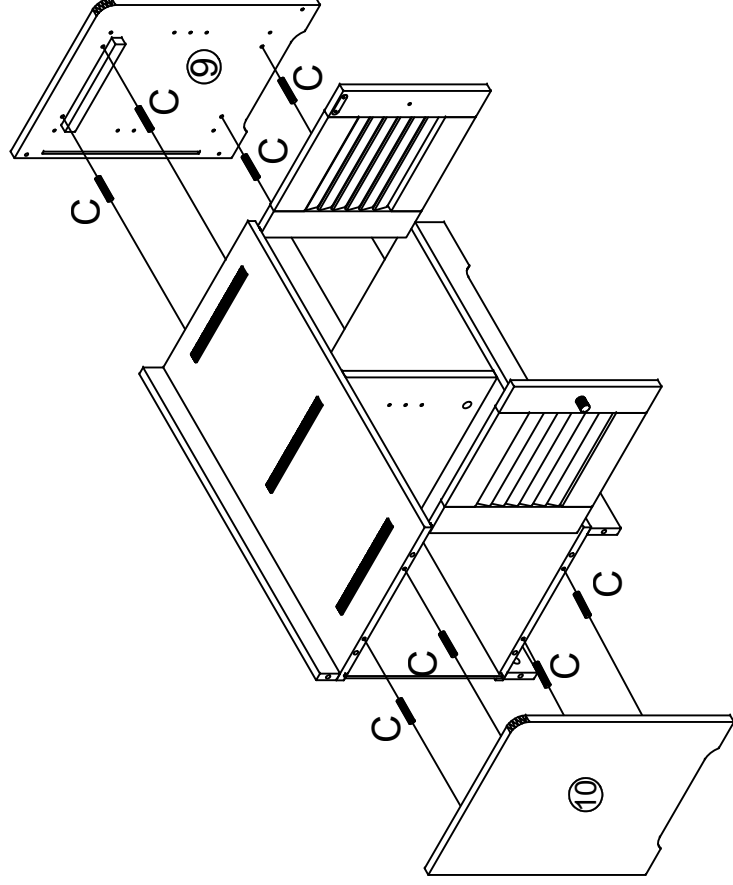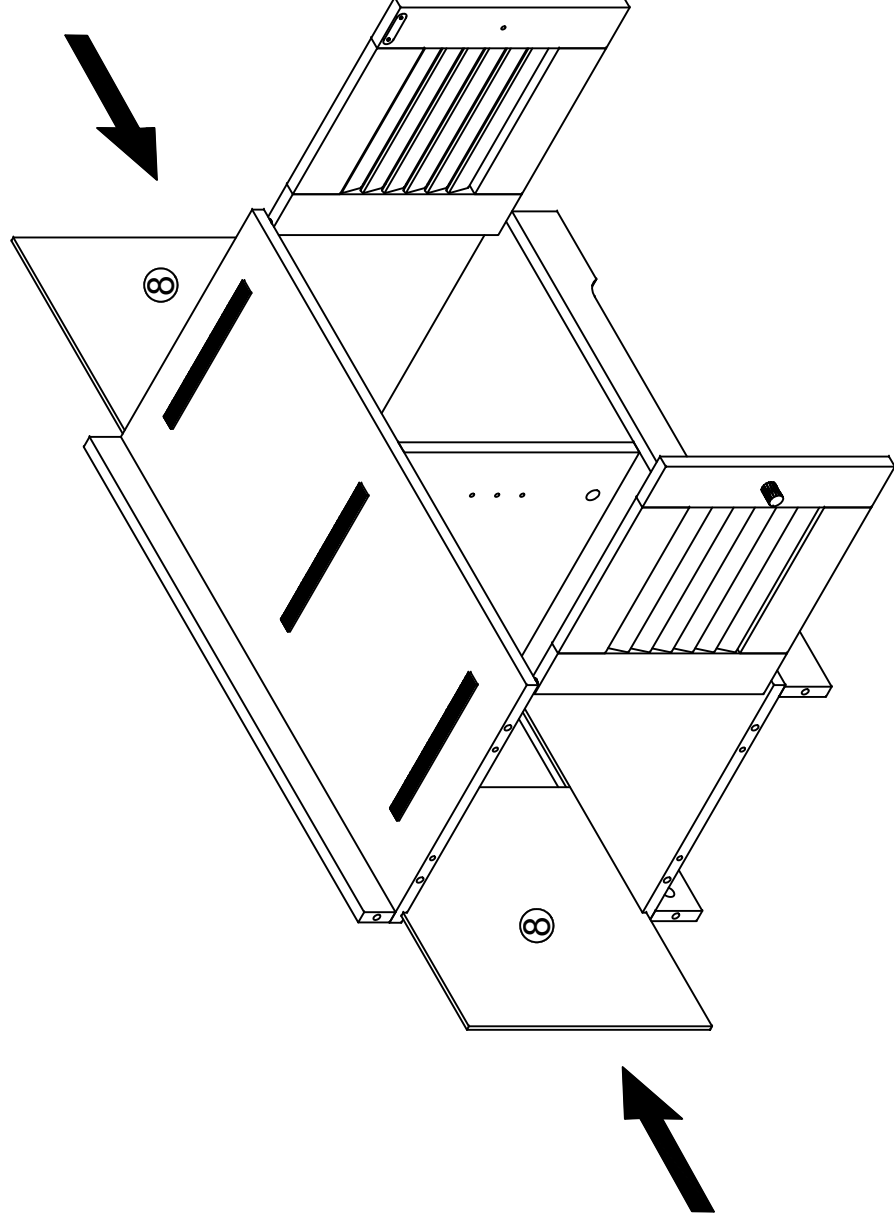


CX8

STEP6


PAEG8
will require these parts

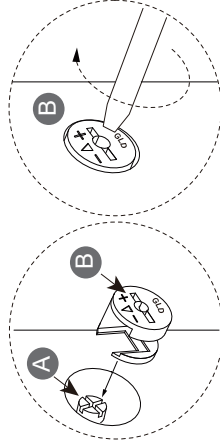


Attention:
Put **B** into the hole and turn
B clockwise to lock **A** tightly.

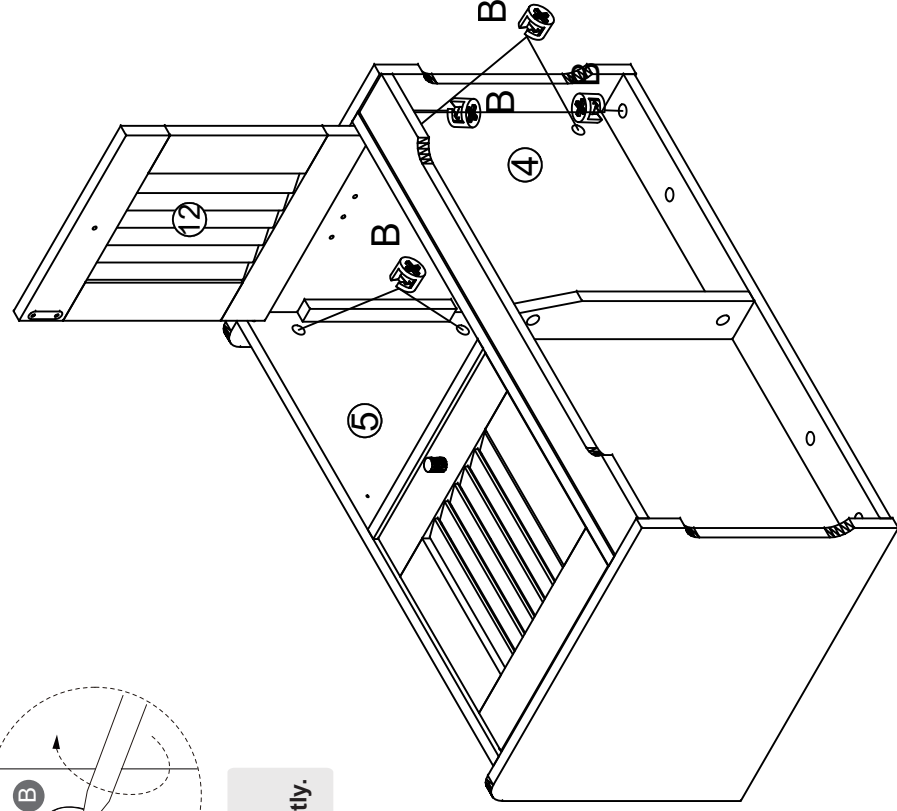

BX6

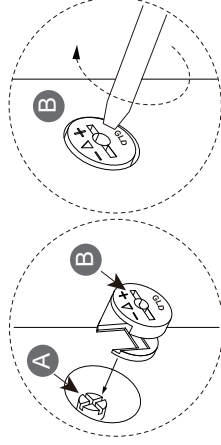


Attention:
Put **B** into the hole and turn
B clockwise to lock **A** tightly.

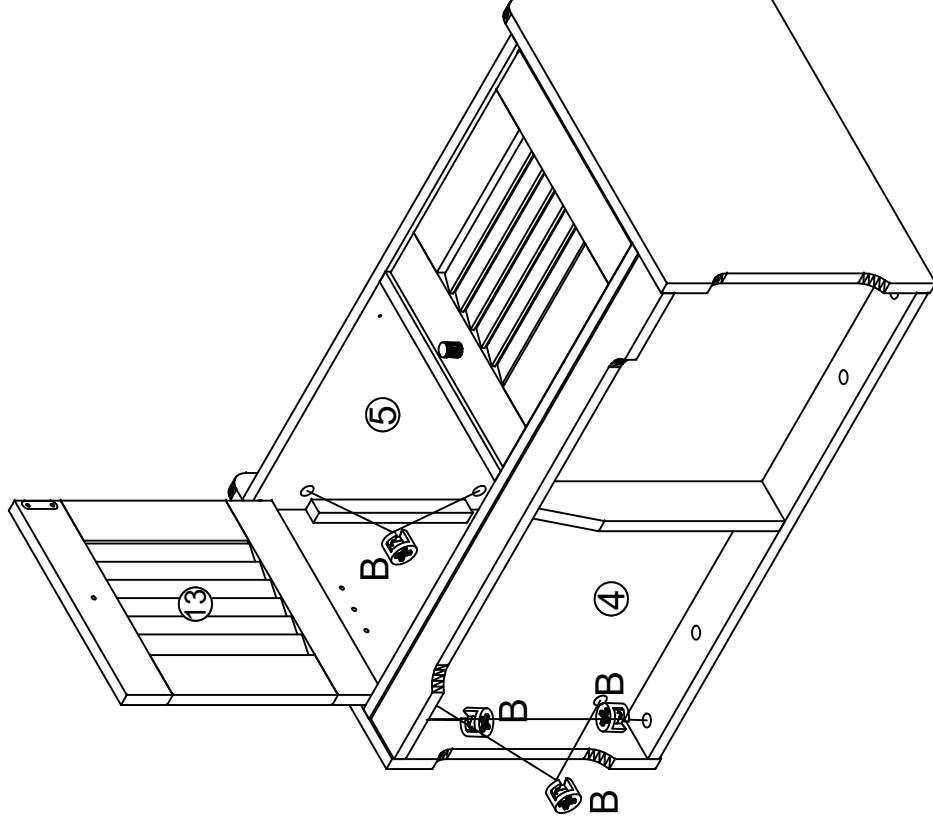



BX6

STEP7

PAEG9
will require these parts

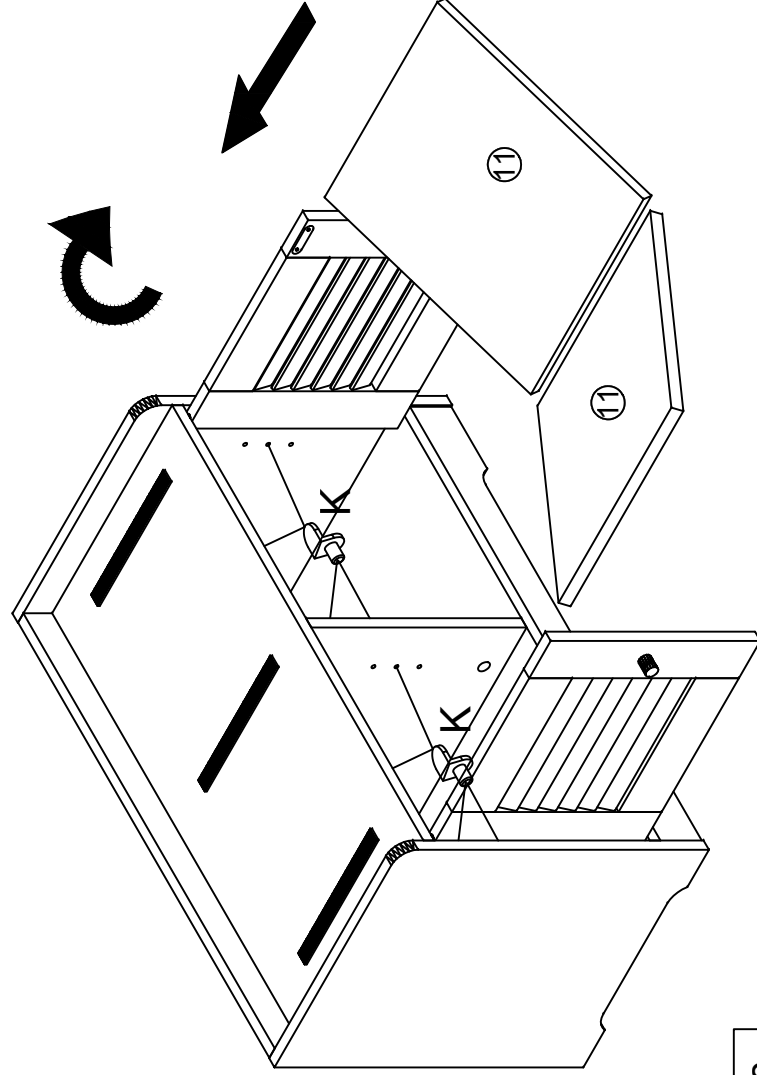



KX8

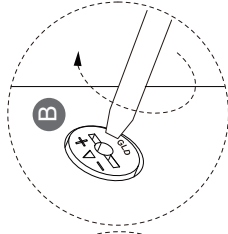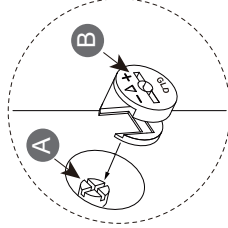

Attention:

Put **B** into the hole and turn

B clockwise to lock **A** tightly.

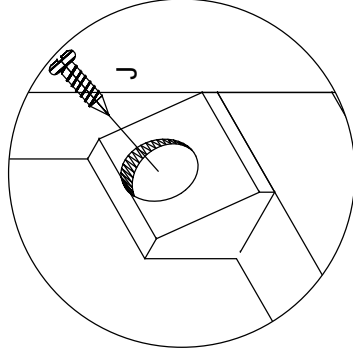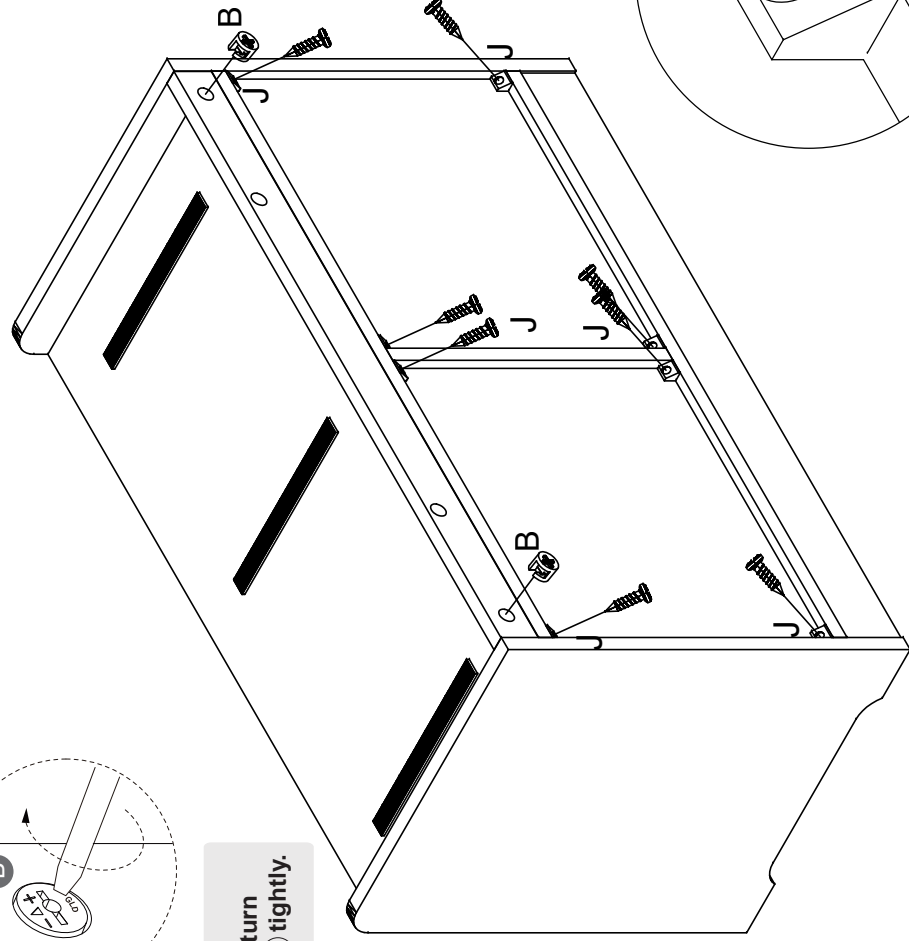

BX2



JX8

PAEG10
will require these parts

STEP 8

