




!WOODEN MATERIALS ! NO ELECTRIC DRILL!


ASSEMBLY INSTRUCTION

1.

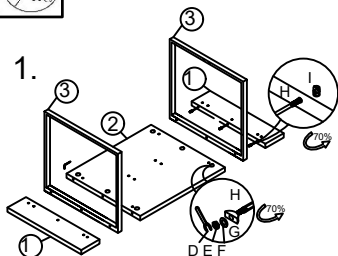


70% do not need to be tightened

2.

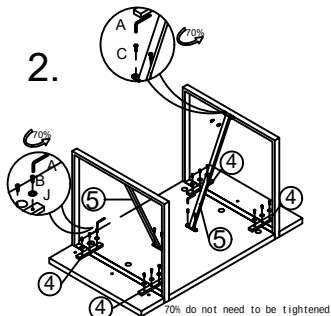


70% do not need to be tightened


3.

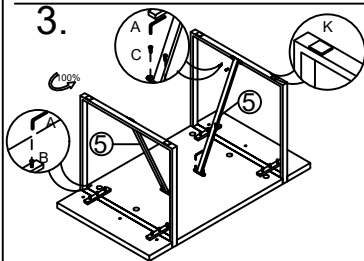



100% fully tightened

4.

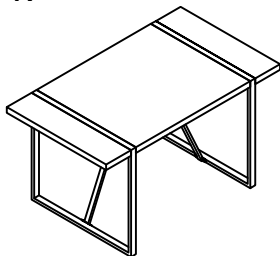

①  X2	②  X1	③  X2	④  X4	⑤  X2	
A  5# X1	B  M6X40 X12	C  M6X18 X8	D  X1	E  M8 X6	
F  M8 X6	G  M8 X6	H  M8x140 X6	I  M8 X6	J  M6*22 X12	K  X4

ASSEMBLY INSTRUCTION

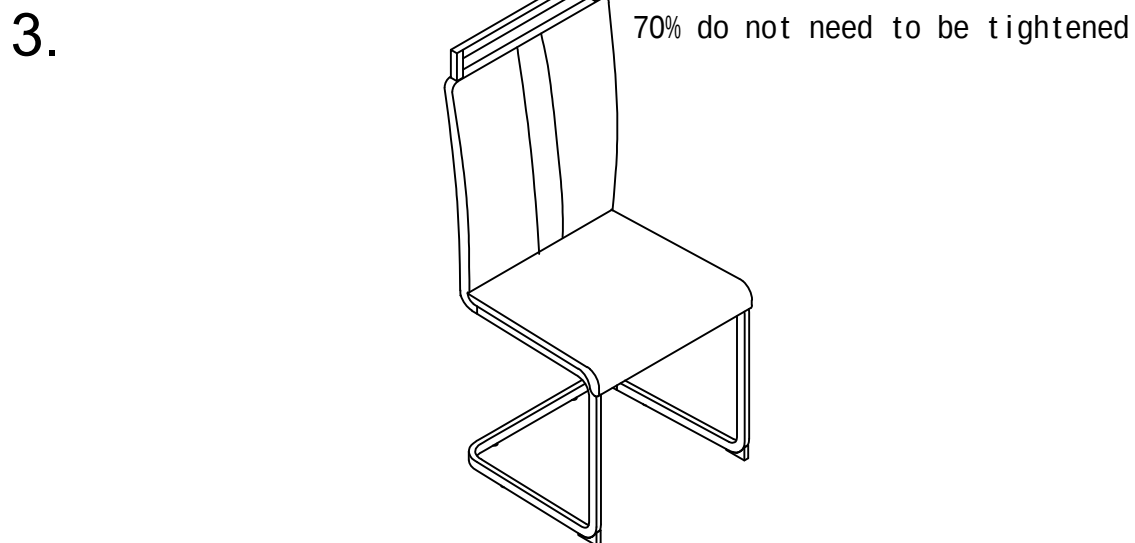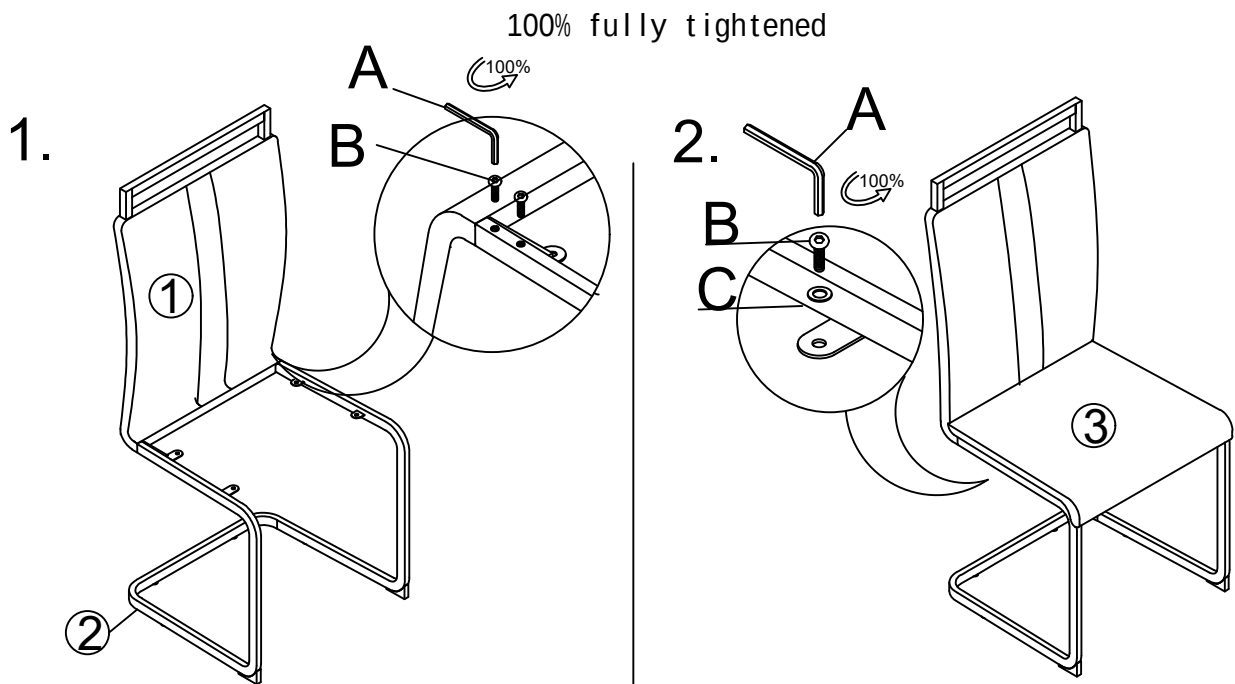

①		X1	②		X1	③		X1
A		X1	B		X8	C		X4