

ASSEMBLY INSTRUCTIONS

AR - ARLINGTON BED - QUEEN SIZE

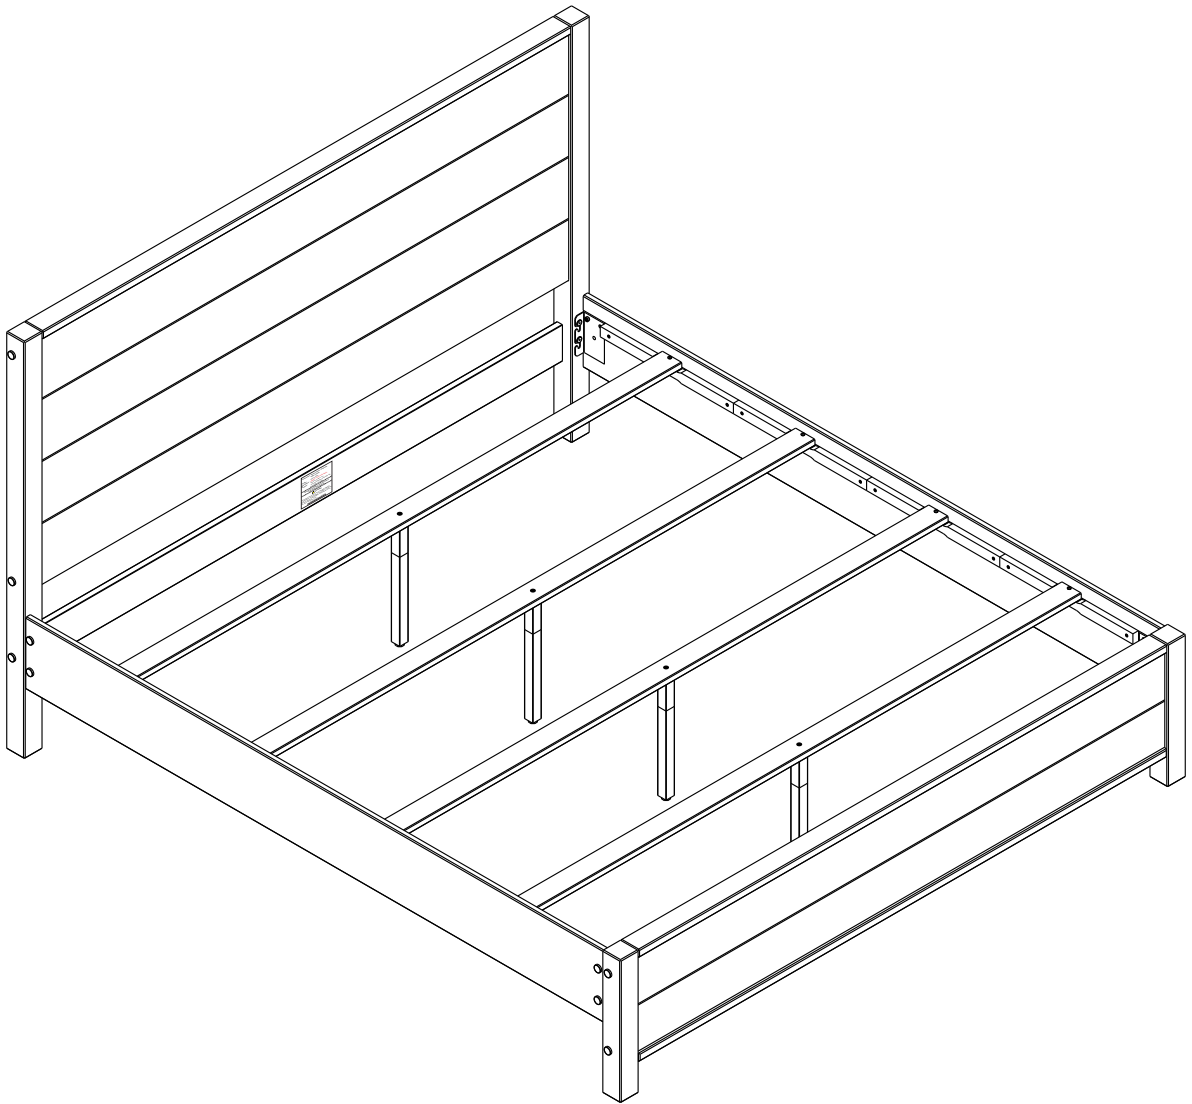




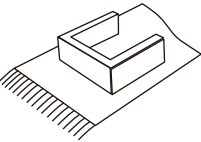

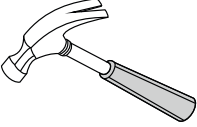
IMPORTANT NOTE:

- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

PARTS INCLUDED




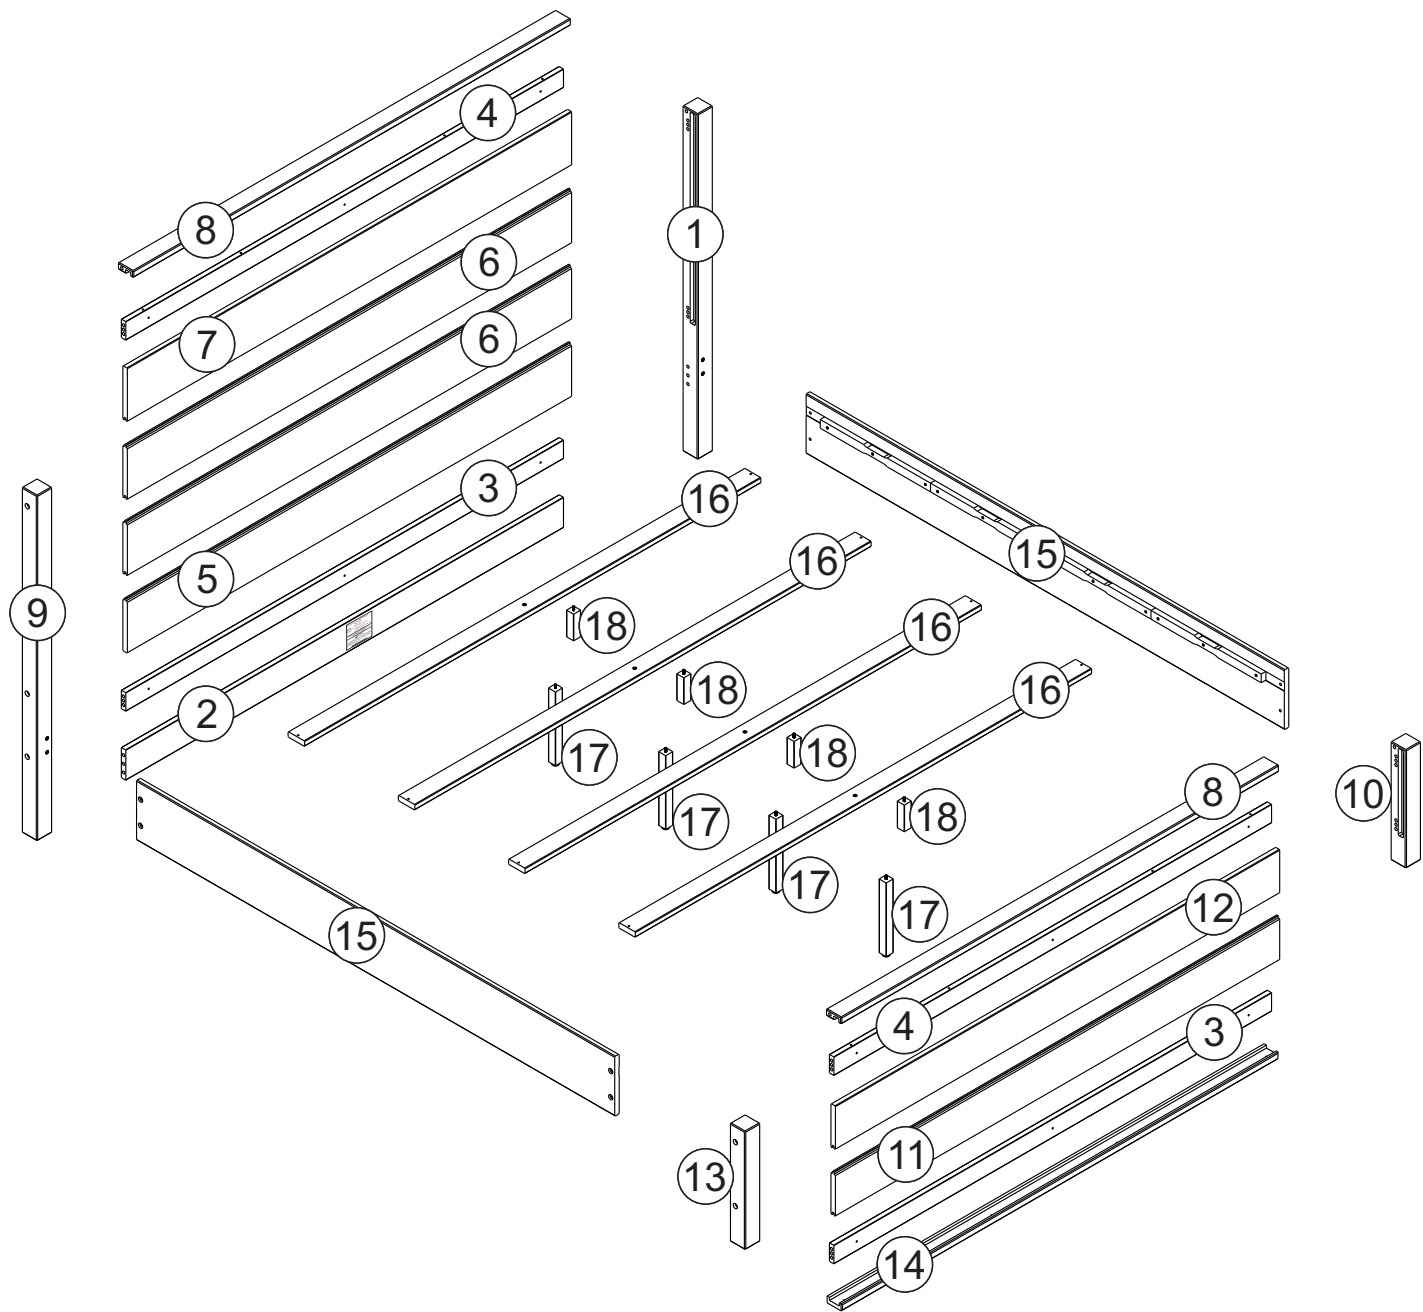






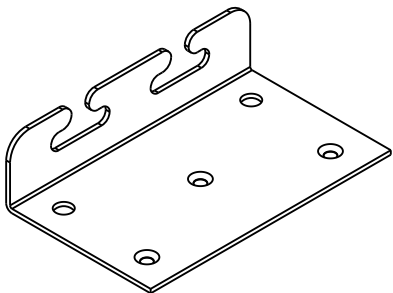

Please confirm all parts available before assembly.




| Tools (not included) | | | | |
|---|---|--|---|---|
|  01:10 Min Approximately |  02 Persons |  Clean surface |  Philips key |  Hammer |

HARDWARE INCLUDED

Please confirm all hardware available before assembly.


| Ref. | | Qty. | | Qty. SPARE |
|------|--|------|---|---------------|
| A |  Ø10 x 40 mm | 24 | + | 02 |
| B |  Ø1/4" x 100 mm | 10 | + | 01 |
| C |  Ø1/4" x 40 mm | 08 | + | 01 |
| D |  Ø1/4" x 20 mm | 08 | + | 01 |
| E |  Ø4,5 x 35 mm | 32 | + | 02 |
| F |  Ø3,5 x 16 mm | 12 | + | 02 |
| G |  | 10 | + | 01 |
| H |  | 08 | + | 01 |
| I |  | 18 | + | 02 |
| J |  | 01 | + | 01 |
| K |  | 04 | | |
| L |  | 01 | | |

OPTION 01

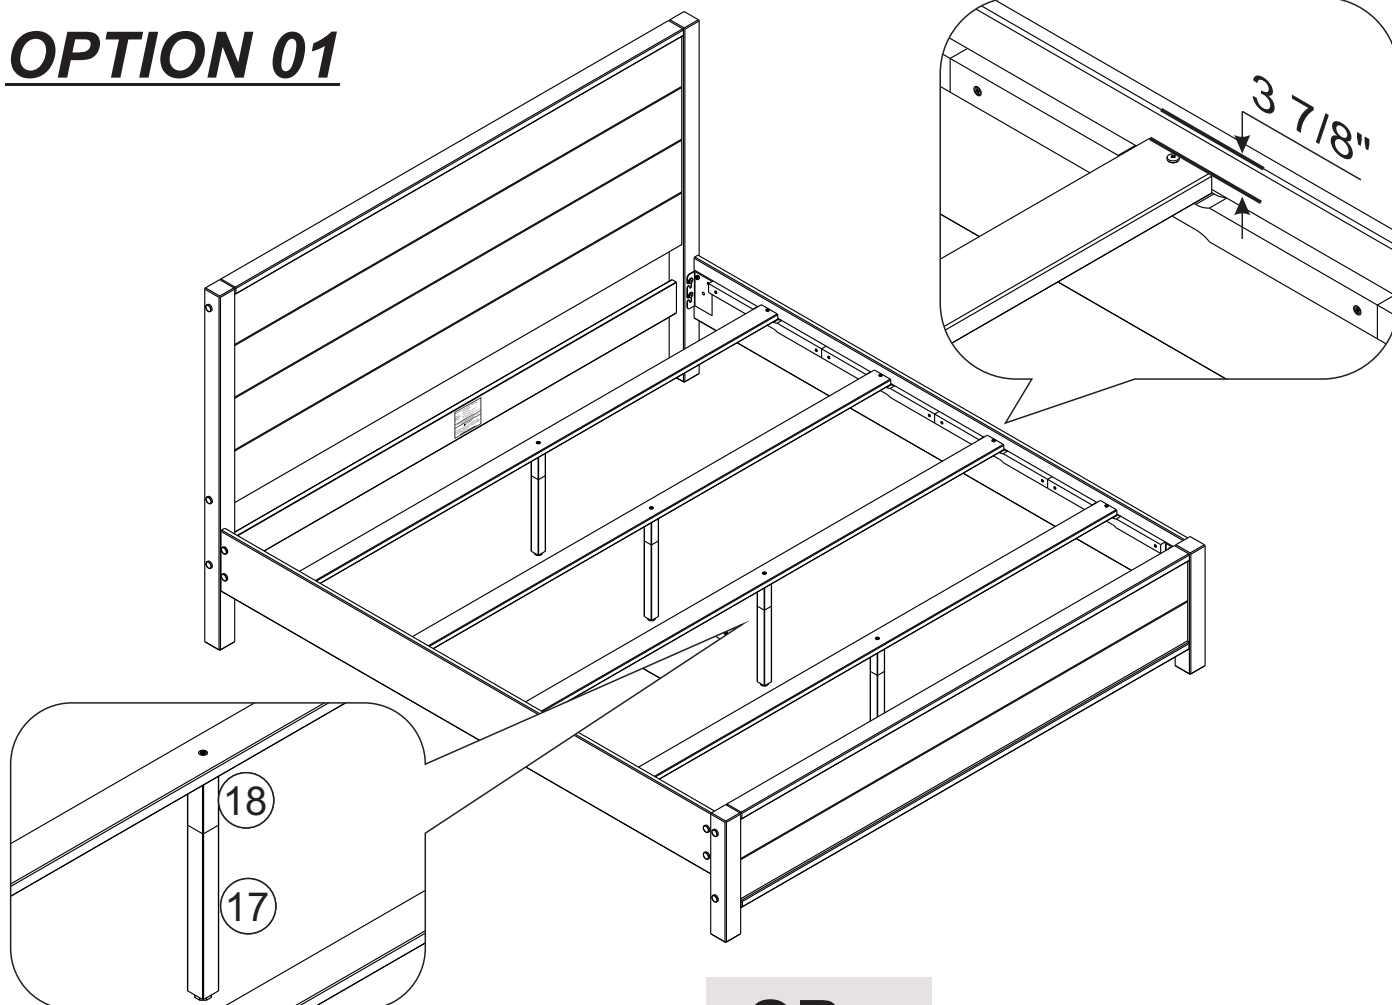



OR...

OPTION 02

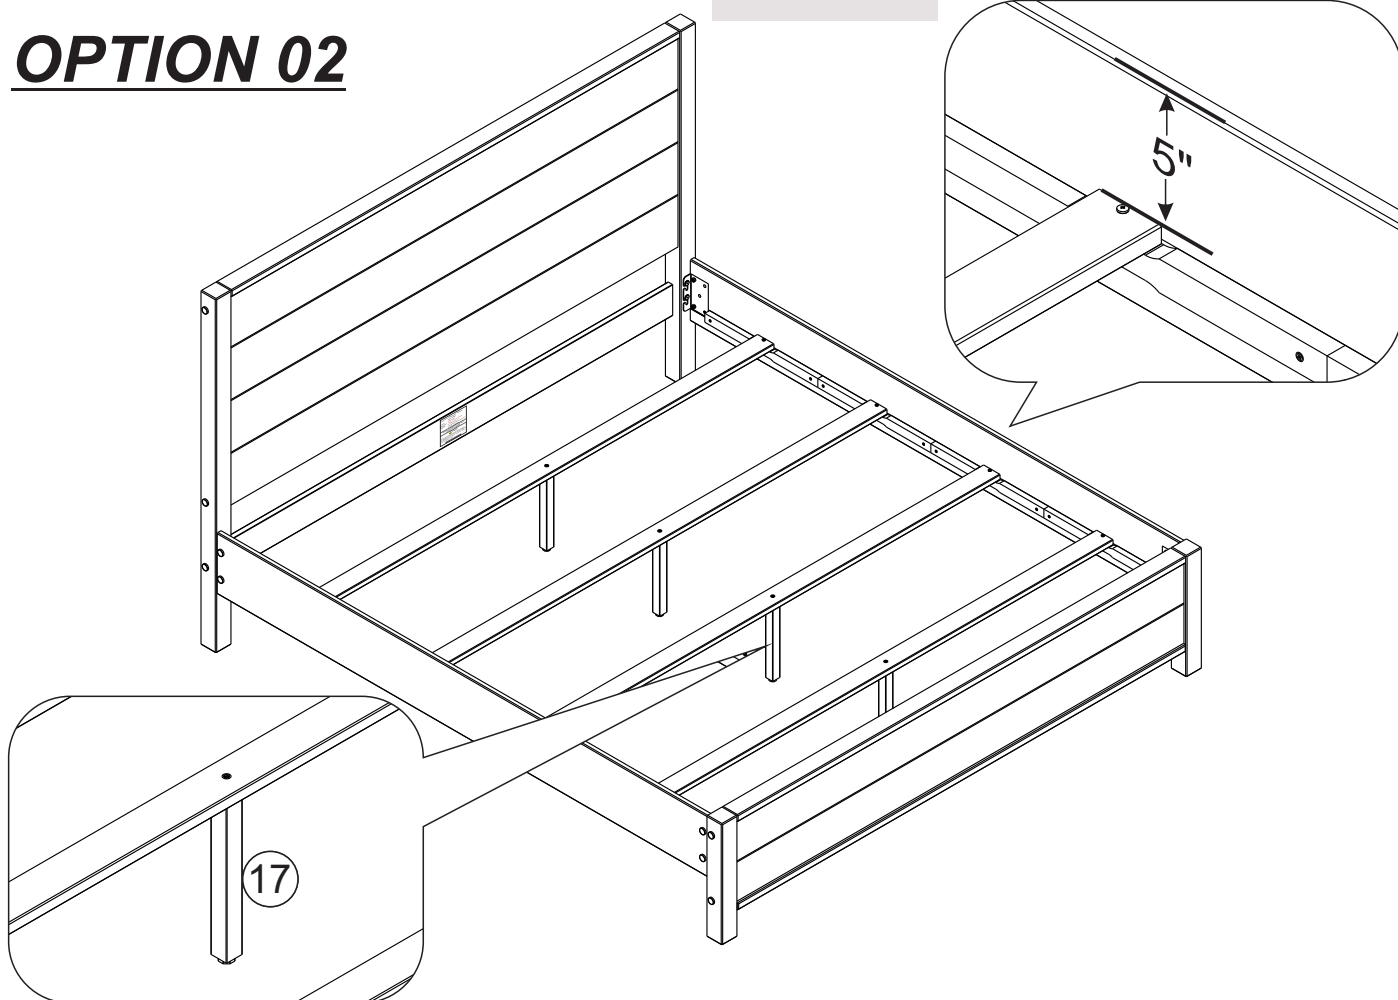


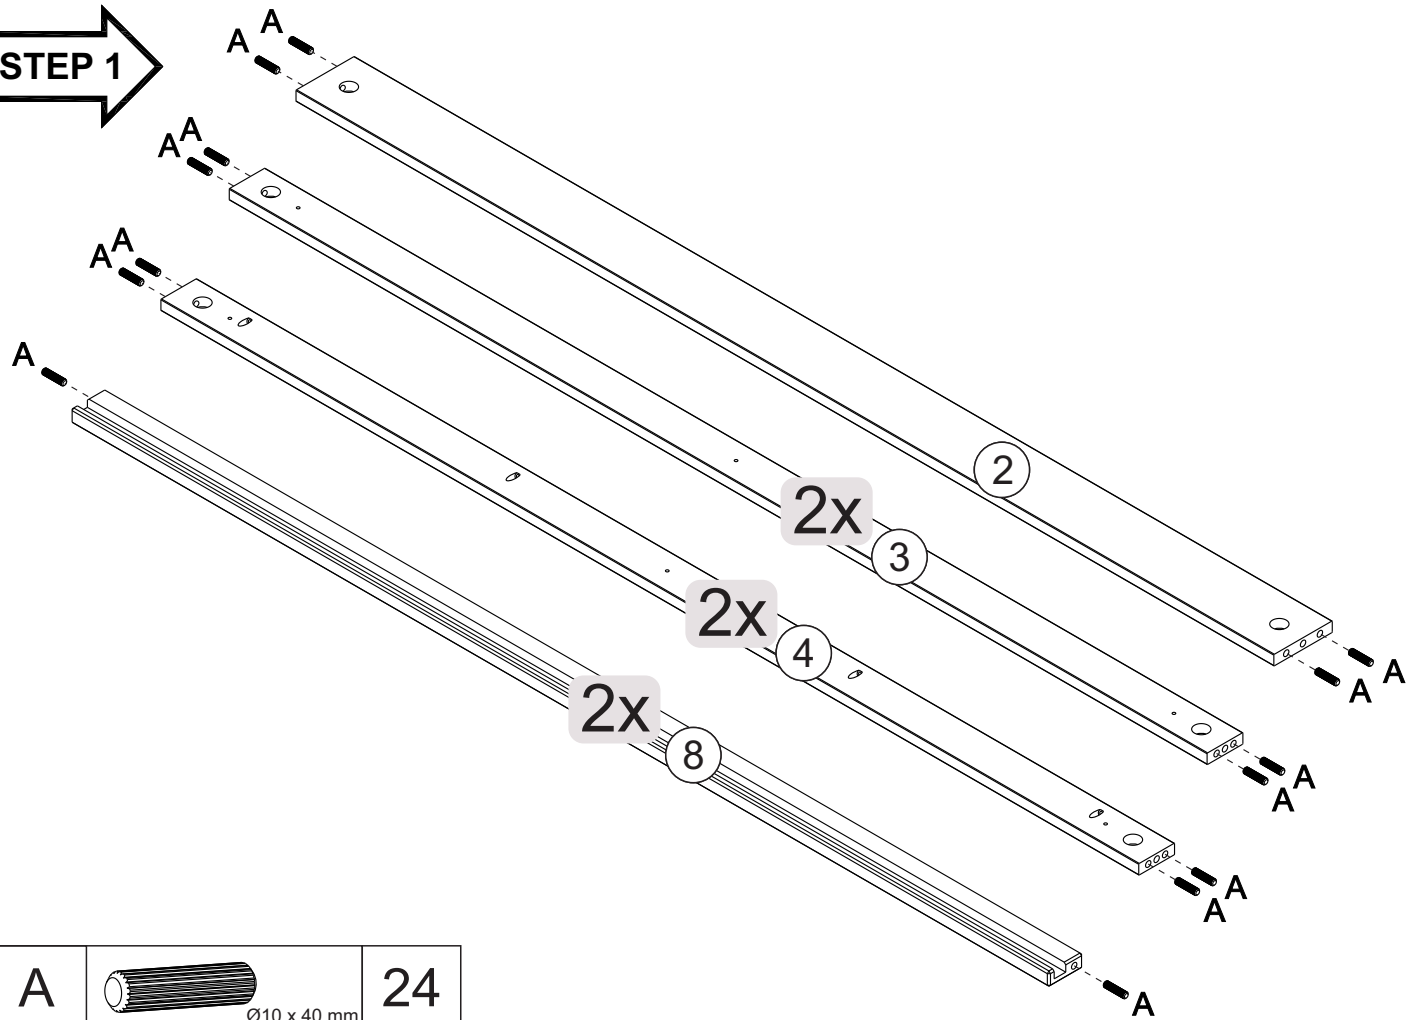



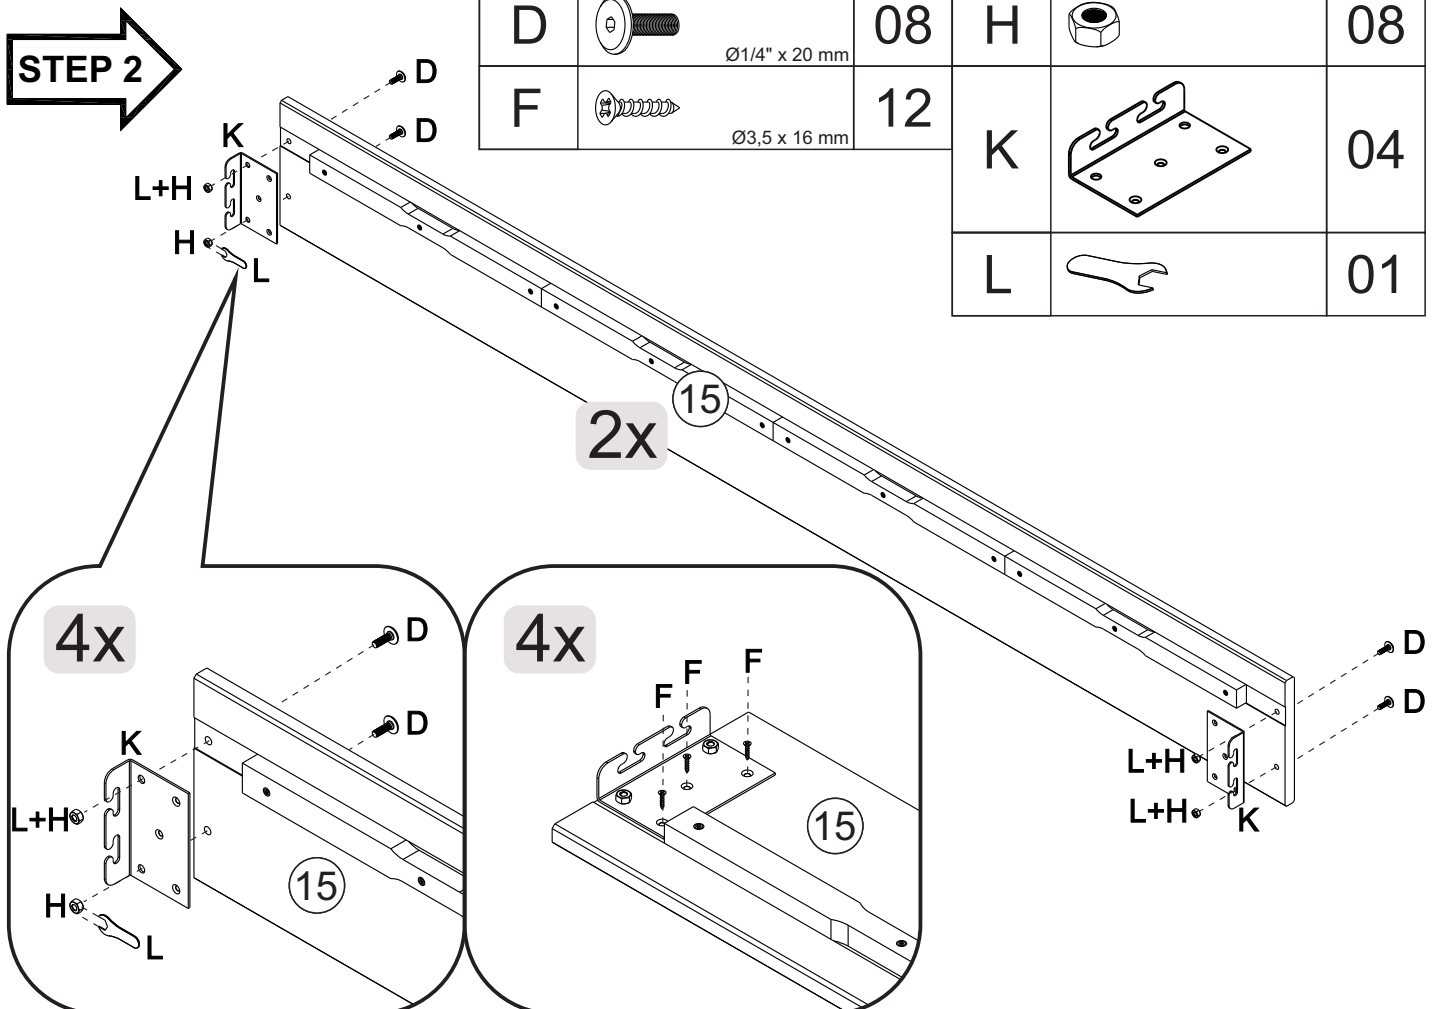
STEP 1





| | | |
|---|---|----|
| A |  | 24 |
|---|---|----|



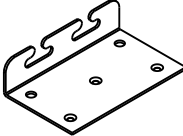STEP 2

| | | | | | |
|---|---|----|---|---|----|
| D |  | 08 | H |  | 08 |
| F |  | 12 | K |  | 04 |
| | | | L |  | 01 |


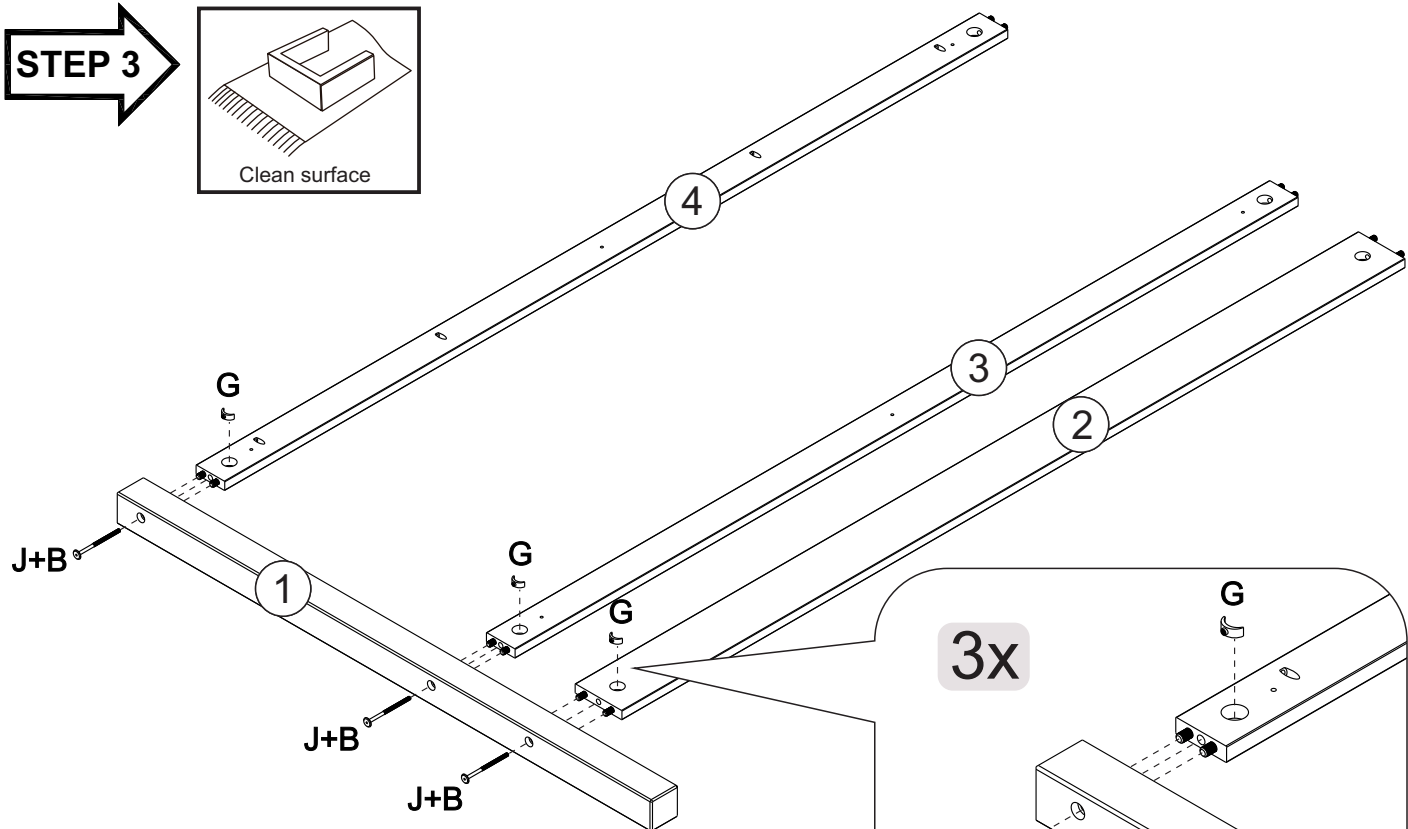
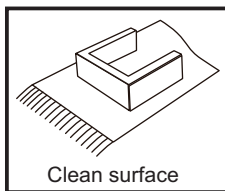


STEP 3



| | | | | | |
|---|---|----|----------------|--|--|
| B |  Ø1/4" x 100 mm | 03 | <div>J+E</div> | | |
| G |  | 03 | | | |

STEP 4

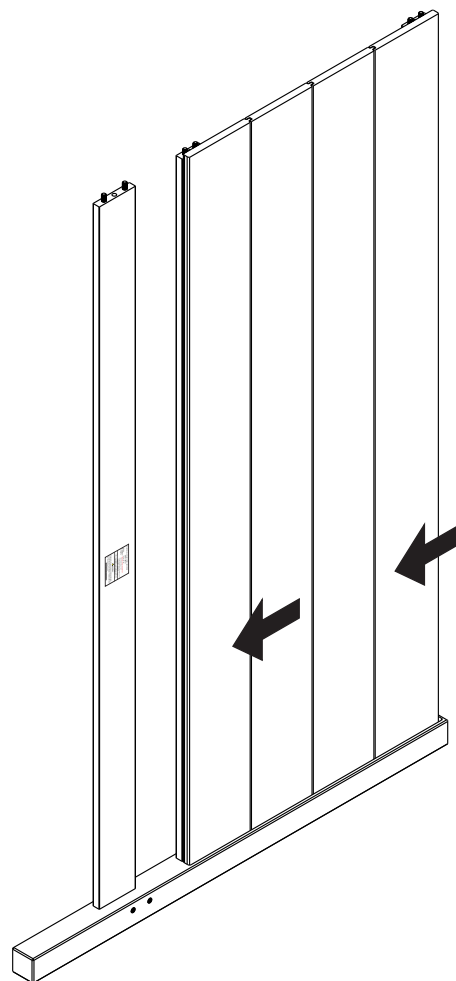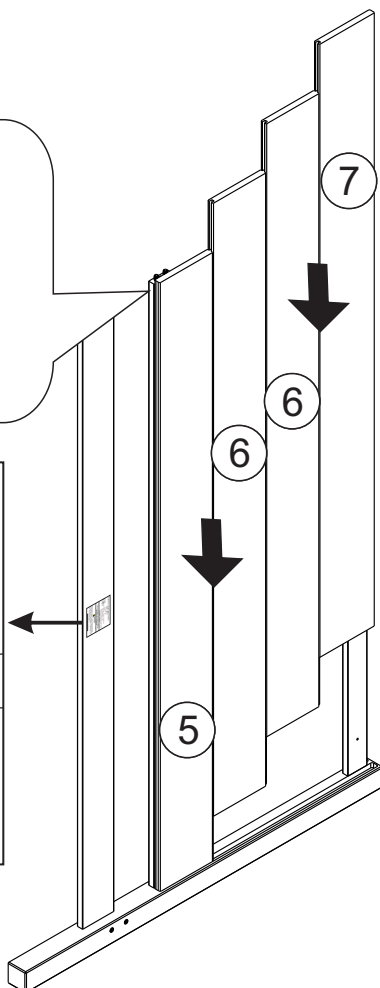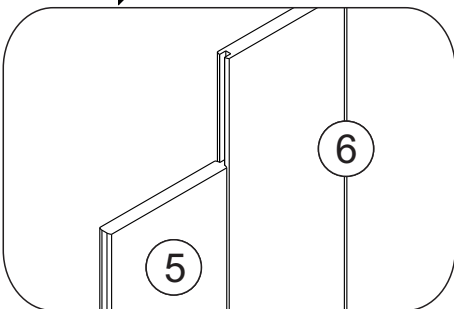

Product Name: ARLINGTON BED - QUEEN SIZE
AR607 / AR609
Country: Made in Brazil
Mfg Date/Lot: 03/2022 - PO N° 01.20.2022-4
Company: Eco-Flex Furniture, LLC
 1031 East Mountain Street Bldg. 306
 Kernersville, NC 27284

California 93120 Phase 2 and TSCA Title VI
 Compliant for Formaldehyde.




WARNING:


This product can expose you to chemicals including formaldehyde, which is known to the State of California to cause cancer or birth defects or reproductive harm. For more information, go to:




www.p65warnings.ca.gov/furniture

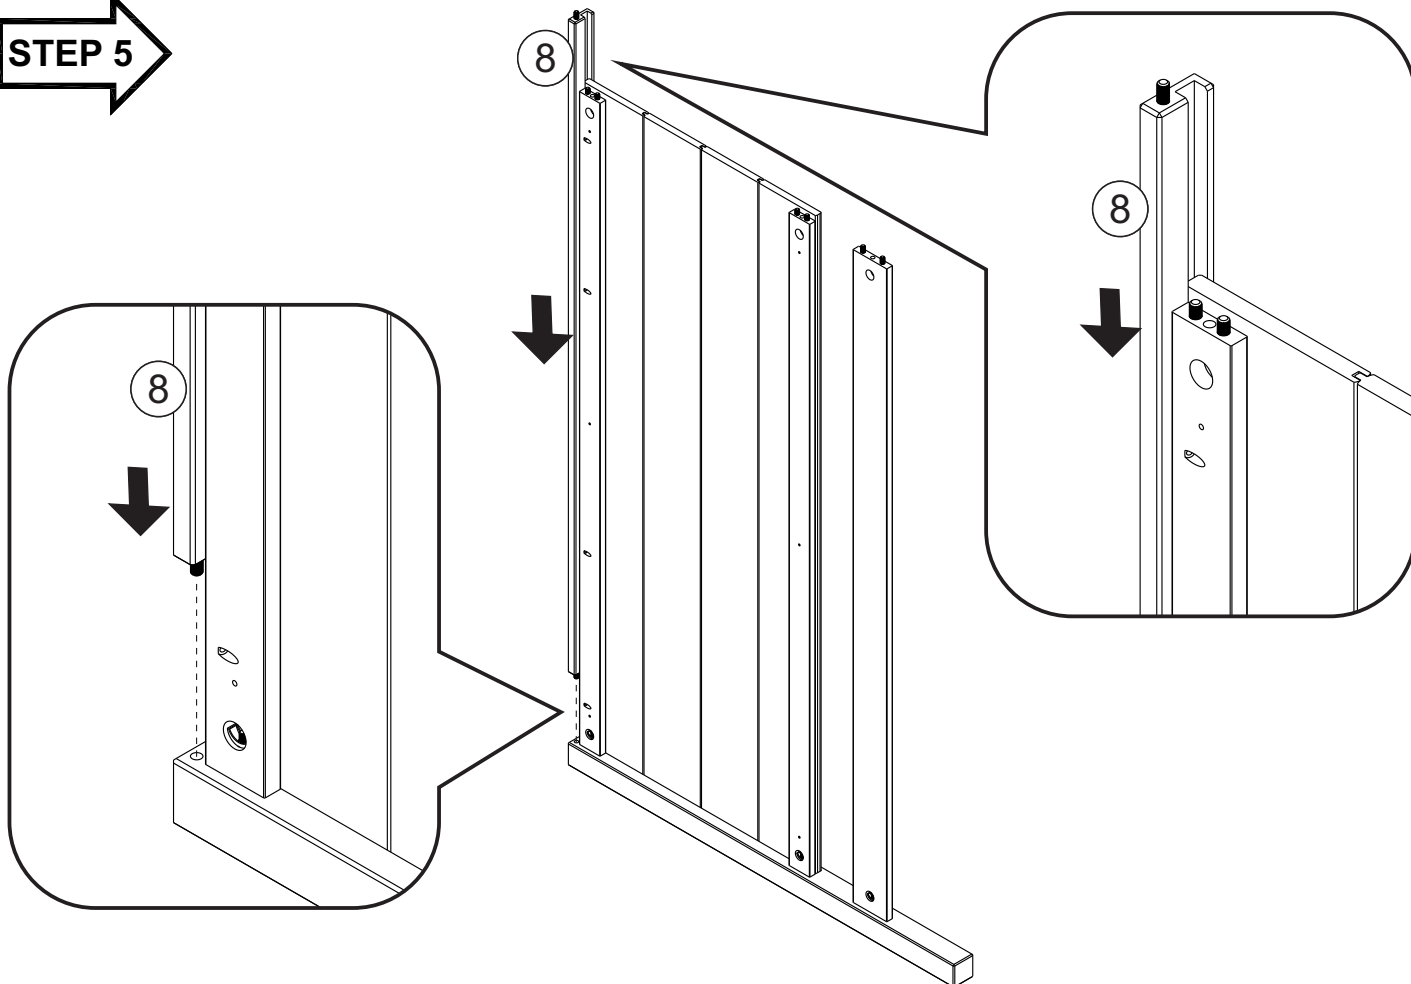STEP 5

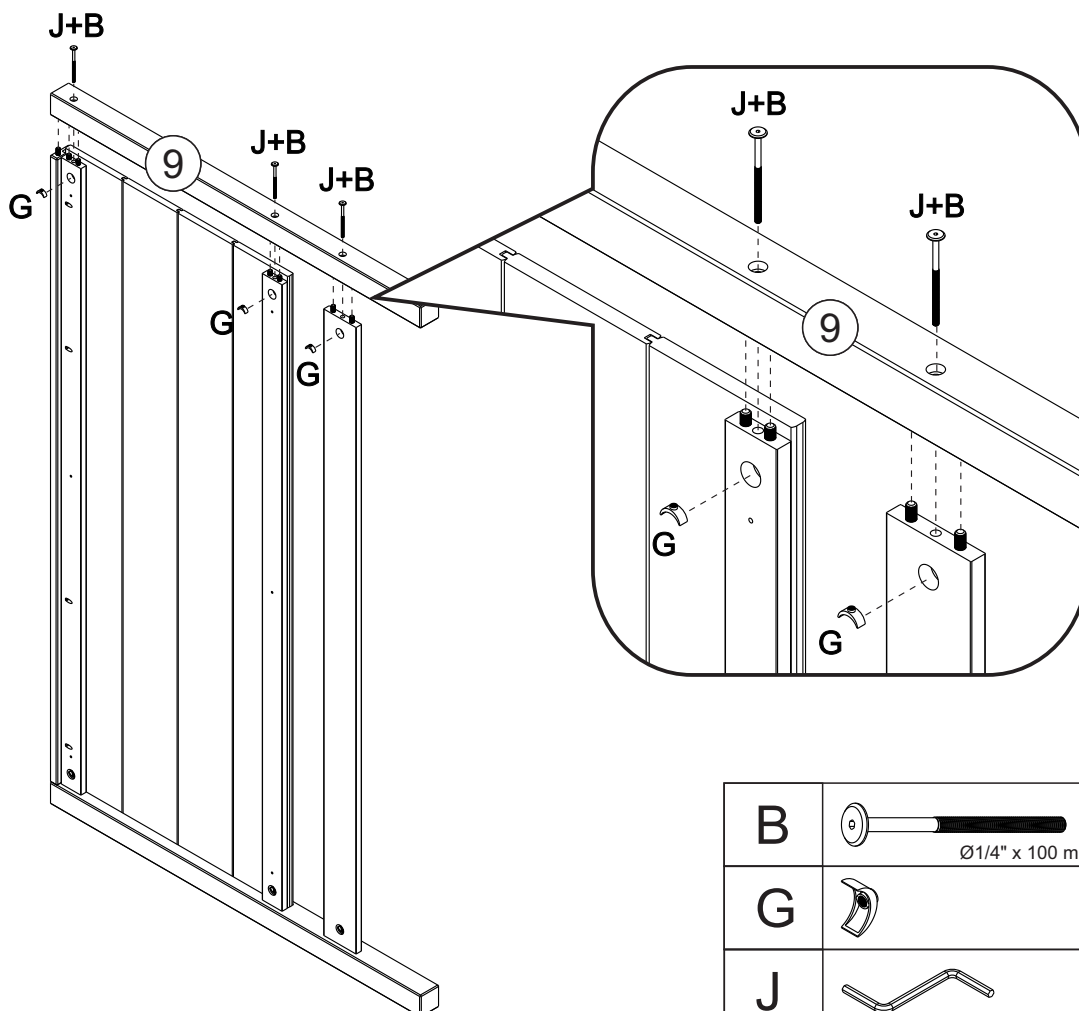



STEP 6




| | | |
|---|---|----|
| B |  Ø1/4" x 100 mm | 03 |
| G |  | 03 |
| J |  | 02 |


STEP 7

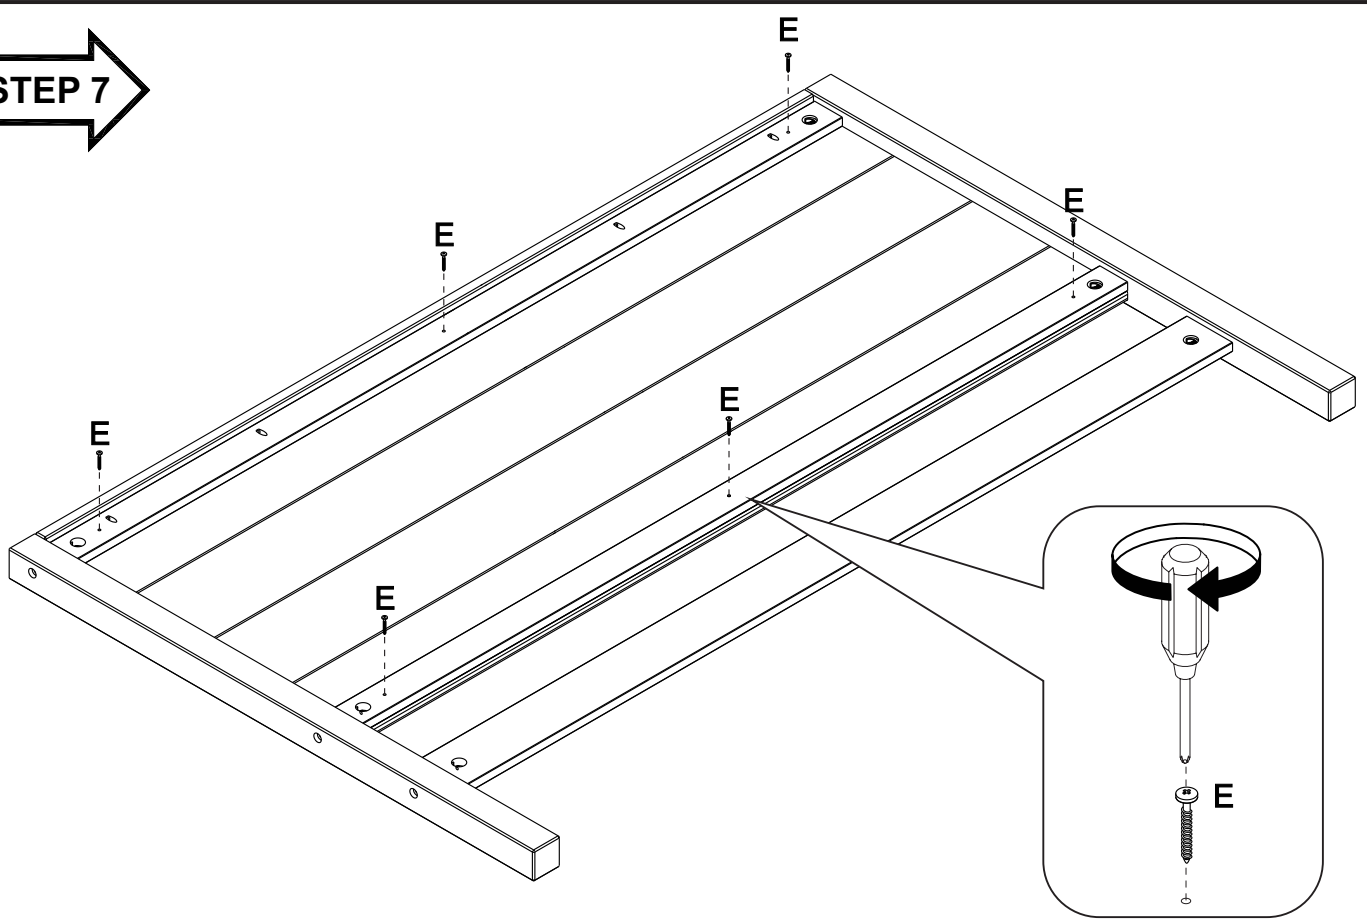

| | | |
|--------------|---|----|
| E |  | 06 |
| Ø4,5 x 35 mm | | |


STEP 8

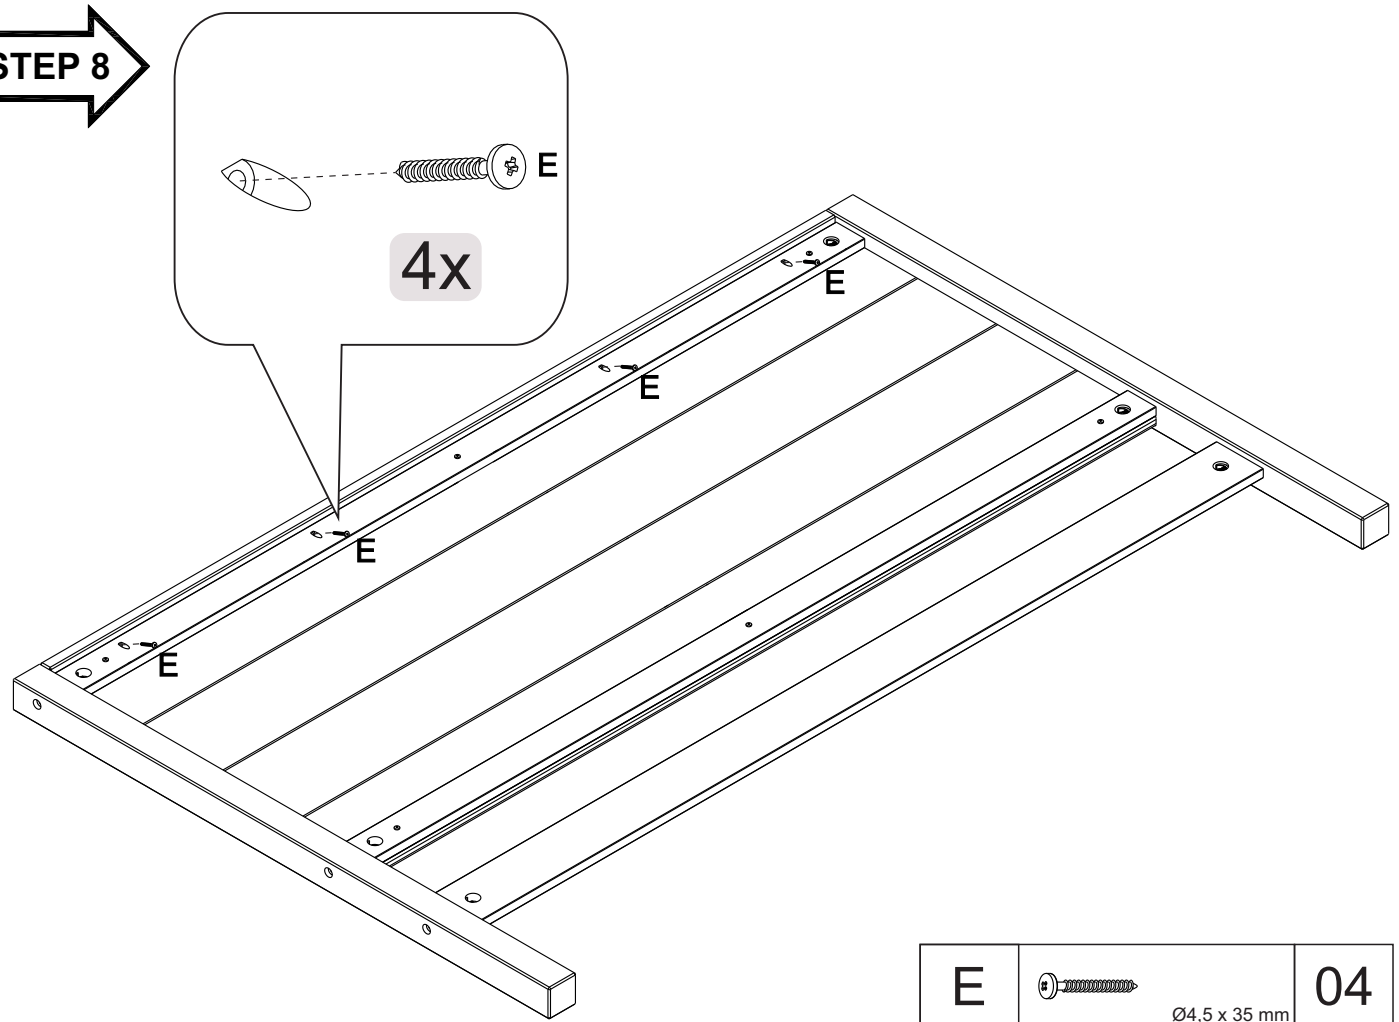



| | | |
|--------------|---|----|
| E |  | 04 |
| Ø4,5 x 35 mm | | |


STEP 9

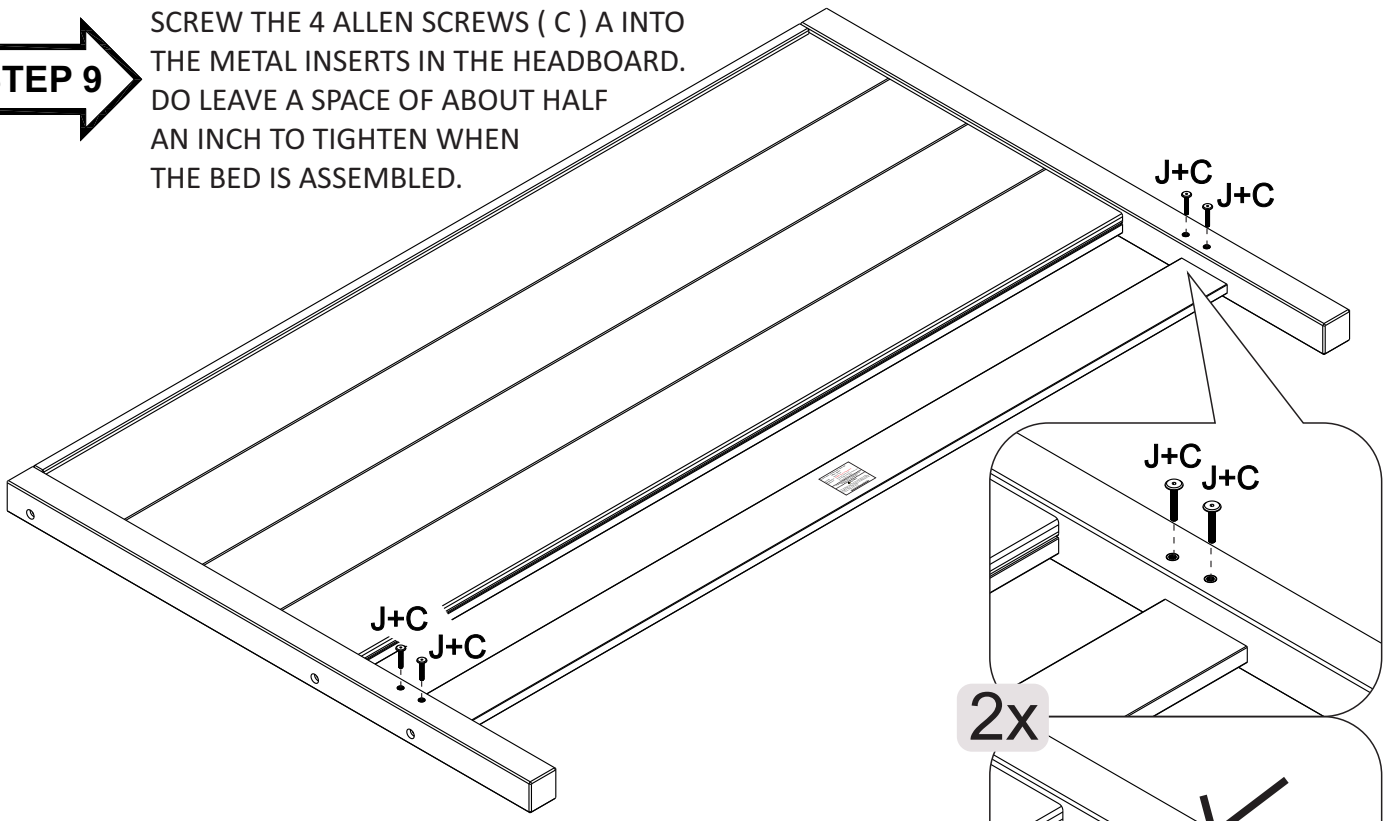


SCREW THE 4 ALLEN SCREWS (C) A INTO THE METAL INSERTS IN THE HEADBOARD. DO LEAVE A SPACE OF ABOUT HALF AN INCH TO TIGHTEN WHEN THE BED IS ASSEMBLED.




| | | |
|---|---|----|
| C |  Ø1/4" x 40 mm | 04 |
| J |  | 02 |

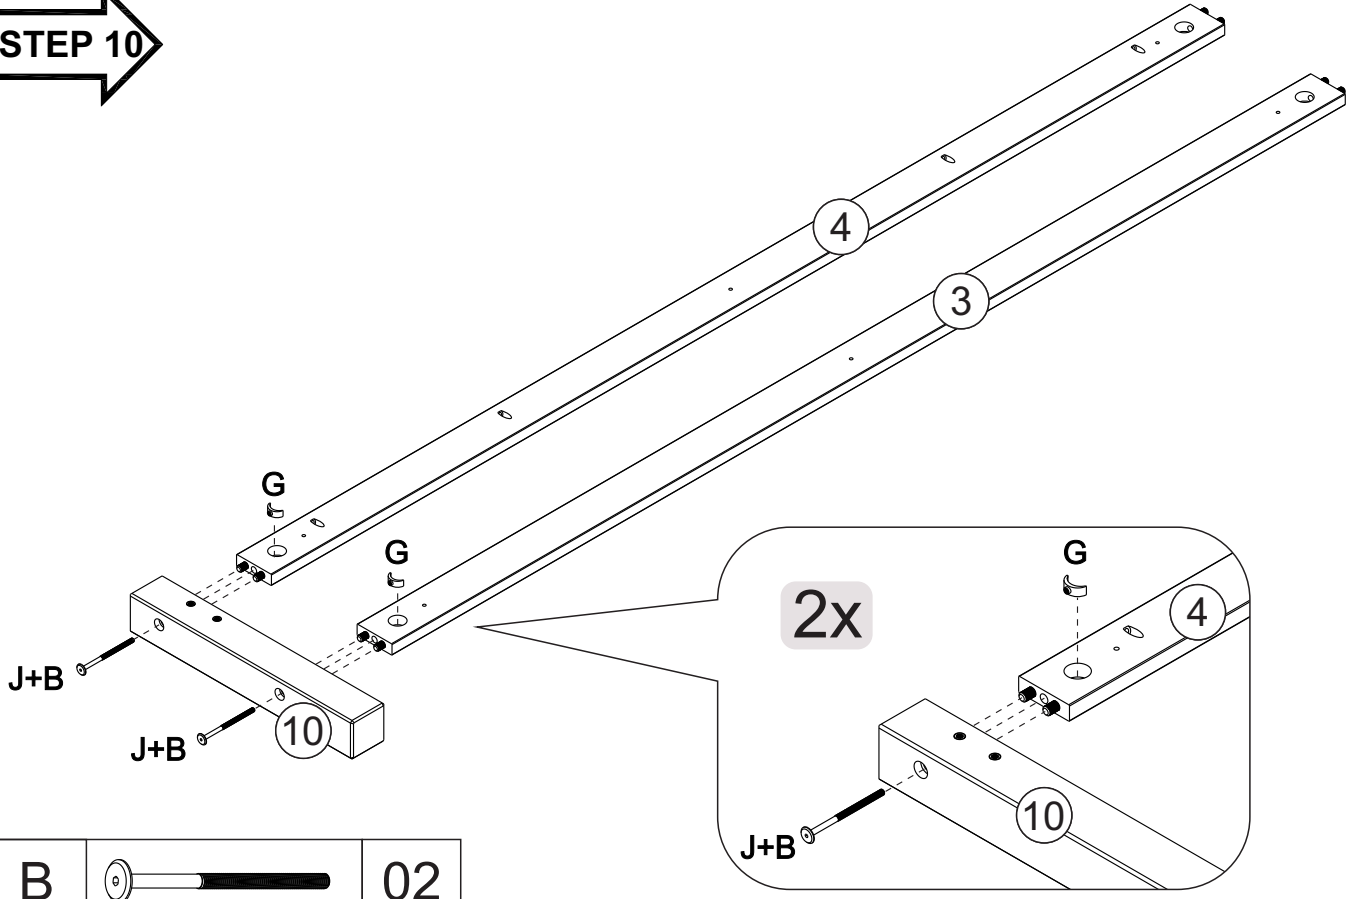STEP 10




| | | |
|---|---|----|
| B |  Ø1/4" x 100 mm | 02 |
| G |  | 02 |
| J |  | 02 |


STEP 11

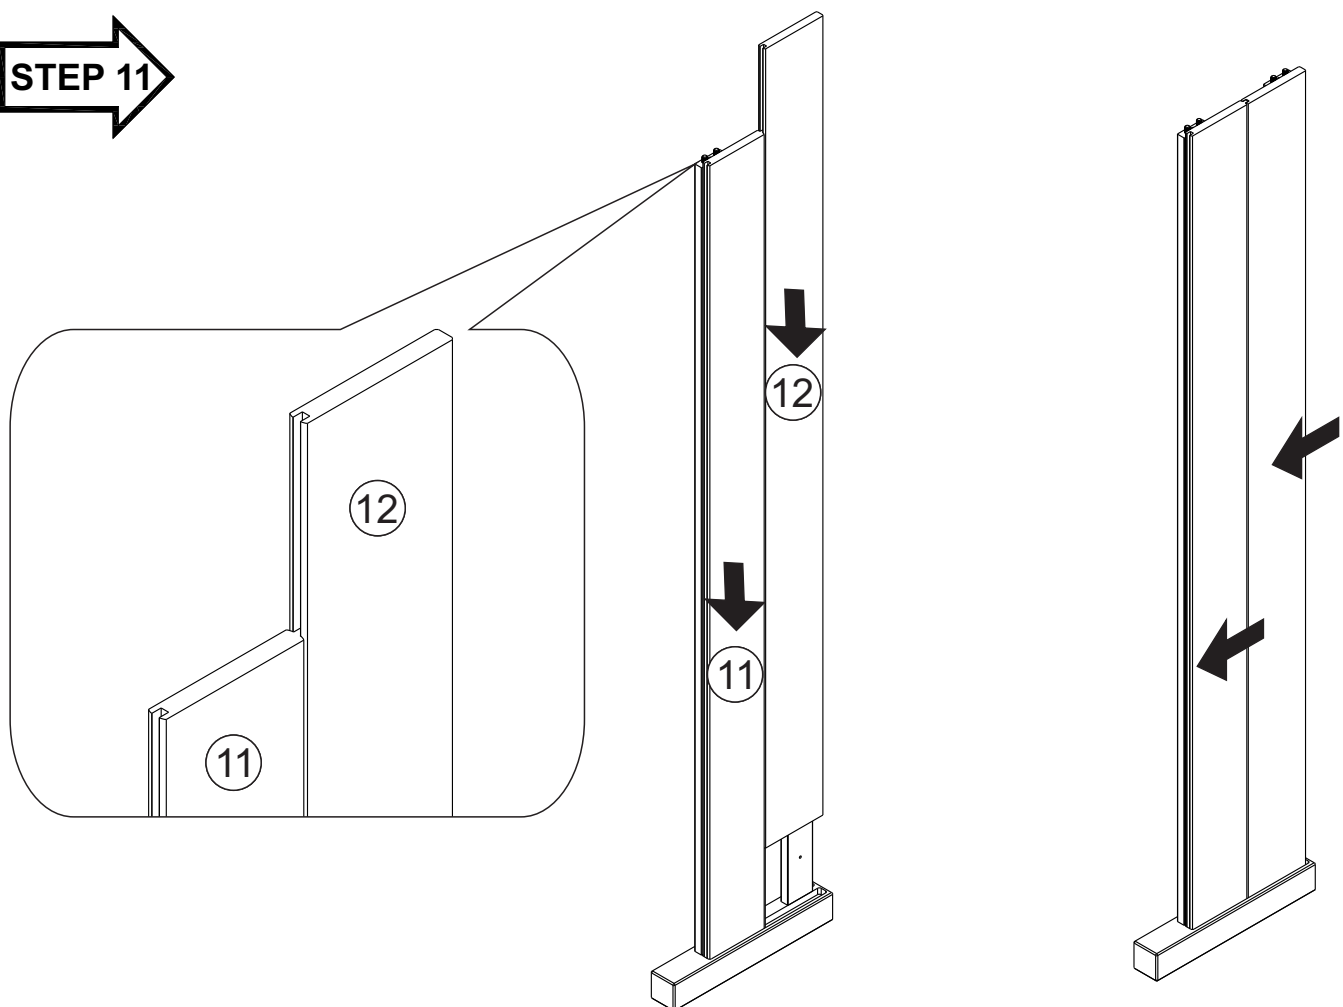


STEP 12

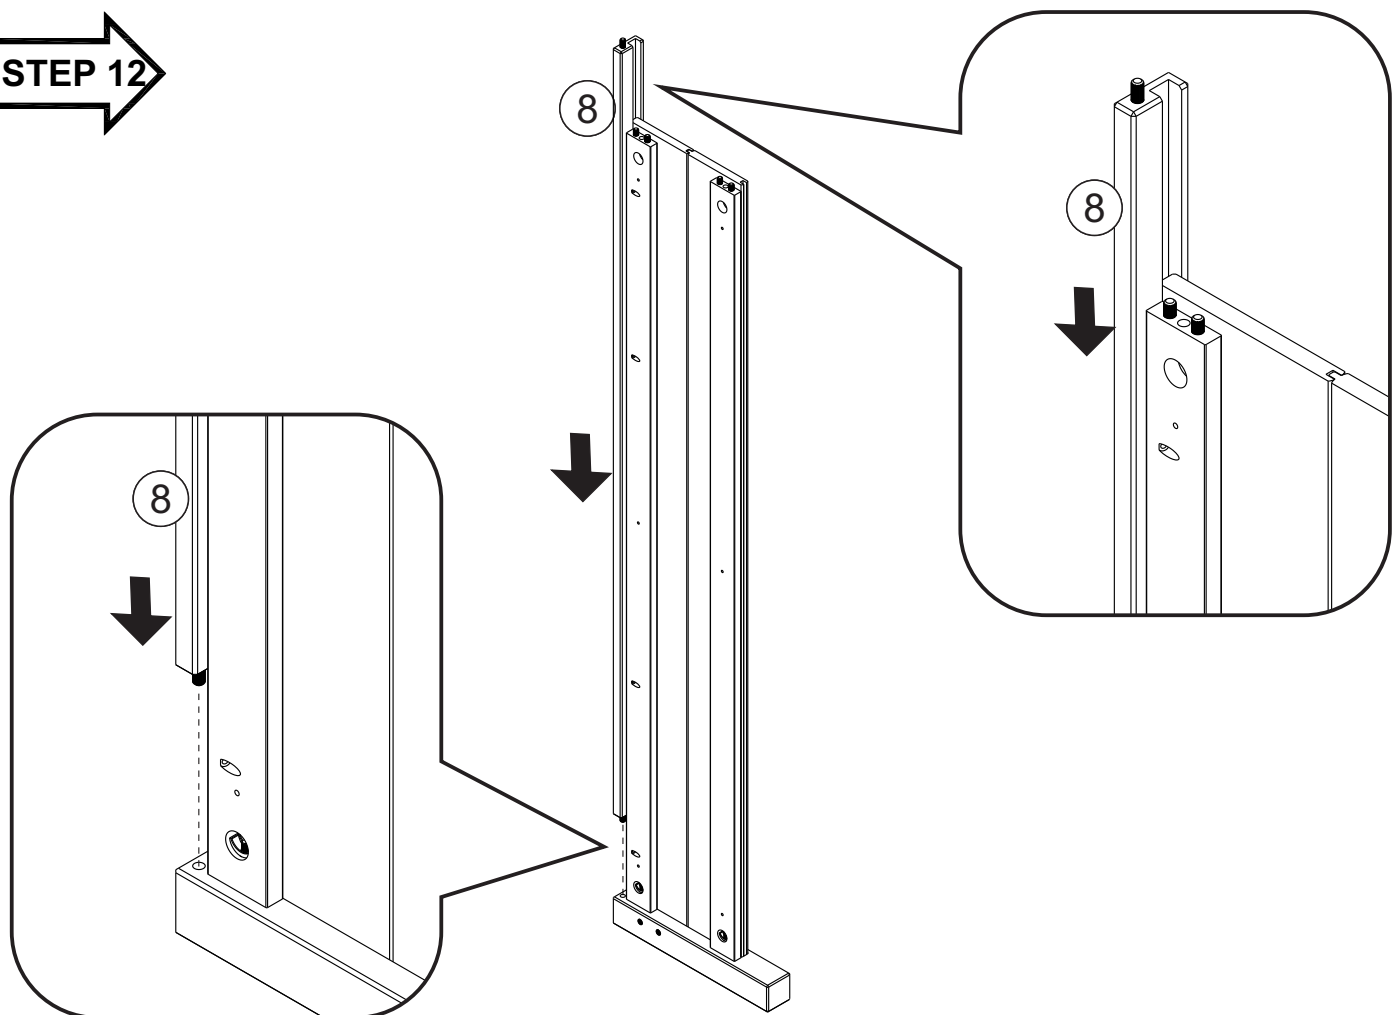


STEP 13

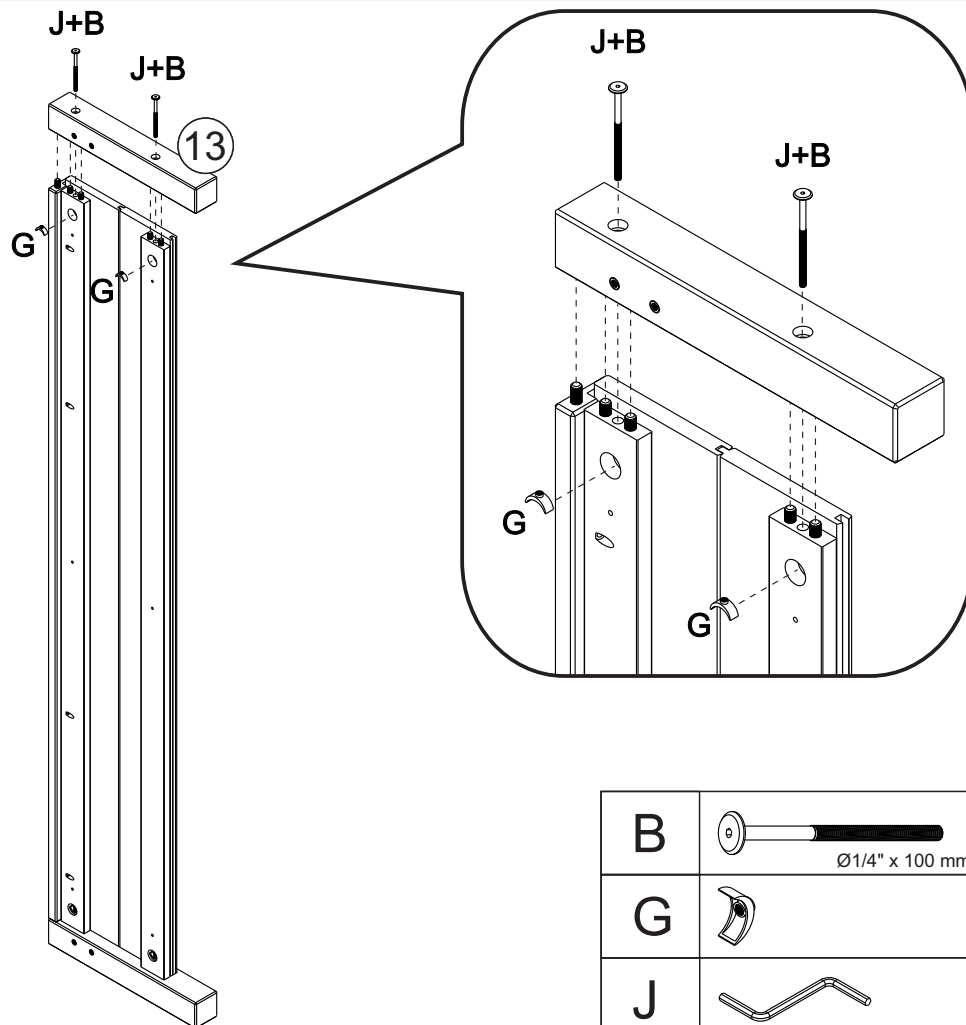


STEP 14

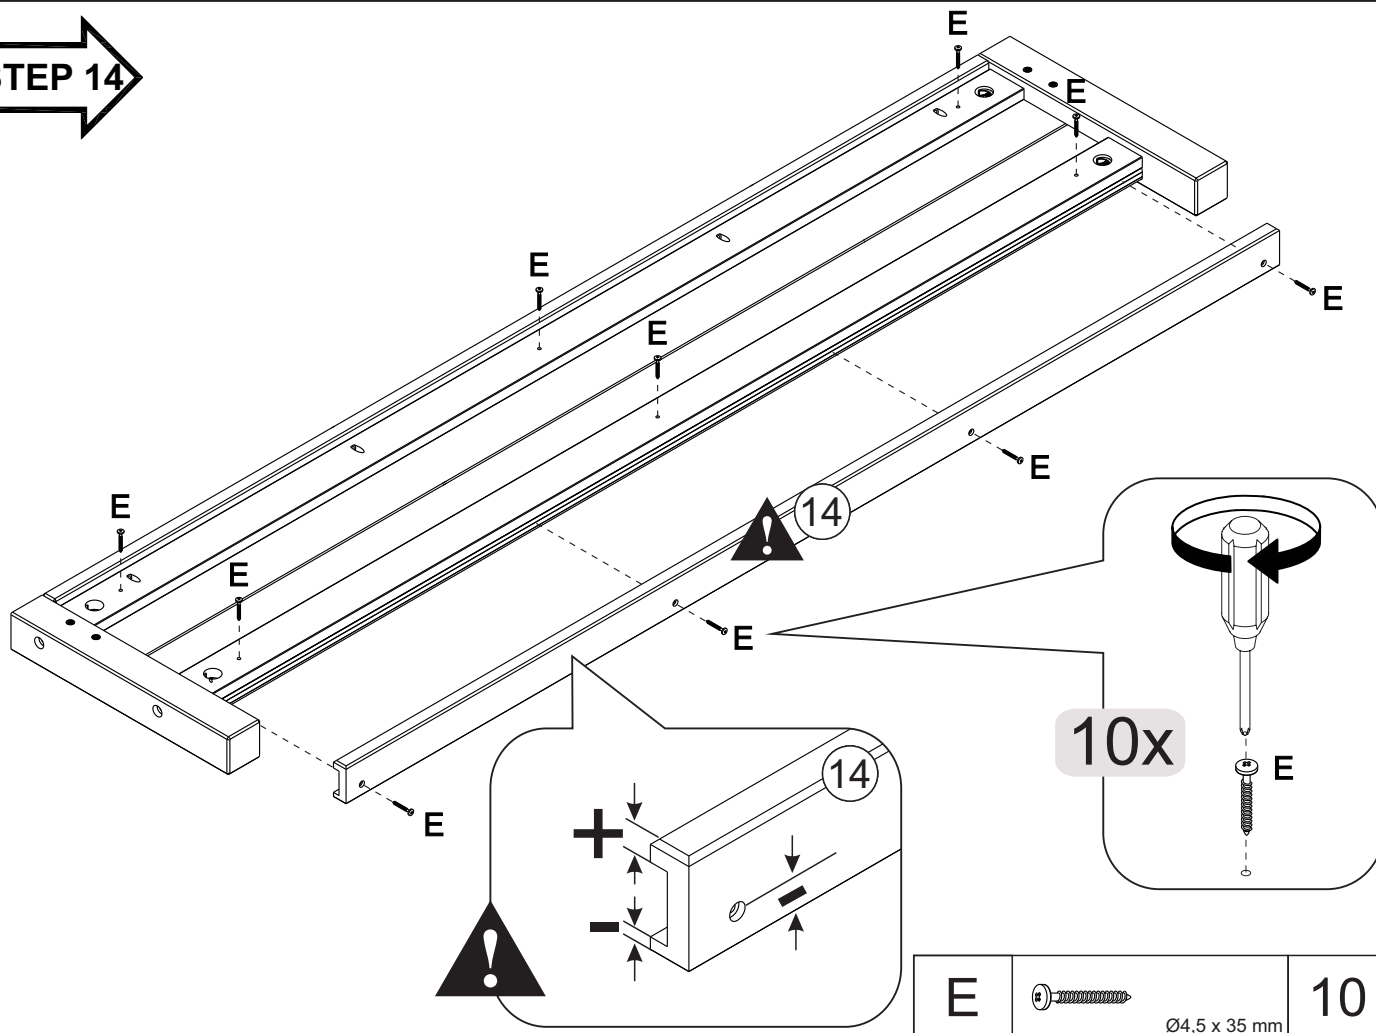


STEP 15

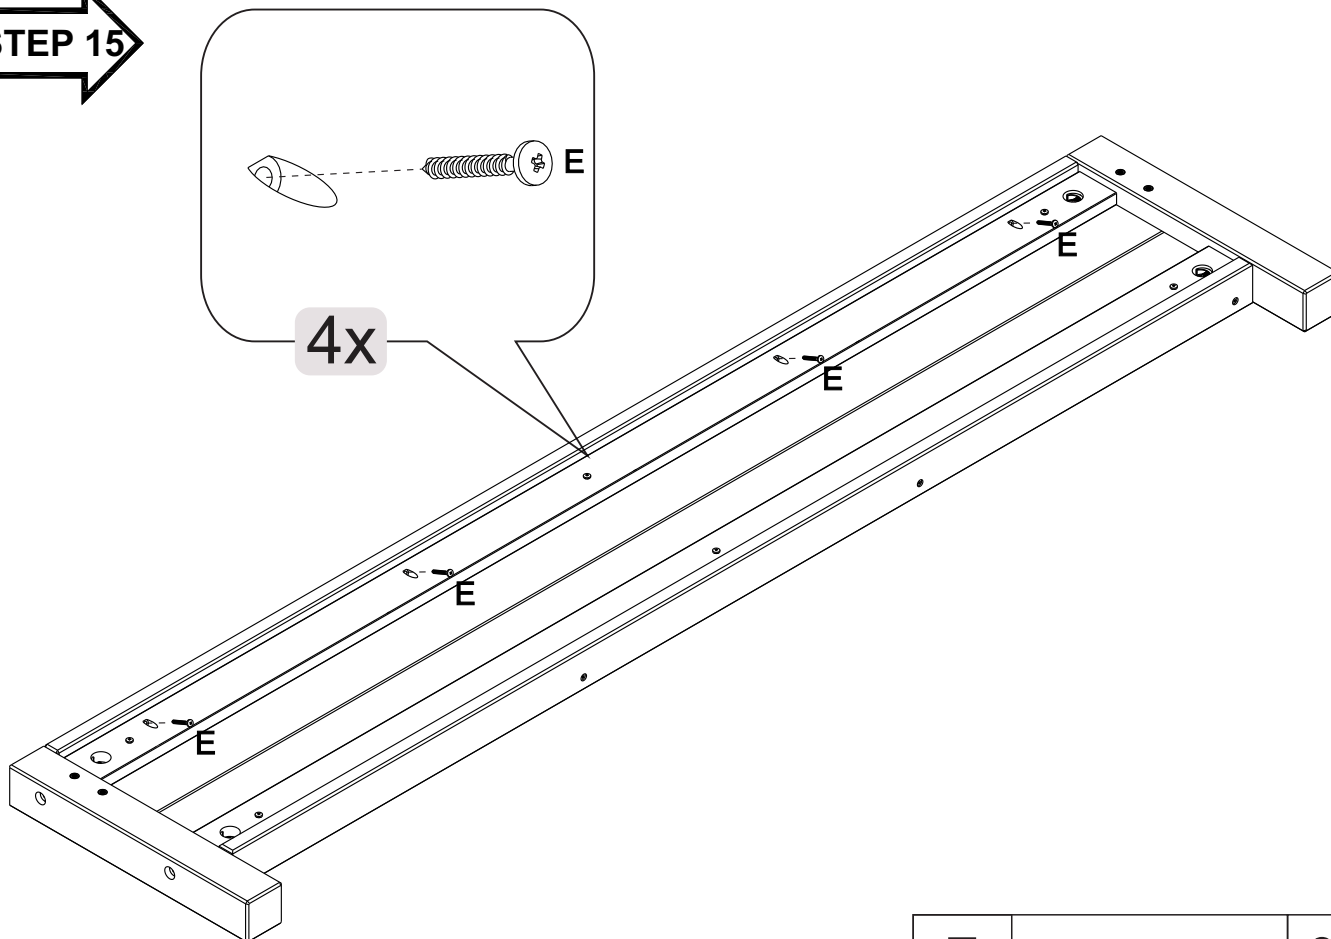



| | | |
|--------------|---|----|
| E |  | 04 |
| Ø4,5 x 35 mm | | |

STEP 16

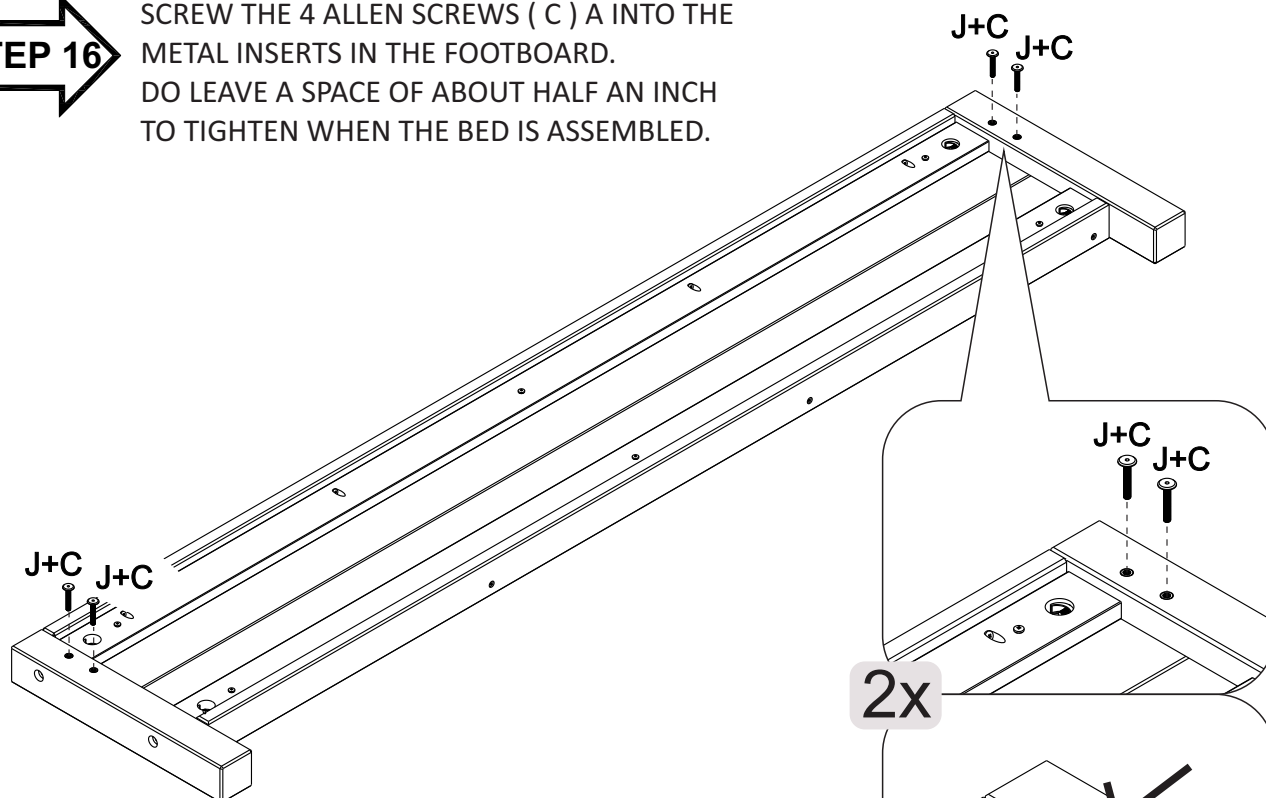
SCREW THE 4 ALLEN SCREWS (C) A INTO THE METAL INSERTS IN THE FOOTBOARD.
DO LEAVE A SPACE OF ABOUT HALF AN INCH TO TIGHTEN WHEN THE BED IS ASSEMBLED.



| | | |
|---------------|---|----|
| C |  | 04 |
| Ø1/4" x 40 mm | | |
| J |  | 02 |

STEP 17


OPTION 01

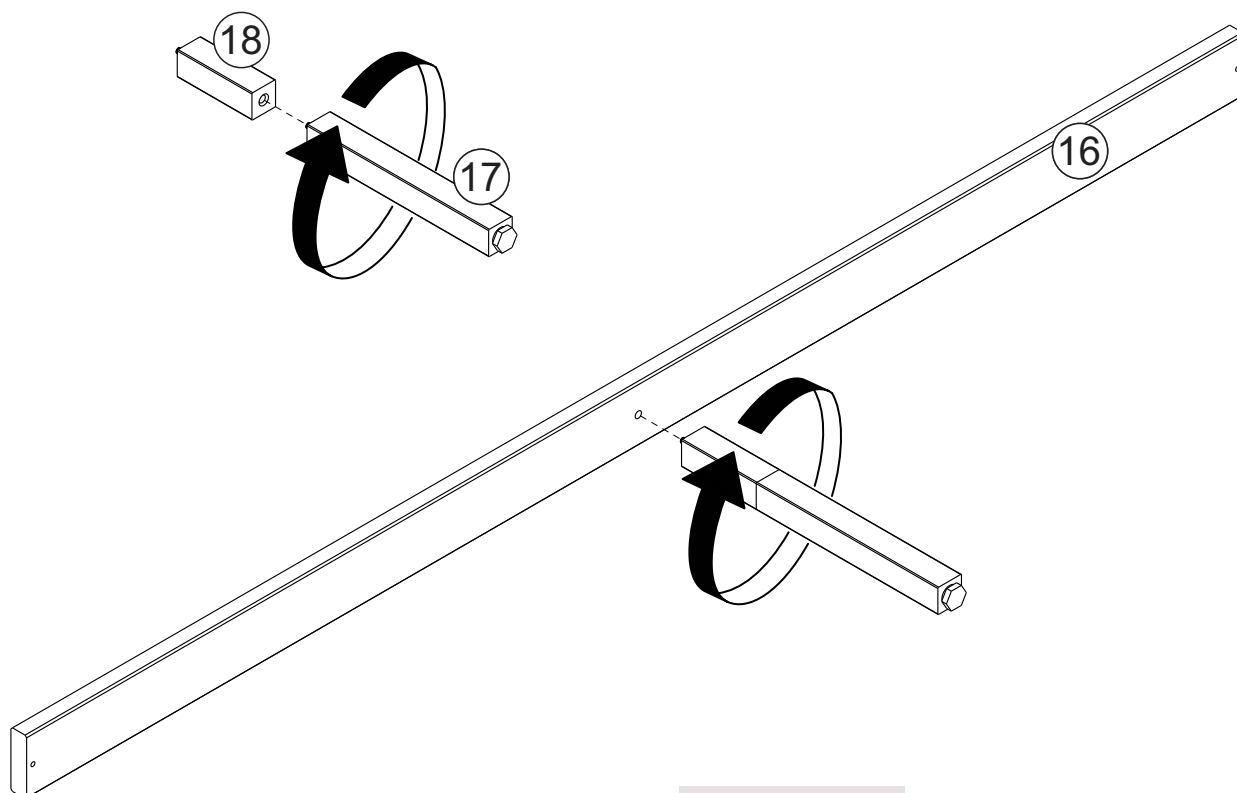


OR...

STEP 18

OPTION 02



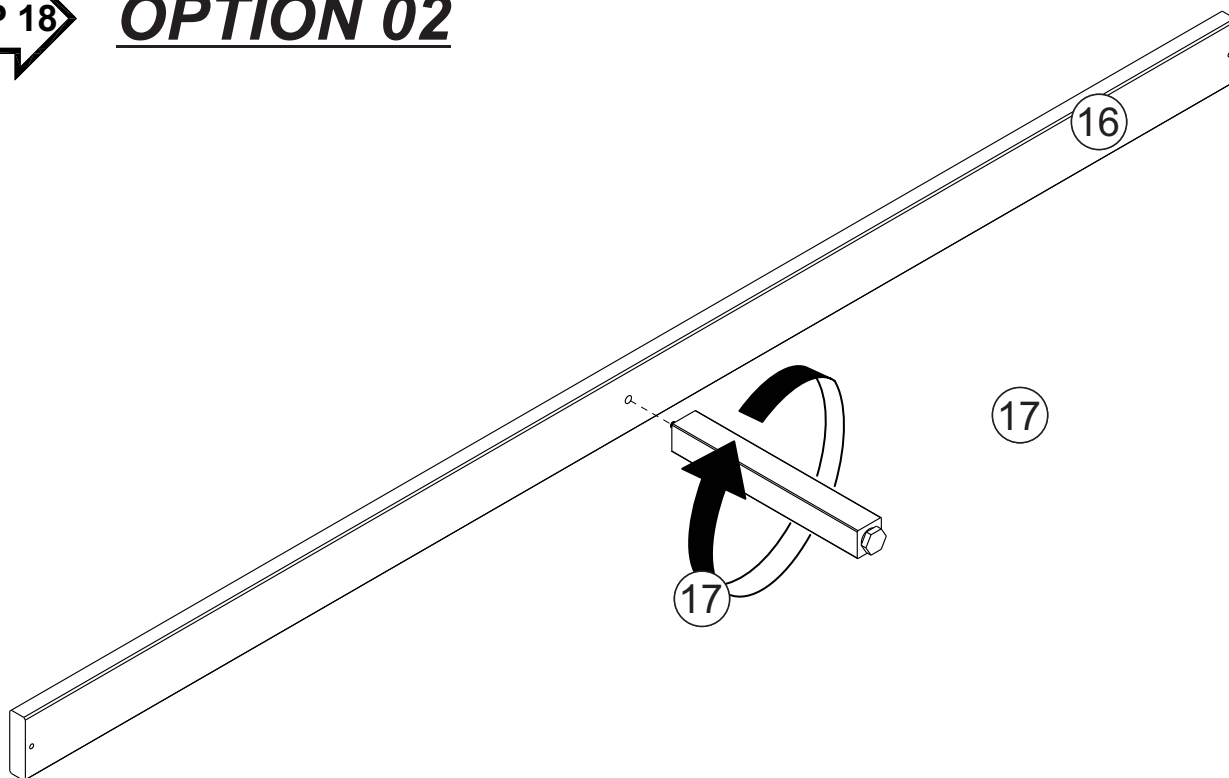


STEP 19

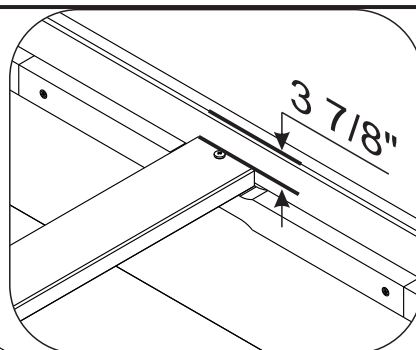


OPTION 01

HOOK BOTH SIDE RAILS ONTO THE SCREWS IN THE HEADBOARD, AND THEN ONTO THE SCREWS IN THE FOOTBOARD. MAKE SURE THE BED IS SQUARE.

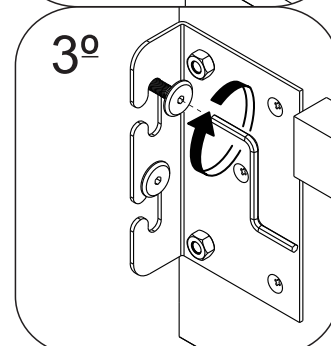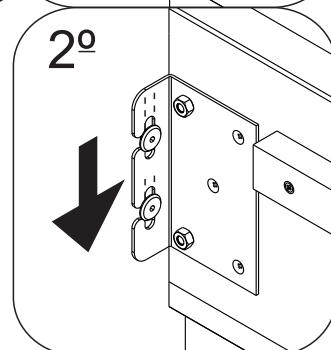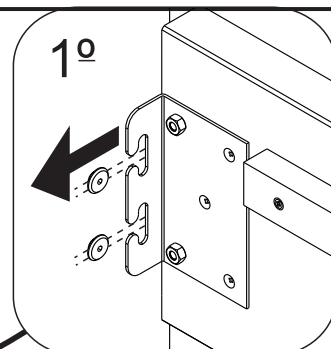




OR...

STEP 20

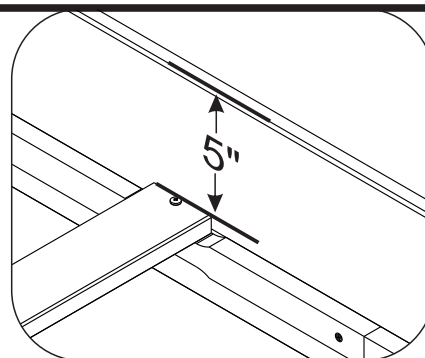




OPTION 02

HOOK BOTH SIDE RAILS ONTO THE SCREWS IN THE HEADBOARD, AND THEN ONTO THE SCREWS IN THE FOOTBOARD. MAKE SURE THE BED IS SQUARE.

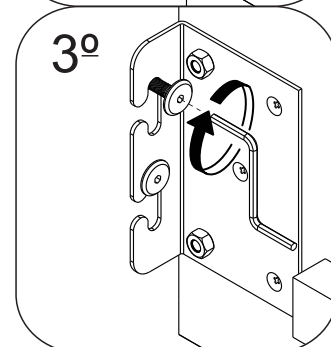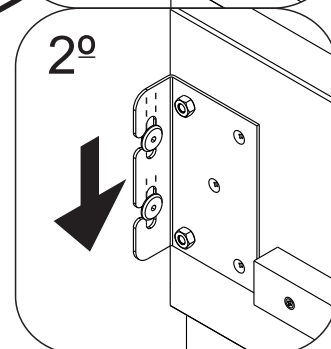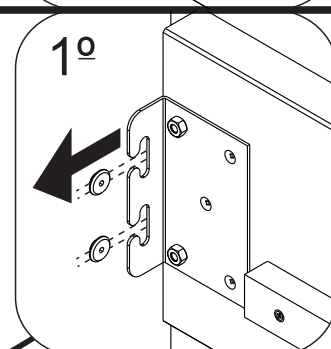


STEP 21

OPTION 01

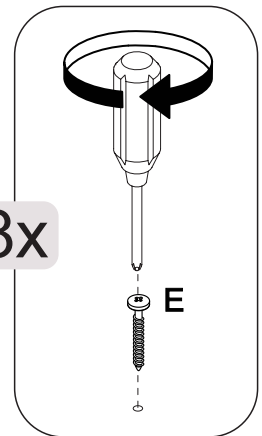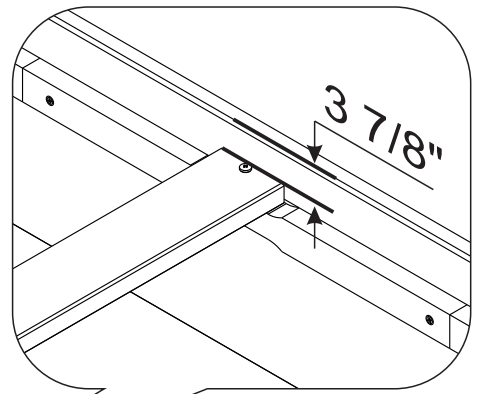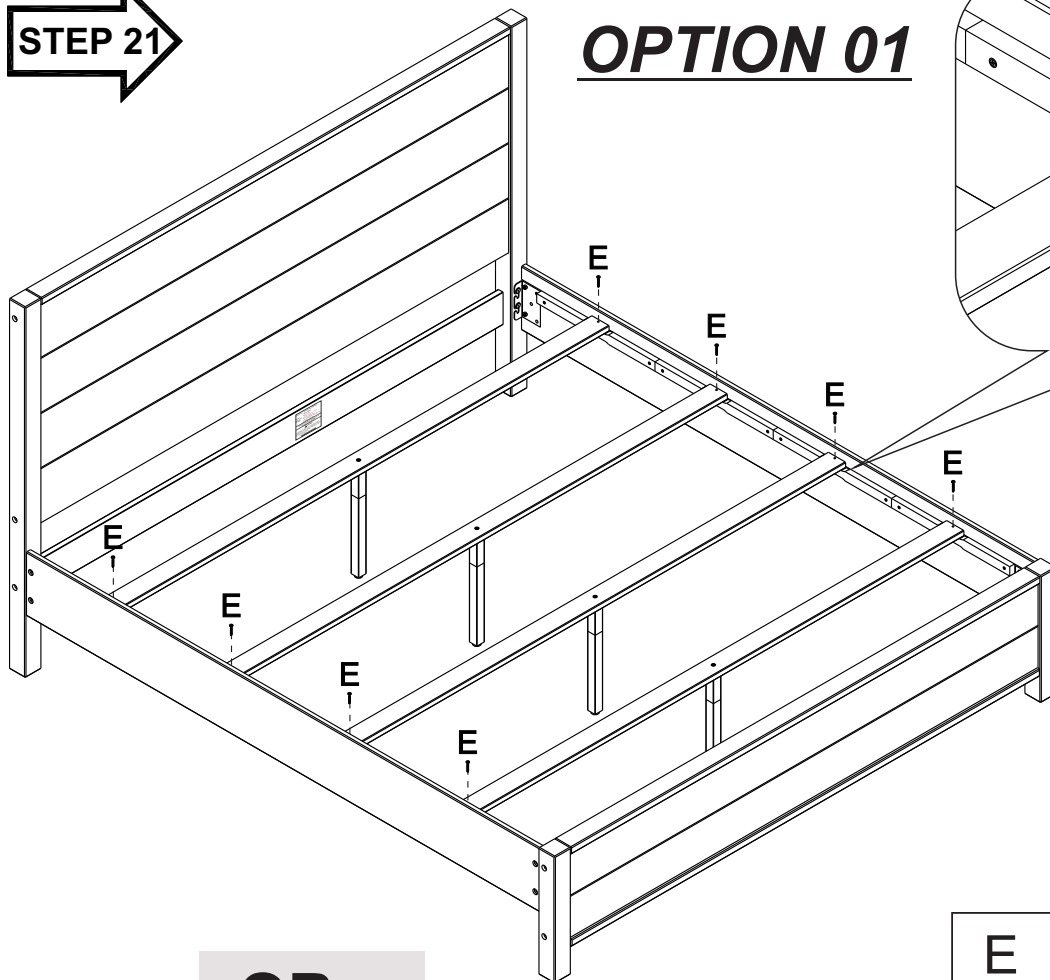




8x

| | | |
|--------------|---|----|
| E |  | 08 |
| Ø4,5 x 35 mm | | |


OR...

STEP 22

OPTION 02

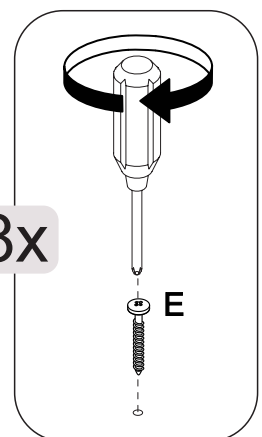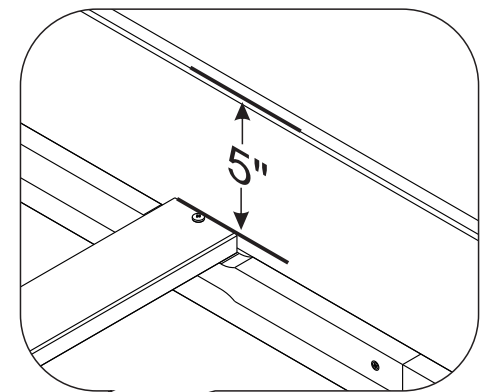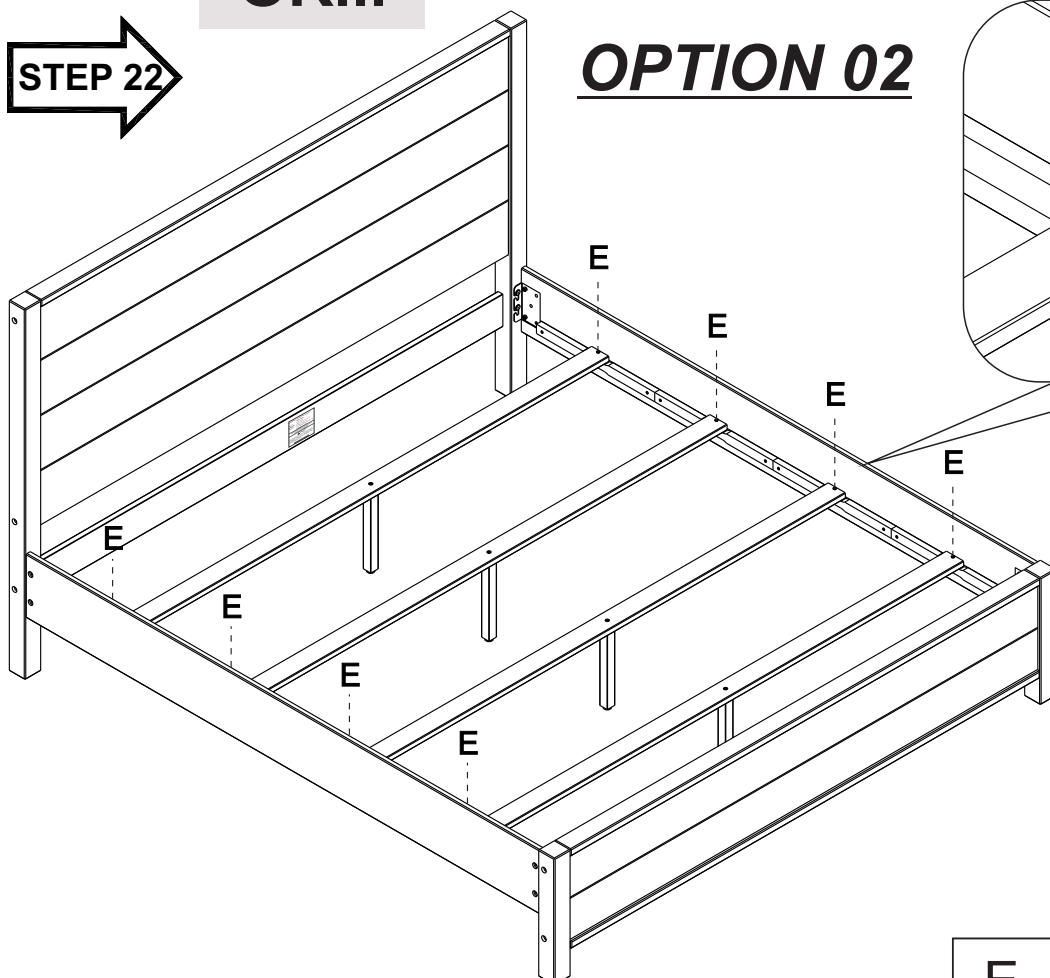


8x


| | | |
|--------------|---|----|
| E |  | 08 |
| Ø4,5 x 35 mm | | |

STEP 23

OPTION 01

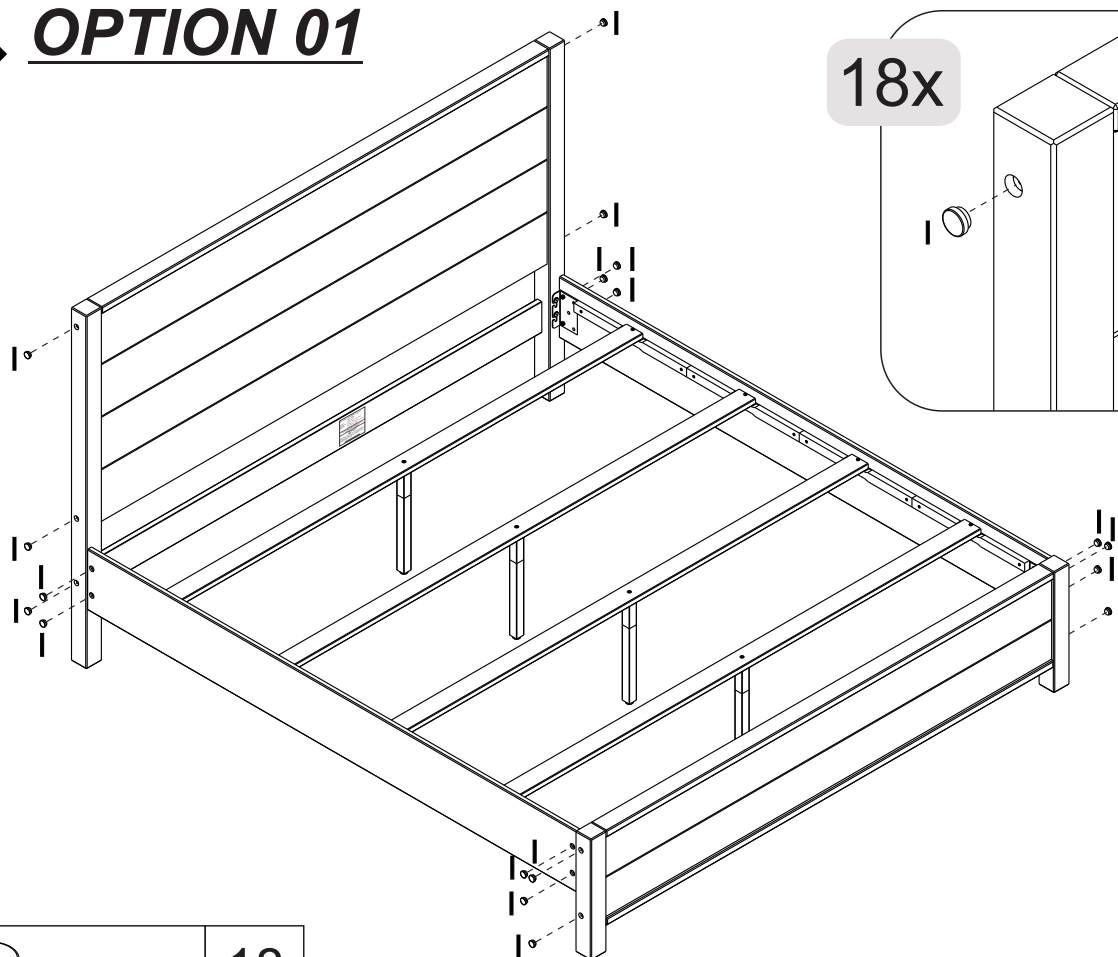

18x

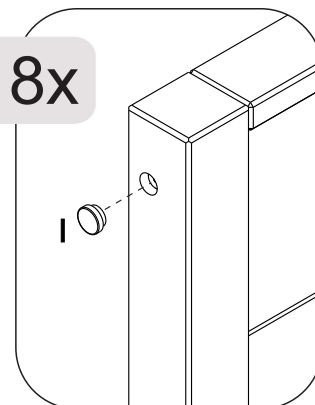


| | | |
|---|---|----|
| I |  | 18 |
|---|---|----|


OR...

STEP 24

OPTION 02

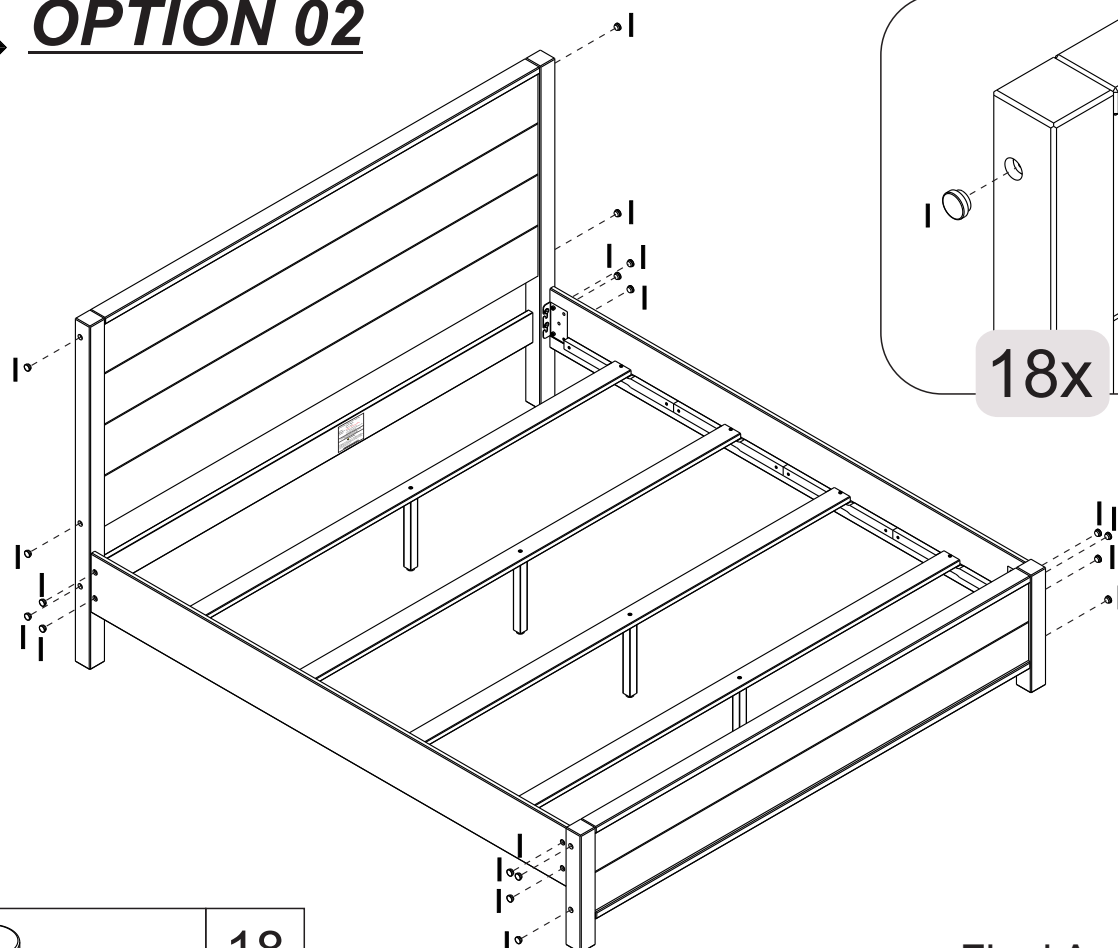

18x

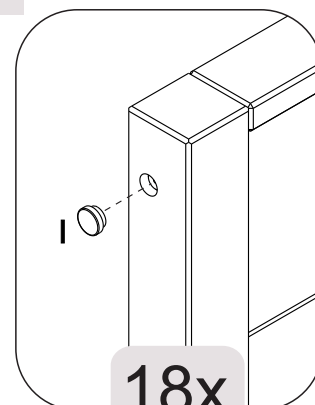

| | | |
|---|---|----|
| I |  | 18 |
|---|---|----|

Final Assembly