


ELEGANCE PLUS

SHOWER DOOR AND INLINE PANEL INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

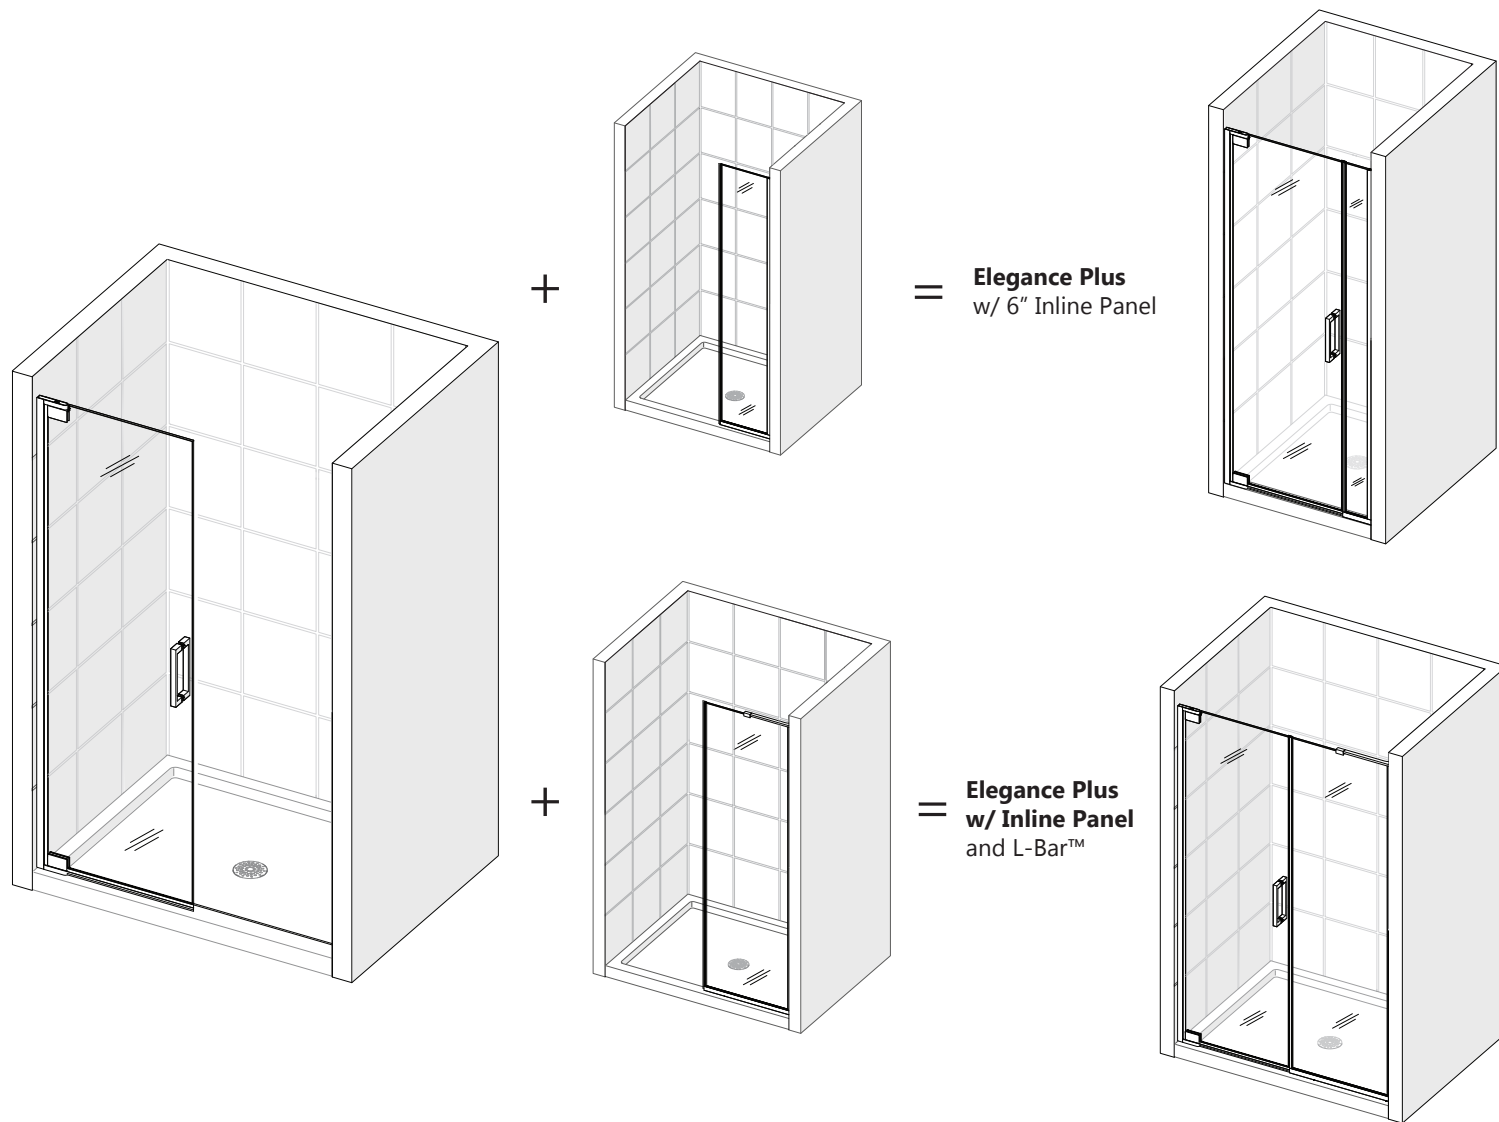

STEP 1: Install Shower Door

STEP 2: Install Inline Panel



Questions?

Please Call **DreamLine** Customer Support: **1-866-731-2244**
Hours of Operation M-F 8AM - 6PM EST

Support@DreamLine.com




For more information about DreamLine® products please visit DreamLine.com



ELEGANCE PLUS SINGLE DOOR

SHOWER DOOR INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

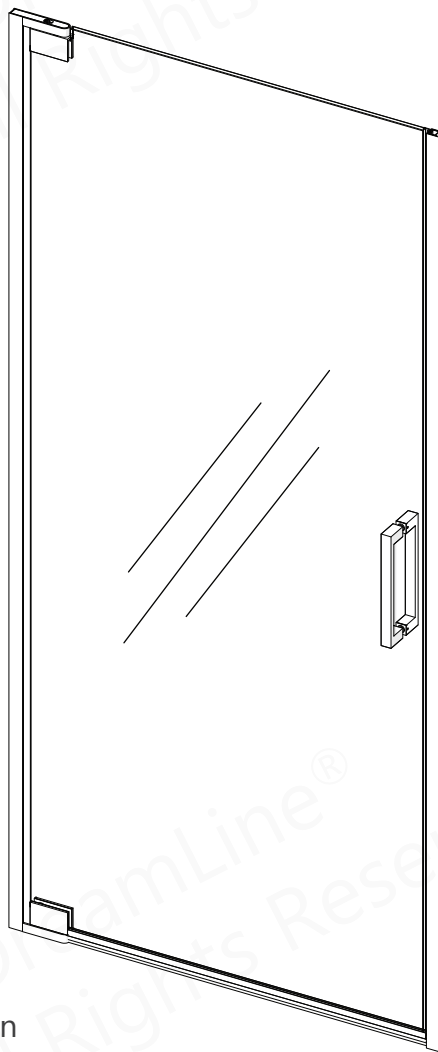

*left-swing door installation shown

Model #s

SHDR-443400-##
SHDR-443060-##
SHDR-443465-##
SHDR-444014-##
SHDR-444622-##
SHDR-4452225-##
SHDR-4458305-##

= finish

01 - Chrome

04 - Brushed Nickel

06 - Oil Rubbed Bronze

09 - Satin Black

IMPORTANT!

DreamLine® reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the model's web page on **DreamLine.com** for the latest technical drawings, installation manuals, warranty information or additional product details.

Do Not Return Product to the Store. Contact DreamLine® with any questions



Questions?

Please Call **DreamLine Customer Support: 1-866-731-2244**
Hours of Operation M-F 8AM - 6PM EST

Support@DreamLine.com





This model is treated with DreamLine's exclusive ClearMax™ Glass technology. This is a specially formulated coating that prevents the build up of soap and water spots.

Install the surface with the ClearMax™ label towards the inside of the shower. Please note that depending on the model, the glass may be coated on either one or both surfaces.

For best results, squeegee the glass after each use and dry with a soft cloth.

Record the following purchase information for your records or in the event you need to contact DreamLine®:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
*found on the shipping box or label
if available.

Installed By: _____

SKU Number _____

Table of Contents

Section Title	Page #
ClearMax™ Coating Information	—
Warnings and General Preparation	2
Model Specific Preparation	3
Tools	4
Configurations	5
Adjustable Wall Profile System	6
Detailed Diagram of Shower Door Components	7
Parts List	8-9
Installation Steps	10-25
Strike Profile Installation	19
Decorative Cover Installation	23
Bottom Sweep Vinyl Installation	24
Securing the Bottom Pivot Assembly to the Threshold (optional)	26
Product Maintenance	27
Troubleshooting	28
Factory Parts Information	29-35

Symbol Legend



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

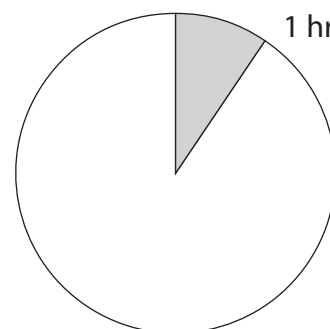



IMPORTANT

- DreamLine® reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience. Please refer to the model's web page on DreamLine.com for the latest technical drawings, installation manuals, warranty information or additional product details.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. (*All Models*)
- Professional installation required. (*Enigma Series*)
- To prevent damage or serious injury: Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the "Detailed Diagram of Product Components" page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact our Customer Support department within 3 business days of the delivery date. **Please note that DreamLine® will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact DreamLine® if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and DreamLine® is not responsible for code compliance standards for your project and will not accept any returns.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *DreamLine® shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage.
Do Not install damaged glass!
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered.
Do Not attempt to cut tempered glass.
- DreamLine® Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**



This product should be installed by someone familiar with the construction requirements for this type of product and the care necessary for the safe installation and operation of the product.




Professional Installation recommended.

Model Specific Preparation




REQUIRED:





1/4" Out-of-Plumb Adjustment; Verify threshold and walls with a level

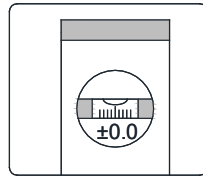


Threshold must be level

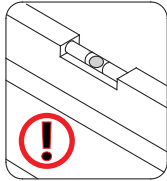


Threshold must be level

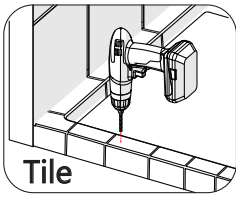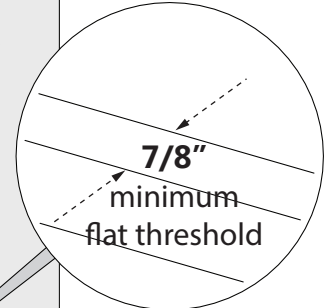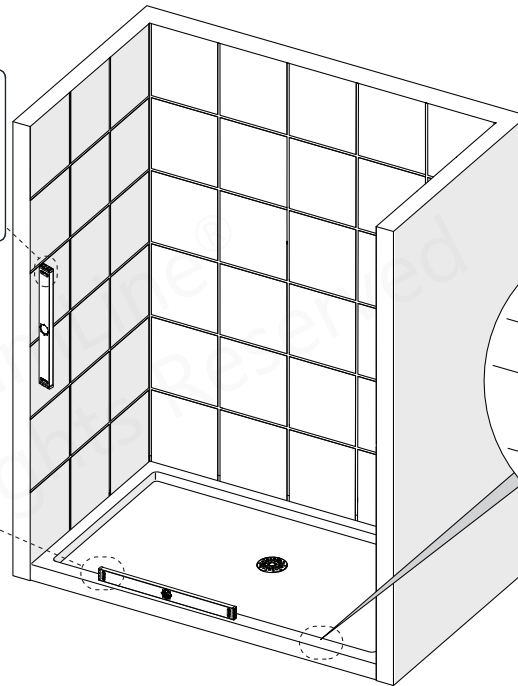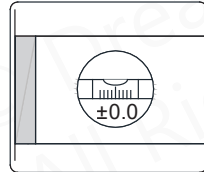

Tile

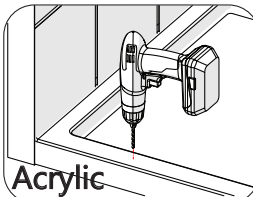

Acrylic

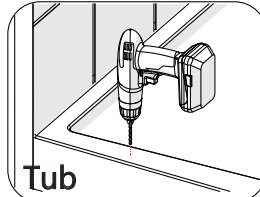

Tub

This model has an adjustable wall profile system that allows for up to 1/4" (per side) for Out-of-Plumb wall conditions and overall width within the model size. For more information, see the Adjustable Wall Profile System on page 6.




Contact the manufacturer of the base, tub or threshold material with any questions regarding the drilling of holes into their product.



DO NOT attach the handle to the door glass until instructed.
DO NOT attempt to use the handle to lift the door glass during installation.

This may result in damage to the glass and/or serious injury. Always use a professional grade glass suction cup and an assistant.

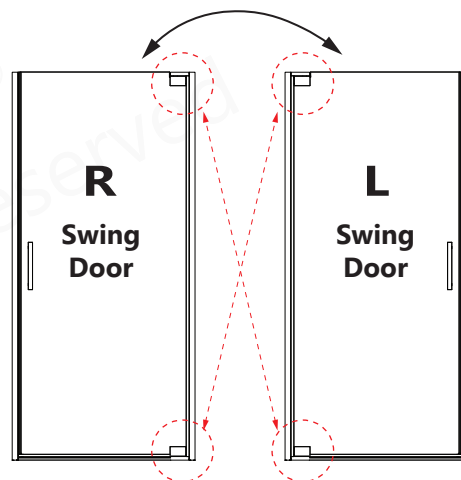


This door is reversible for right or left-swing door installation. The left-swing door installation is shown as an example throughout this manual. For the right-swing door installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.

Tools





Level





Tape Measure



Pencil

Phillips
Screwdriver


Silicone

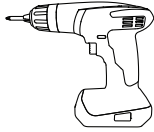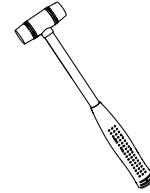Power
DrillDrill Bit
Ø1/8"
(3mm)Drill Bit
Ø3/16"
(4mm)Drill Bit
Ø1/4"
(6mm)Drill Bit
Ø5/16"
(8mm)Soft Head
Hammer

Painter's Tape



Razor Knife

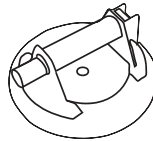Professional-grade
Glass suction cup

Safety Glasses



Work Gloves



To be sure that the correct model size has been ordered, measure the finished opening **before** proceeding with the installation.



Cover the shower/tub drain with tape prior to installation to prevent the loss of screws or small parts.



To prevent stripping the screw heads, set power drill to a low setting when installing screws.




Unpack your unit carefully and inspect it. Lay it out and identify all parts using the **Detailed Diagram** on **page 7** and the included packing list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact DreamLine® for replacement. The shipping boxes may contain extra parts not used in your model configuration.



Retain these installation instructions for future reference.

Configurations

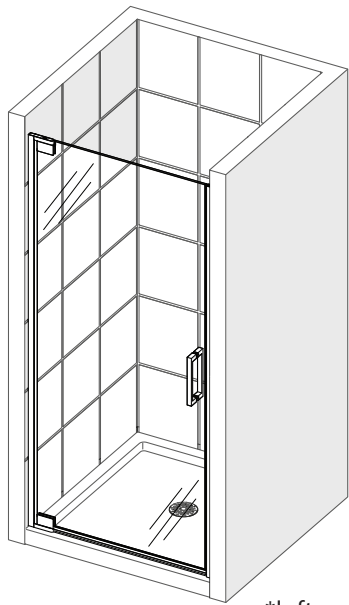

SHDR-443400-##

ELEGANCE PLUS

Single Door

This manual will describe the single door installation of the ELEGANCE PLUS models.



NOTE


For models with additional panel glass, **use this manual first to install the door**, and then use the manual that is packaged with the panel glass to install the panel.

*left-swing door installation shown



For installation of additional inline panel glass:

Use the inline panel glass installation manual packaged with the panel glass (after the door is installed) for the models pictured below.

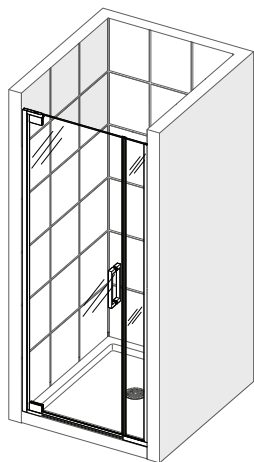

SHDR-443060-##


SHDR-443465-##

SHDR-444014-##

ELEGANCE PLUS

Single Door with Inline Panel
(6", 6-1/2", 14" Inline Panel)

*left-swing door installation shown

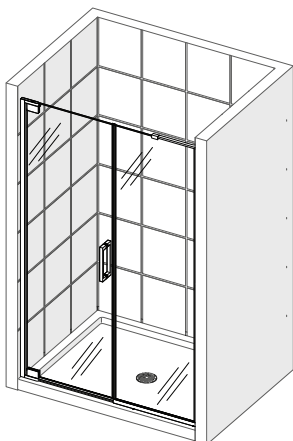

SHDR-444622-##

SHDR-4452225-##

SHDR-4458305-##

ELEGANCE PLUS







Single Door with Inline Panel & L-Bar™
(22", 22-1/2" Inline Panel with 12" L-Bar™)
(30-1/2" Inline Panel with 18" L-Bar™)

*left-swing door installation shown


Adjustable Wall Profile System














The Glass Profiles can be adjusted up to 1/4" within the Wall Profiles for overall width or to correct for out-of-plumb conditions within the model size. Screw them together after making final adjustments.

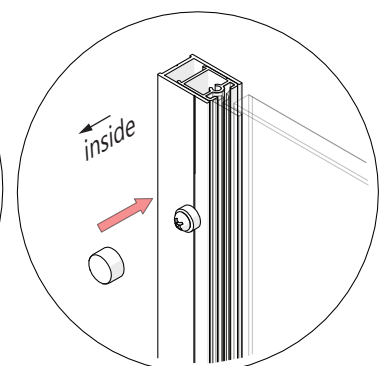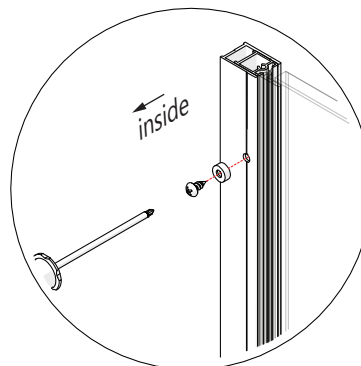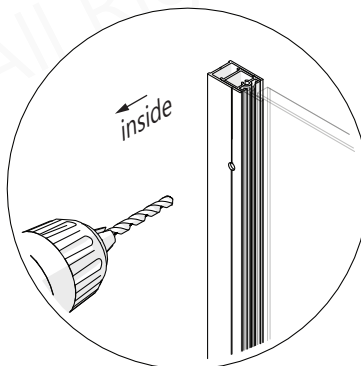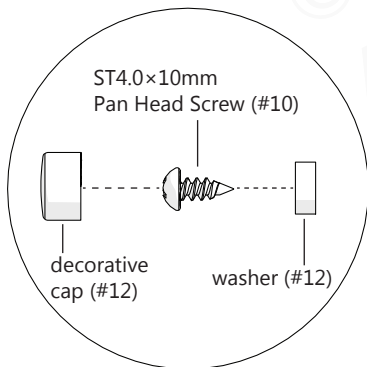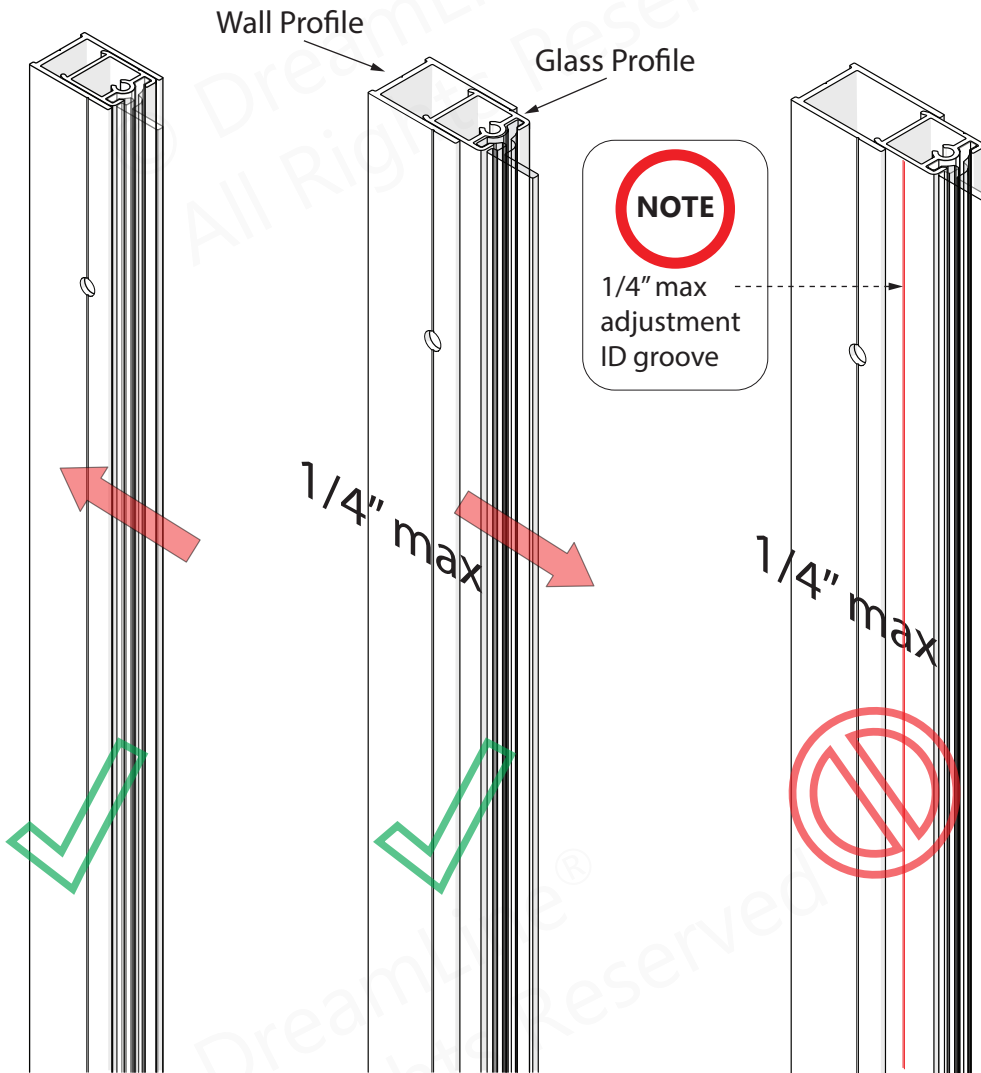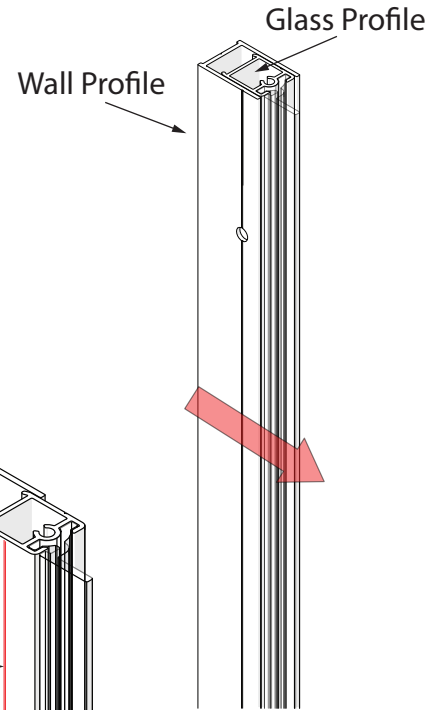



Detailed Diagram of Shower Door Components

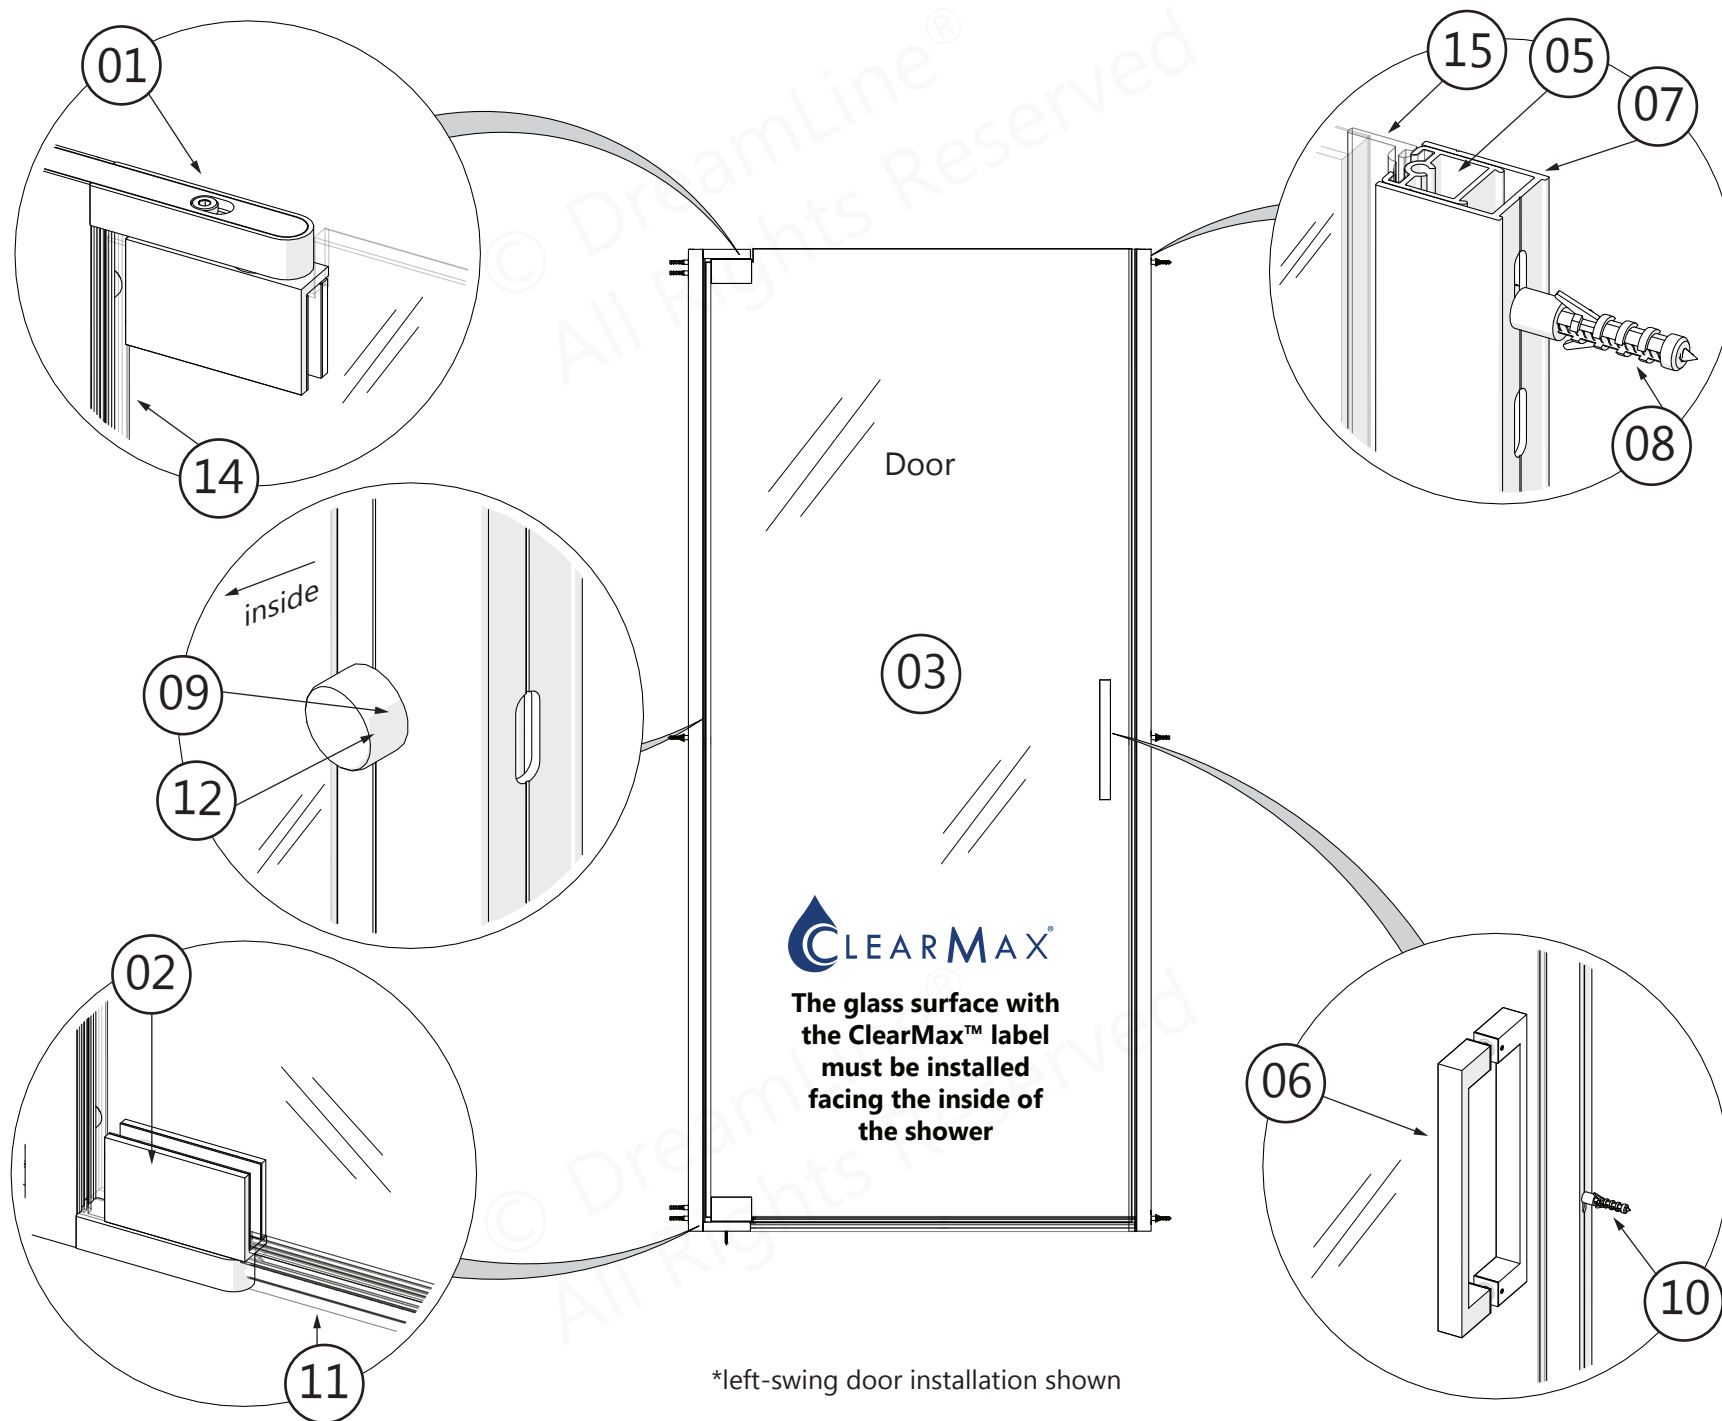

Parts List

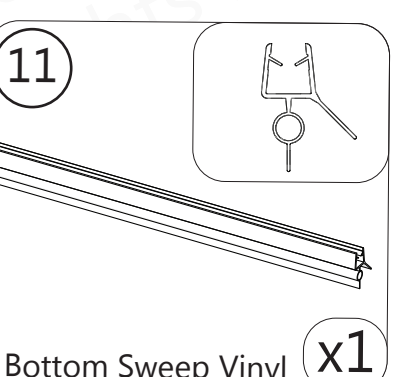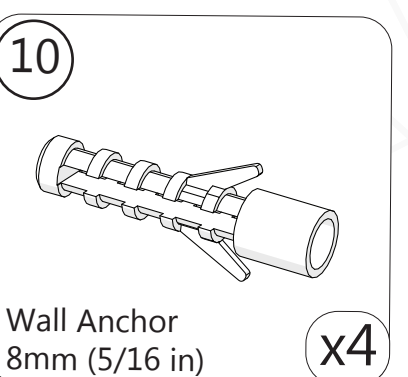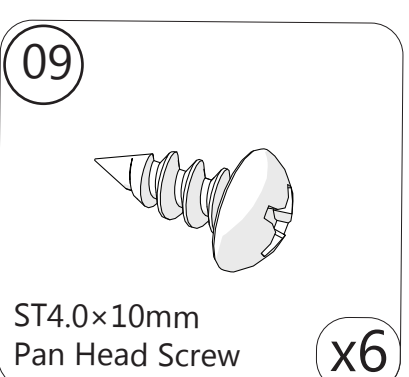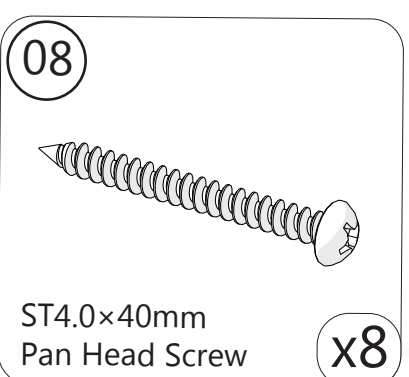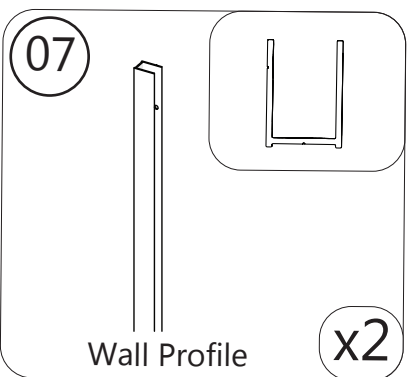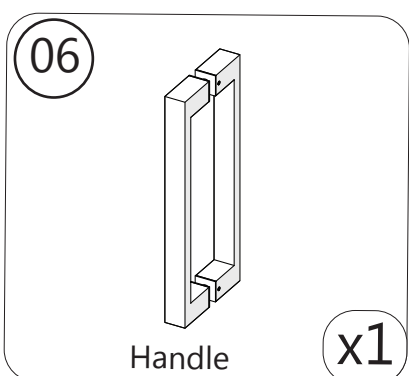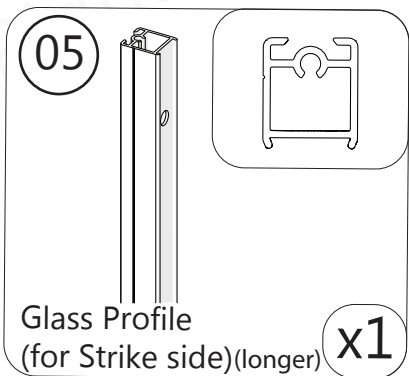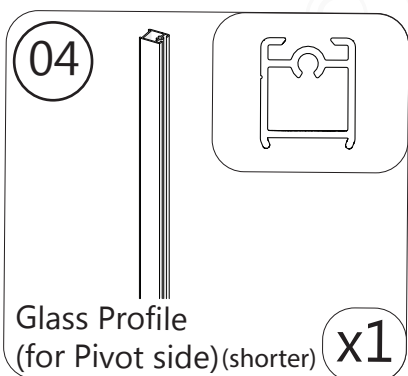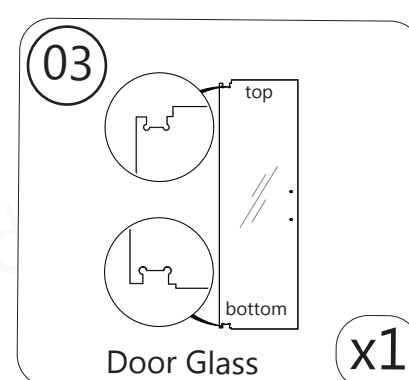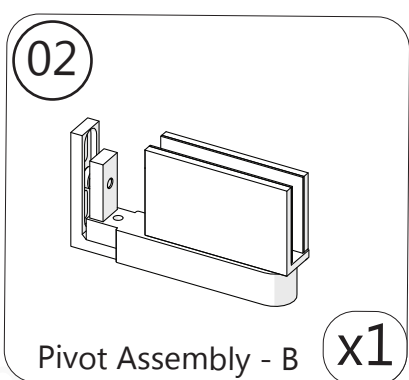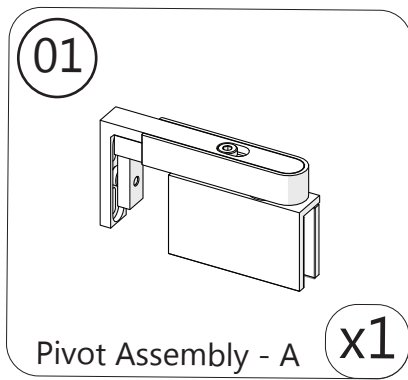

Parts List

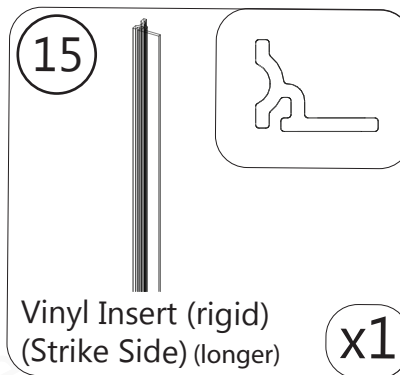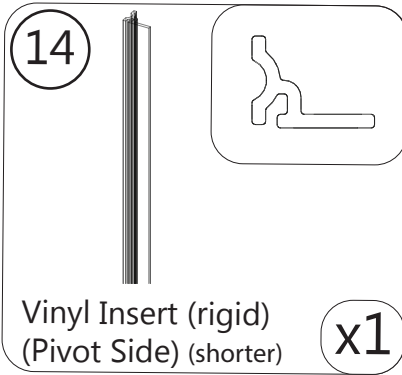


It is not necessary to fully disassemble the **Pivot Assemblies** for installation.



The Pivot Assemblies are paired and either one can be used as the top or bottom pivot depending on the handing of the door installation. See note* below.

Parts per Pivot Assembly-A

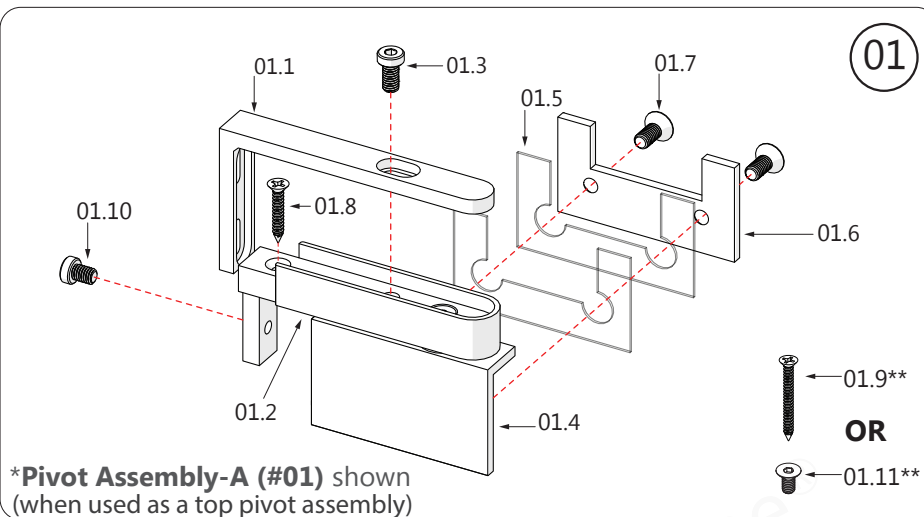


Pivot Assembly A		
ITEM #	ITEM DESCRIPTION	QTY
01.1	Pivot Retainer	1 pc
01.2	Pivot Bracket	1 pc
01.3*	M6 x 12 Socket Head Hex Screw	1 pc
01.4	Pivot Body	1 set
01.5	Clear Gasket	2 pcs
01.6	Back Plate	1 pc
01.7	M6 x 14 Countersunk Hex Screw	2 pcs
01.8	ST4.2x25mm Countersunk Screw	1pc
01.9	ST4.2 x 40 Countersunk Screw	1 pc
01.10**	M6x12 Hex Socket Head Cap Screw	1 pc
01.11**	M6x12 Countersunk Hex Head Screw	1 pc



- *When used as a top pivot assembly: use screw / item #01.3/02.3
- **When used as a bottom pivot assembly: use either screw / item #01.10/02.10 or #01.11/02.11



Parts per Pivot Assembly-B

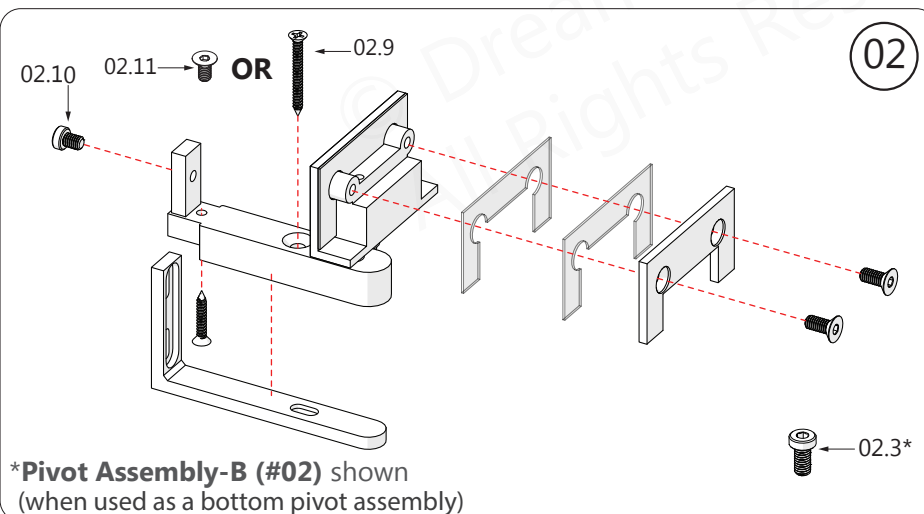

Pivot Assembly B		
ITEM #	ITEM DESCRIPTION	QTY
02.1	Pivot Retainer	1 pc
02.2	Pivot Bracket	1 pc
02.3*	M6 x 12 Socket Head Hex Screw	1 pc
02.4	Pivot Body	1 set
02.5	Clear Gasket	2 pcs
02.6	Back Plate	1 pc
02.7	M6 x 14 Countersunk Hex Screw	2 pcs
02.8	ST4.2x25mm Countersunk Screw	1pc
02.9	ST4.2 x 40 Countersunk Screw	1 pc
02.10**	M6x12 Hex Socket Head Cap Screw	1 pc
02.11**	M6x12 Countersunk Hex Head Screw	1 pc

1

Installation Steps

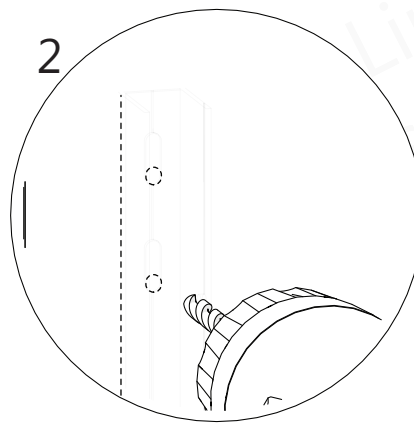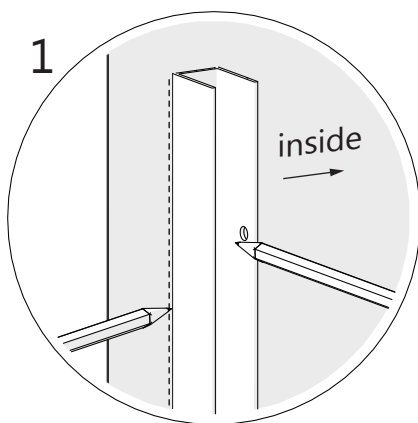

NOTE



▪ **If a stud is present behind the wall:**

drill a $\text{Ø}3/16''$ (4mm) hole up to the stud, drill an $\text{Ø}1/8''$ (3mm) pilot hole and use the **ST4.0 x 40mm Pan Head Screws (#08)**

OR

▪ **If no stud is present behind the wall:**

drill a $\text{Ø}5/16''$ (7mm) hole and insert the **Wall Anchors (#10)** and use the **ST4.0 x 40mm Pan Head Screws (#08)**.

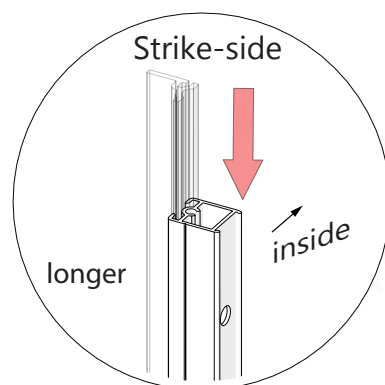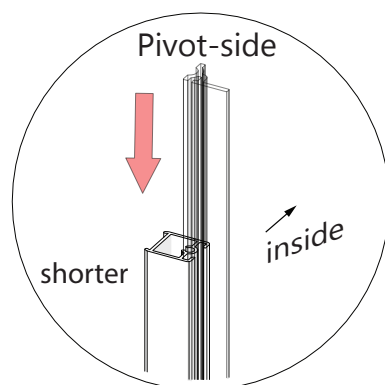

*left-swing door installation shown

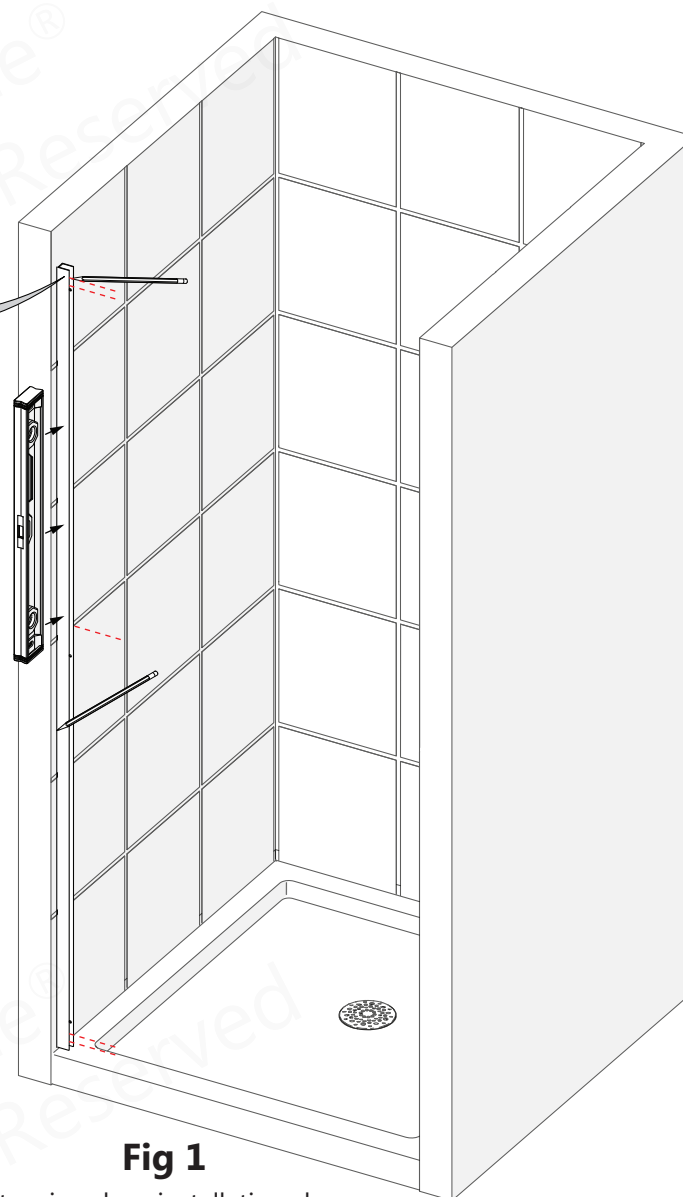







Fig 1

*left-swing door installation shown


NOTE

Slide both of the **Vinyl Inserts (rigid) (#14) (#15)** into both **Glass Profiles (#04) (#05)**. The **Glass Profile for the Pivot Side (#)** is the **shorter** of the two profiles. Once completed, set aside for later use.

Parts Needed

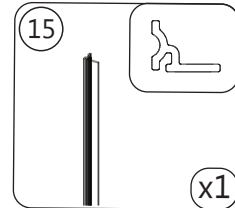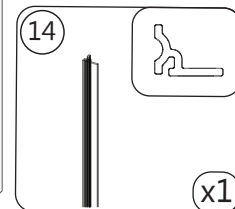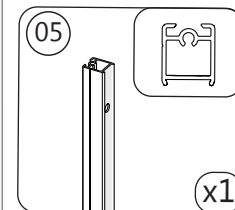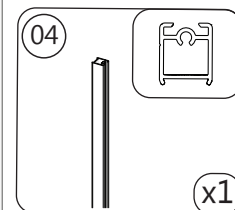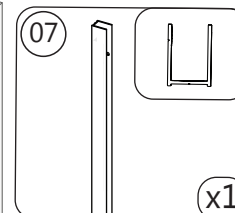


Tools Needed

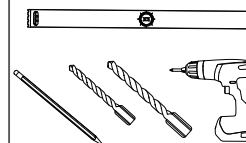

2

Fig 2a

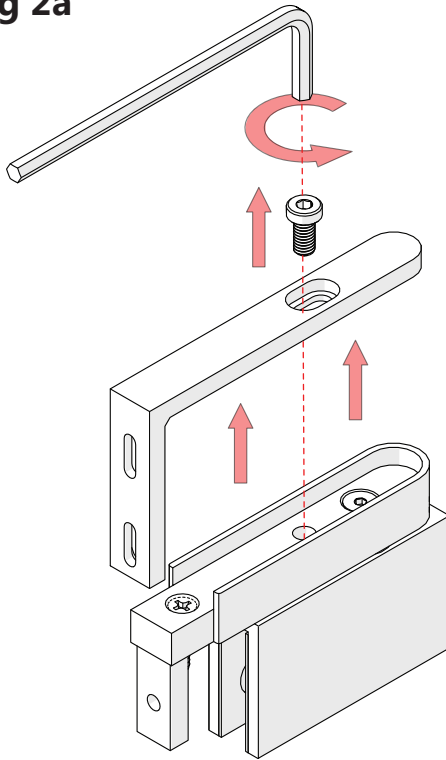

Pivot Assembly-A (#01) as viewed from outside



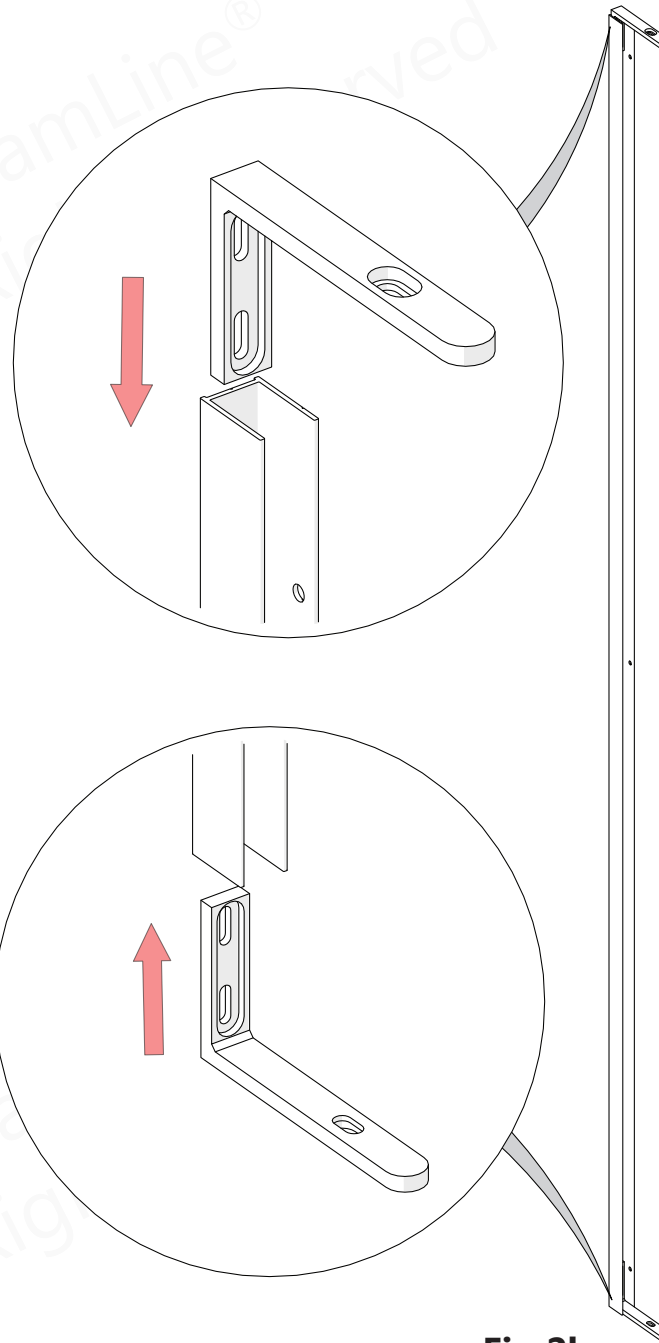


Fig 2b

Parts Needed

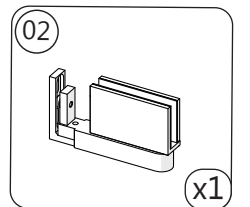

Tools Needed

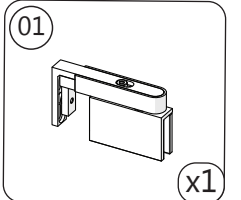

*left-swing door installation shown

3


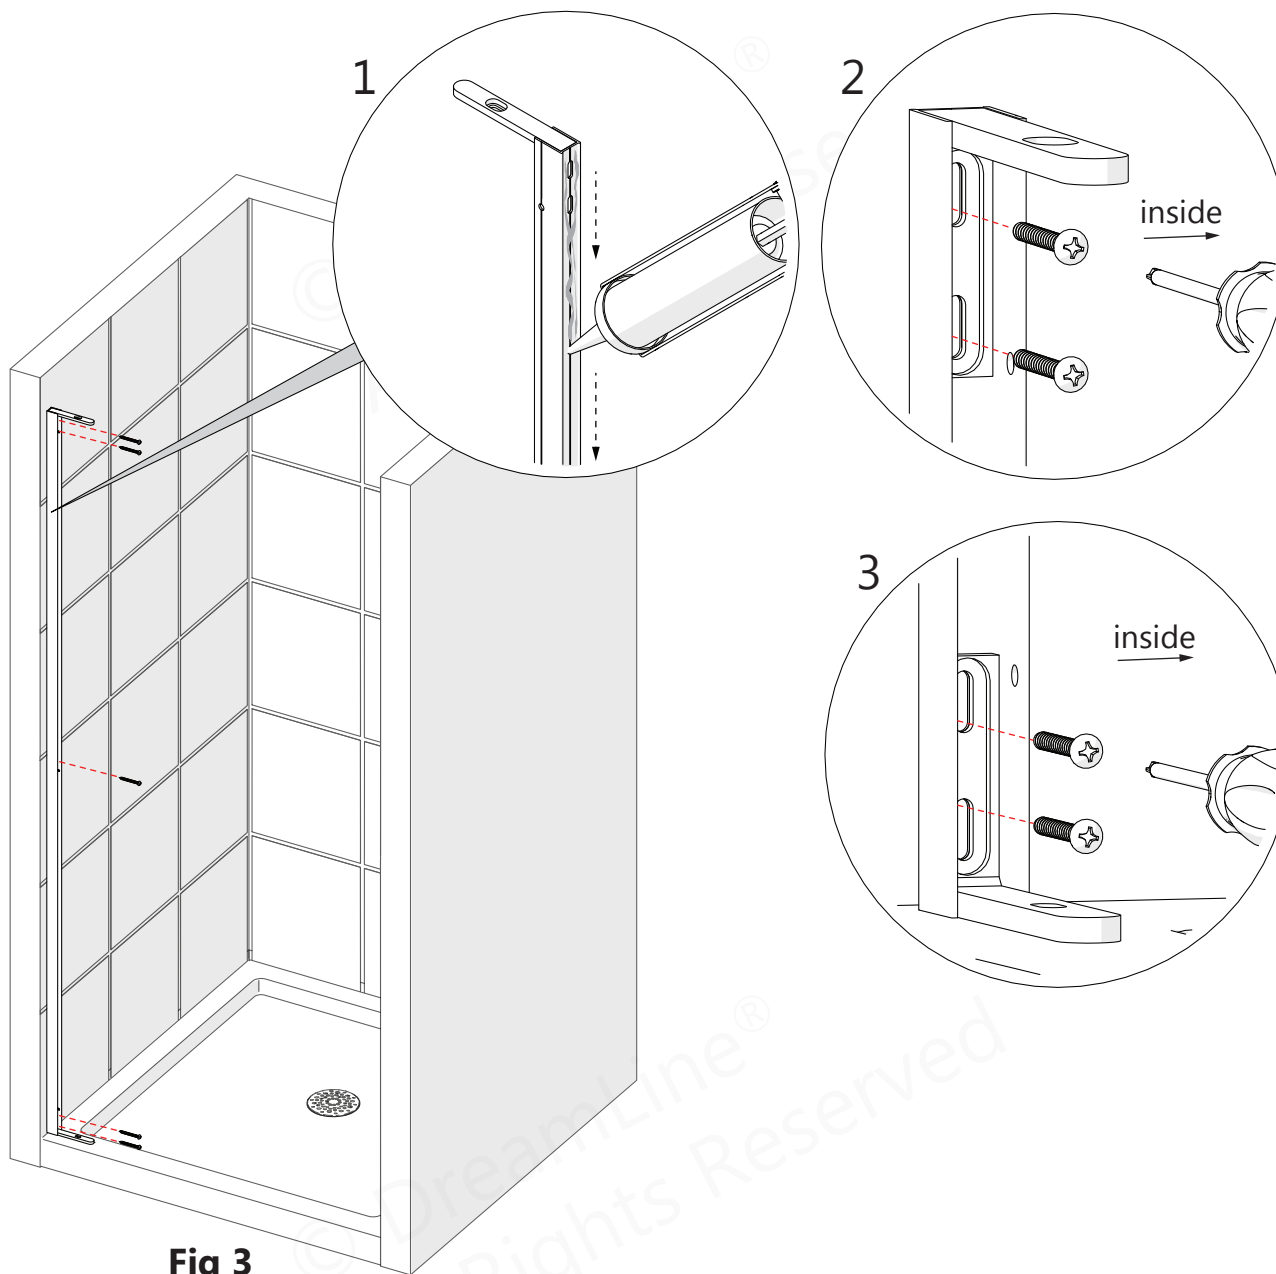



Fig 3

*left-swing door installation shown

Parts Needed

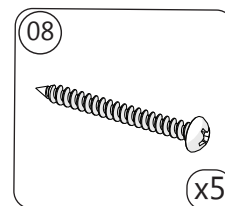

Tools Needed

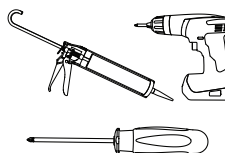

4


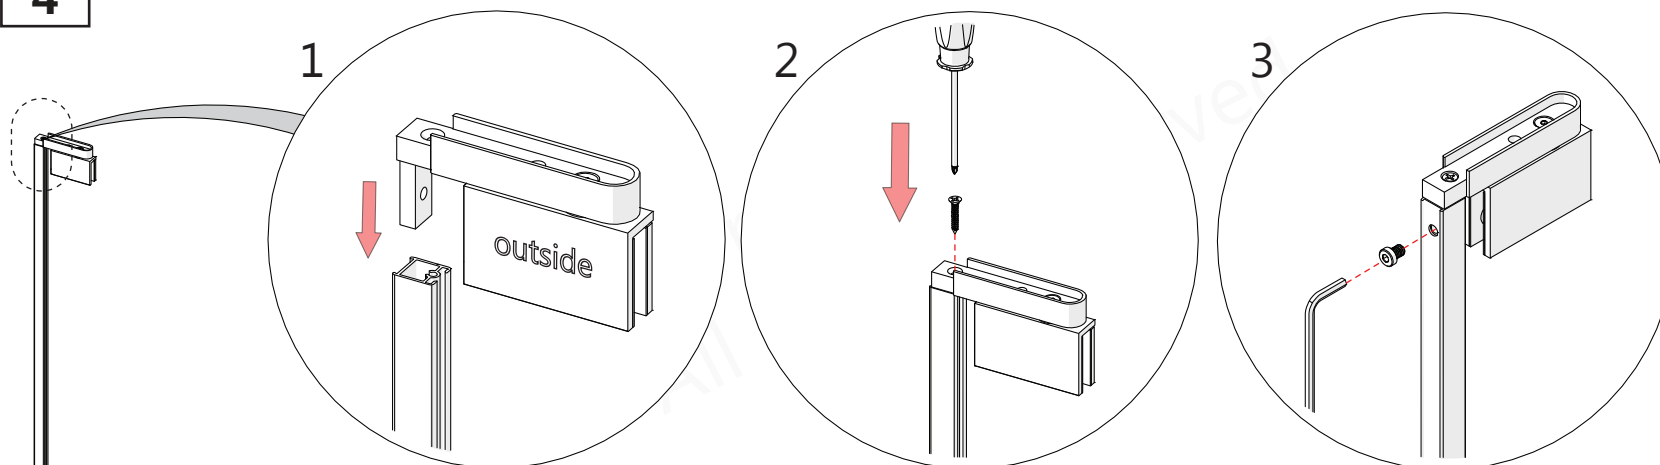


Fig 4

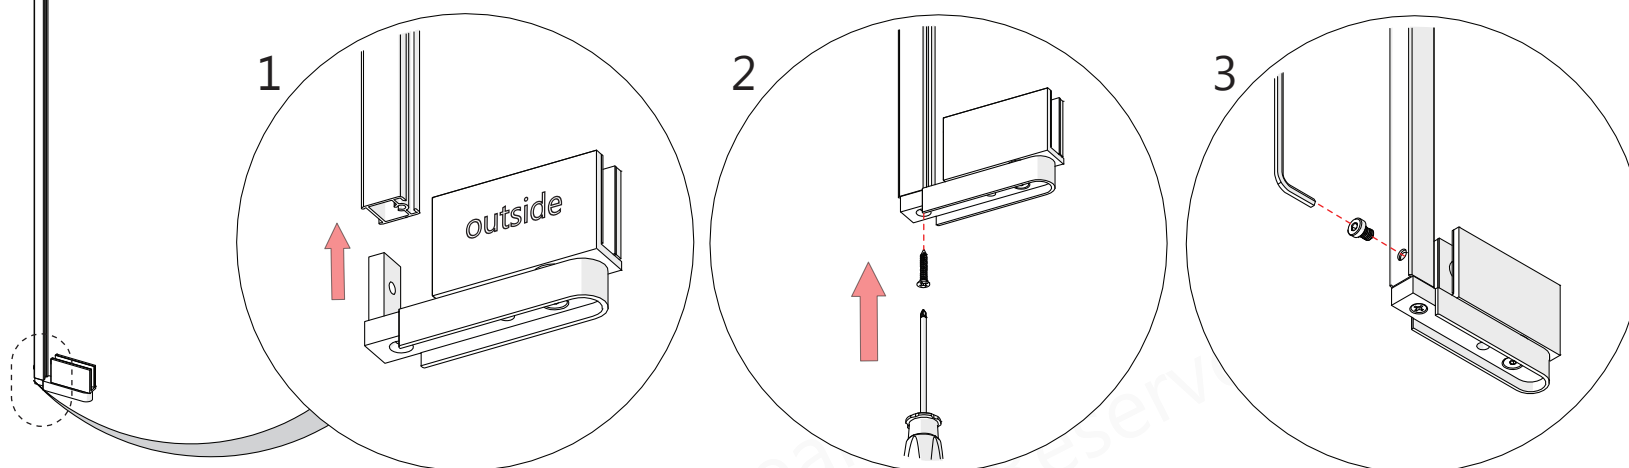




*left-swing door installation shown

NOTE

The **Glass Profile for Pivot Side (#04)** is the shorter of the two Glass Profiles and has an additional pair of holes at each end. These extra holes are not present in the **Glass Profile (#05)** that is used for the strike-side.

NOTE


Attach the hinges to the **Glass Profile for Pivot Side (#04)** as shown in Fig 4. The **Back Plate (#01.6/#02.6)** of the **Pivot Assembly (#01/#02)** must face the inside of the shower. (see the Pivot Assembly diagram on **Page 9** for part details)

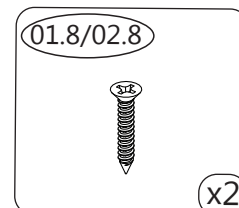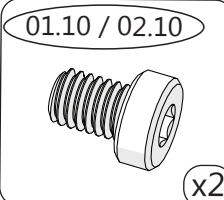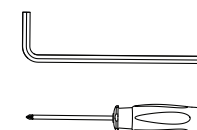Parts Needed**Tools Needed**

5



Protect the edges of the door glass from making contact with the walls and threshold during installation and adjustment.

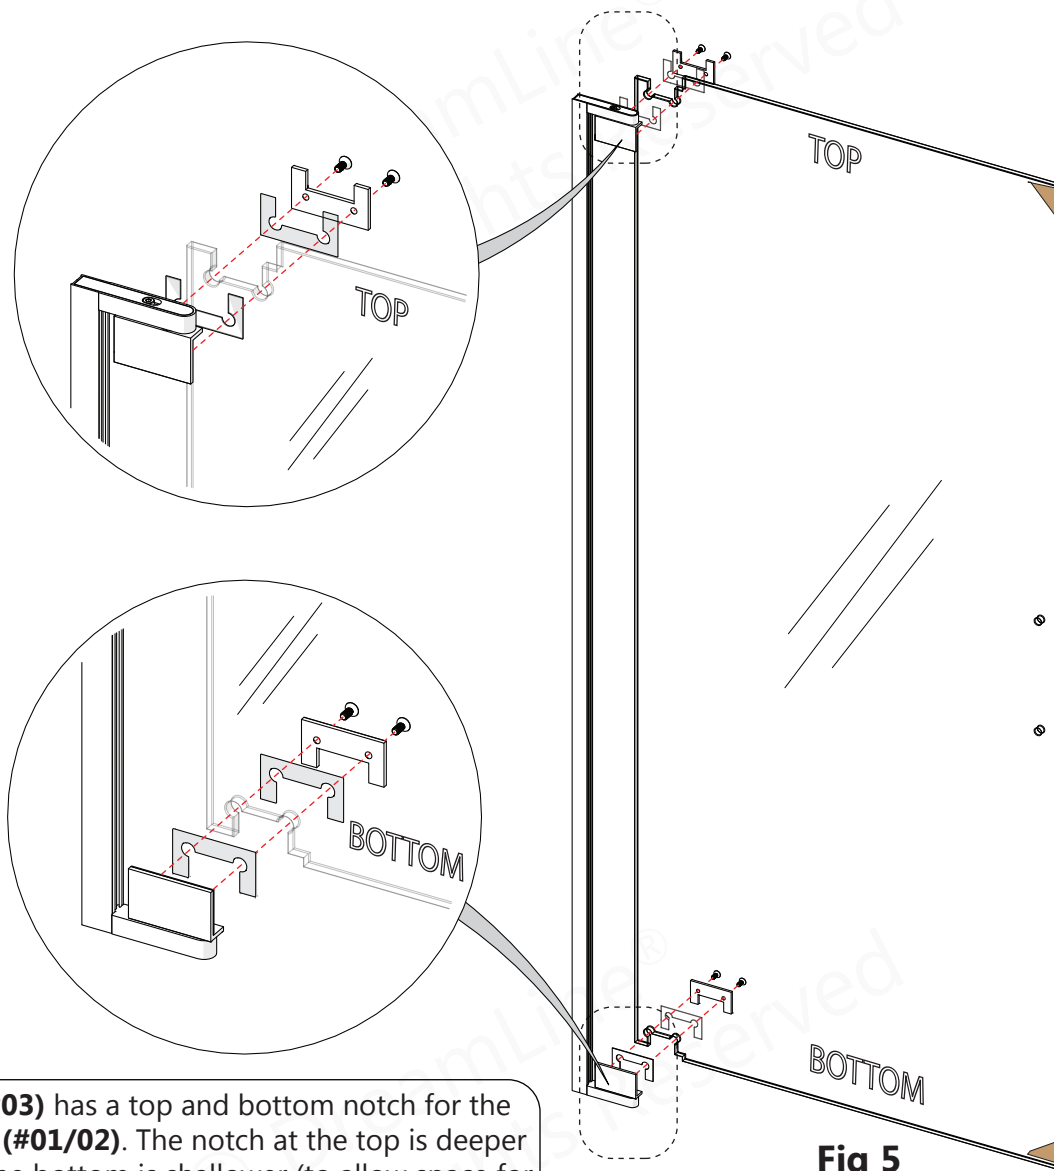


The **Door Glass (#03)** has a top and bottom notch for the **Pivot Assemblies (#01/02)**. The notch at the top is deeper and the notch at the bottom is shallower (to allow space for the **Bottom Sweep Vinyl (#11)**). Identify this difference to prevent installing the Door Glass upside-down.



Use caution when handling the Door Glass (#03). **DO NOT** lift the Door Glass with the Handle (#06).






Leave the corner protectors on the glass until it is necessary to remove them.

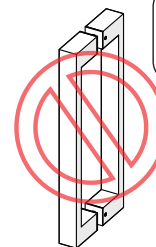

Do Not install the handle yet.

Parts Needed

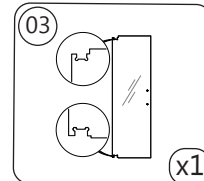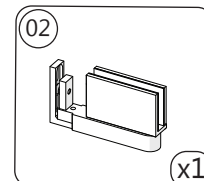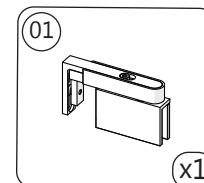


Tools Needed



*left-swing door installation shown

6

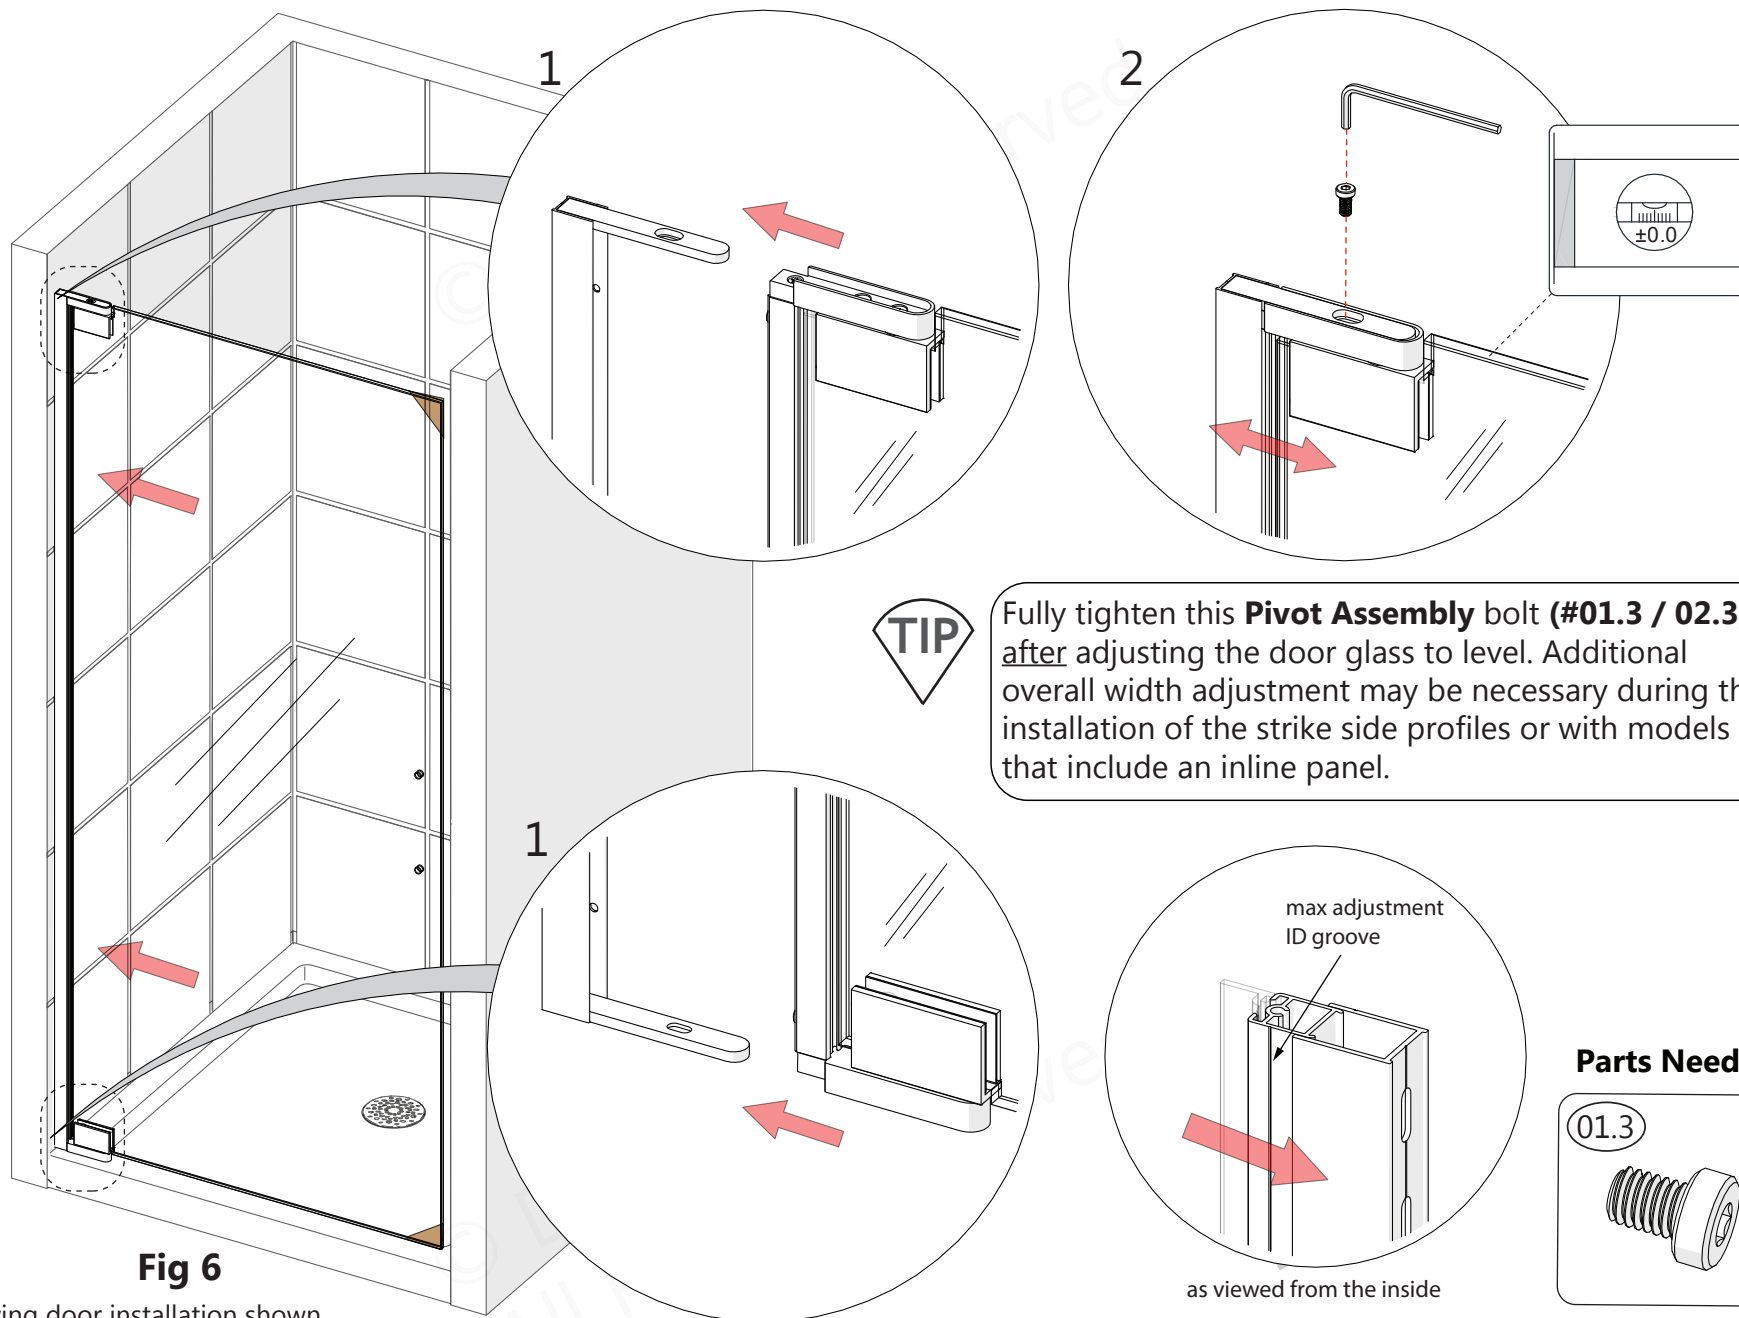

Each two piece wall profile system (consisting of the **Glass Profiles (#04/05)** and **Wall Profiles (#07)**) will allow for overall width and/or 1/4" out-of-plumb adjustment within the model size.

7

Handle Installation

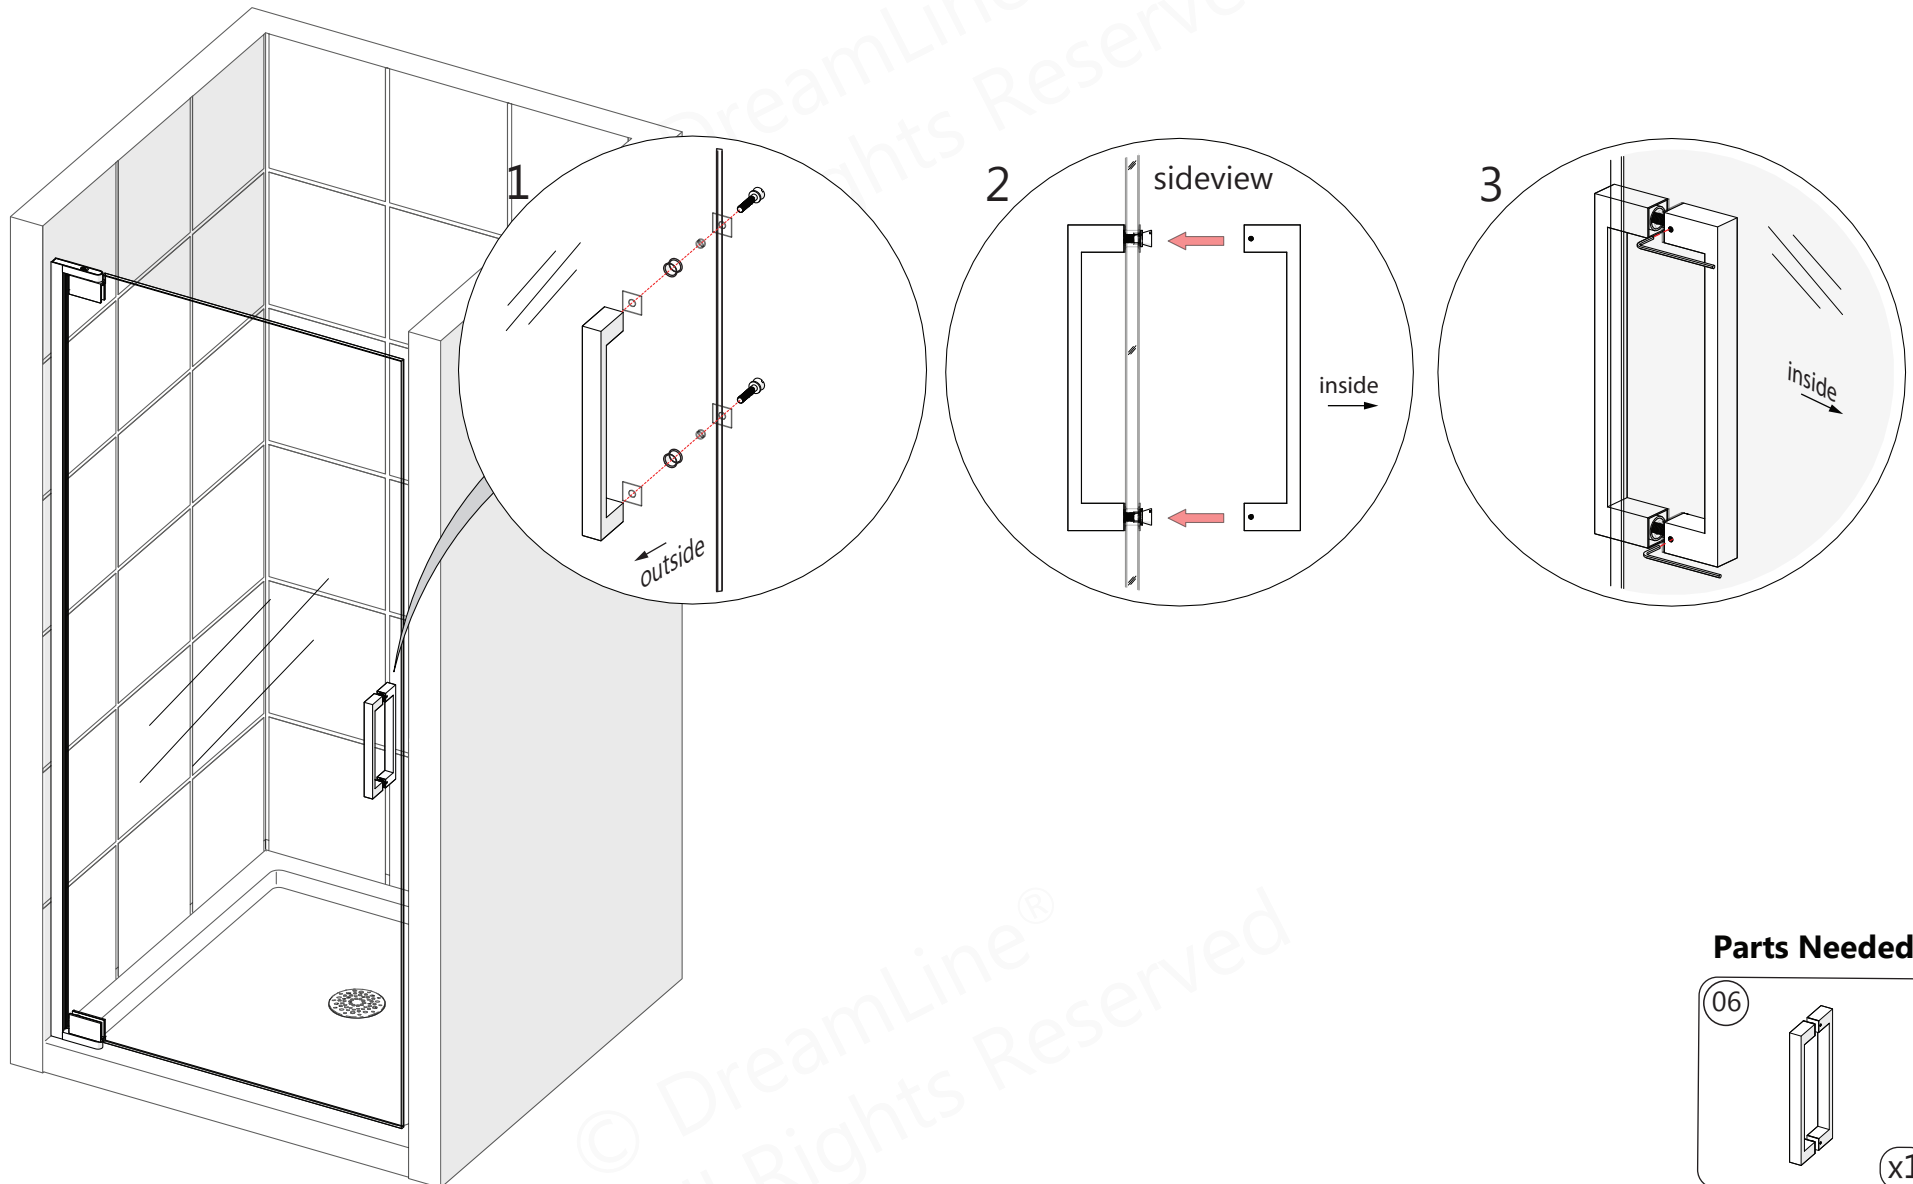



Fig 7

*left-swing door installation shown




Tighten all four **Handle (#06)** set screws to ensure the handle is secured to the **Door Glass (#03)**. (see Fig 7.3)

Parts Needed

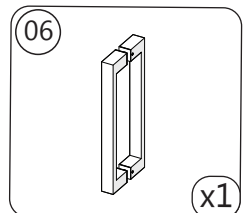

Tools Needed

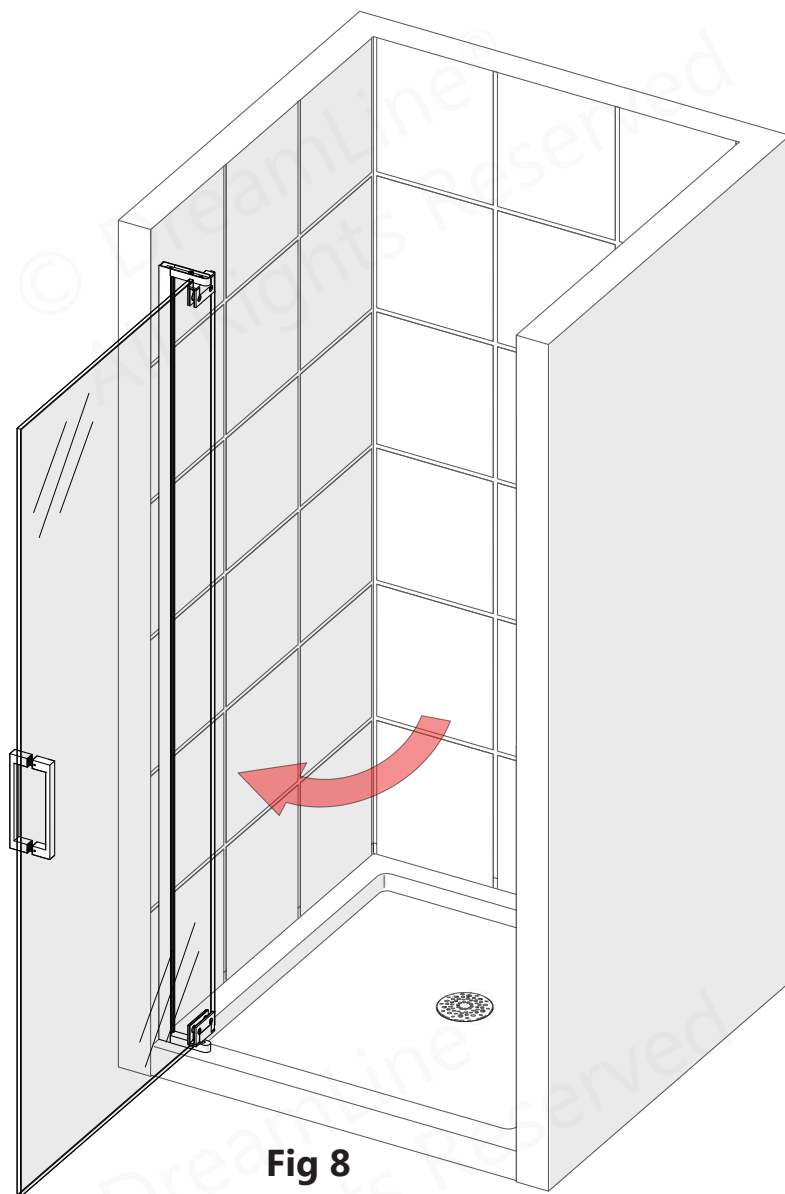





**Fig 8**

*left-swing door installation shown

9

NOTE



Sealing the hole in the bottom **Pivot Bracket (#02.2)** is important to prevent water leakage. Screwing the bottom **Pivot Bracket (#02.2)** to the threshold is optional. (See page 26 for details)

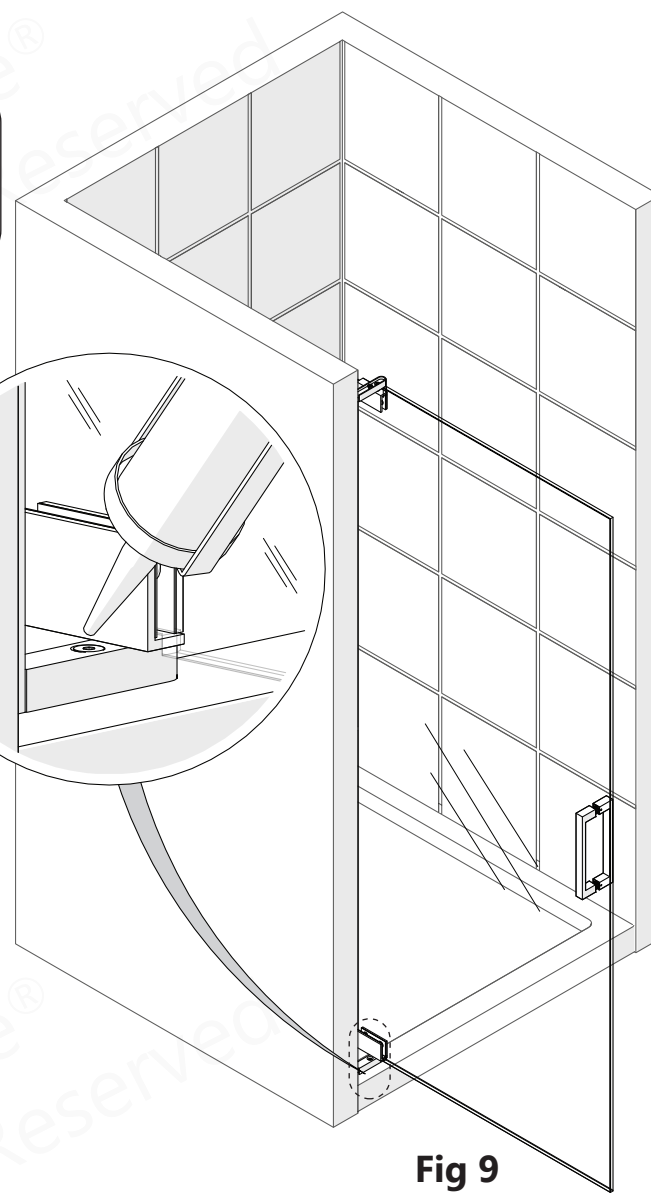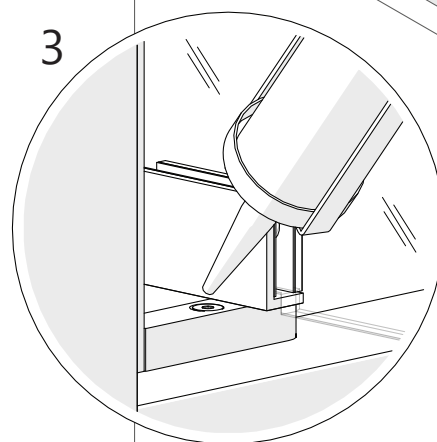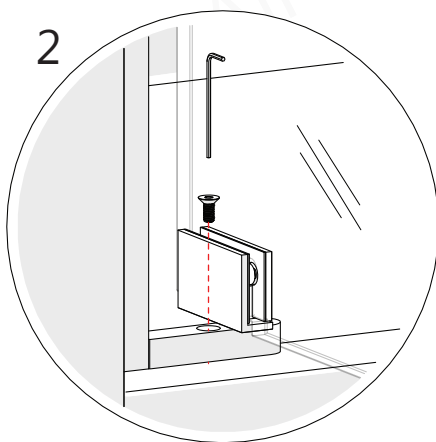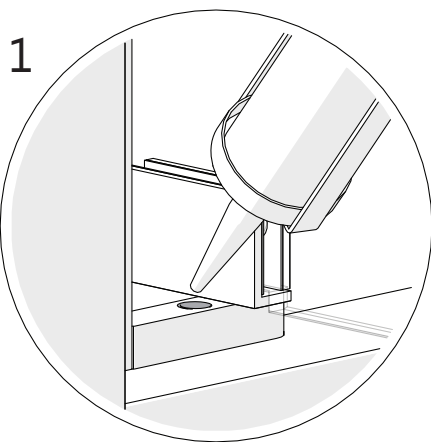**Fig 9**

*left-swing door installation shown

***Any width and/or out-of-plumb adjustments using the adjustable wall profile system must be made prior to screwing the Pivot Assembly-B (#02) down into the threshold. See Page 26 for specific instructions.**

When installing the door along with an inline panel model, postpone this step until after aligning the panel glass.

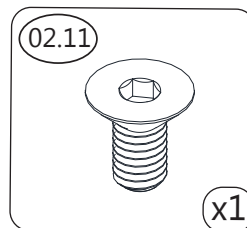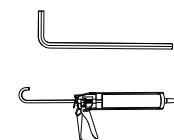Parts Needed**Tools Needed**

10

Strike Profile Installation



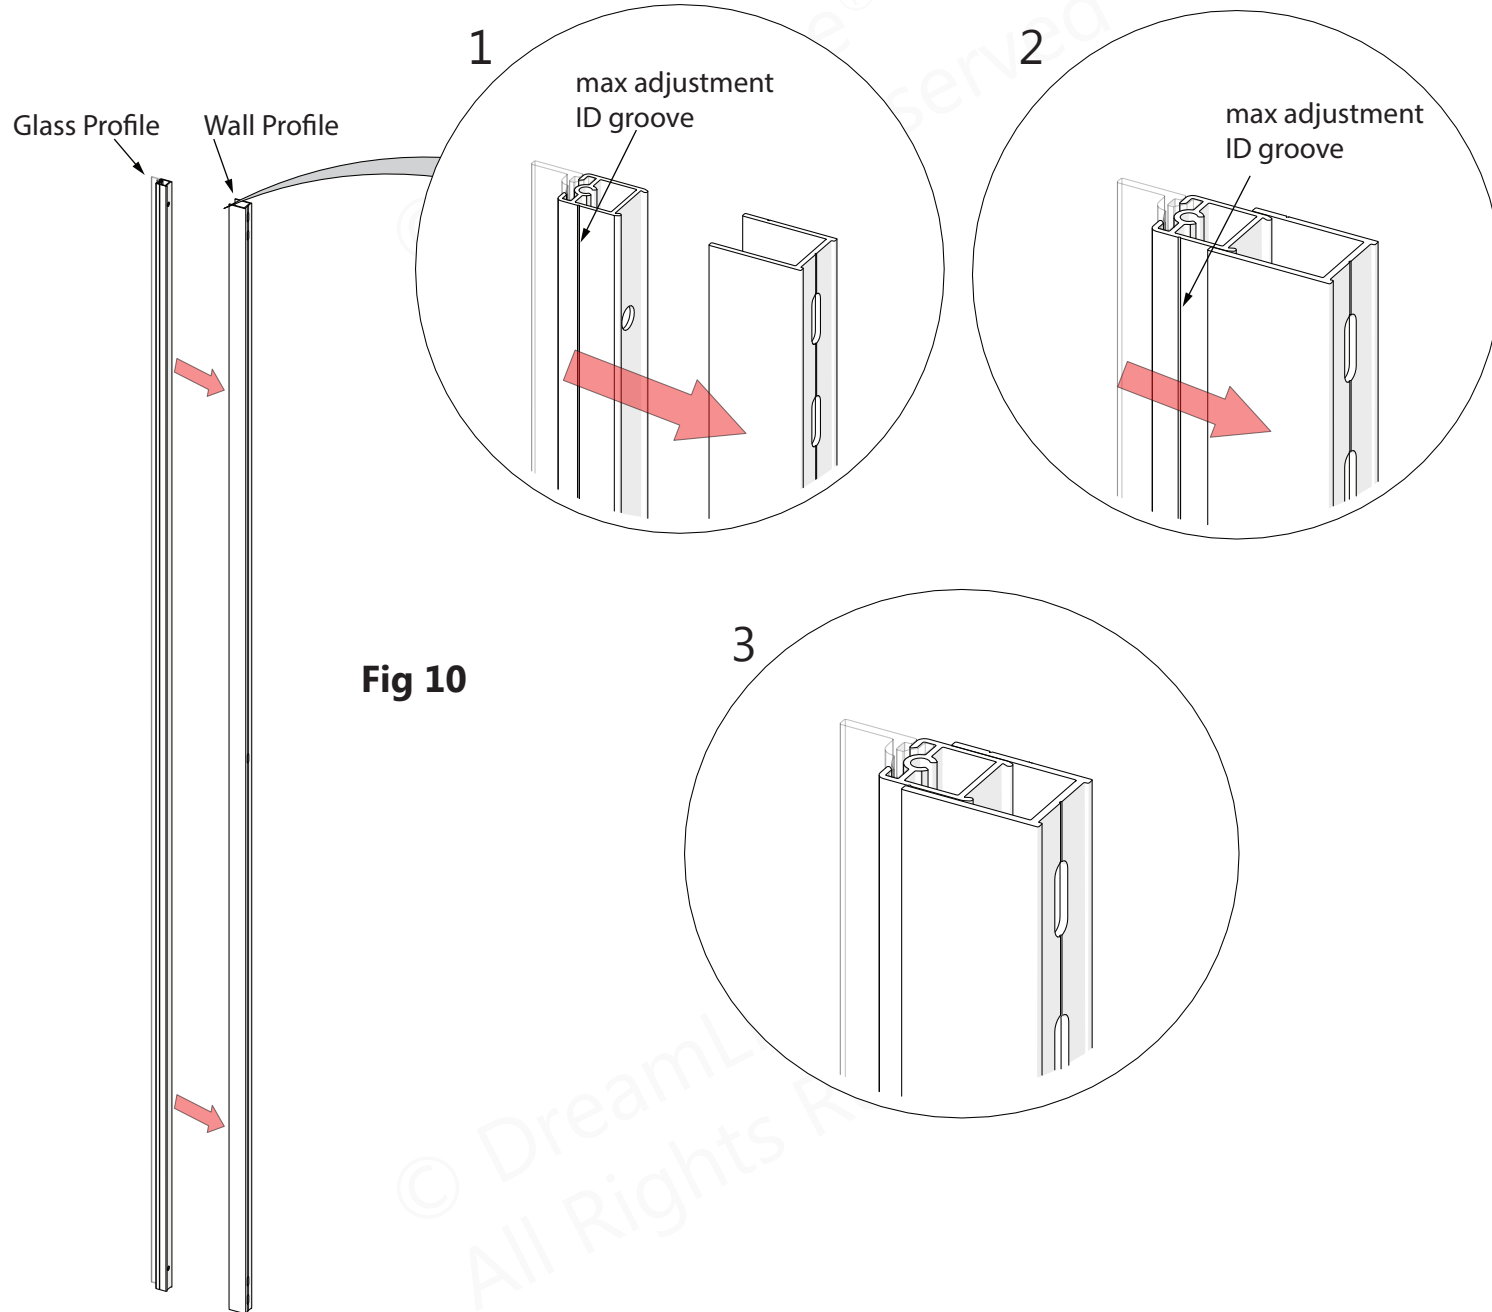


Fig 10

Parts Needed

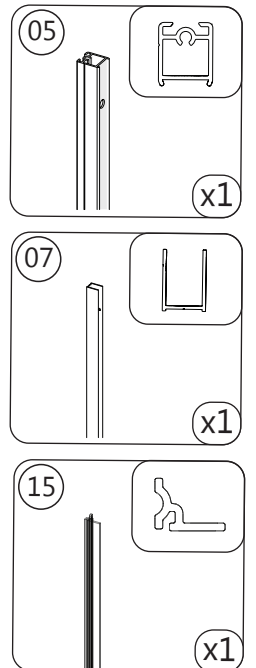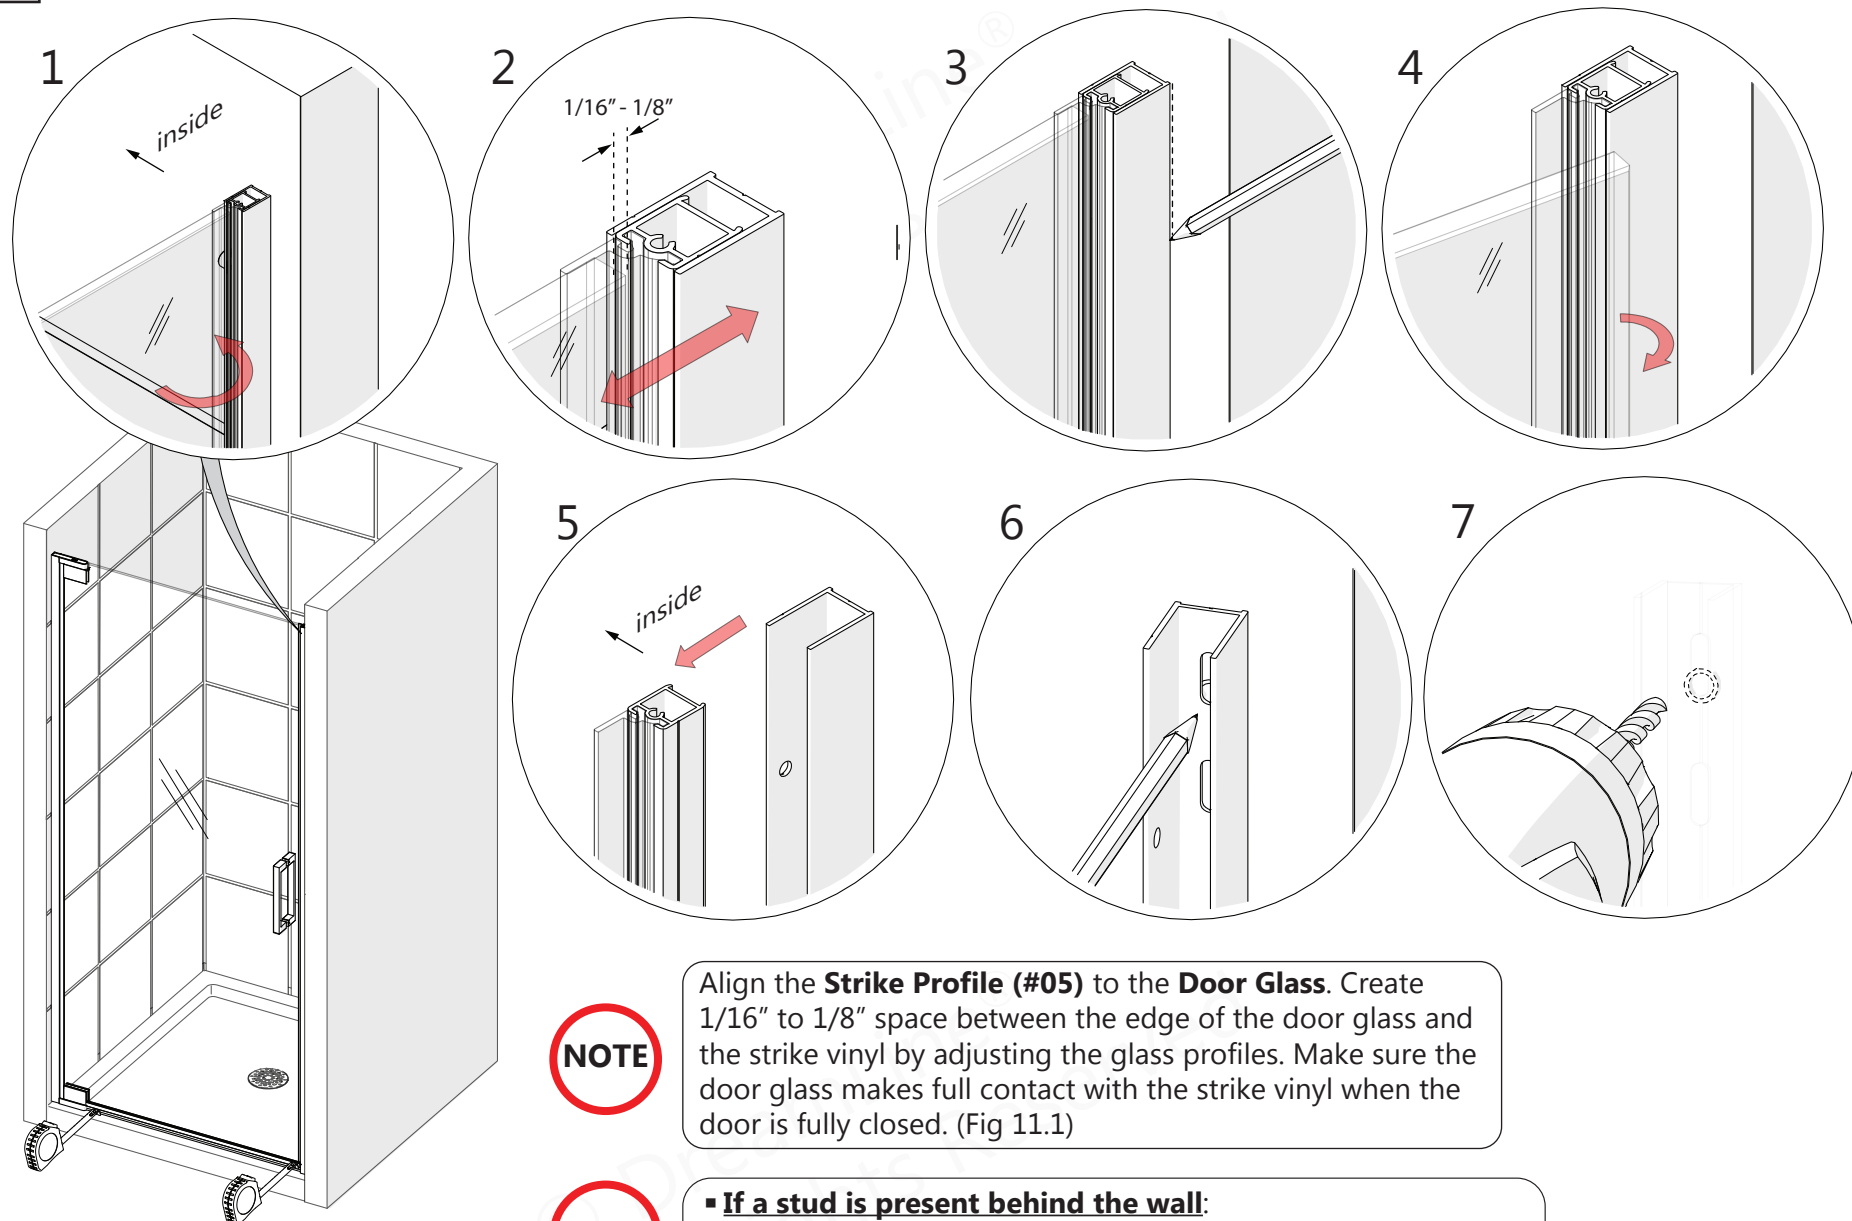

11**Fig 11**


*left-swing door installation shown

NOTE

Align the **Strike Profile (#05)** to the **Door Glass**. Create 1/16" to 1/8" space between the edge of the door glass and the strike vinyl by adjusting the glass profiles. Make sure the door glass makes full contact with the strike vinyl when the door is fully closed. (Fig 11.1)

NOTE

- **If a stud is present behind the wall:**
drill a $\text{Ø}3/16''$ (4mm) hole up to the stud, drill an $\text{Ø}1/8''$ (3mm) pilot hole and use the **ST4.0 x 40mm Pan Head Screws (#08)**
- OR**
- **If no stud is present behind the wall:**
drill a $\text{Ø}5/16''$ (7mm) hole and insert the **Wall Anchors (#10)** and use the **ST4.0 x 40mm Pan Head Screws (#08)**.

Tools Needed

12



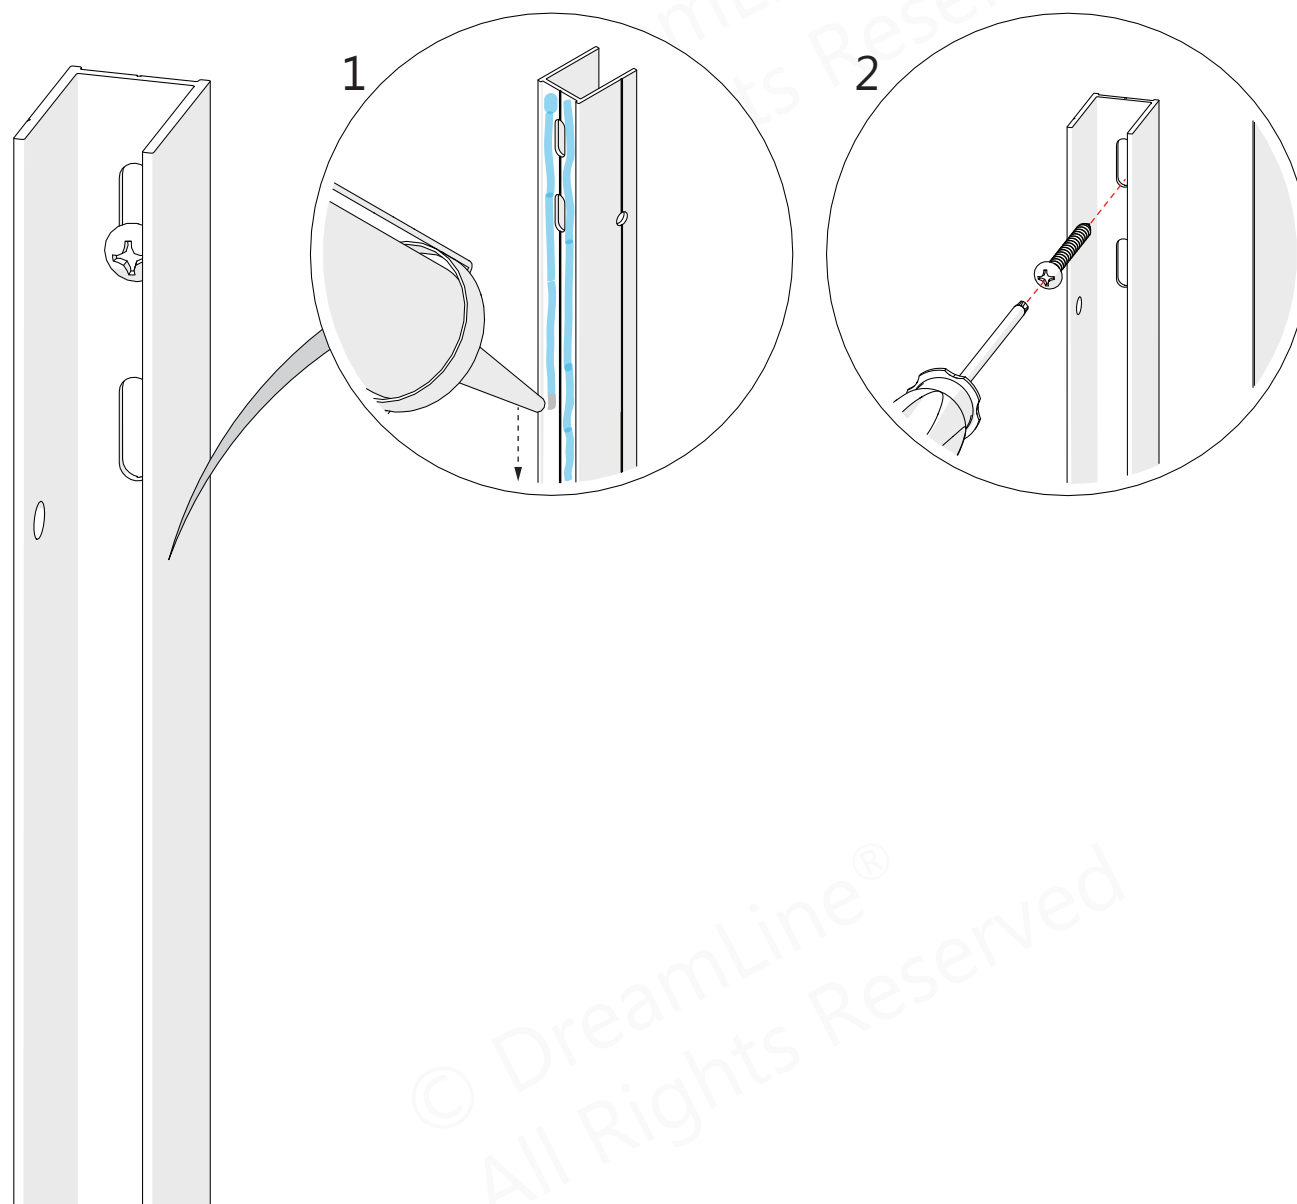


Fig 12


Parts Needed

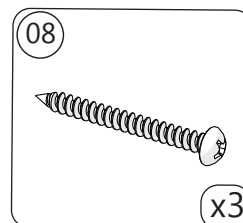

Tools Needed

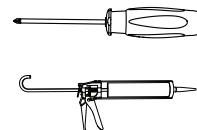


13

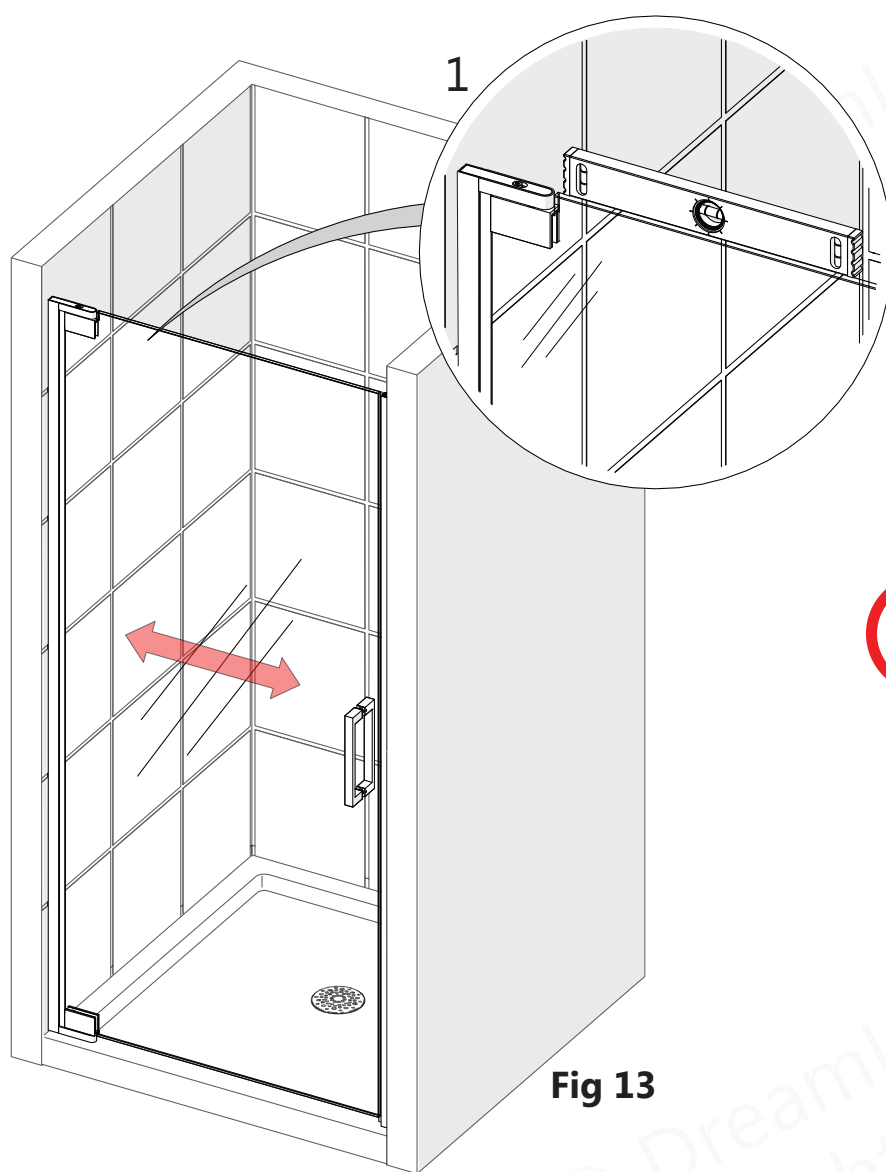


2

overview of Door Glass
and Wall Profile for Strike side

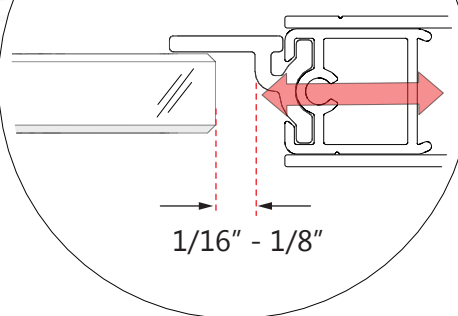

3

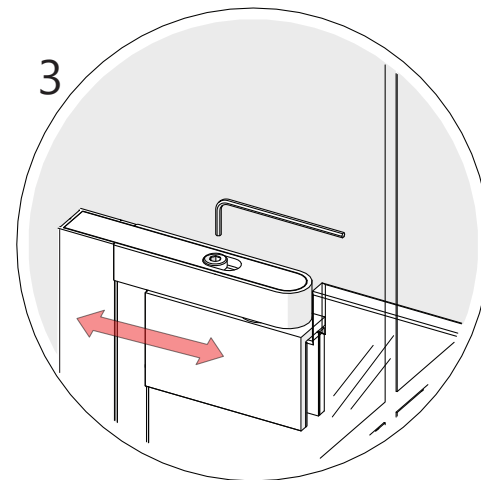

During adjustment:
Do Not expose the 1/4\"/>


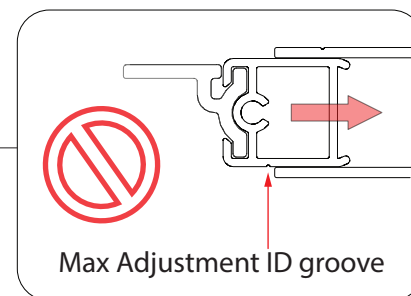



Fig 13

*left-swing door installation shown

Parts Needed

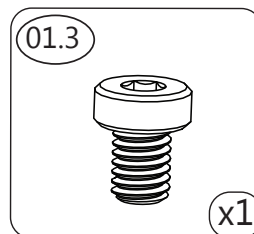

Tools Needed

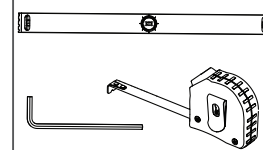

Use caution not to damage the edges of the door glass during adjustments.

14

Decorative Cover Installation

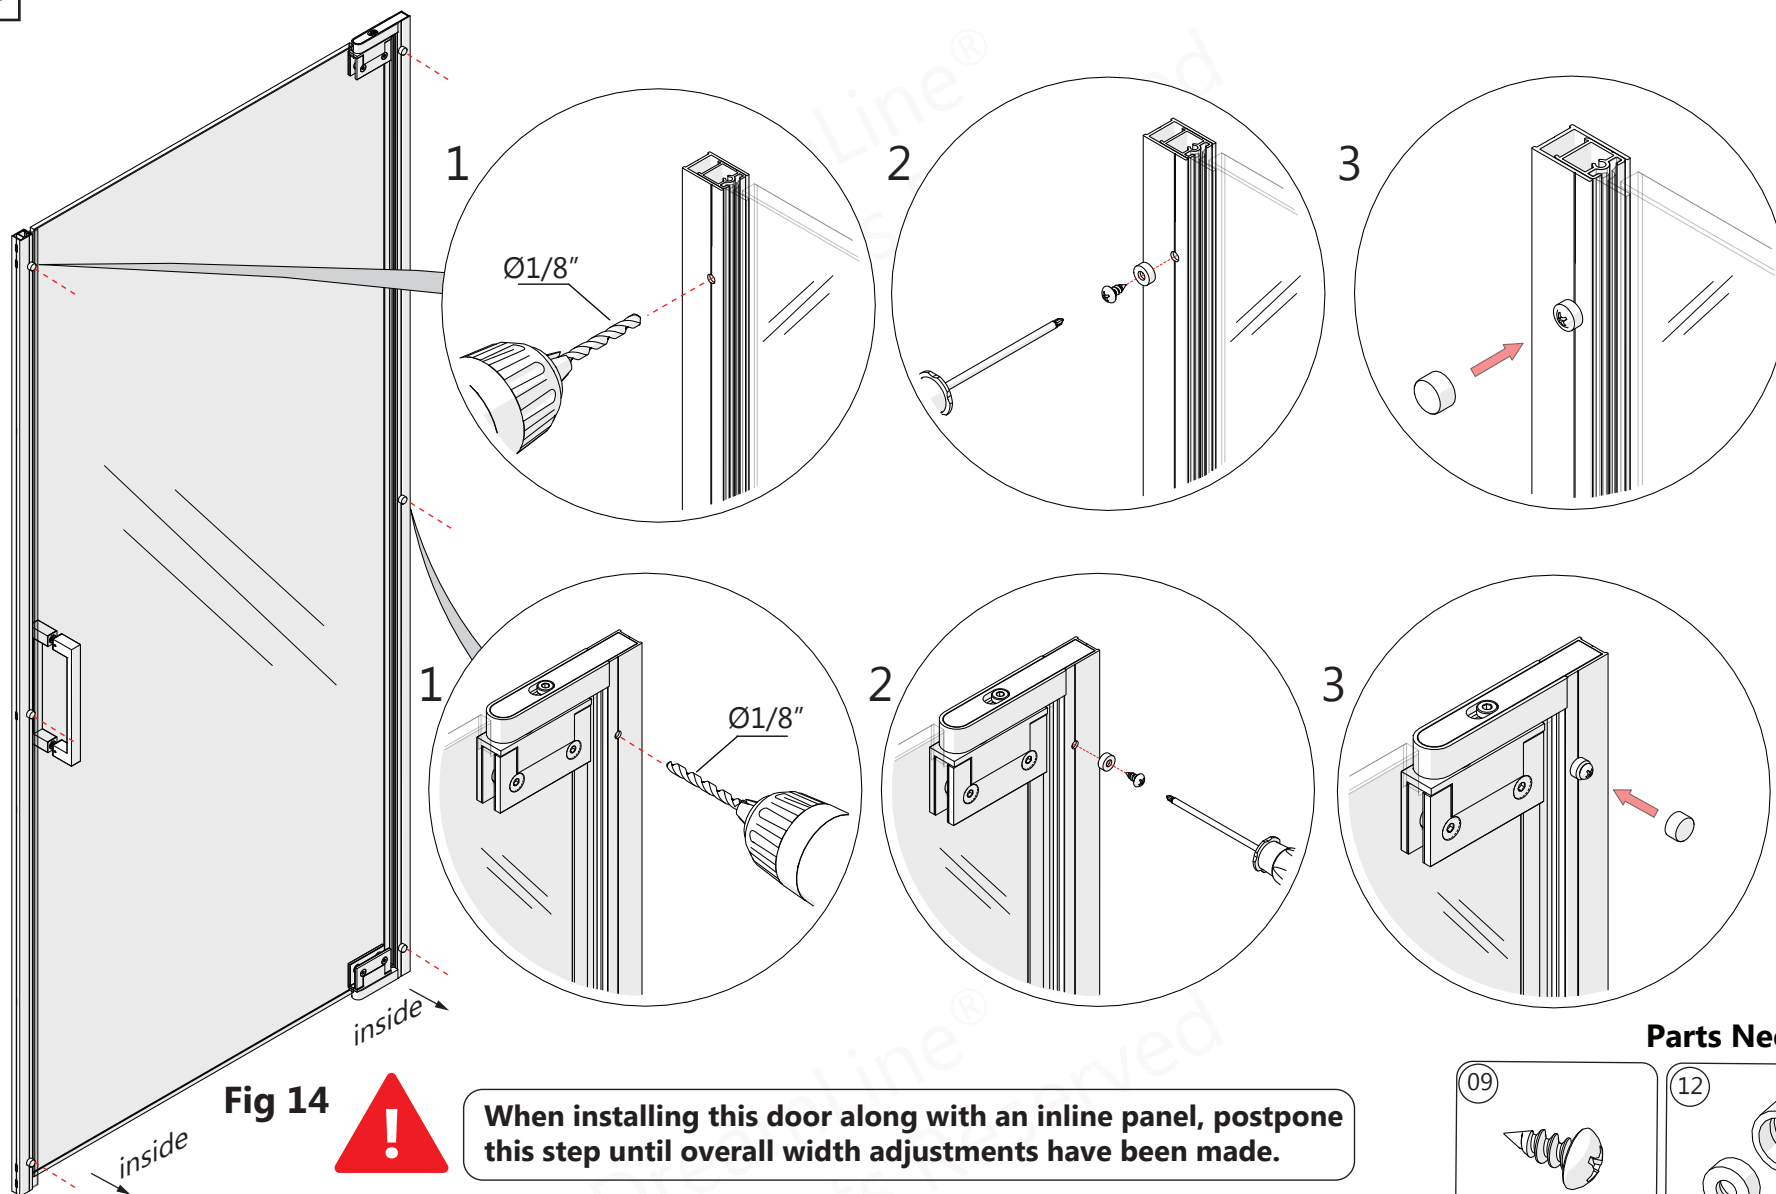


Fig 14



When installing this door along with an inline panel, postpone this step until overall width adjustments have been made.




Only drill through the first layer of the **Glass Profiles (#04/05)** using an **Ø1/8"** drill bit.




Turn to **Page 26** for instructions to screw the bottom **Pivot Retainer-B (#02.1)** to the threshold if desired. Otherwise, continue on to the next step.



Parts Needed

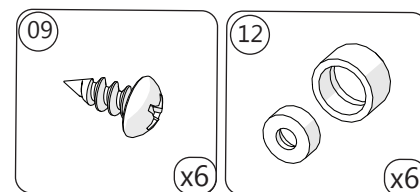



Tools Needed

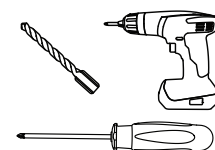

*left-swing door installation shown from the inside

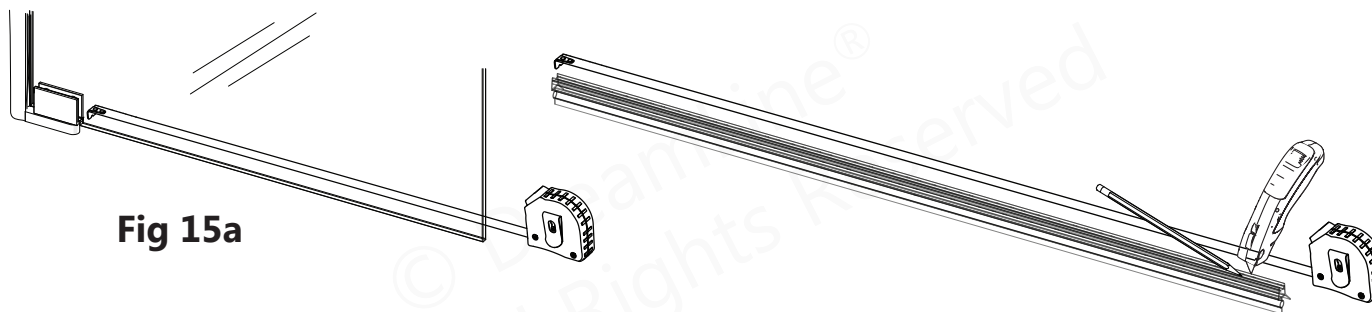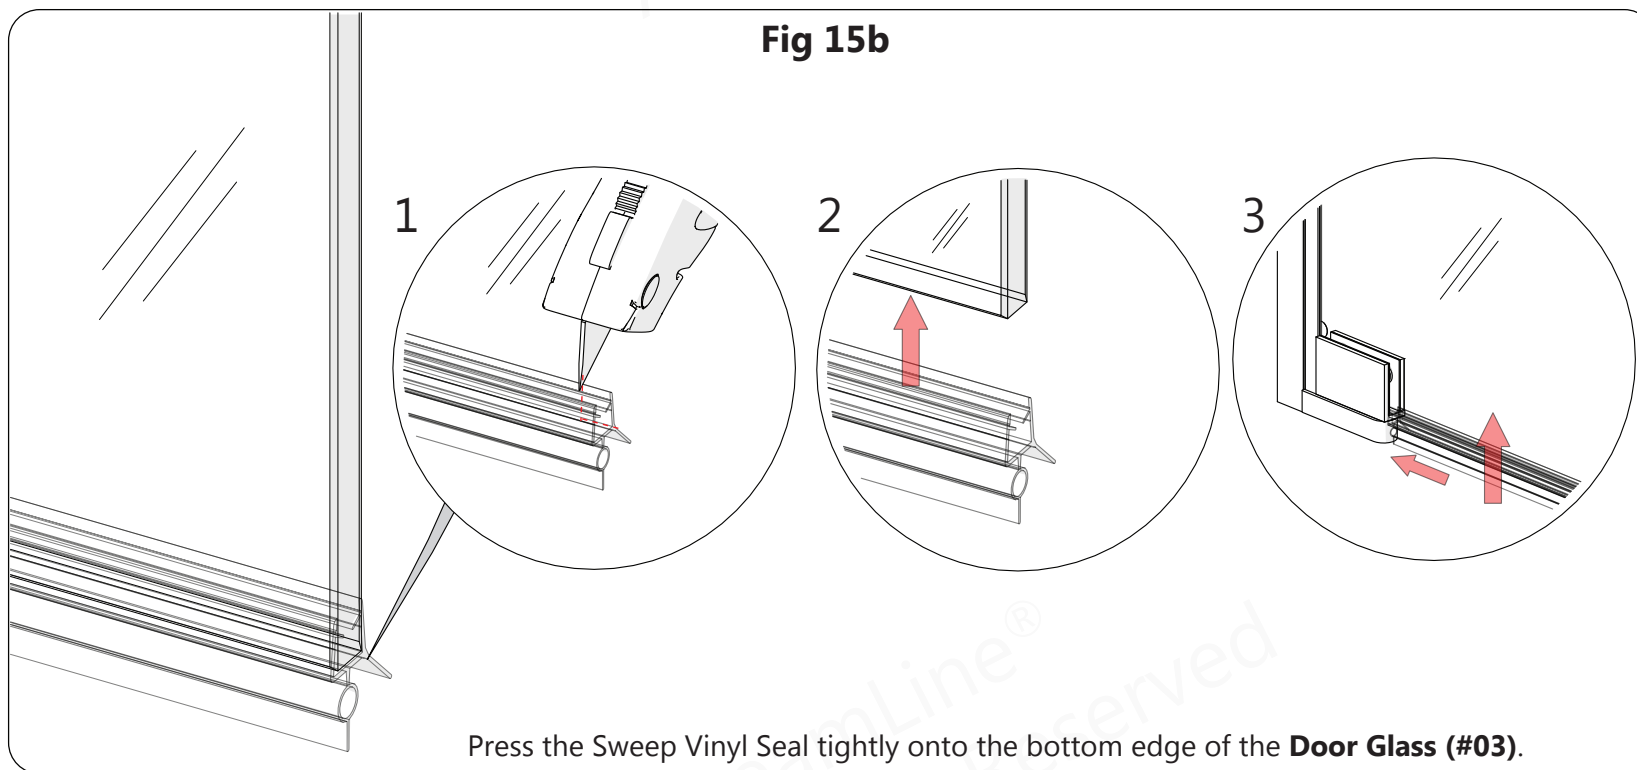
15**Bottom Sweep Vinyl Installation****Fig 15b**

Optional: Close the door and notch off the deflector on the inner-side of the **Sweep Vinyl Seal (#11)** where it overlaps the **Strike Vinyl Seal (#15)** when the door is in the closed position. (Fig 15b.1)

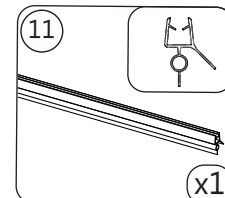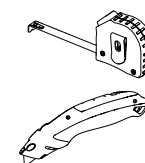Parts Needed**Tools Needed**

16**NOTE**

The surfaces need to be clean and free of debris before applying silicone.

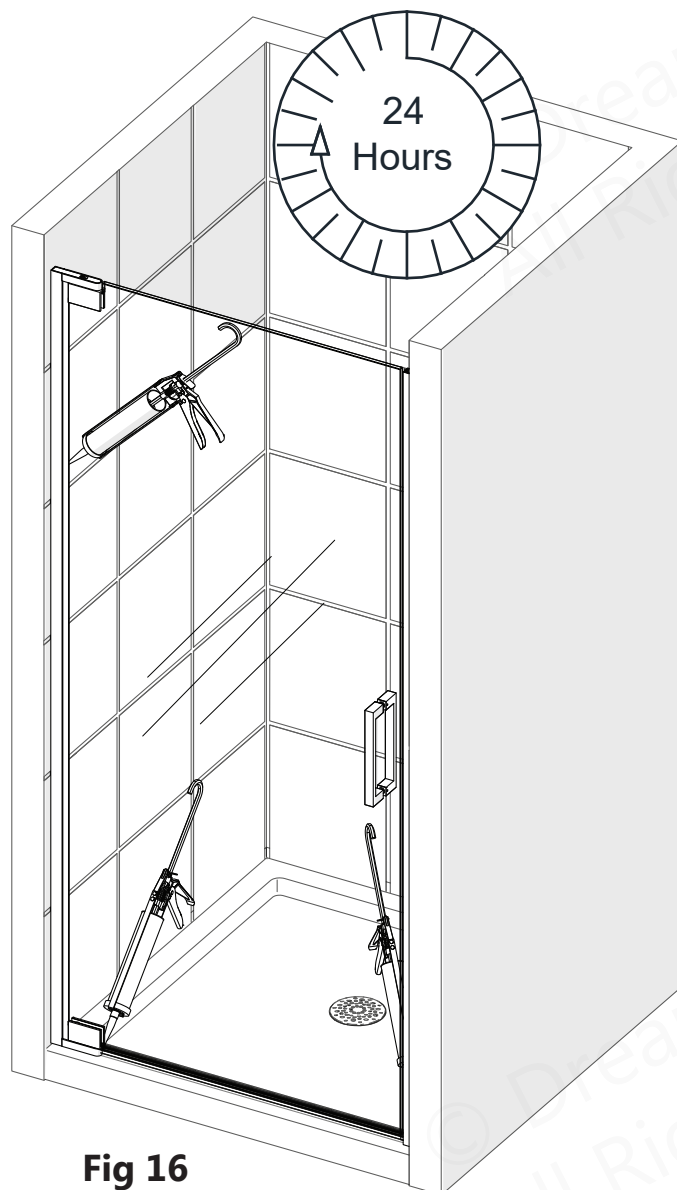**Fig 16**

This completes the single door installation.


For the installation of a model that includes inline panel glass:

-Complete the installation steps using the manual that is packaged with the inline panel glass.


Note that the strike side Glass Profile (#05) and Wall Profile (#07) will not be used with the inline panel installation.



Allow 24 hours for the silicone caulk to cure before using the shower.

Tools Needed

Securing the Bottom Pivot Assembly To The Threshold

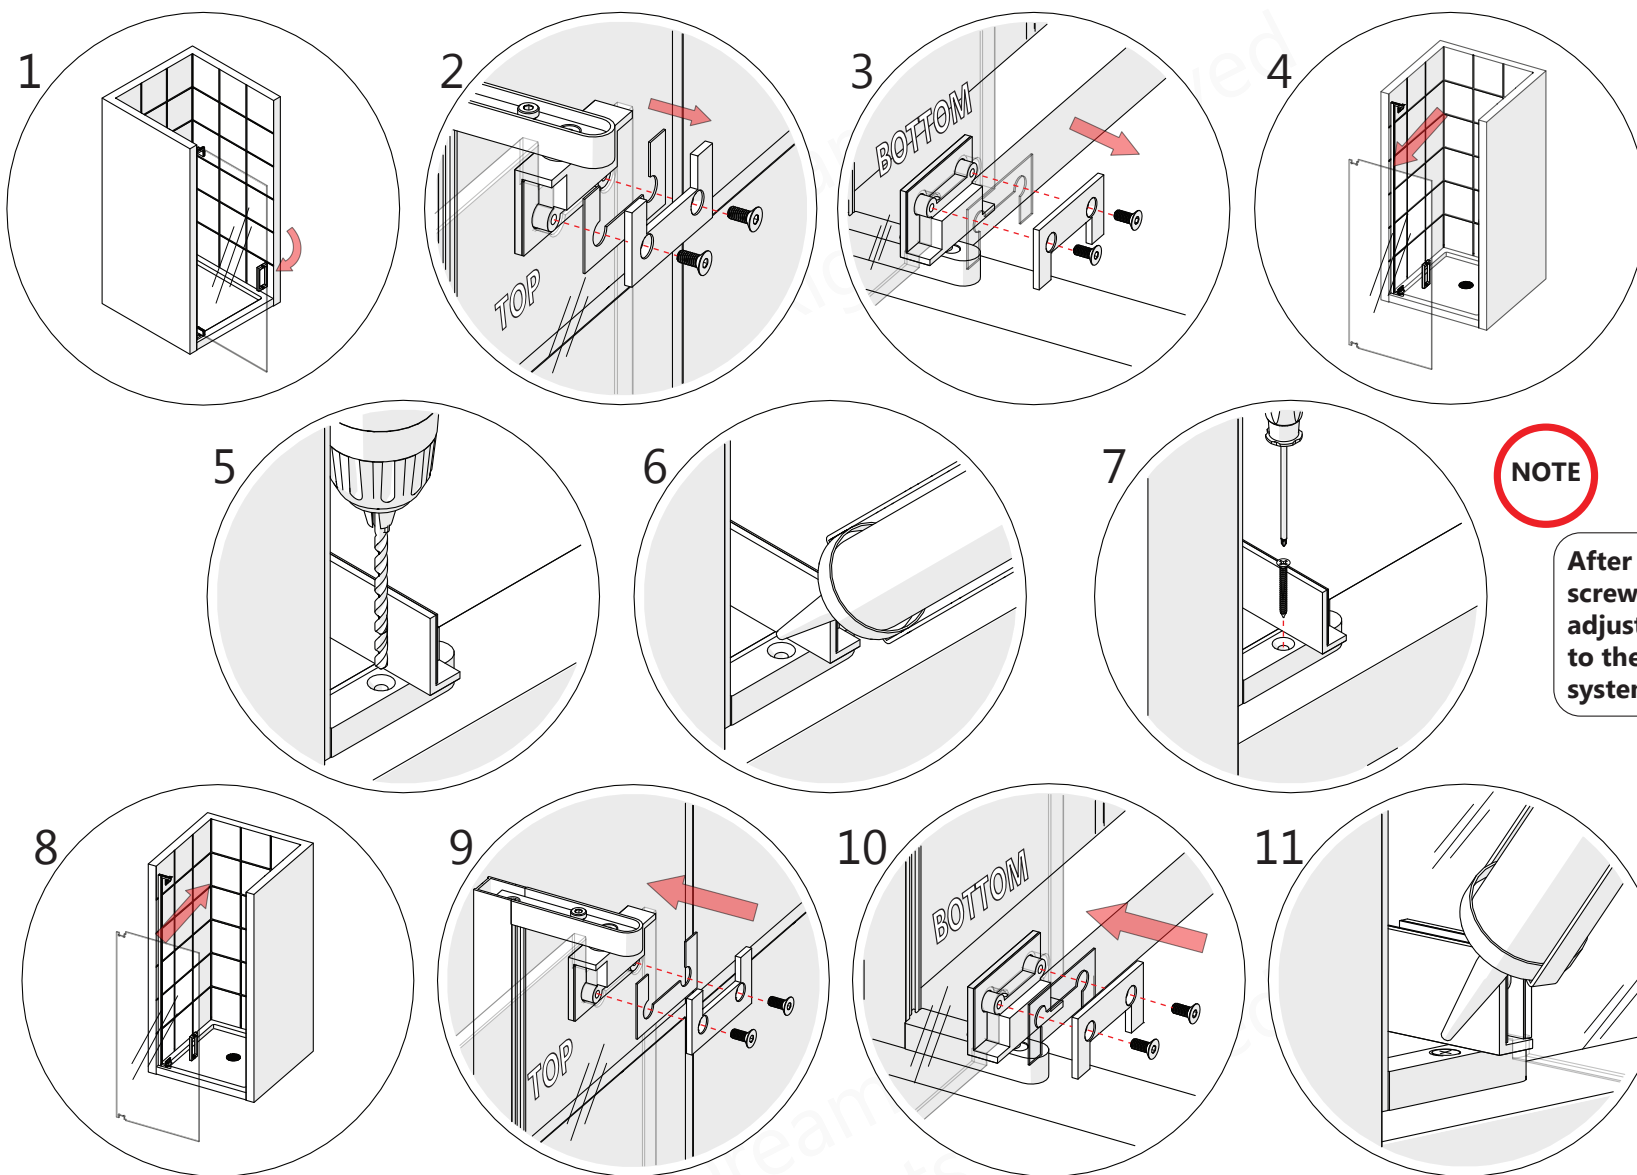

NOTE

After the bottom pivot is screwed to the threshold, adjustment will be limited to the strike side wall profile system.

NOTE

- For installation into an **Acrylic Threshold**:
drill a $\text{Ø}1/8"$ (3mm) hole and use the **ST4.2×40mm Countersunk Screw (#01.9 / 02.9)**
- OR
- For installation into a **Tile Threshold**:
drill a $\text{Ø}3/16"$ (4mm) hole up to the stud, drill an $\text{Ø}1/8"$ (3mm) pilot hole and use the **ST4.2×40mm Countersunk Screw (#01.9 / 02.9)**.




NOTE


Use a longer drill bit to drill through the hole in the Pivot Assembly. see Fig 5

Use caution not to scratch the hinge surface.

Parts Needed

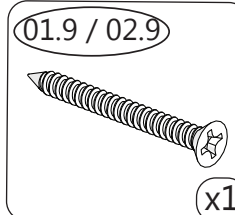

Tools Needed

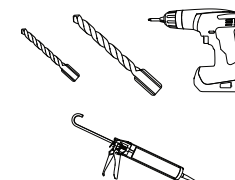

Product Maintenance

BASES and BACKWALLS: To ensure long lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could permanently scratch or dull the surface.

GLASS: To ensure long lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface of the glass.

HARDWARE: To ensure a long lasting finish: wipe off all metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft clean-cloth.

Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with the grain (not across the grain). Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.



To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. Contact DreamLine® with any questions or concerns.

ELEGANCE PLUS Maintenance Checklist

- ☐ **Wall and Glass Profiles** are plumb and tight to the wall
 - ☐ **Decorative Covers** and **ST4.0×10mm Pan Head Screws** are securing both profiles together
- ☐ **Pivot Assembly bolts** are tightly securing the **Door Glass** in the pivot hinges.
- ☐ **Handle** is tightly secured to the **Door Glass**
 - ☐ **Handle set screws** are tight
- ☐ **Bottom Sweep Vinyl** is secured to the bottom of the **Door Glass**
- ☐ Remove the vinyl seals to inspect the edges of the Door Glass for concealed damage
 - ☐ **Damaged glass must be replaced!**
- ☐ Replace damaged or missing vinyl seals
- ☐ Inspect and replace silicone as necessary to prevent water leakage

Troubleshooting

Problem/Symptom	Suggested Solution
Missing Parts	• Check all shipping/packaging material for missing parts/components. • If not found, contact DreamLine Customer Support [1-866-731-2244] to order factory part replacement.
Door Glass (#03) does not close flush with the Strike Profile	• Inspect the Bottom Sweep Vinyl (#11) and ensure the orientation of the vinyl is installed correctly. [see Step 15] • Check that the Strike Profile is installed correctly so the Door Glass closes flush with the Strike Vinyl Seal (#15) [see Steps 10-13] • Check that the reveal between the door and strike vinyl is consistent /even. Use a level and adjust the assembly as necessary [see Step 13]
During operation the shower assembly shifts within the wall profile	• Check that the screws connecting the pivot-side Glass Profiles and Wall Profiles are installed correctly attaching the two extrusions together. [see Step 14] • Install all ST4.0×10mm Pan Head Screws (#09) and Decorative Covers (#12) to secure the Glass Profiles to the Wall Profiles [see Step 14] • Open the Door Glass (#03) and observe the bottom Pivot Assembly-B (#02). It may be necessary to screw the bottom pivot assembly down into the threshold [see Page 26]
Water Leakage: beneath the bottom Pivot Assembly-B (#02)	• Inspect the silicone caulk application; Remove and replace if necessary • Check that the Bottom Sweep Vinyl (#11) makes contact with the Pivot Assembly-B (#02) when the door is in the closed position • Direct the water flow away from the area
Water Leakage: beneath the Bottom Sweep Vinyl (#11)	• Inspect and ensure the threshold is pitched correctly into the shower • Check that the Bottom Sweep Vinyl (#11) is installed correctly onto bottom of the Door Glass (#03) [see Step 15] • Direct the water flow away from the area
Pivot Assemblies are binding on hinge-side Vinyl Insert	• Use a utility razor knife to notch out the hinge-side Vinyl Insert around the pivots.



Prior to contacting DreamLine® Customer Service, please have the following information readily available:

- Purchase Order Information
 - Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number (see Pages 29-35)
- Factory Part Information (see Pages 29-35)

Factory Parts Information

Single Door Model

34"×72" ELEGANCE PLUS - SHDR-443400-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6×12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6×12 Countersunk Hex Head Screw	1 pc
03	01007008	Door Glass	1 pc
04	042430 11 -1794 / 042430 41 -1794 / 042430 61 -1794 / 042430 91 -1794	Glass Profile (for Pivot Side)	1 pc
05	042430 11 -1828 / 042430 41 -1828 / 042430 61 -1828 / 042430 91 -1828	Glass profile (for Strike side)	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 11 -1828 / 042440 41 -1828 / 042440 61 -1828 / 042440 91 -1828	Wall Profile	2 pc
08	090107	ST4.0 x 40mm Pan Head Screw	8 pcs
09	091101	ST4.0 x 10mm Pan Head Screw	6 pcs
10	07550045	Wall Anchor 8mm (5/16 in)	4 pcs
11	063015100-0718	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	6 pcs
13	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
15	063067000-1828	Vinyl insert (rigid) for glass profile (strike side)	1 pc

BOLD digit indicates finish color:

1 = Chrome

4 = Brushed Nickel

6 = Oil Rubbed Bronze

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 6" Inline Panel

30"×72" ELEGANCE PLUS - SHDR-443060-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6×12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6×12 Countersunk Hex Head Screw	1 pc
03	010071003	Door Glass	1 pc
04	042430 1 1-1794 / 042430 4 1-1794 / 042430 6 1-1794 / 042430 9 1-1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 1 1-1828 / 042440 4 1-1828 / 042440 6 1-1828 / 042440 9 1-1828	Wall Profile	1 pc
09	041540 1 1-1930 / 041540 4 1-1930 / 041540 6 1-1930 / 041540 9 1-1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0540	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137095	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	7 pcs
29	041540 1 1-1118 / 041540 4 1-1118 / 041540 6 1-1118 / 041540 9 1-1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc

BOLD digit indicates finish color:

1 = Chrome

4 = Brushed Nickel

6 = Oil Rubbed Bronze

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 6-1/2" Inline Panel

34"×72" ELEGANCE PLUS - SHDR-443465-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6×12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6×12 Countersunk Hex Head Screw	1 pc
03	010071005	Door Glass	1 pc
04	042430 1 1-1794 / 042430 4 1-1794 / 042430 6 1-1794 / 042430 9 1-1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 1 1-1828 / 042440 4 1-1828 / 042440 6 1-1828 / 042440 9 1-1828	Wall Profile	1 pc
09	041540 1 1-1930 / 041540 4 1-1930 / 041540 6 1-1930 / 041540 9 1-1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0584	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137117	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	7 pcs
29	041540 1 1-1118 / 041540 4 1-1118 / 041540 6 1-1118 / 041540 9 1-1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc

BOLD digit indicates finish color:

1 = Chrome

4 = Brushed Nickel

6 = Oil Rubbed Bronze

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 14" Inline Panel

39-3/4" x 72" ELEGANCE PLUS - SHDR-444014-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6 x 12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
03	010071004	Door Glass	1 pc
04	042430 11 -1794 / 042430 41 -1794 / 042430 61 -1794 / 042430 91 -1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 11 -1828 / 042440 41 -1828 / 042440 61 -1828 / 042440 91 -1828	Wall Profile	1 pc
09	041540 11 -1930 / 041540 41 -1930 / 041540 61 -1930 / 041540 91 -1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0540	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137099	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	8 pcs
29	041540 11 -1118 / 041540 41 -1118 / 041540 61 -1118 / 041540 91 -1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc

BOLD digit indicates finish color:

- 1** = Chrome
- 4** = Brushed Nickel
- 6** = Oil Rubbed Bronze
- 9** = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 22" Inline Panel & 12" L-Bar™

46"×72" ELEGANCE PLUS - SHDR-444622-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6×12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6×12 Countersunk Hex Head Screw	1 pc
03	010071003	Door Glass	1 pc
04	042430 11 -1794 / 042430 41 -1794 / 042430 61 -1794 / 042430 91 -1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 11 -1828 / 042440 41 -1828 / 042440 61 -1828 / 042440 91 -1828	Wall Profile	1 pc
09	041540 11 -1930 / 041540 41 -1930 / 041540 61 -1930 / 041540 91 -1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0496	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137103	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	9 pcs
29	041540 11 -1118 / 041540 41 -1118 / 041540 61 -1118 / 041540 91 -1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc
30	0712 1 050 / 0712 4 050 / 0712 6 050 / 0712 9 050	L-Bar Support Bracket Reversible 12in for 10mm (3/8 in) Glass	1 pc

BOLD digit indicates finish color:

1 = Chrome

4 = Brushed Nickel

6 = Oil Rubbed Bronze

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 22-1/2" Inline Panel & 12" L-Bar™

51-3/4" x 72" ELEGANCE PLUS - SHDR-4452225-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6 x 12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
03	010071006	Door Glass	1 pc
04	042430 1 1-1794 / 042430 4 1-1794 / 042430 6 1-1794 / 042430 9 1-1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 1 1-1828 / 042440 4 1-1828 / 042440 6 1-1828 / 042440 9 1-1828	Wall Profile	1 pc
09	041540 1 1-1930 / 041540 4 1-1930 / 041540 6 1-1930 / 041540 9 1-1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0629	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137121	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	9 pcs
29	041540 1 1-1118 / 041540 4 1-1118 / 041540 6 1-1118 / 041540 9 1-1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc
30	0712 1 050 / 0712 4 050 / 0712 6 050 / 0712 9 050	L-Bar Support Bracket Reversible 12in for 10mm (3/8 in) Glass	1 pc

BOLD digit indicates finish color:

1 = Chrome

4 = Brushed Nickel

6 = Oil Rubbed Bronze

9 = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.

Factory Parts Information

Door with 30-1/2" Inline Panel & 18" L-Bar™

58" x 72" ELEGANCE PLUS - SHDR-4458305-##		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
01	0702 1 222 / 0702 4 222 / 0702 6 222 / 0702 9 222	Pivot Assembly-A	1 pc
02	0702 1 223 / 0702 4 223 / 0702 6 223 / 0702 9 223	Pivot Assembly-B	1 pc
01.9 / 02.9	092108	ST4.2 x 40mm Countersunk Screw	1 pc
01.10 / 02.10	095202	M6 x 12 Hex Socket Head Cap Screw	1 pc
01.11 / 02.11	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
03	010071005	Door Glass	1 pc
04	042430 1 1-1794 / 042430 4 1-1794 / 042430 6 1-1794 / 042430 9 1-1794	Glass Profile (for Pivot Side)	1 pc
05	063010100-1829	180 Degree Inline Strike Vinyl for 10mm (3/8 in) Glass	1 pc
06	0722 1 042 / 0722 4 042 / 0722 6 042 / 0722 9 042	Back-to-Back 8 in. Square Handle Assembly for 10mm (3/8 in) Glass	1 pc
07	042440 1 1-1828 / 042440 4 1-1828 / 042440 6 1-1828 / 042440 9 1-1828	Wall Profile	1 pc
09	041540 1 1-1930 / 041540 4 1-1930 / 041540 6 1-1930 / 041540 9 1-1930	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1930mm (76")	1 pc
10	063015100-0584	Bottom Sweep Vinyl for 10mm (3/8 in) Glass	1 pc
11	010137123	Inline Panel Glass	1 pc
12	0755 1 011 / 0755 4 011 / 0755 6 011 / 0755 9 011	Decorative Cover and Washer	3 pcs
13	07552148	Wall Anchor 8mm (5/16 in)	7 pcs
14	063067000-1794	Vinyl insert (rigid) for glass profile (pivot side)	1 pc
16	094201	M6 x 12 Countersunk Hex Head Screw	1 pc
17	091107	ST4.0 x 40mm Pan Head Screw	5 pcs
19	091101	ST4.0 x 10mm Pan Head Screw	3 pcs
23	092108	ST4.2 x 40mm Countersunk Screw	11 pcs
29	041540 1 1-1118 / 041540 4 1-1118 / 041540 6 1-1118 / 041540 9 1-1118	U-Channel 1" Aluminum for 10mm (3/8 in) Glass x 1118mm (44")	1 pc
30	0712 1 150 / 0712 4 150 / 0712 6 150 / 0712 9 150	L-Bar Support Bracket Reversible 18in for 10mm (3/8 in) Glass	1 pc

BOLD digit indicates finish color:

- 1** = Chrome
- 4** = Brushed Nickel
- 6** = Oil Rubbed Bronze
- 9** = Satin Black

Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.

Complete **Warranty** information is available on **DreamLine.com**.



TEL: 866-731-2244
FAX: 866-857-3638
DREAMLINE.COM




For more information on DreamLine® Shower Doors and Enclosures please visit **DreamLine.com**


INLINE PANEL (STYLE F)

INLINE PANEL GLASS INSTALLATION INSTRUCTIONS

PLEASE REVIEW THIS ENTIRE MANUAL PRIOR TO INSTALLATION

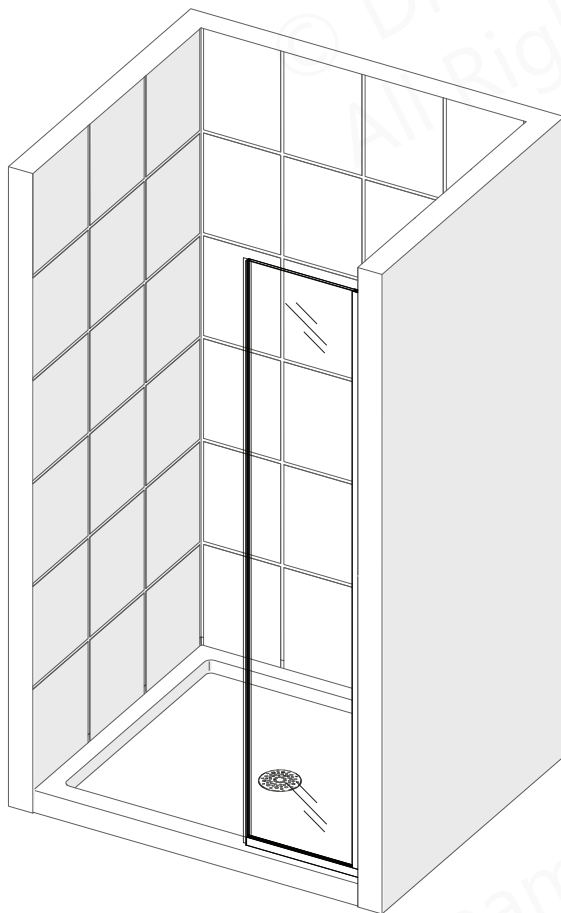

right-hand inline panel installation shown

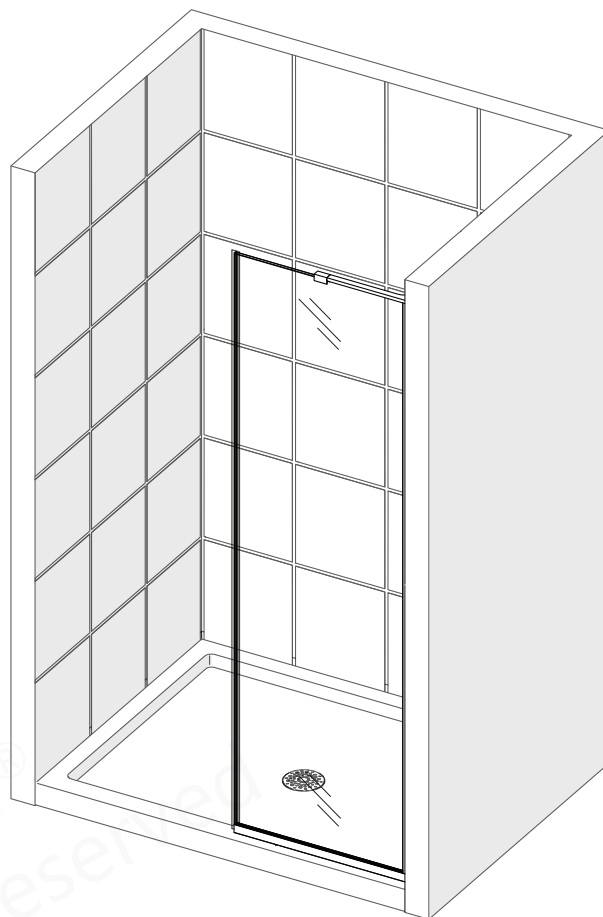

*with L-Bar™ support bracket

*L-Bar™ only included with ELEGANCE PLUS models
with nominal panel glass sizes 22", 22-1/2", 30", 30-1/2" & 34"

IMPORTANT!

DreamLine® reserves the right to alter, modify or redesign products at any time without prior notice for the purpose of product improvement and customer experience. Please refer to the model's web page on **DreamLine.com** for the latest technical drawings, installation manuals, warranty information or additional product details.

Do Not Return Product to the Store. Contact DreamLine® with any questions



Questions?

Please Call **DreamLine Customer Support: 1-866-731-2244**
Hours of Operation M-F 8AM - 6PM EST

Support@DreamLine.com





This model is treated with DreamLine's exclusive ClearMax™ Glass technology. This is a specially formulated coating that prevents the build up of soap and water spots.

Install the surface with the ClearMax™ label towards the inside of the shower. Please note that depending on the model, the glass may be coated on either one or both surfaces.

For best results, squeegee the glass after each use and dry with a soft cloth.

Record the following purchase information for your records or in the event you need to contact DreamLine®:

Purchase Order
Number _____

Store/Vendor
Purchased From _____

Installation Date _____

OD Number
(optional) _____
located on the shipping box or label
if available.

Installed By: _____

SKU Number _____

Table of Contents

Section Title	Page #
ClearMax™ Coating Information	—
Warnings and General Preparation	2
Model Specific Preparation	3
Tools	4
Detailed Diagram of Inline Panel Glass Components	5
Parts List	6
Installation Steps	7-26
180° Strike Vinyl Installation	21
Reversible L-Bar™ Installation (*for ELEGANCE PLUS model only)	23-26
Product Maintenance	27
Reversible L-Bar™ Feature	28-29
Troubleshooting	30
Factory Parts Information	31
Product SKUs	32-33

Symbol Legend



TIP - for ease of installation.



CORRECT - recommended.



NOTE - take note of special feature; additional information.




INCORRECT - not recommended.



REQUIRED - requires special attention; signifies a warning.

Average Installation Time

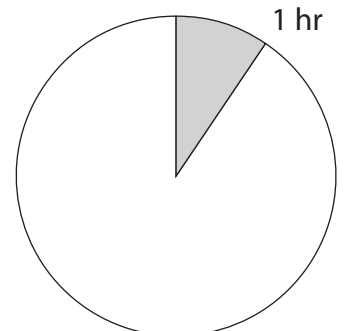



IMPORTANT

- DreamLine® reserves the right to alter, modify or redesign products any time without prior notice for product improvement and customer experience. Please refer to the model's web page on DreamLine.com for the latest technical drawings, installation manuals, warranty information or additional product details.
- This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.
- The safety of any installation is the responsibility of the installer.
- Professional installation recommended. (*All Models*)
- Professional installation required. (*Enigma Series*)
- To prevent damage or serious injury, Do Not lean against the installed panel/door/glass.
- To prevent damage or serious injury: Do Not attempt to lift or move a heavy lite of glass alone. Use an assistant and/or a professional grade glass suction cup.
- The installation of some models may require drilling down into the threshold. Contact the manufacturer of the base, tub, or threshold material with any questions regarding the drilling of holes into their product.
- All drawings in this installation manual are for illustrative purposes only and are not drawn to scale.

TEMPERED GLASS WARNING

- Your Shower Door Glass Could Shatter Without Warning if Improperly Installed or Mishandled
- Do Not install or operate a shower door if the glass has chipped corners, slivered edges or is otherwise damaged and/or has been dropped or banged into a hard surface such as tile, marble or glass.
- **The main causes of tempered glass breakage are:**
 - Improper handling, storage or installation
 - Misuse/abuse
 - Lack of maintenance
 - Failure to replace damaged glass
 - **Improper handling during storage, unpacking and installation:**
 - Corners and edges are the most susceptible area to damage on a lite of tempered glass and should be protected and handled with care during storage, unpacking, installation and operation. A concentrated point of pressure or impact with a surface harder than itself may cause the tempered glass to shatter. The tempered glass may release immediately, within several hours or even days later.
 - **Incorrect installation of door hardware, rollers, hinges, channels, stopper or glass:**
 - Improper installation may include: loose hardware and/or lack of proper gaskets between the hardware and glass. Additionally, improper alignment of guide rails, wall profiles or other hardware during installation or operation may place stress on the glass edges and cause it to break.
 - This product must be installed by a professional and experienced installer familiar with the safe handling of tempered glass.
 - **Improper use of this product:**
 - Aggressively opening or closing the door may cause trauma to the glass, which can lead to breakage. This may occur immediately or hours or even days later.
 - **The shower door hardware and glass should be inspected periodically:**
 - Instruct the homeowner how to perform a periodic inspection of the shower hardware and glass - some minor adjustments may be necessary based upon the use (or misuse) of the shower door. Ensure that the hardware remains tight and that the door alignment and operation are correct. Any adjustments should be made upon discovery to prevent damage to the product.
 - Additional considerations should be given to the installation of frameless tempered glass products in households with young children or an elderly person due to an increased chance of improper handling. In such cases, alternatives such as shower curtains or grab bars should be considered.

GENERAL PREPARATION

- After opening all boxes and packages, read this introduction carefully. Check that all the items are included in the package by marking off the components on the "Detailed Diagram of Product Components" page. Examine all boxes and packages for shipping damage. If the unit has been damaged, has a finishing defect, or is missing parts; please contact our Customer Support department within 3 business days of the delivery date. **Please note that DreamLine® will not replace any damaged products or missing parts free of charge after 3 business days or if the product has been installed.** Please contact DreamLine® if you have any questions.
- **Please note that you should refer to your local building codes with questions on installation compliance standards. Building and plumbing codes may vary by location, and DreamLine® is not responsible for code compliance standards for your project and will not accept any returns.**
- If this unit is going to be installed in a new construction, install all the required plumbing and drainage before installing the shower. **Use a competent and licensed (if required by local code) plumber for all plumbing installation.**
- Make sure that prior to beginning the installation, the surfaces are leveled and solid and will be able to support the total weight of the unit. Also make sure the walls are at right angles. Irregular installation surface level, radius corners or improper angle of side walls will result in serious problems for your installation. Please note that some adjustments and drilling will be necessary during the installation process.
- Protect all primary surfaces of the product during installation. Never set your glass down directly onto a tile floor. Leave corner protectors in place until it is necessary to remove them. Always use a piece of wood or cardboard to protect the bottom edge and corners of the glass prior to and during installation.
- This unit must be installed upon a finished threshold and against finished walls.
- *DreamLine® shower doors are not designed to be installed into a fiberglass surround due to the radius corners and lack of a solid surface to mount the hardware.*

WARNING: TO AVOID THE RISK OF DAMAGE OR INJURY:

- **Follow all recommendations and requirements as shown in the installation instructions.**
- Perform a thorough inspection of the glass and all parts for any damage prior to installation. Any damage to tempered glass can cause breakage.
Do Not install damaged glass!
- Do Not install or operate a shower or tub door if the glass has chipped corners, slivered edges or is otherwise damaged. Do Not install or operate a shower or tub door that has been dropped or banged into a hard surface such as tile, marble or glass.
- **CAUTION:** Contact with any hard surface can damage tempered glass and cause it to shatter.
- This product uses tempered glass. Glass cannot be cut after it has been tempered.
Do Not attempt to cut tempered glass.
- DreamLine® Glass Shower doors, Tub doors, Inline panels, and Return panels can shatter due to improper handling or lack of maintenance. Conduct periodic inspections of glass and all parts for possible damage, missing or loose parts.
- Always wear proper safety equipment such as: safety goggles, work gloves and appropriate footwear during the installation process.
- **WARNING. Risk of leakage and/or damage.** Follow all instructions regarding the application of silicone sealant or caulk. Allow 24 hours for the sealant to cure before the initial use of the shower or tub product. Follow the silicone manufacturer's recommendations regarding the use of their product.
- **Thoroughly read these instructions before installing or using this product.**
- **Leave this manual for the end-user of the product.**



This product should be installed by someone familiar with the construction requirements for this type of project and the care necessary for the safe installation and operation of the product.




Professional Installation recommended.

Model Specific Preparation









REQUIRED:


1/2" Out-of-Plumb Adjustment with the Inline Panel; Verify threshold and walls with a level

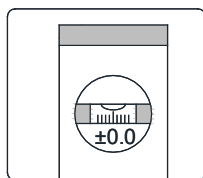


Threshold must be level

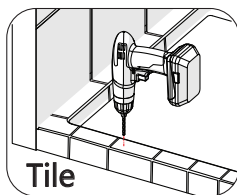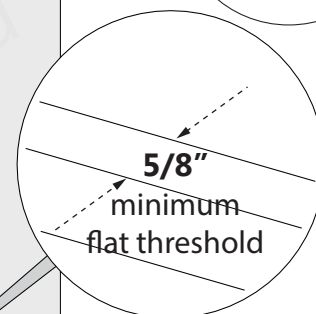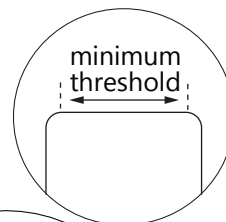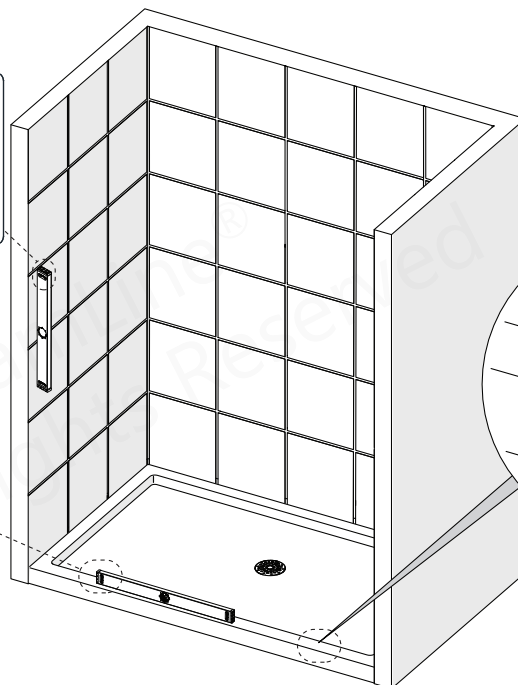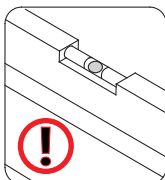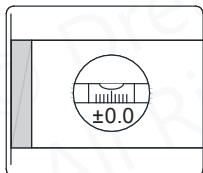

Tile

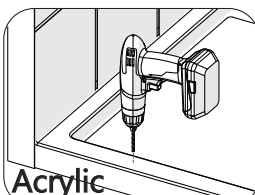

Acrylic

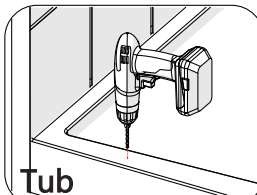

Tub




Contact the manufacturer of the base, tub or threshold material with any questions regarding the drilling of holes into their product.



NOTE

right-hand orientation shown

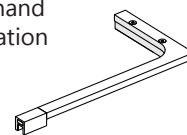


***For ELEGANCE**

PLUS model only:

this manual will describe the Inline Panel installation using the Reversible L-Bar™ in the right-handed orientation (as shown above).


To reverse the L-Bar™ orientation please refer to pages 28-29.

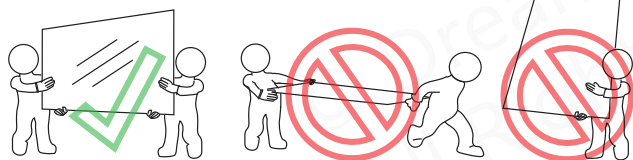

This door recommends professional installation. Two installers recommended.




This Inline Panel is reversible for right or left inline panel installation. The right-hand inline panel installation is shown as an example throughout this manual. For the left-hand inline panel installation, simply begin on the opposite wall and reverse the orientation of the installation steps shown.

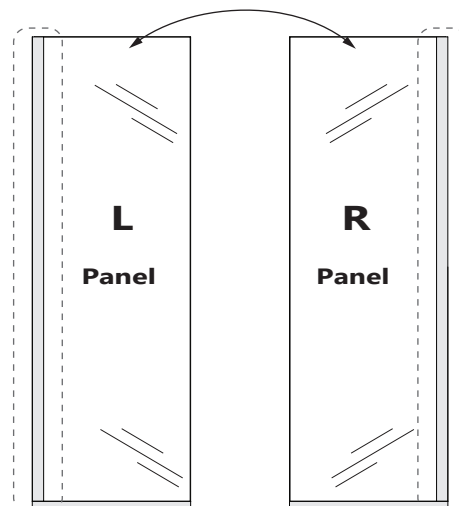


Tools




Level




Tape Measure




Pencil



#2 Phillips Screwdriver



100 % Silicone

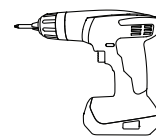

Power Drill



Drill Bit
Ø1/8"
(3mm)




Drill Bit
Ø3/16"
(4mm)




Drill Bit
Ø5/16"
(8mm)




#2 Phillips Driver Bit

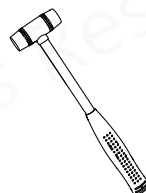

Soft Head Hammer




Hacksaw

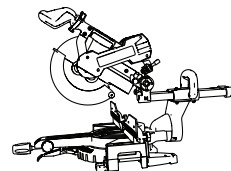

OR
Mitre Saw




Metal File




Safety Glasses



Work Gloves



Razor Knife

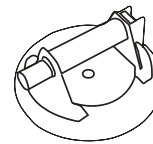

Professional-grade
Glass Suction Cup
(optional but recommended)



Measure the finished opening before proceeding with the installation to be sure that the correct model size has been ordered.

Use a good quality waterproof, mildew-resistant 100% silicone.


Cover the shower drain with tape prior to installation to prevent the loss of screws or small parts.

To prevent stripping the screw heads, set power drill to a low setting when installing screws.











Unpack your unit carefully and inspect it. Lay it out and identify all parts using the **Detailed Diagram** on page 5; and parts list in this manual as a reference. Before discarding the carton, check for small hardware bags that may have fallen to the bottom of the box. If any parts are damaged or missing, please contact DreamLine® for replacement. The shipping boxes may contain extra parts not used in your model configuration. Retain these installation instructions for future reference.

Detailed Diagram of Inline Panel Glass Components

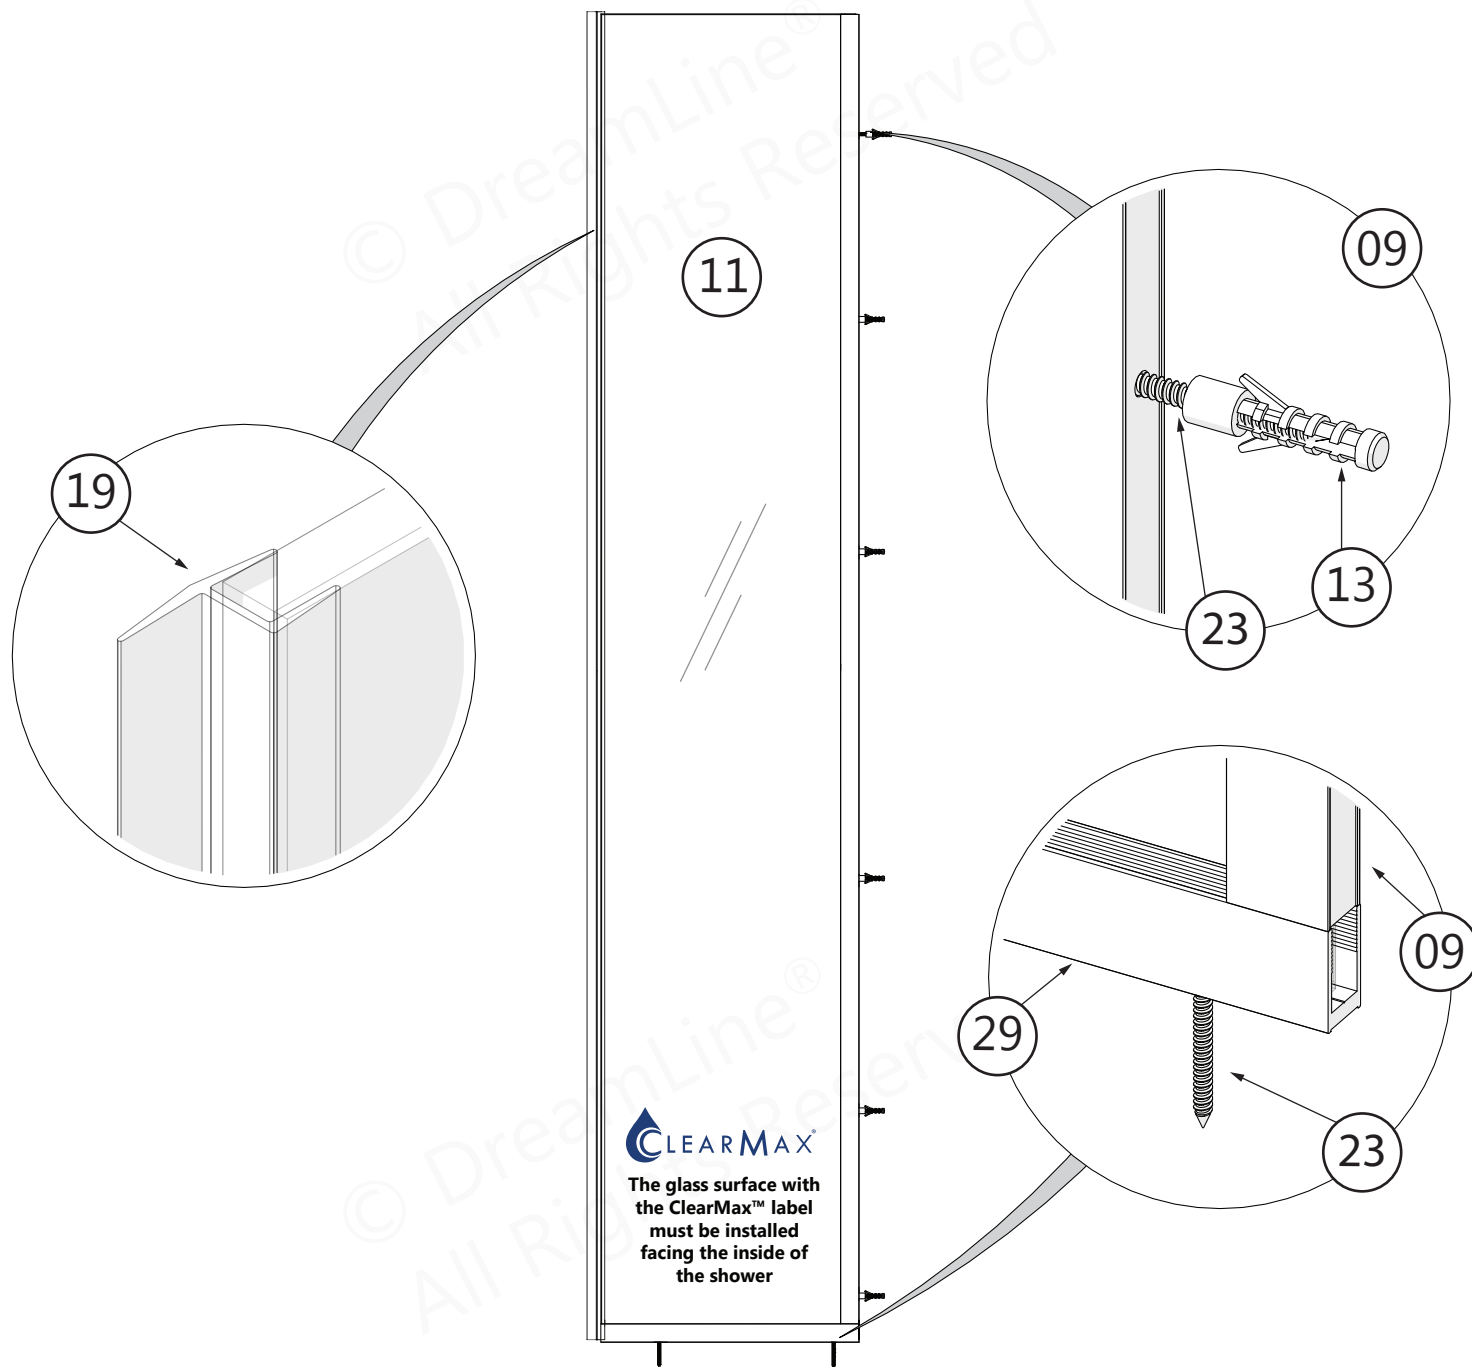


right-hand panel installation shown

Parts List

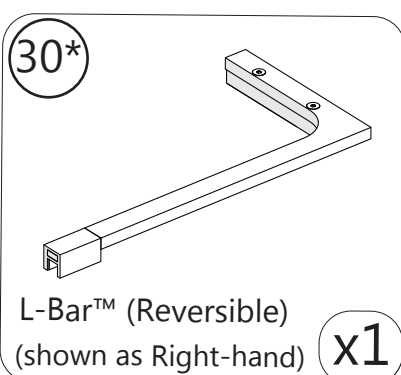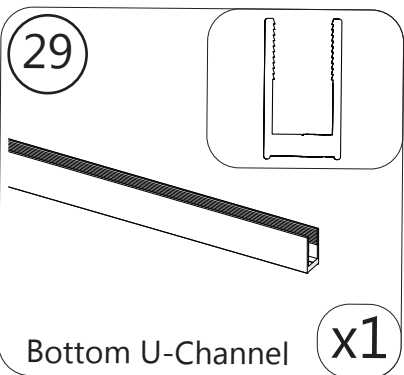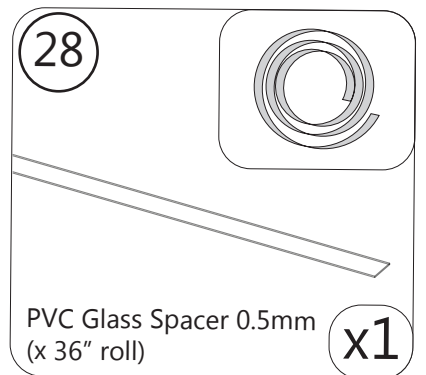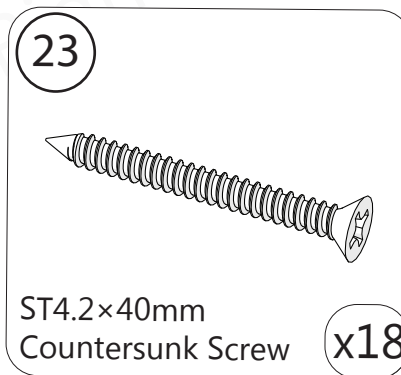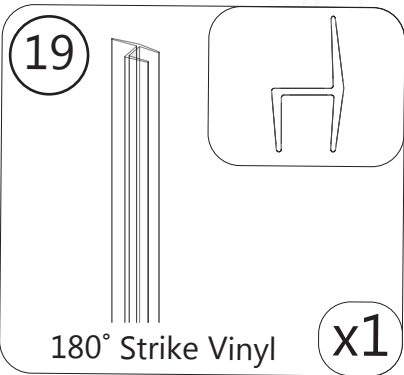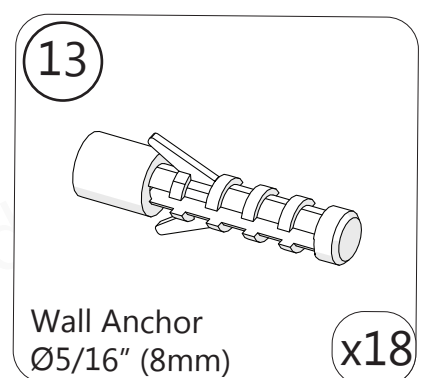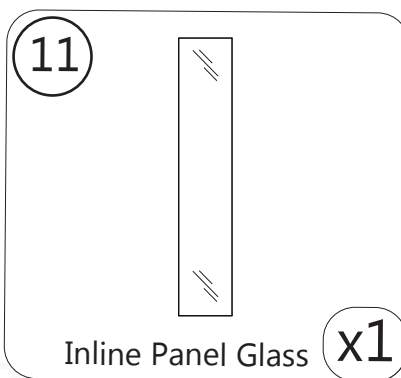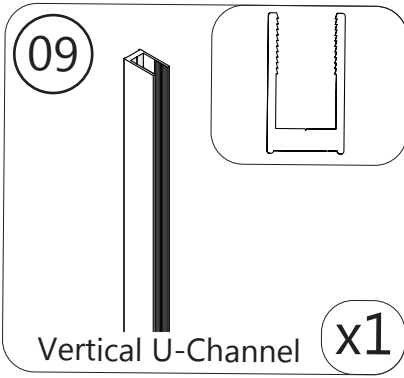

*L-Bar™ only available with ELEGANCE PLUS models with inline panel glass of: 22", 22-1/2", 30", 30-1/2", 34"

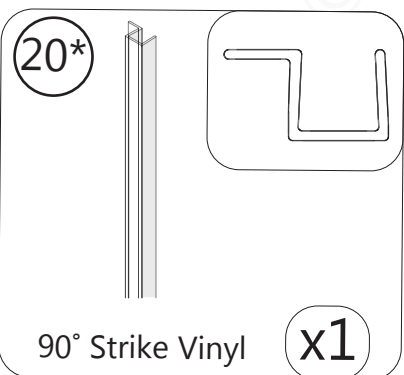


*90° Strike Vinyl is packaged with 30" or larger Panel Glass and is only used with specific enclosure models; The 90° Strike Vinyl is not used for this inline panel installation.

The Unidoor Plus, Unidoor-X or Elegance Plus Shower Door must be installed prior to proceeding with the following Inline Panel Glass installation instructions.




Please see the Single Shower Door Installation Manual packaged with the door glass (or the UNIDOOR-X installation manual that is packaged with the hinge panel glass for glass-to-glass hinge door models) for complete shower door installation instructions.


Before you begin the installation, recheck the finished opening size, the walls for plumb and the threshold for level. Specific model size information can be found on DreamLine.com

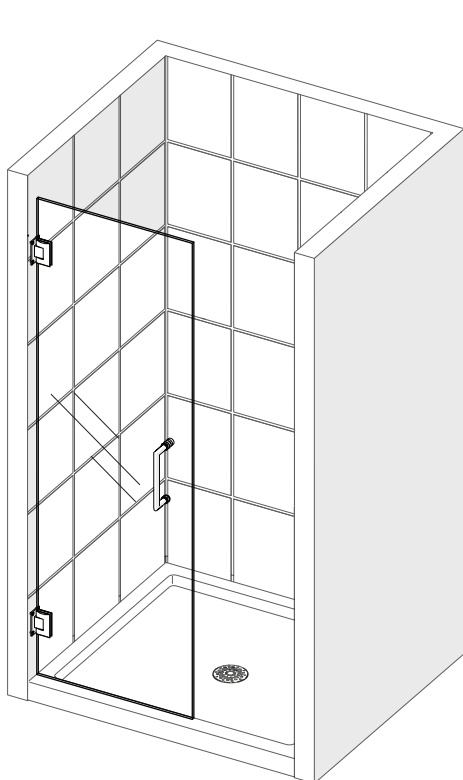

UNIDOOR PLUS
-Glass-to-wall Hinge door

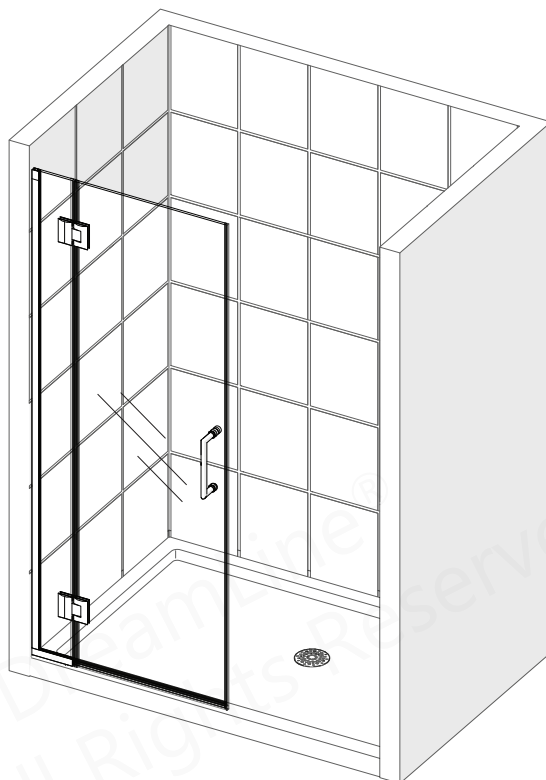

UNIDOOR-X
-Glass-to-glass Hinge door

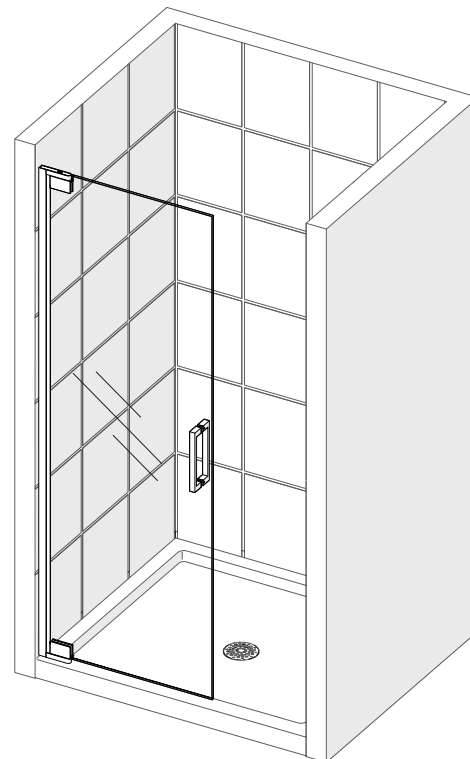

ELEGANCE PLUS
-Pivot Hinge door

1

Installation Steps



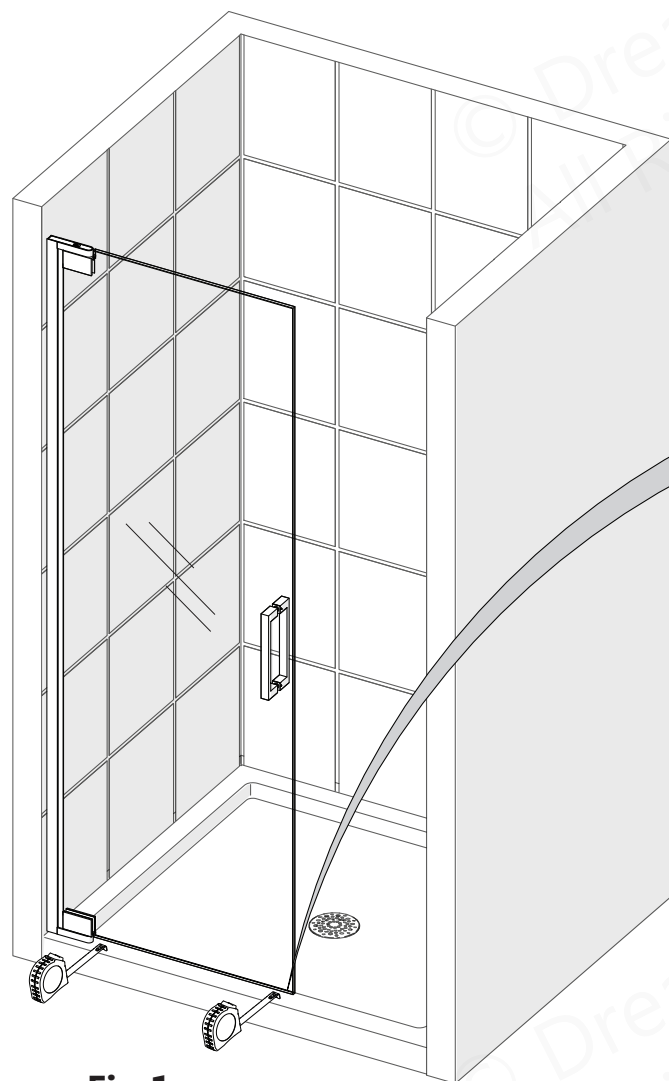


Fig 1

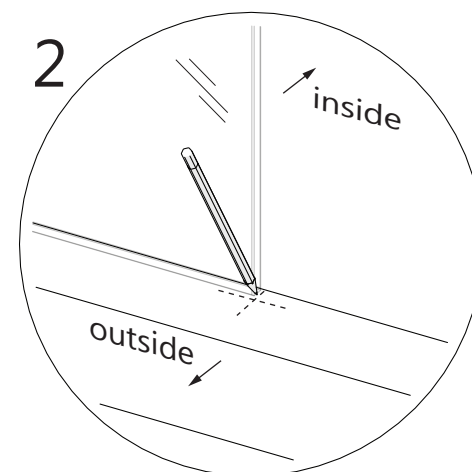


To assist with aligning the **Inline Panel Glass (#11)** with the pre-installed Door Glass, hold the door glass parallel with the outside of the threshold and mark a reference line on the threshold.

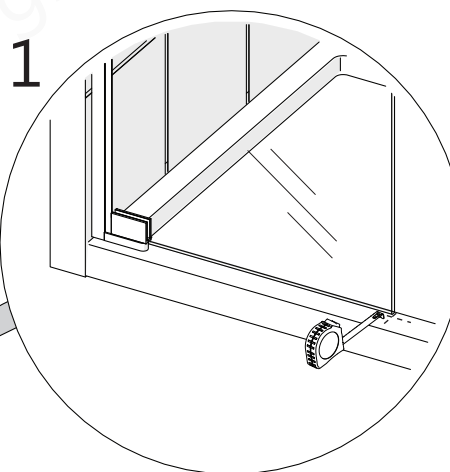

The ELEGANCE PLUS shower door is shown as an example throughout this manual

Tools Needed



2



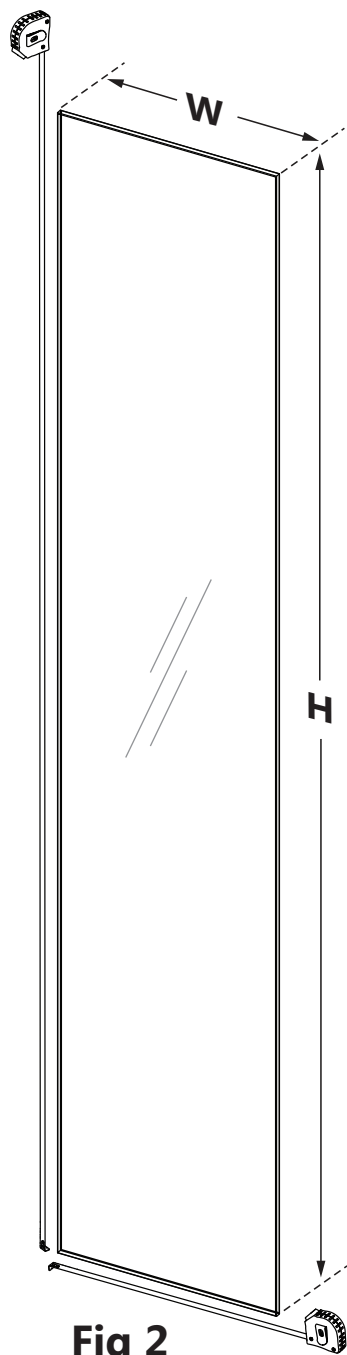


Fig 2


Glass
Width (W)

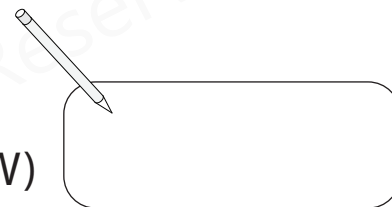


Glass
Height (H)

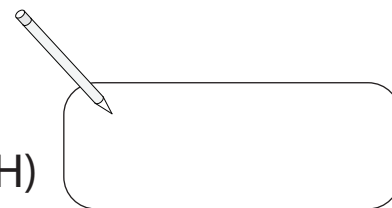

Parts Needed

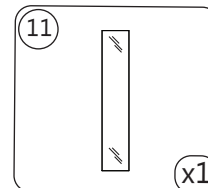


Tools Needed





3

Cut the Bottom U-Channel to:
Glass Width (W) + 3/16" = (L)** (see exception below)


Fig 3

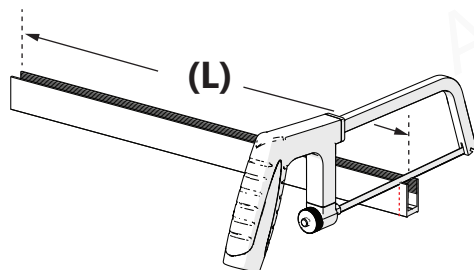

OR

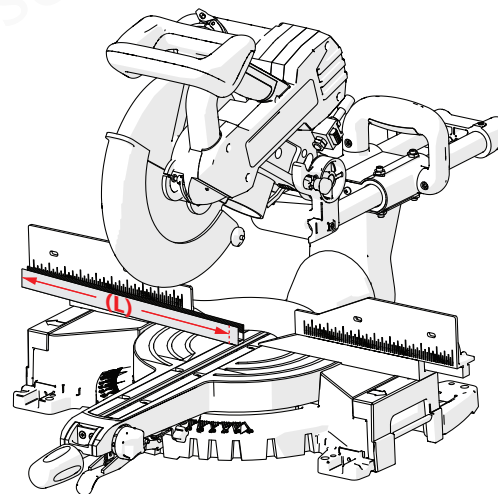

Use a metal file to deburr the cut end

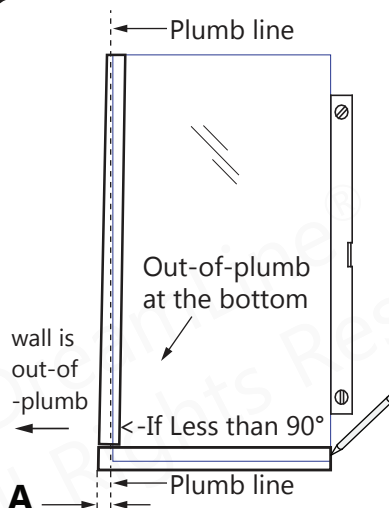


****EXCEPTION:**


If the wall is out-of-plumb at the bottom, measure that dimension as (A) and add (A) to the finished cut length of the U-channel (+1/2" max):

Glass Width + 3/16" + (A) = Finished cut length (L)

Parts Needed

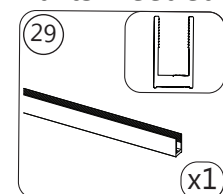



Tools Needed

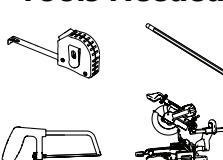

4

Cut the Vertical U-Channel to:
Glass Height H (-) 13/16" = V
 (for 72" model height, V= 71" (1803.6mm))

Fig 4

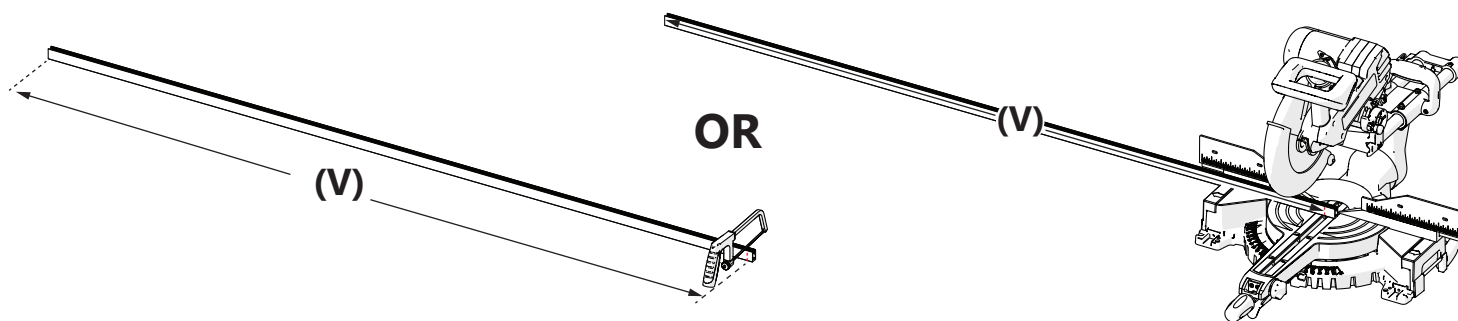


Use a metal file to
deburr the cut end




Cut the vertical u-channel to 71"
for the standard 72" model height

Parts Needed

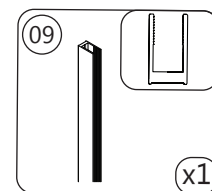

Tools Needed

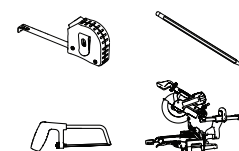

5

Fig 5a



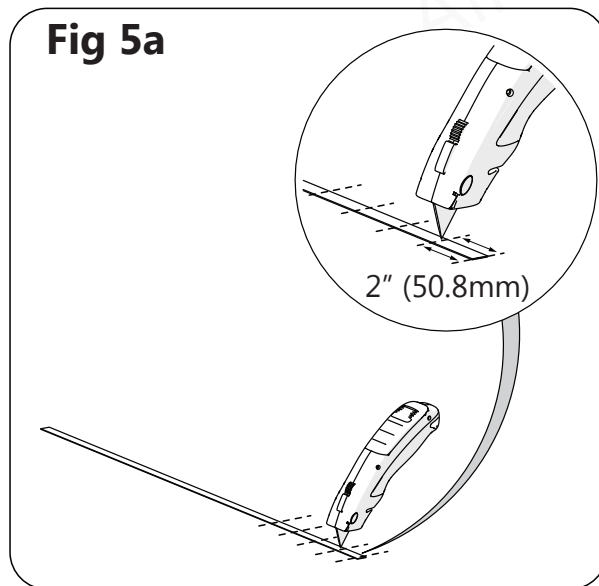


Fig 5b

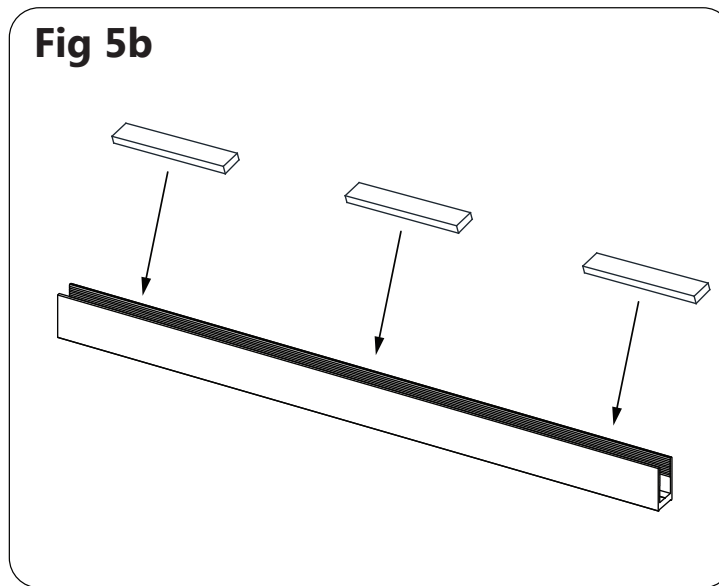

**Cut several 2" - 3" pieces of the PVC Glass Spacer 0.5mm (#28).
DO NOT install one long continuous piece into the Bottom (#29) U-Channel**

Parts Needed

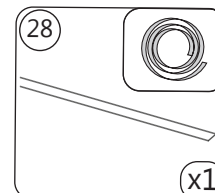

Tools Needed



6

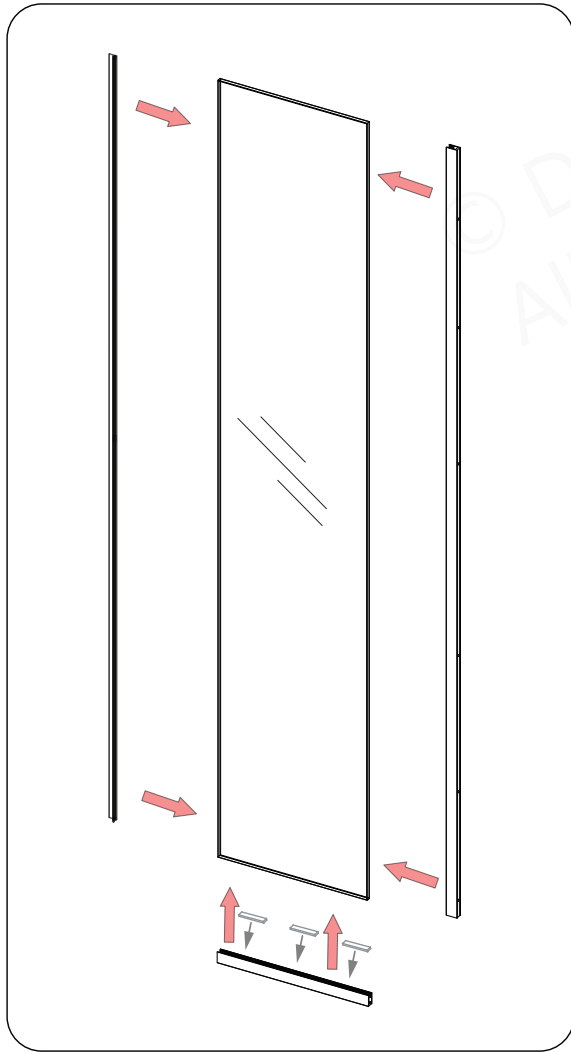


Fig 6a


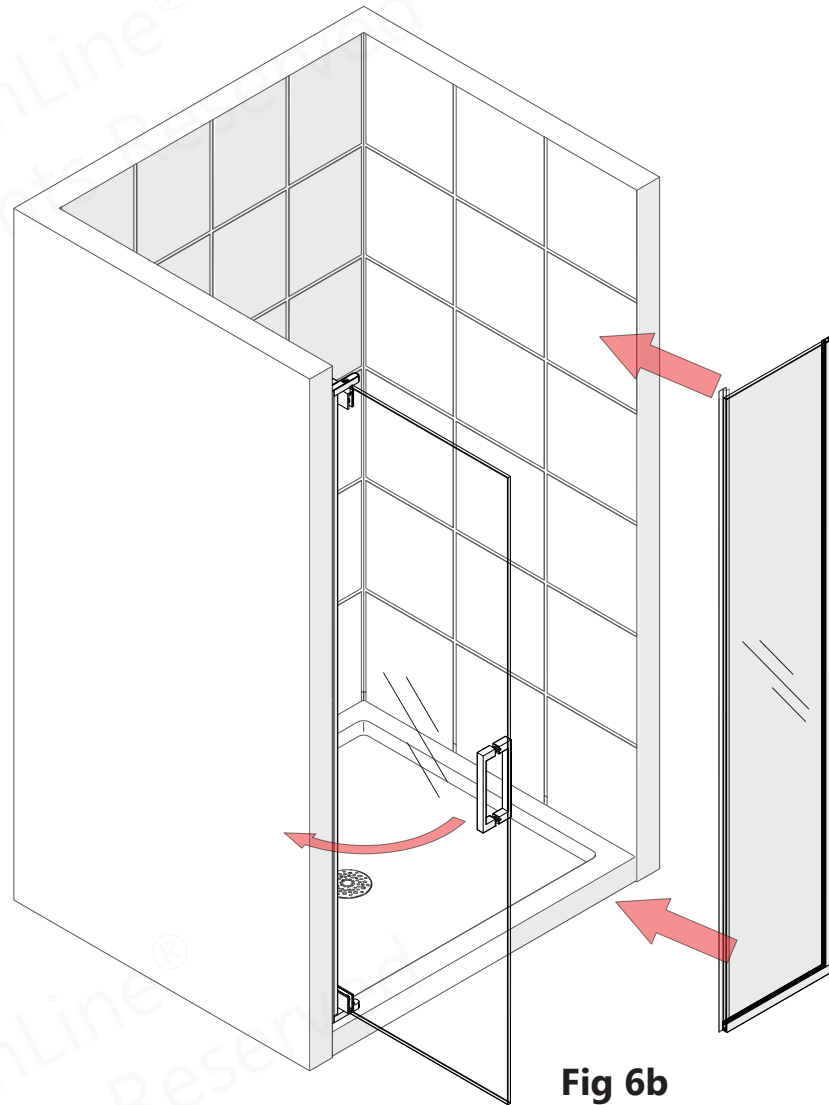



Fig 6b

NOTE

The **180° Strike Vinyl (#19)** will extend above the panel glass for now, but will be notched to fit around the bottom u-channel. See step#14.


Parts Needed

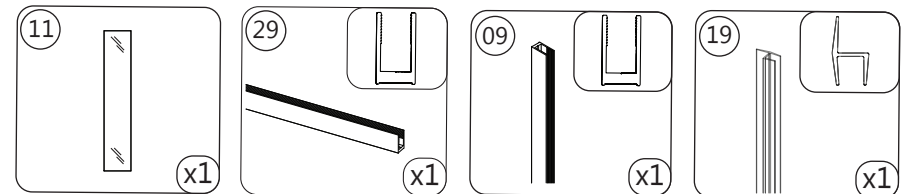



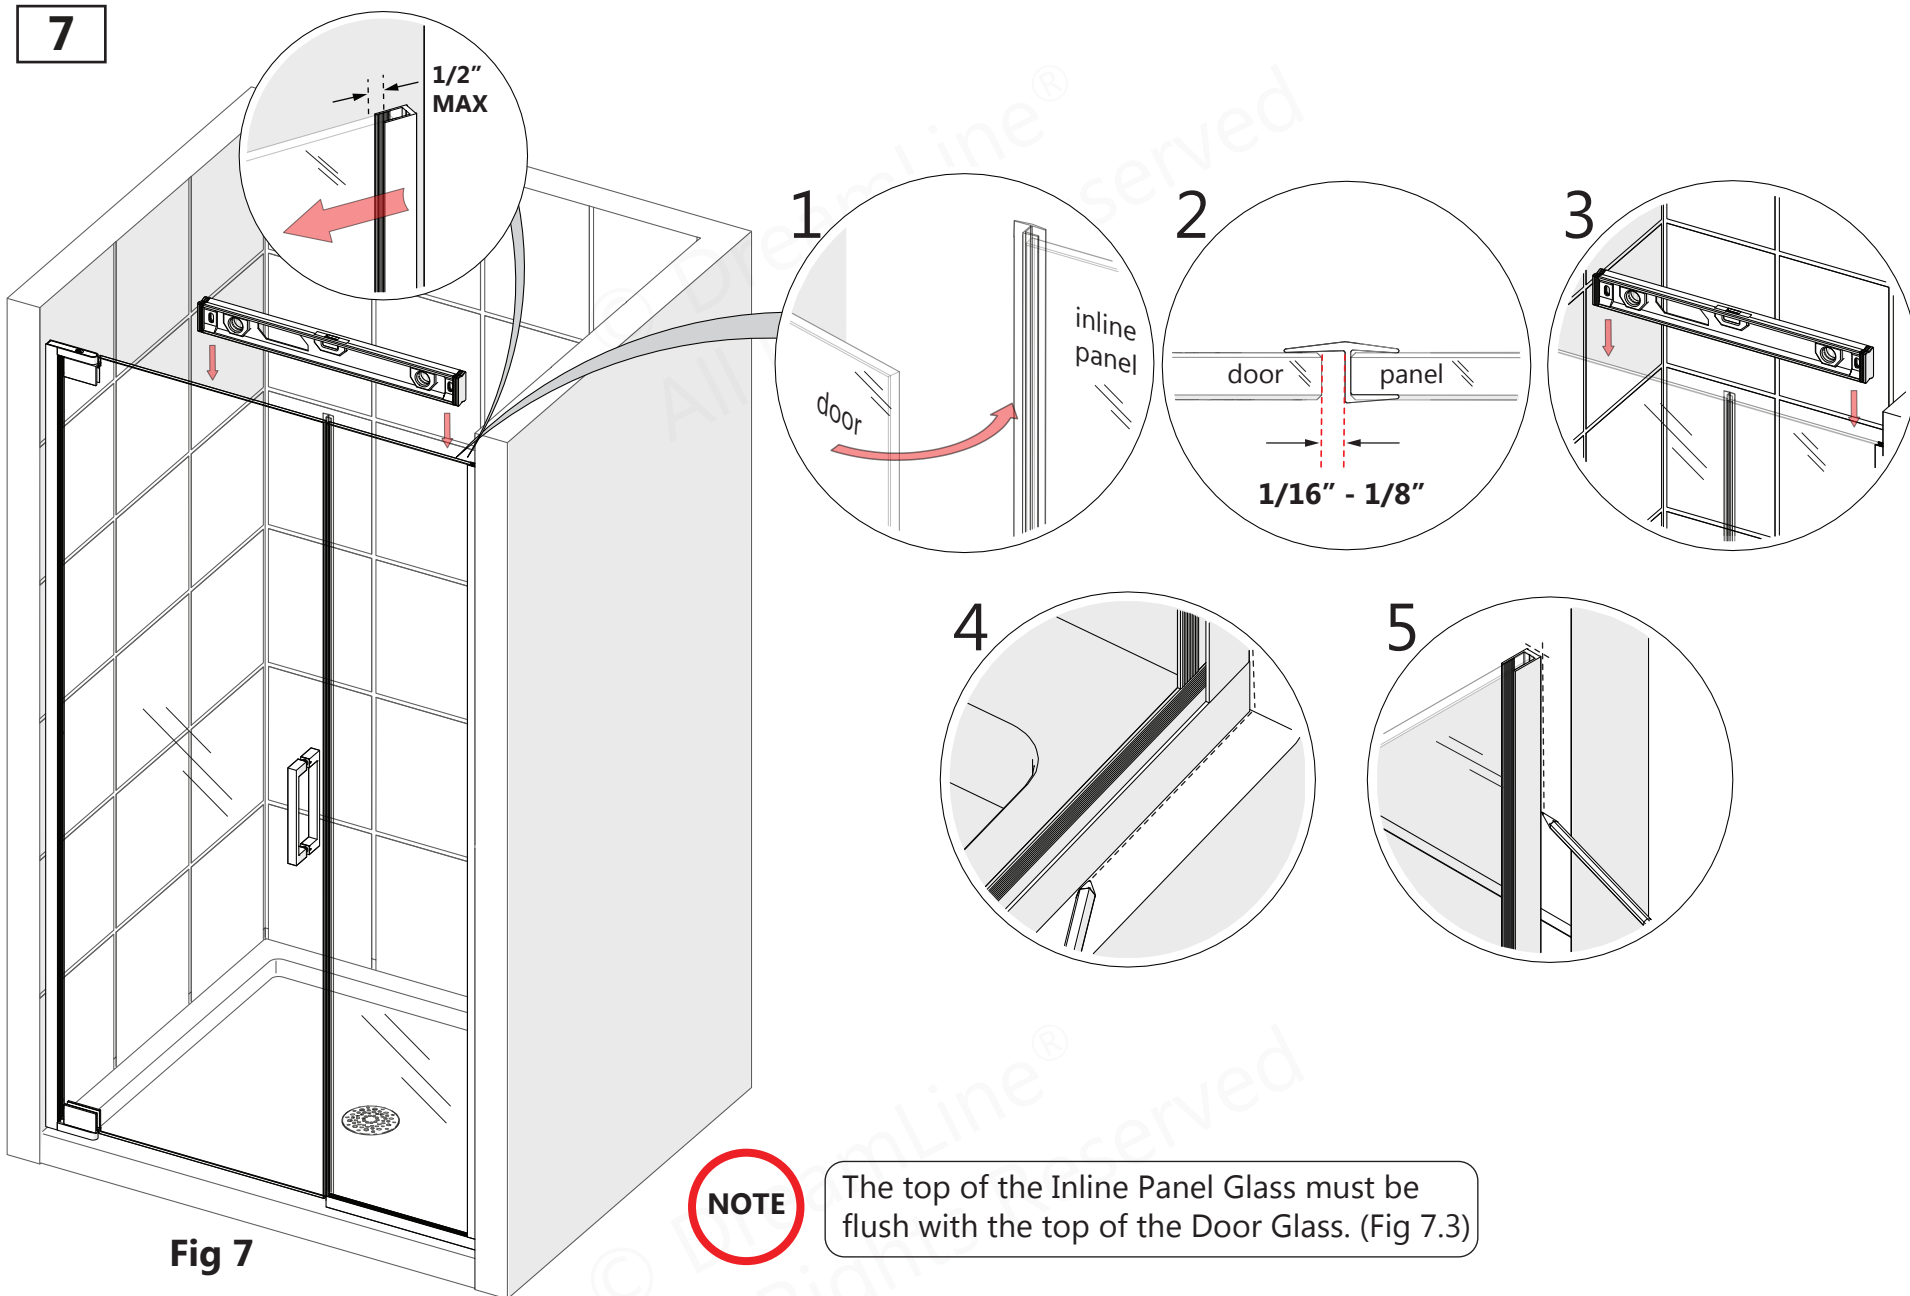


The **Vertical U-Channel (#09)** will allow for up to 1/2" of out-of-plumb adjustment. Confirm that the **Inline Panel Glass (#11)** is aligned properly with the installed door before marking the positions of the u-channels.

Tools Needed



8

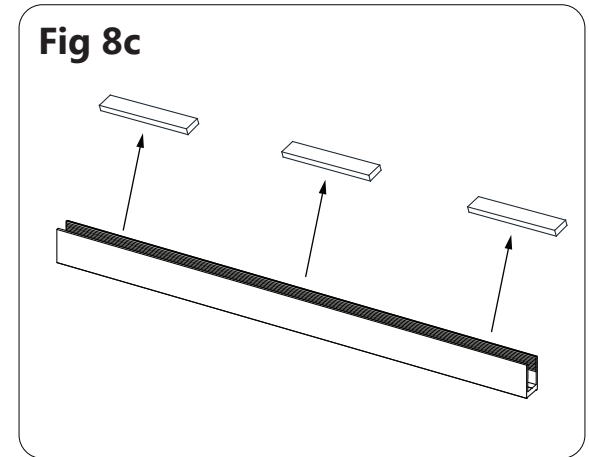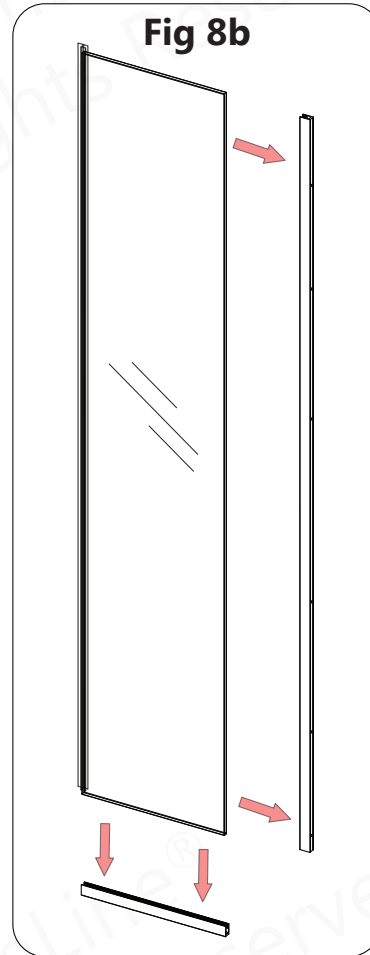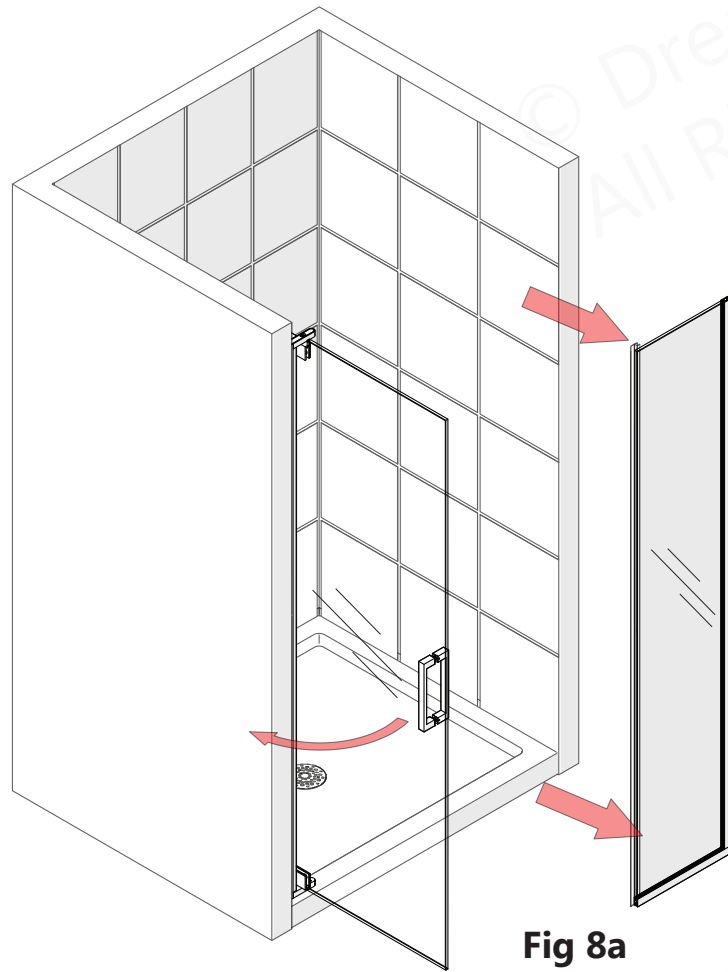

Remove the PVC Glass Spacers 0.5mm (#28) from the Bottom U-Channel (#29). (Fig 8c) These must be reinstalled in step #12.

9

NOTE

The surfaces need to be clean and free of debris before applying silicone.

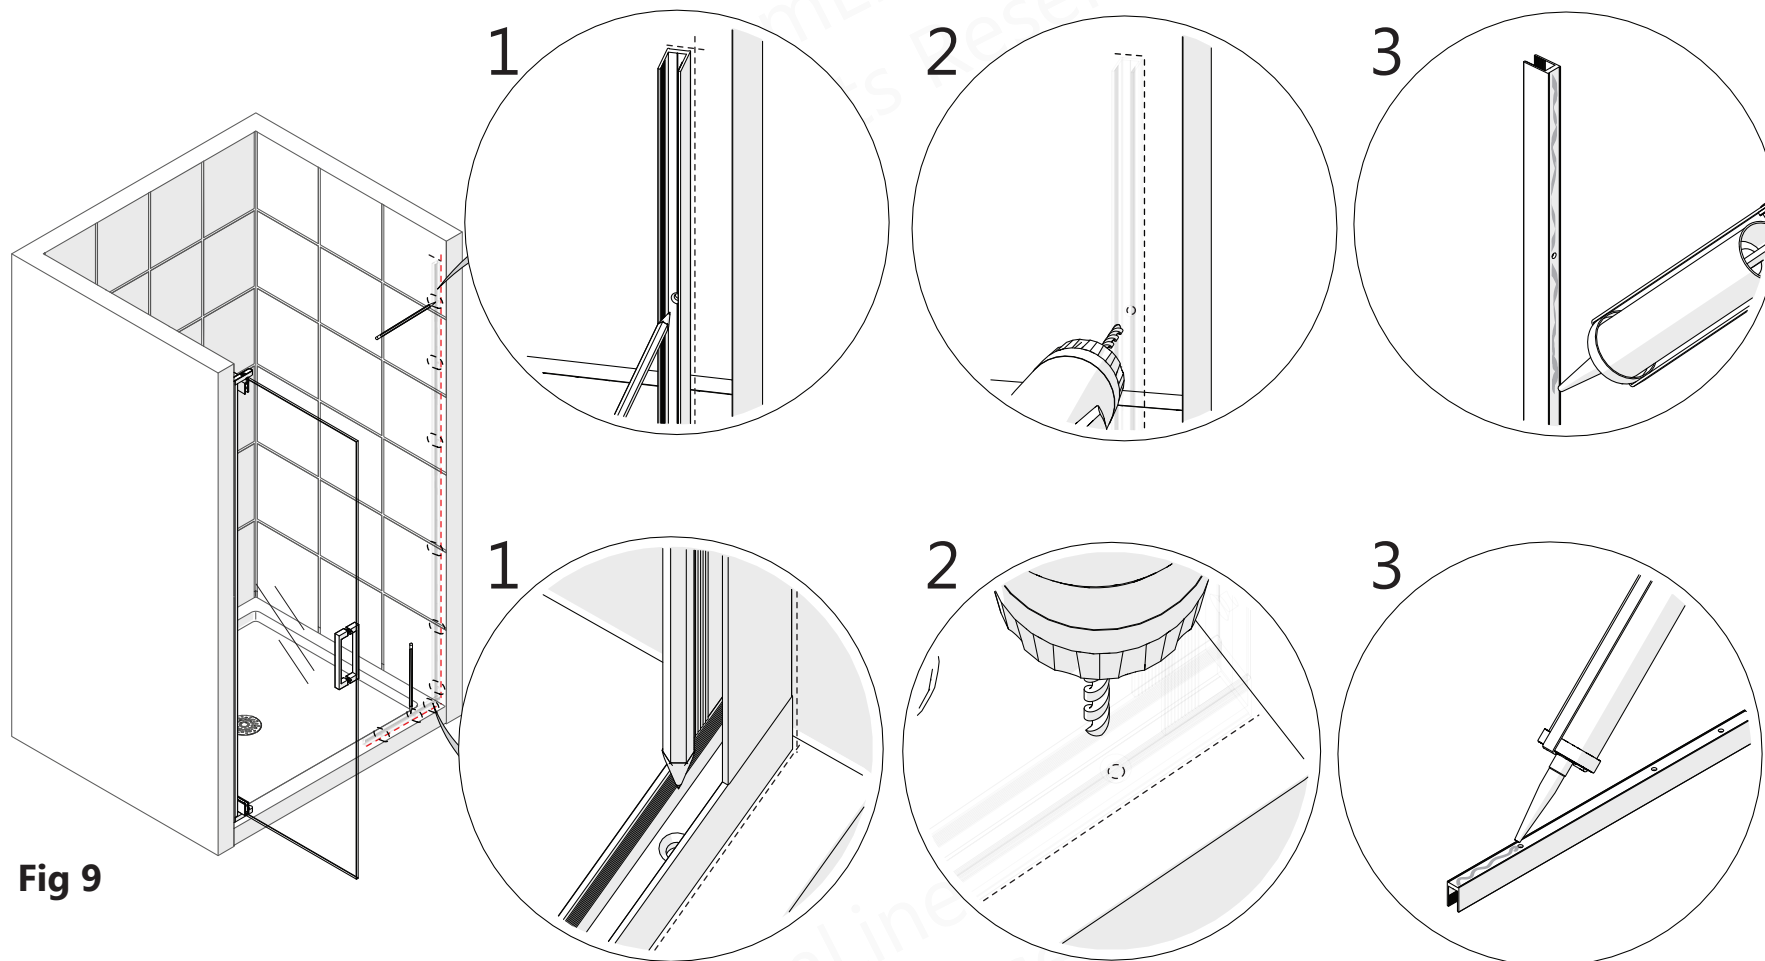


Fig 9

NOTE


▪ For installation into an **Acrylic Threshold**:
drill an $\text{Ø}1/8"$ (3mm) hole and use the
ST4.2 x 40mm Countersunk Screw (#23)
OR

▪ For installation into a **Tile Threshold**:
drill a $\text{Ø}3/16"$ (4.76mm) hole up to the stud,
drill an $\text{Ø}1/8"$ (3mm) pilot hole into the stud
and use the **ST4.2 x 40mm Countersunk Screw (#23)**


▪ **If a stud is present behind the wall:**
drill a $\text{Ø}3/16"$ (4.76mm) hole up to the stud,
drill an $\text{Ø}1/8"$ (3mm) pilot hole into the stud and use the
ST4.2 x 40mm Countersunk Screws (#23)
OR

▪ **If no stud is present behind the wall:**
drill a $\text{Ø}5/16"$ (8mm) hole and insert the **Wall Anchors (#13)**
and use the **ST4.2 x 40mm Countersunk Screws (#23)**.

Tools Needed

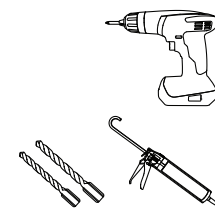


10

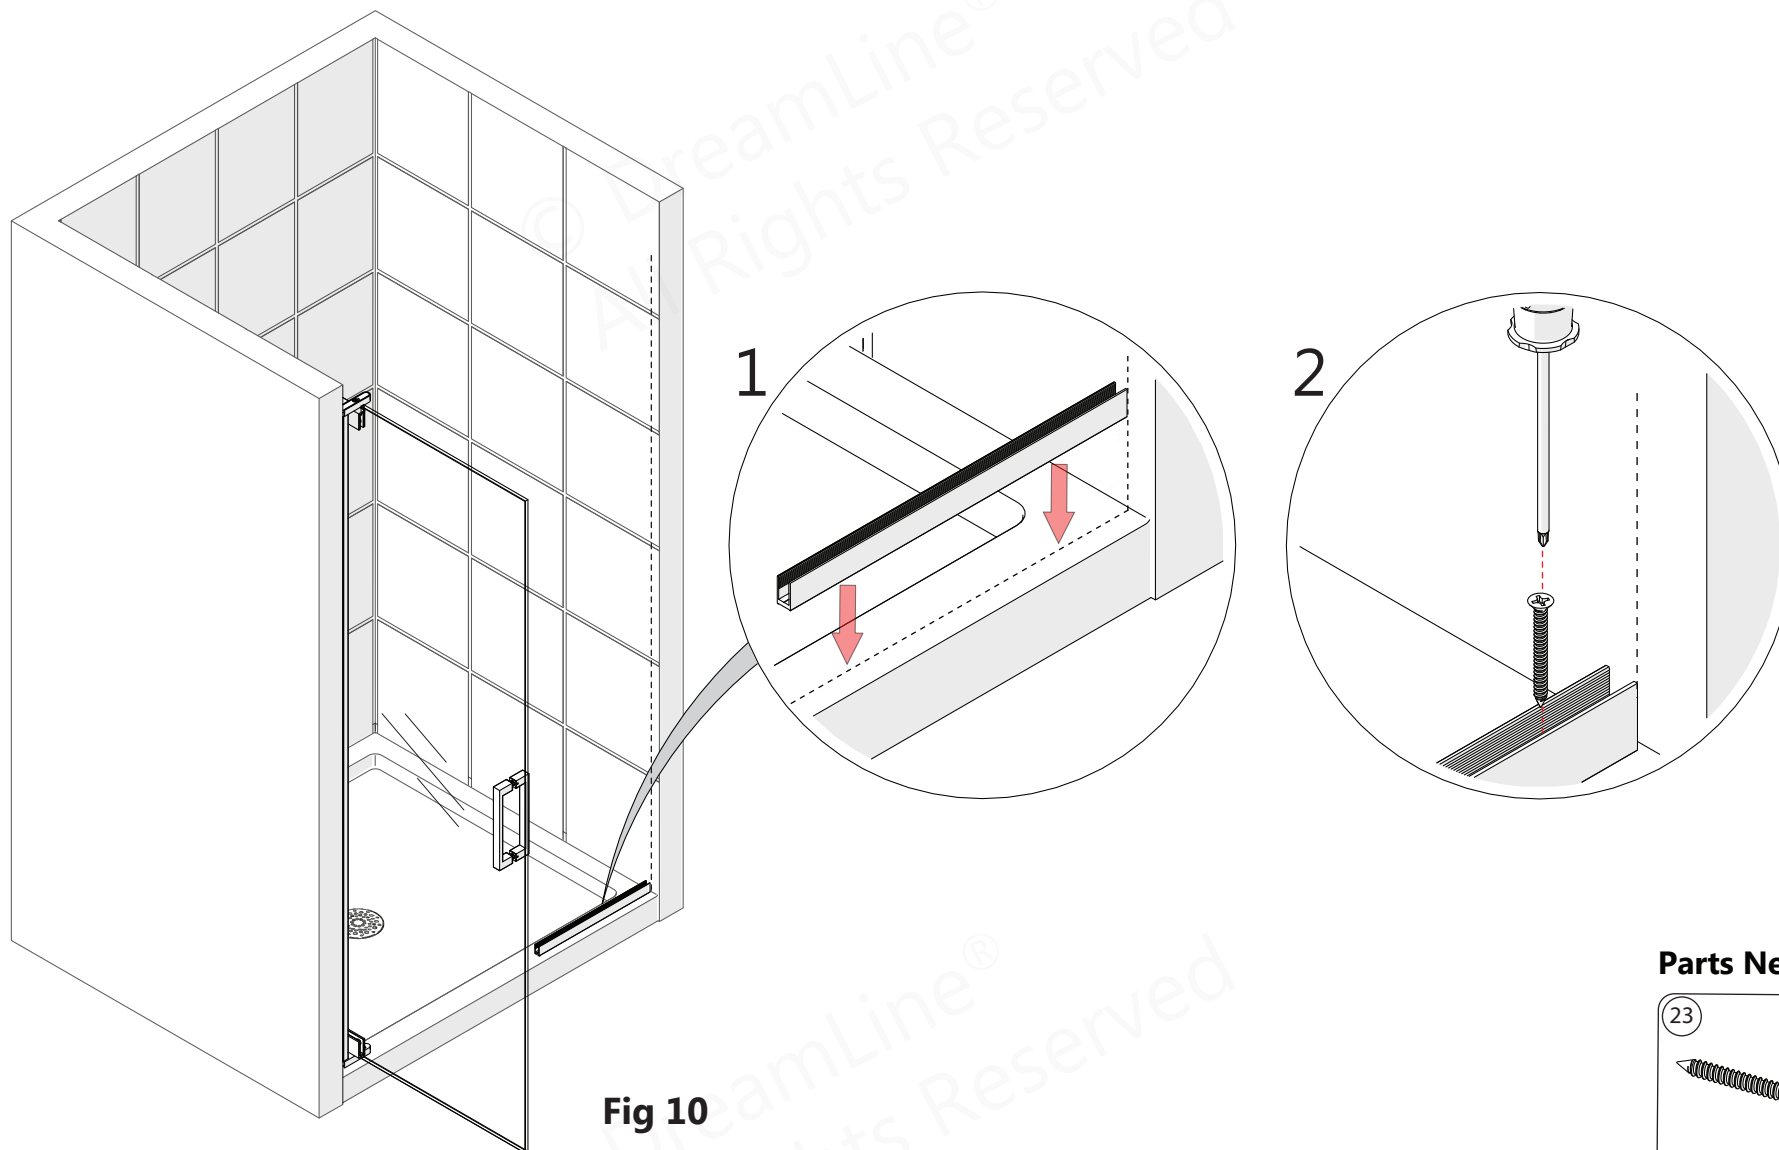


To prevent damage to the glass, be sure that the screws are fully countersunk and that the screw heads do not stick up above the surface of the u-channel

Parts Needed

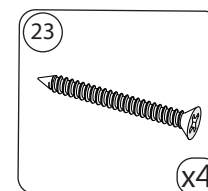

Tools Needed

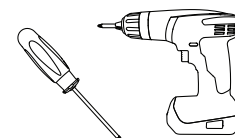

11



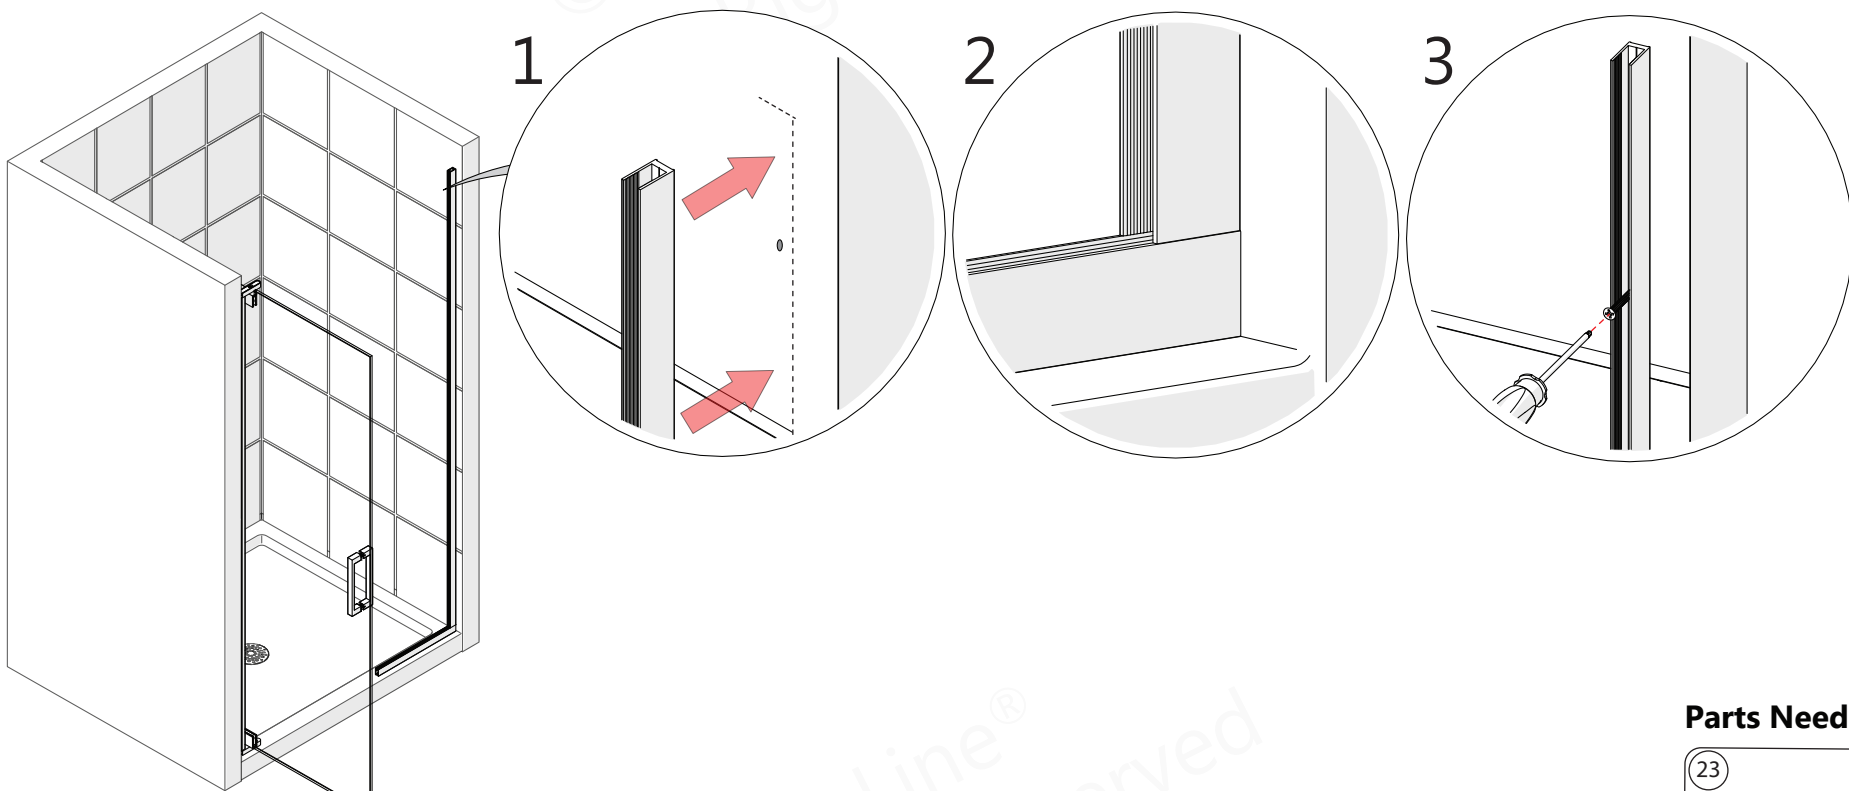


Fig 11

Parts Needed

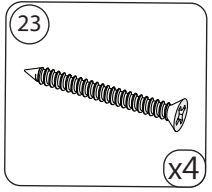

Tools Needed

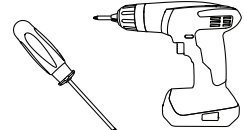

12


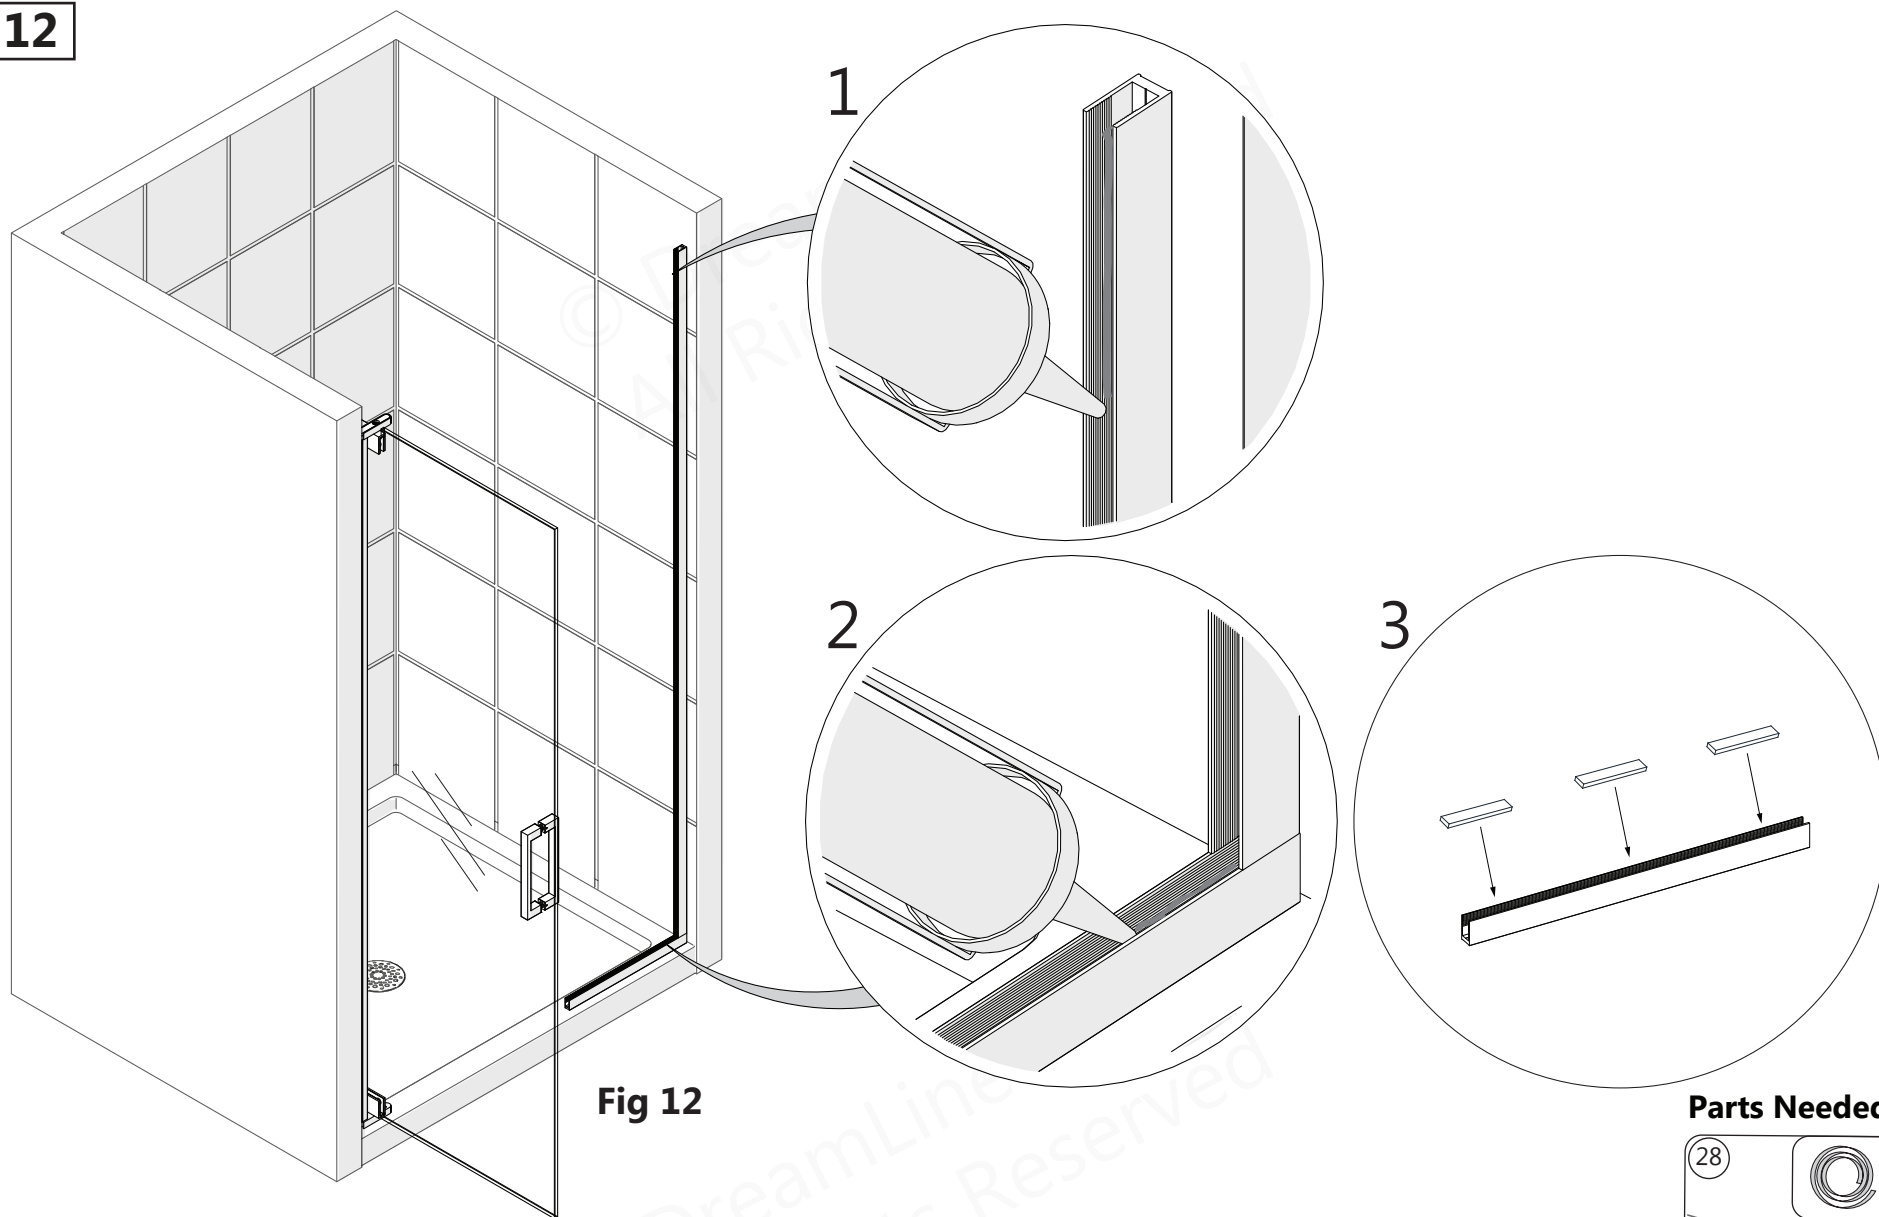


Fig 12



After applying silicone into the bottom U-Channel install several 2" - 3" pieces of the PVC Glass Spacer 0.5mm (#28) into the Bottom U-Channel (#29) to protect the bottom edge of the glass. (Fig 12.3)

Parts Needed

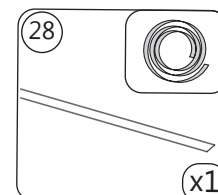

Tools Needed



13


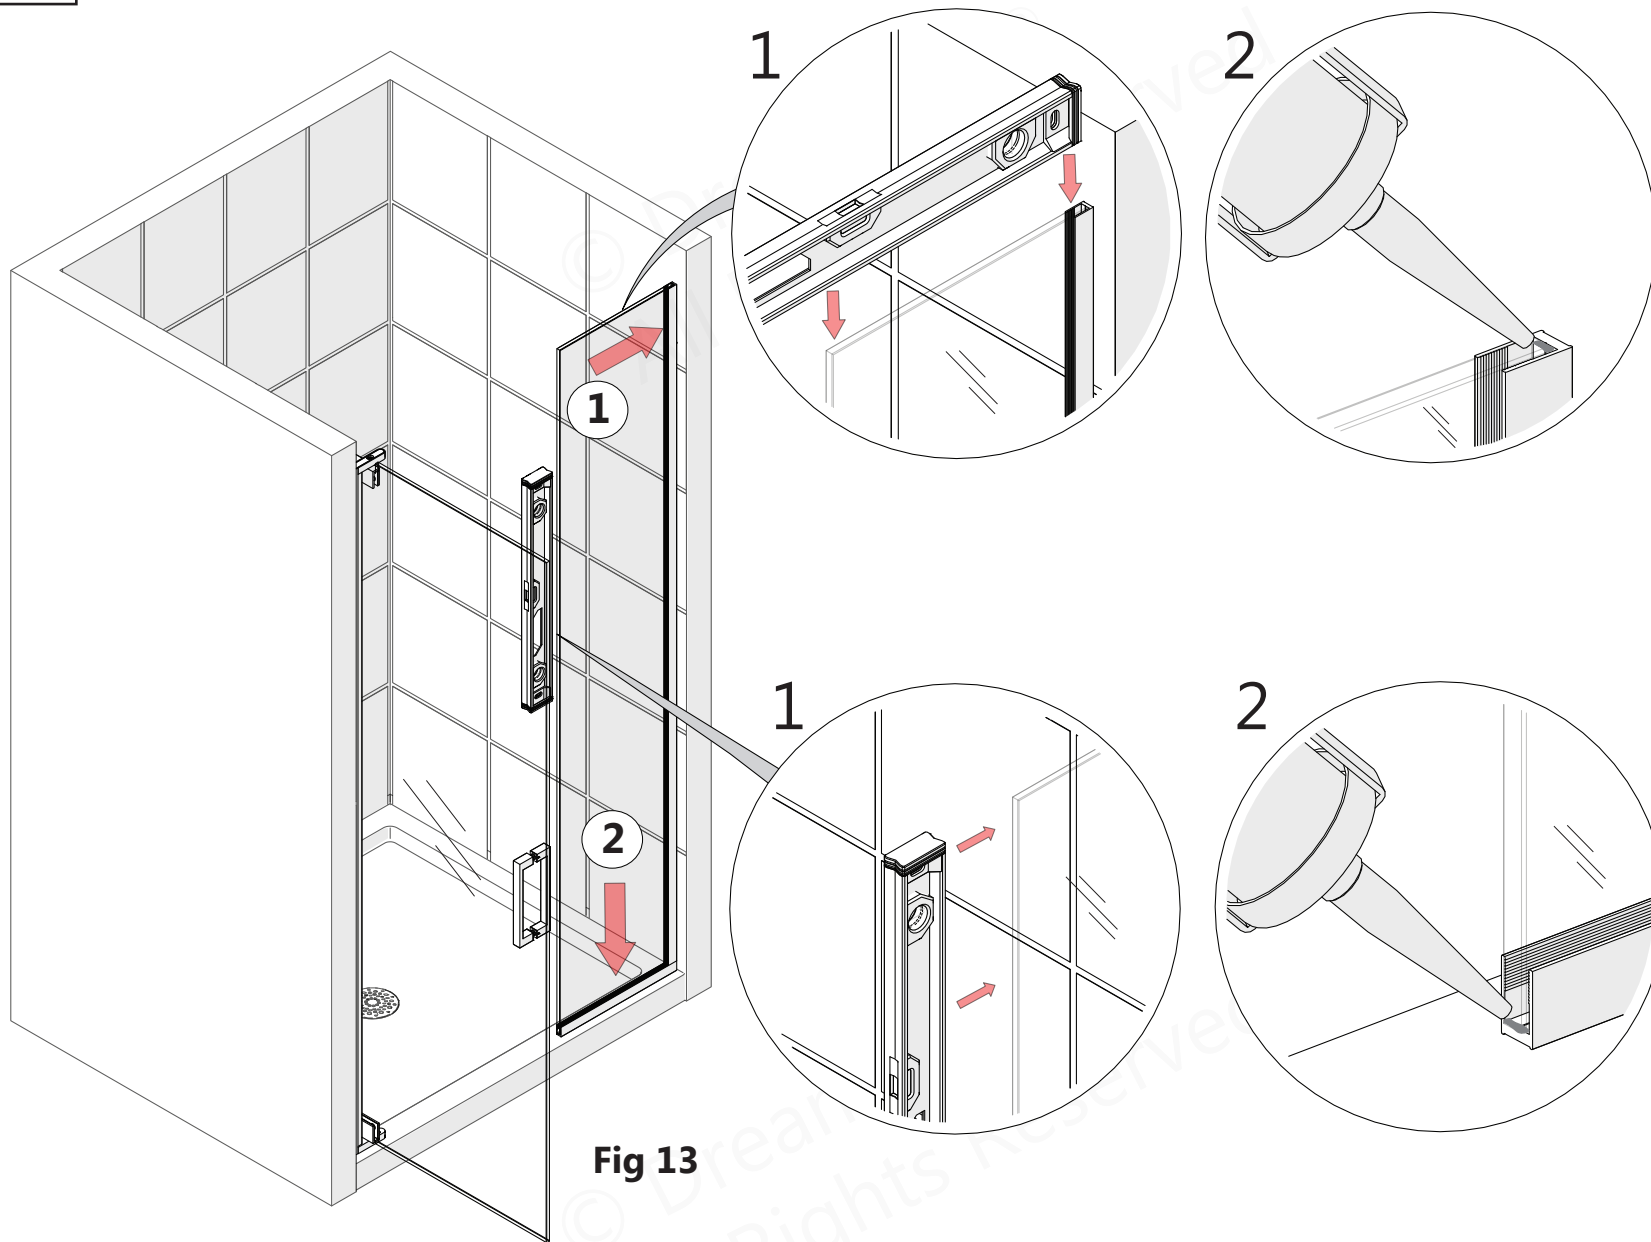



Fig 13

Tools Needed




14

180° Strike Vinyl Installation

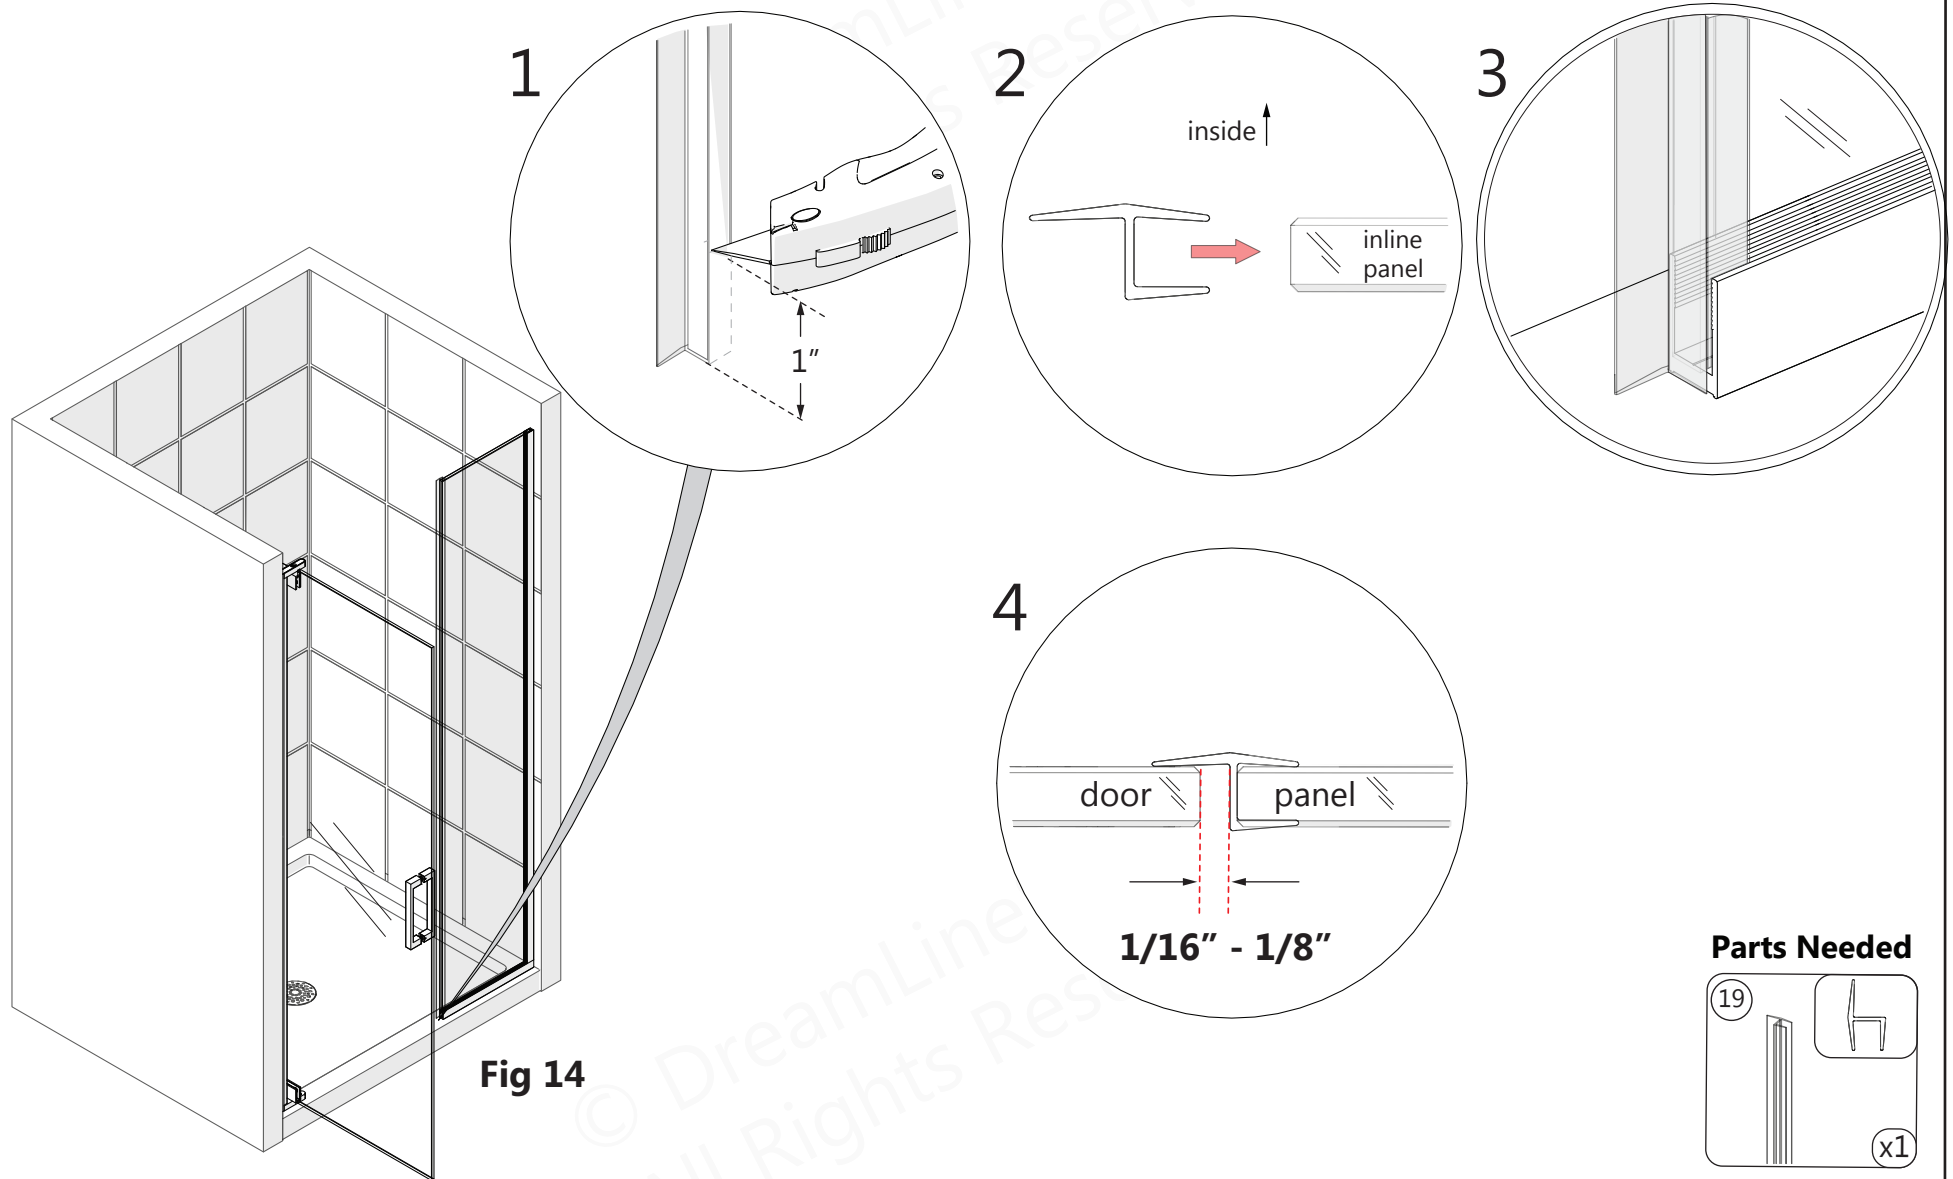

Parts Needed

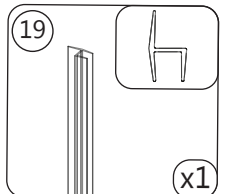

Tools Needed



15

NOTE

The surfaces need to be clean and free of debris before applying silicone.

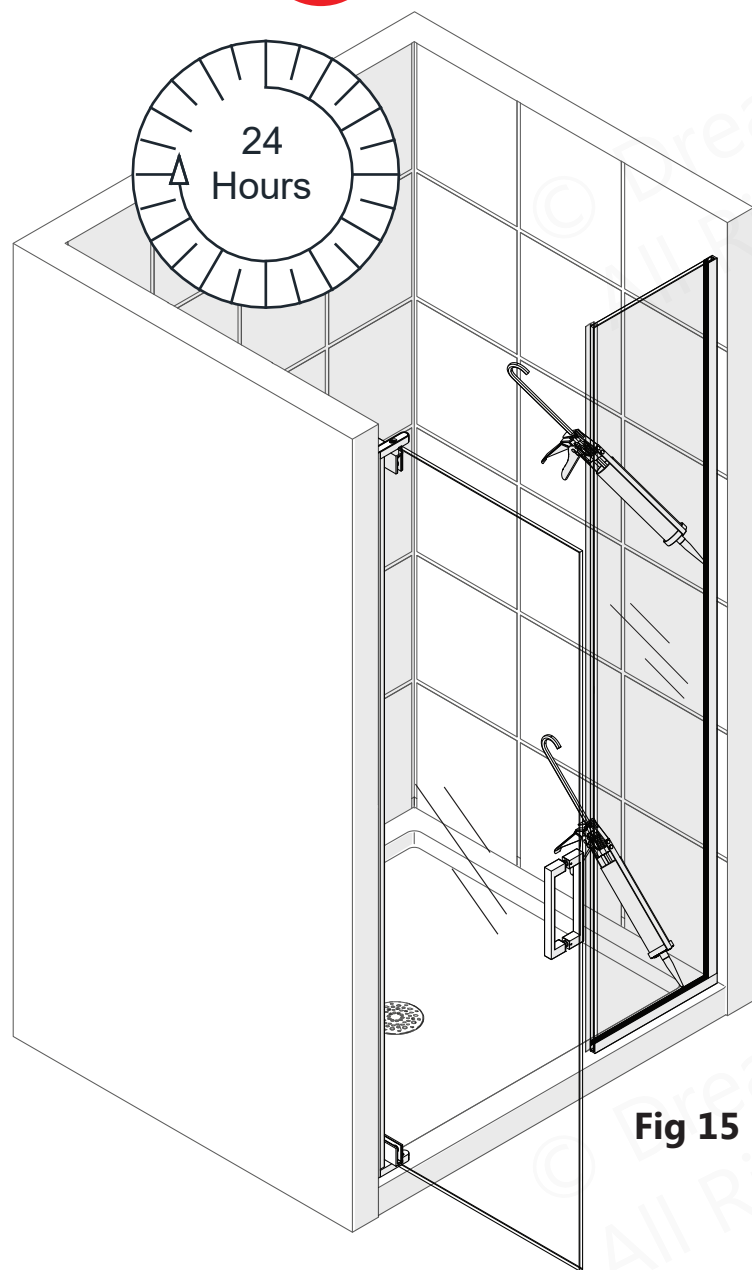


Fig 15

NOTE

If the model does not include an L-Bar™ Support Bracket, this completes the Inline Panel installation.




Continue onto the next steps for the installation of the Reversible L-Bar™ Support Bracket (#30): (for models that require the L-Bar Support Bracket)

-Continue to the next installation step or use the manual that is packaged with the Reversible L-Bar™ Support Bracket.




Allow 24 hours for the silicone to cure before using shower

Tools Needed




Reversible L-Bar™ Installation (L-Bar™ for ELEGANCE PLUS model only)

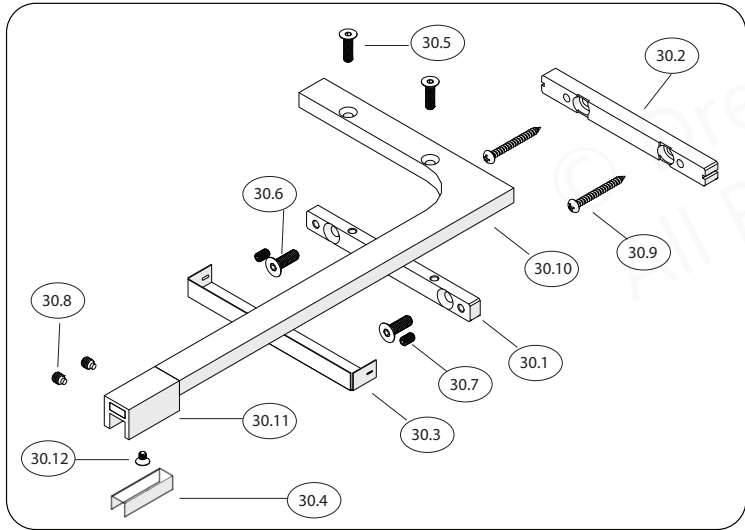

Right-handed orientation shown*

Item	Item Description	Quantity
30.1	Reversible L-Bar™ Adjustable Bracket	1pc
30.2	Reversible L-Bar™ Wall Bracket	1pc
30.3	Reversible L-Bar™ Decorative Cover	1pc
30.4	Sheet Vinyl Gasket	1pc
30.5	M5×18 Screw	2pcs
30.6	M6×18 Screw	2pcs
30.7	M5×8 Set Screw	2pcs
30.8	M6×6 Rubber-Tipped Set Screw	2pcs
30.9	ST4.2 x 40 Truss Head Screw	2pcs
30.10	Reversible L-Bar™ Body	1pc
30.11	Reversible L-Bar™ Glass Holder	1pc
30.12	M4×6 Screw	1pc

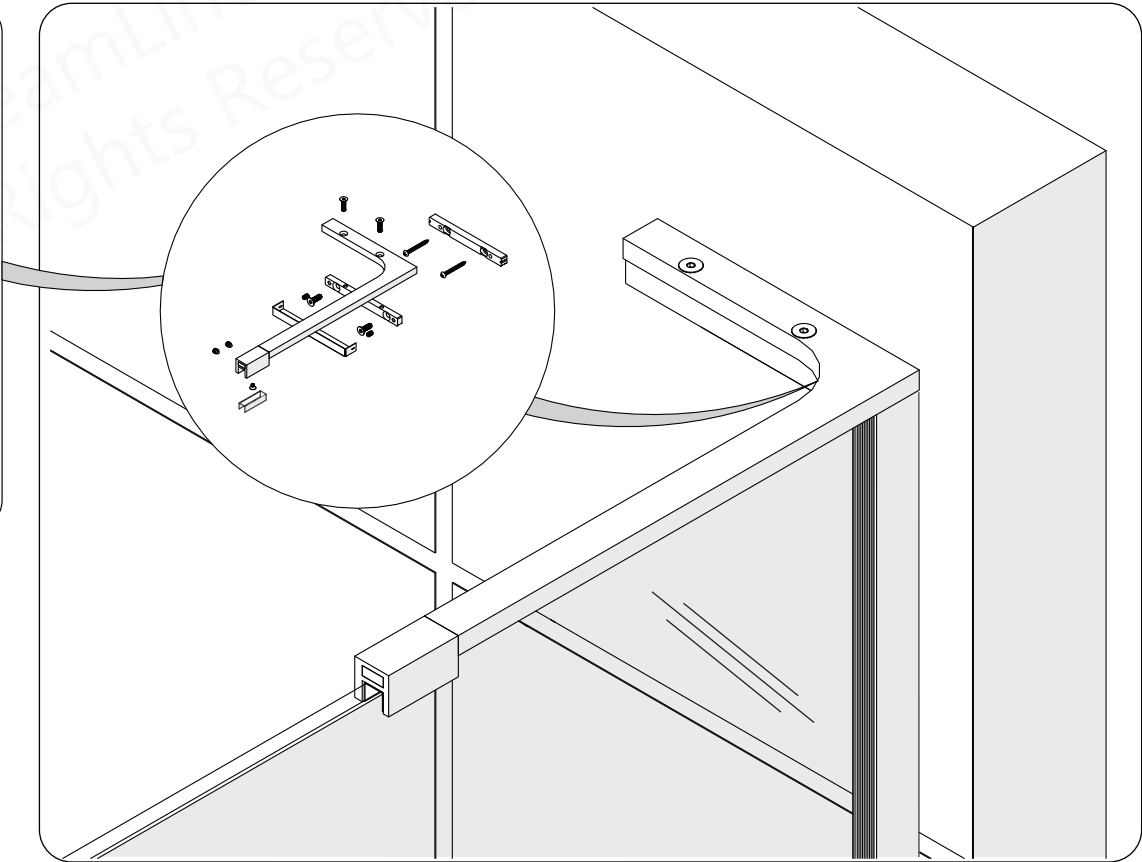

Right-handed orientation shown




12" L-Bar™ for 22" and 22-1/2" panels
18" L-Bar™ for 30" ~ 34" panels



The **L-Bar™ (#30)** is reversible. All images shown are in the right-handed orientation as an example. **To reverse the orientation of the L-Bar™ (#30), refer to pages 29-30 for further instructions.**

Parts Needed

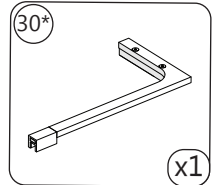

17

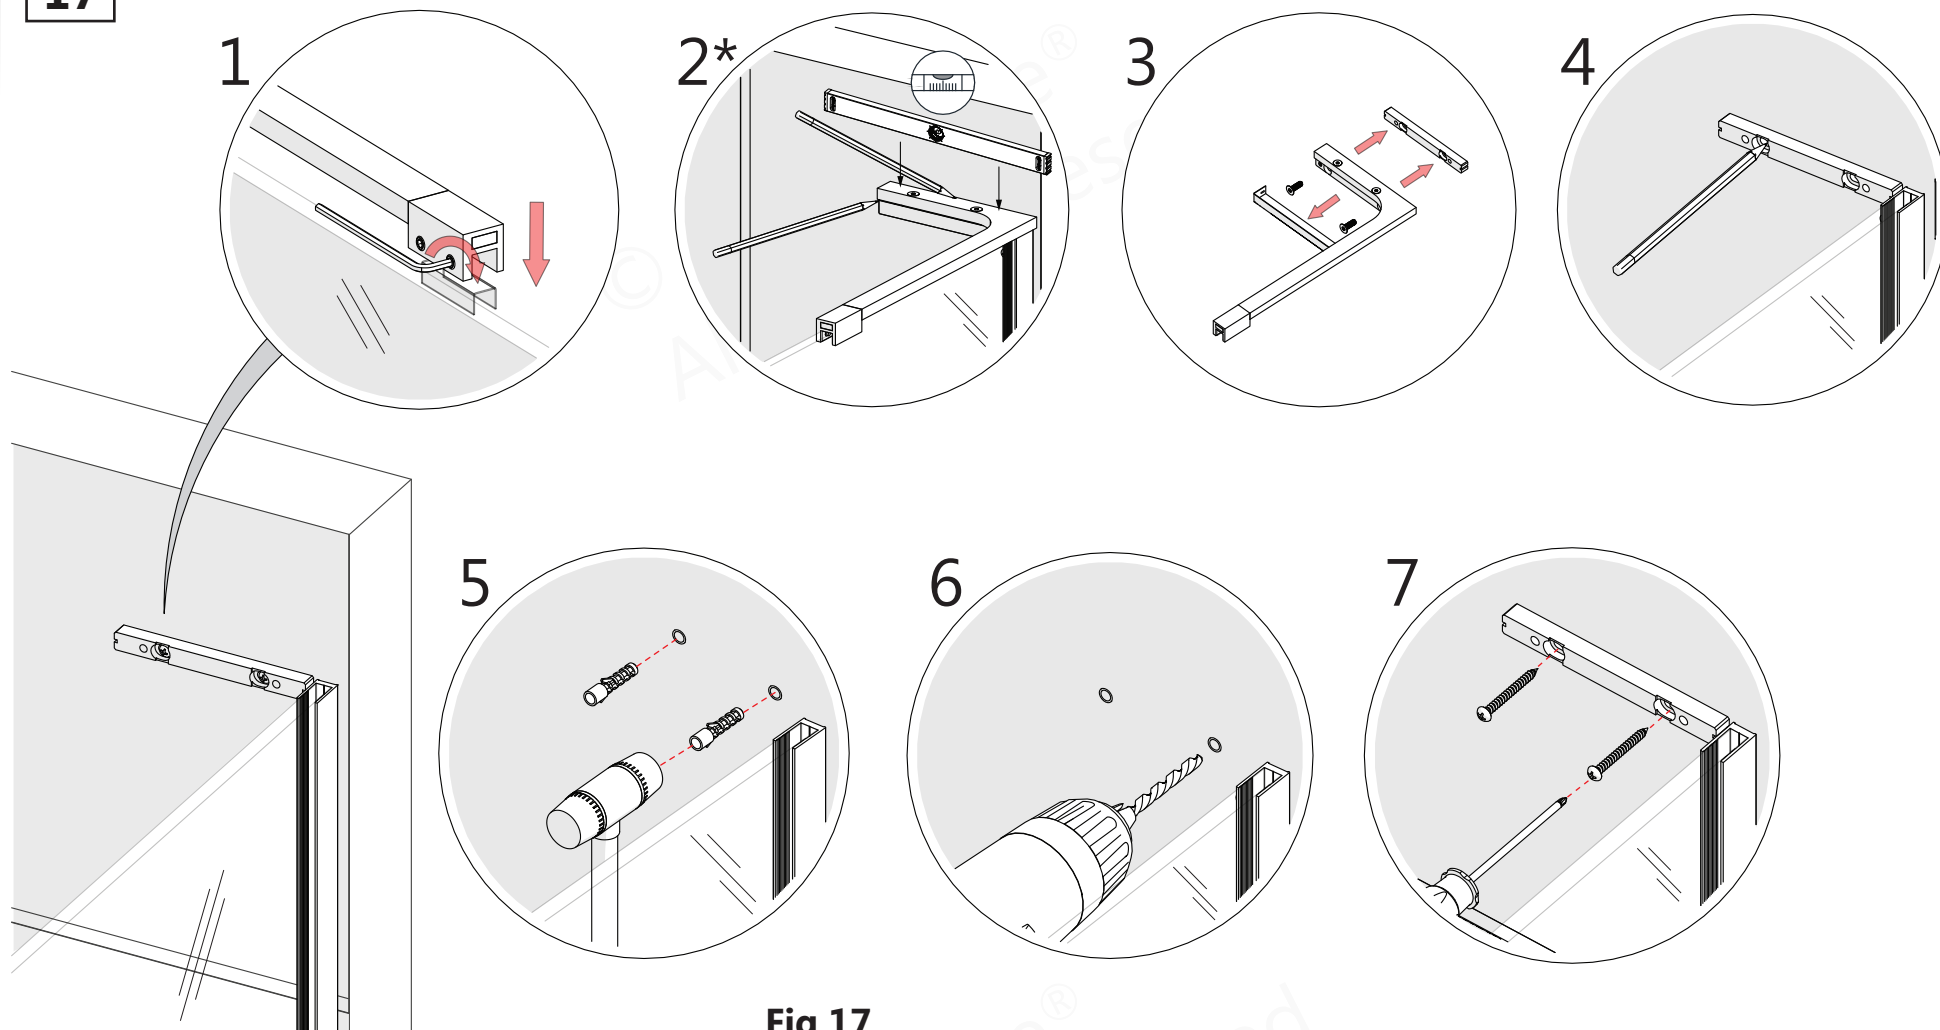


Fig 17

right-handed installation shown





*Leave the L-Bar™ decorative cover attached when marking the L-Bar™ position on the wall to allow space (1/16"-1/8") to re-attach the cover plate after installation.




*The **0.5mm PVC Spacer (#30.4)** for the **L-Bar™ Glass Holder (#30.11)** is shipped flat and this piece must be folded around the top of the **Inline Panel Glass (#11)** during installation.

Tools Needed

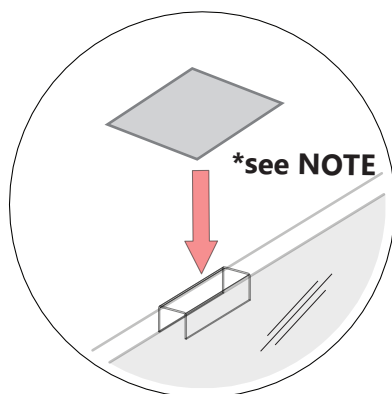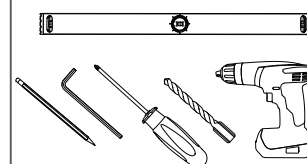


18

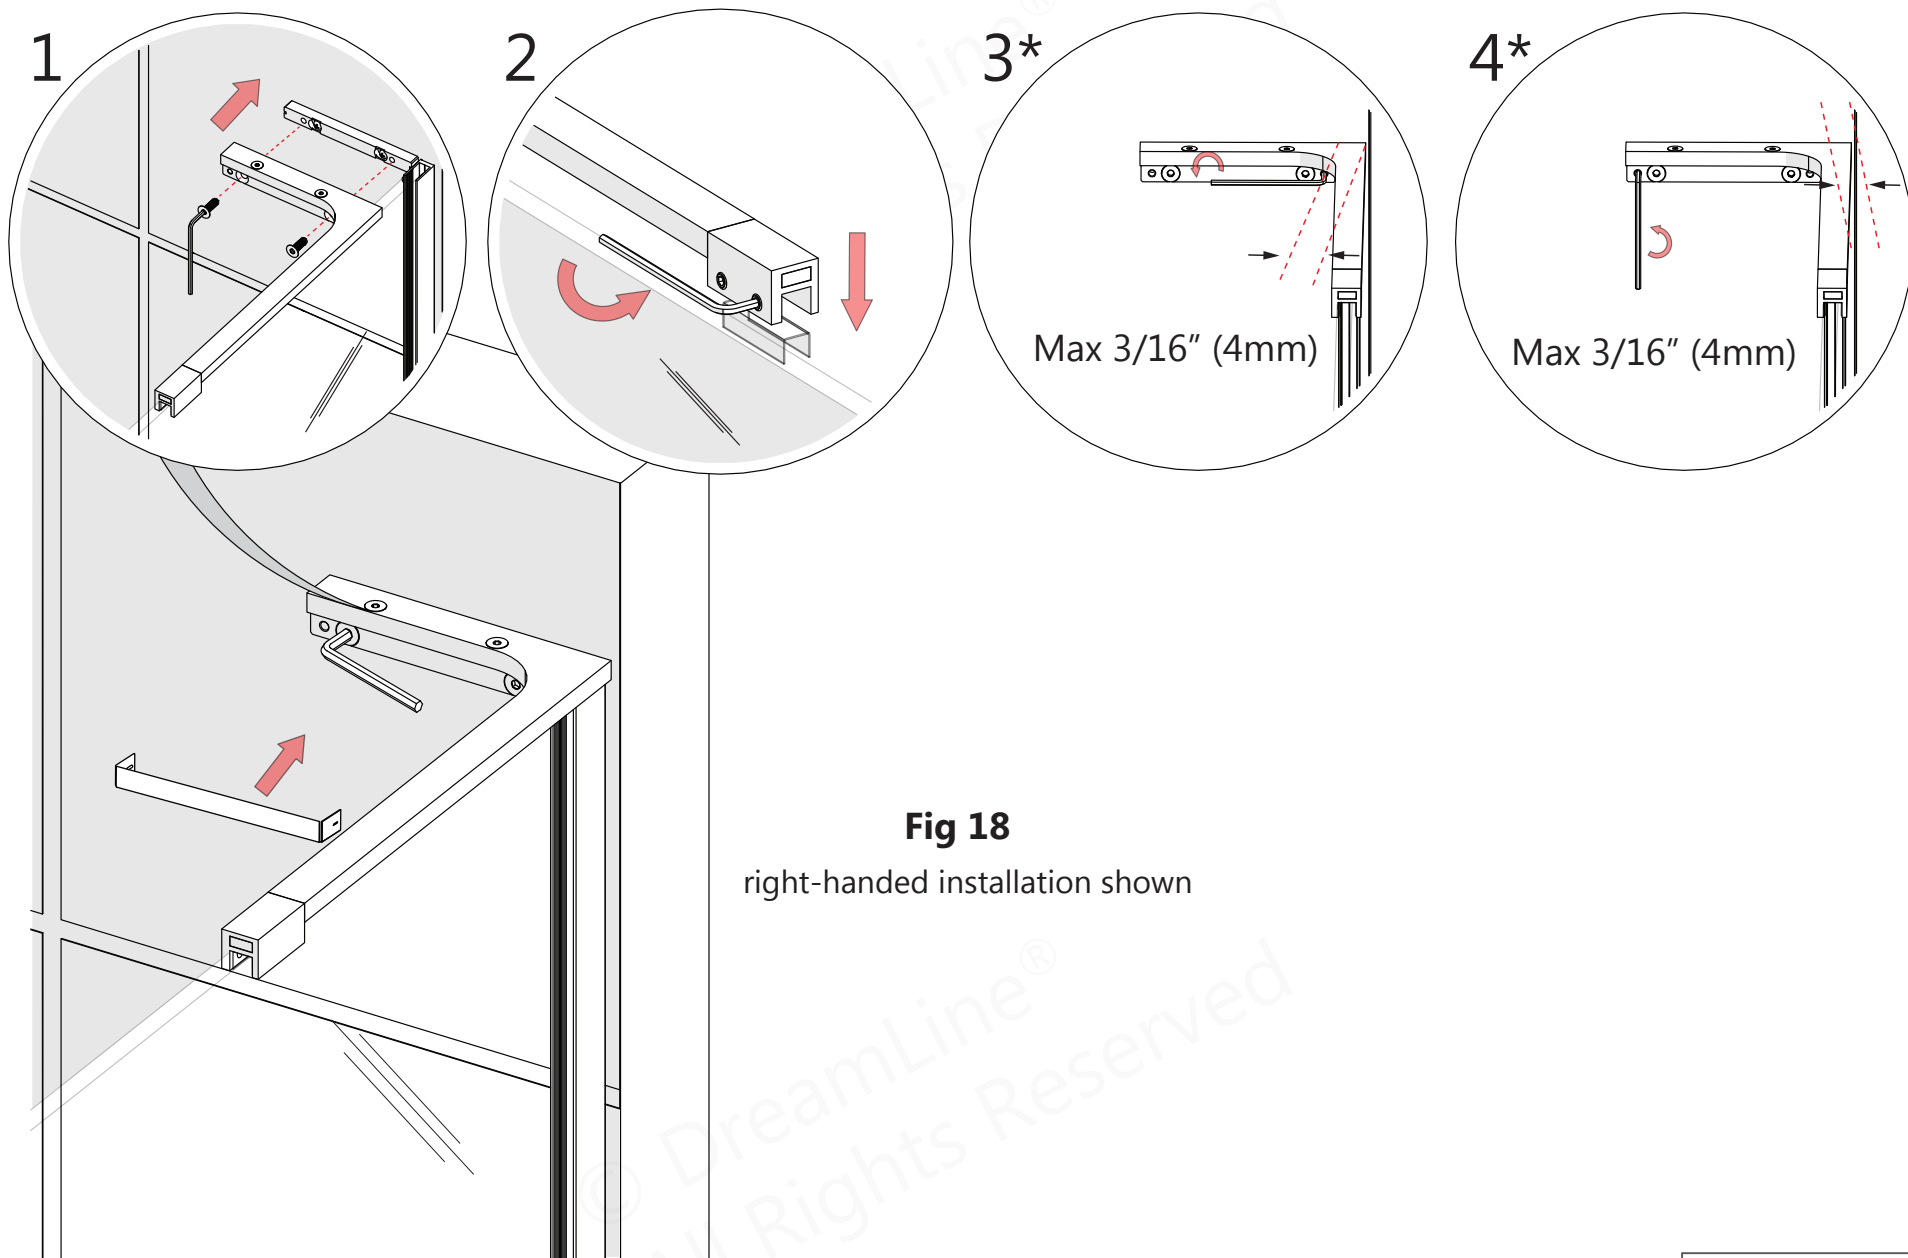


NOTE

* To adjust the angle of the **L-Bar™**: Loosen the **M5 x 14.5 screws**, rotate the appropriate set screw (See Fig 18.3 and 18.4) to adjust the angle of the **L-Bar™** (up to 3/16" (4mm)) in the desired direction. Hand tighten the **M5 x 14.5 screws** after adjustment is complete and replace the decorative cover.


Tools Needed



19

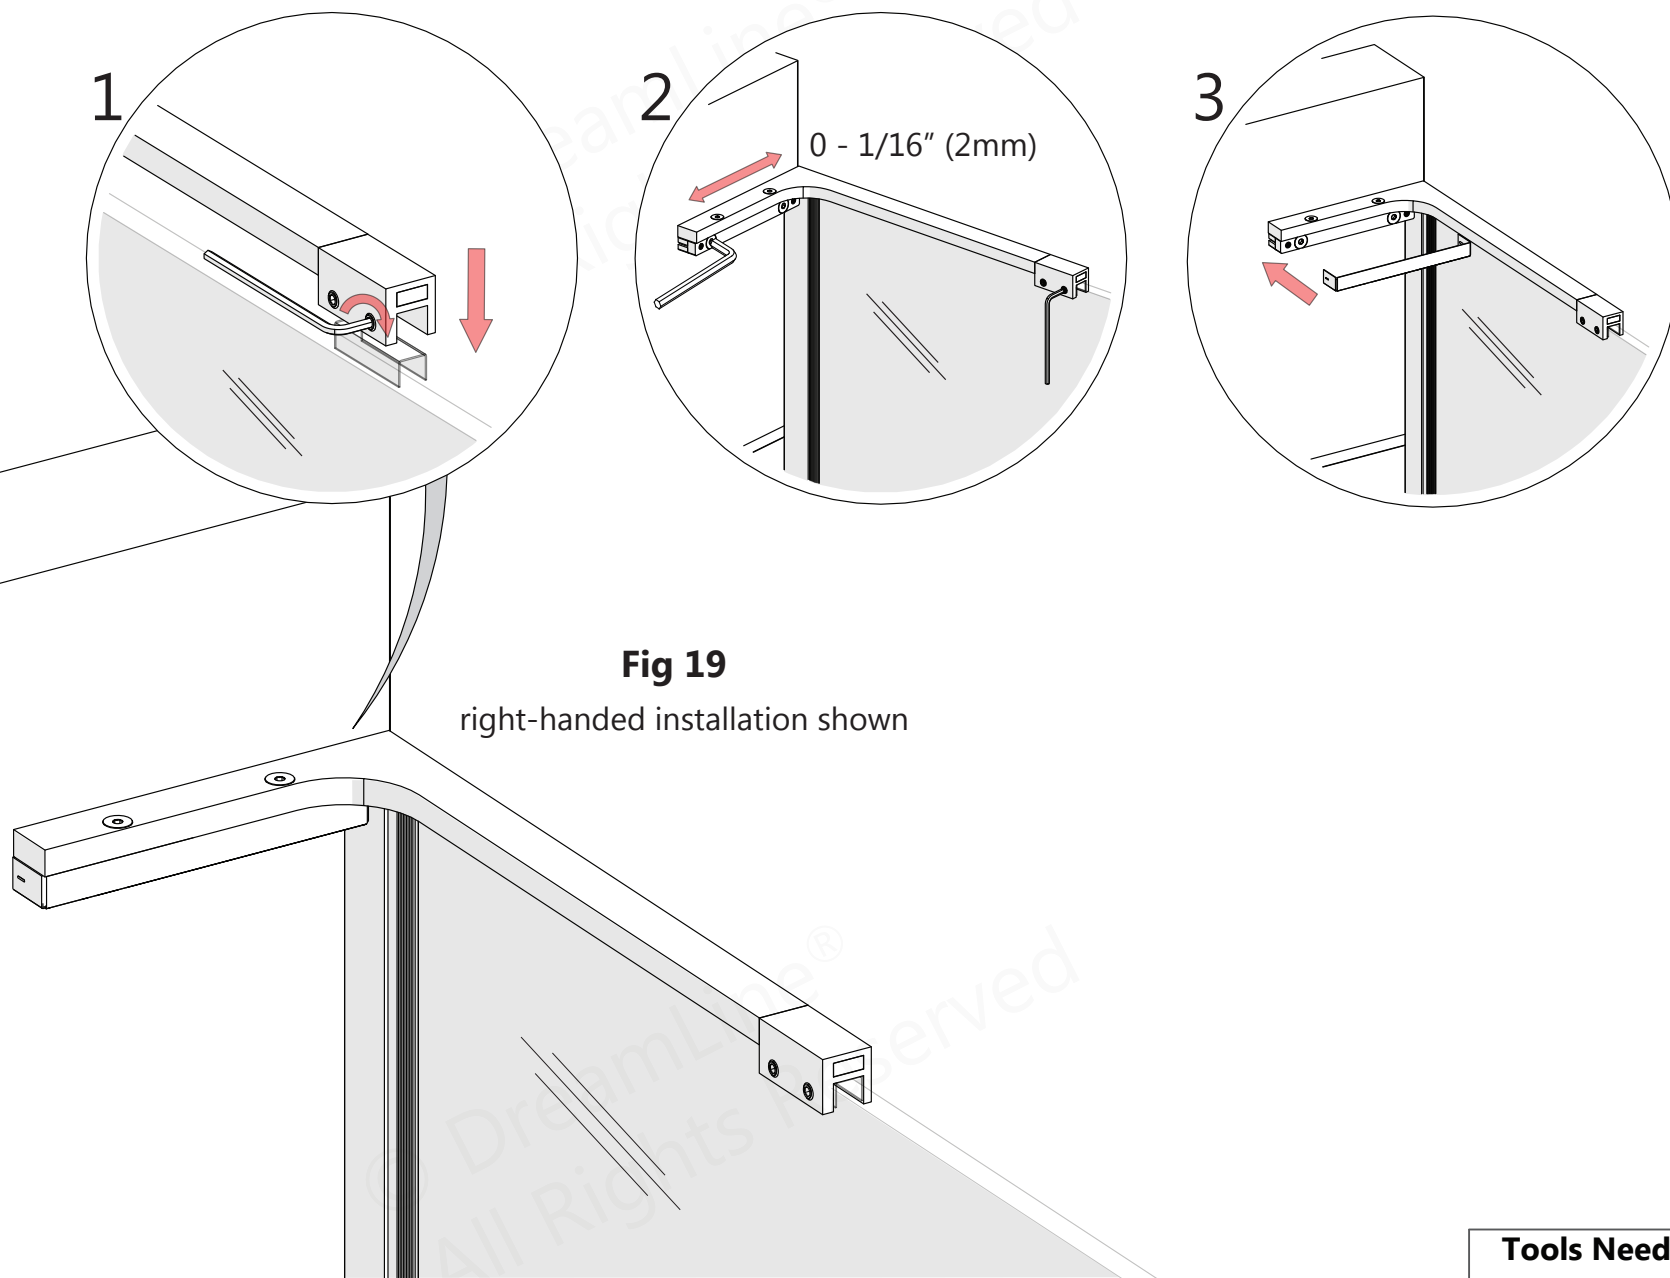

Tools Needed



Product Maintenance

BASES and BACKWALLS: To ensure long lasting life for your acrylic back walls: wipe them off after each use with a soft cloth. To clean the acrylic back walls use non-abrasive sprays or cream based cleaners. Avoid the use of aerosol spray cleaners. Never use abrasive cleansers, metal brushes or scrapers that could permanently scratch or dull the surface.

GLASS: To ensure long lasting life for your glass shower products: wipe them off after each use with a soft cloth. Rinse and wipe off the glass using either a soft cloth or a squeegee to prevent soap buildup and water spots (Hard water can etch the surface of the glass over time if left to dry). To prevent scratching the surface: never use abrasive cleaners or cleaning products that contain scouring agents. Never use bristle brushes or abrasive sponges that may scratch the surface of the glass.

HARDWARE: To ensure a long lasting finish: wipe off all metal parts after each use with a soft cloth. Do not use abrasive cleaners or cleaning products containing ammonia, bleach or acid. If accidentally used, rinse the surface as soon as possible to prevent damage to the finish (peeling or corrosion). After cleaning the polished finishes, rinse thoroughly and wipe dry with a soft clean-cloth.

Clean stainless steel surfaces at least once a week. When applying stainless steel cleaner or polish to stainless steel hardware, work with the grain (not across the grain). Never use an abrasive sponge or cloth, steel wool or wired brush as these may permanently scratch the surfaces.



To maximize the life of your door, it is important to regularly inspect the glass and other hardware for misalignment, proper attachment, and/or damage. Contact DreamLine® with any questions or concerns.









INLINE PANEL (Style F) Maintenance Checklist

- ☐ Inspect the U-Channels. Make sure both Bottom and Vertical U-Channels are tightly secured.
- ☐ Inspect that the Door Glass and Inline Panel glass are properly aligned when the door is in the closed position.
- ☐ Inspect the L-Bar™ (for ELEGANCE PLUS models only). Tighten set-screws if necessary.
- ☐ Inspect and replace damaged or missing Vinyl Seals. Order replacement as necessary to prevent leakage.
- ☐ Inspect silicone application. Remove and replace as necessary to prevent leakage. (refer to the silicone manufacturer's recommendations on the proper application of their product).
- ☐ Remove Vinyl Seals to inspect the edges of the glass for concealed damage.

Damaged glass must be replaced!

Reversible L-Bar™ Feature: Glass Holder (for ELEGANCE PLUS model only)

Step 1

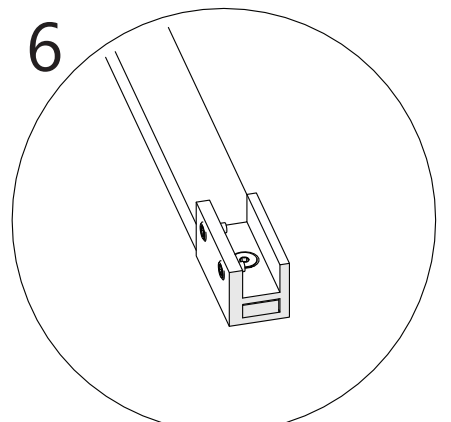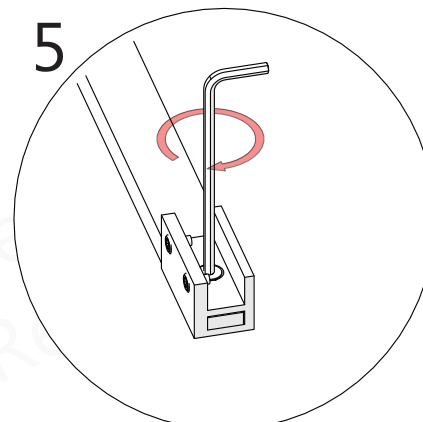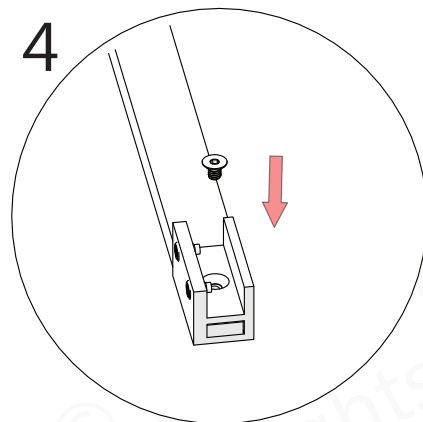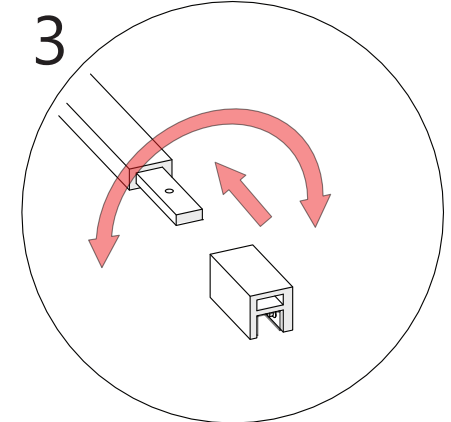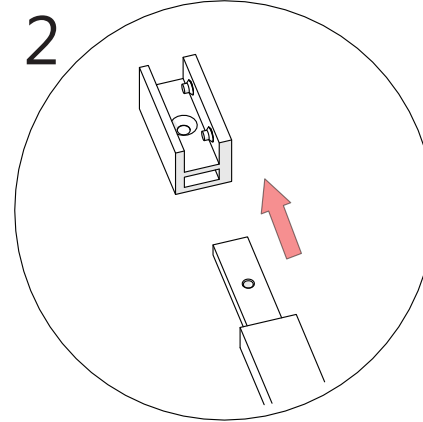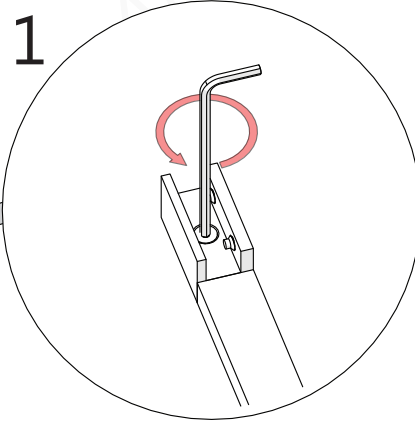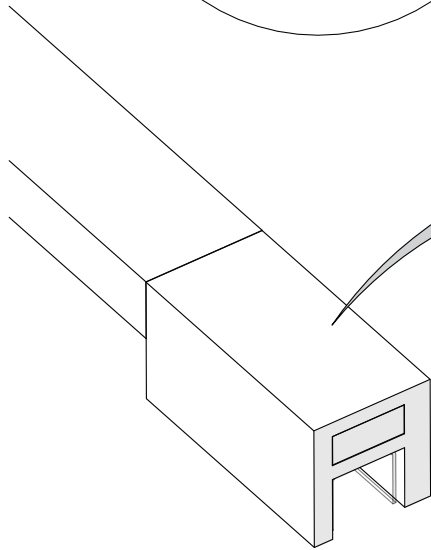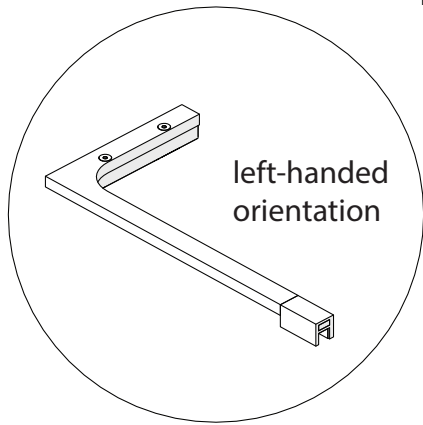











left-to-right handed orientation shown

Tools Needed



Reversible L-Bar™ Feature: Wall Bracket

Step 2

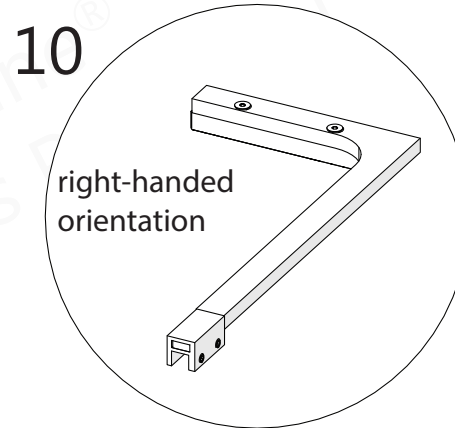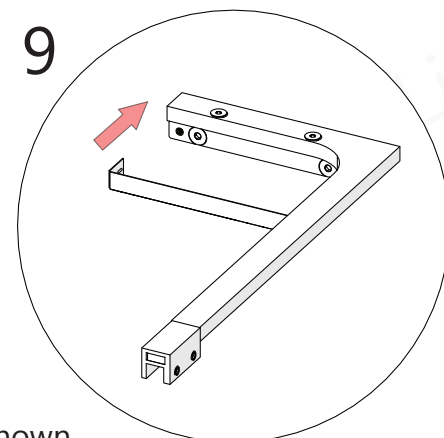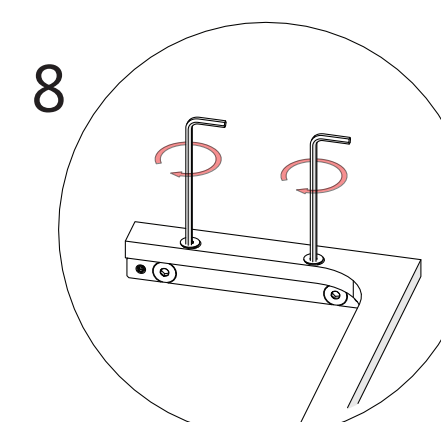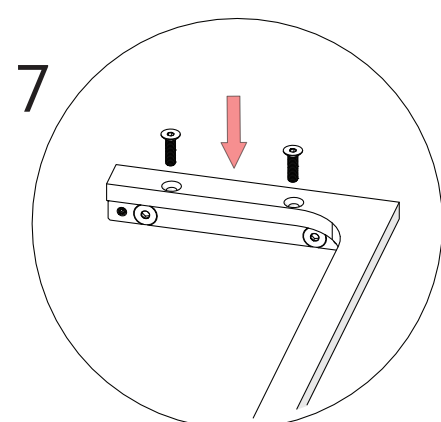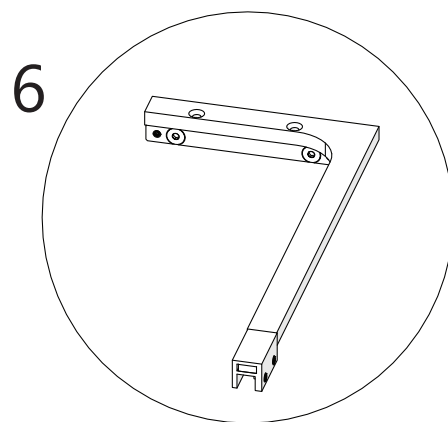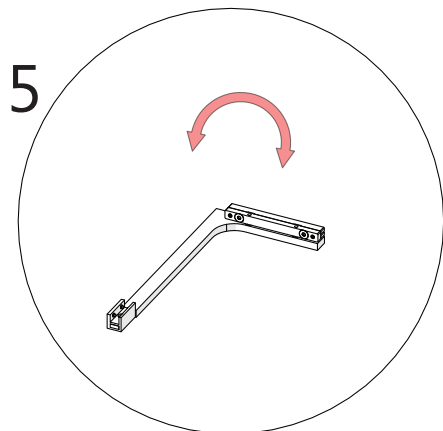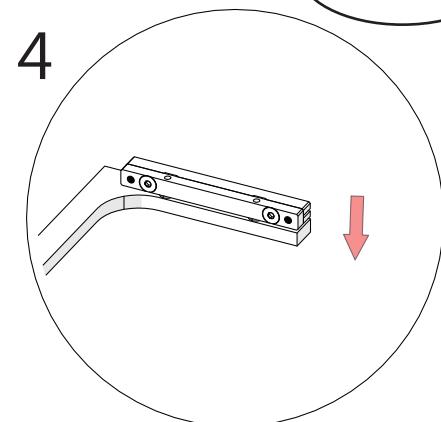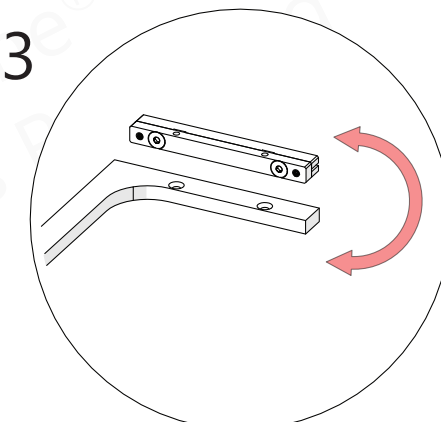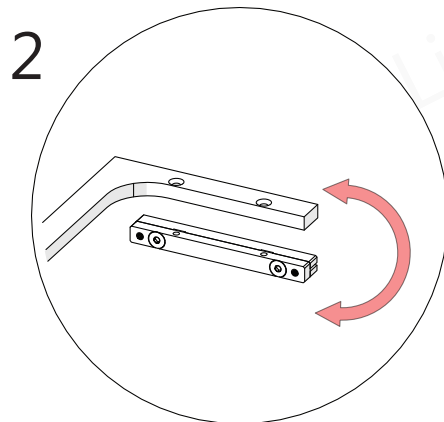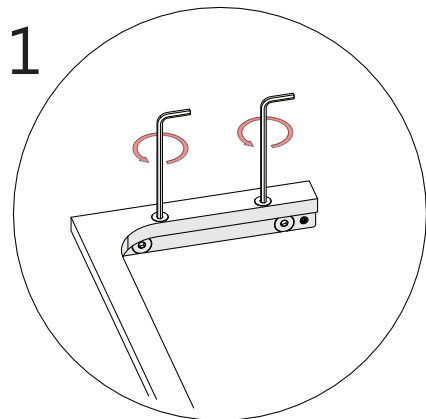

left-to-right handed orientation shown

Tools Needed



Troubleshooting

Problem/Symptom	Suggested Solution	Page(s)
Missing Parts	• Check all shipping/packaging material for missing parts/components. • If not found, contact DreamLine Customer Support [1-866-731-2244] to order factory part replacement.	—
Door Glass does not close flush with the 180° Strike Vinyl (#19) and Inline Panel Glass (#11)	• Inspect the 180° Degree Strike Vinyl (#19) and ensure the orientation of the vinyl is correct. • Check that the 180° Degree Strike Vinyl (#19) is installed correctly so the Door Glass closes flush with the vinyl. • Check that the reveal between the door and the strike vinyl is consistent/even. Use a level and adjust the assembly. Removal and re-installation may be necessary.	13;21
Top of Inline Panel Glass (#11) is not flush with the top of the Door Glass	• Measure that the height of the Door and Inline Panel Glass is at 72 inches. • Refer to the Door Manual for proper installation of the door.	—
Leakage: beneath the Bottom U-Channel (#29) and Inline Panel (#11)	• Confirm that all screws are tightly secured to the threshold • Inspect the silicone and ensure that a complete application of silicone has been applied. Allow 24 hours for the silicone to cure before using the shower.	—
L-Bar™ Support Bracket (#30) not installed level with the Inline Panel Glass	• Review the L-Bar™ Support Bracket (#30) installation steps to adjust the L-Bar. • Confirm the gaskets are in place to protect the glass • Removal and re-installation may be necessary • The L-Bar must be installed correctly for the safety of the installation	23-26



Prior to contacting DreamLine® Customer Service, please have the following information readily available:

- Purchase Order Information
 - Name, PO Number, Dealer/Vendor Name, etc.
- SKU/Model Number (see Page 31)
- Factory Part Information (see Page 31)

Factory Parts Information


INLINE PANEL [STYLE F] - HARDWARE		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION	QTY
09	041540 11 -1930 / 041540 41 -1930 / 041540 61 -1930 / 041540 91 -1930	U-Channel 1" Aluminum for 10mm (3/8in.) Glass	1 pc
13	07552148	Wall Anchor 8mm (5/16in)	18 pcs
19	063010100-1829	180 Degree Strike Vinyl for 10mm (3/8in.) Glass	1 pc
23	092108	ST4.2×40mm Countersunk Screw	18 pcs
28	07550083	PVC Glass Spacer 0.5mm	1 pc
29	041540 11 -1118 / 041540 41 -1118 / 041540 61 -1118 / 041540 91 -1118	U-Channel 1" Aluminum for 10mm (3/8in) Glass	1 pc
Exclusive to 22in, 22-1/2in ELEGANCE PLUS INLINE PANEL Models			
30	0712 1 050 / 0712 4 050 / 0712 6 050 / 0712 9 050	L-Bar Support Bracket Reversible 12" for 10mm (3/8in) glass	1 pc
Exclusive to 30in, 30-1/2in, 34in ELEGANCE PLUS INLINE PANEL Models			
30	0712 1 150 / 0712 4 150 / 0712 6 150 / 0712 9 150	L-Bar Support Bracket Reversible 18" for 10mm (3/8in) glass	1 pc

BOLD digit indicates finish: **1** = Chrome; **4** = Brushed Nickel;
6 = Oil Rubbed Bronze; **9** = Satin Black

INLINE PANEL [STYLE F] - GLASS		FACTORY PARTS INFORMATION	
ITEM #	FACTORY PART NUMBER	ITEM DESCRIPTION (Installed Inline Panel Glass Size)	QTY
11	010137095	6-in Inline Panel Glass	1 pc
11	010137117	6-1/2-in Inline Panel Glass	1 pc
11	010137099	14-in Inline Panel Glass	1 pc
11	010137119	14-1/2-in Inline Panel Glass	1 pc
11	010137103	22-in Inline Panel Glass	1 pc
11	010137121	22-1/2-in Inline Panel Glass	1 pc
11	010137109	30-in Inline / Return Panel Glass	1 pc
11	010137123	30-1/2-in Inline / Return Panel Glass	1 pc
11	010137111	34-in Inline / Return Panel Glass	1 pc


Contact **Support@DreamLine.com** for Part replacement, installation assistance or additional information.
 Complete **Warranty** information is available on **DreamLine.com**.

Product SKUs

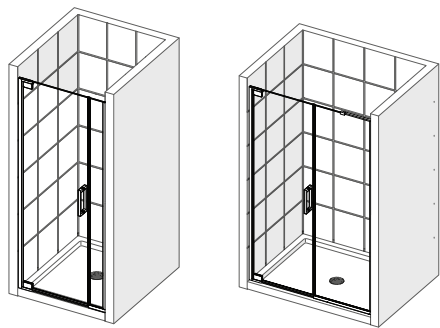

Elegance Plus w/inline panel

SHDR-443060-##
SHDR-443465-##
SHDR-444014-##
SHDR-444622-##
SHDR-4452225-##
SHDR-4458305-##

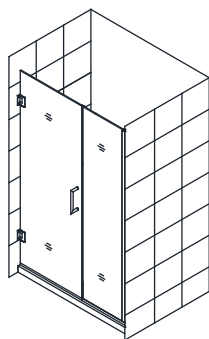


Unidoor Plus Style F

SHDR-242907210-##	SHDR-244307210	SHDR-244957210
SHDR-243007210	SHDR-244407210	SHDR-245057210
SHDR-243107210	SHDR-243757210	SHDR-245157210
SHDR-243207210	SHDR-243857210	SHDR-245257210
SHDR-243307210	SHDR-243957210	SHDR-245307210
SHDR-243407210	SHDR-244057210	SHDR-245407210
SHDR-243507210	SHDR-244157210	SHDR-245507210
SHDR-243607210	SHDR-244257210	SHDR-245607210
SHDR-242957210	SHDR-244357210	SHDR-245707210
SHDR-243057210	SHDR-244457210	SHDR-245807210
SHDR-243157210	SHDR-244507210	SHDR-245907210
SHDR-243257210	SHDR-244607210	SHDR-246007210
SHDR-243357210	SHDR-244707210	SHDR-245357210
SHDR-243457210	SHDR-244807210	SHDR-245457210
SHDR-243557210	SHDR-244907210	SHDR-245557210
SHDR-243657210	SHDR-245007210	SHDR-245657210
SHDR-243707210	SHDR-245107210	SHDR-245757210
SHDR-243807210	SHDR-245207210	SHDR-245857210
SHDR-243907210	SHDR-244557210	SHDR-245957210
SHDR-244007210	SHDR-244657210	SHDR-246057210
SHDR-244107210	SHDR-244757210	
SHDR-244207210	SHDR-244857210	

= finish
01 - Chrome
04 - Brushed Nickel
06 - Oil Rubbed Bronze
09 - Satin Black

Product SKUs

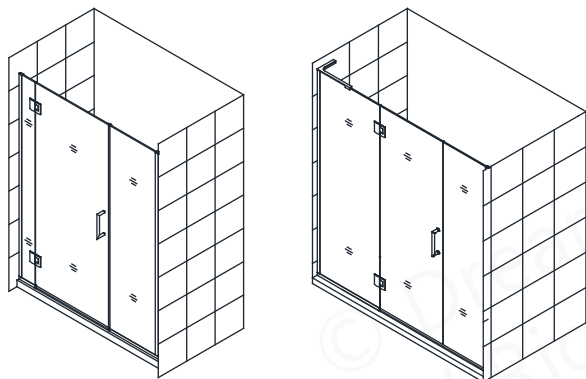

Unidoor-X Style M1

D12306572-##	D1270672	D3230672L	D3262272R
D1230672	D12714572	D3230672R	D32706572L
D12314572	D1271472	D32314572L	D32706572R
D1231472	D12722572	D32314572R	D3270672L
D12322572	D1272272	D3231472L	D3270672R
D1232272	D12730572	D3231472R	D32714572L
D12330572	D1273072	D32406572L	D32714572R
D1233072	D12806572	D32406572R	D3271472L
D12406572	D1280672	D3240672L	D3271472R
D1240672	D12814572	D3240672R	D32806572L
D12414572	D1281472	D32414572L	D32806572R
D1241472	D12822572	D32414572R	D3280672L
D12422572	D1282272	D3241472L	D3280672R
D1242272	D12830572	D3241472R	D32814572L
D12430572	D1283072	D32506572L	D32814572R
D1243072	D12906572	D32506572R	D3281472L
D12506572	D1290672	D3250672L	D3281472R
D1250672	D12914572	D3250672R	D32906572L
D12514572	D1291472	D32514572L	D32906572R
D1251472	D12922572	D32514572R	D3290672L
D12522572	D1292272	D3251472L	D3290672R
D1252272	D12930572	D3251472R	D32914572L
D12530572	D1293072	D32606572L	D32914572R
D1253072	D13006572	D32606572R	D3291472L
D12606572	D1300672	D3260672L	D3291472R
D1260672	D13014572	D3260672R	D33006572L
D12614572	D1301472	D32614572L	D33006572R
D1261472	D13022572	D32614572R	D3300672L
D12622572	D1302272	D3261472L	D3300672R
D1262272	D13030572	D3261472R	D33014572L
D12630572	D1303072	D32622572L	D33014572R
D1263072	D32306572L	D32622572R	D3301472L
D12706572	D32306572R	D3262272L	D3301472R

= finish

01 - Chrome

04 - Brushed Nickel

06 - Oil Rubbed Bronze

09 - Satin Black



TEL: 866-731-2244
FAX: 866-857-3638
DREAMLINE.COM



For more information on DreamLine® Shower Doors and Enclosures please visit **DreamLine.com**