


ASSEMBLY INSTRUCTIONS

TWIN LOFT BED WITH DESK AND STAIR

If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

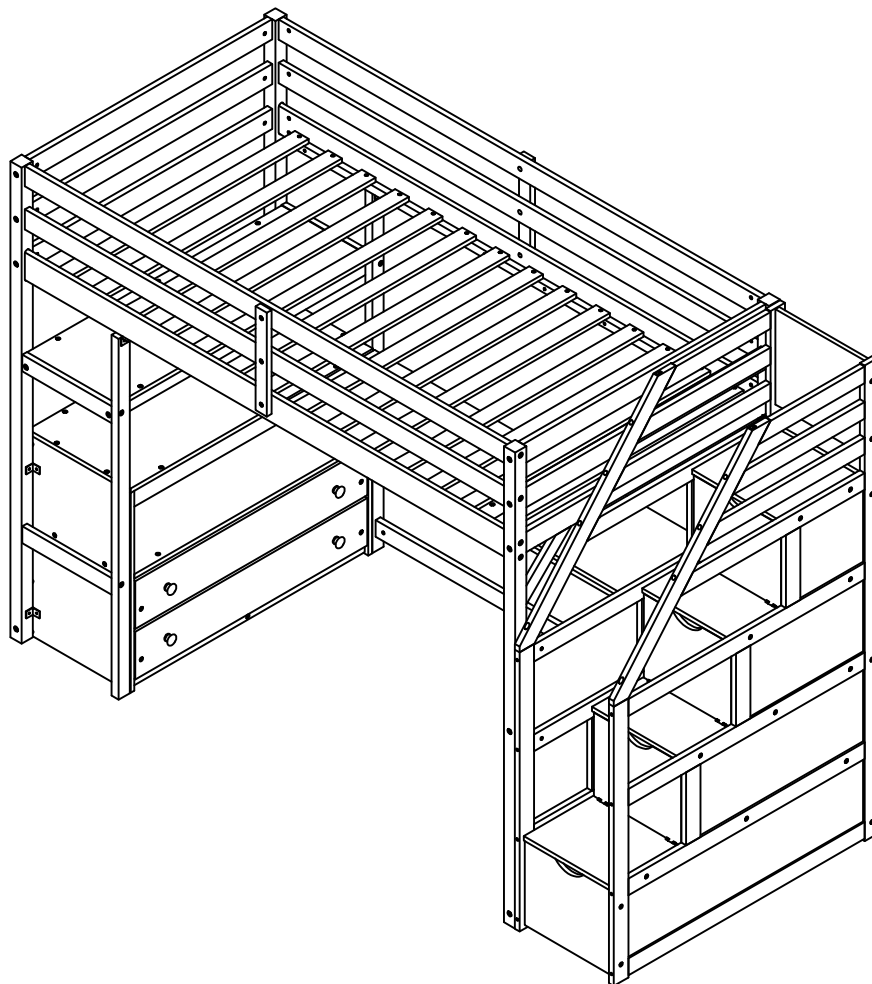

WF301674/WF301675/WF301676

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 38 1/2" WIDE ON UPPER AND ON LOWER BUNKS. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:









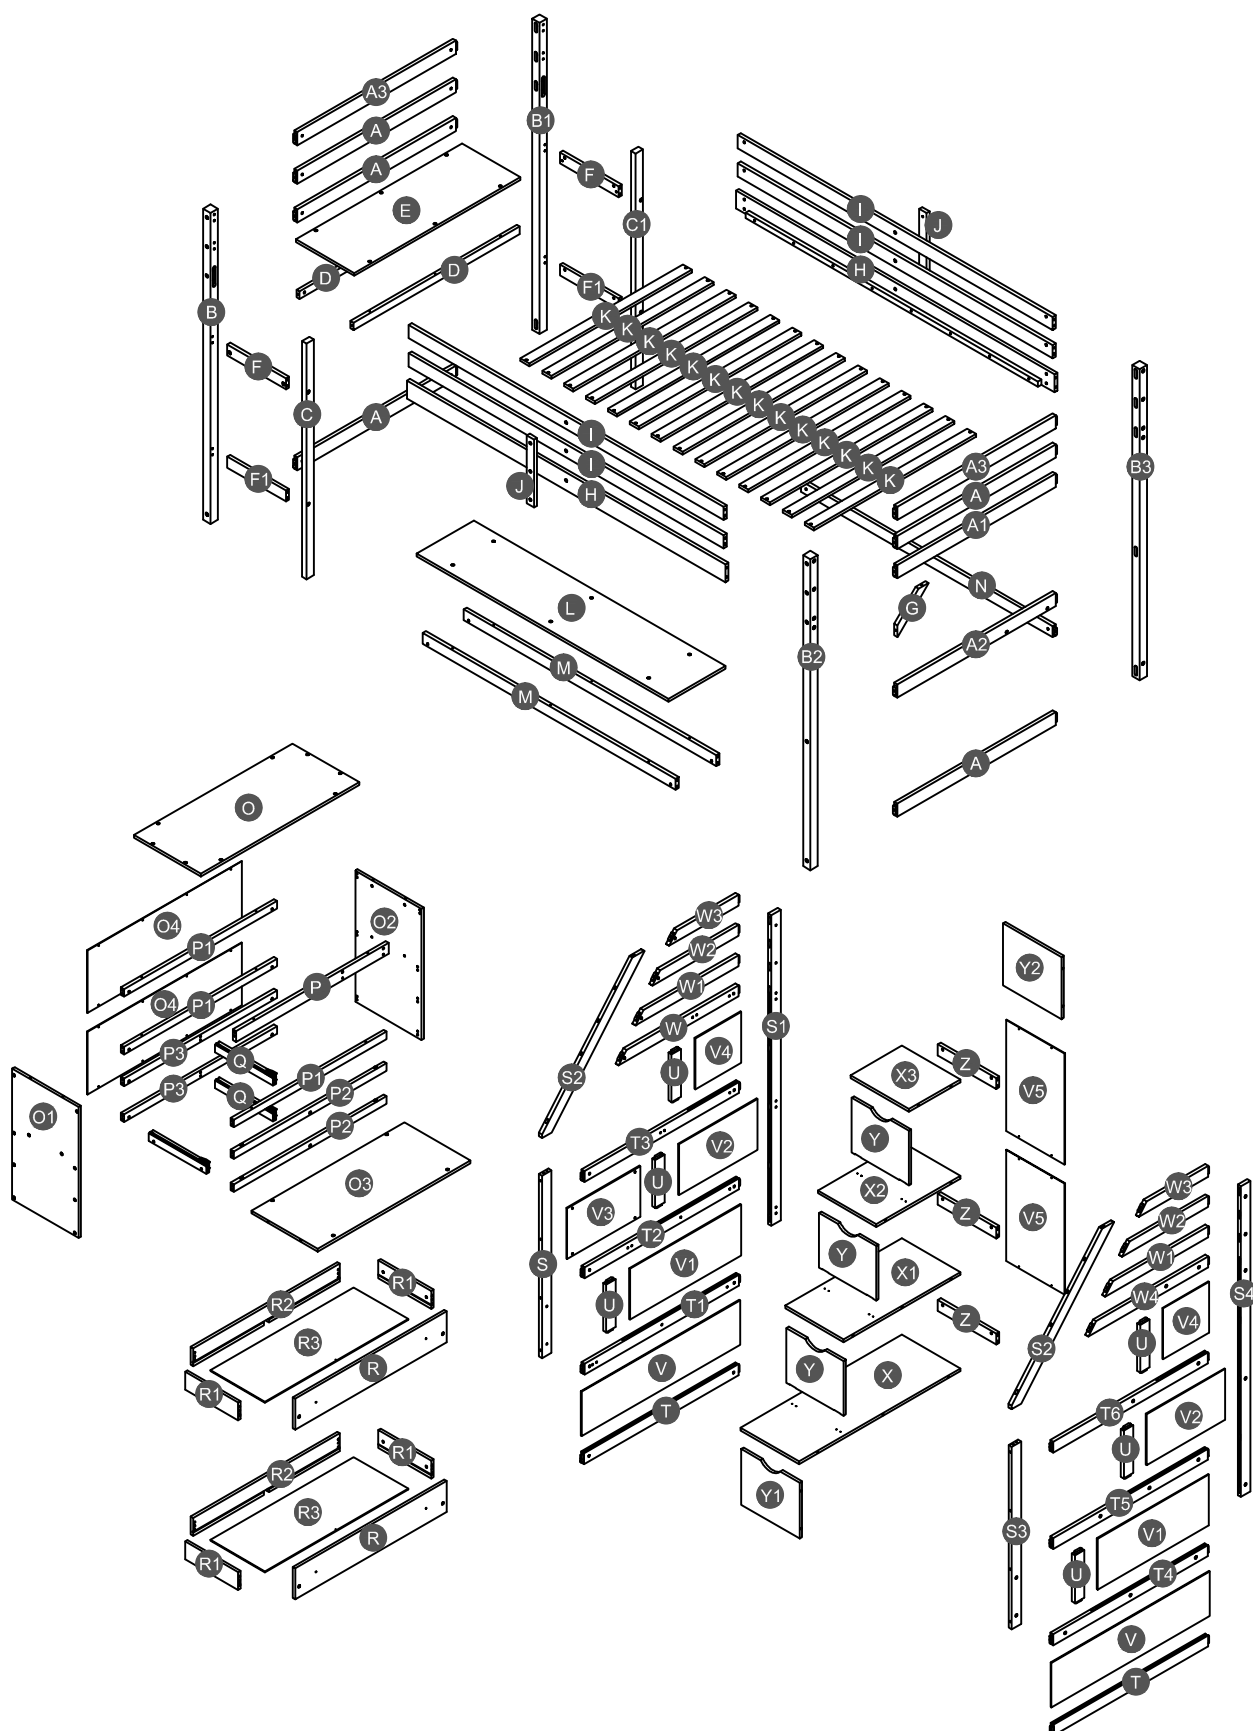

















Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View






















Part List

WF301674

B  Leg (Left Front) - 1pc	B1  Leg (Left Back) - 1pc	B2  Leg (Right Front) - 1pc
B3  Leg (Right Back) - 1pc	C  Leg (Left Front) - 1pc	C1  Leg (Left Back) - 1pc
D  Horizontal bar HB - 2pcs	G  Support FB - 1pc	H  Side rail - 2pcs
I  Upper long guard rail - 4pcs	J  Vertical guard rail - 2pcs	K  Slat - 14pcs
L  Top panel (Back) - 1pc	N  Lower horizontal bar (back) - 1pc	S1  Vertical guard (Left Back)) - 1pc
S2  Guard side - 2pcs	S4  Vertical guard (Right Back) - 1pc	T  Lower horizontal bar - 2pcs
T1  Divider horizontal bar (Left) - 1pc	T2  Divider horizontal bar (Left) - 1pc	T3  Upper horizontal bar (Left) - 1pc
T4  Divider horizontal bar (Right) - 1pc	T5  Divider horizontal bar (Right) - 1pc	T6  Upper horizontal bar (Right) - 1pc
U  Vertical guard - 6pcs	Y2  Upper back panel - 1pc	
























Part List

Hardware List WF301675


















A2  Horizontal bar FB - 1pc	E  Top panel HB - 1pc	O4  Back panel - 2pcs
P1  Divider horizontal bar (front/back) - 3pcs	P2  Lower horizontal bar (front) - 2pcs	P3  Lower horizontal bar (back) - 2pcs
Q  Support drawer - 2pcs	R3  Drawer bottom - 2pcs	S  Vertical guard (Left Front) - 1pc
S3  Vertical guard (Right Front) - 1pc	V5  Back panel - 2pcs	W  Upper horizontal bar (Left) - 1pc
W4  Upper horizontal bar (Right) - 1pc	X  Lower step ladder panel -1pc	X1  Divider step ladder panel -1pc
X2  Divider step ladder panel -1pc	X3  Upper step ladder panel -1pc	Y  Upper front panel - 3pcs
Y1  Lower front panel - 1pc		

Part List


WF301676

A  Horizontal bar HB/FB - 5pcs	A1  Horizontal bar FB - 1pc	A3  Upper horizontal bar HB/FB - 2pcs
F  Upper horizontal bar HB (Front/Back) - 2pcs	F1  Lower horizontal bar HB (Front/Back) - 2pcs	M  Horizontal bar (Front/Back) - 2pcs
O  Top panel - 1pc	O1  Side panel (Left) - 1pc	O2  Side panel (Right) - 1pc
O3  Shelf panel - 1pc	P  Upper horizontal bar (front) - 1pc	R  Drawer front - 2pcs
R1  Drawer (left/right) - 4pcs	R2  Drawer back - 2pcs	V  Lower side panel - 2pcs
V1  Divider side panel - 2pcs	V2  Divider side panel - 2pcs	V3  Divider side panel - 1pc
V4  Upper side panel - 2pcs	W1  Upper horizontal bar (Left/Right) - 2pcs	W2  Upper horizontal bar (Left/Right) - 2pcs
W3  Upper horizontal bar (Left/Right) - 2pcs	Z  Horizontal bar (Back) - 3pcs	

Hardware List WF301675


1	 Ø8*30mm Wood dowel (58pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (32pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (23pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (83pcs)	5	 (Ø12)1/4"*30mm Hex-Head bolts (6pcs)	6	 1/4"*15 (9.5mm) Horizontal-Hole bolts(138pcs)
7	 Ø3.5*15mm Wood screws (28pcs)	8	 (Ø12)1/4"*65mm Hex-Head bolts (18pcs)	9	 (Ø12)1/4"*40mm Hex-Head bolts (22pcs)
10	 (1/4")4.5*58mm Allen key (1pc)	11	 Ø4*30mm Wood screws (28pcs)	12	 340*30mm Upper slider drawer (2pcs)
13	 Ø3.5*15mm Wood screws (32pcs)	14	 3/16"*25mm Ph zinc(Knob) (4pcs)	15	 Ø10*40mm Wood dowel (8pcs)
16	 Ø38*31mm Pine Knob (4pcs)	17	 50*24*24*2mm Metal bracket (3pcs)	18	 45*17*13mm Door catch (3pcs)
19	 42*12*1mm Metal magnet (3pcs)	20	 24*28*28*2mm Metal bracket (7pcs)	21	 Ø3.5*12mm Wood screws (24pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

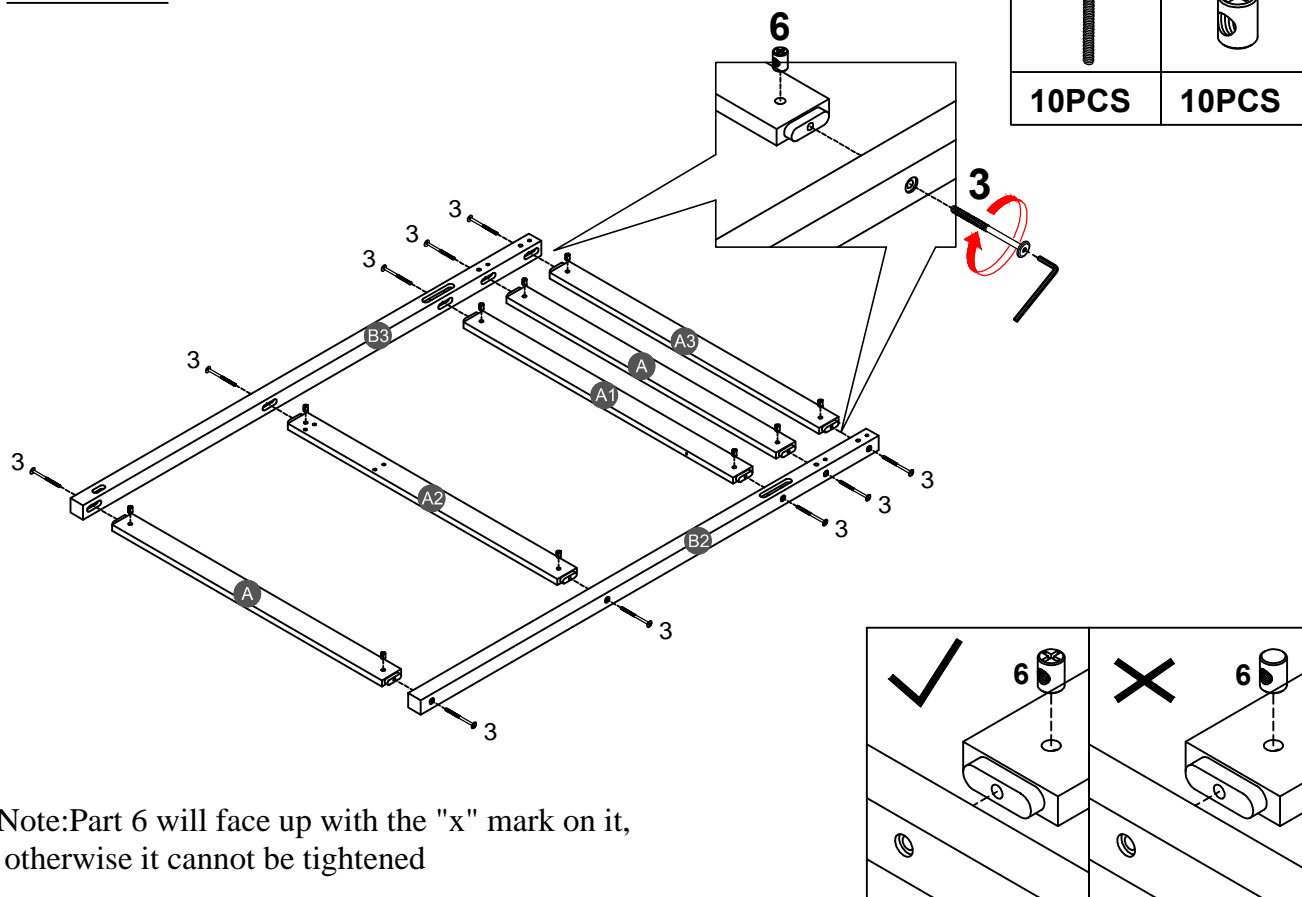

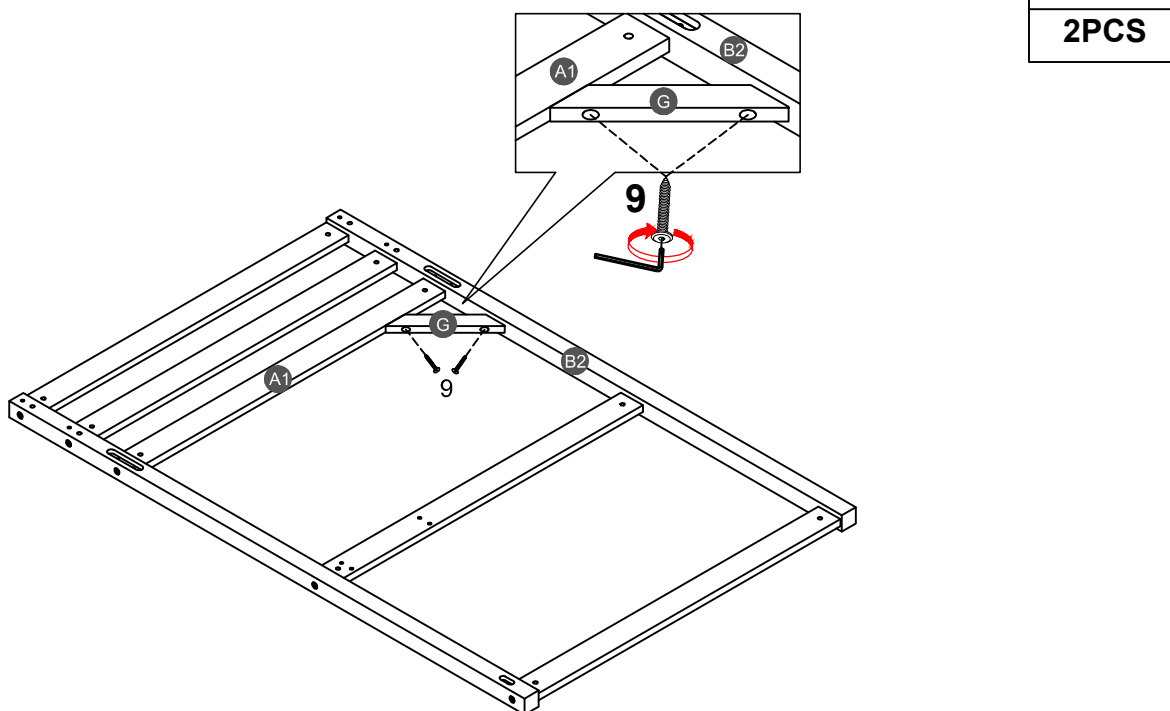

STEP 2:

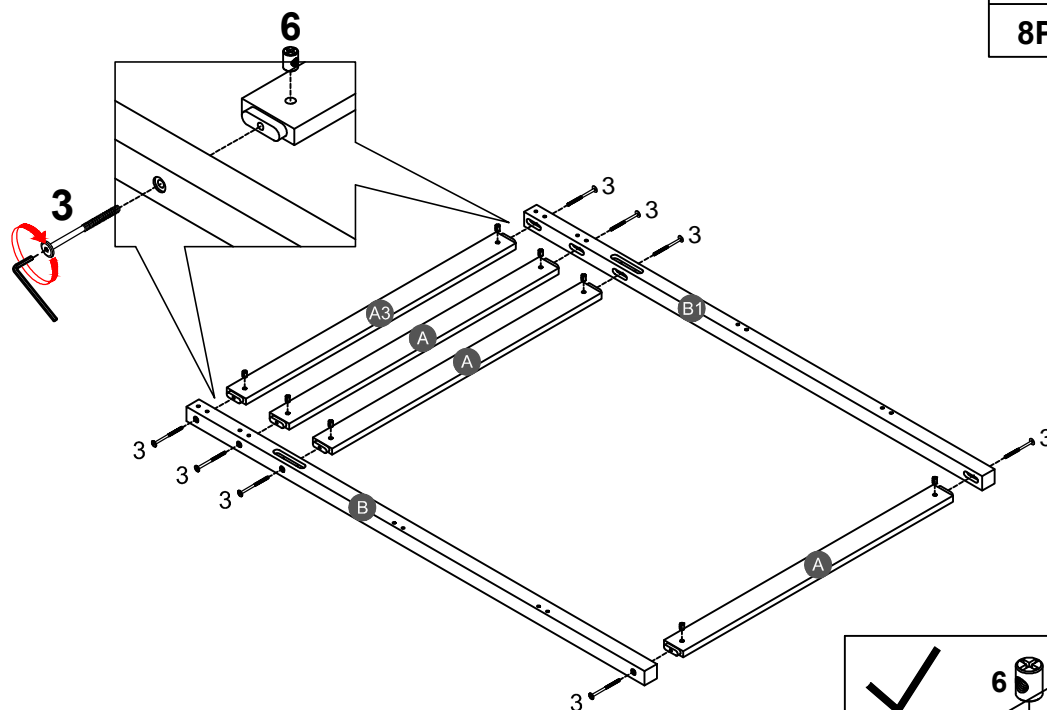


STEP 3:






3		6	
8PCS		8PCS	

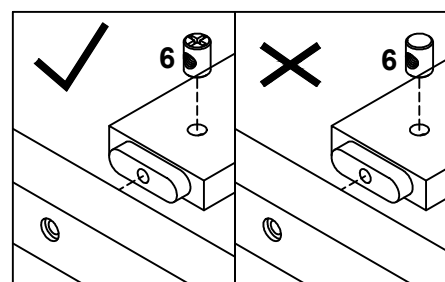Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

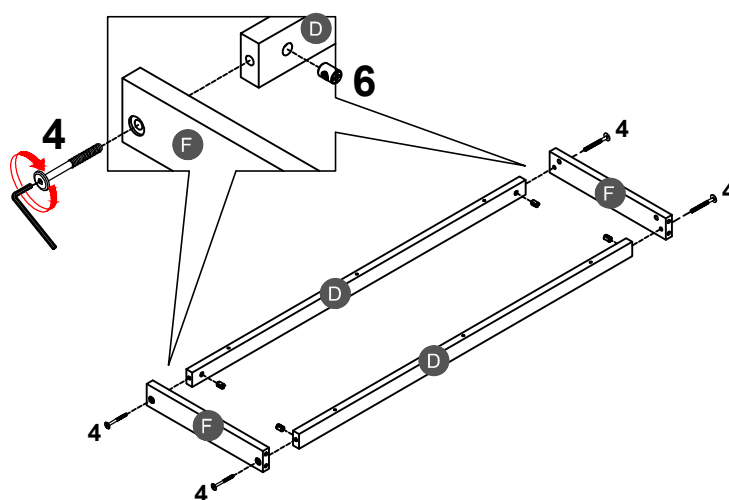


STEP 4:




4		6	
4PCS		4PCS	


STEP 5:

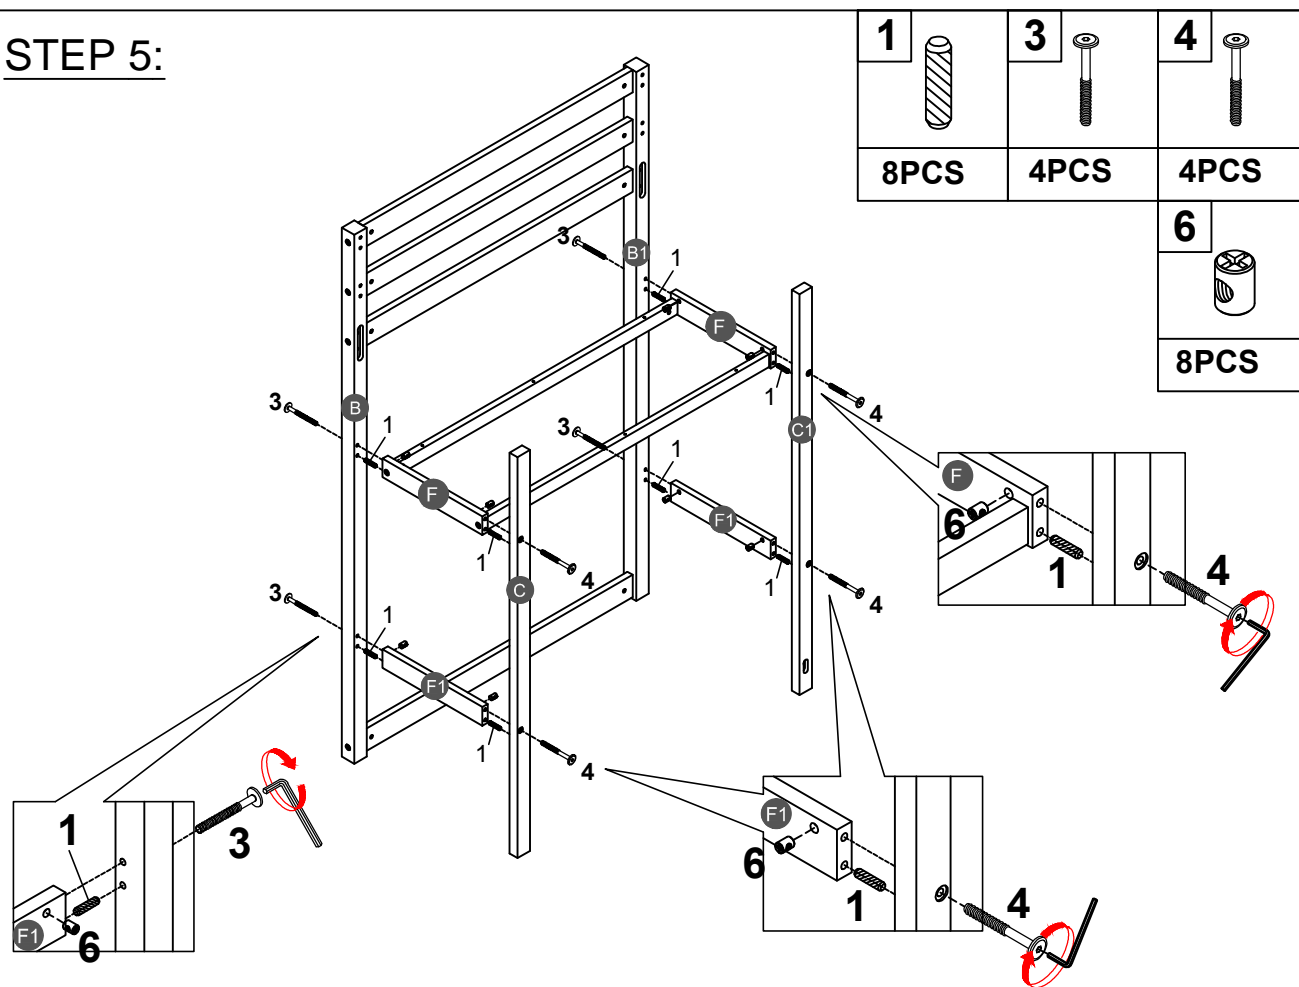


STEP 6:

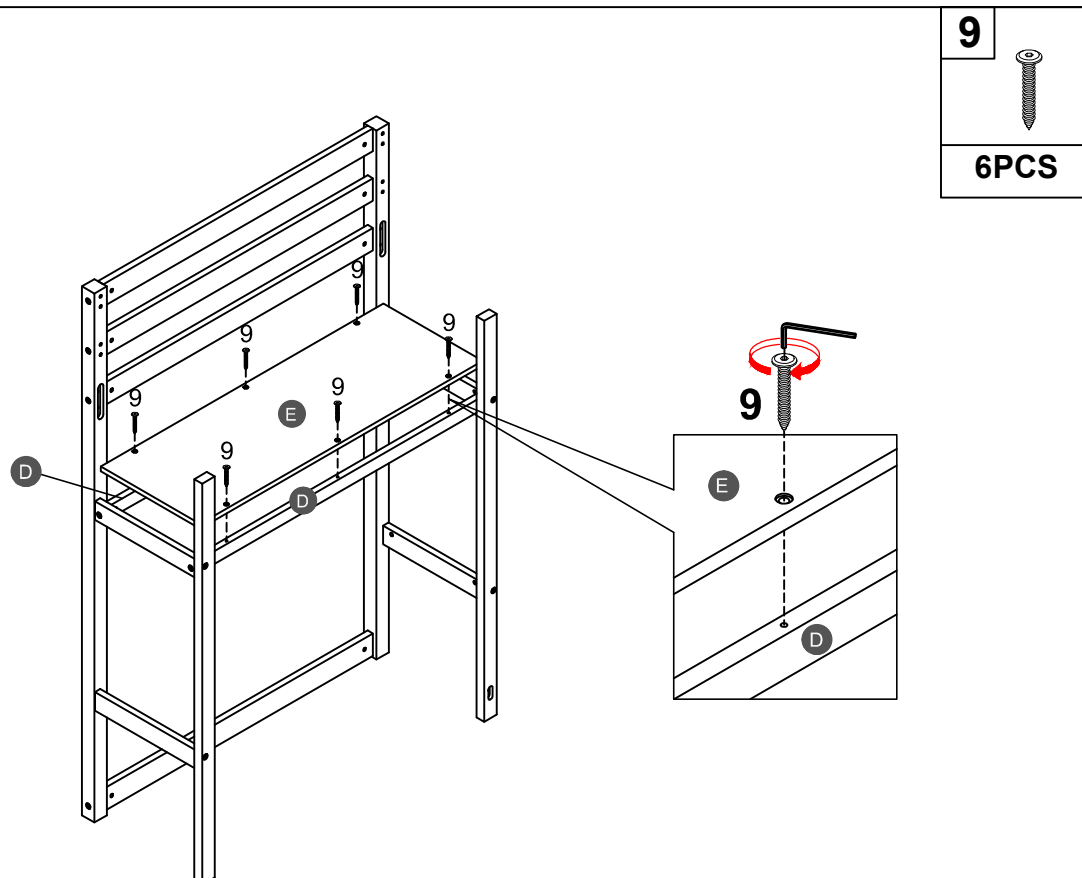


STEP 7:

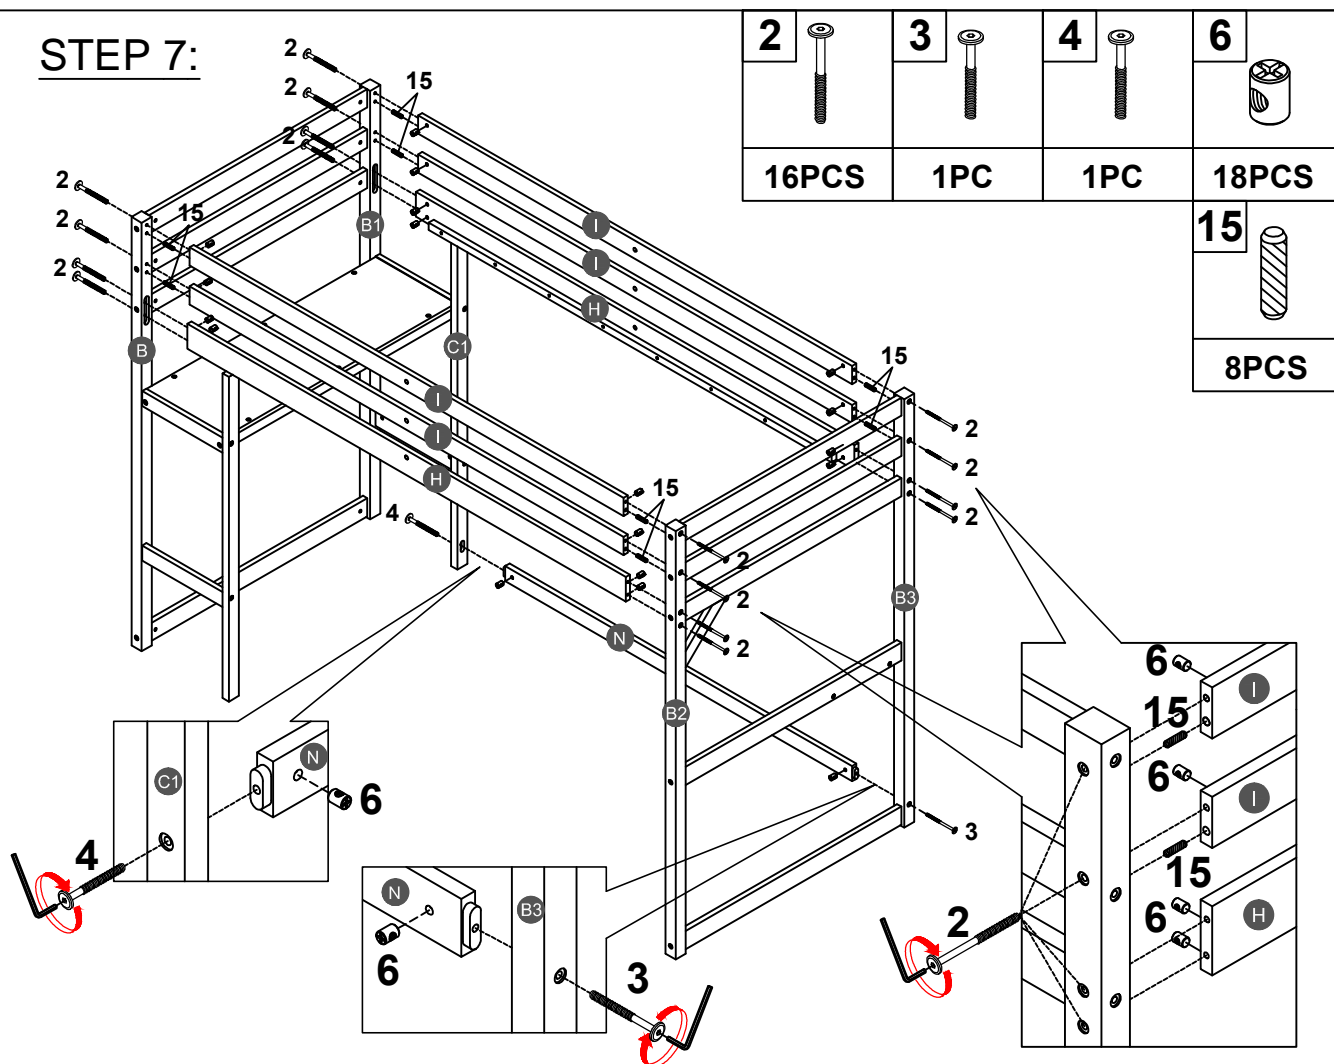

STEP 8:

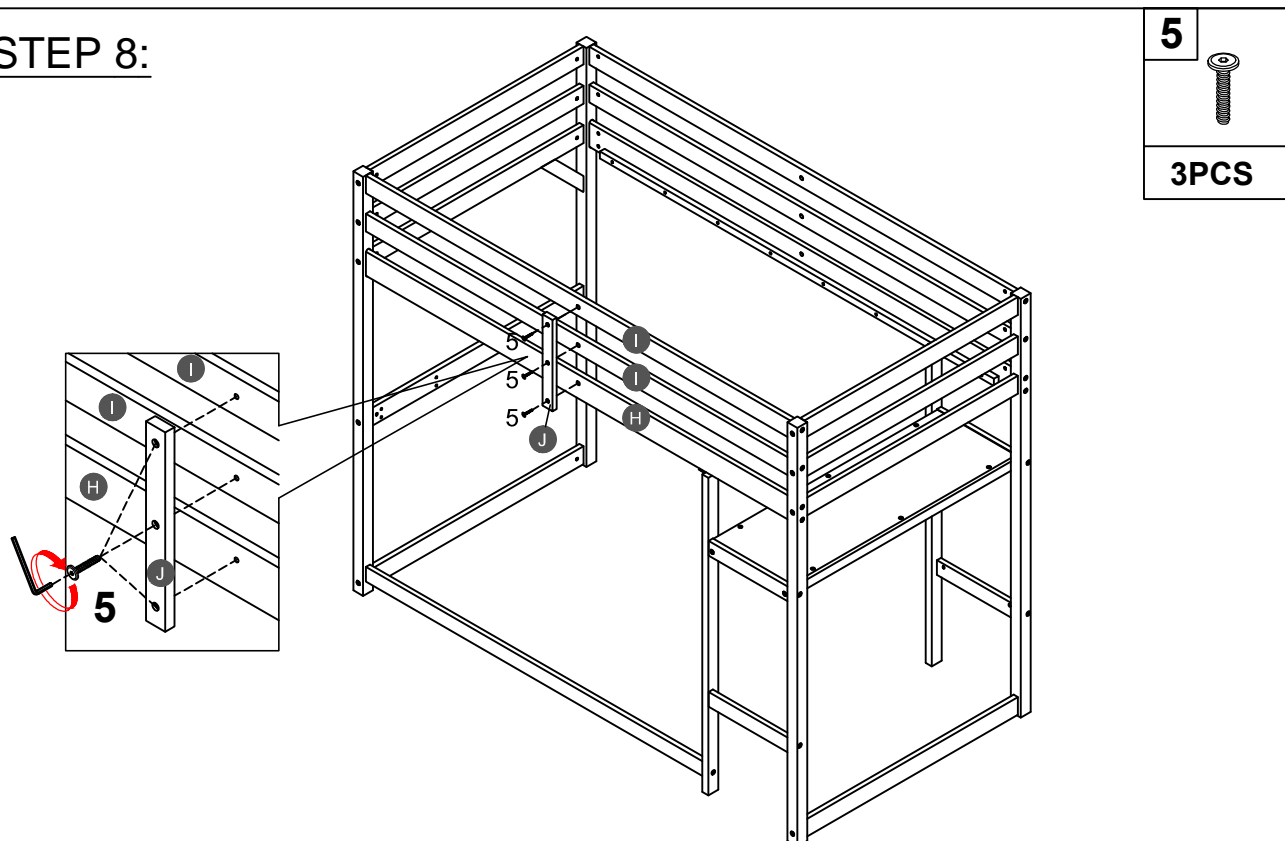

STEP 9:

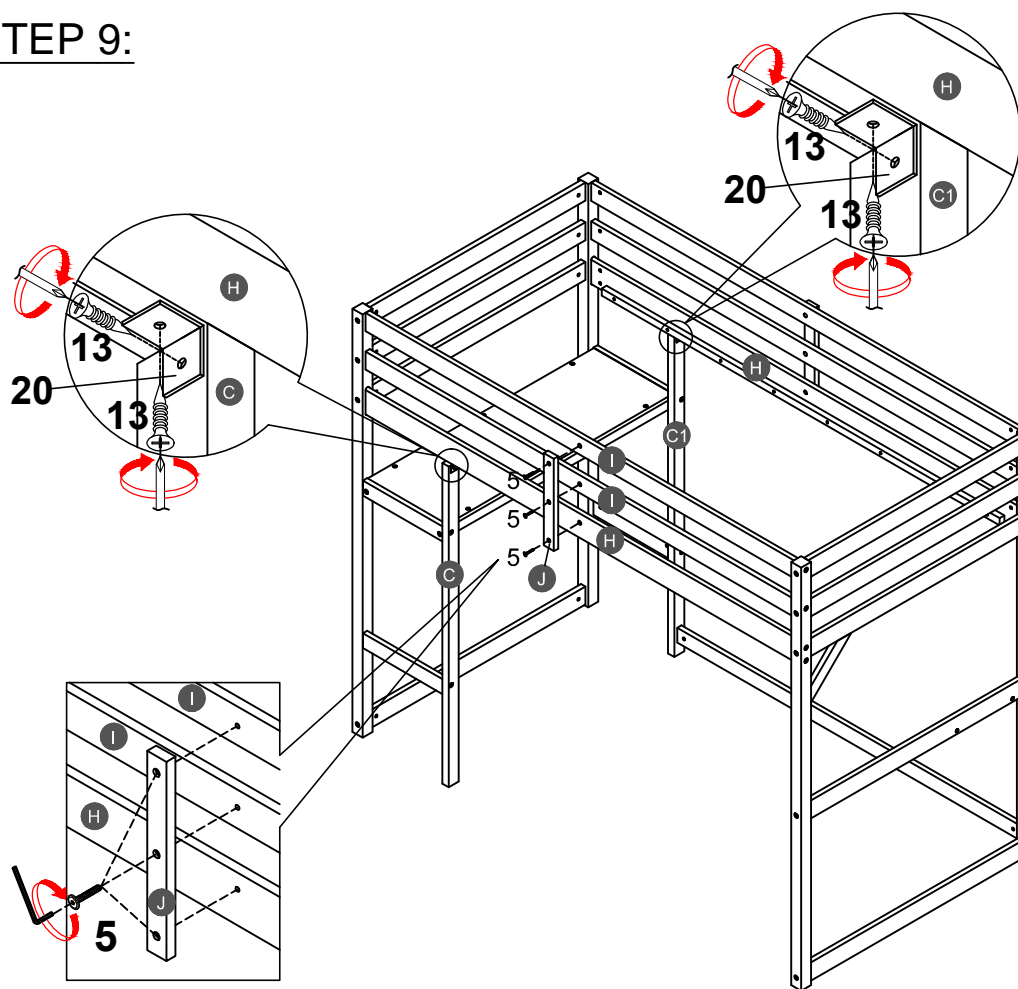

5



3PCS

13




4PCS

20



2PCS

STEP 10:

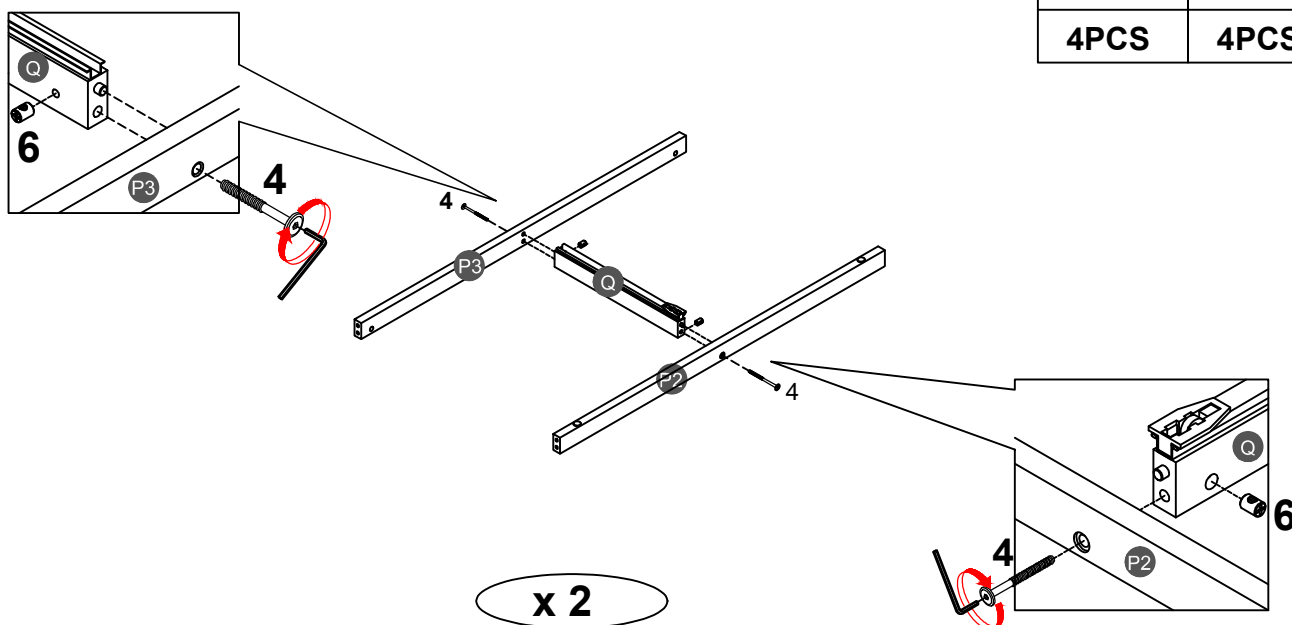

4



4PCS


6




4PCS

x 2


STEP 11:

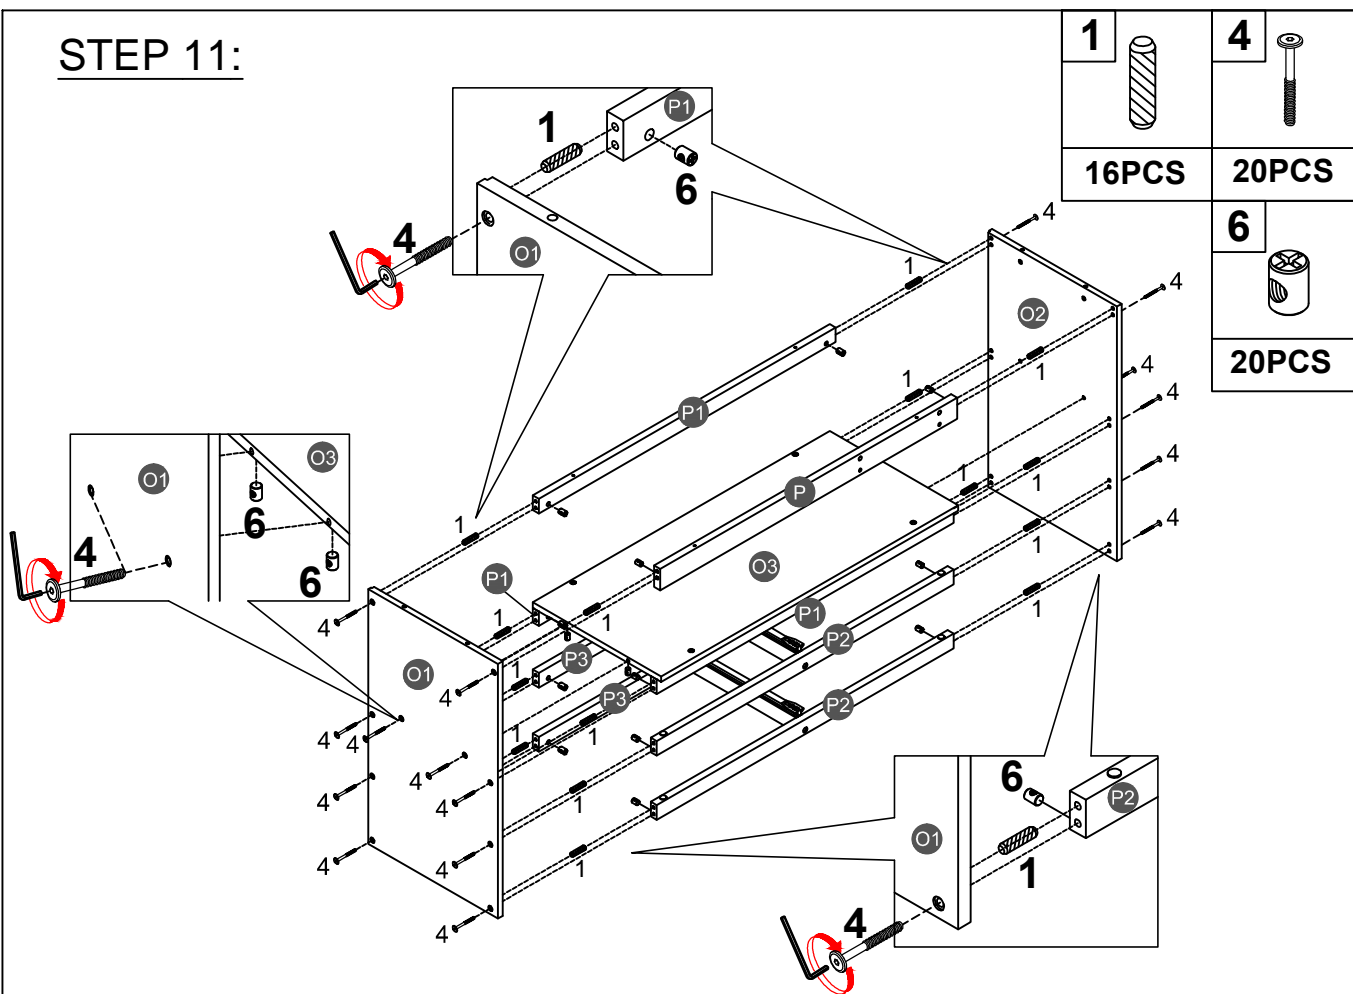

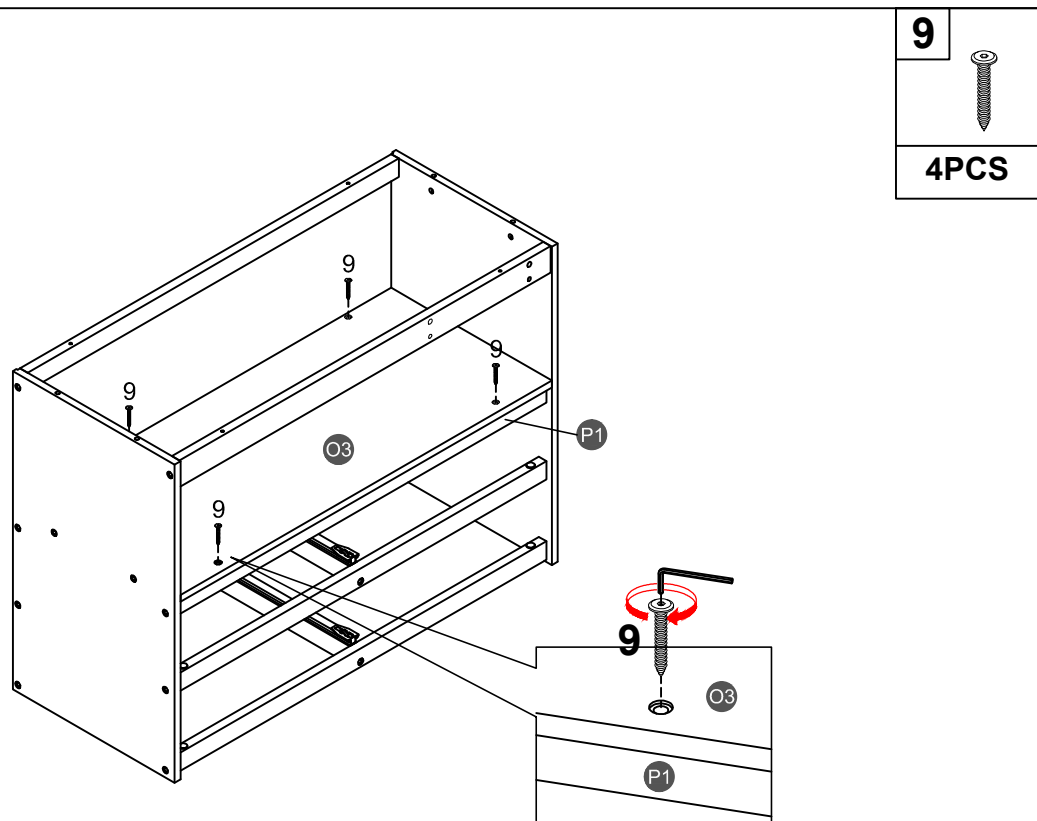


STEP 12:

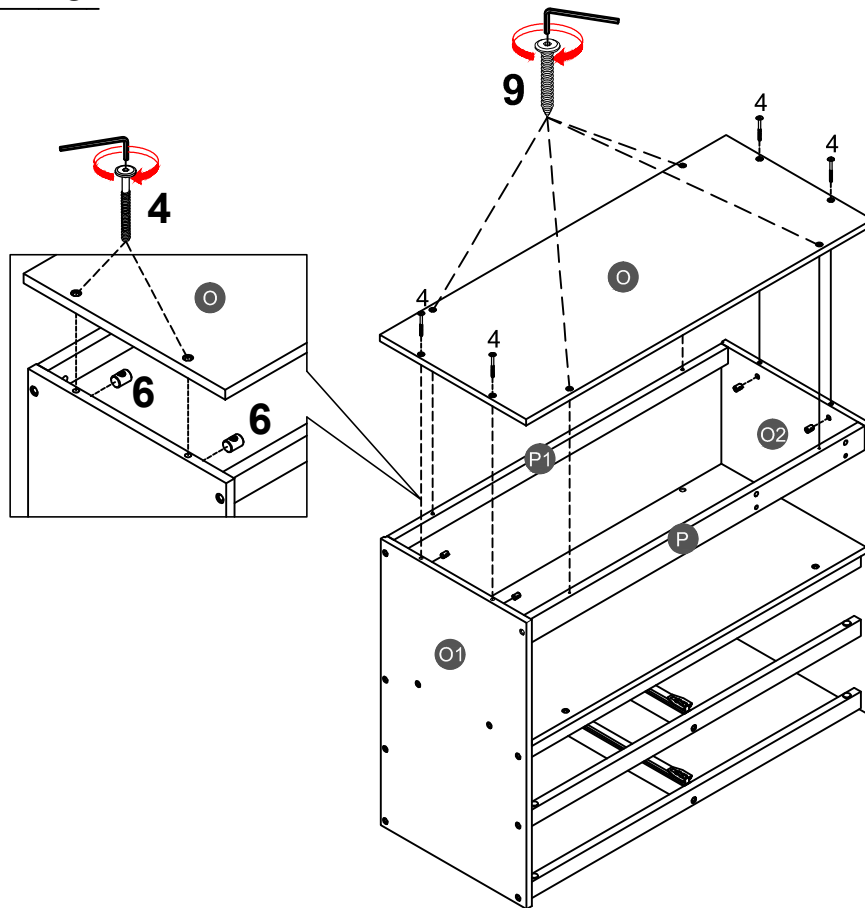



STEP 13:




4		6	
4PCS		4PCS	
		9	
		4PCS	


STEP 14:

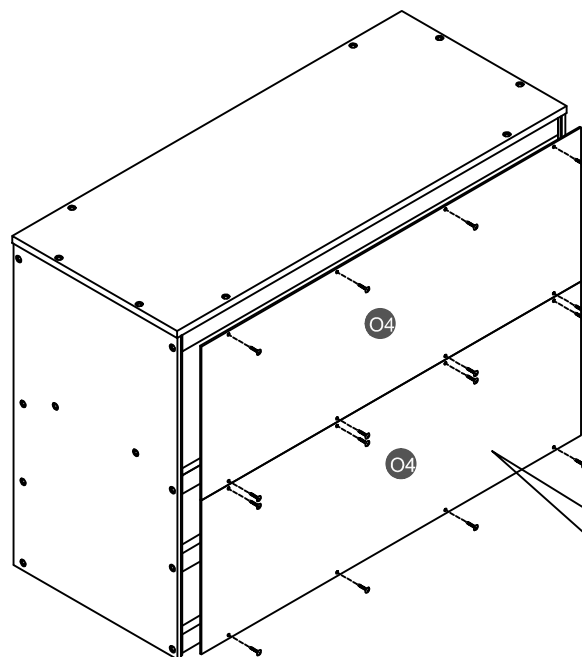

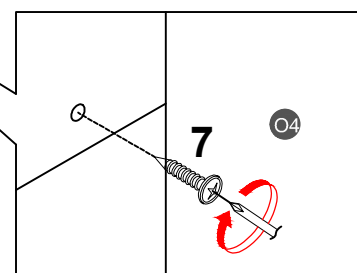


7	
16PCS	




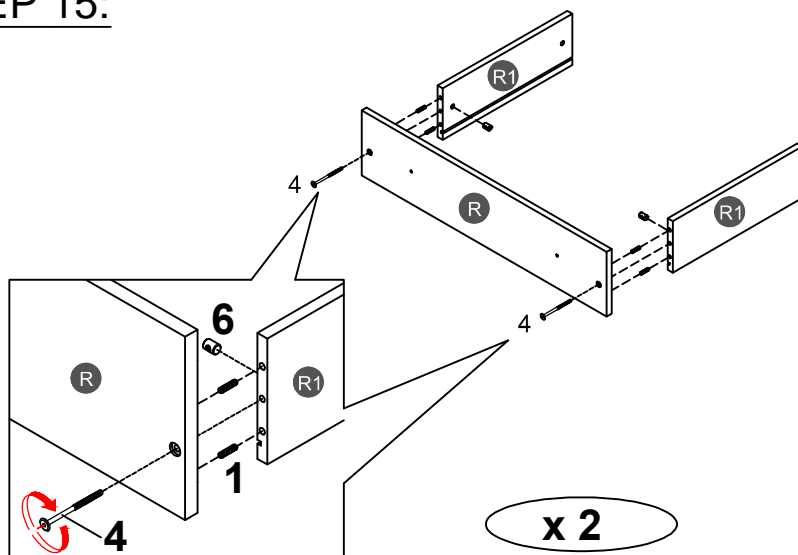


STEP 15:




1		4	
8PCS		4PCS	
		6	
		4PCS	

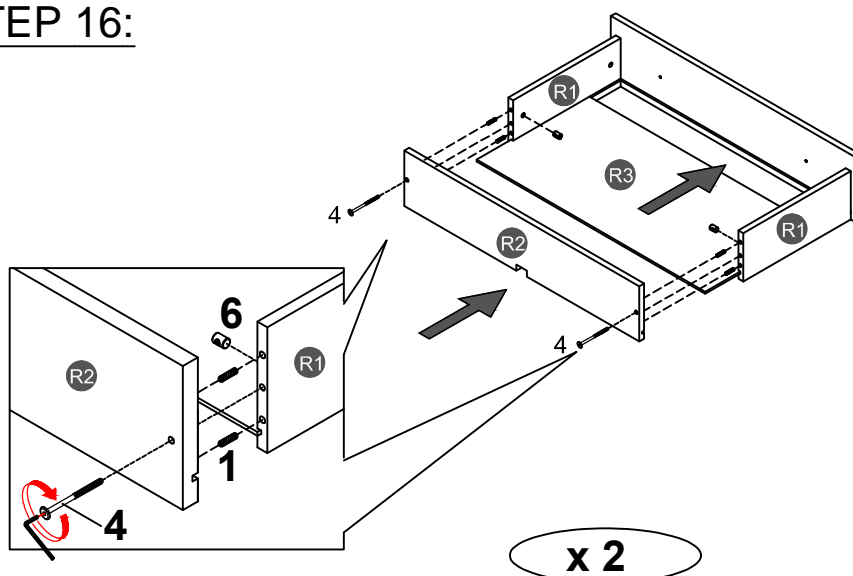

STEP 16:





1		4	
8PCS		4PCS	
		6	
		4PCS	

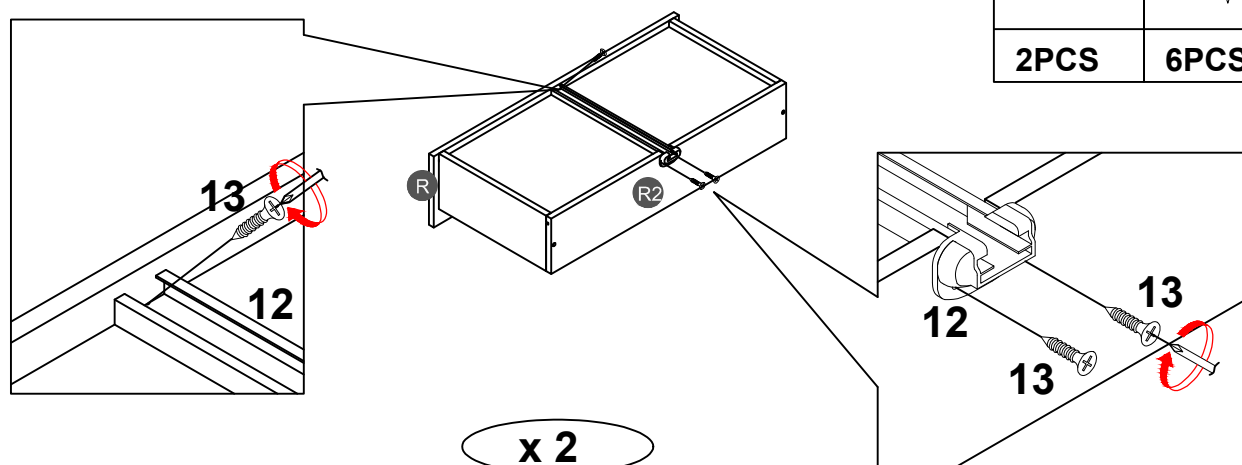
STEP 17:



12		13	
2PCS		6PCS	


STEP 18:

14		16	
4PCS		4PCS	

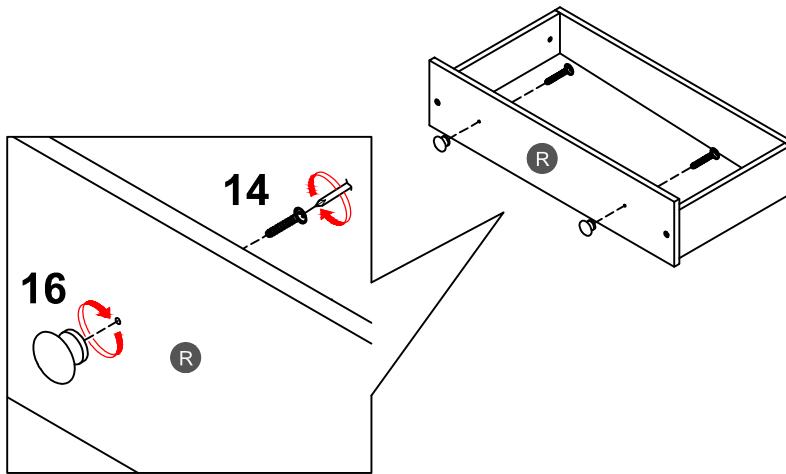


x 2



STEP 19:

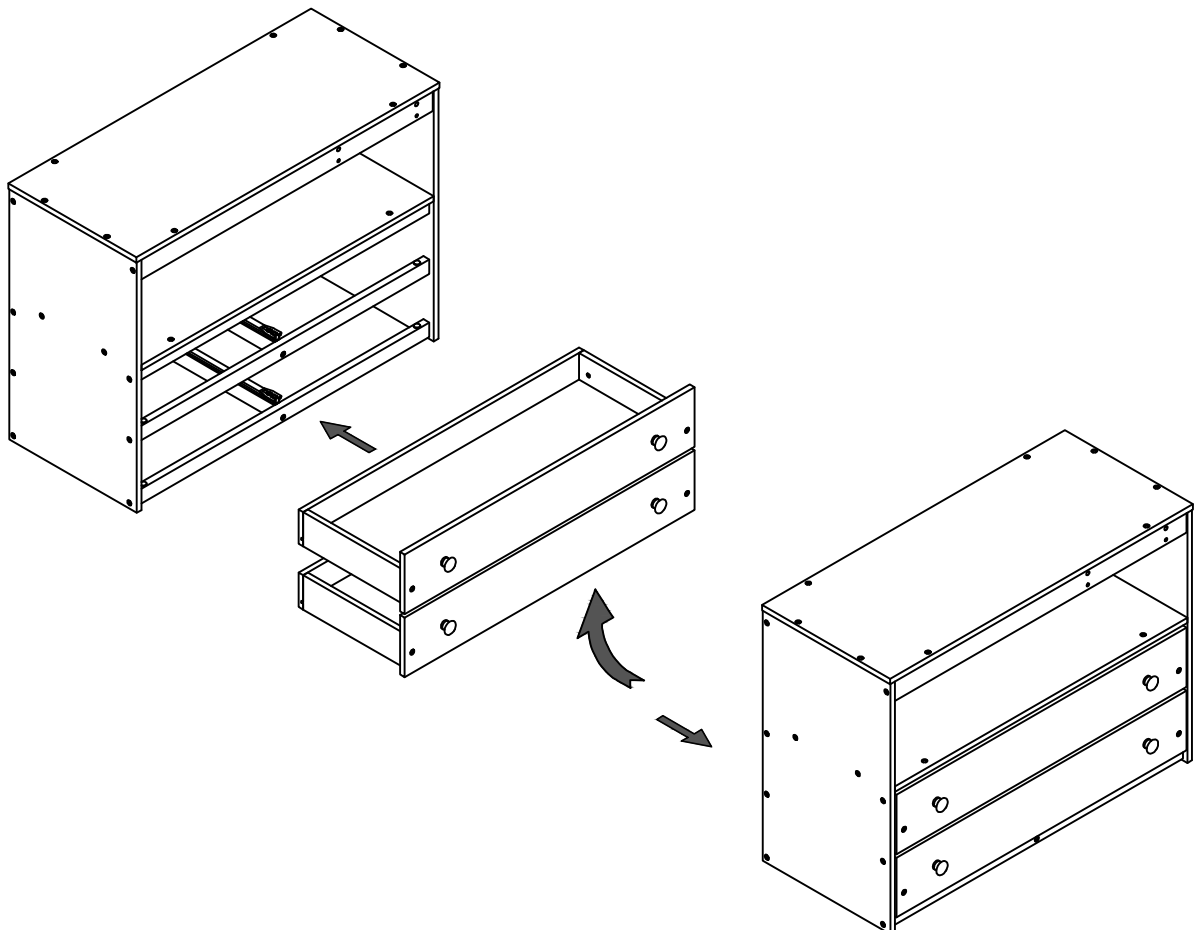


STEP 20:

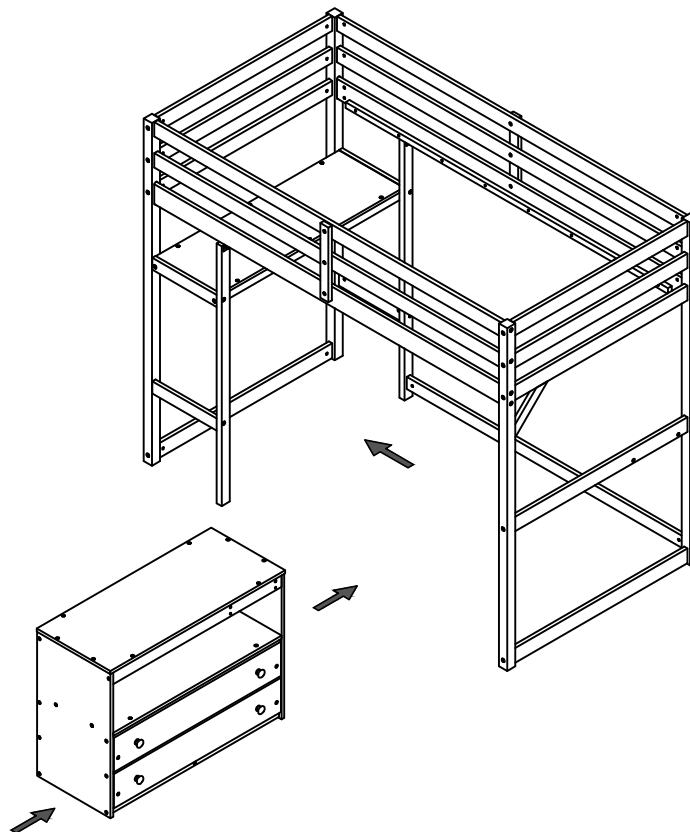




STEP 21:


13		20	
4PCS		2PCS	

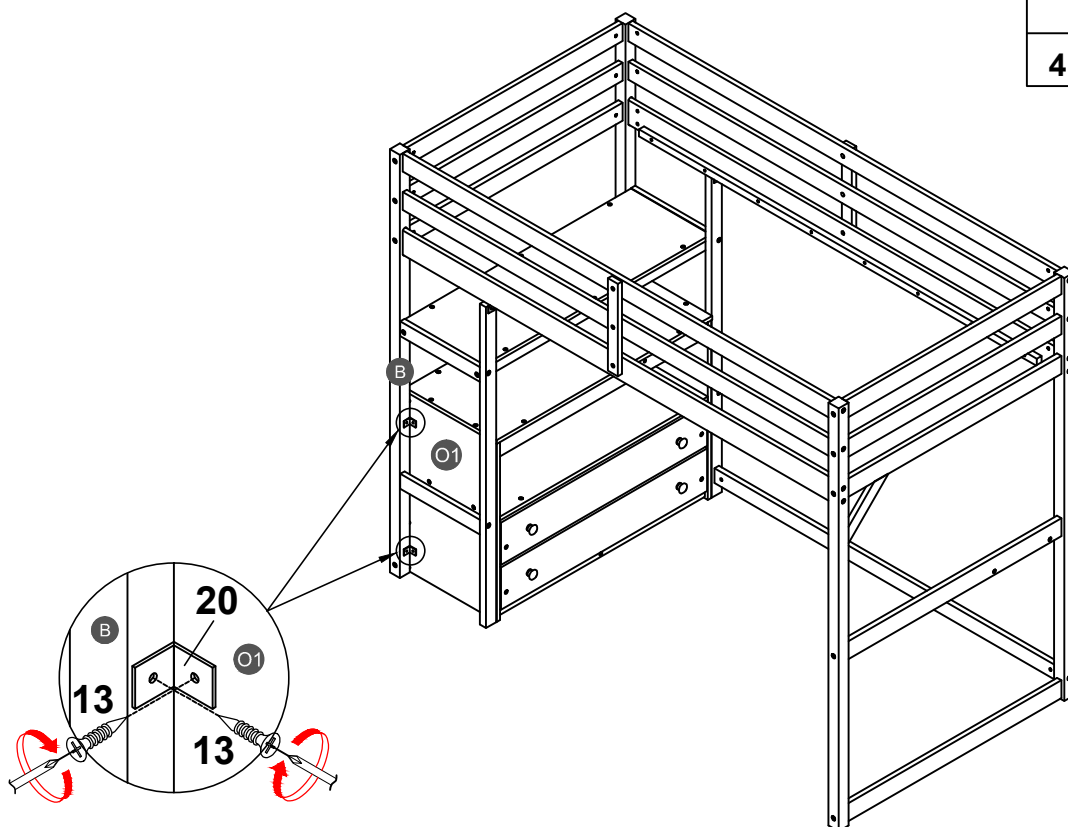


STEP 22:

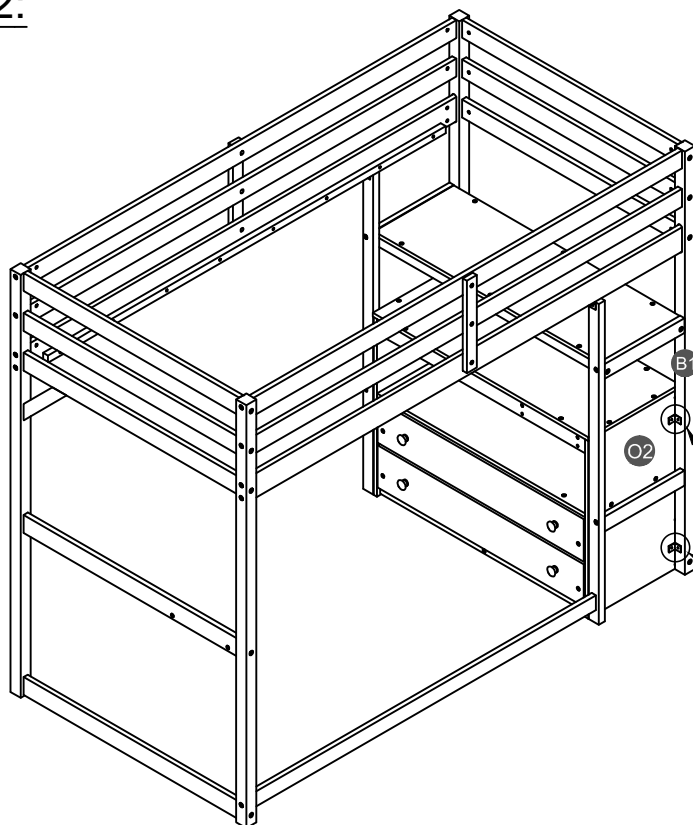

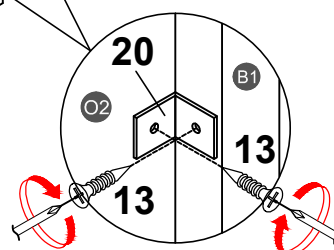


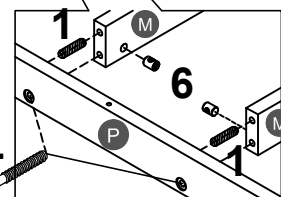
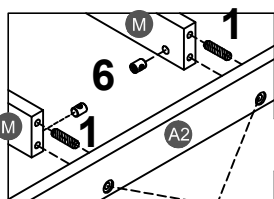
13	20
	
4PCS	2PCS

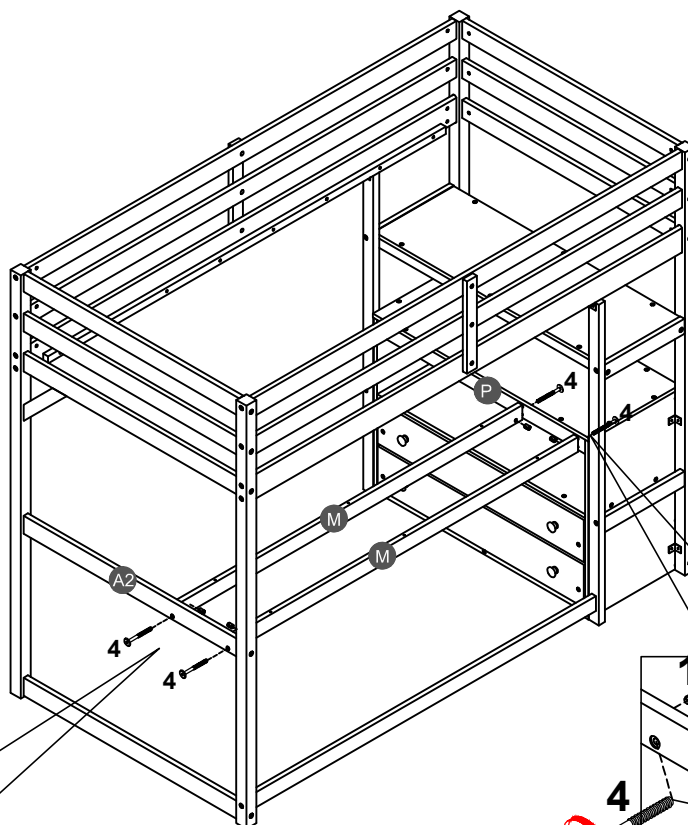

STEP 23:



1	4
	
4PCS	4PCS
	6
	
	4PCS




STEP 24:


9




6PCS

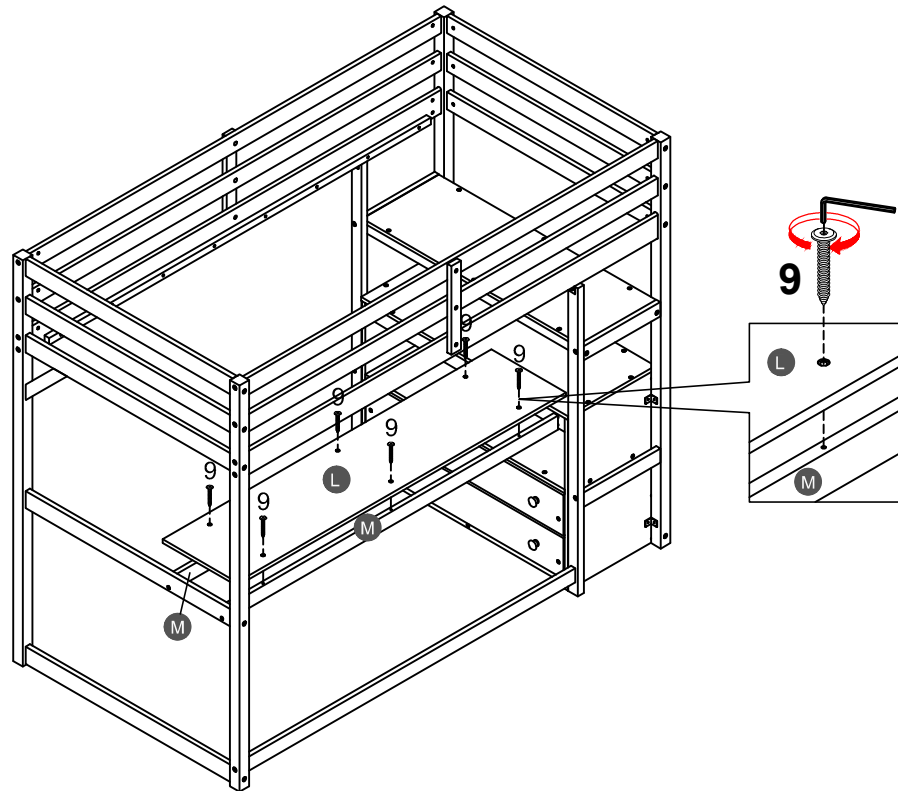


STEP 25:

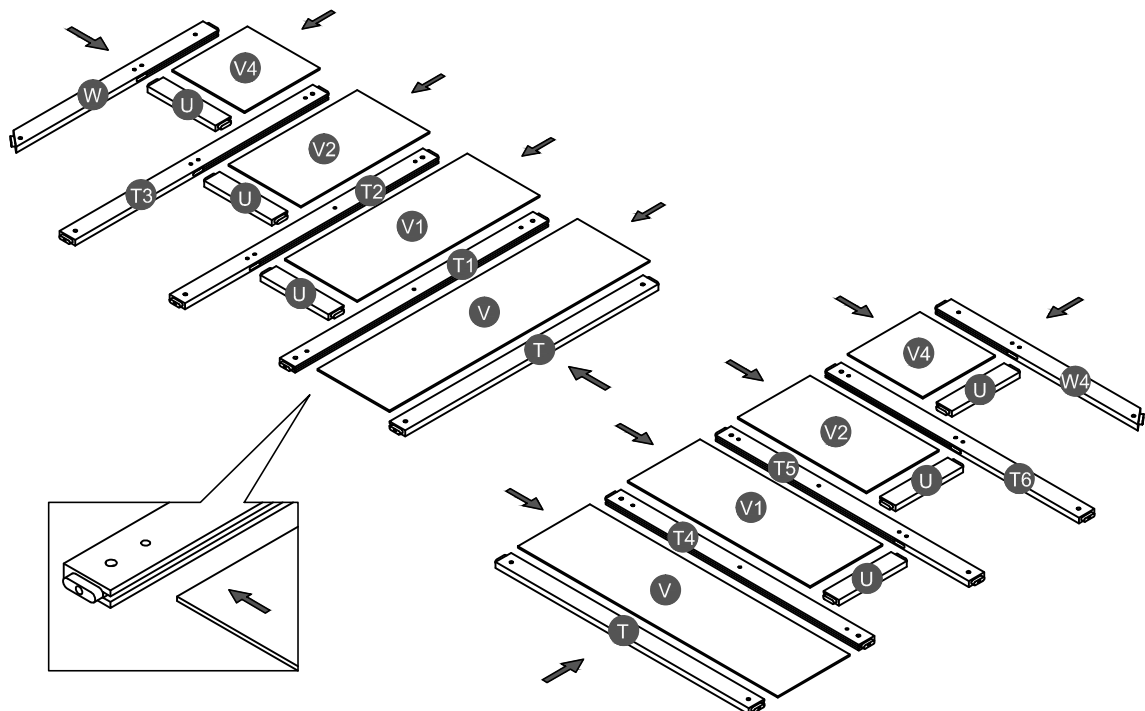


STEP 26:

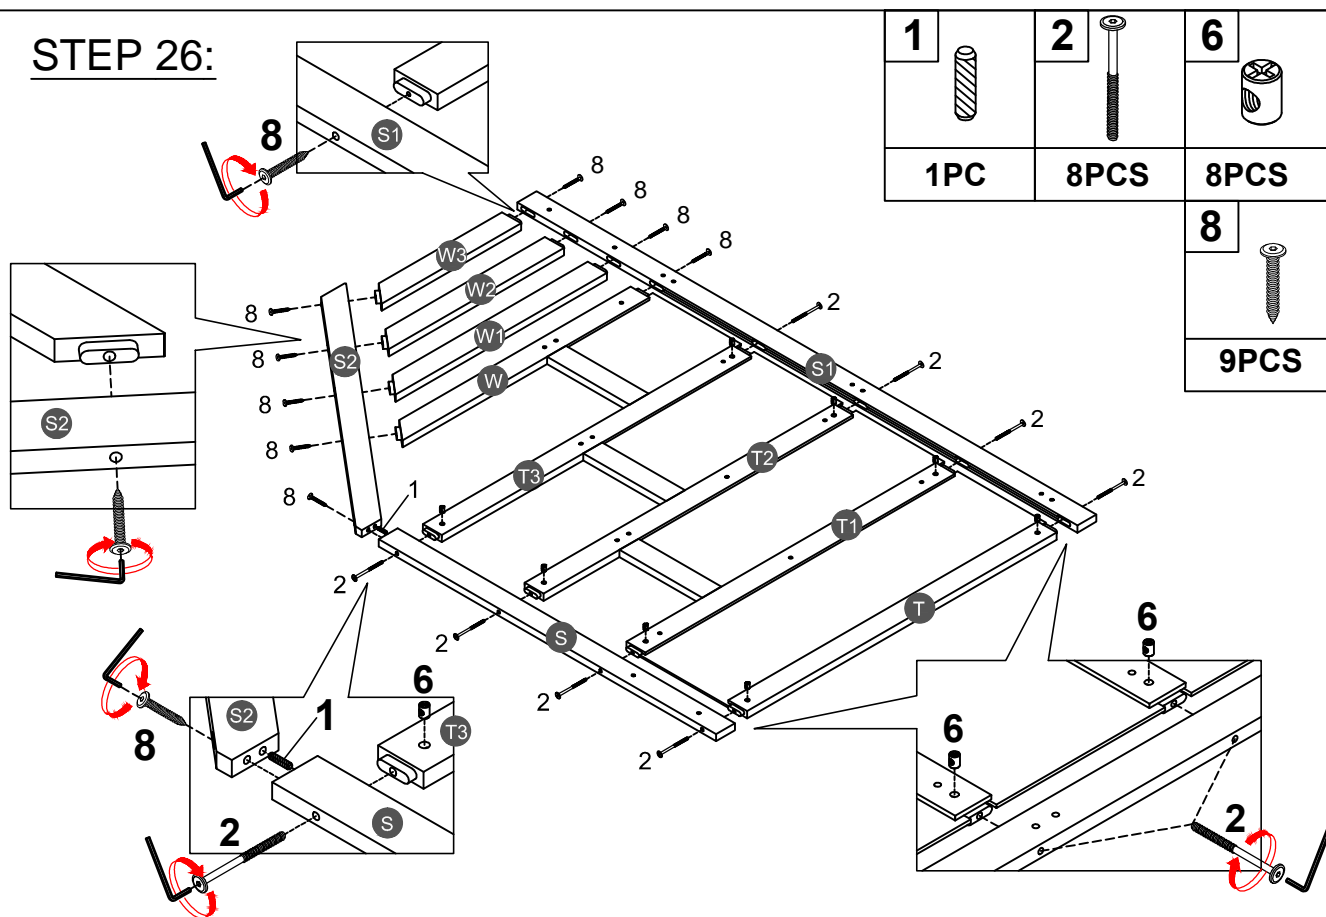

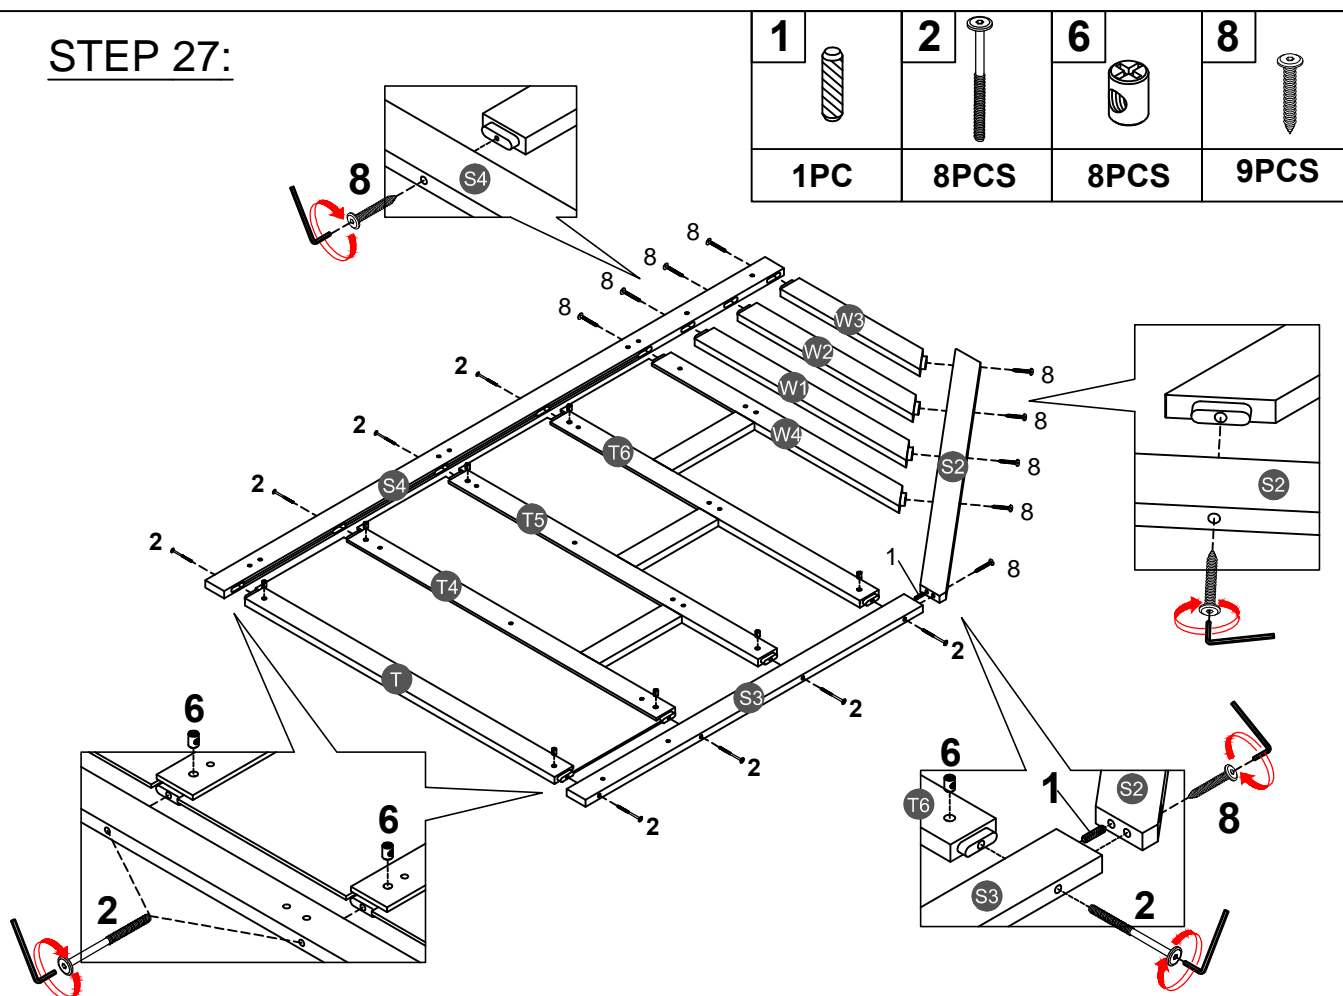

STEP 27:

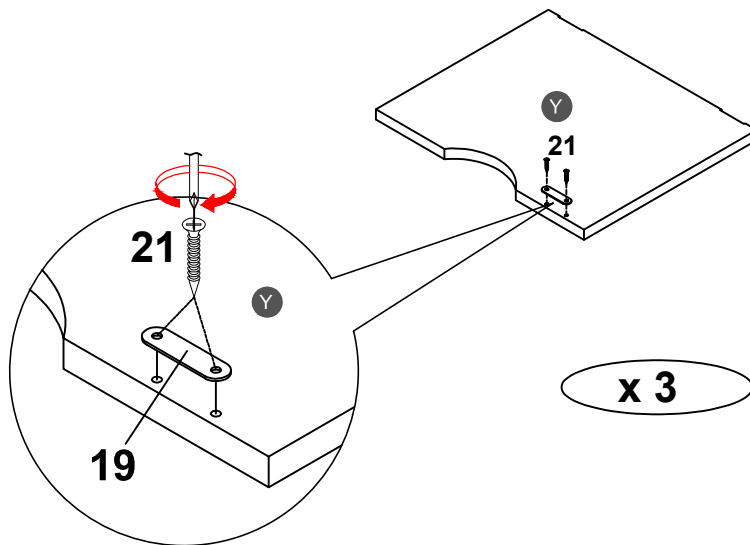




STEP 28:




19	21
	
3PCS	6PCS



STEP 29:

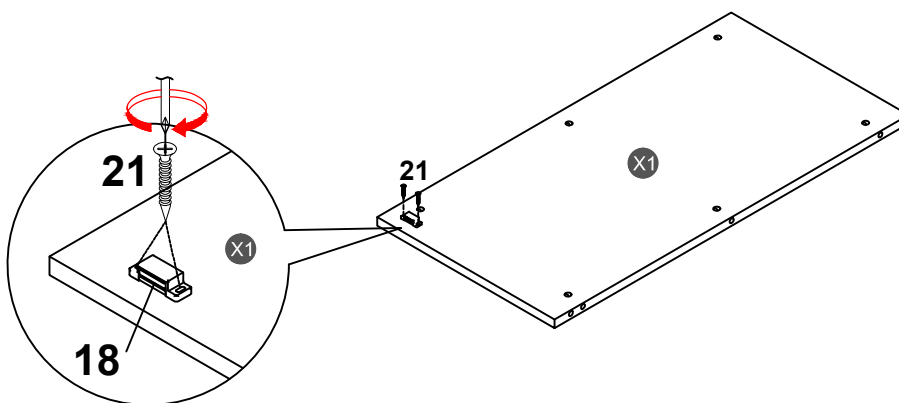


18	21
	
1PC	2PCS



STEP 30:

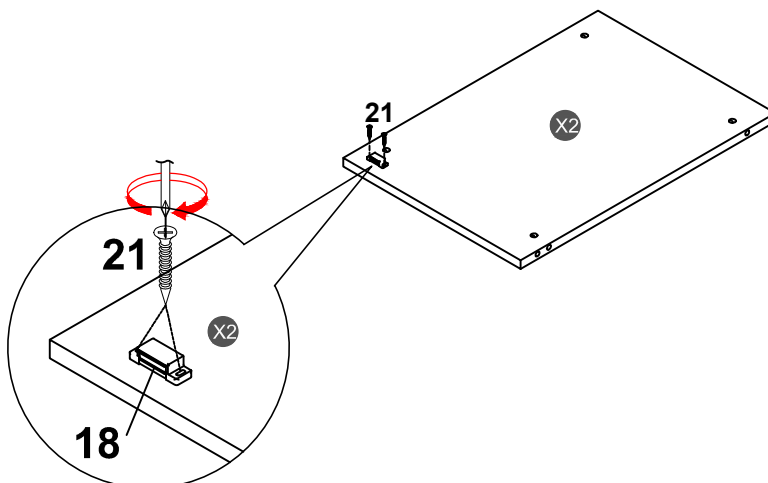


18	21
	
1PC	2PCS

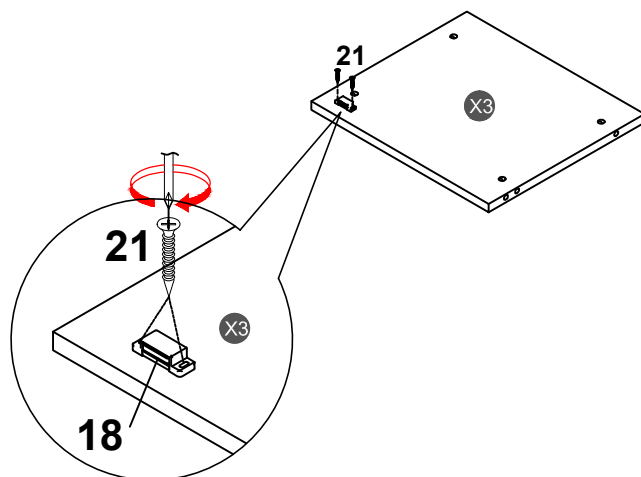


STEP 31:



18	21
	
1PC	2PCS

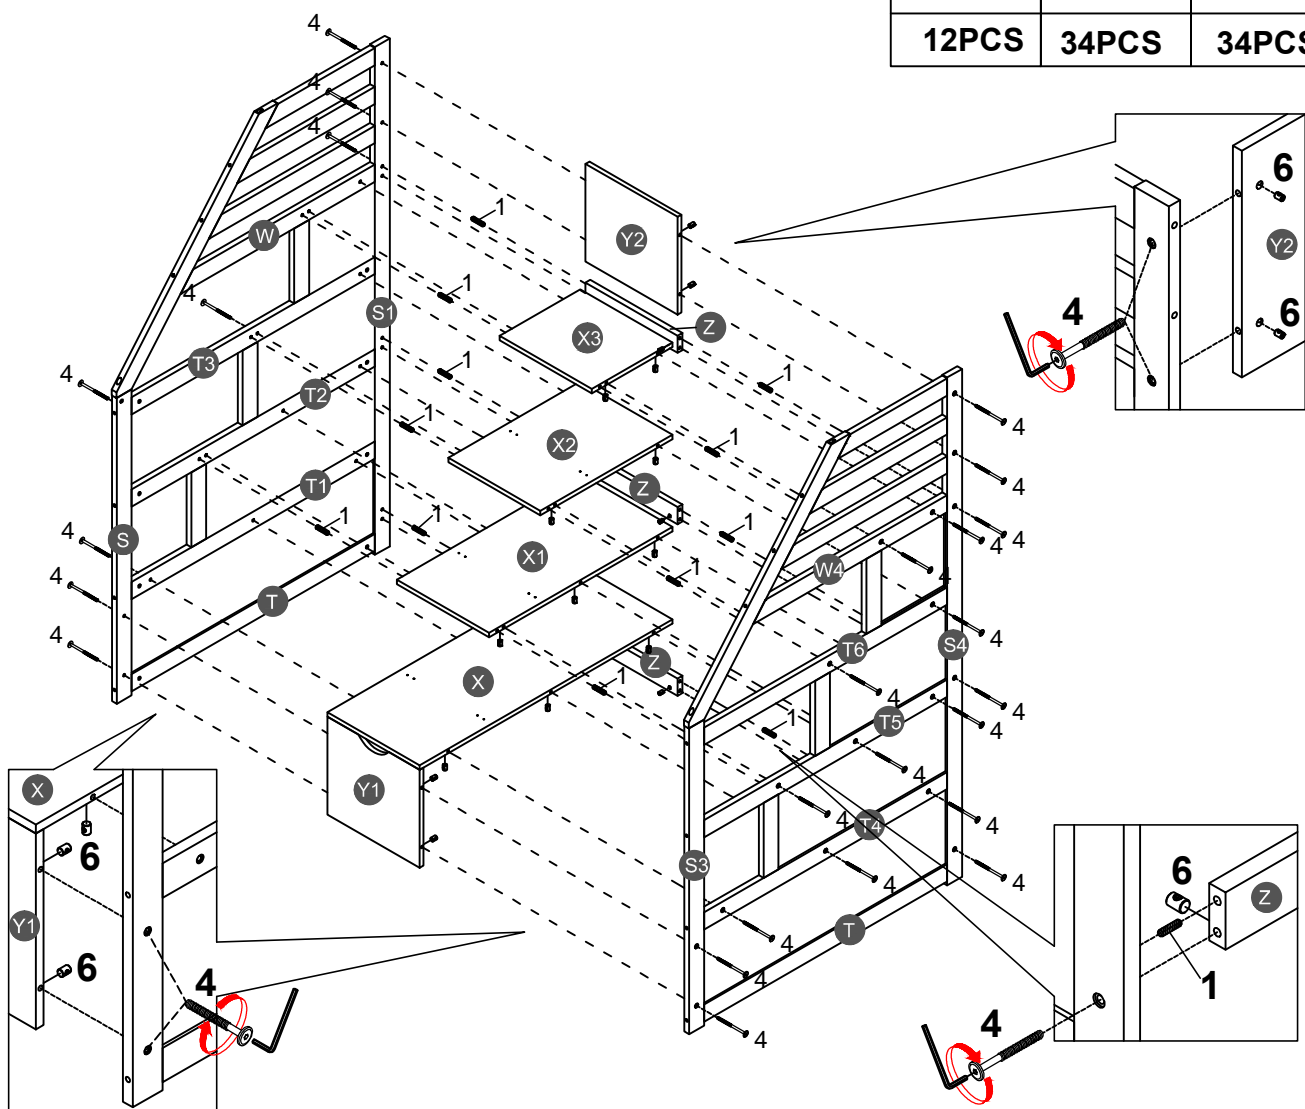STEP 32:




1	4	6
		
12PCS	34PCS	34PCS

STEP 33:

21



12PCS

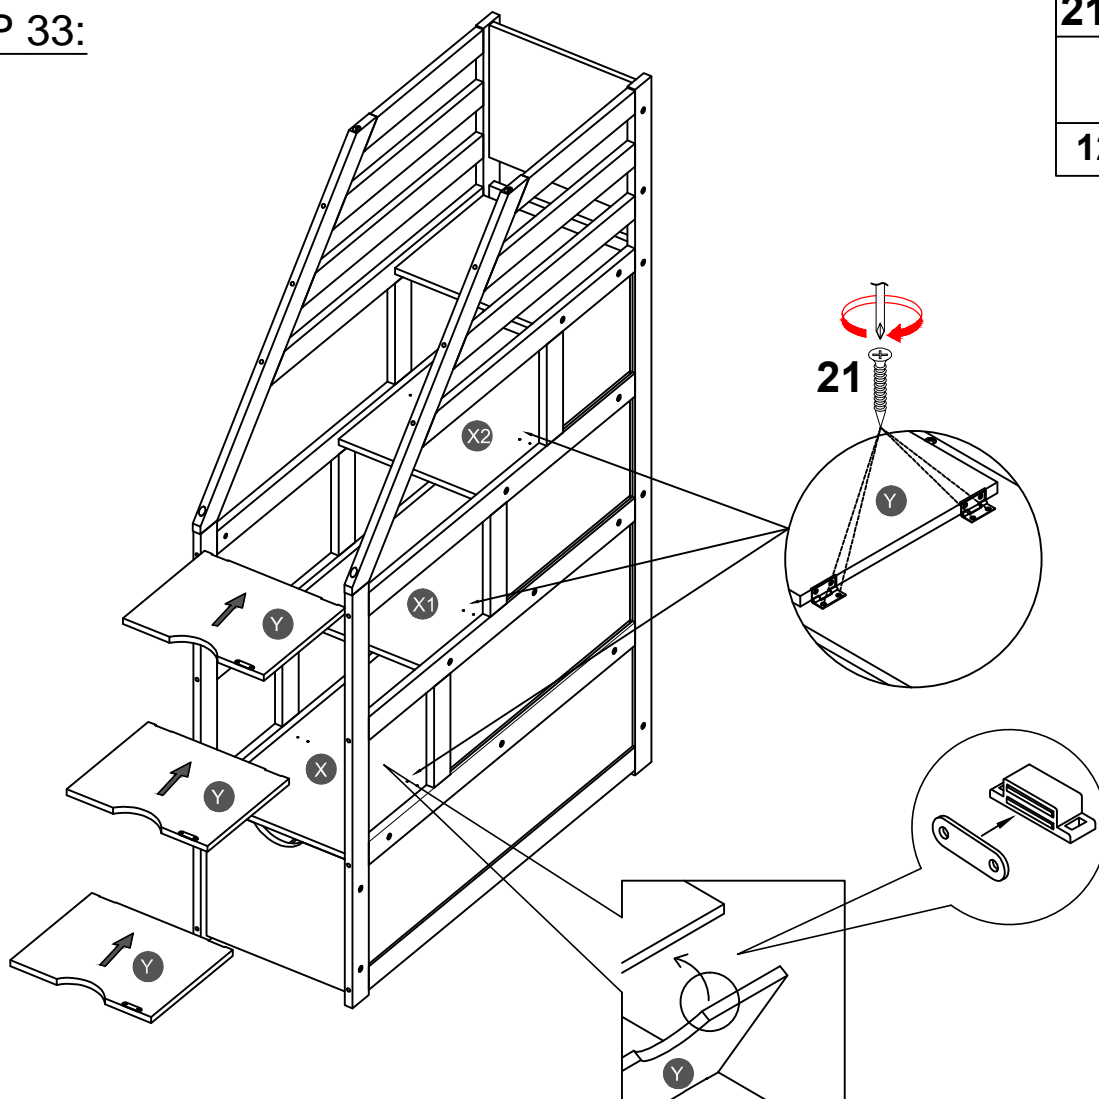


STEP 34:


7




12PCS

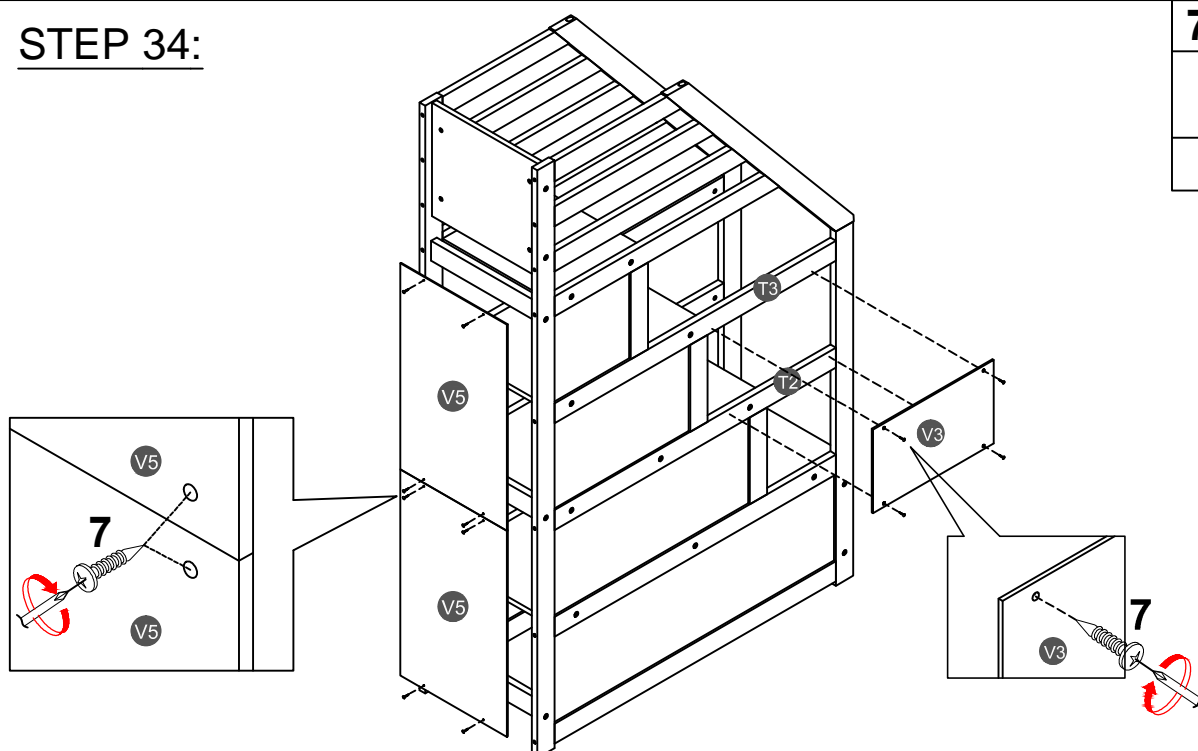



STEP 35:

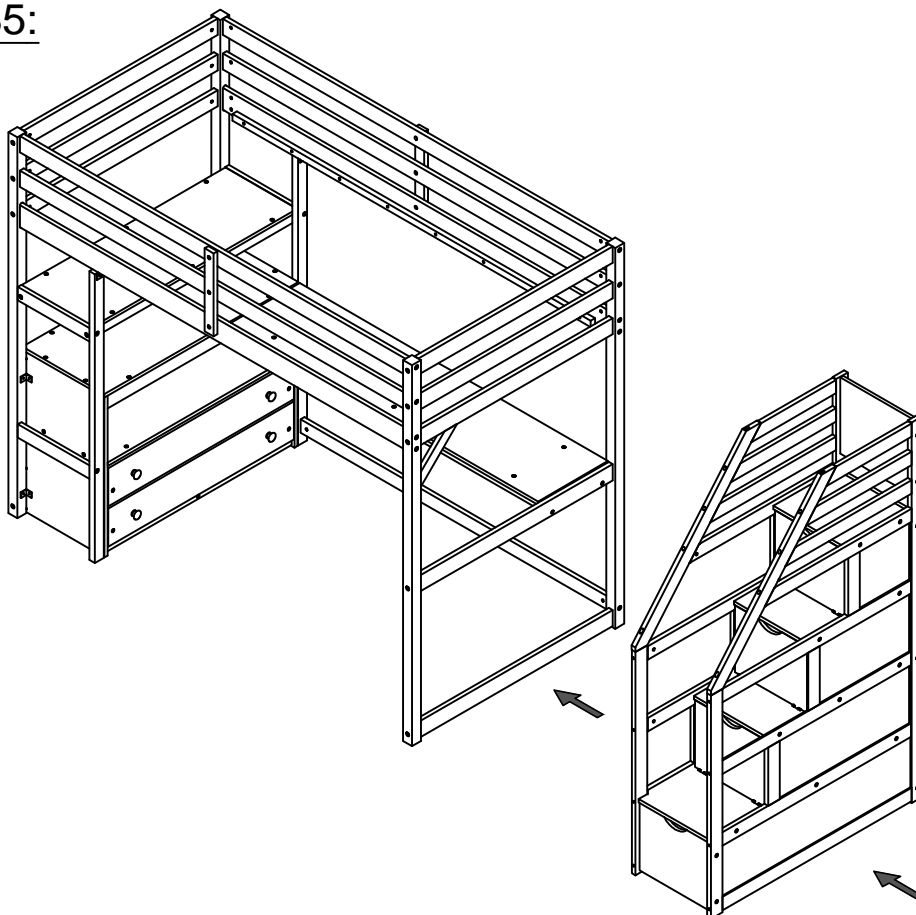



STEP 36:

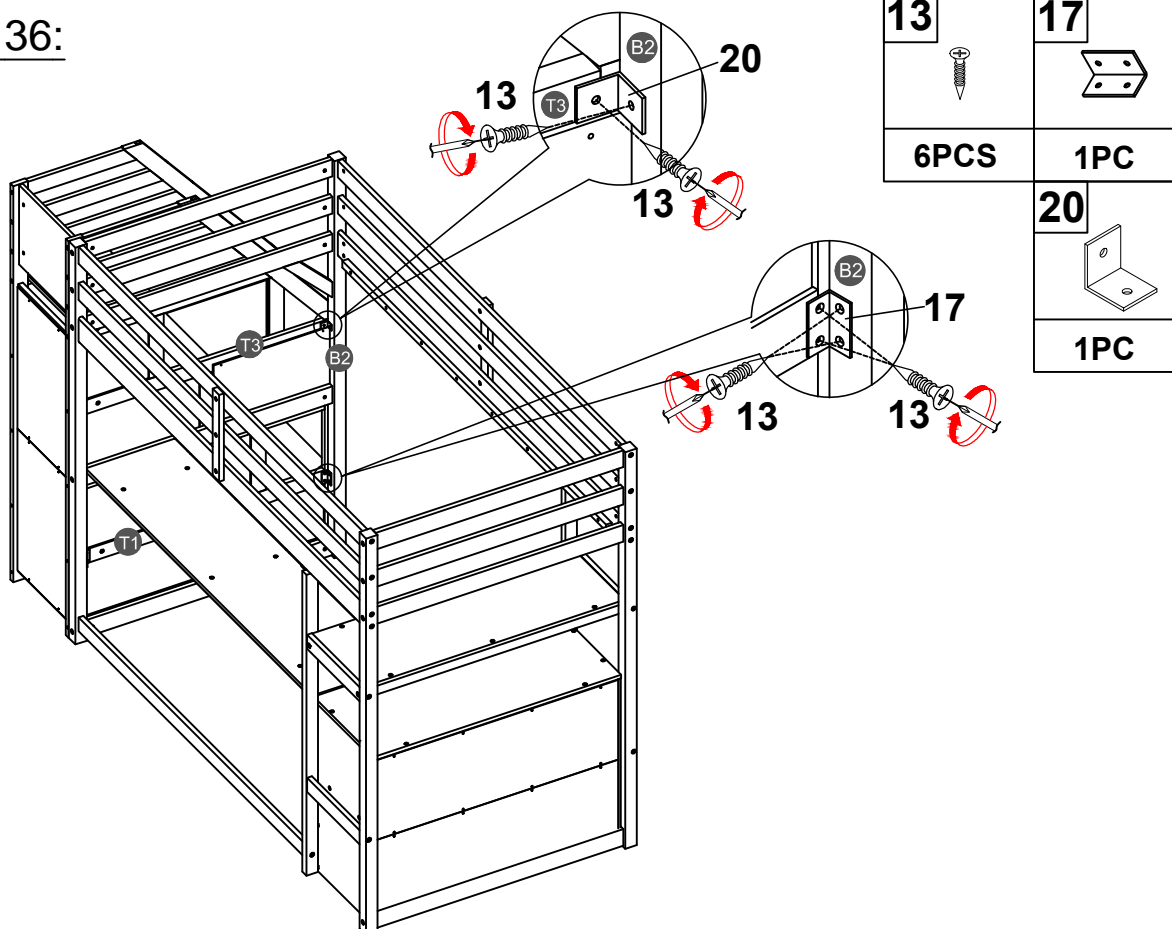

STEP 37:

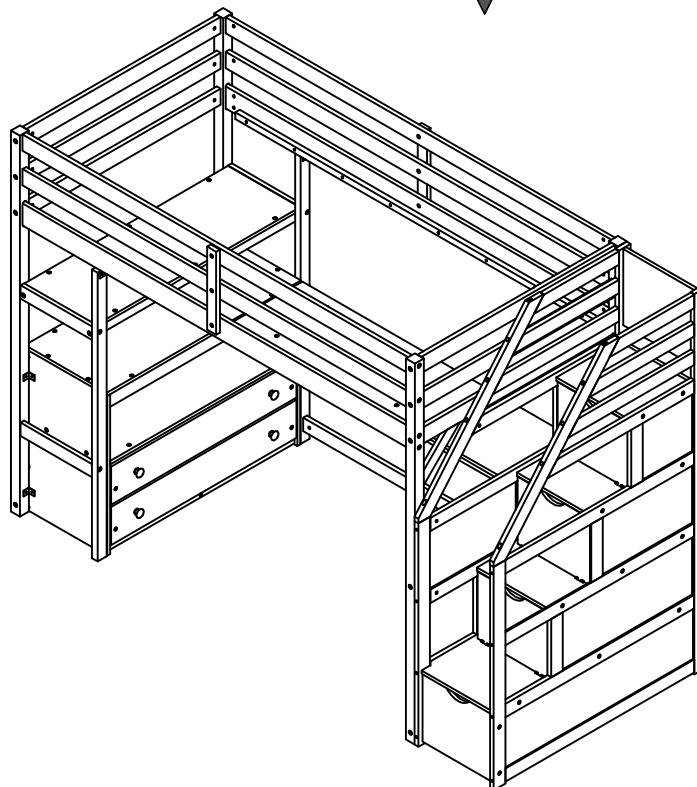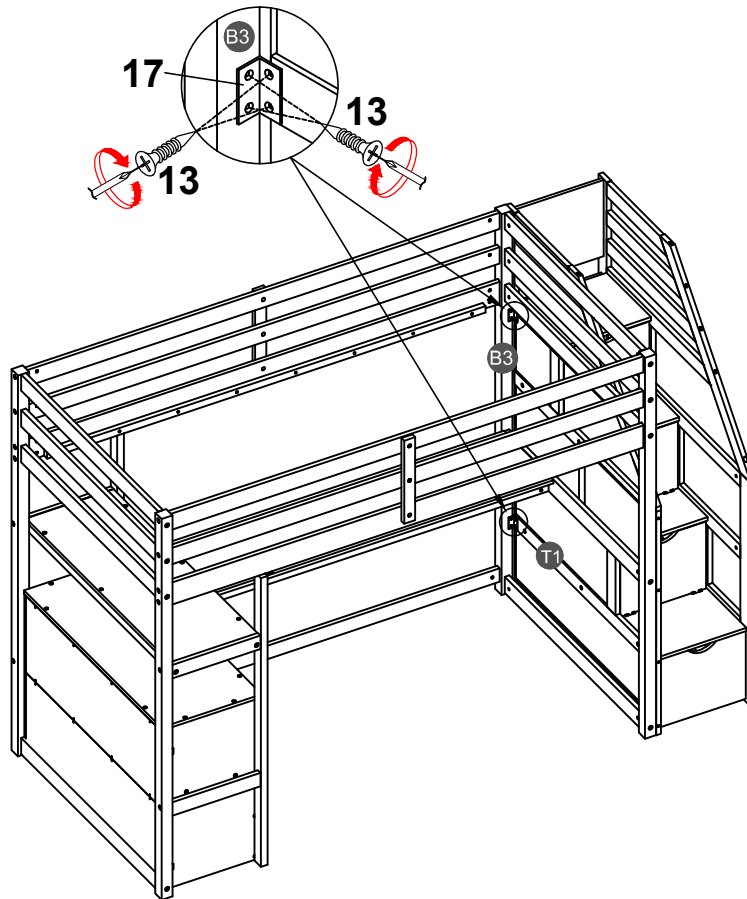



13	17
	
8PCS	2PCS

STEP 38:


11




28PCS

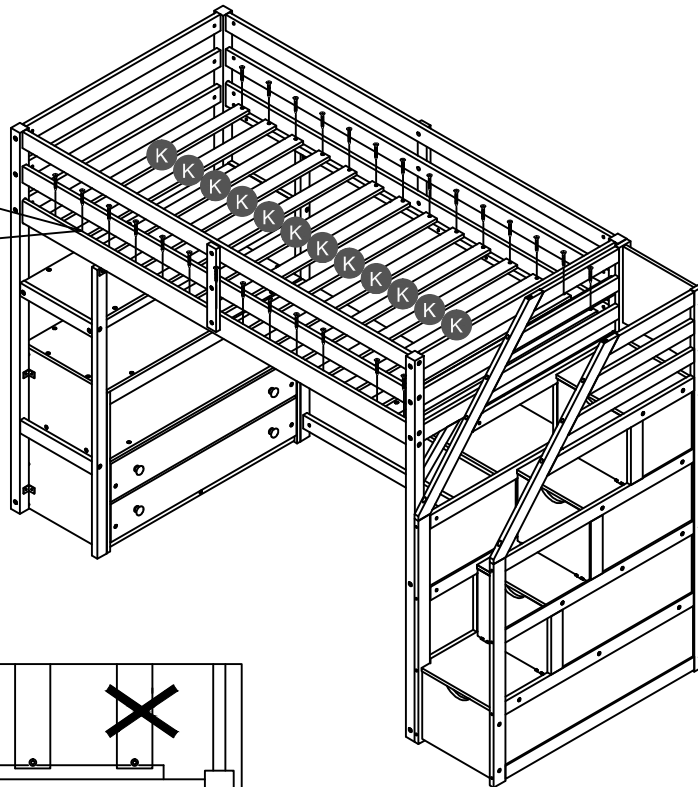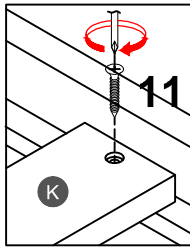

(3.1") 79mm (3.3") 84.5mm (2.4") 61mm

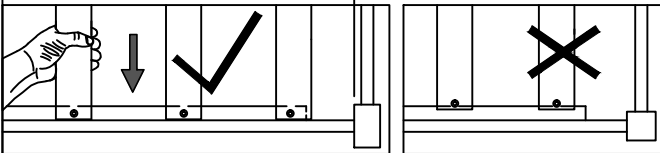

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

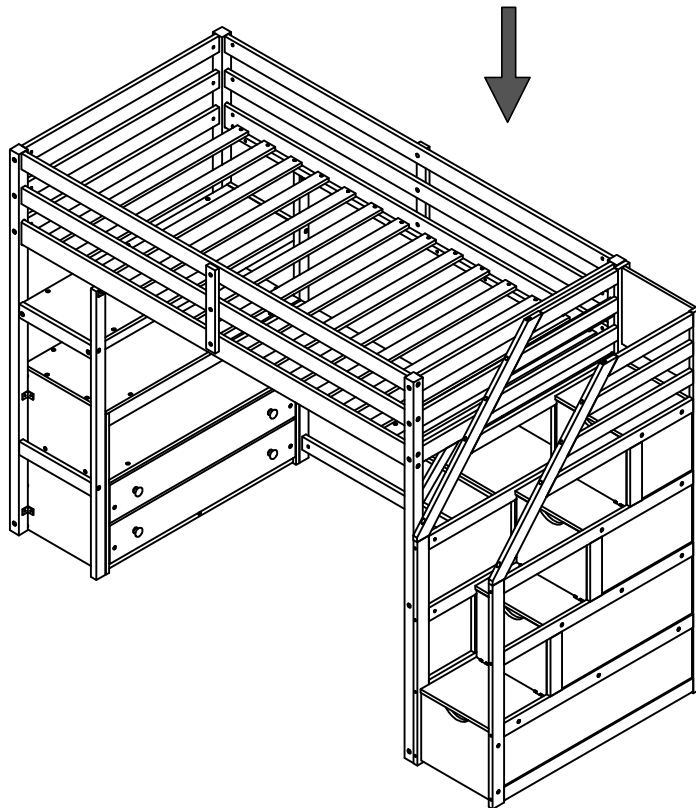

Make sure to tighten all the screws of the bed.