

MAGNETIC[®]


Car Garage Screen

Preparation: Be sure door frame is clean, dry and grease-free (Fig. 1).

Note: When installing, make sure screen drapes and flexes slightly on garage floor.

Installation:

1. Apply **wide** (1.5") hook and loop tape firmly around the top of the garage door frame and apply **narrow** (0.67") tape to sides of the garage door (Fig 2). Make sure the center point on the top edge is higher than the sides (Fig.3).
2. Press the hook and loop on the mesh screen firmly to the frame (Fig. 4).
3. Do not move it for 24 hours to allow the adhesive tape to fully secure. You can use the enclosed clips for added security.

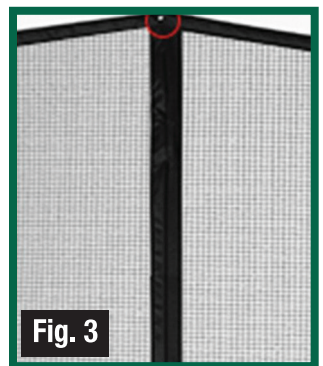

R103124

Cortina para Puerta de Garaje

MAGNÉTICA

Preparation: Asegúrese que el marco de la puerta esté limpio, seco, y libre de grasa (Fig. 1).

Note: Al instalar, asegure que la cortina despliegue y flexione levemente en el suelo del garaje.

Instalación:

1. Aplique la cinta **ancha** (1.5") de gancho y bucle firmemente alrededor del tope del marco de la puerta de garaje y la cinta **angosta** (.67") a los lados del marco (Fig 2). Asegure que el punto medio del borde superior quede más alto que los lados (Fig.3).
2. Presione el gancho y bucle de la cortina firmemente al marco (Fig. 4).
3. No mueva la cortina por 24 horas para permitir que la cinta adhesiva quede bien asegurada. Puede utilizar los pinches incluidos para seguridad adicional.