

Bayside Series


Assembly Instruction




GV-2

Adirondack
Ottoman


The solution to relax better

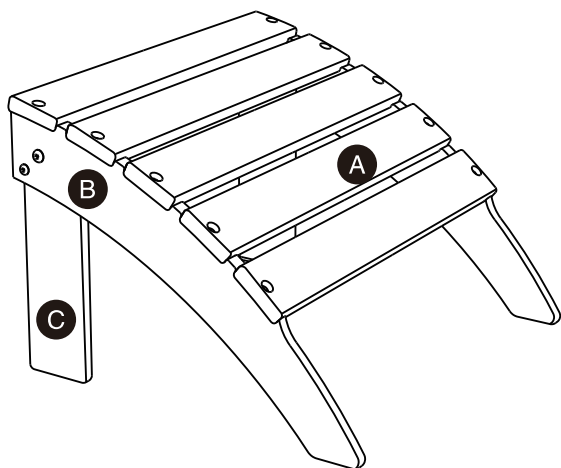


Tools

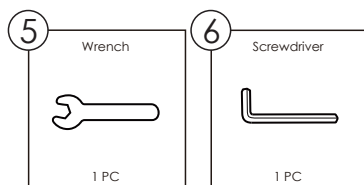

Parts

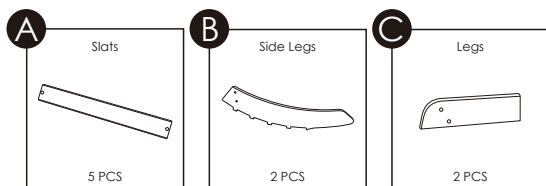

Hardware

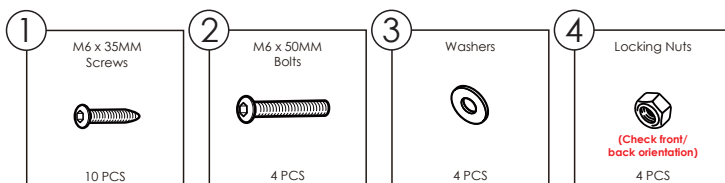




Step 1

Assemble Slats

- Note:**
1. Keep the screws loose—no need to tighten them until all parts are properly aligned and in place
 2. Secure the screws at both ends of the slats first to avoid shifting during assembly

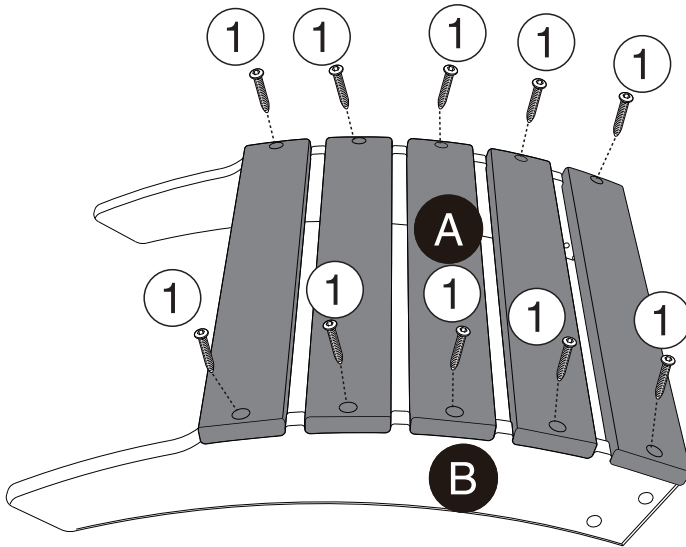

Parts & Hardware needed

A	B	1
Slats	Side Legs	M6 x 35MM Screws
		
5 PCS	2 PCS	10 PCS




Step 2

Assemble Legs

- Note:** 1. Once you complete this step, be sure to tighten all the bolts and screws
2. To fold the ottoman, remove the lower bolts located on Part B

Congratulations—you've just assembled your Adirondack Ottoman!

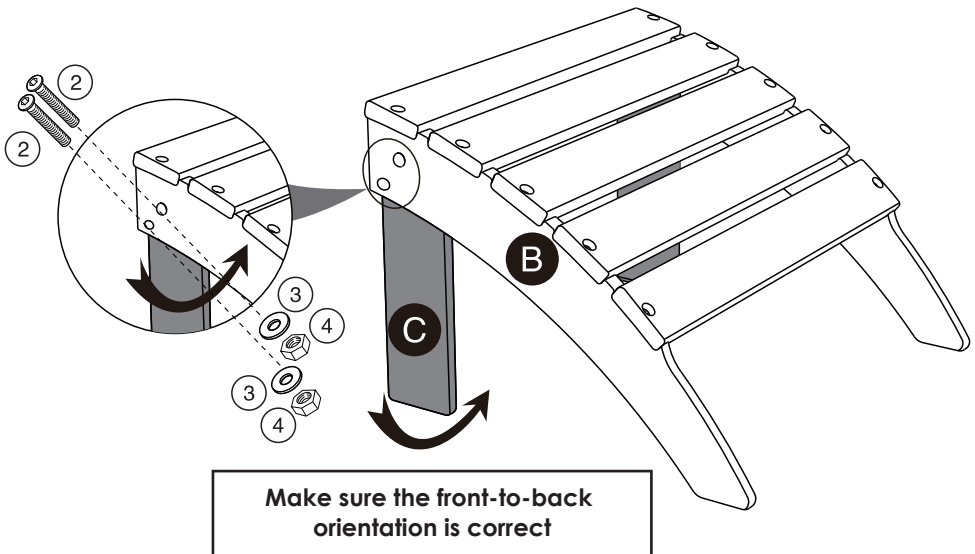

Parts & Hardware needed

C Legs  2 PCS	2 M6 x 50MM Bolts  4 PCS	3 Washers  4 PCS	4 Locking Nuts  (Check front/back orientation) 4 PCS
---	---	---	--

Locking Nuts Installation:

