

stallation Instructions

Essential accesscories list

		_
NO.	Part Name	_
1	Subject	
2	Straight pipe	
3	Allen key	
4	Inner-hexagon screw	
5	Decorative cover	
6	Water supply hoses	
7	The base	
8	Explosion screws	
9	Hand shower	
10	Shower hose	
11	Instruction	_

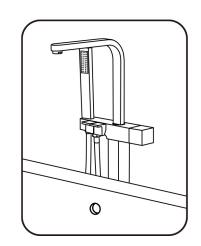

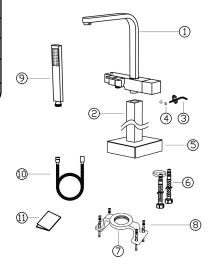

Presentation:


- 1. Press the button to switch between handheld shower and faucet for water discharge
- 2. Cold and hot handwheel, turning forward for hot water outlet, and turning back for cold water outlet


Caution:

- 1.Before installation, all water lines must be flushed at least 60 seconds to remove any foreign material so that the foreign material will not block the areator or damage the cartrige
- 2. Use water and soft cloth to clean the faucet
- 3. Can use a mild liquid detergent for cleaning, do not use abrasive detergent that may scratch or dull the surface.


Installation Instructions

- 1. Put the straight pipe, decorative cover over the water supply hoses.
- 2. Screw and hand tighten the water supply hoses to the subject(DO NOT USE SPANNER TO TIGHTEN AS IT CAN DAMAGE THE O-RING). Make sure the water supply hoses were screwed into the correct inlets for hot water and cold water.

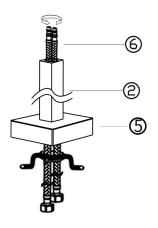


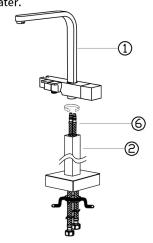


6.Connect another side of the water supply hoses to the water supply pipe. Make sure they were screwed into the correct outlets for hot water and cold water.

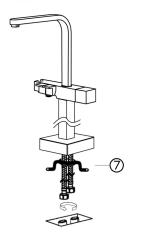


7.Drill holes and use the explosion screw to fixe the base on the ground then put the decorative cover over the base.

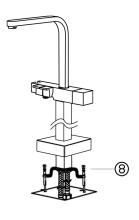

- 3.Prepare water supply pipes like the drawing below.
 (unit:mm)
- 4.Using Allen key to screw inner-hexagonscrews to connect the subject and straight pipe.



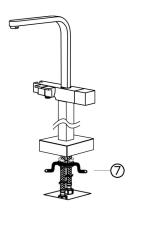

8. Screw the shower hose to hand shower and tub filler; Place hand shower into holder.



9.Inspect for leaks at all joints.

