

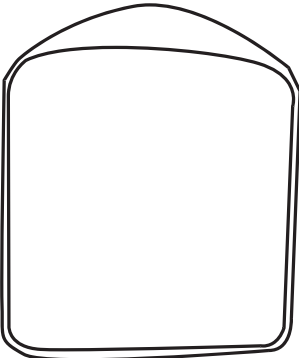
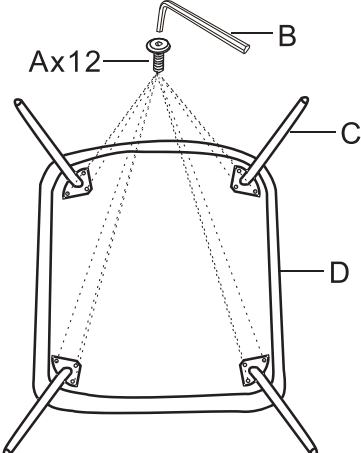
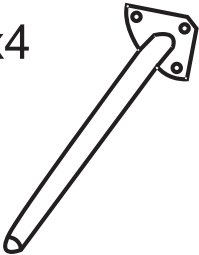
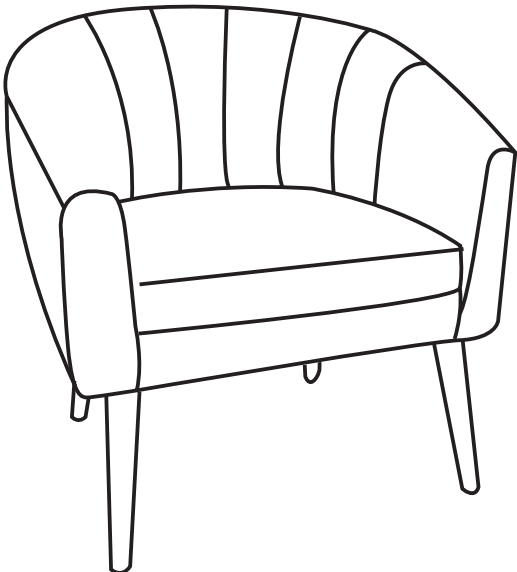


PINK Assembling Instruction

Ax12  M6x18MM	Ex2 EXTRA PARTS 	① 	② Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first. 
Cx4 		③ 	
Dx1 