


(Not to scale)

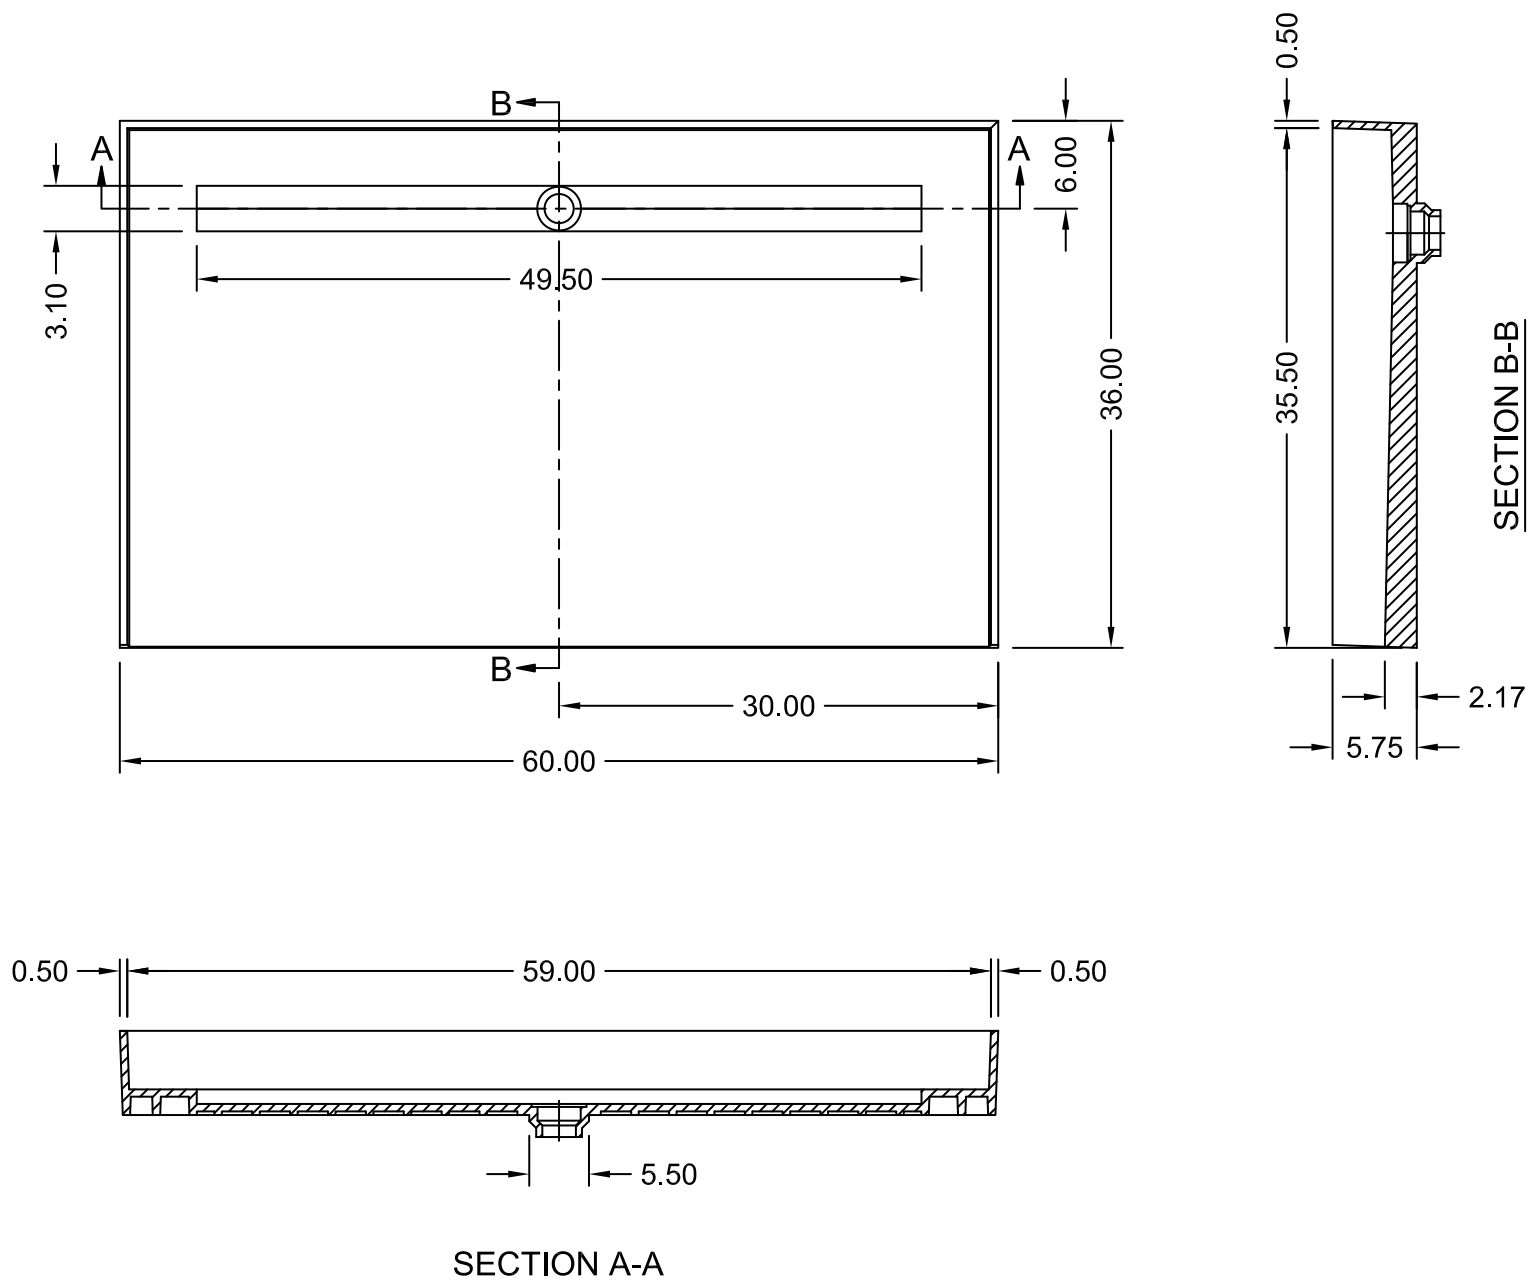

**Redi Free Installation:** For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.