


JEWETT-CAMERON Trading Company LTD.


800-955-2879

UL301 Drop rod Installation Modèle no UL301 Installation de la tige de retenue

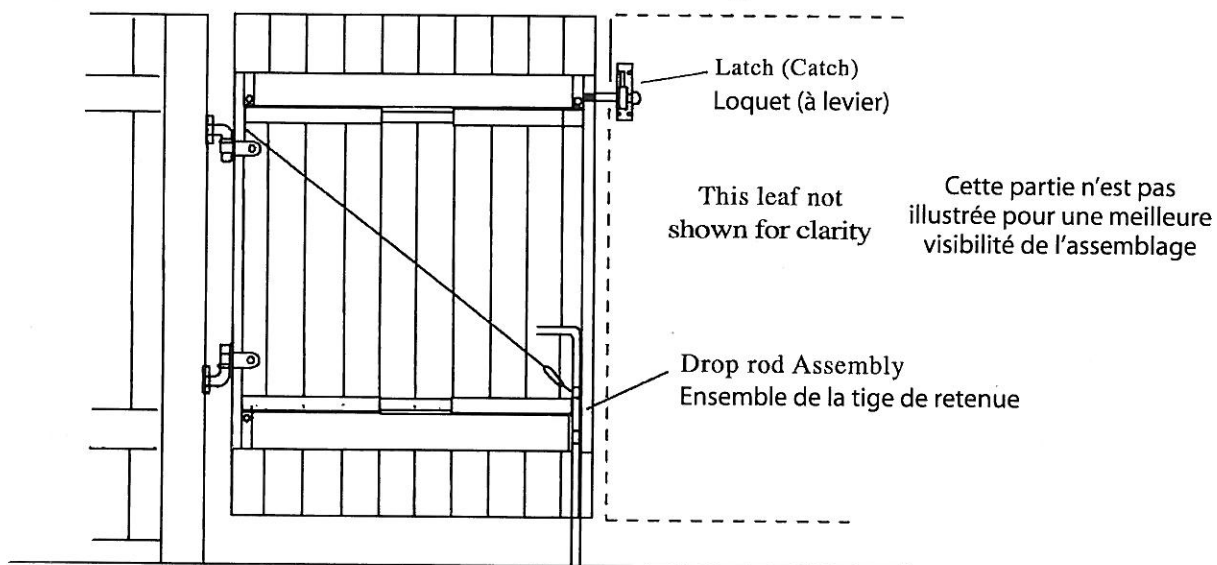

Attach with tek screws (Provided).
The additional 4 tek screws are for mounting Latch (Catch) to the 2nd Adjust-A-Gate Frame.

Fixer les vis auto-taradeuses (fournies)
Les 4 vis supplémentaires sont pour l'assemblage du loquet (à levier) du deuxième cadre Ajust-A-Gate™

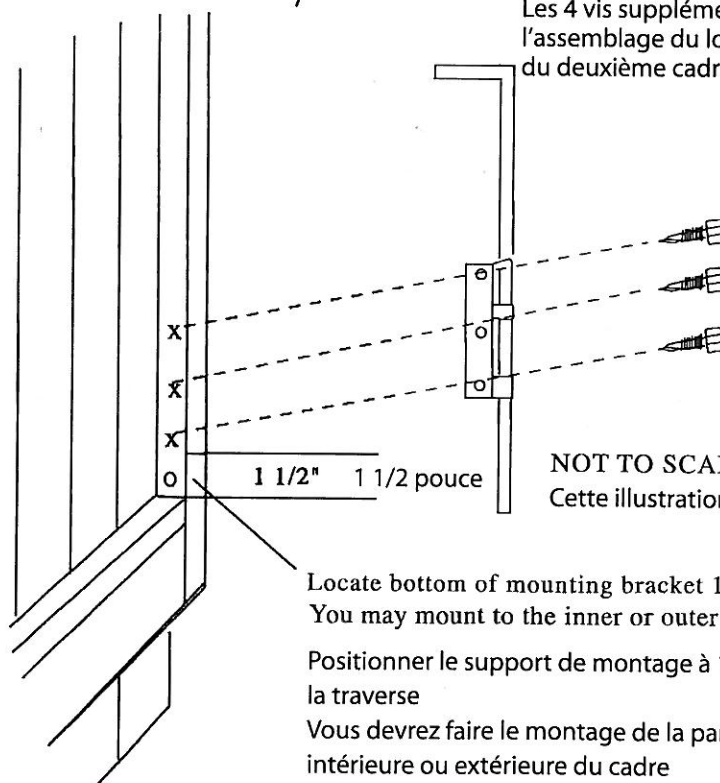

Locate bottom of mounting bracket 1 1/2" from rail.
You may mount to the inner or outer side of frame.

Positionner le support de montage à 1 1/2 pouce de la traverse

Vous devrez faire le montage de la partie latérale intérieure ou extérieure du cadre

CHINA

