


7. Parts Breakdown

FIGURE 7

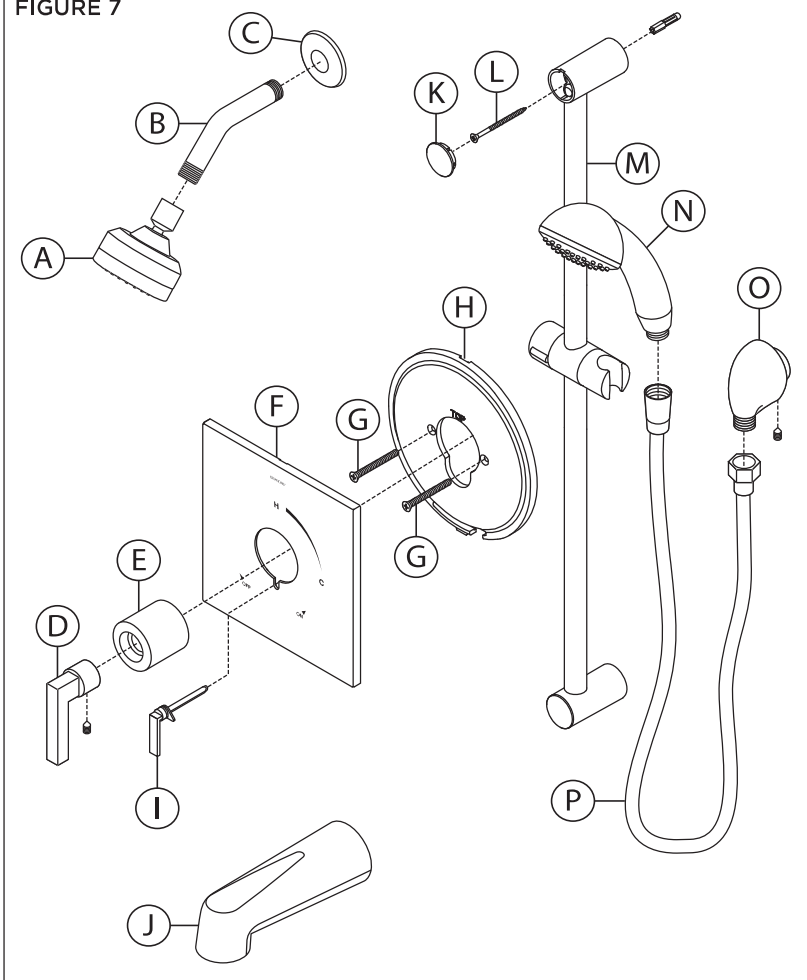

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts

Item	Description	Part Number
A	Showerhead	362SH
B	Shower Arm Flange	300S
C	Dome Cover	RTS-037
D	Standard Handle	T-617
E	Shower Escutcheon	RTS-003
F	Shower Escutcheon Screws	RTS-003
G	Shower Escutcheon Mounting Plate	RTS-003
H	Diverter/Volume Control Handle	RTS-004
I	Tub Spout	067
J	Slide Bar Assembly	RA-009
K	Slide Bar Assembly	RA-009
L	Slide Bar Assembly	RA-009
M	Slide Bar Assembly	RA-009
N	Hand Shower	EF-100
O	Wall Elbow	EF-105
P	60" Hose	RTS-045

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.