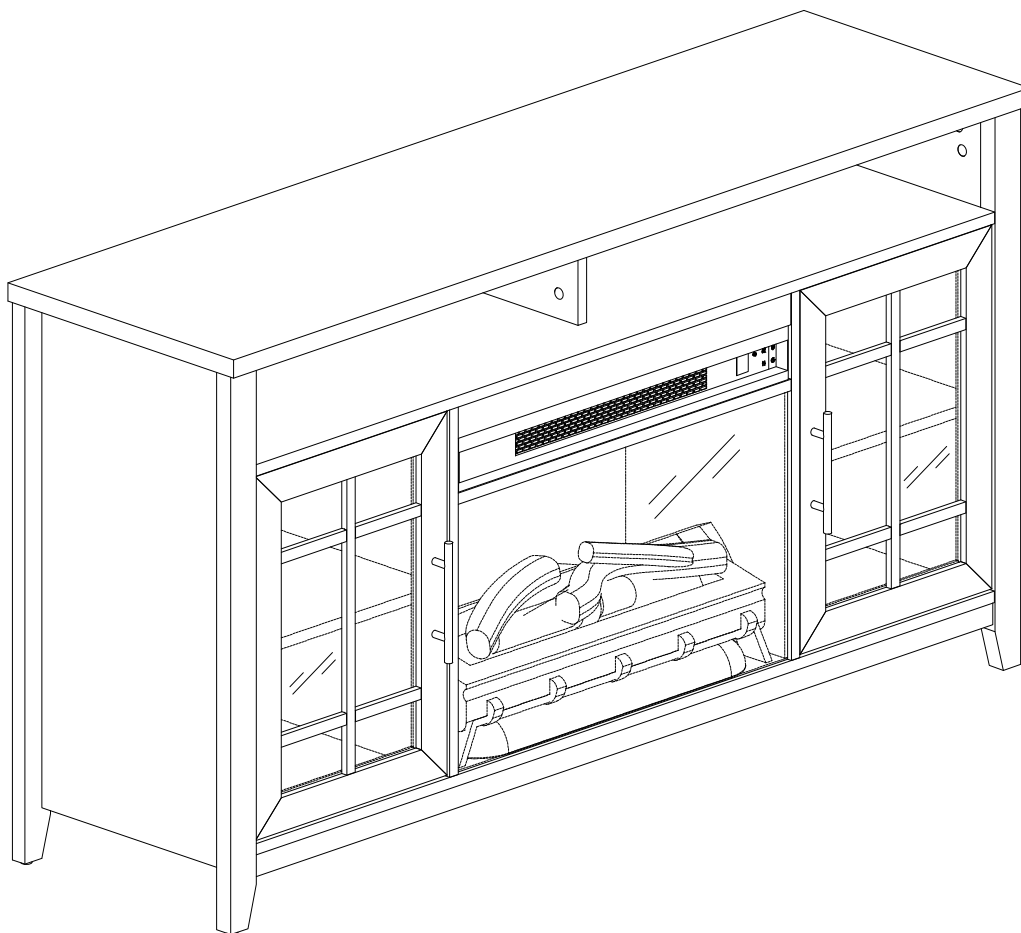


55" TV MEDIA STAND WITH ELECTRIC FIREPLACE KD INSERTS HEATER

ASSEMBLY, CARE & USE INSTRUCTIONS



W100-23KD-GW Gray Wash Color

W100-23KD-RB Reclaimed Barnwood Color

THANK YOU

We appreciate the trust to purchase our electric fireplace media mantel. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing us!

Made in China

ASSEMBLY TIPS

Before you begin, locate the instructions and hardware. Take out all the parts and compare them to the diagrams below. Be sure you have all the parts and can identify them.

Two people are required to assemble this product. Assembly time will take approximately 30-90 minutes.

Before assembly, use scissors to unwrap the parts from the packaging. DO NOT use a box cutter or exacto-knife as you may cut into the mantel pieces inside the box and damage the finish. Check for the hardware tie which is RED and located inside the packaging, taped to the top box. DO NOT discard any pieces.

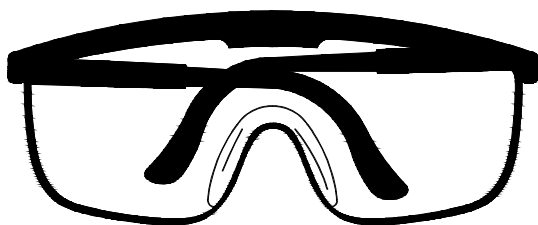
CAUTION

There are small components used in the construction of this product. Loose items should be kept away from pets and children to avoid a choking hazard. Keep all plastic and packaging film away from pets and children to avoid suffocation.


CARE AND MAINTENANCE

1. Dust your fireplace mantel regularly with a soft non-lint producing cloth or household dusting product.
2. You can clean your fireplace insert with a gentle non-abrasive household cleaner. Make sure to dry your fireplace immediately with a soft cloth or towel.

TOOLS REQUIRED (NOT INCLUDES)




Safety goggles



























Phillips screwdriver















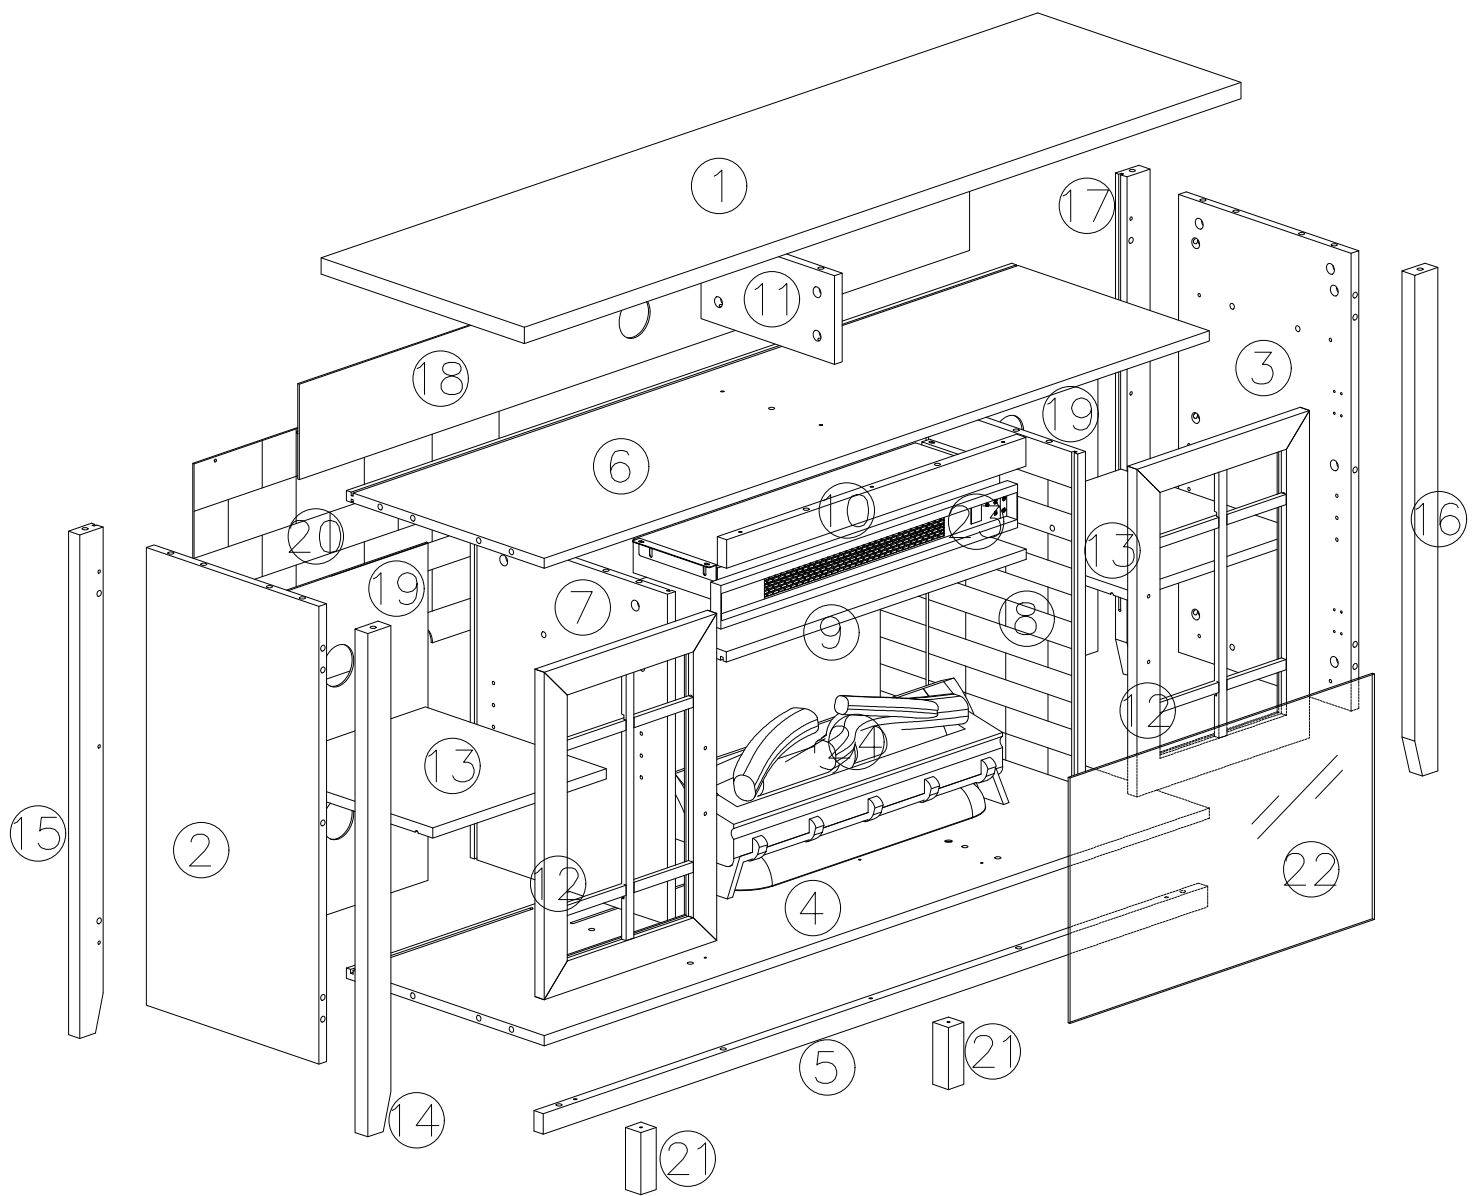
PARTS LIST



Assembly steps(EN)

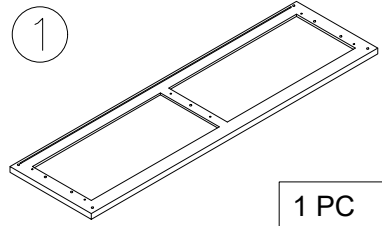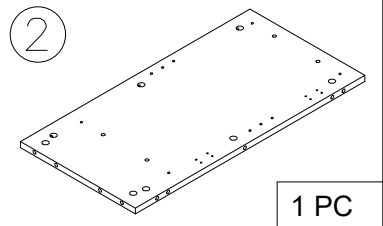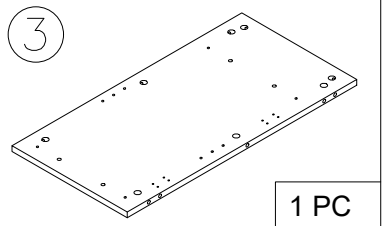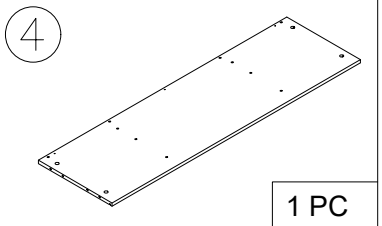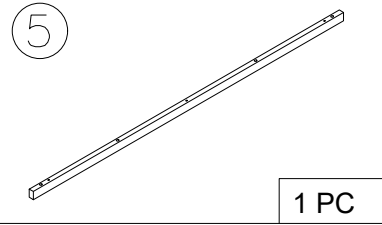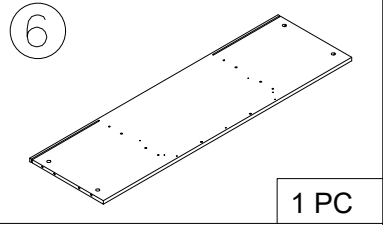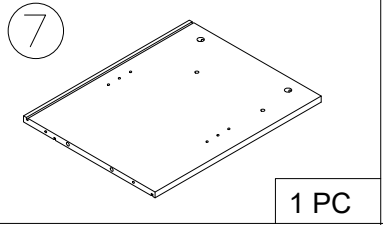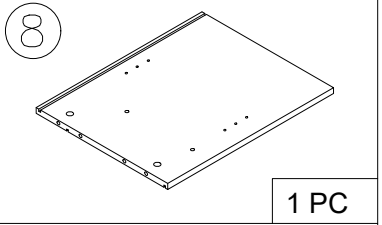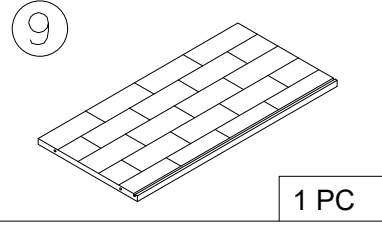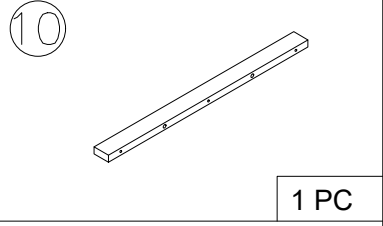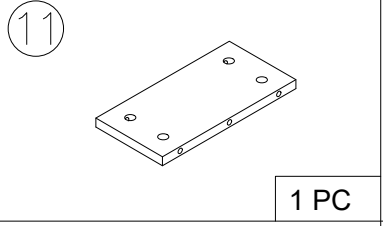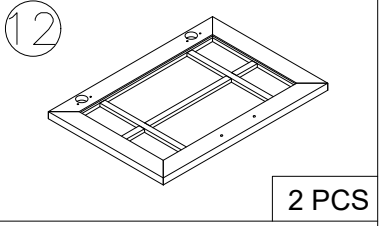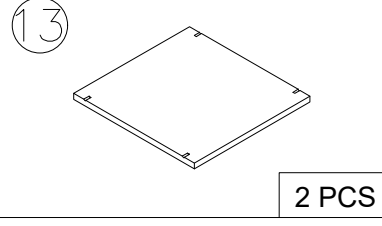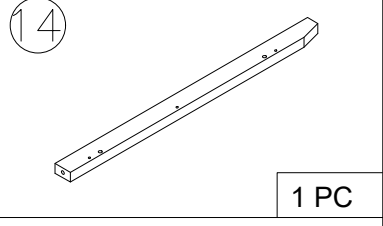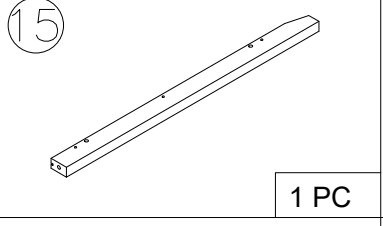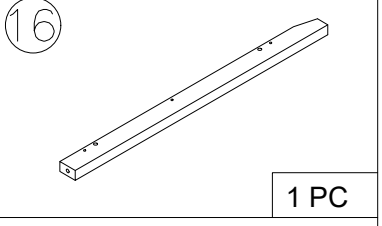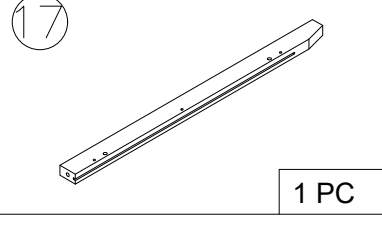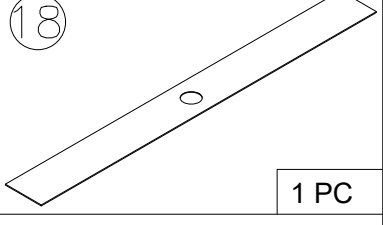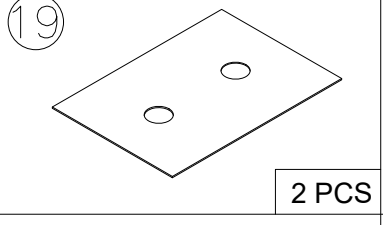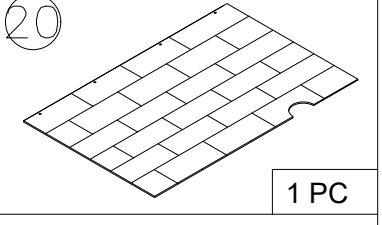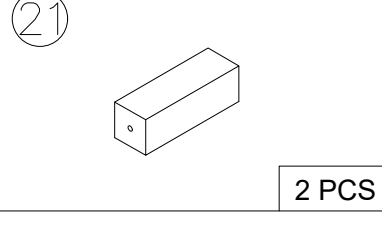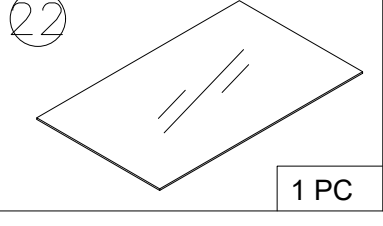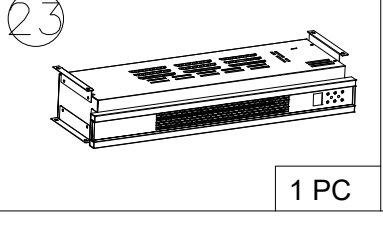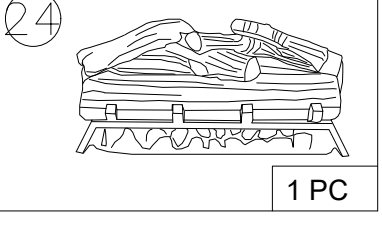
 1 1 PC	 2 1 PC	 3 1 PC	 4 1 PC
 5 1 PC	 6 1 PC	 7 1 PC	 8 1 PC
 9 1 PC	 10 1 PC	 11 1 PC	 12 2 PCS
 13 2 PCS	 14 1 PC	 15 1 PC	 16 1 PC
 17 1 PC	 18 1 PC	 19 2 PCS	 20 1 PC
 21 2 PCS	 22 1 PC	 23 1 PC	 24 1 PC

HARDWARE LIST:

A  32 PCS	B  ø15*12 32 PCS	C  Ø8*30mm 40 PCS	D  2 PCS
E  M4*23mm 4 PCS	F  4 PCS	G  8 PCS	H  M4 1 PCS
I  20 PCS	J  ø3.5*14mm 48 PCS	K  ø3.5*14mm 24 PCS	L  32 PCS
M  ø7*40 10 PCS	N  ø4*35mm 6 PCS	O  ø4*16mm 4 PCS	P  4 PCS
Q  4 PCS	R  2 PCS	S  ø4*35mm 4 PCS	T  ø3.5*12mm 8 PCS


Assembly steps(EN)

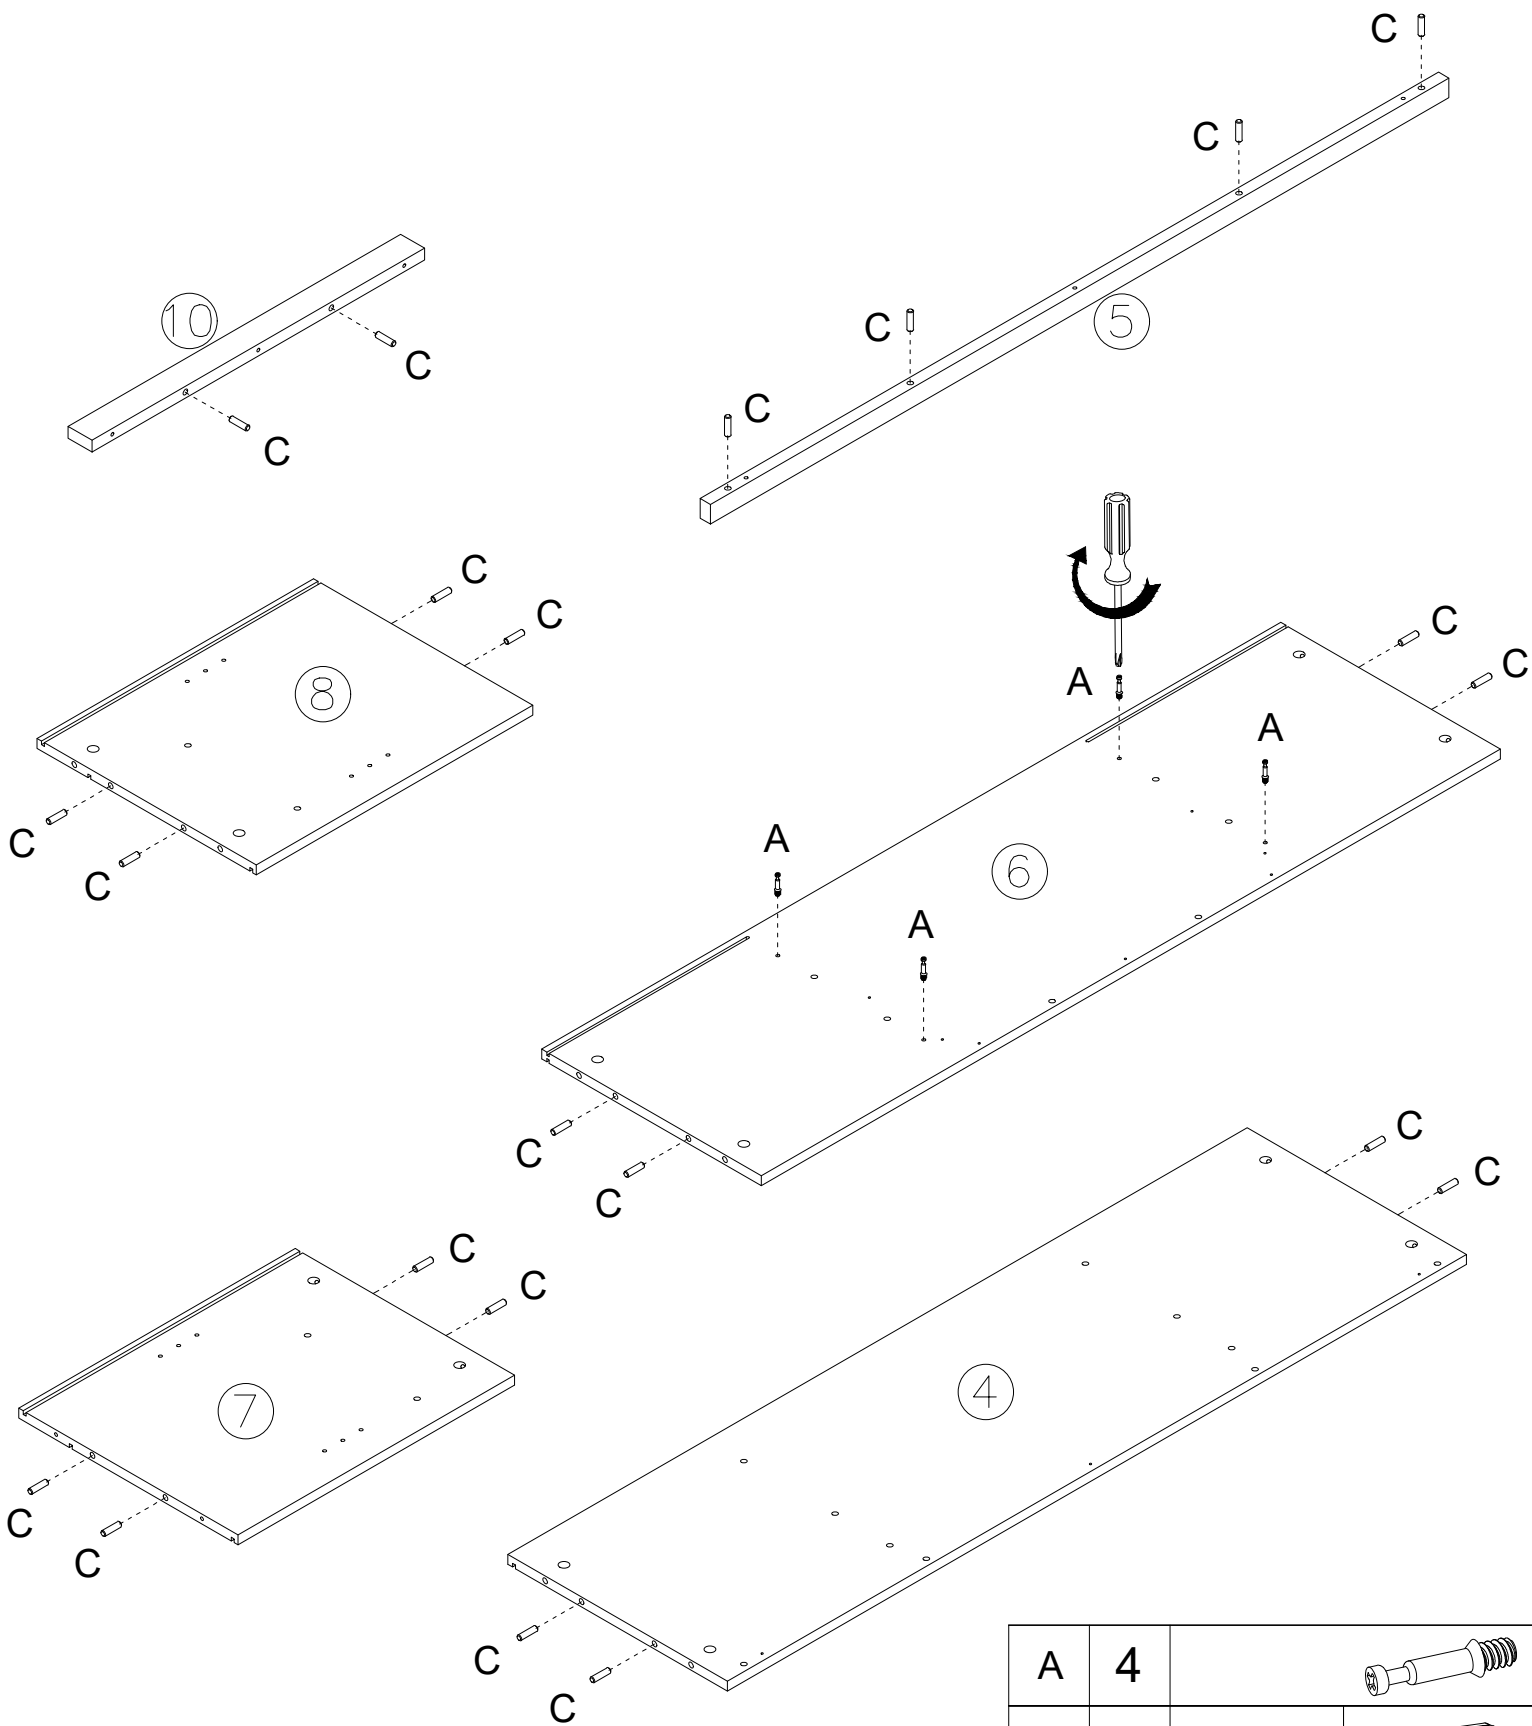
STEP 1




Assembly steps(EN)

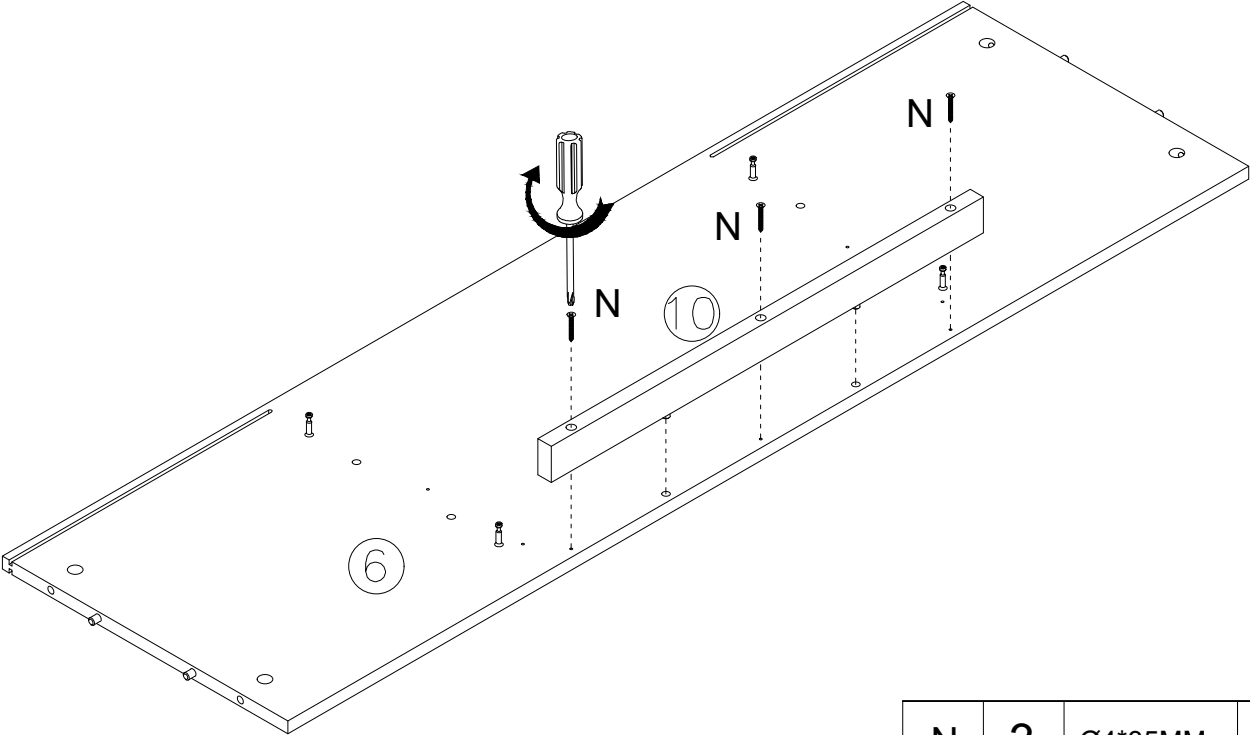
STEP 2



N	3	Ø4*35MM	
---	---	---------	---

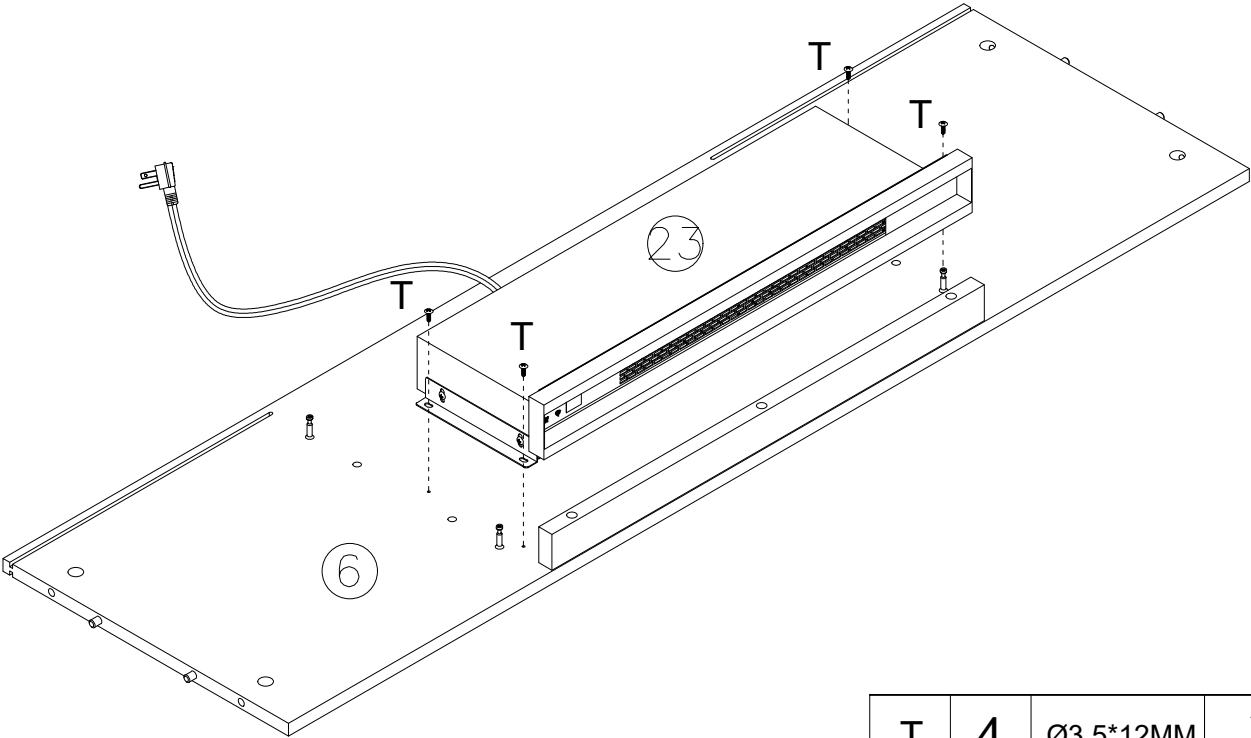
STEP 3




T	4	Ø3.5*12MM	
---	---	-----------	---


Assembly steps(EN)

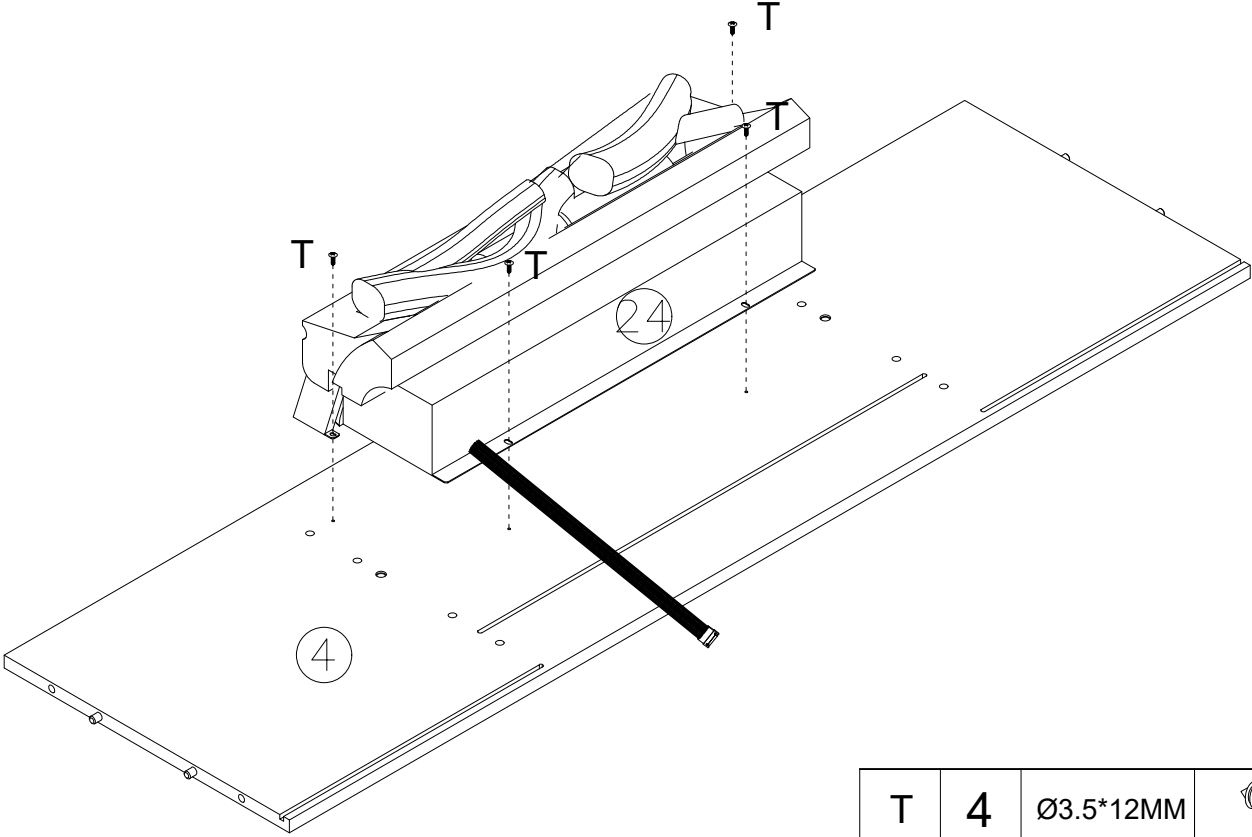

STEP 4



T	4	Ø3.5*12MM	
---	---	-----------	---

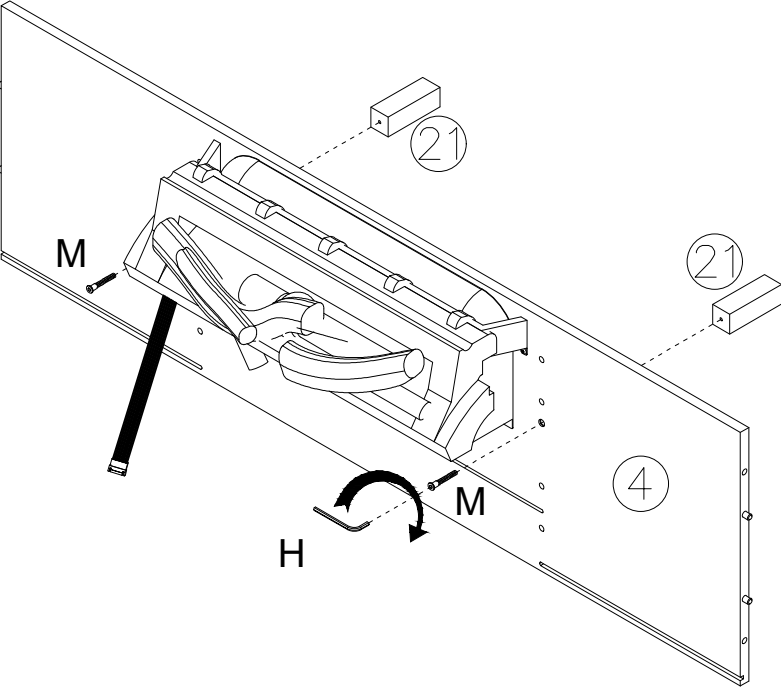
STEP 5




H	M4	
M	2	Ø7*40MM 


Assembly steps(EN)

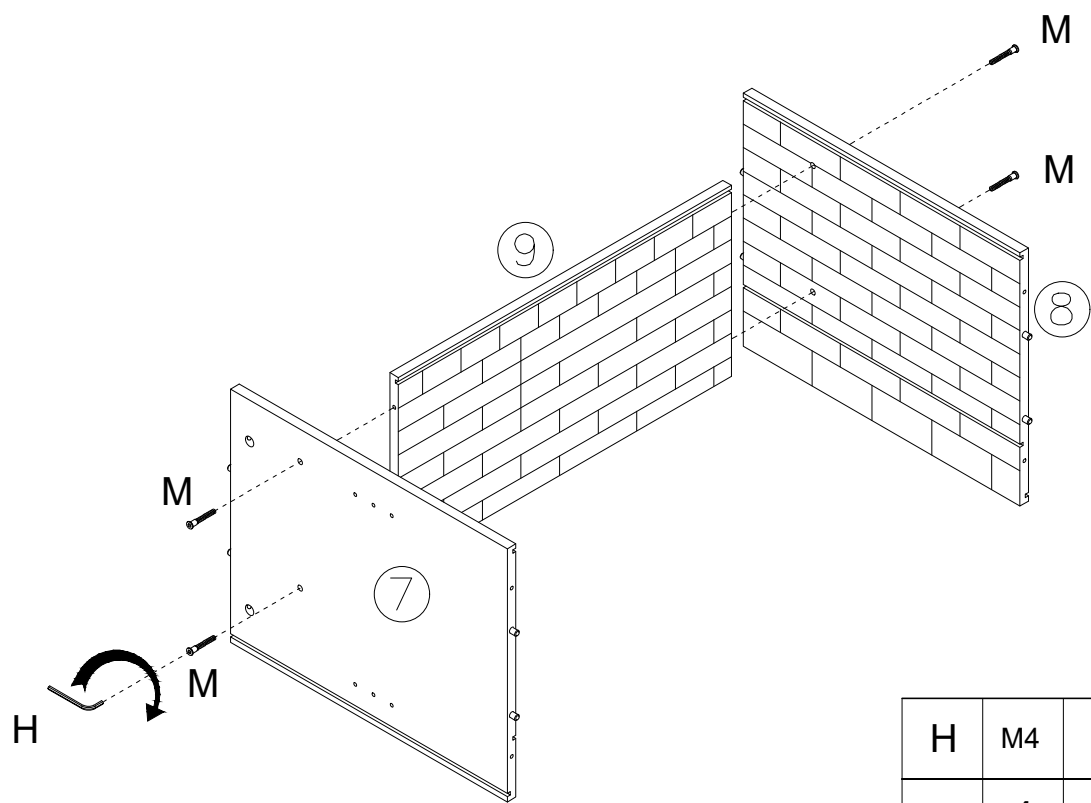STEP 6




H	M4		
M	4	Ø7*40MM	

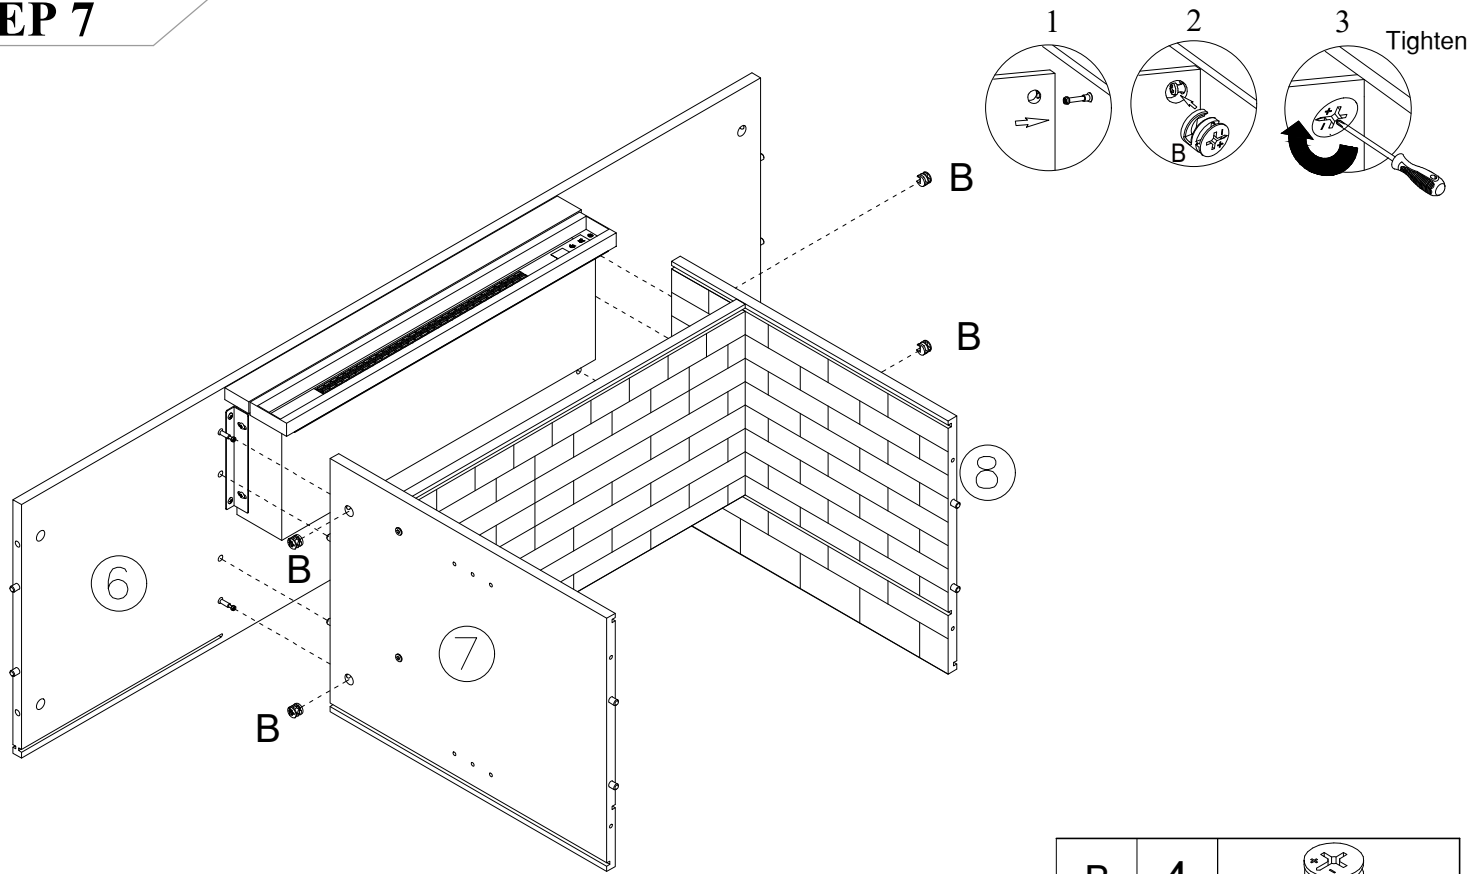STEP 7




B	4	
---	---	---

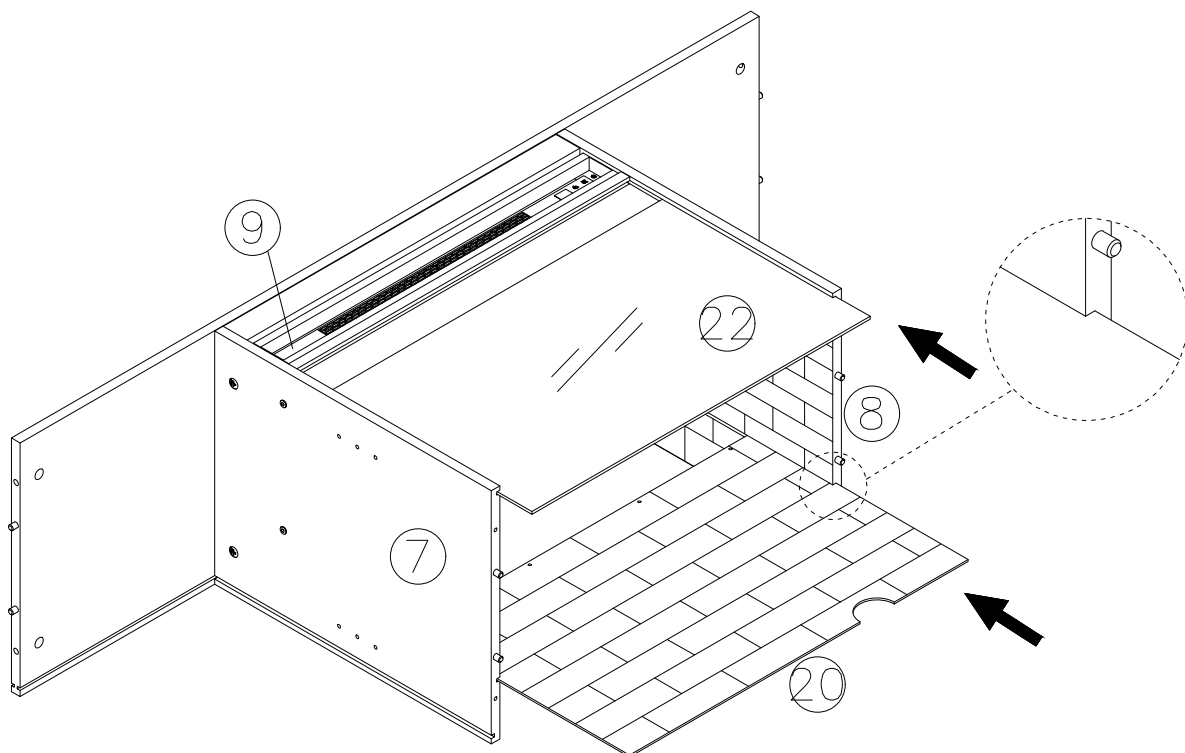STEP 8




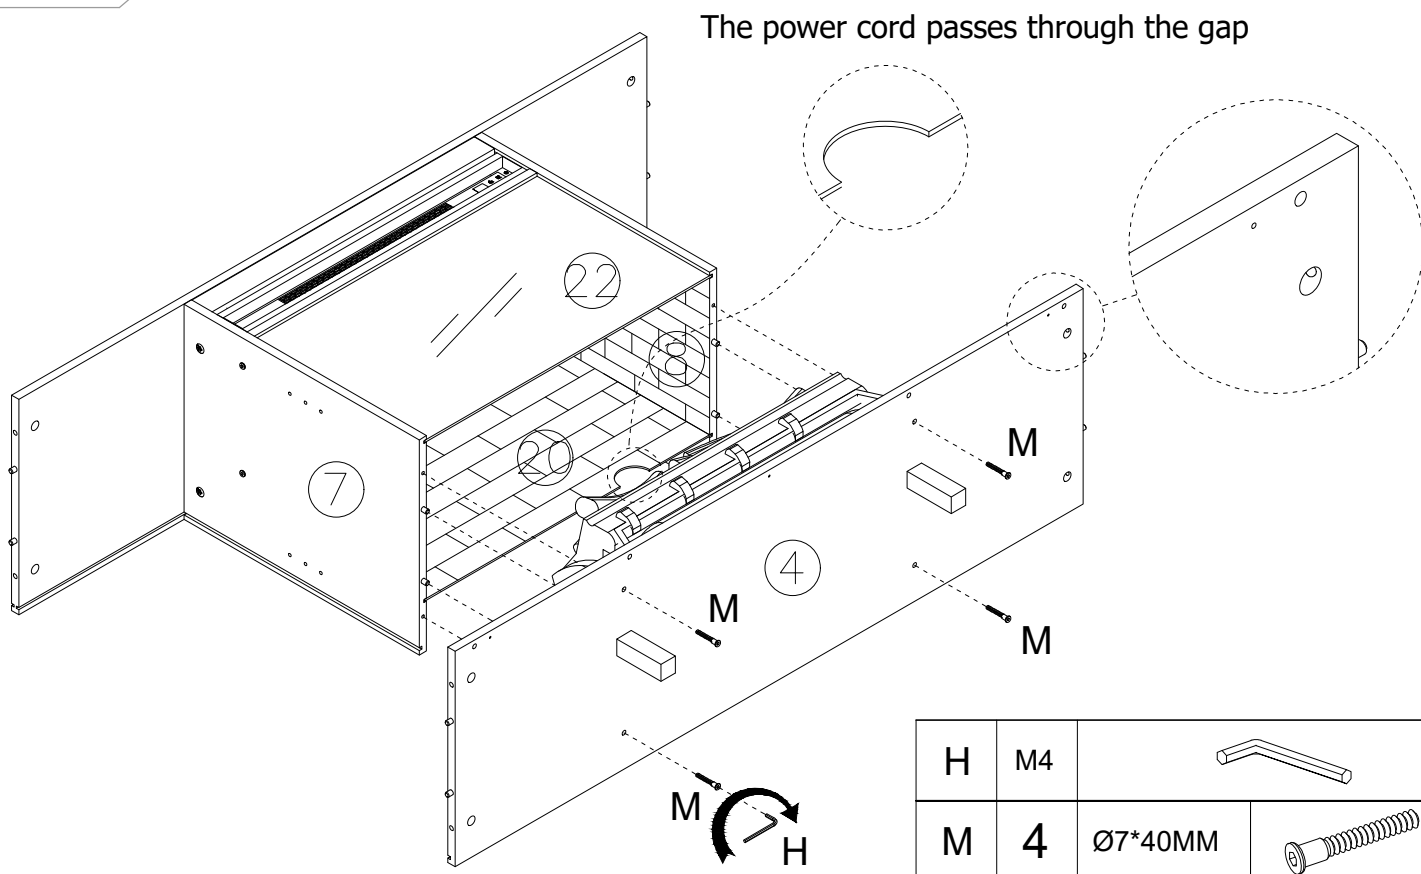STEP 9




Assembly steps(EN)

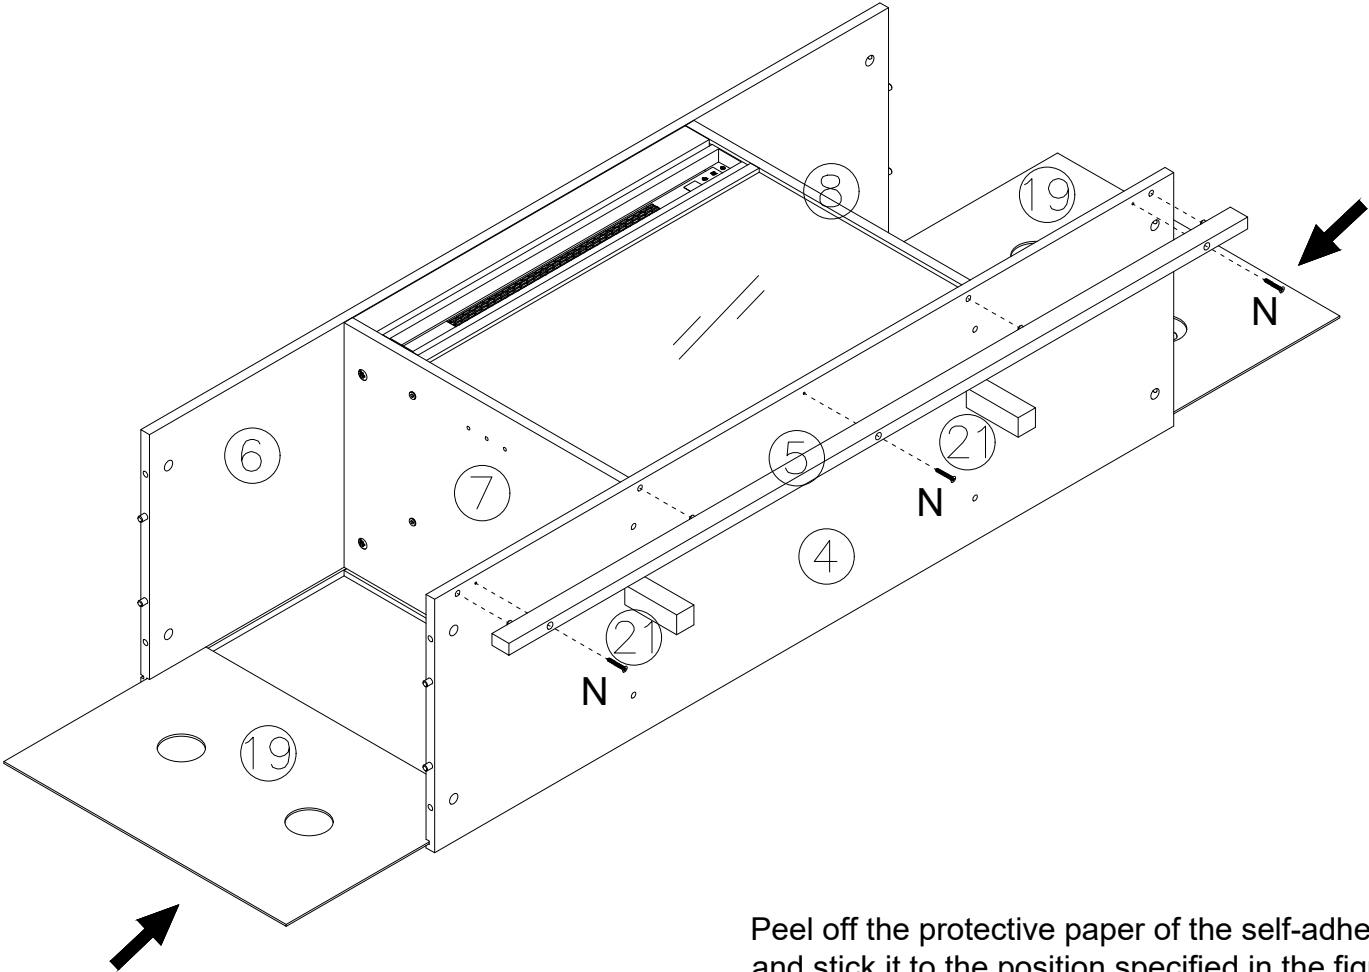STEP 10










Peel off the protective paper of the self-adhesive and stick it to the position specified in the figure.

N	3	Ø4*35MM	
---	---	---------	---

Assembly steps(EN)

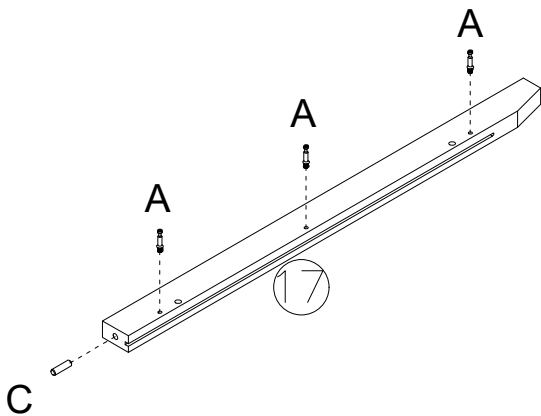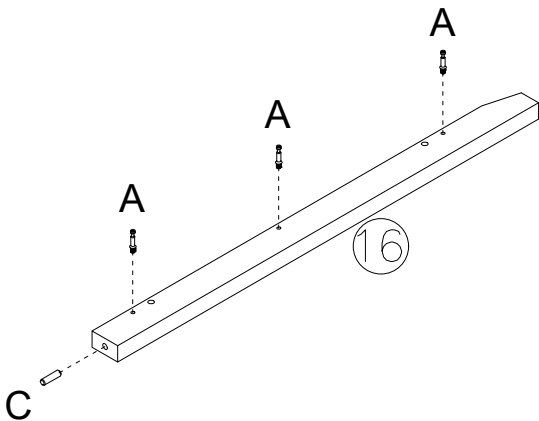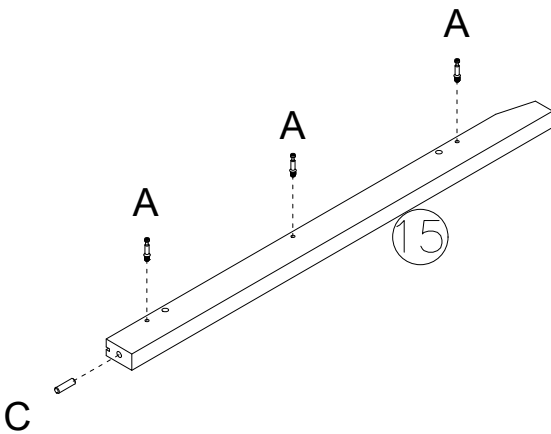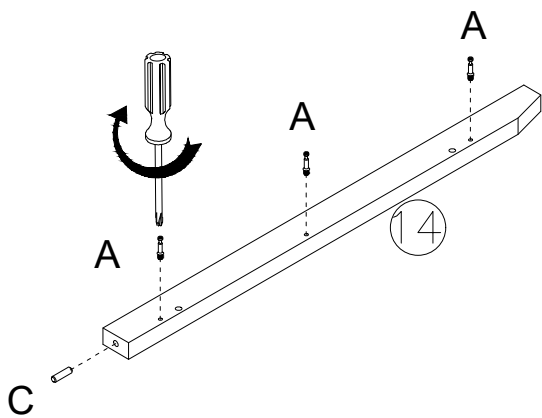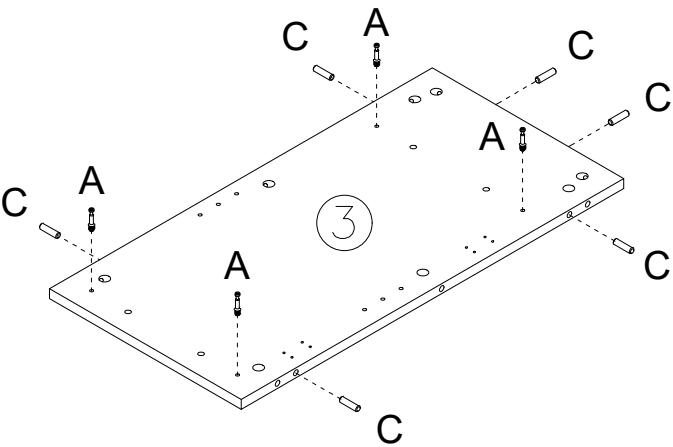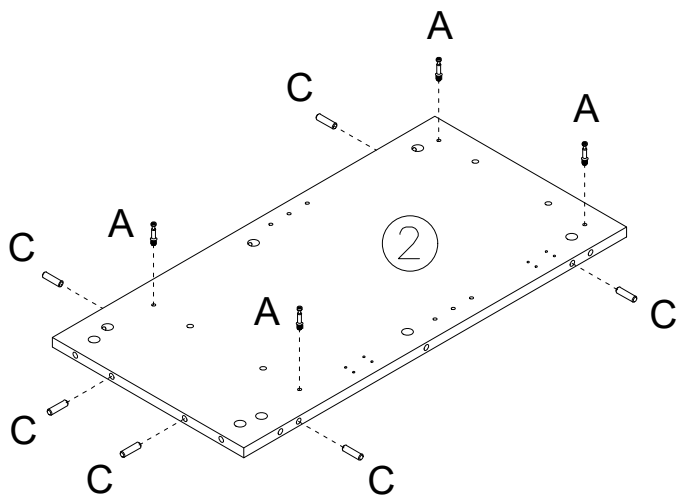
STEP 11




A	20		
C	16	Ø8*30MM	

Assembly steps(EN)

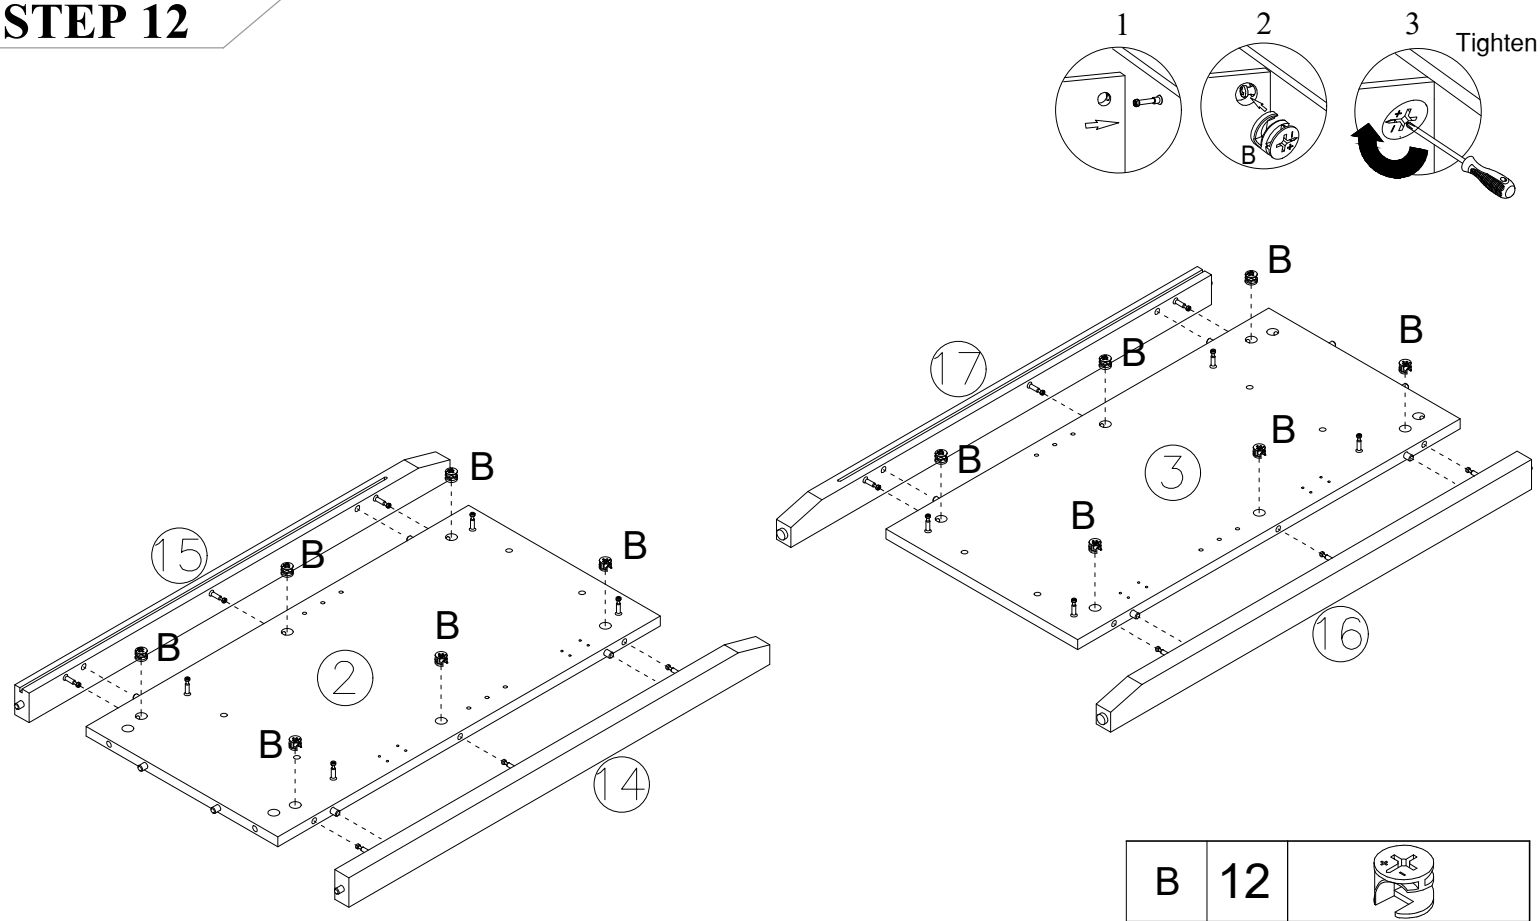STEP 12





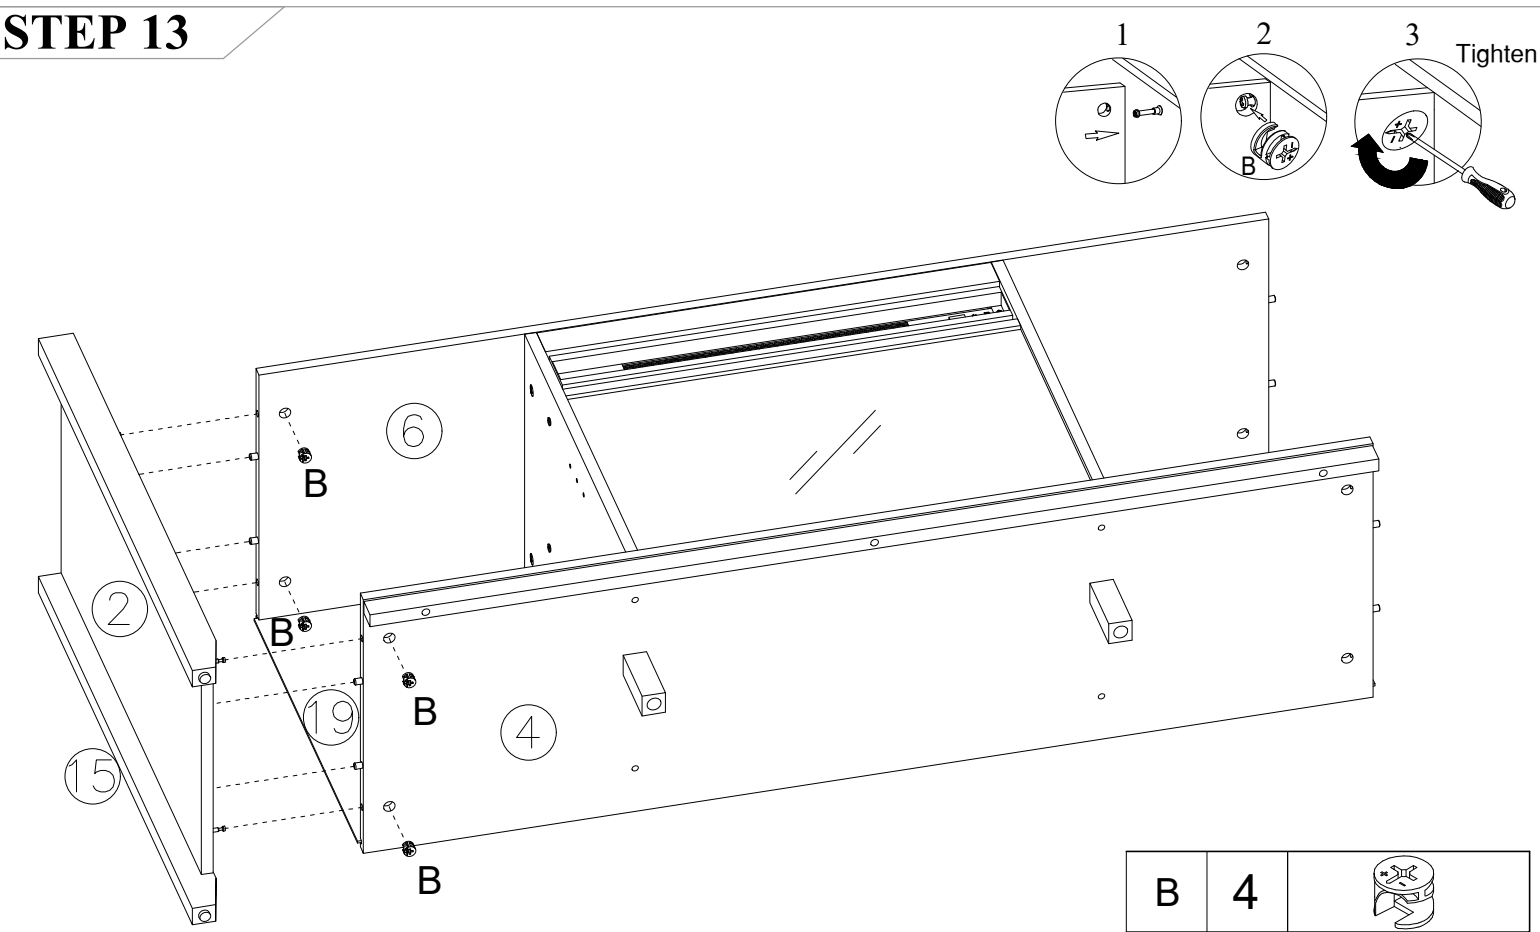STEP 13




Assembly steps(EN)

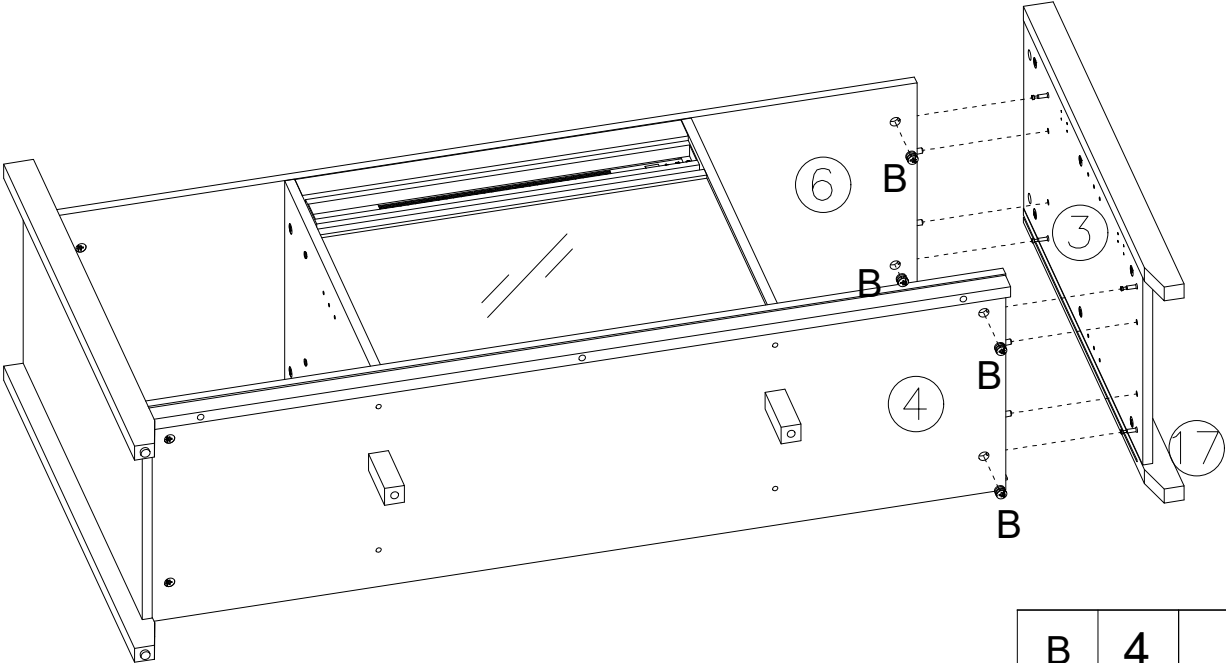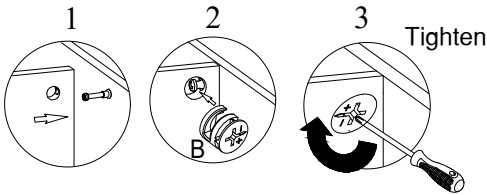STEP 14



B	4	
---	---	--

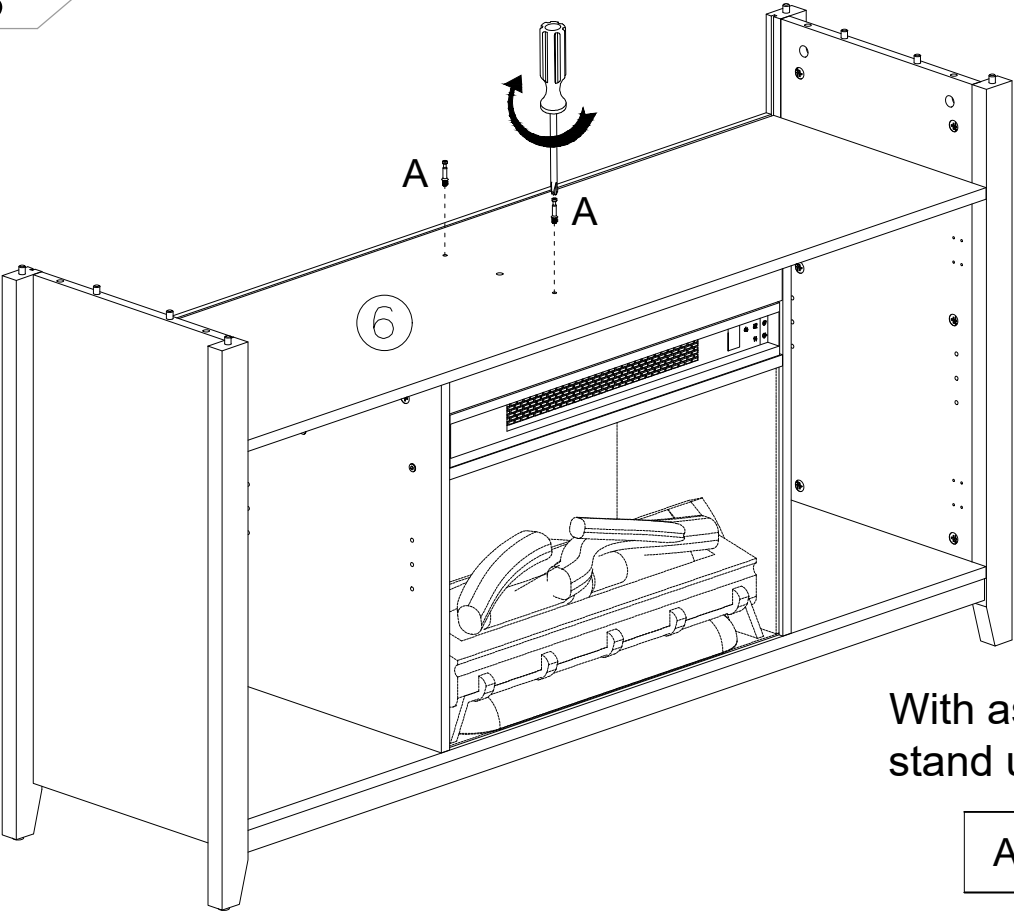STEP 15






With assistant carefully stand unit up.

A	2	
---	---	--



Assembly steps(EN)

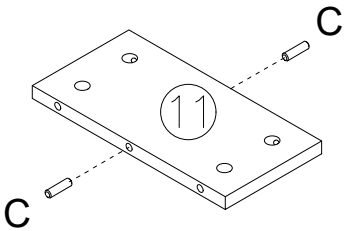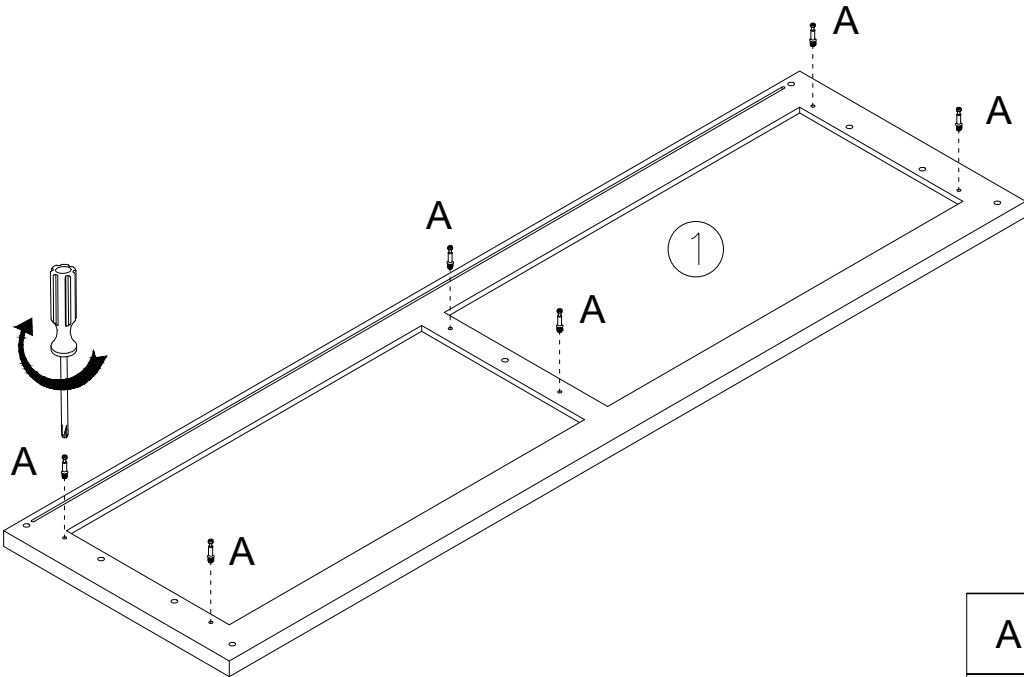STEP 16




A	6		
C	2	Ø8*30MM	

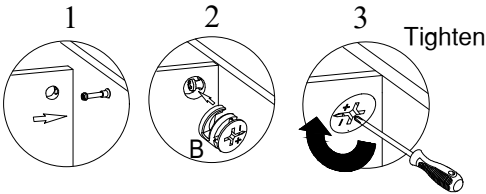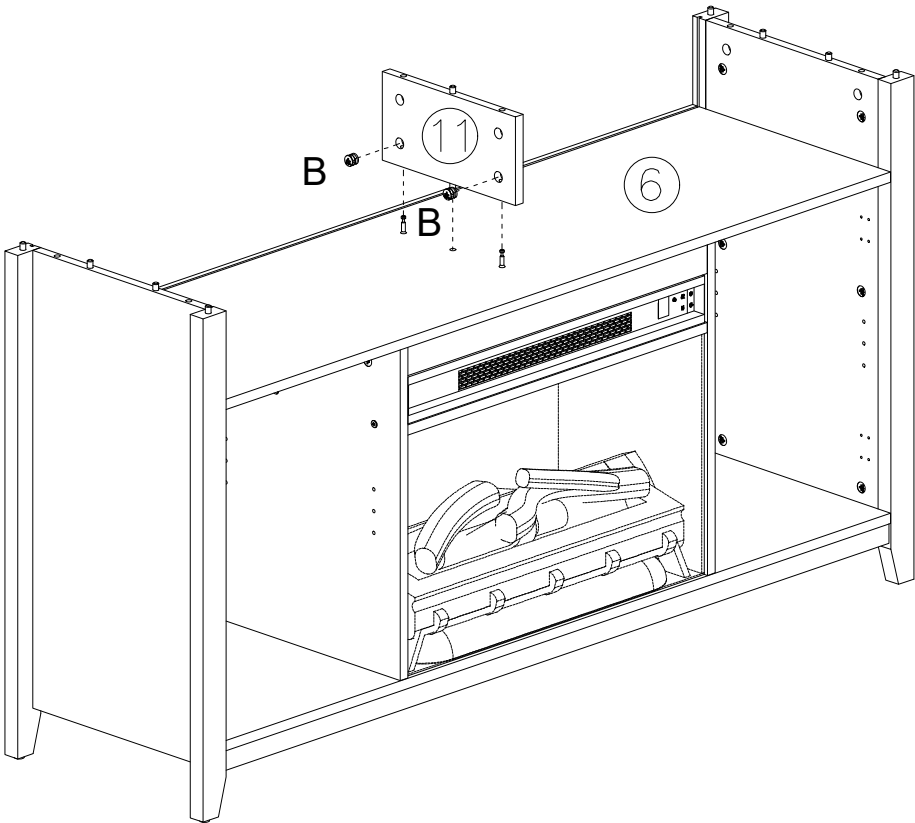STEP 17



B	2		
---	---	--	---


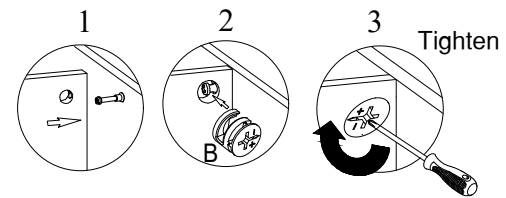
STEP 18



B	6	
---	---	---


Assembly steps(EN)

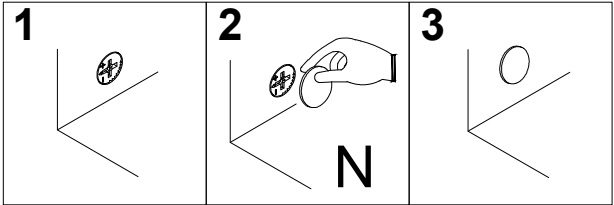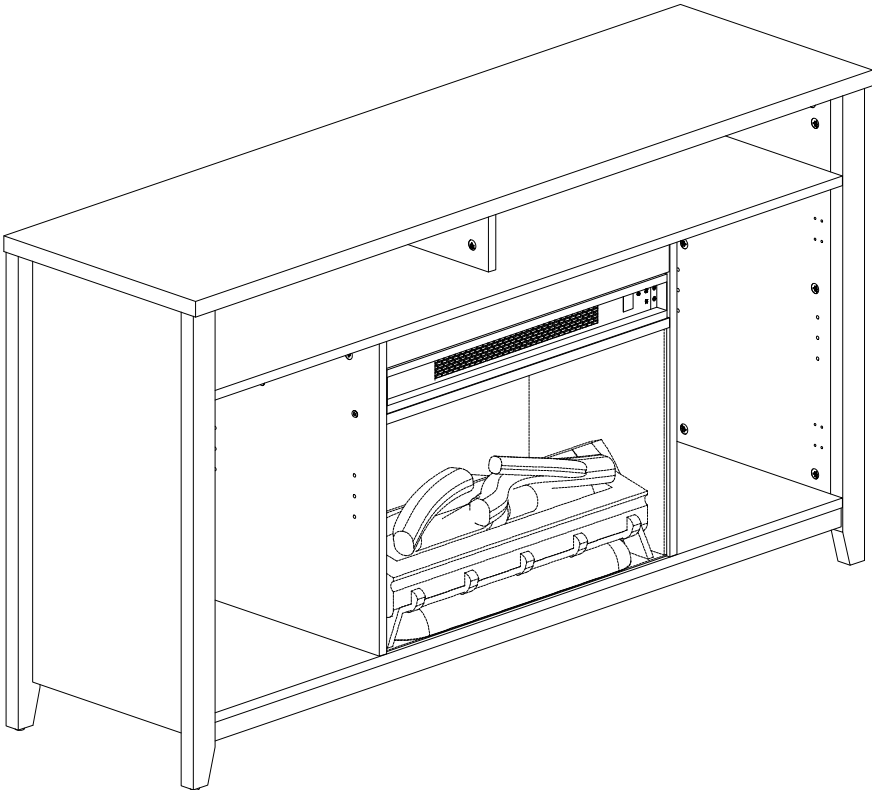STEP 20



L	32	
---	----	--

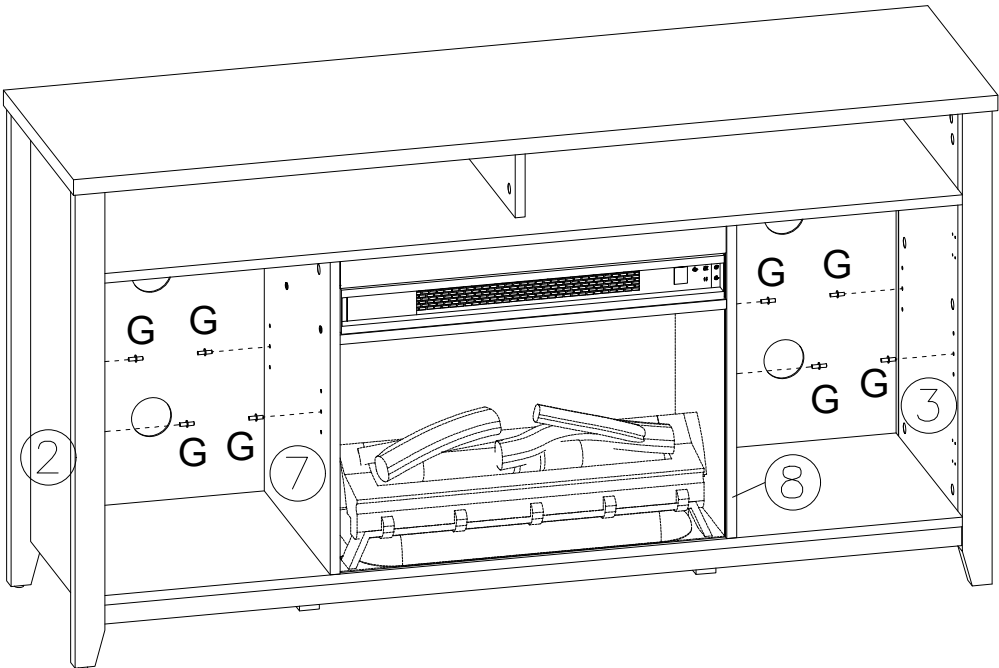
STEP 21




G	8	
---	---	--




Assembly steps(EN)

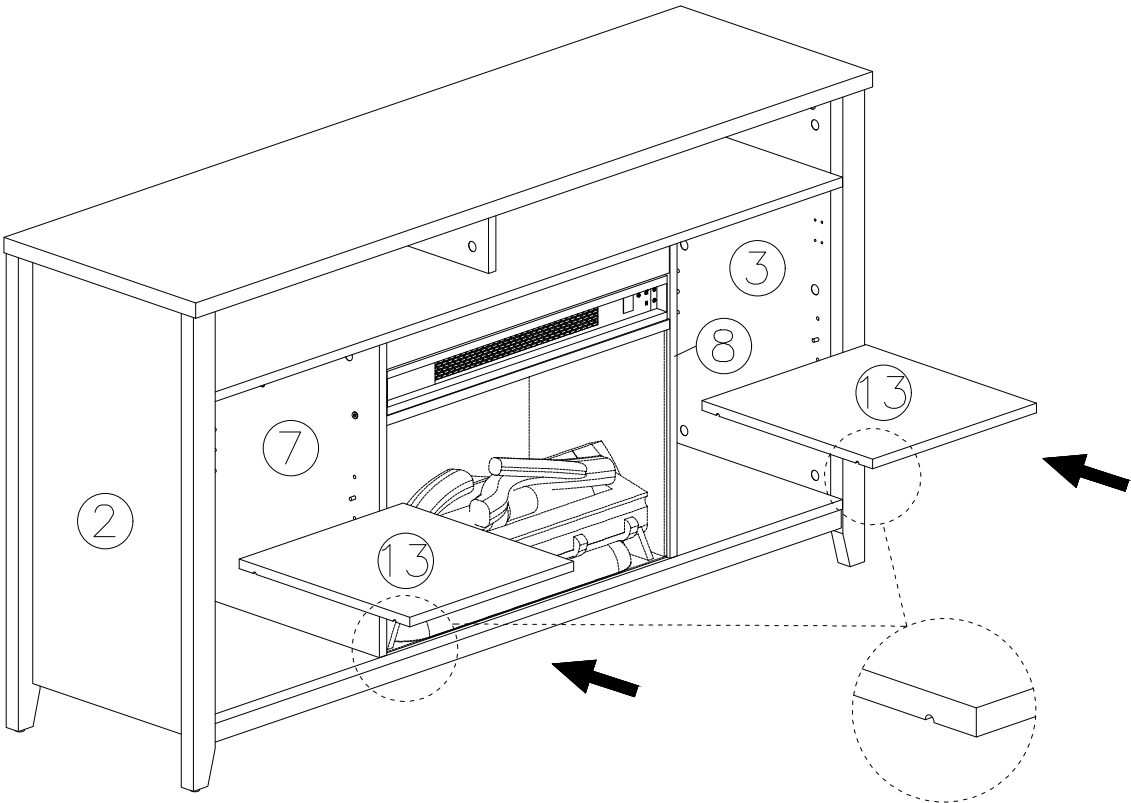STEP 22



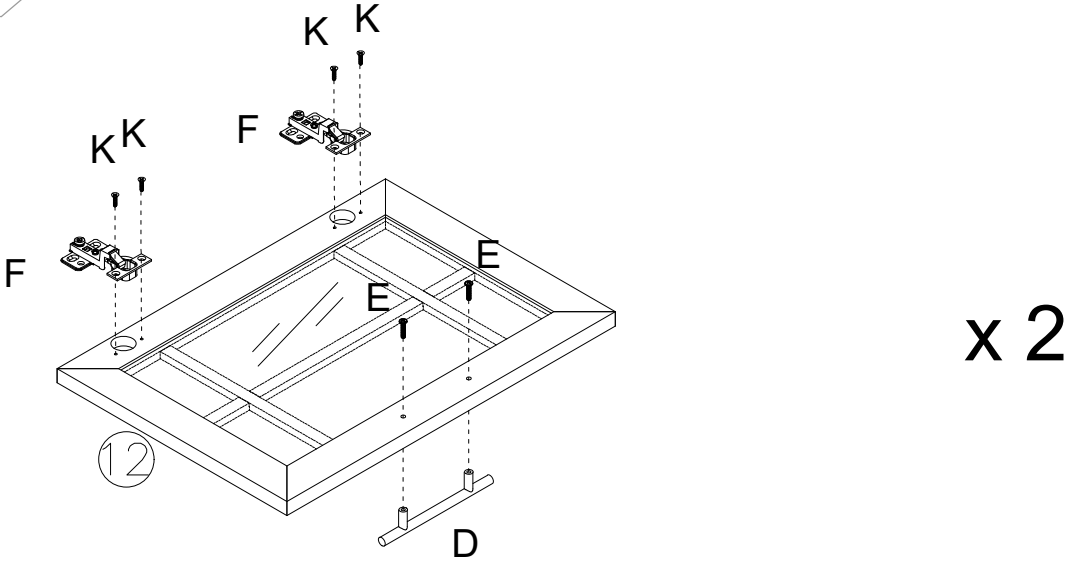
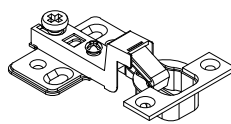
STEP 23




D	2			K	8	Ø4*14MM	
				F	4		
E	4	M4*23MM					



Assembly steps(EN)

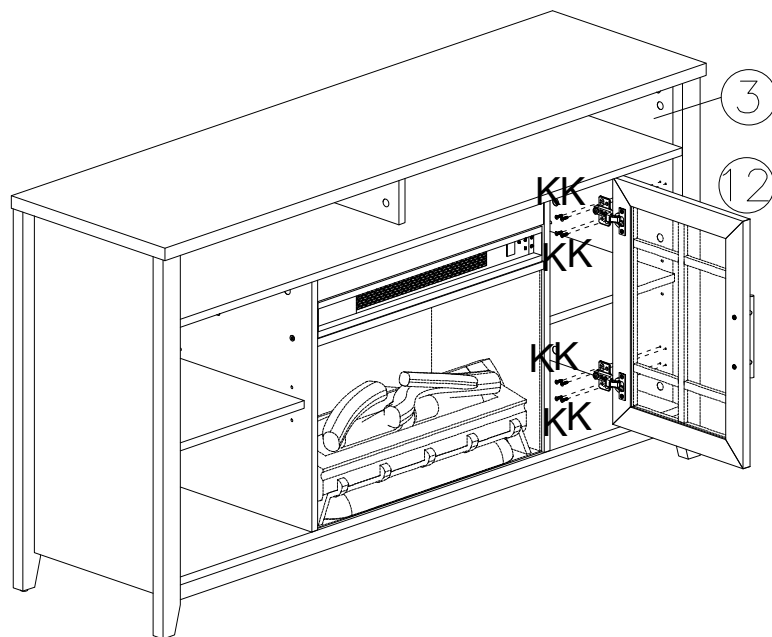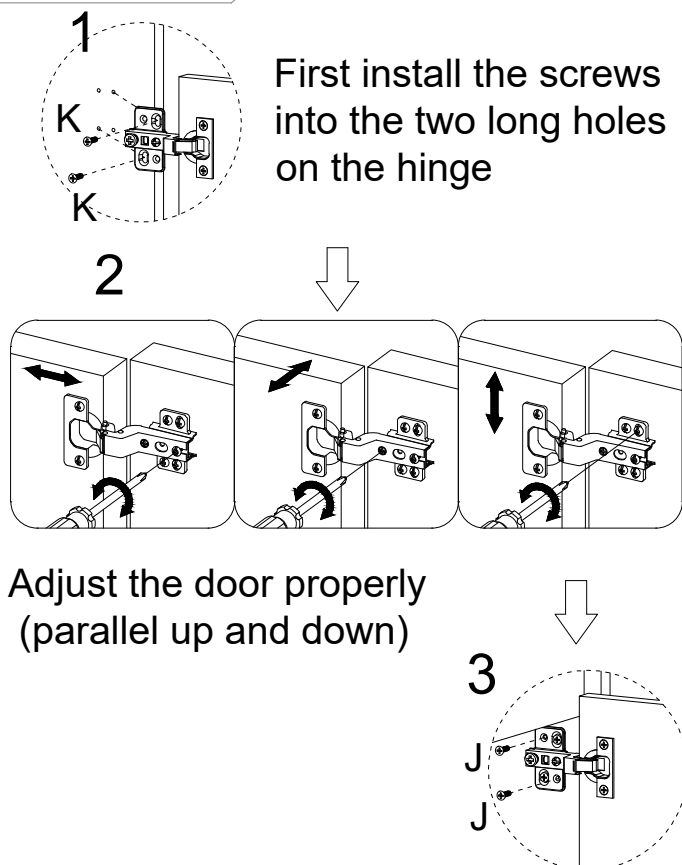
STEP 24



K	8	Ø4*14MM	
---	---	---------	---

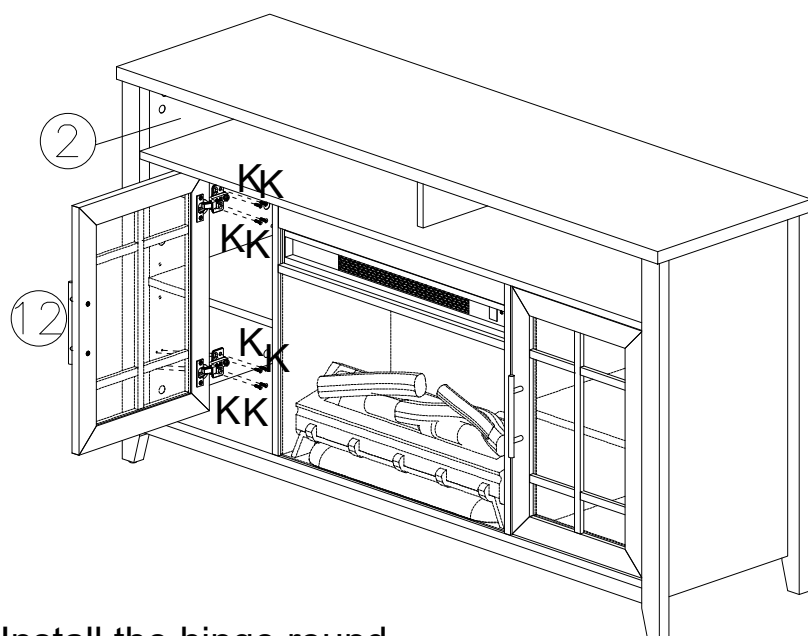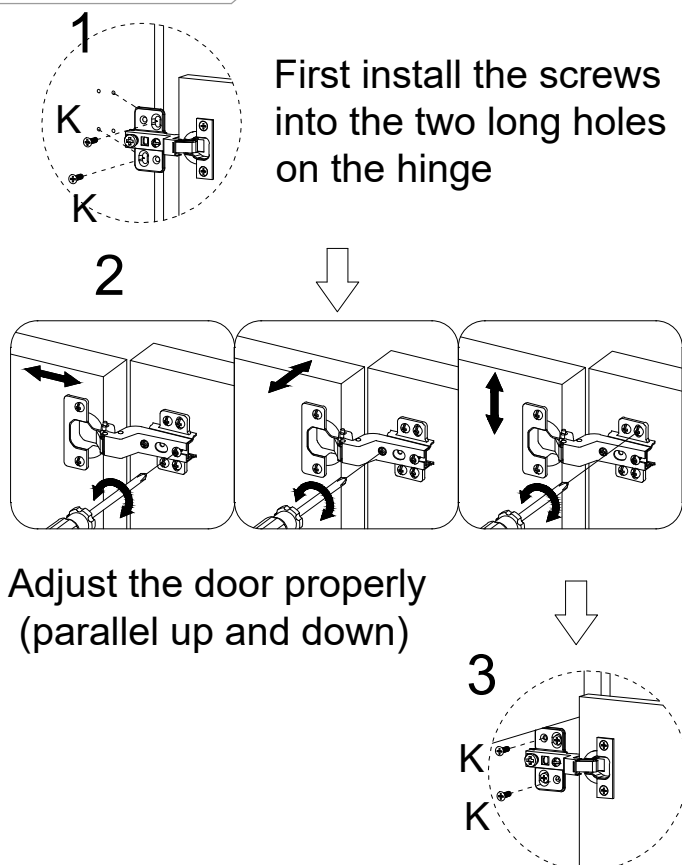
STEP 25






K	8	Ø4*14MM	
---	---	---------	---


Assembly steps(EN)

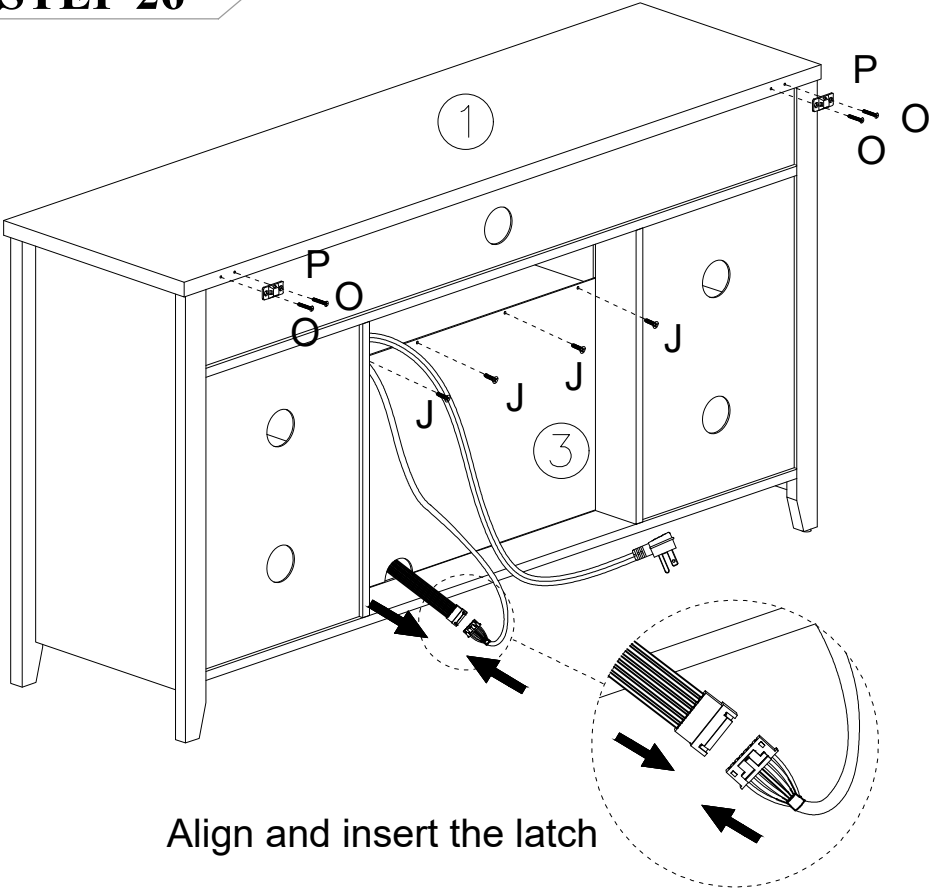

STEP 26



J	4	Ø3.5*14MM	
P	2		
O	4	Ø4*16MM	

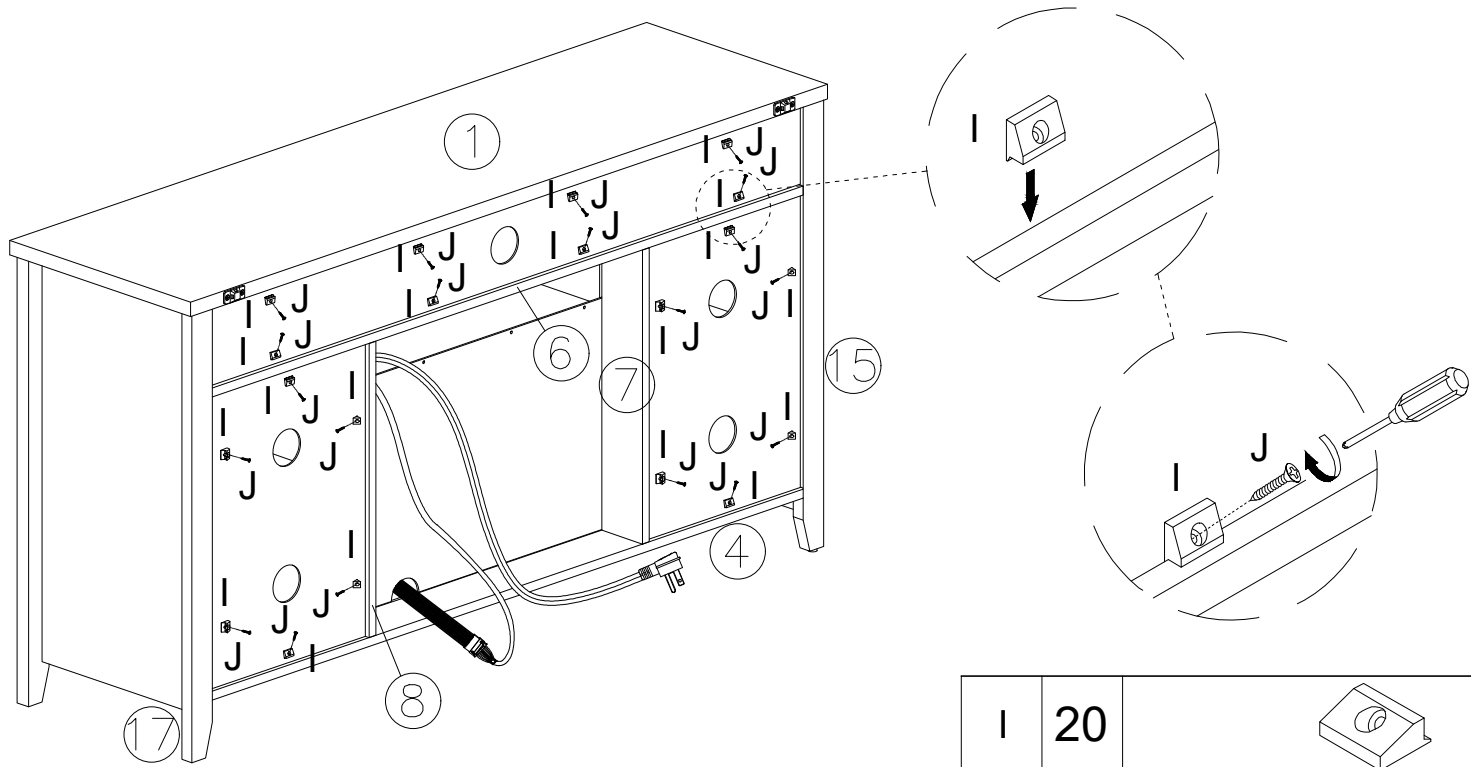STEP 27





I	20		
J	20	Ø3.5*14MM	

Assembly steps(EN)

STEP 28

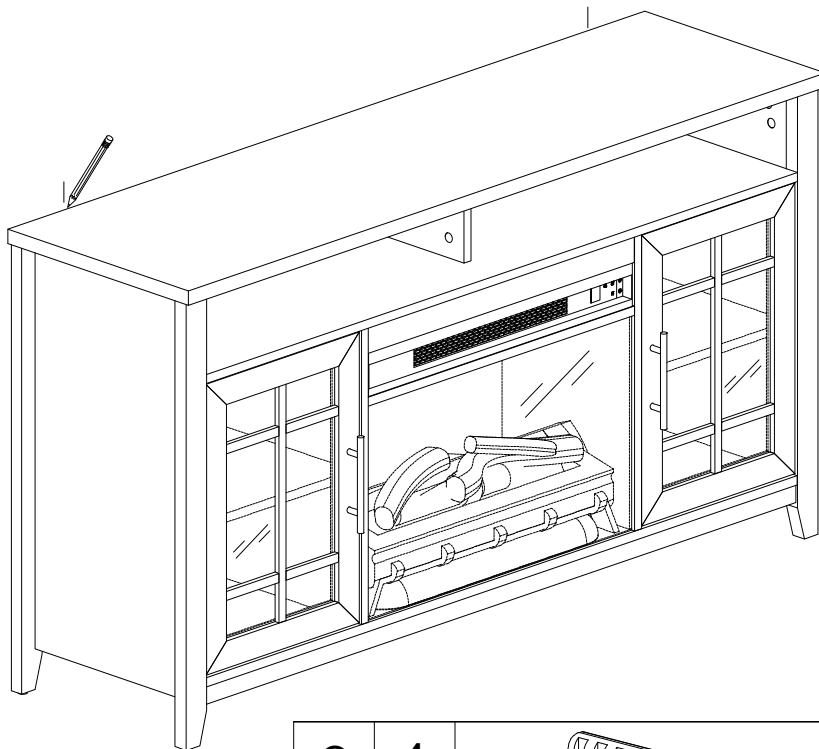
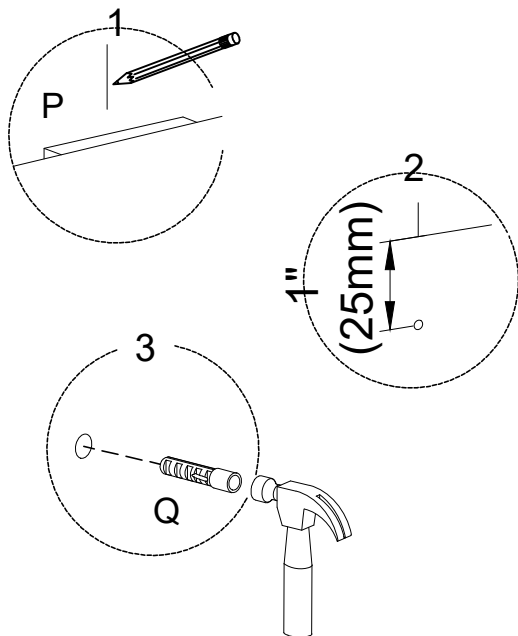
1. Place unit in desired location.
2. Locate wall stud nearest unit center.
3. On wall, mark the center of the hole.
4. If a wall stud cannot be located mark hollow wall at unit center.



Q	4	
---	---	--

STEP 29

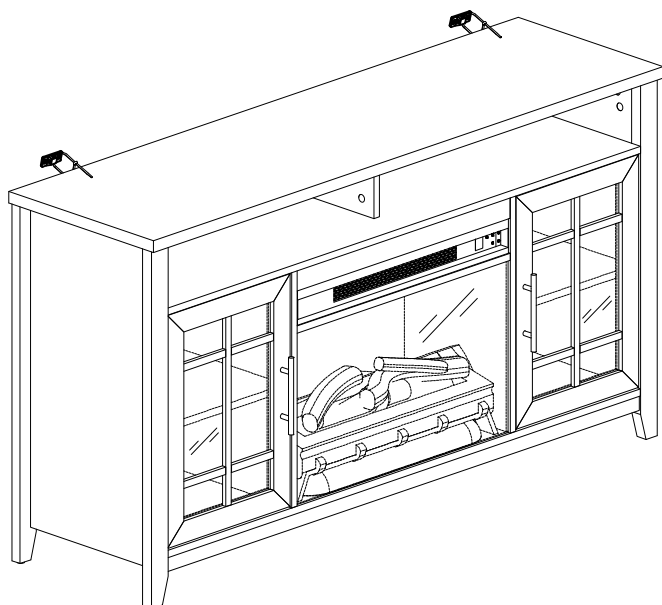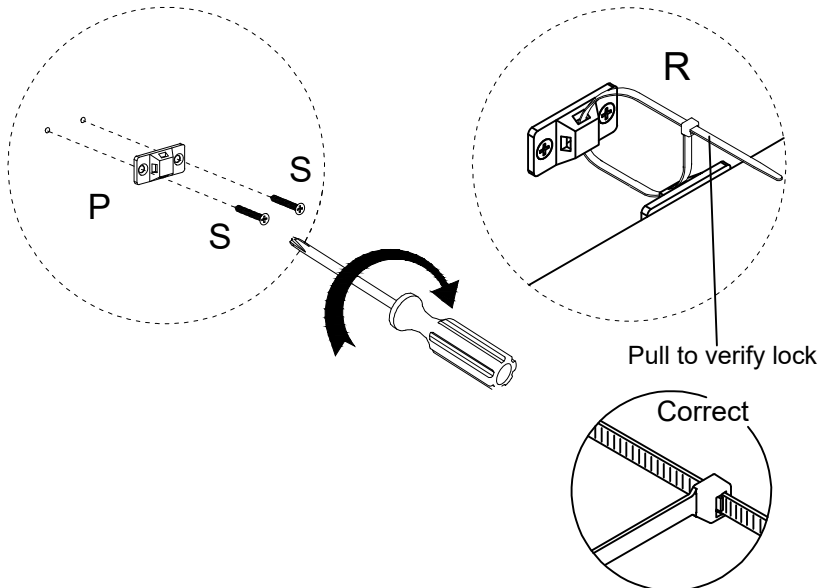1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert strap thru bracket attached to wall.
3. Pull lightly til strap stops. Assembly is complete.




R	2		Nylon Cable Tie
P	2		
S	4	Ø4*35MM	

Assembly steps(EN)

STEP 30

CAUTION: This unit is intended for use only with the products and maximum weights indicated. use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury.

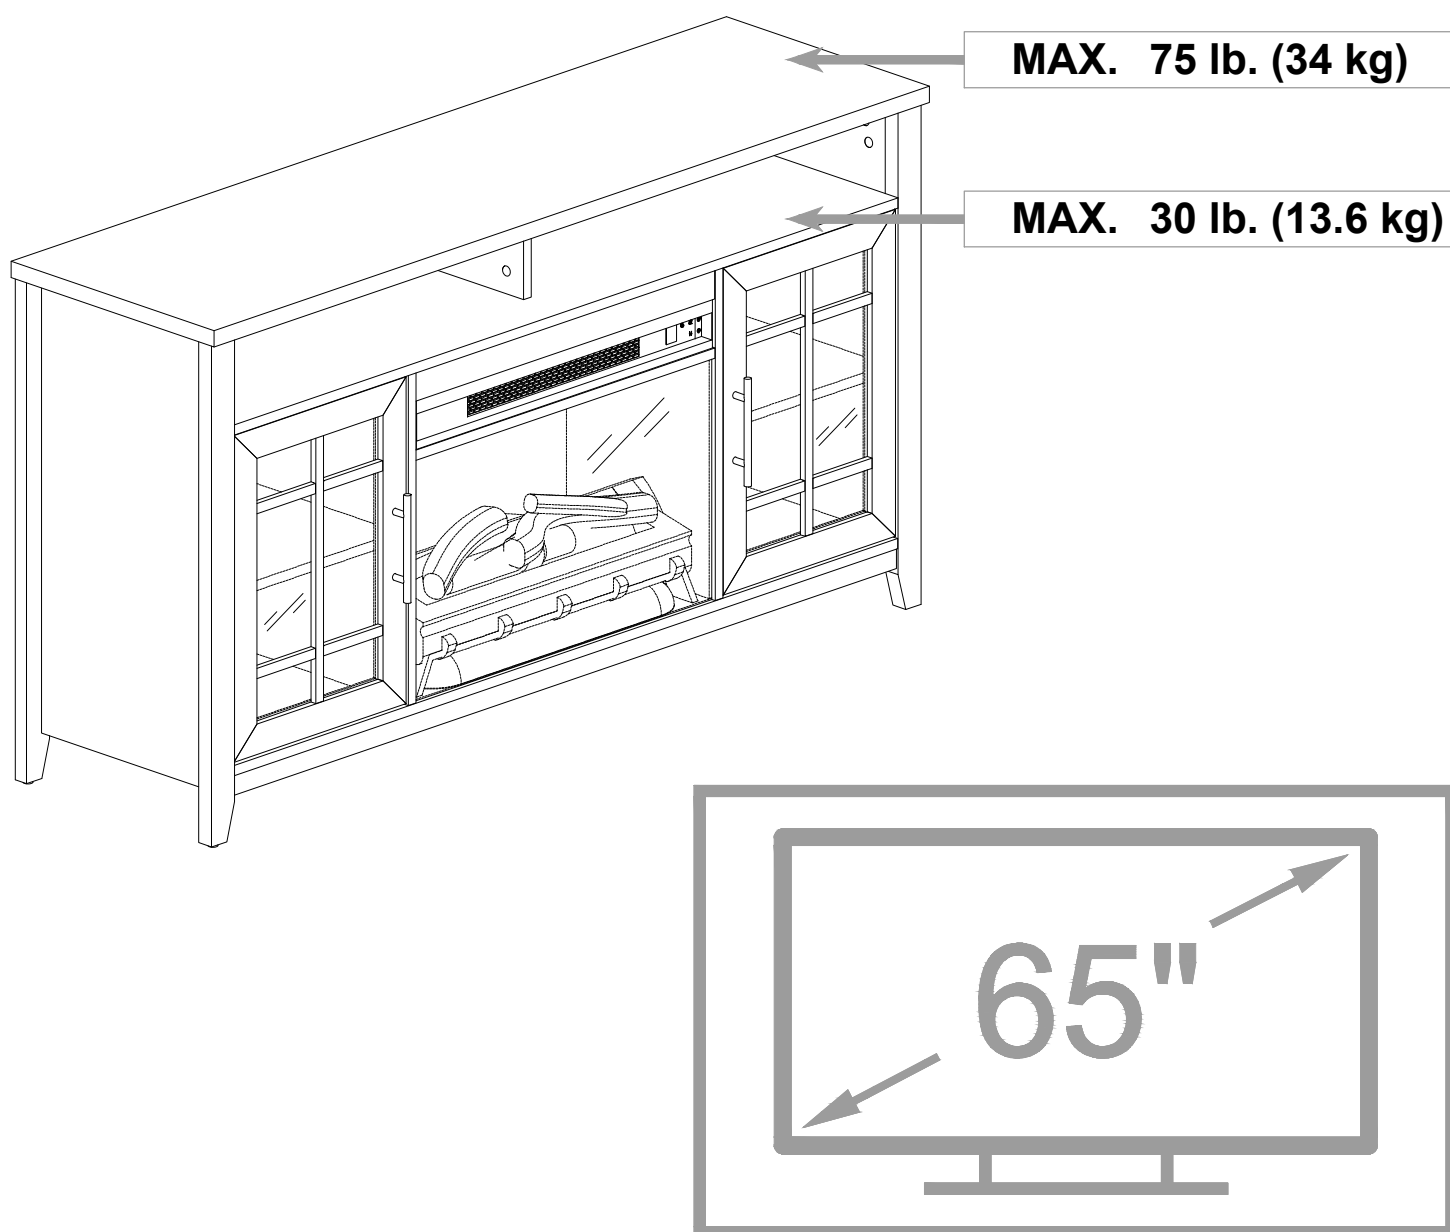Note: Flat Panel TVs with base support should be placed squarely in the center of the stand with no overhang on any side.



YOU'RE FINISHED!