
ASSEMBLY INSTRUCTION


If you have any questions, please feel free to contact us. Email: lowesteam@aminalife.com




N719P257031 - N719P257032 - N719P257033 N719P257034 - N719P257035

- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

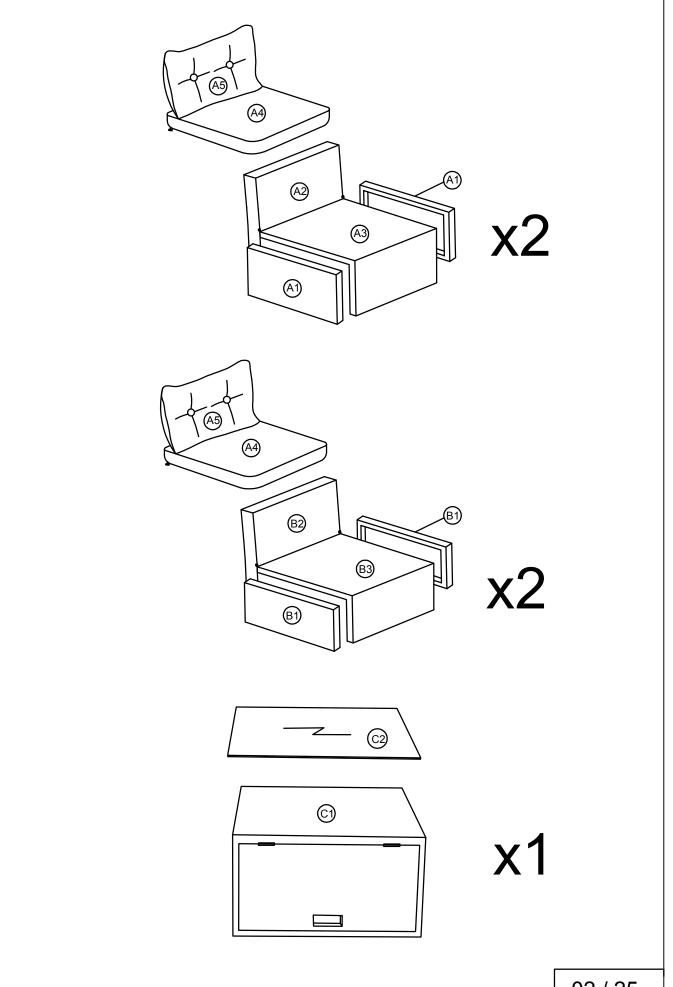


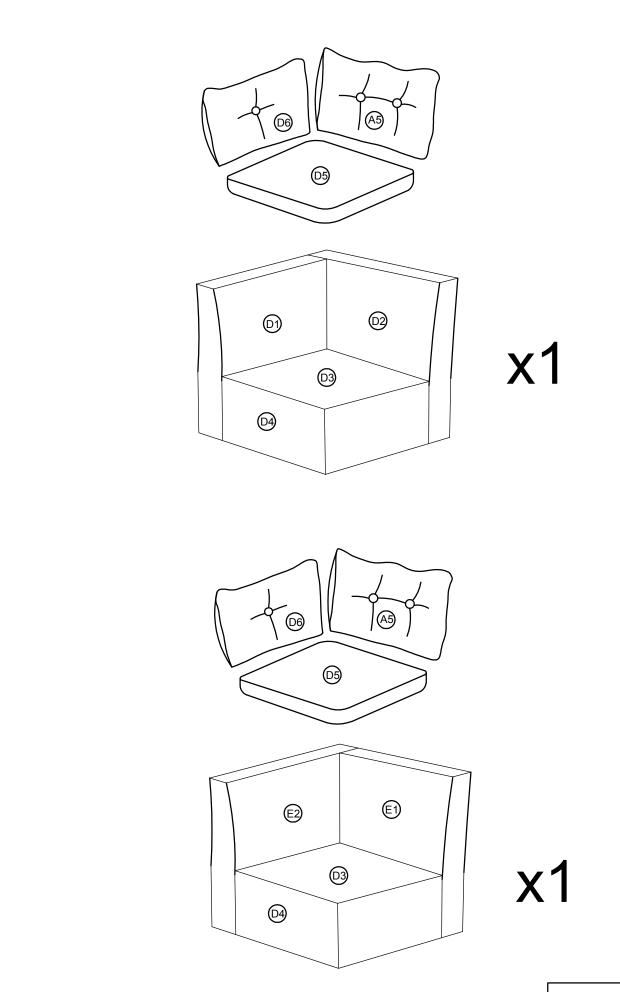


03 / 25

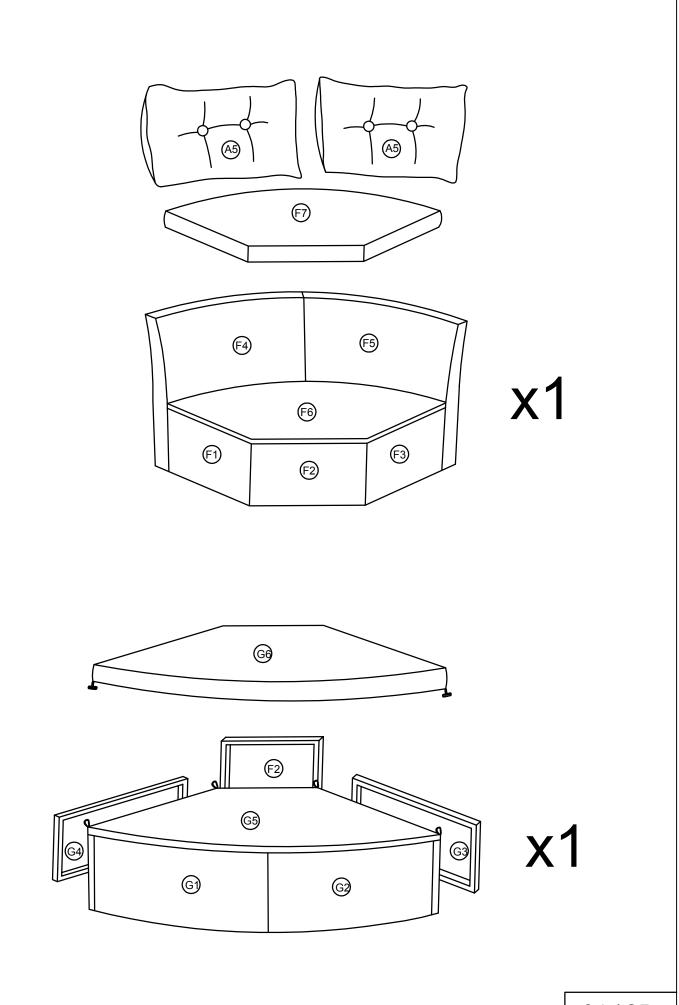

COMPONENTS:

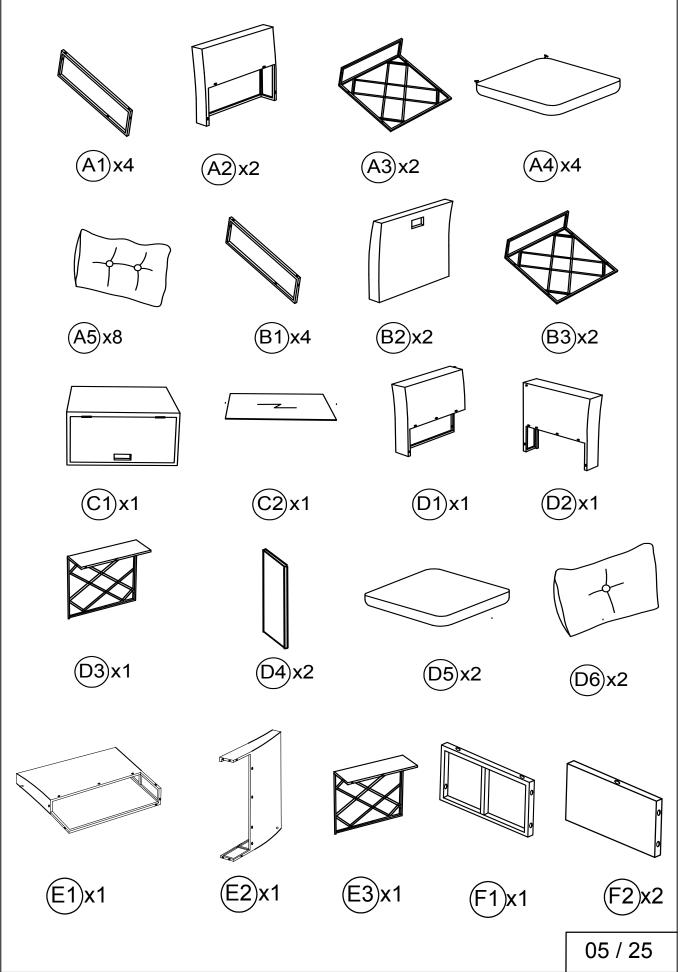

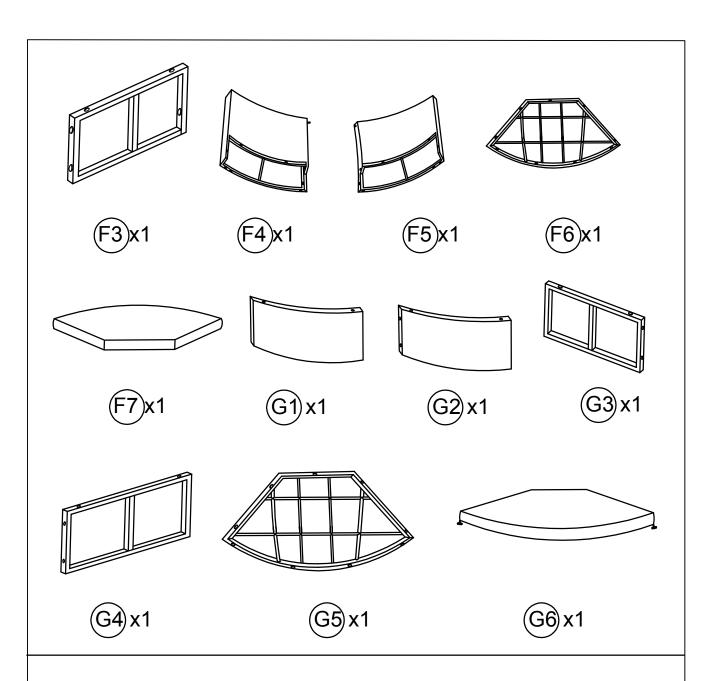

HARDWARE:



Bolt M6x35mm 134pcs + extra 5pcs



Foot 24pcs + extra 1pc





Bolt M6x25mm 76pcs + extra 3pcs





Foot 14pcs + extra 1pc





Washer M6x16x1mm 134pcs + extra 5pcs







Allenkey = 3 pcs

CARTON CONTENT:


N719P257031








(B1)x4




(B2)x2

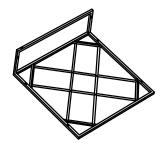

(B3)x2




(C1)x1




(C2)x1


N719P257032

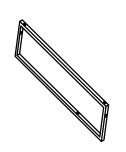


(A1)x4

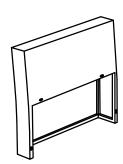


(A2)x2

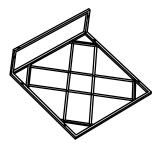


(A3)x2



(A4)x2

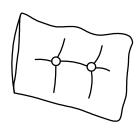


(A5)x2

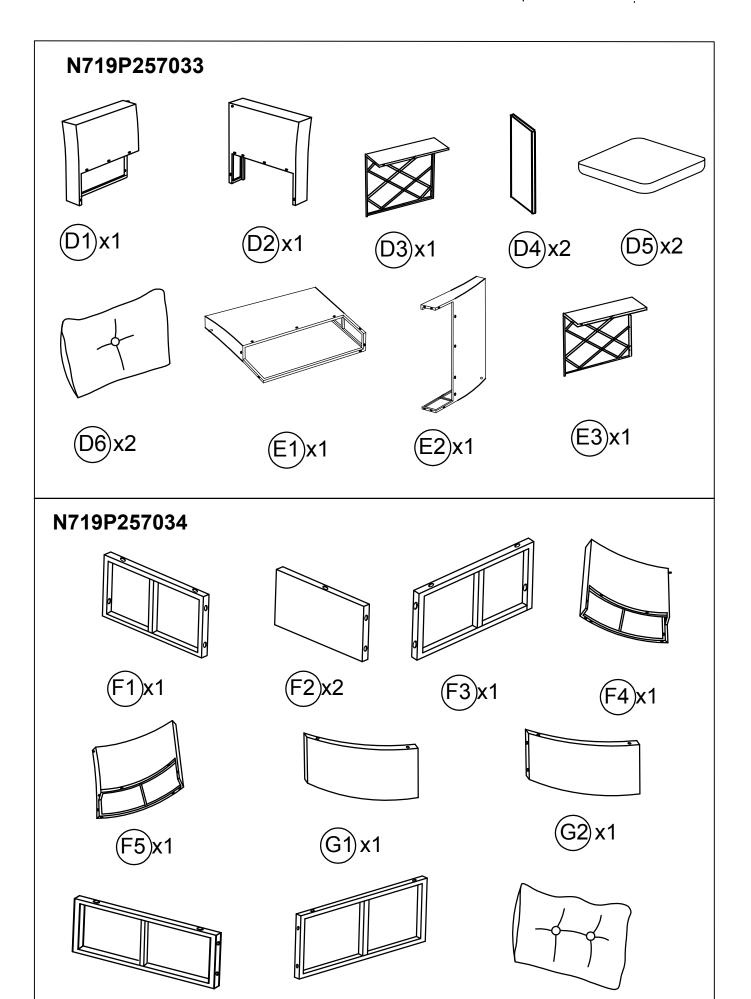



G4) x1


G3) x1


A5)x6 08 / 25

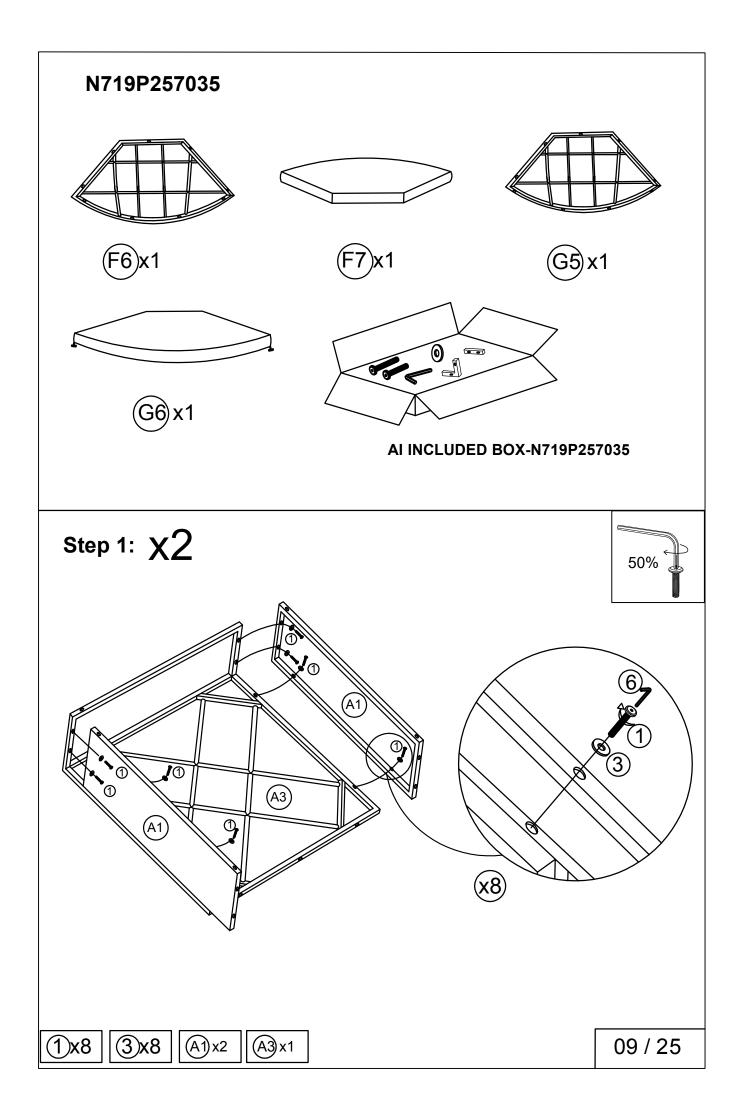


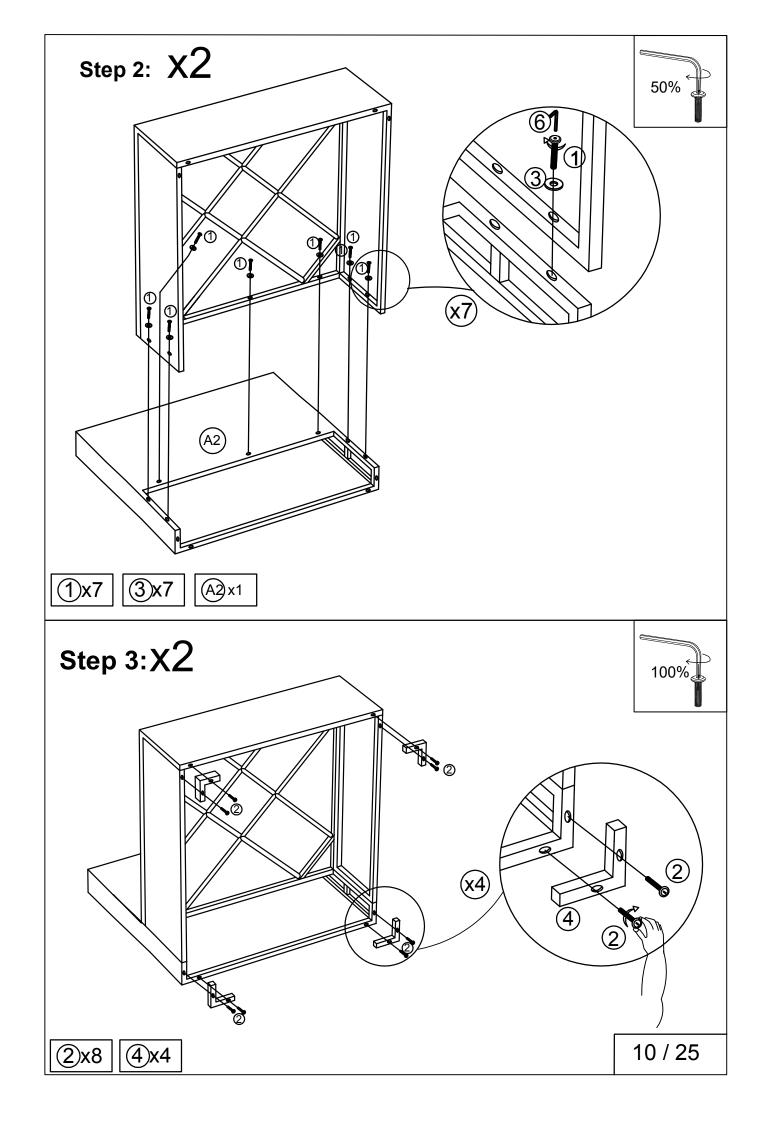


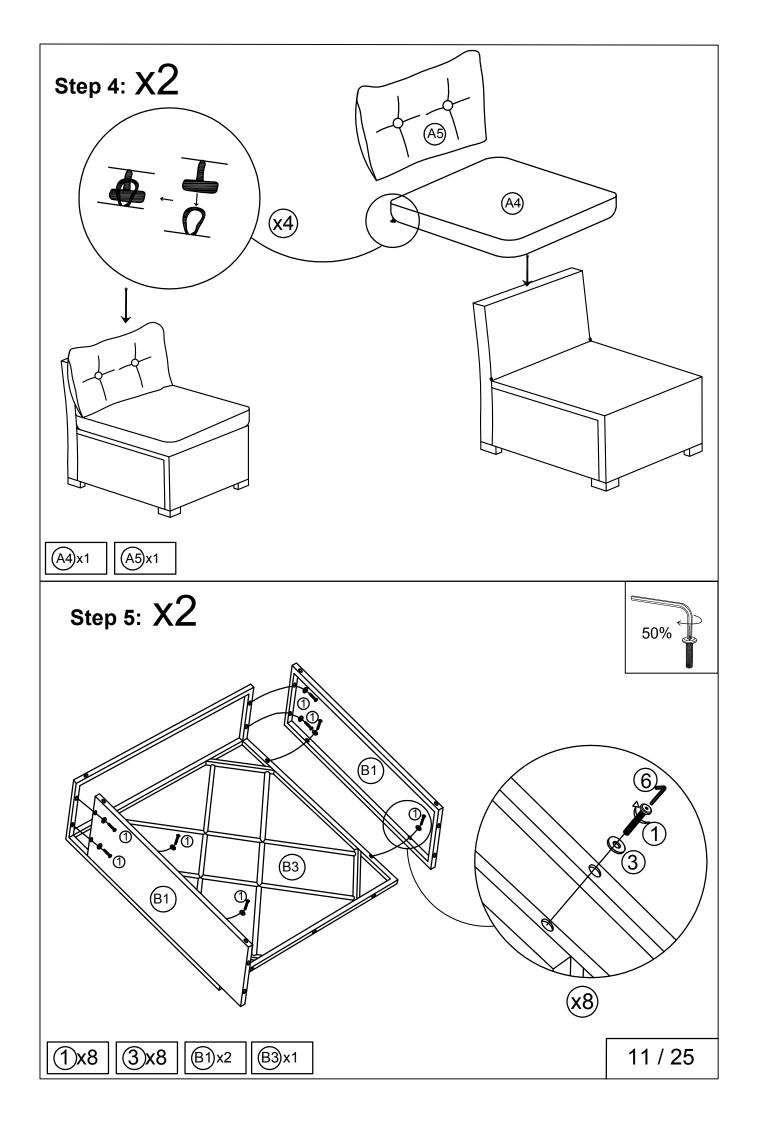


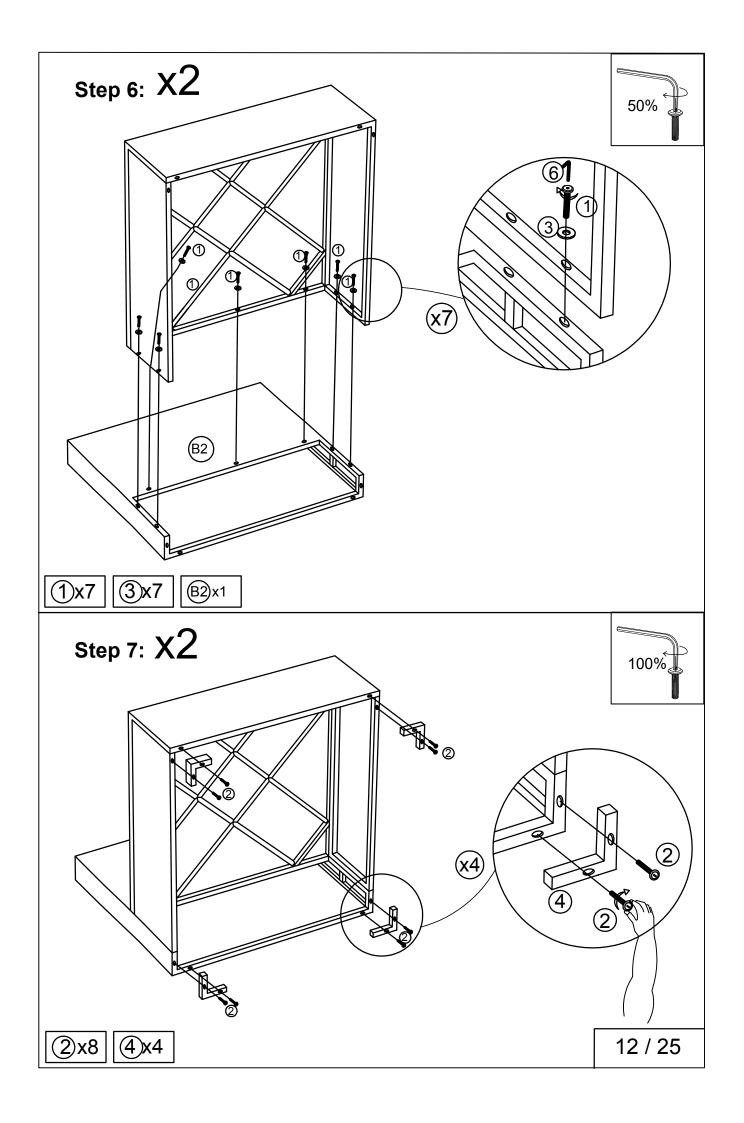


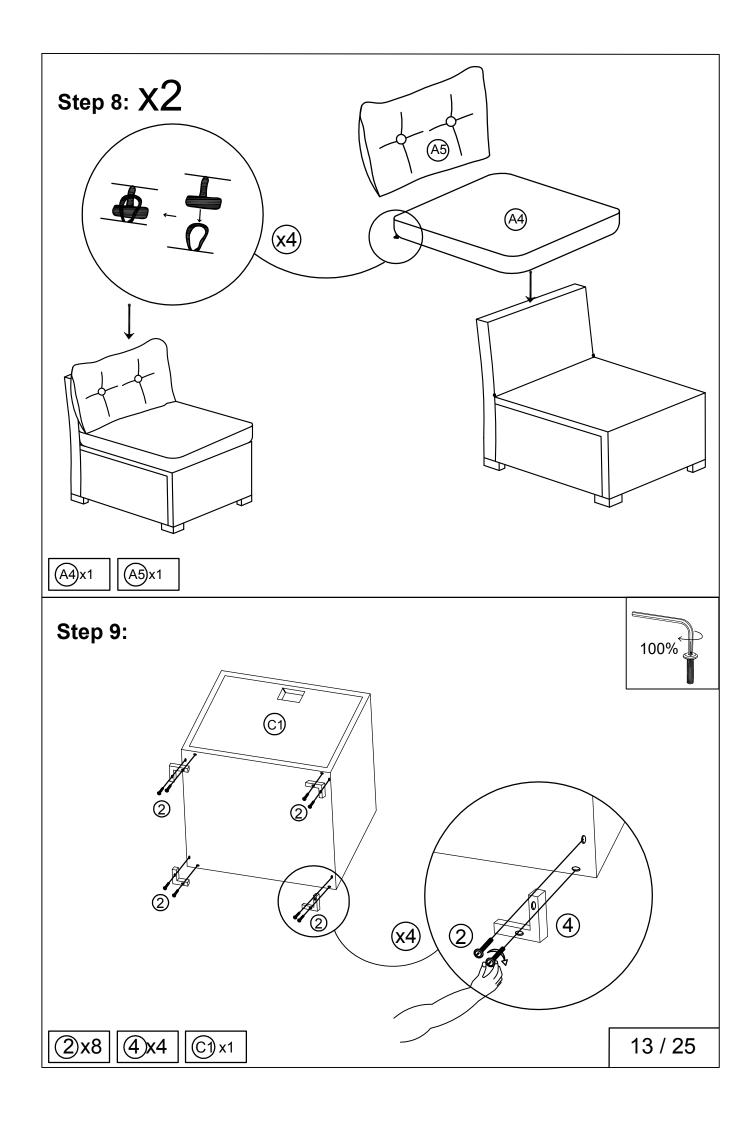


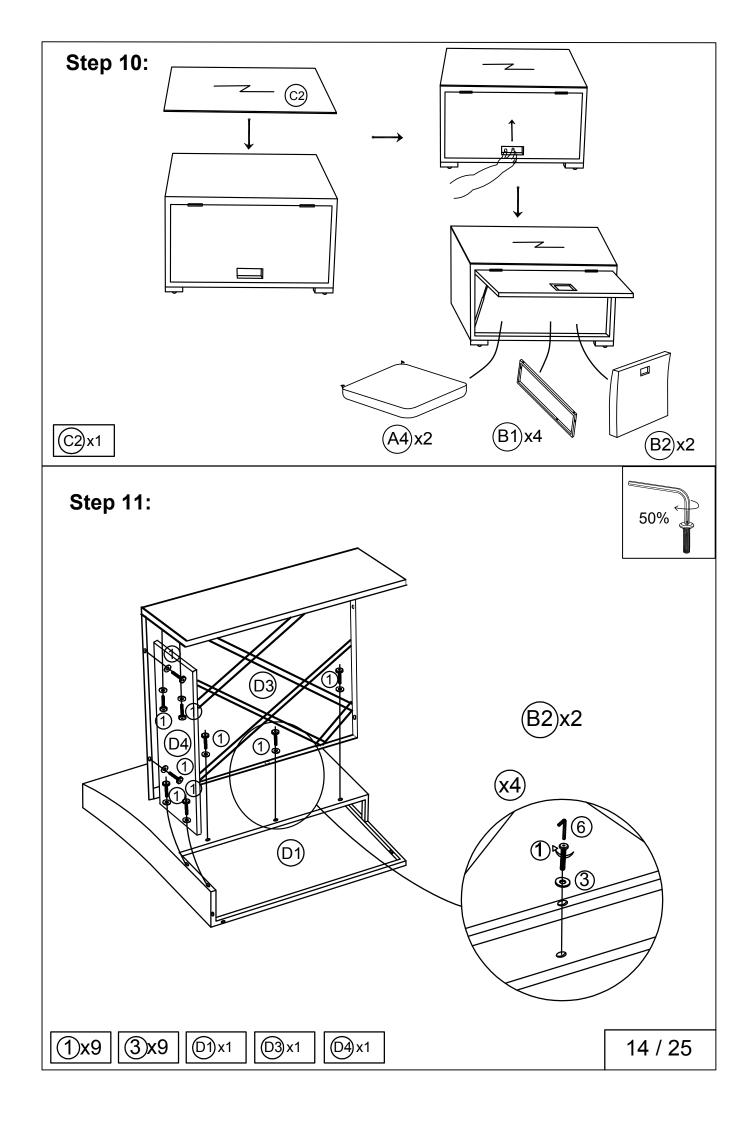


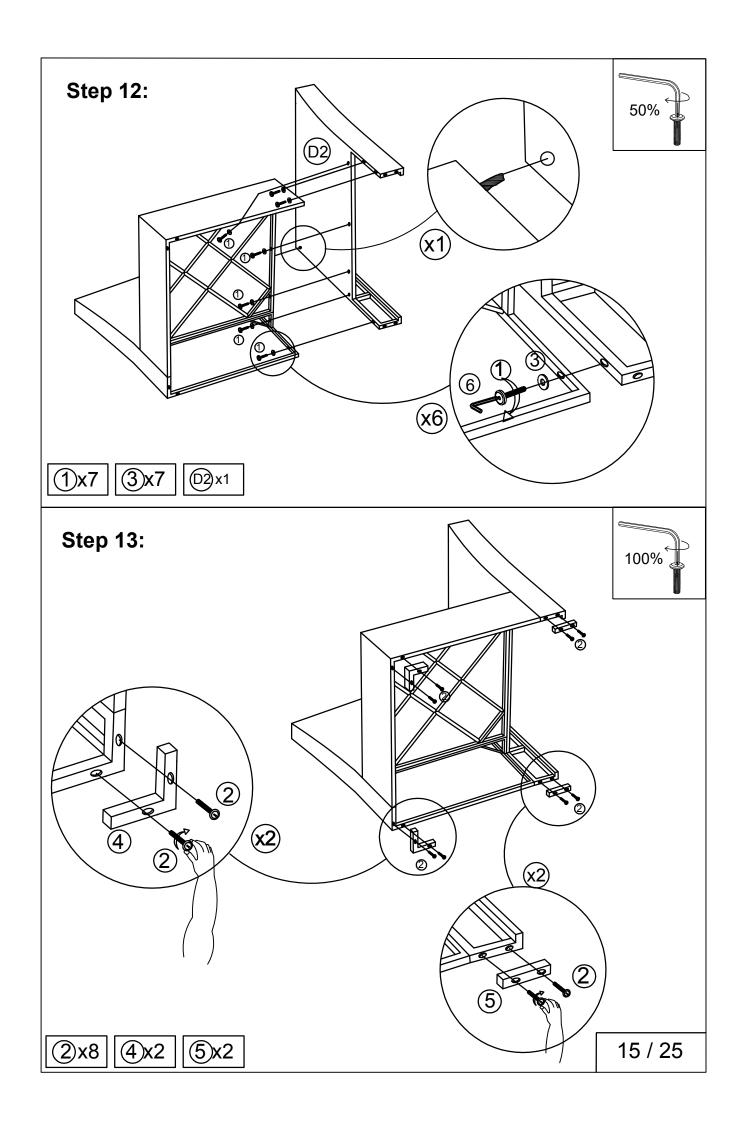


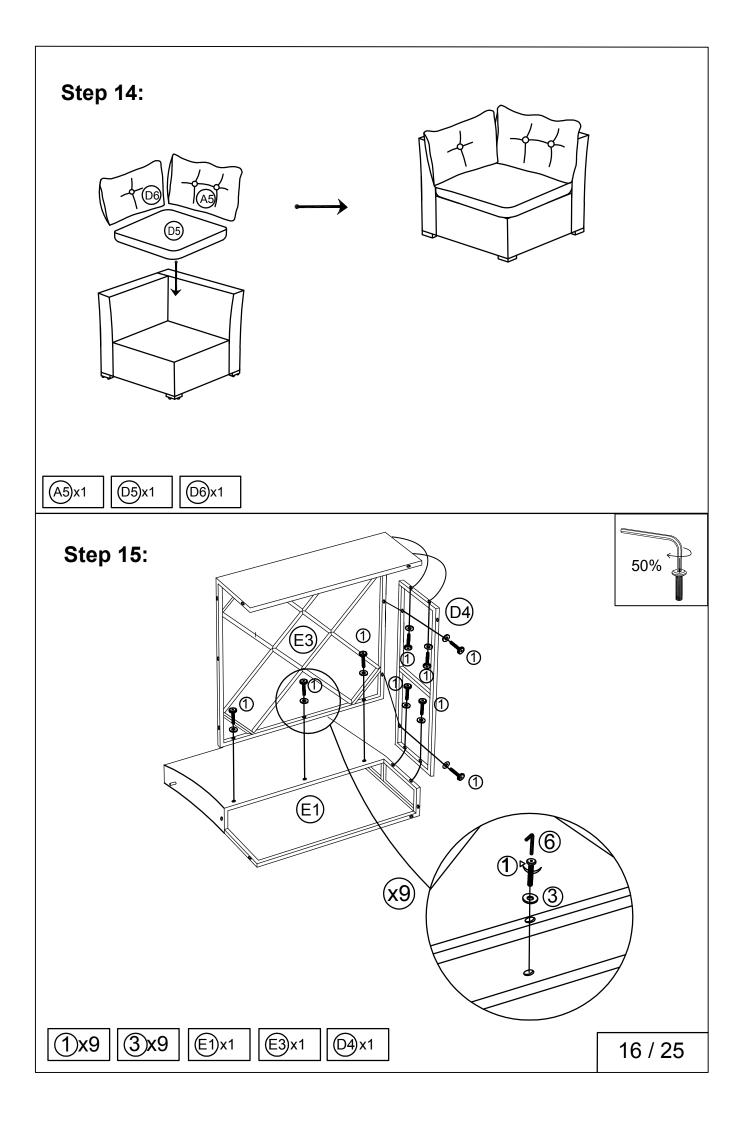


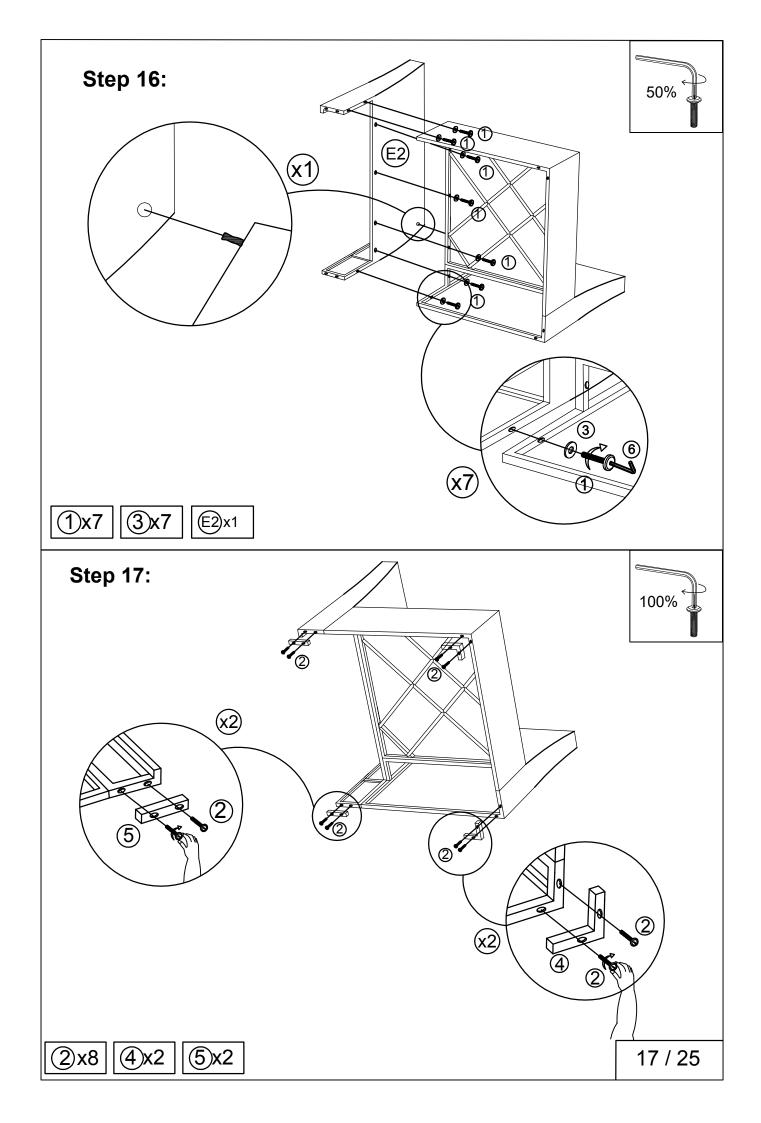

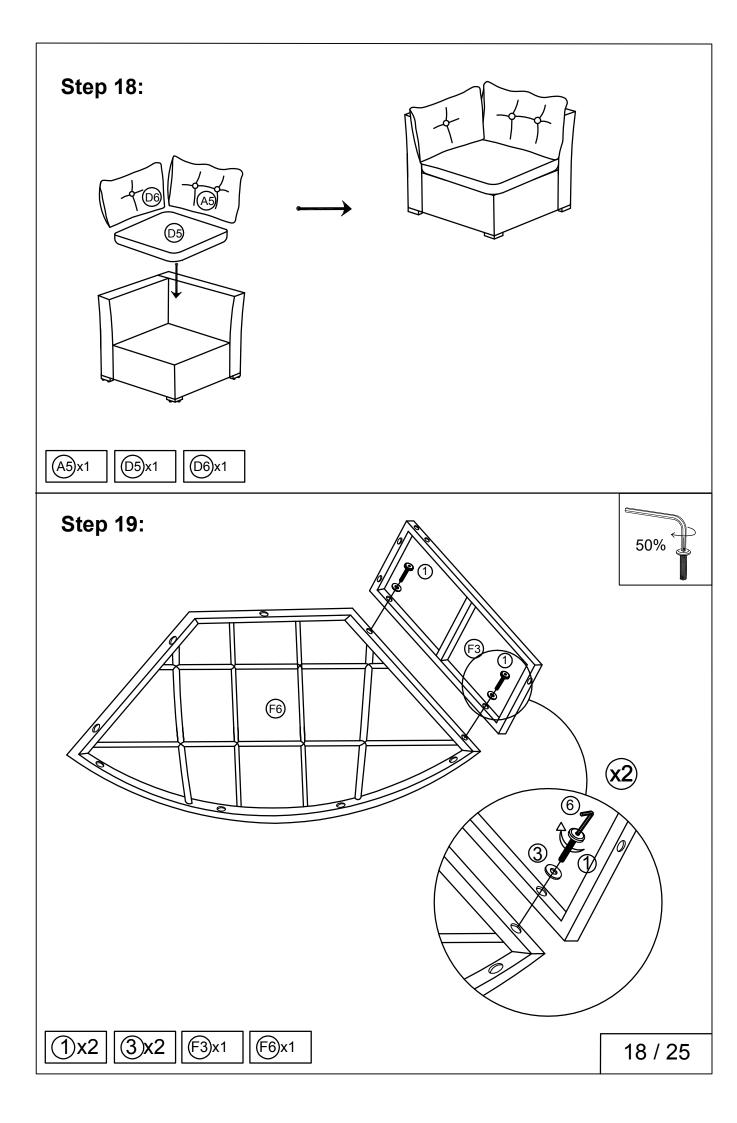


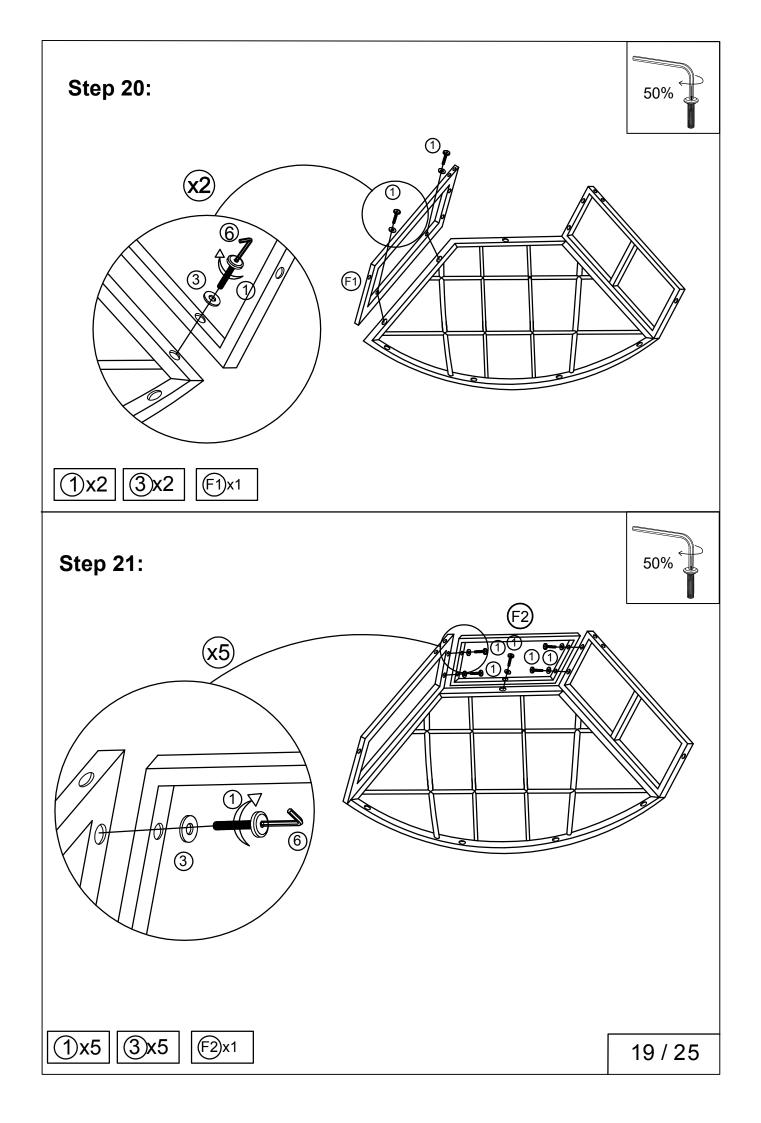


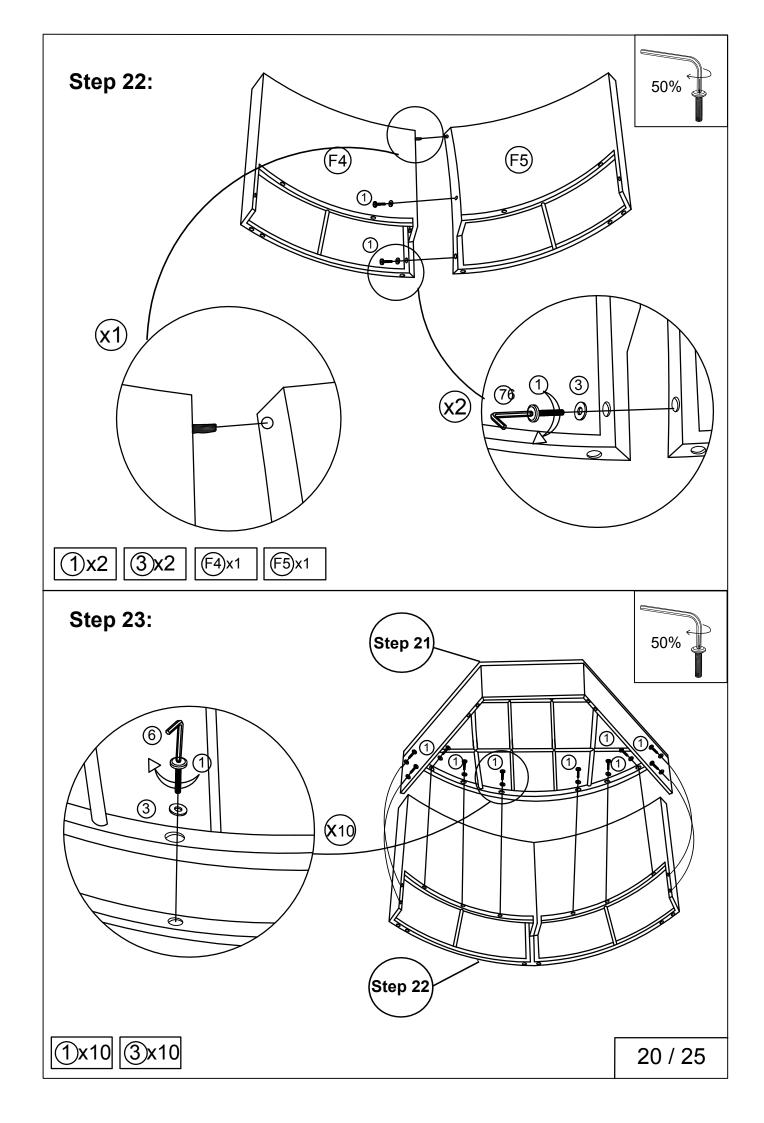


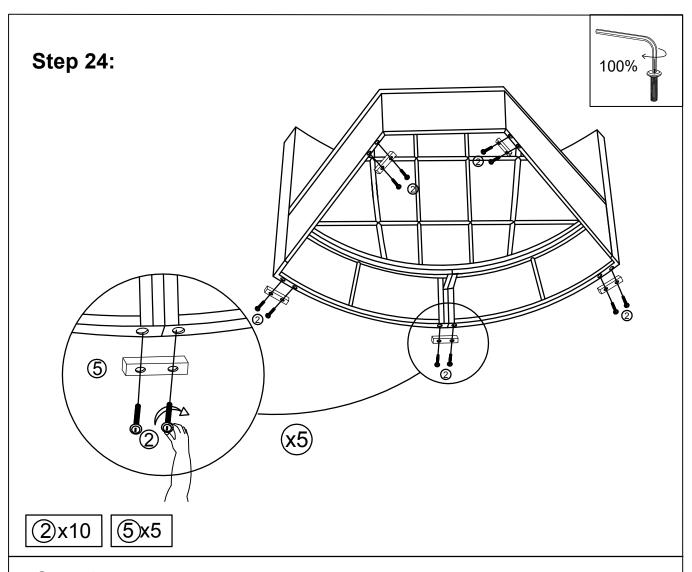



Step 25:

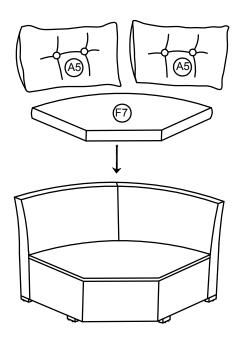


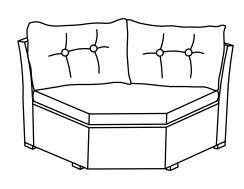

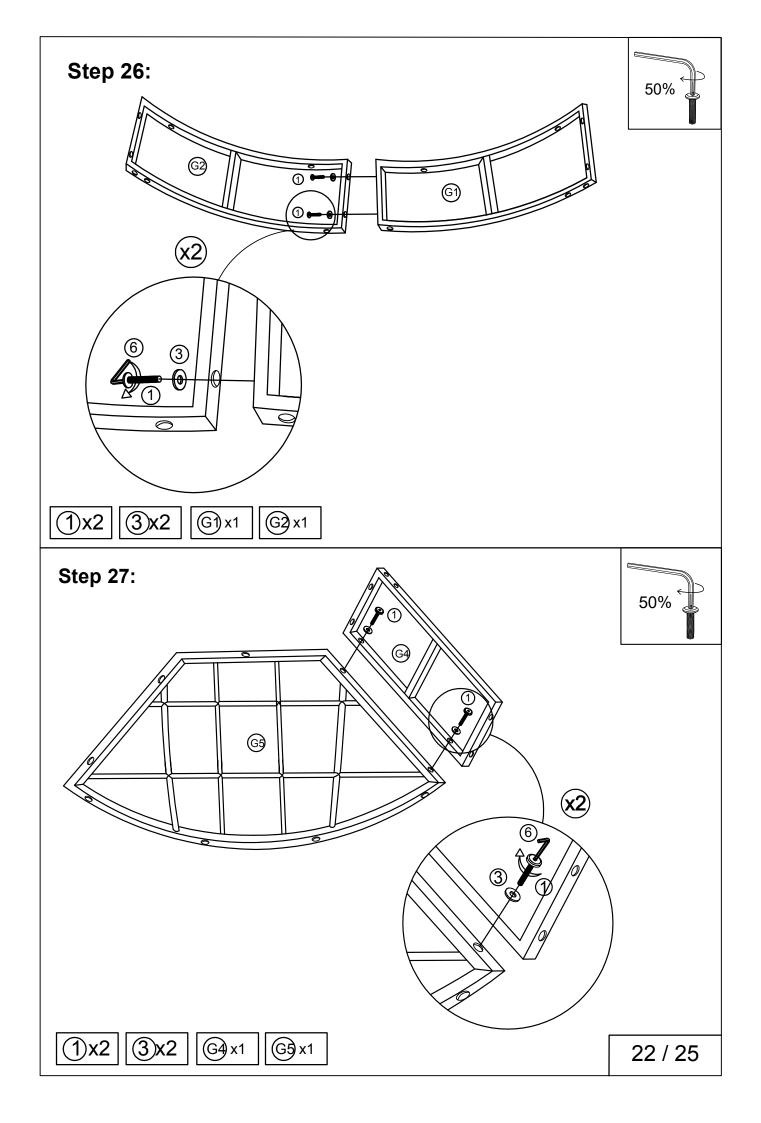

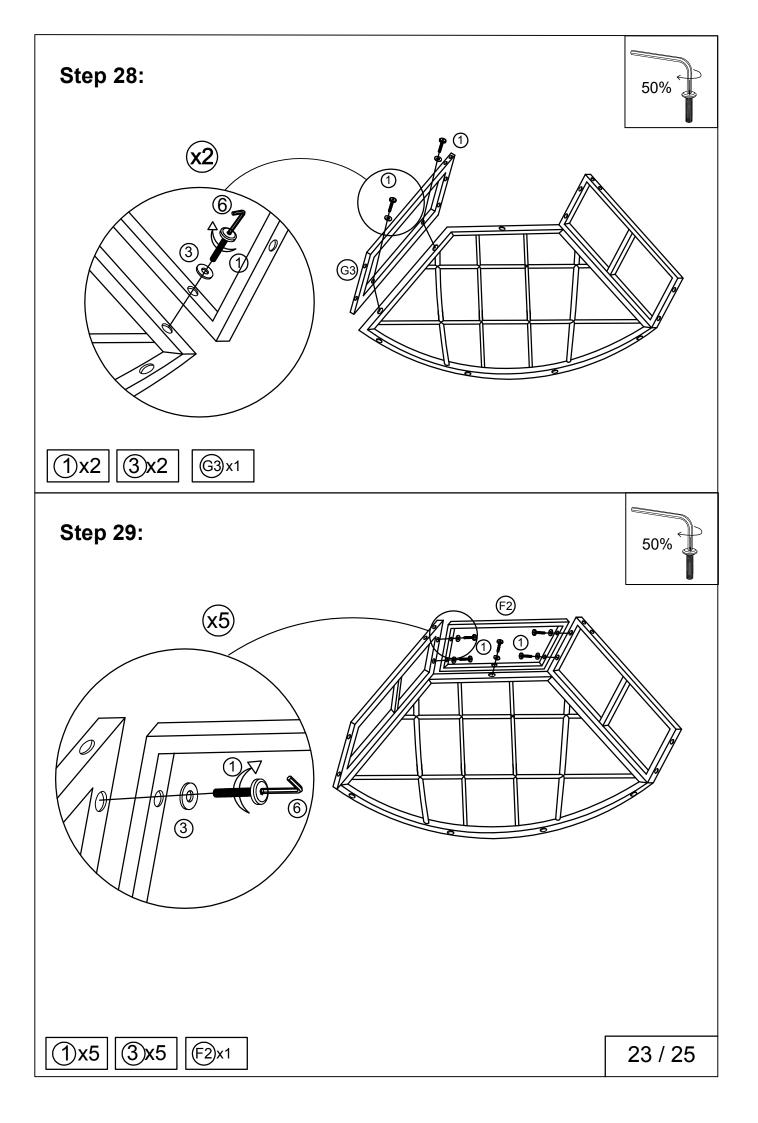


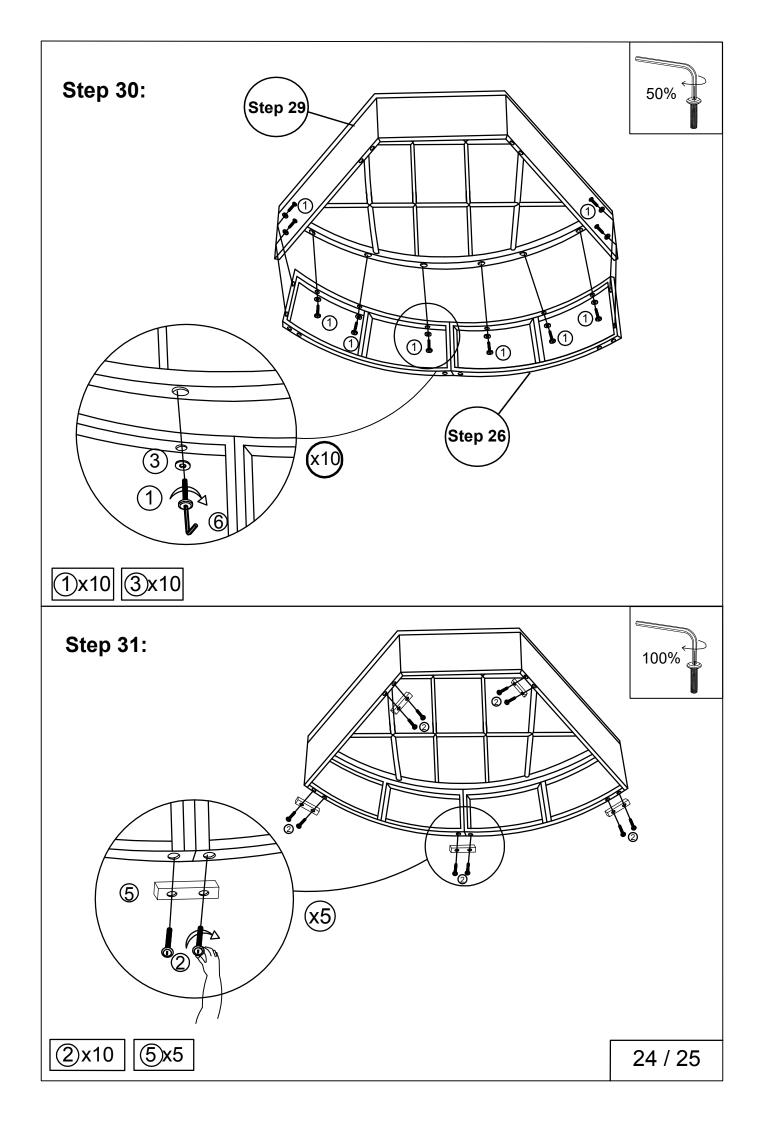

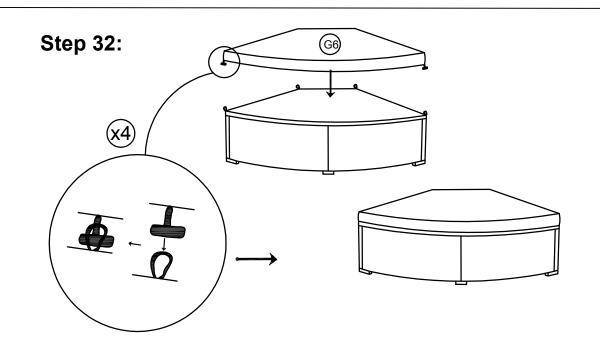



Step 33:

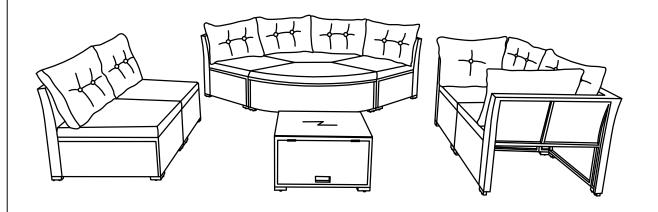

FINISH