


ASSEMBLY INSTRUCTION

SKU CODE : (WF304885 - WF304886)

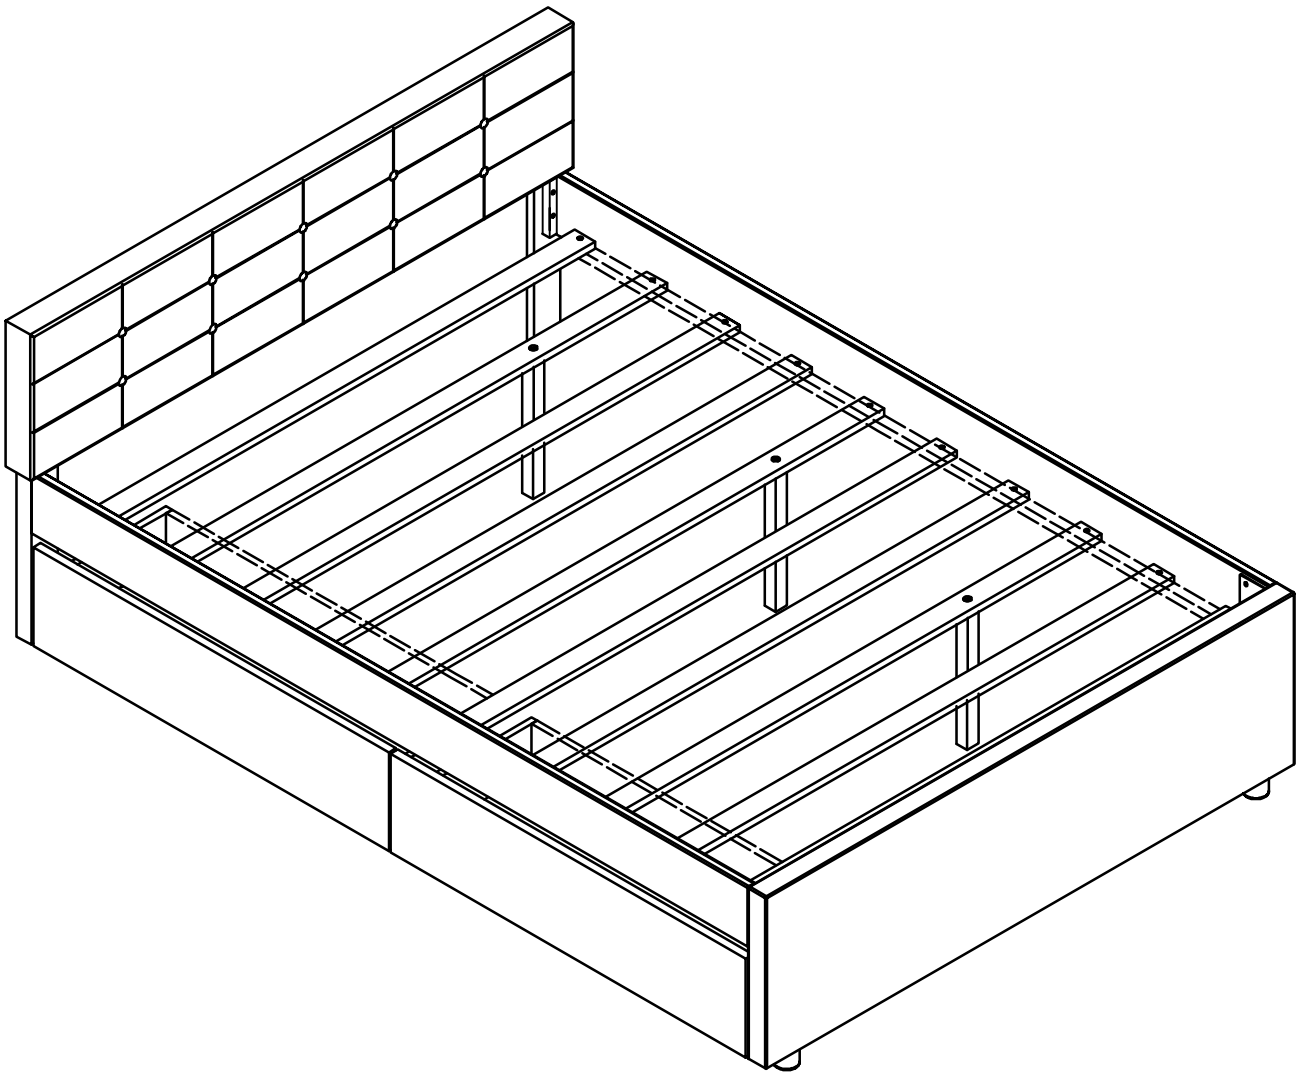


If you have any questions, please feel free to contact us.

Email: service@qualfurn.net






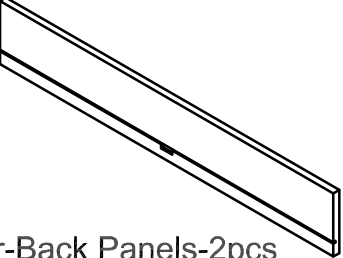
PLEASE DO NOT RETURN PRODUCT TO THE STORE

if you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.

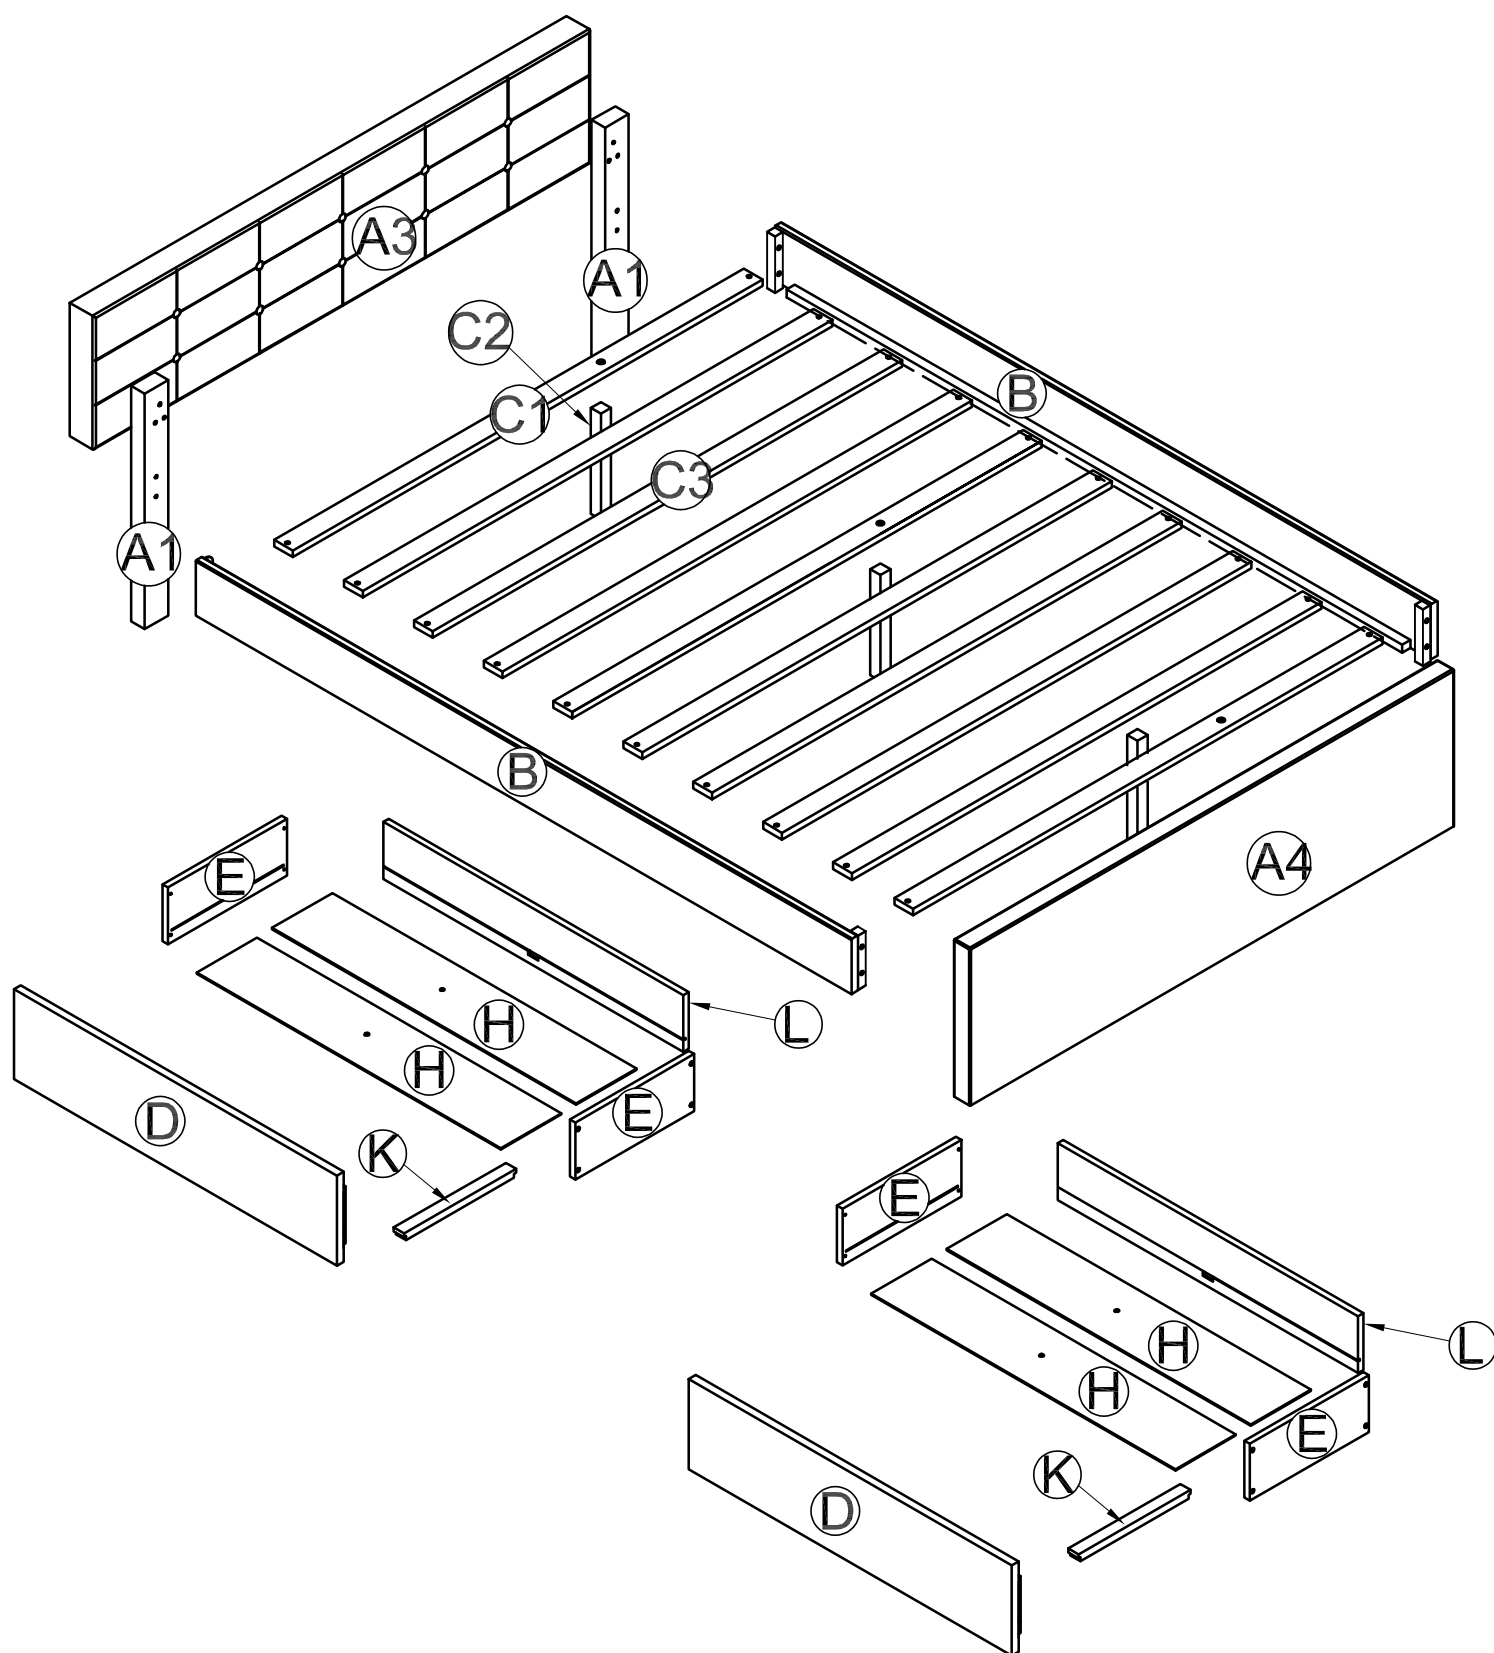


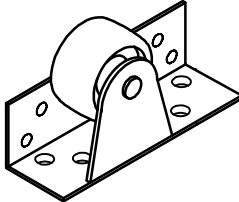



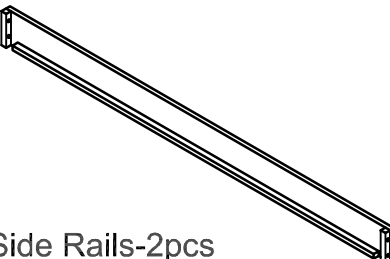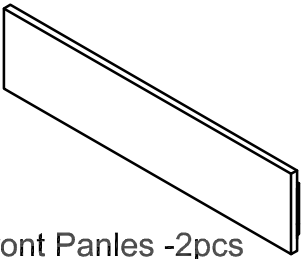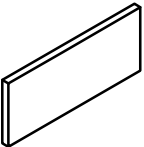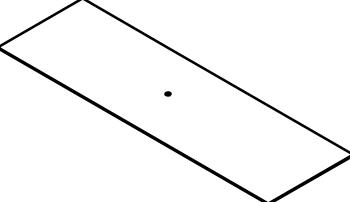

ASSEMBLY INSTRUCTION
TWIN BED WITH 2 DRAWERS
(WF304885 - WF304886)




Part List (WF304885)

<div>B</div>  <p>Side Rails-2pcs</p>	<div>D</div>  <p>Drawer-Front Panels -2pcs</p>	<div>E</div>  <p>Drawer-Side Panels -4pcs</p>
<div>H</div>  <p>Drawer-Bottom Panels-4pcs</p>	<div>K</div>  <p>Drawer-Support Bottom-2pcs</p>	<div>L</div>  <p>Drawer-Back Panels-2pcs</p>

Hardware List (WF304885)

	<div>2</div>  <p>Ø1/4" x 40 mm Hex-Head bolts 6pcs</p>	<div>3</div>  <p>Ø1/4" x 25 mm Hex-Head bolts 3 pcs</p>
<div>4</div>  <p>M4 x 30 mm Wood Screws 36pcs</p>	<div>5</div>  <p>Wheels 8pcs</p>	<div>6</div>  <p>M4 x 10 mm Wood Screws 16pcs</p>
<div>7</div>  <p>Allen Key 1pc</p>	<div>8</div>  <p>M4 x 15 mm Wood Screws 8pcs</p>	<div>9</div>  <p>Plastic Drawer Stopper 4pcs</p>
<div>10</div>  <p>Ø1/4" x 50 mm Hex-Head bolts 8 pcs</p>		



Assembly Tools Required (Not Included)


Part List (WF304886)

A1




Leg(HB-Front)-2pcs

A3

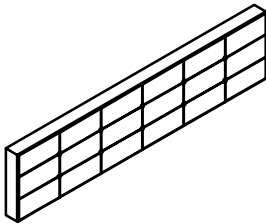


HB Frame-1pcs

A4

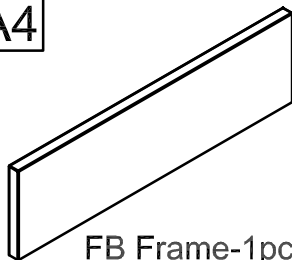


FB Frame-1pcs

C3

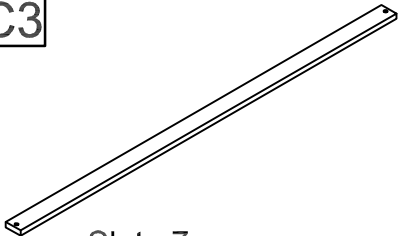

Slats-7pcs

C1

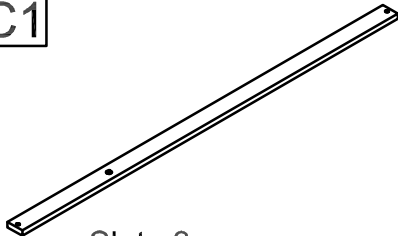

Slats-3pcs

C2




Support Slats-3pcs

1





Plastic Feet(Ø50x40)
2pcs



Assembly Tools Required (Not Included)

STEP 1:



Following below illustration Assembly Plastic Feet #1 With Footboard(A4)
to complete Footboard

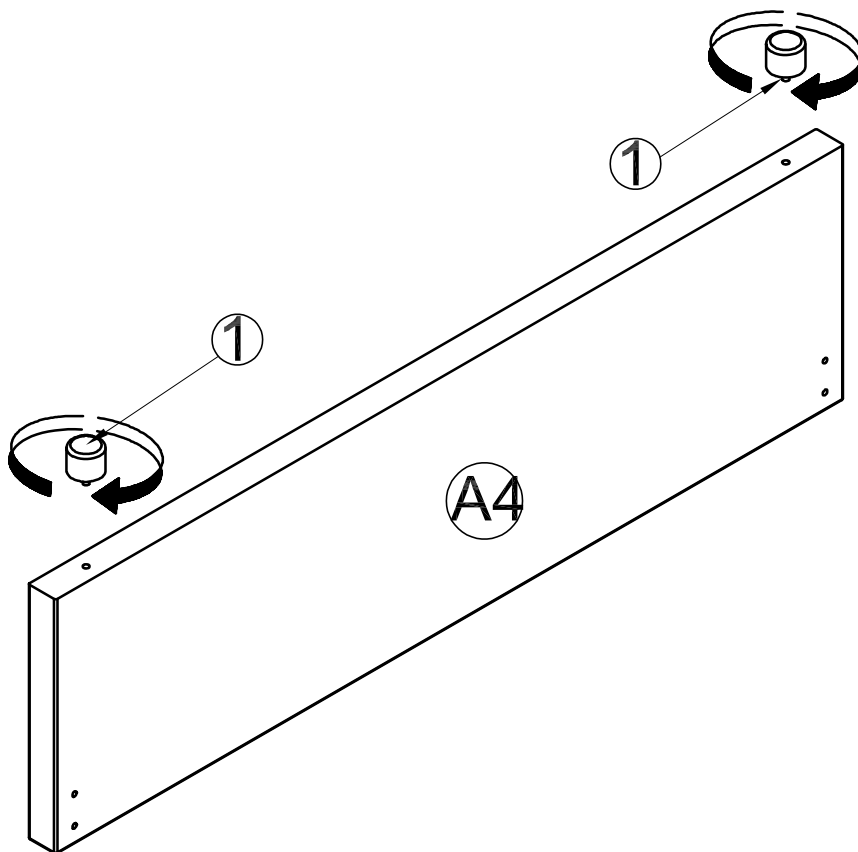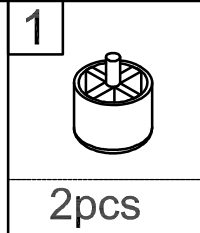

STEP 2:


Following below illustration:

-Using hardware #8 to connect Legs(A1&A2) With Headboard Frame(A3)
to complete Headboard

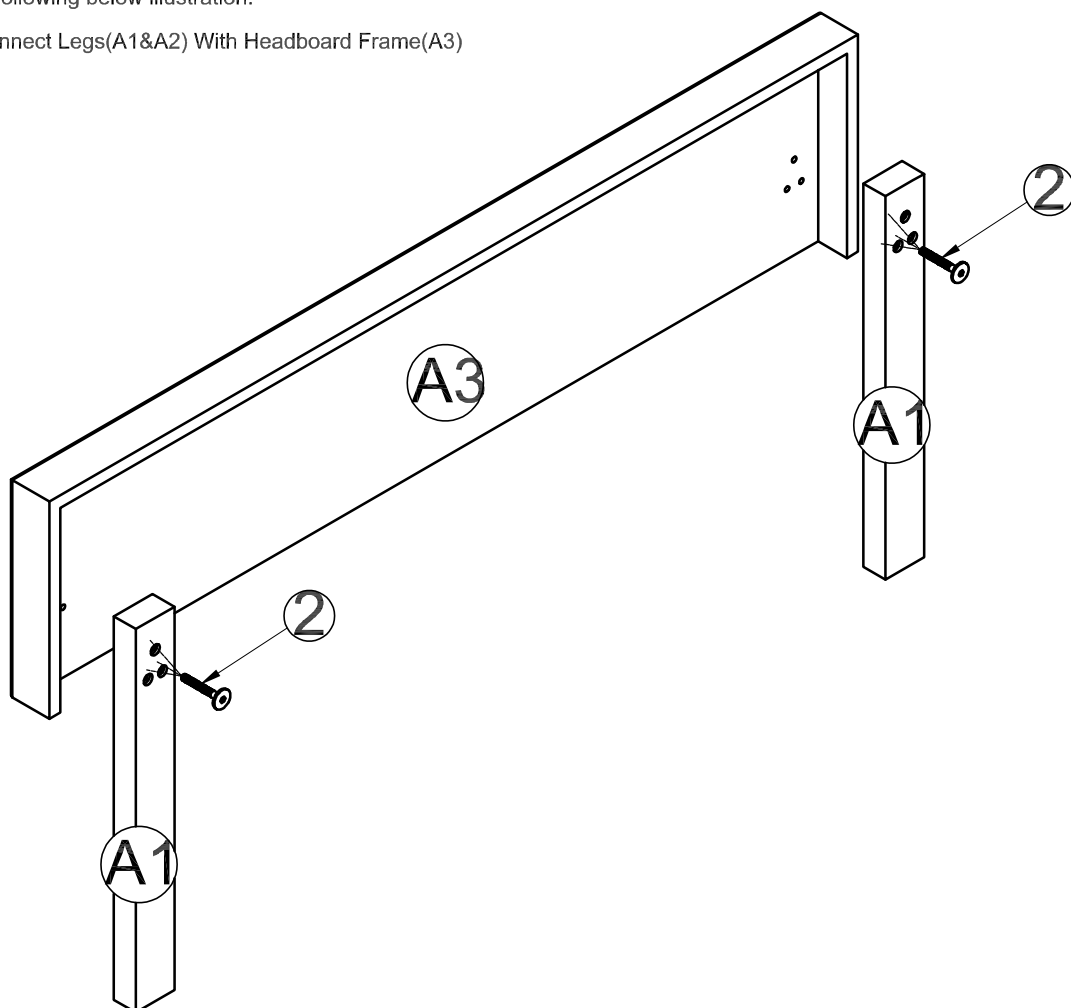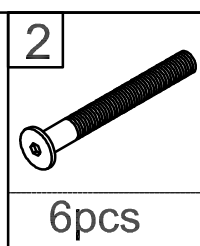

STEP 2: Following below illustration Using hardware ,#3 to Assembly Headboard (Completed on step 2) and Footboard (Completed on step 1) with siderail B(x2) .Look at detail view for more detail

10

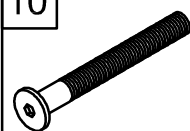

8pcs

8




M4 x 15 mm
Wood Screws 4pcs

9



Plastic Drawer
Stopper
4pcs

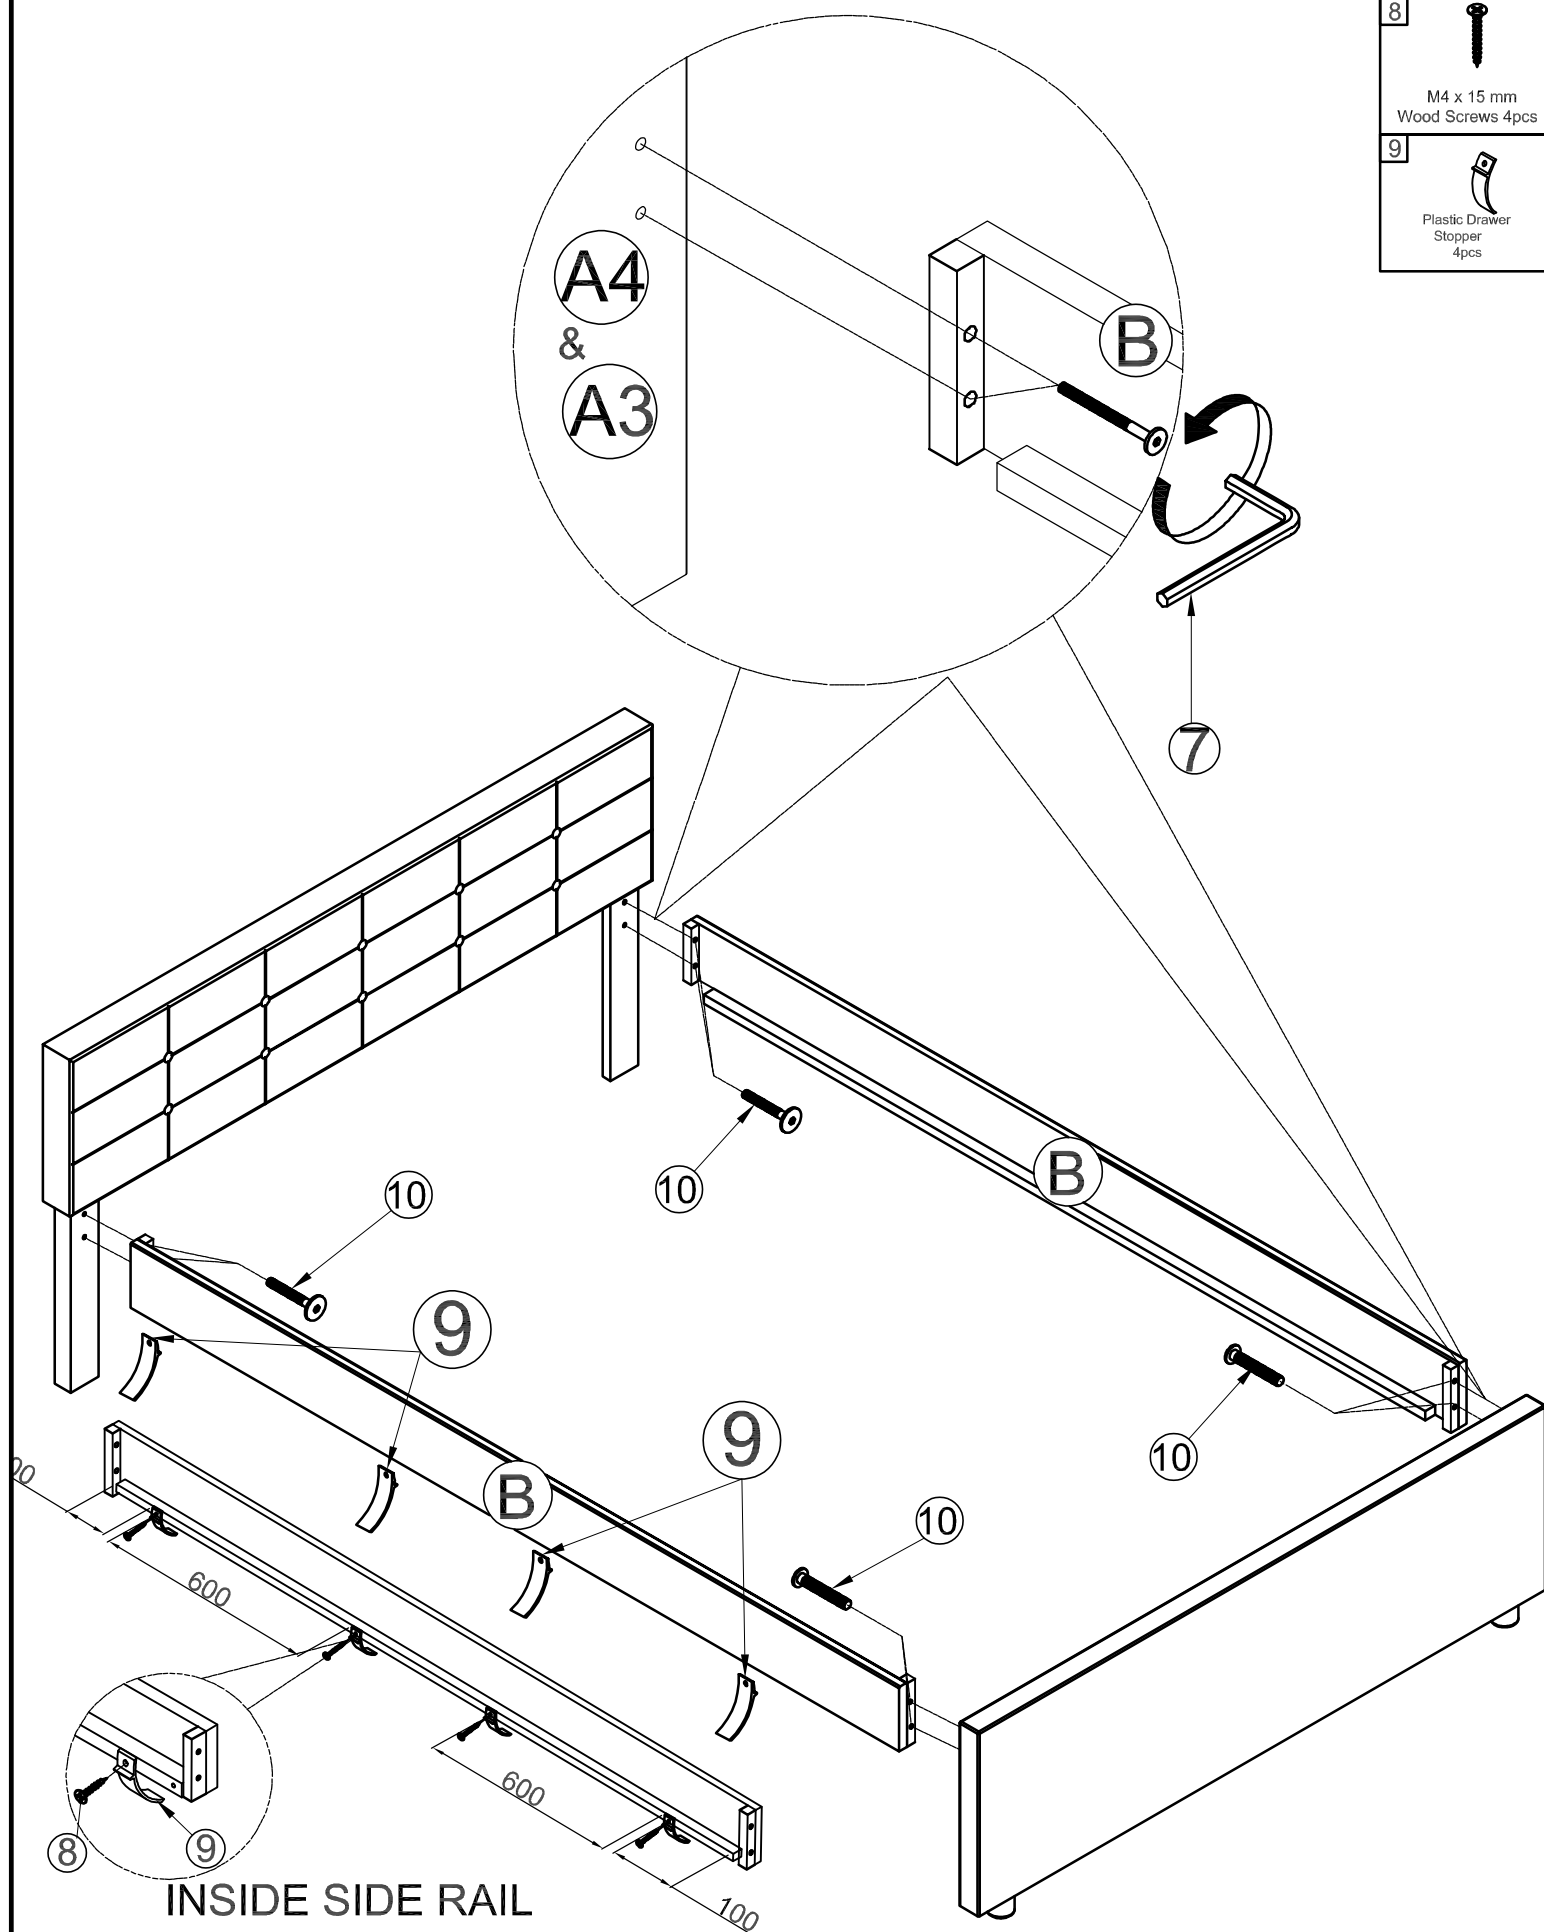


06/10


STEP 3: if you bought TWIN Bed please skip this page and move to Next Page :

Following below illustration Using hardward #2 to Assembly Slats C1(x3) with Support Slats C2(x3) .Look at detail view for more detail

3

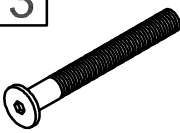

3pcs

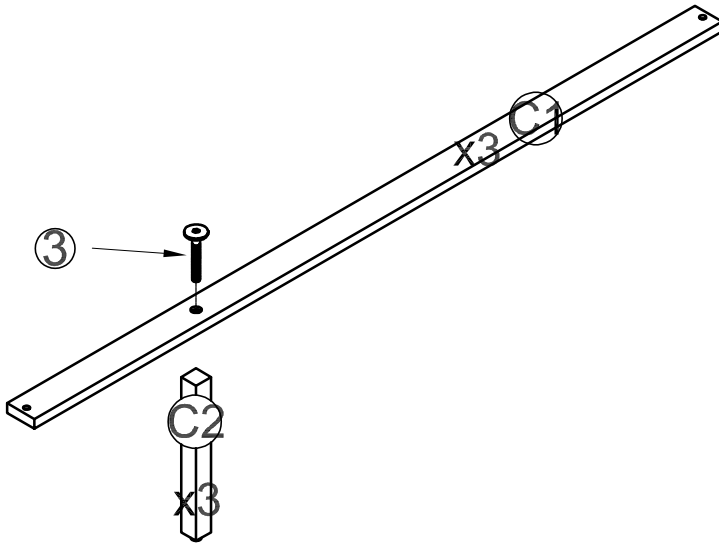

STEP 3: Following below illustration:



-Screw 3 slats (Completed on step 4) and 7 slats C3 by using hardward #4.

-Look at detail view for more detail

4



20pcs

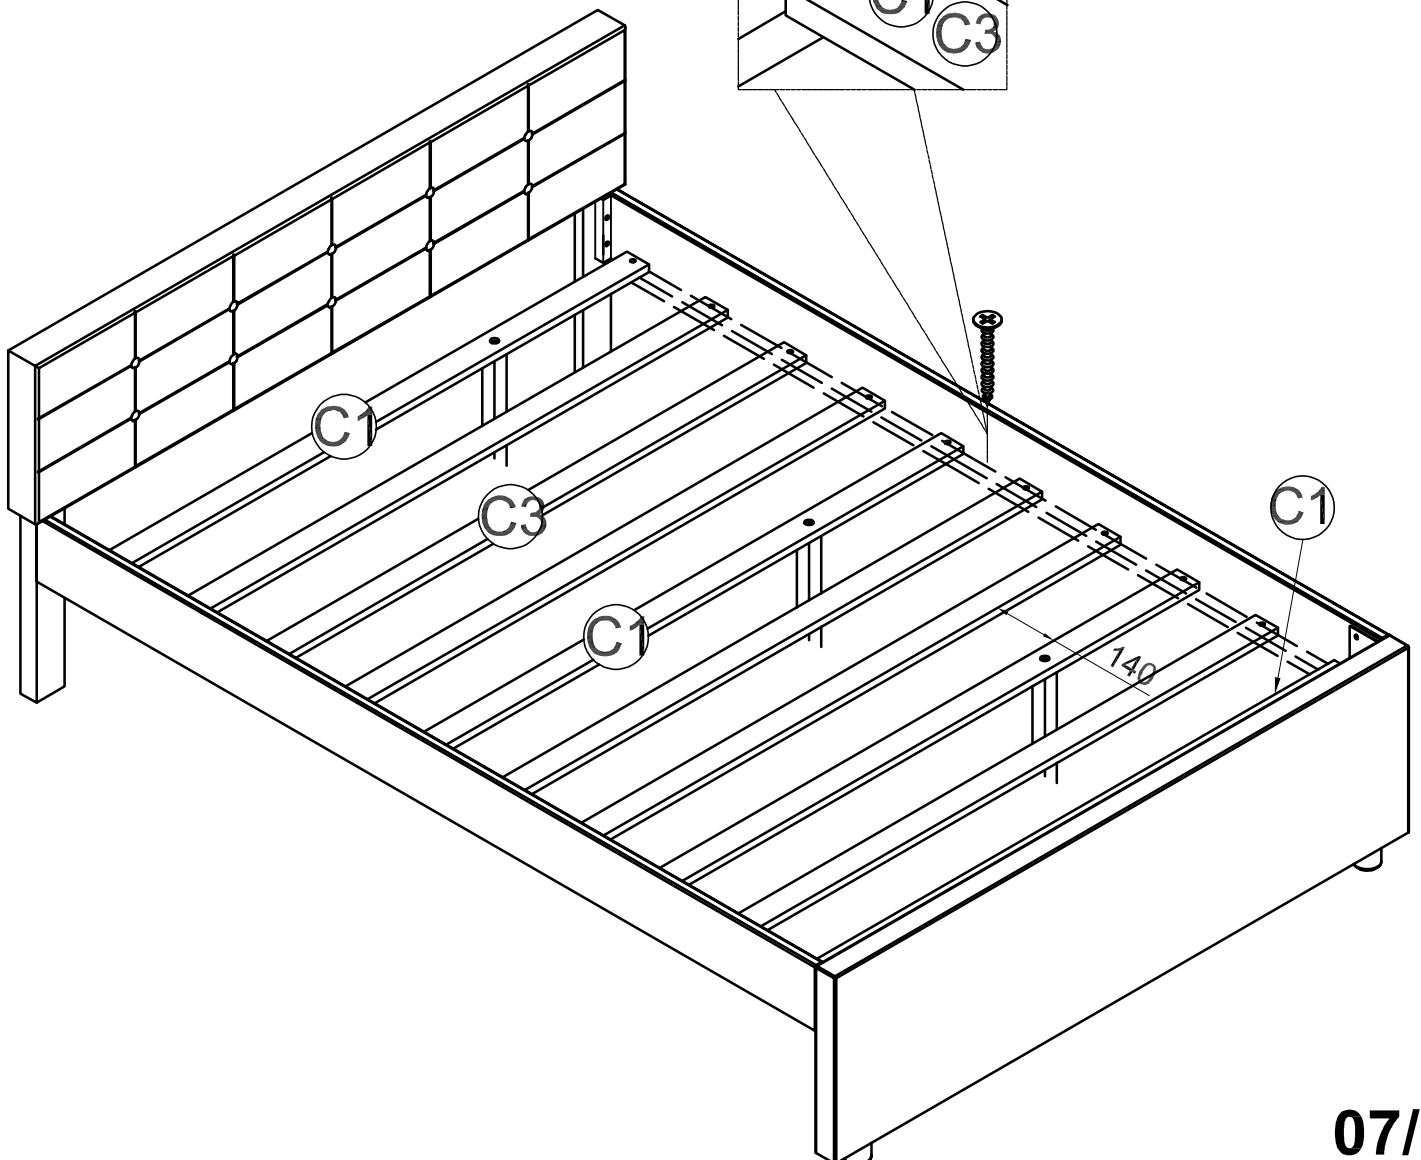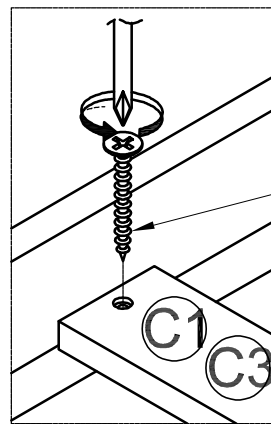


STEP 4-1: Following below illustration. Assembly Drawers (x2)


4




8pcs

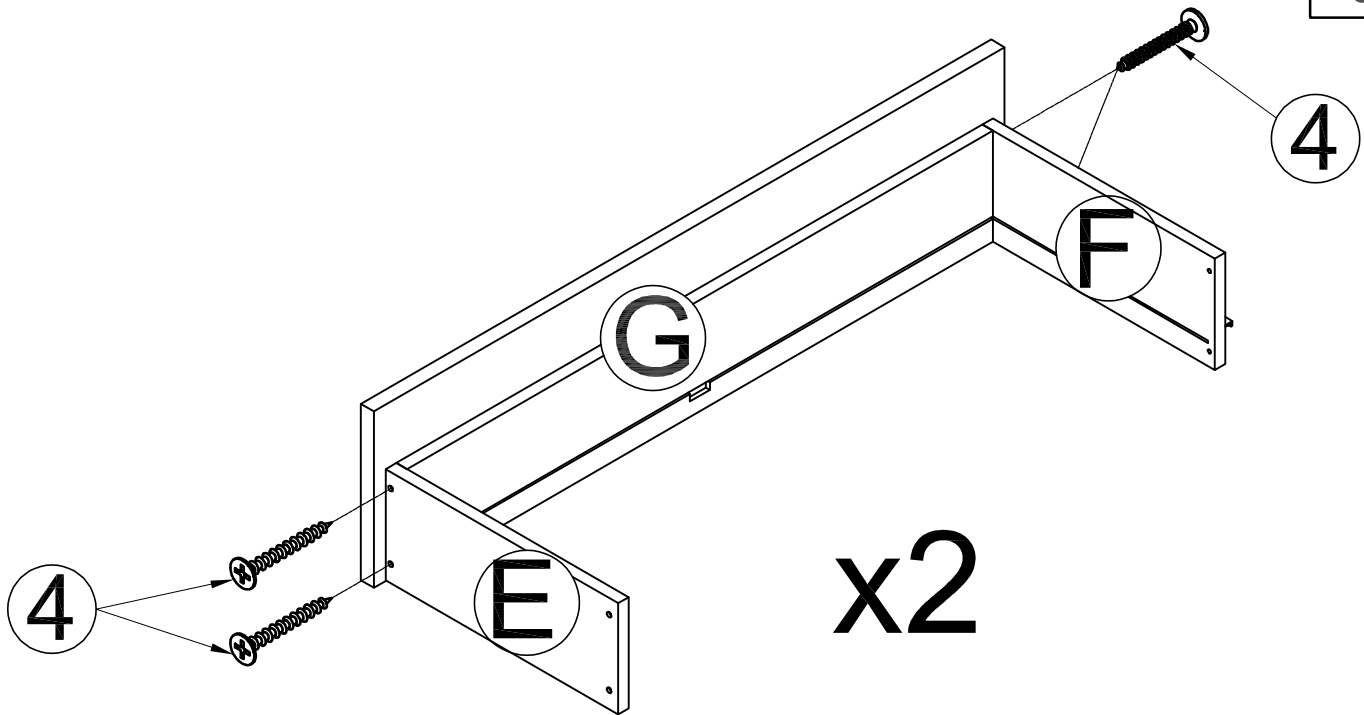

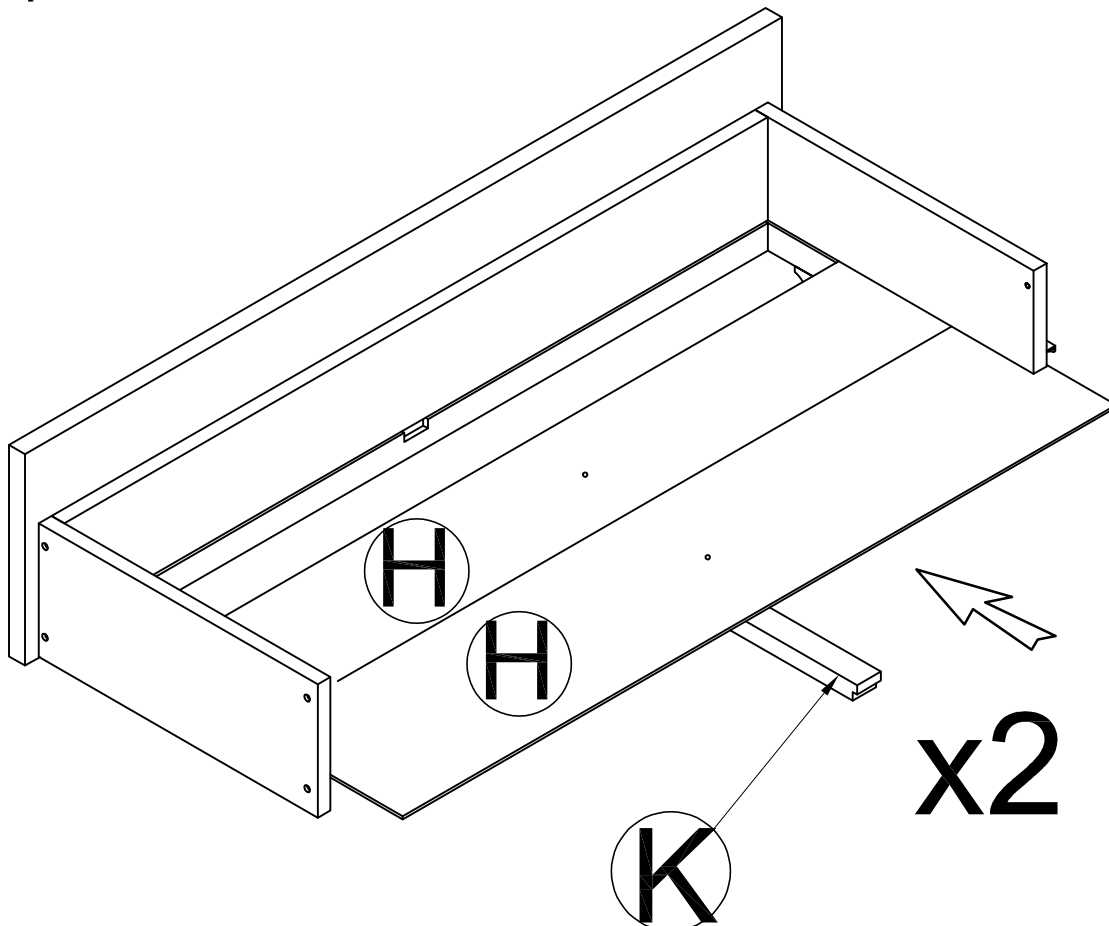



STEP 4-2:

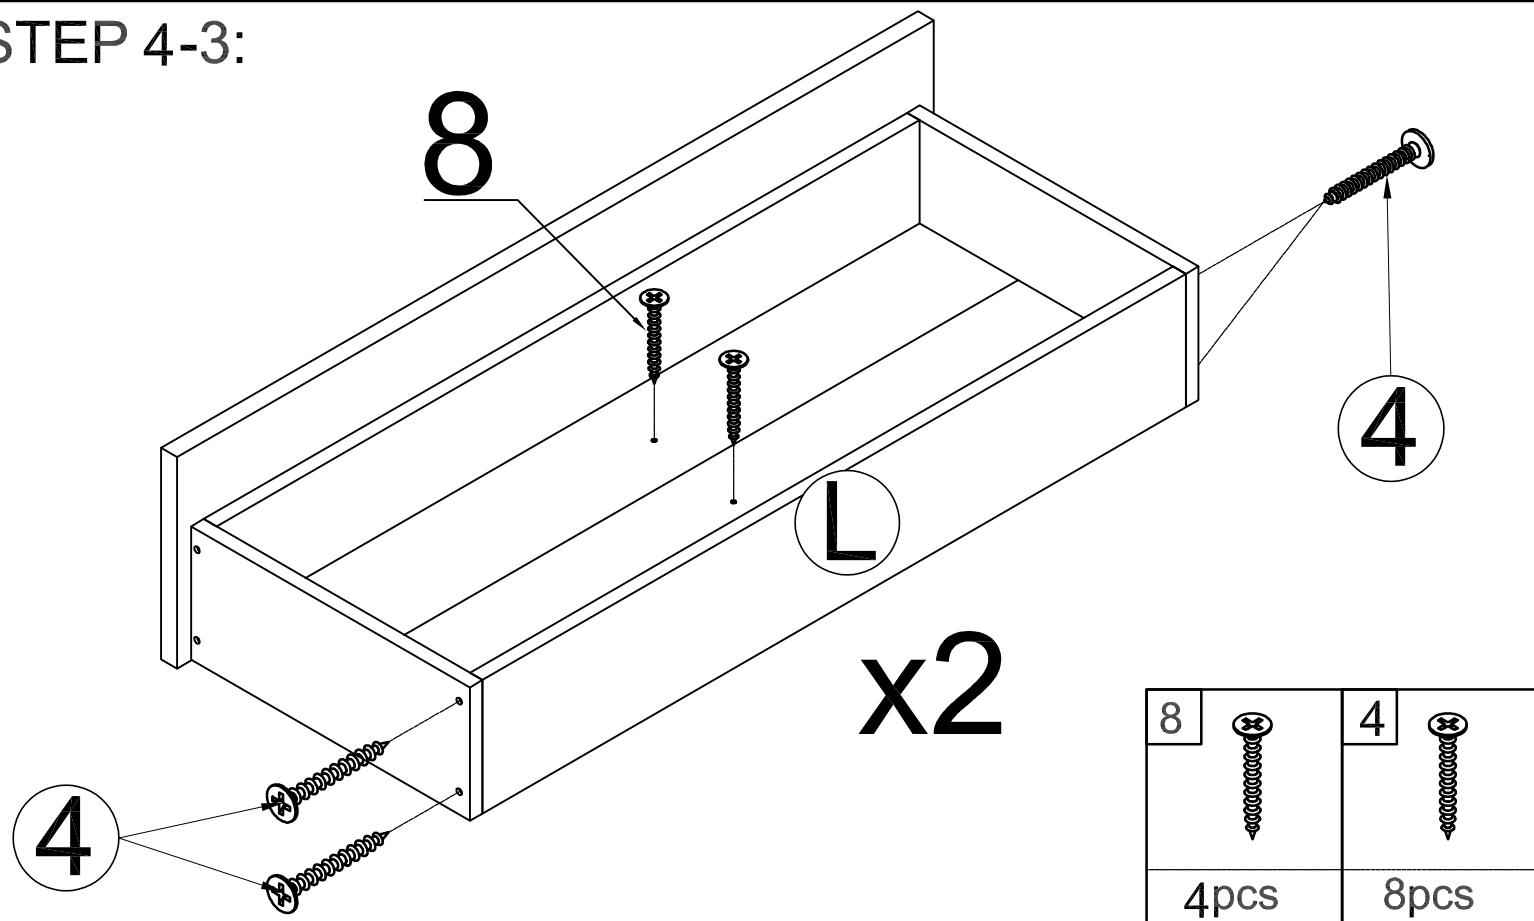


STEP 4-3:



8		4	
4pcs		8pcs	

6		5	
16pcs		8pcs	

STEP 4-4:

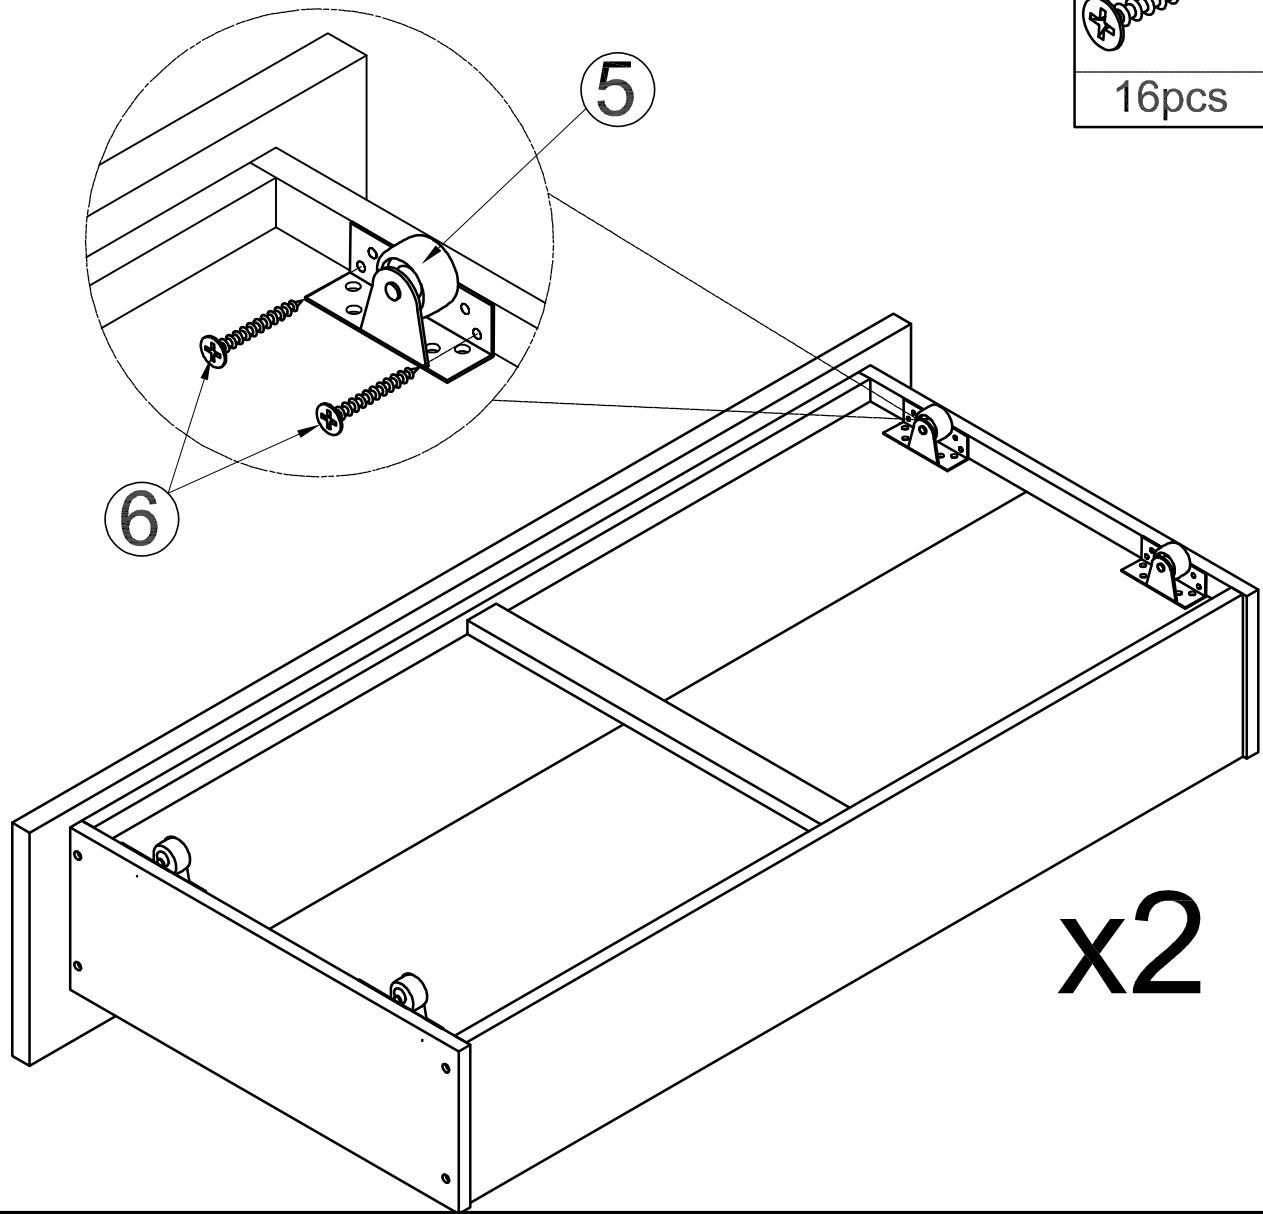

STEP 5: CONGRARULATION. YOU HAVE COMPLETED THE BED. just one more step to push the Under Drawer into it position

ILLUSTRATION FOR FULL BED

