




ASSEMBLY INSTRUCTION MODEL#2260-PN

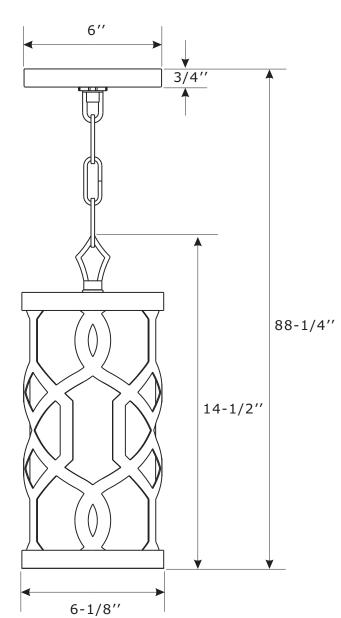



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate






You will need 1-Medium Base Bulb 40 Watts Recommended 60 Watts Max. USE LED BULBS FOR EXTENDED USE This fixture is Dry rated

How to install

- Slide the check ring along the wire and over the nipple located at the top of the metal frame, then secure it with the loop.
- 2. Determine the preferred hanging height and adjust the chain to the length required.
- 3. Install the fixture onto the outlet box.
- 4. Install the bulbs(not included) into the socket.

FABRIC SHADE

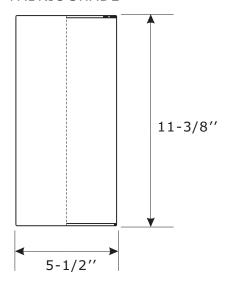





ASSEMBLY INSTRUCTION MODEL#2260-PN

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Canopy W6"xH3/4" #XRF2260PNCAN6IN
- C. (1)-Collar ring
- D. (1)-Collar loop #XRF2260PNLOOP
- E. (1)-Chain -72", 4mm thick #XRF2260PNCHA4.0MM
- F. (1)-Loop
- G. (1)-Check ring
- H. (1)-Metal frame
- I. (1)-Fabric shade W5-1/2"x11-3/8" #XRF2260SHA11.375IN

