





**DRYWALL, CONCRETE, STUD MOUNT**  
**CLOISON SÈCHE, BÉTON, MONTANT**  
**MONTAJE EN MURO SECO, CONCRETO, MONTANTE**

DRYWALL  
 CLOISON SÈCHE  
 MURO SECO

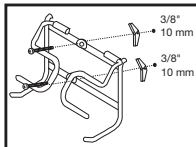


Drill 3/8" holes, use toggle bolts  
 Perçer des trous de 9 mm; utiliser  
 des boulons à ailettes.  
 Perfore agujeros de 9 mm, use  
 pernos de palanca

CONCRETE  
 BÉTON  
 CONCRETO

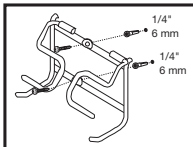


Drill 1/4" holes, use screws  
 and anchors  
 Perceez des trous de 6 mm; utiliser  
 des vis et des chevilles d'ancrage.  
 Perfore agujeros de 6 mm, use  
 tornillos y tarugos

STUD  
 MONTANTE  
 MONTANT

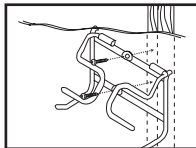

Use screws  
 Utiliser des vis  
 Use tornillos

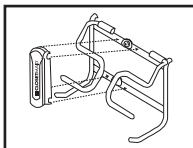

Attach plastic cover  
 Installer le revêtement de plastique  
 Instale la cubierta de plástico