


ASSEMBLY INSTRUCTIONS

DINING CHAIR

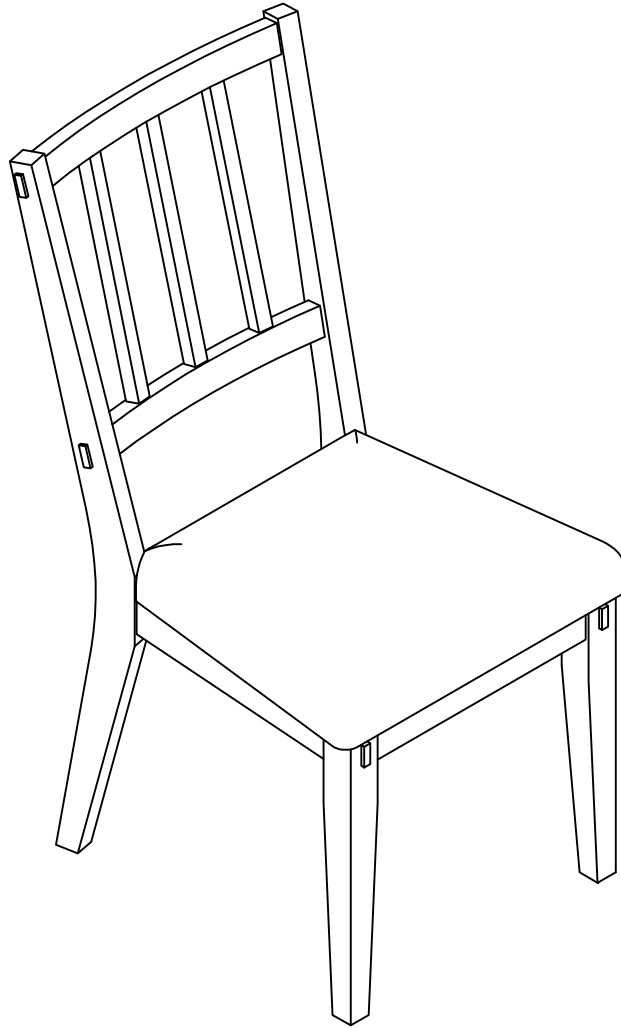


WF309348





If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

IMPORTANT NOTE :


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

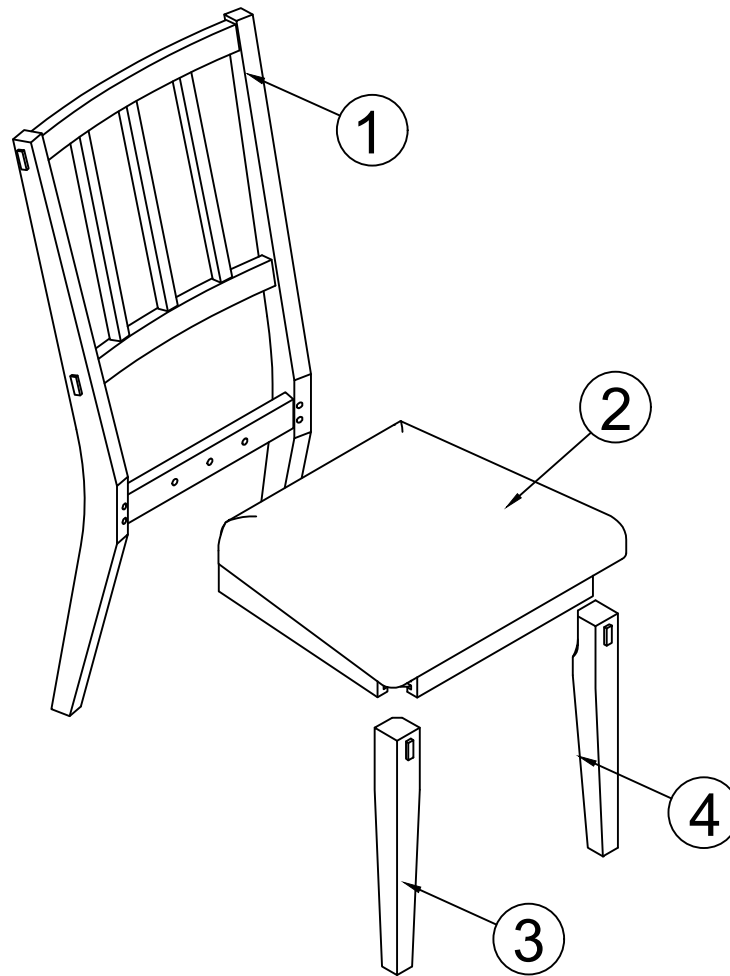


Hardware List For One Chair

(A)  Ø1/4" x 70mm	(B)  Ø1/4" x 50mm
BOLT (4PCS)	BOLT (4PCS)
(C)  Ø1/4" x 38mm	(D)  Ø1/4" x 11mm
BOLT (2PCS)	LOCK WASHER (10PCS)
(E)  Ø1/4" x 18mm	(F)  4MM
FLAT WASHER (10PCS)	ALLEN (1PC)


Part List For One Chair

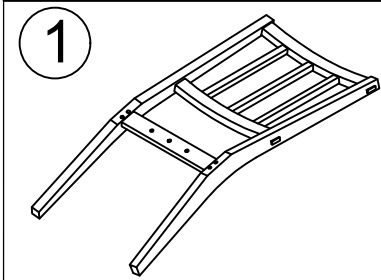


BACK FRAME (1PC)

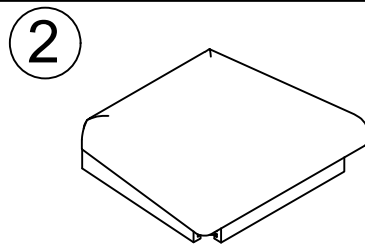

SEAT FRAME (1PC)

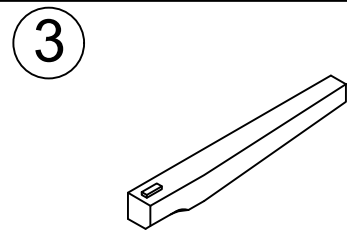


FRONT LEGS LEFT (1PC)

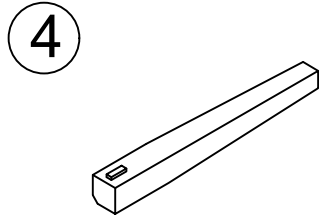

FRONT LEGS RIGHT (1PC)

STEP 1:

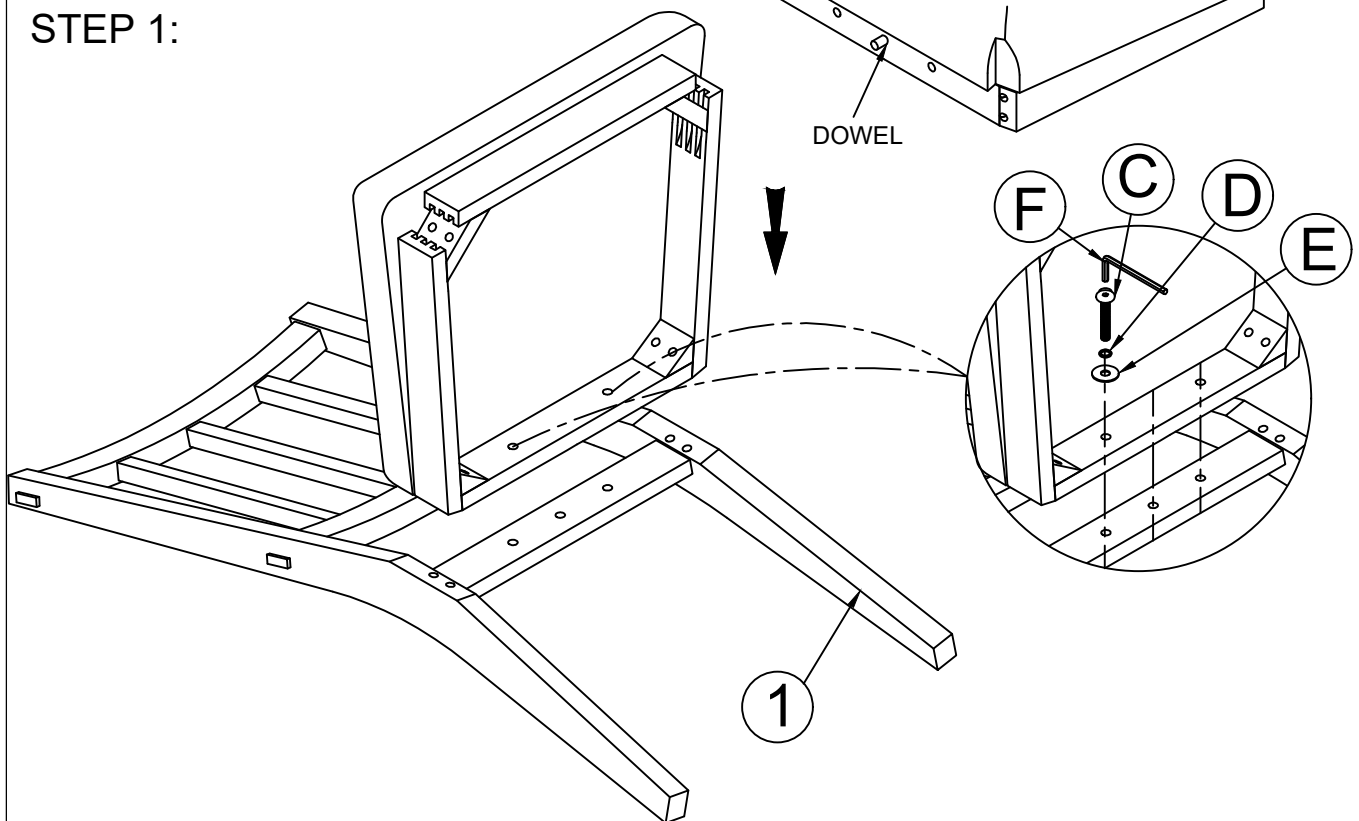

C

Ø1/4"x38mm



2pcs

D

Ø1/4"x11mm



2pcs

E


Ø1/4"x18mm



2pcs


F

4mm




1pc

STEP 2:

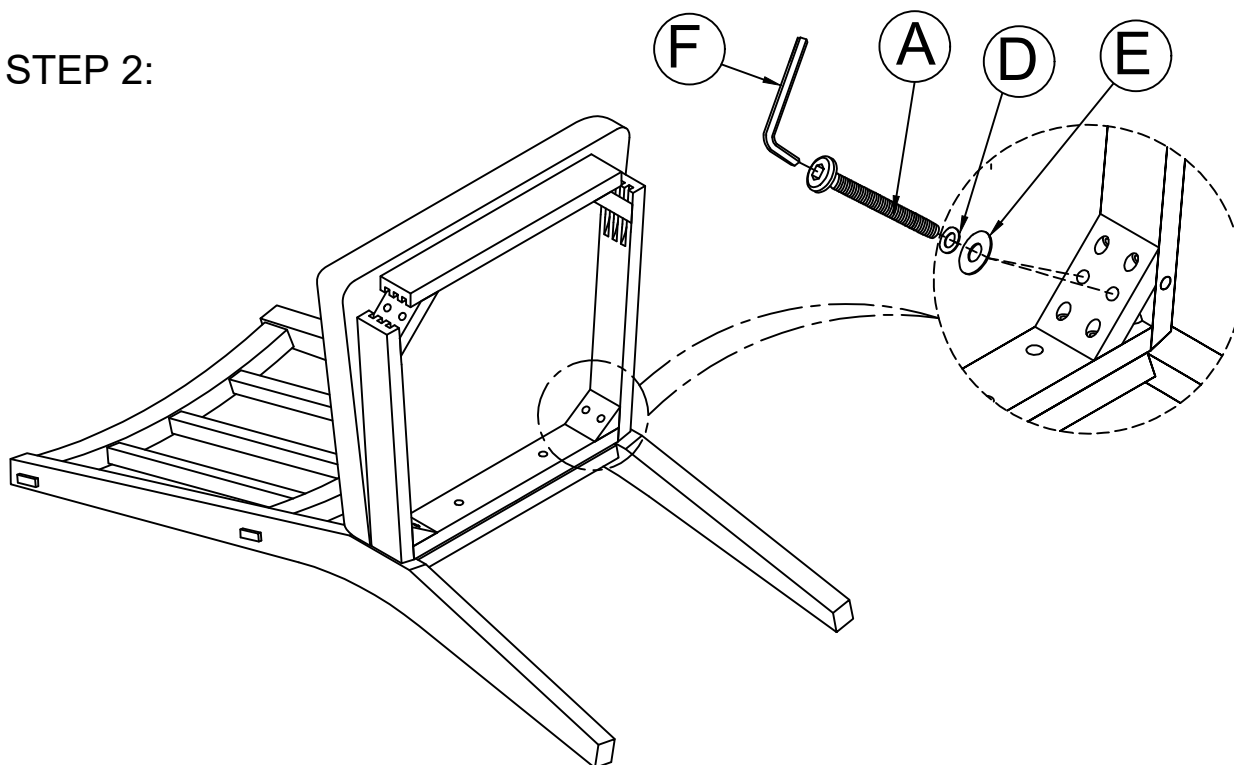

A	Ø1/4"x70mm		4pcs	D	Ø1/4"x11mm		4pcs
E	Ø1/4"x18mm		4pcs	F	4mm		1pc

STEP 3:

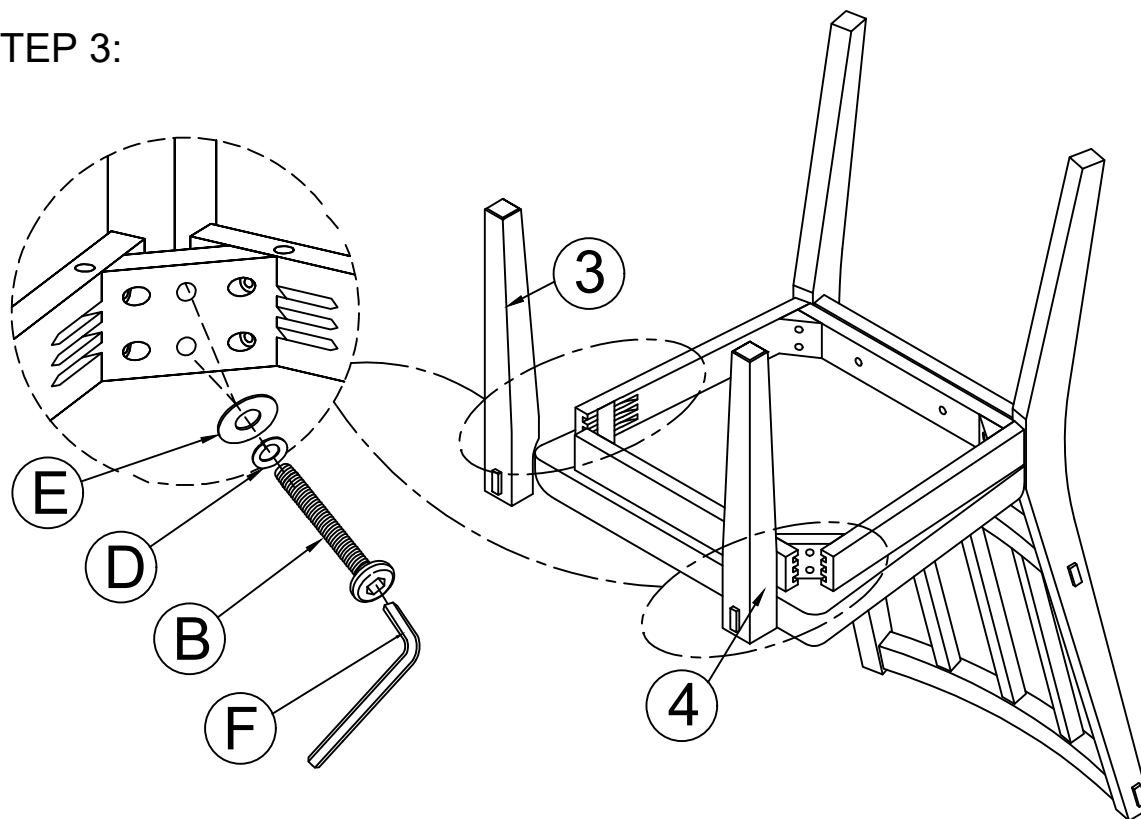

B	Ø1/4"x50mm		4pcs	D	Ø1/4"x11mm		4pcs
E	Ø1/4"x18mm		4pcs	F	4mm		1pc

STEP 4:

