
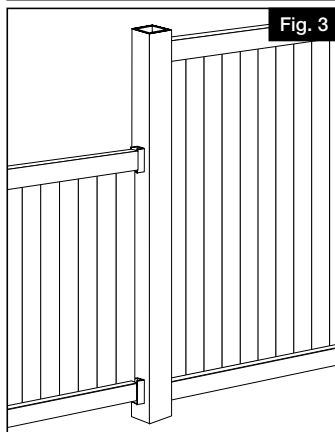
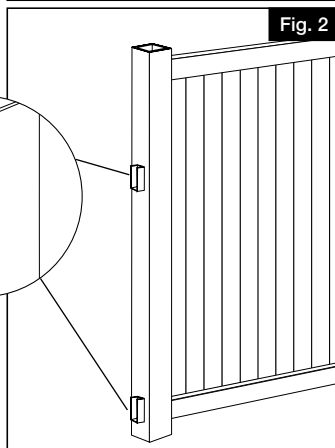


## Installation Overview

- 1** Determine where to locate the bracket for the shorter panel (Fig. 1).
- 2** Mark the screw holes and pre-drill with a 1/8 drill bit. (Fig. 2). Attach the bracket to the post with #10 x 3/4" Panhead screws (not included)
- 3** Insert the rail from the shorter panel into the bracket on the post of the taller panel (Fig. 3).

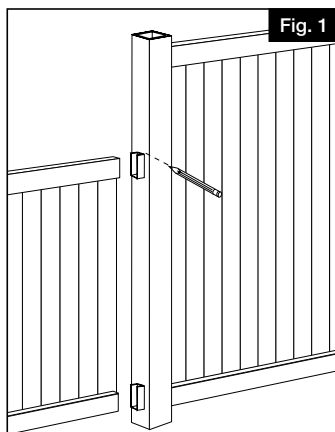

Transition bracket styles vary – illustrations shown for reference only.

To obtain and review a copy of the warranty please go to: [Freedomproduct.com/warranty](http://Freedomproduct.com/warranty). You can also contact 1-888-418-4400 or write to Freedom Outdoor Living, 7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.