




Dry-fit **Base** into vent opening.

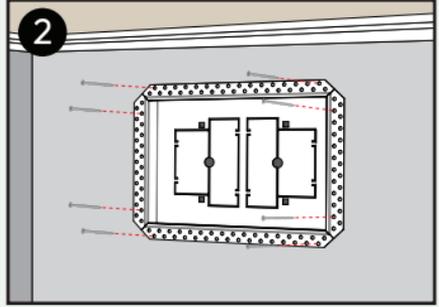


Ensure flange is flat to the wall.
Use screws to fasten as needed.

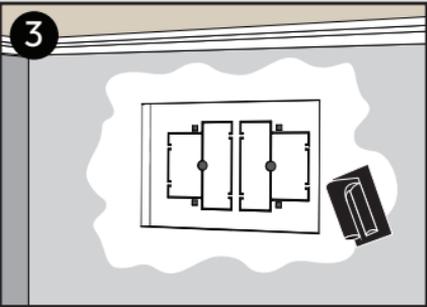


Use mud to cover flange surface.
Once dry, sand. Repeat as needed.

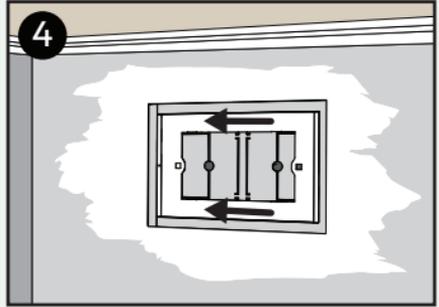


Insert **Body** and slide into
place until secured.

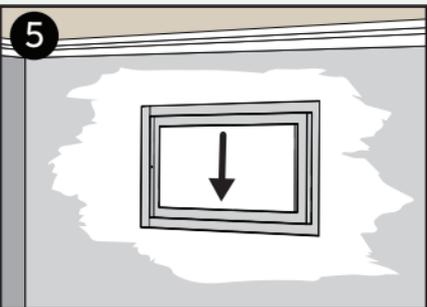


Insert **Tray** by sliding
perpendicular to **Body**

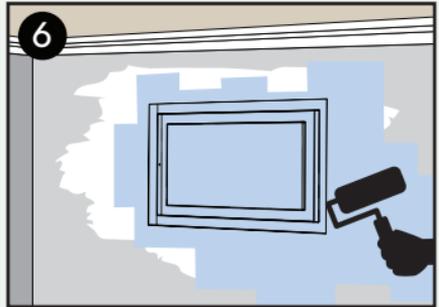

Paint to match surrounding surfaces.
*Can paint inner surfaces as well,
or use wallpaper.

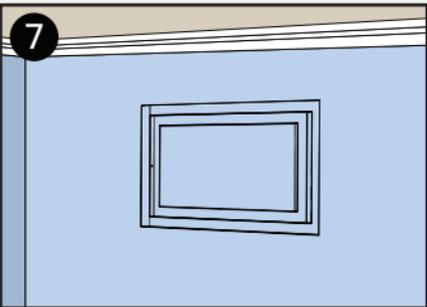

Enjoy!

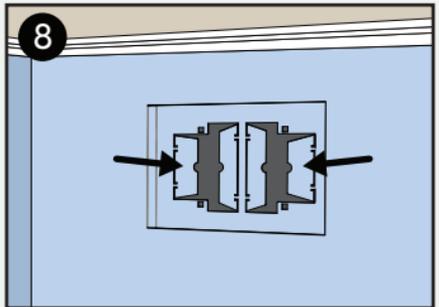

To adjust airflow, remove **Trays** and
bend dampers located in **Base**
to desired position.

Control Air Flow

Slide to remove Tray and adjust dampers open and closed. For optimal air flow, push flanges past 90°

Additional Support

support@ariavent.com / www.ariavent.com

