


OWNER'S MANUAL

35" MAKEUP VANITY

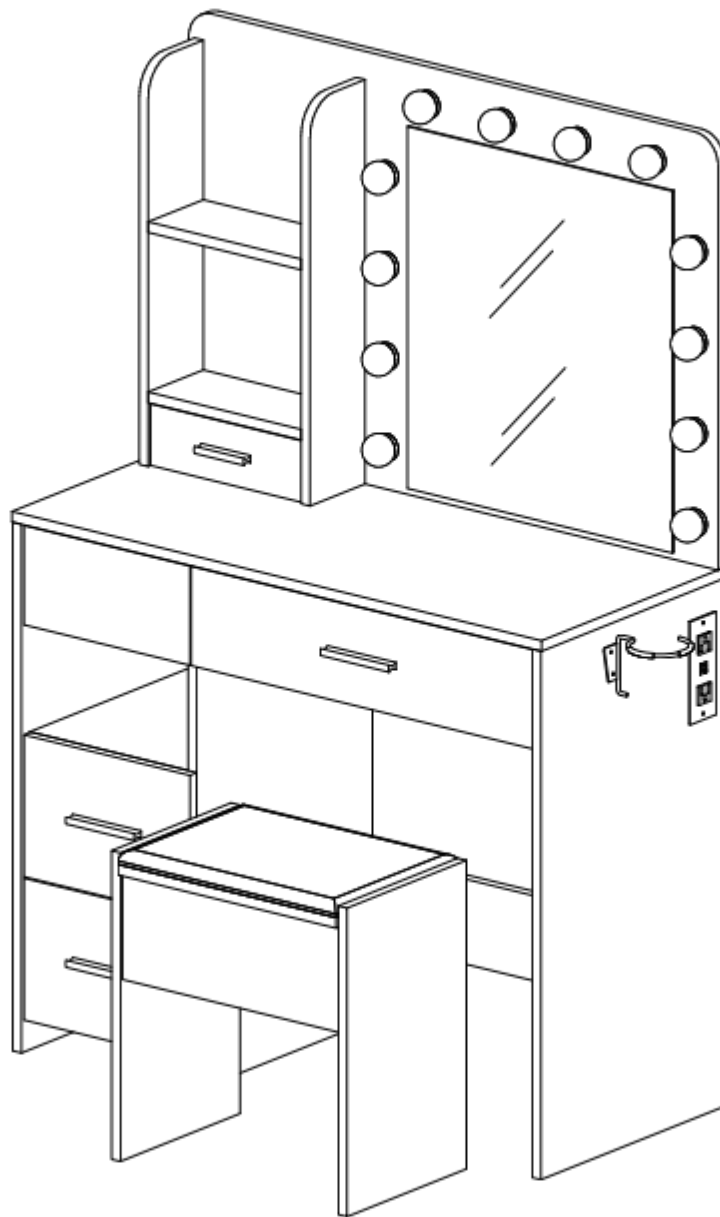

Contact Us

If you have any questions,
Please contact customer service.

Email: Service@cozfurn.com

Scan the QR code to watch the installation video.



SAFETY PRECAUTIONS

Before You Start

- ★ Please take the time to carefully read through the whole of these instructions before you commence.
 - ★ Unpack, inspect and check off all of the contents. If there are any defective or missing parts after unpacking, please cease assembly and get in contact with us immediately.
 - ★ Separate and count all your parts and hardware.
 - ★ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
-

WARNING

- ★ Do not stand or sit on the product.
 - ★ Children and pets should be kept from your assembly area if possible. Supervise children and pets if they are in the assembly area.
 - ★ Never touch with sharp objects or corrosive chemicals, which may damage the surface of the item.
 - ★ Do not expose product to direct sunlight or rain; and do not put it in a humid place.
-

CAUTION

- ★ This item is heavy. Please handle with care. Two or more people are required for this assembly.
- ★ It would be sensible to lay a sheet or blanket on the floor where you intend to work to avoid scratching this product and to protect your floor.
- ★ Assemble the product as close to its intended final position in the room as possible.
- ★ There may be some odour after unpacking the parcel, please put this item in a ventilated place for a few days and the odour will dissipate.
- ★ If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight.
- ★ Failure to do so may result in stripping the screw.

PRODUCT WARRANTY INSTRUCTION



Free Warranty Period:

The free warranty period starts from the product receipt date and lasts one year.



Coverage during the Free Warranty Period:

1. If any components of the purchased product are damaged due to non-human-induced reasons natural wear and tear excluded corresponding new parts will be replaced free of charge.

2. If the entire purchased product is damaged due to non-human-induced reasons natural wear and tear excluded and cannot be further used, corresponding parts or a brand-new product will be replaced free of charge.



Coverage after the Free Warranty Period:

After the warranty period expires, replacement components will be provided to customers at cost price for continued service.




Additional Services:

After purchasing the product, customers can consult our staff for any product-related inquiries.








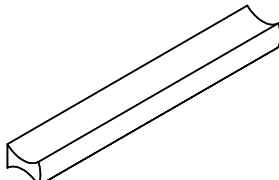
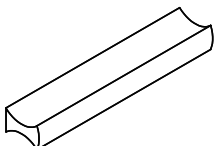


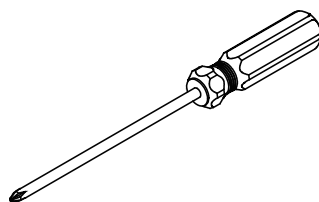
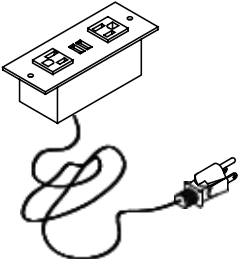

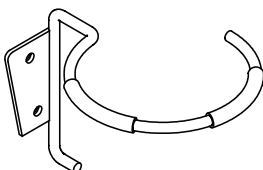


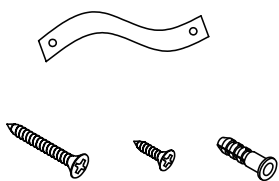


Contact Email : Service@cozfurn.com

ACCESSORIES DISPLAY

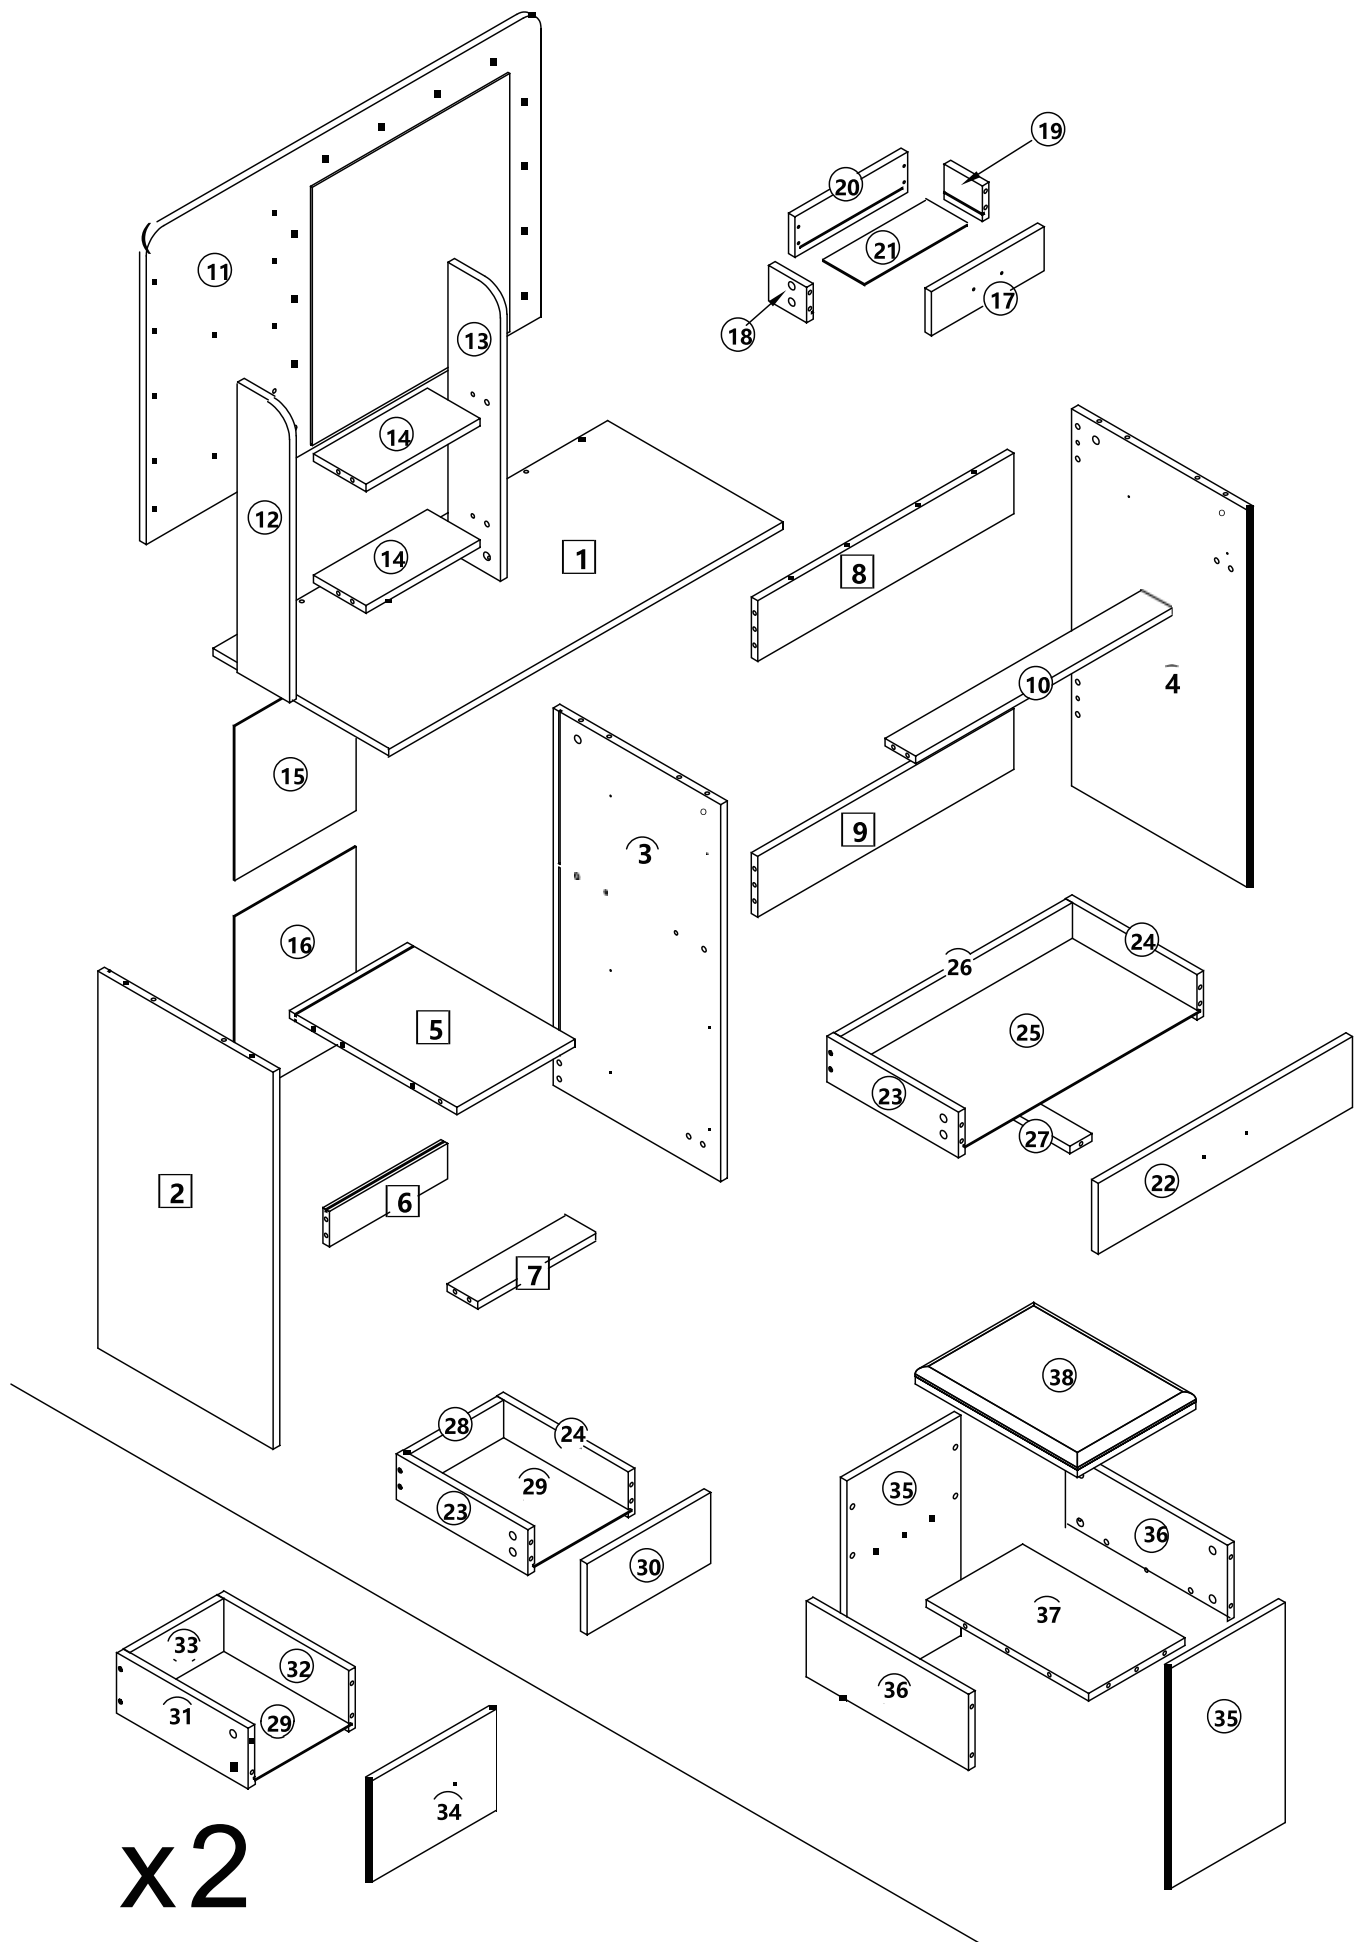


ACCESSORIES DISPLAY

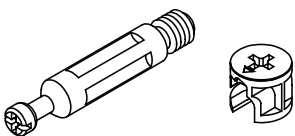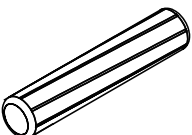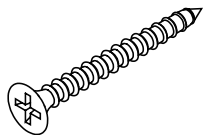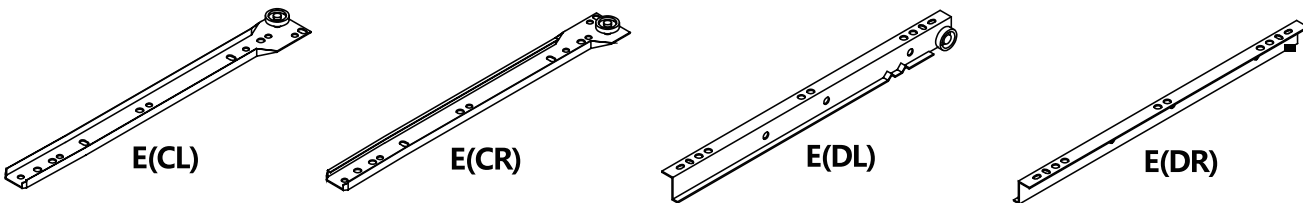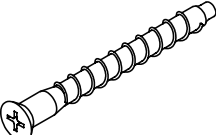 <p>A1 A2</p> <p>A x (79+8)sets</p>	 <p>8 x 40 MM</p> <p>B x (33+4)pcs</p>	 <p>3.5 x 14 MM</p> <p>C x (44+5)pcs</p>	 <p>3.5 x 35 MM</p> <p>D x (21+3)pcs</p>
 <p>E(CL) E(CR) E(DL) E(DR)</p> <p>300 MM</p> <p>E x 4sets</p>			
 <p>7 x 50 MM</p> <p>F x (8+1)pcs</p>	 <p>G x (8+1)pcs</p>	 <p>H x 3pcs</p>	 <p>J x 1pc</p>
 <p>K x (8+1)pcs</p>	 <p>L x (8+1)pcs</p>	 <p>M x 1pc</p>	 <p>N x 1set</p>
 <p>x 12</p>	 <p>R x 1pc</p>		
 <p>P x 1set</p>			
 <p>S x 79pcs</p>			 <p>Y x 2sets</p>


PRODUCT ASSEMBLY

Step 1 A1x24 Bx6 Cx16 E(CL)x4 E(CR)x4

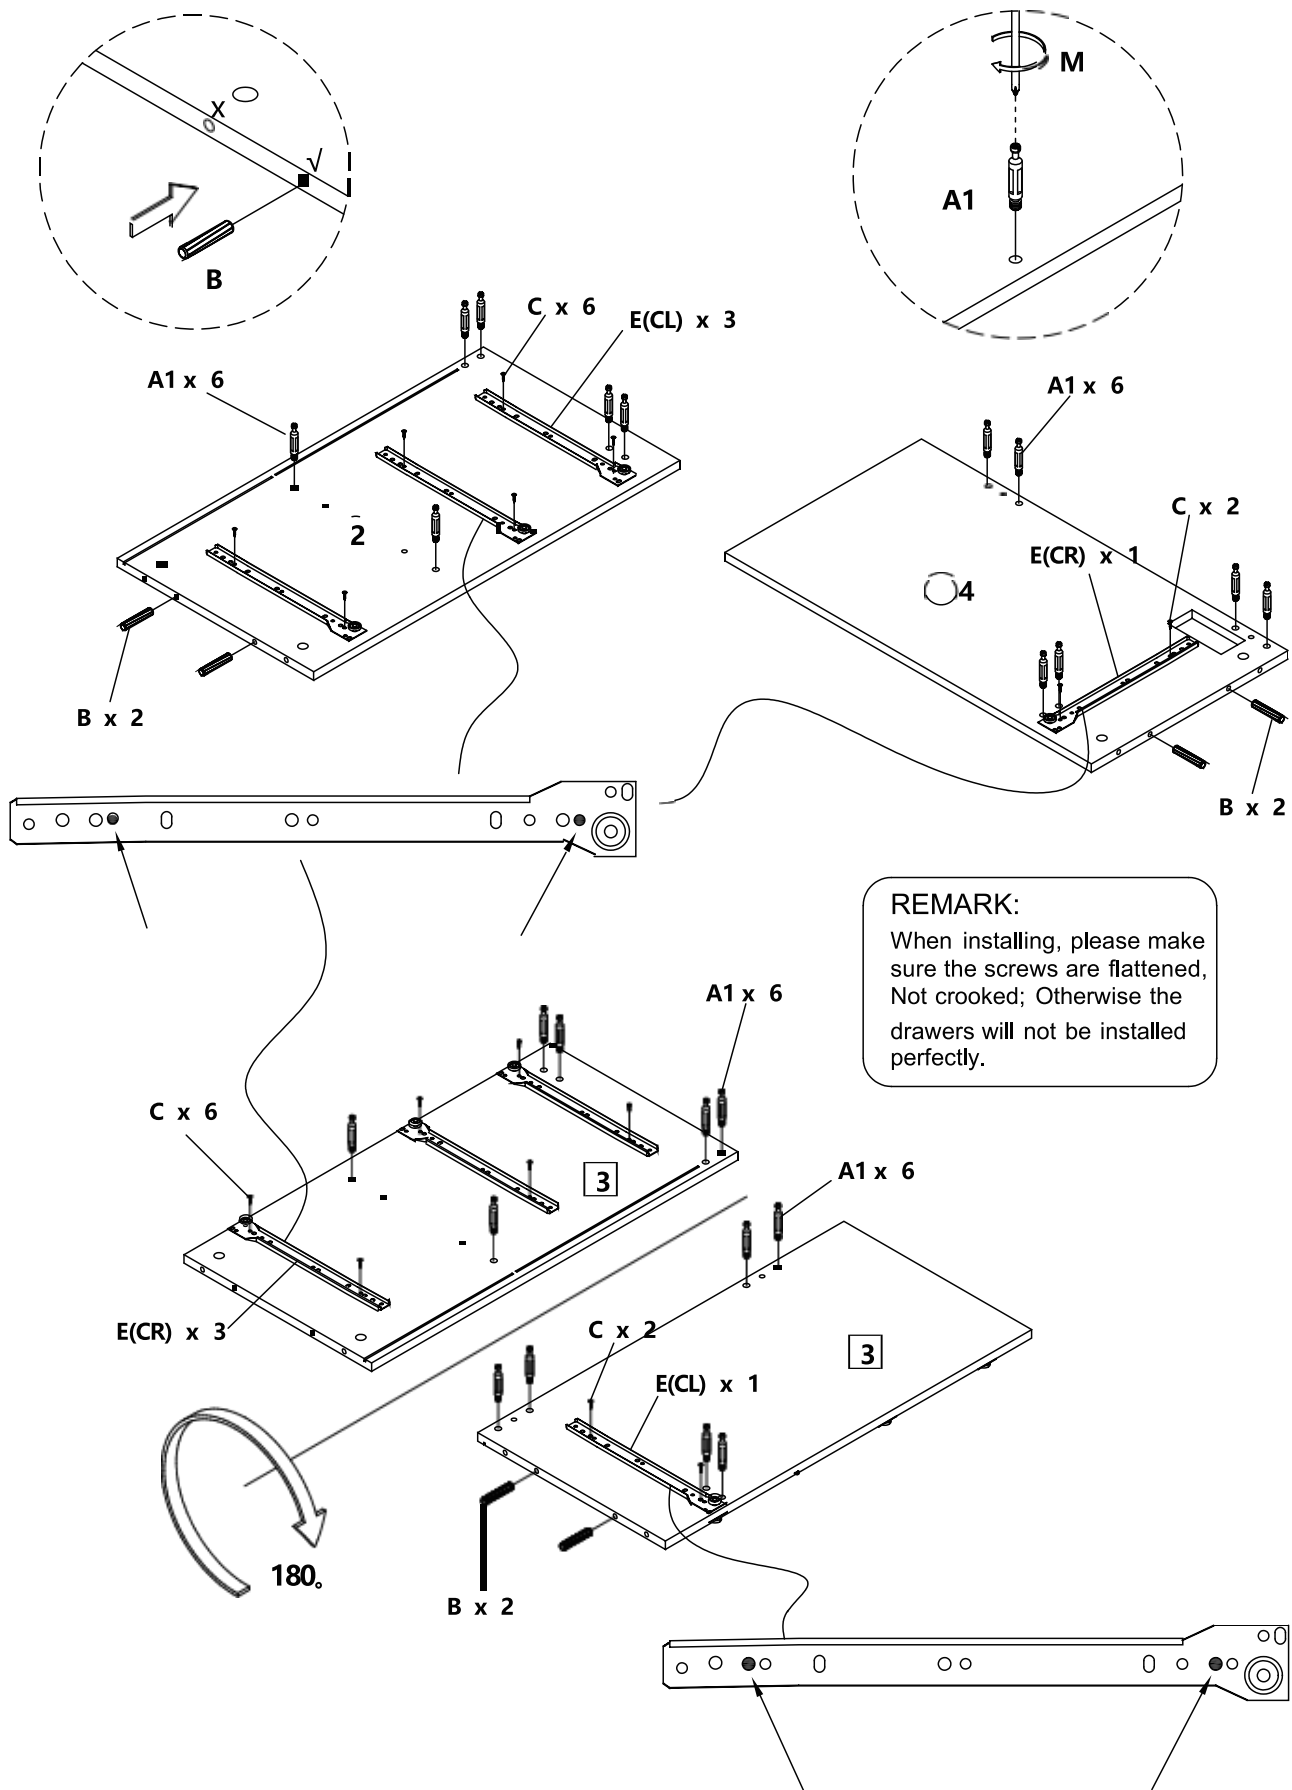


PRODUCT ASSEMBLY


Step 2 B x 10

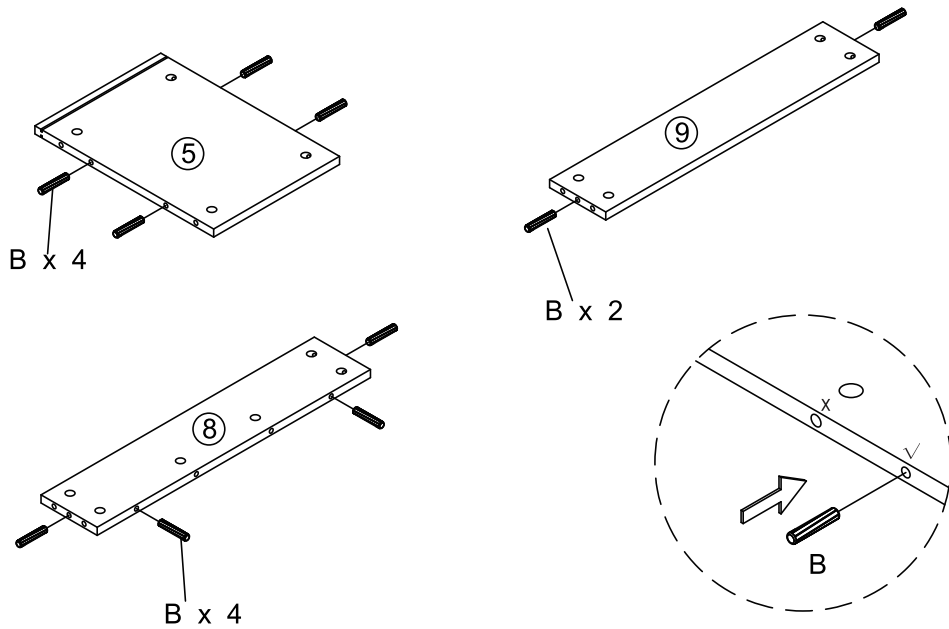

Step 3 A2 x 6

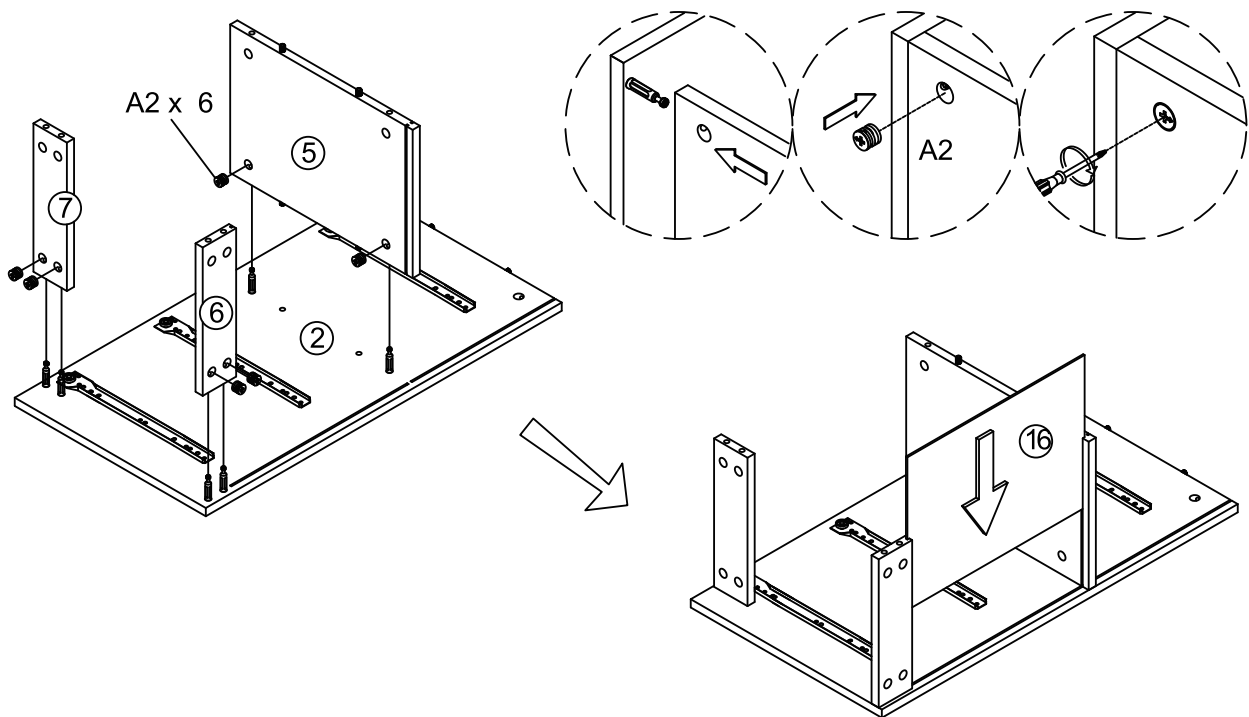


Step 4

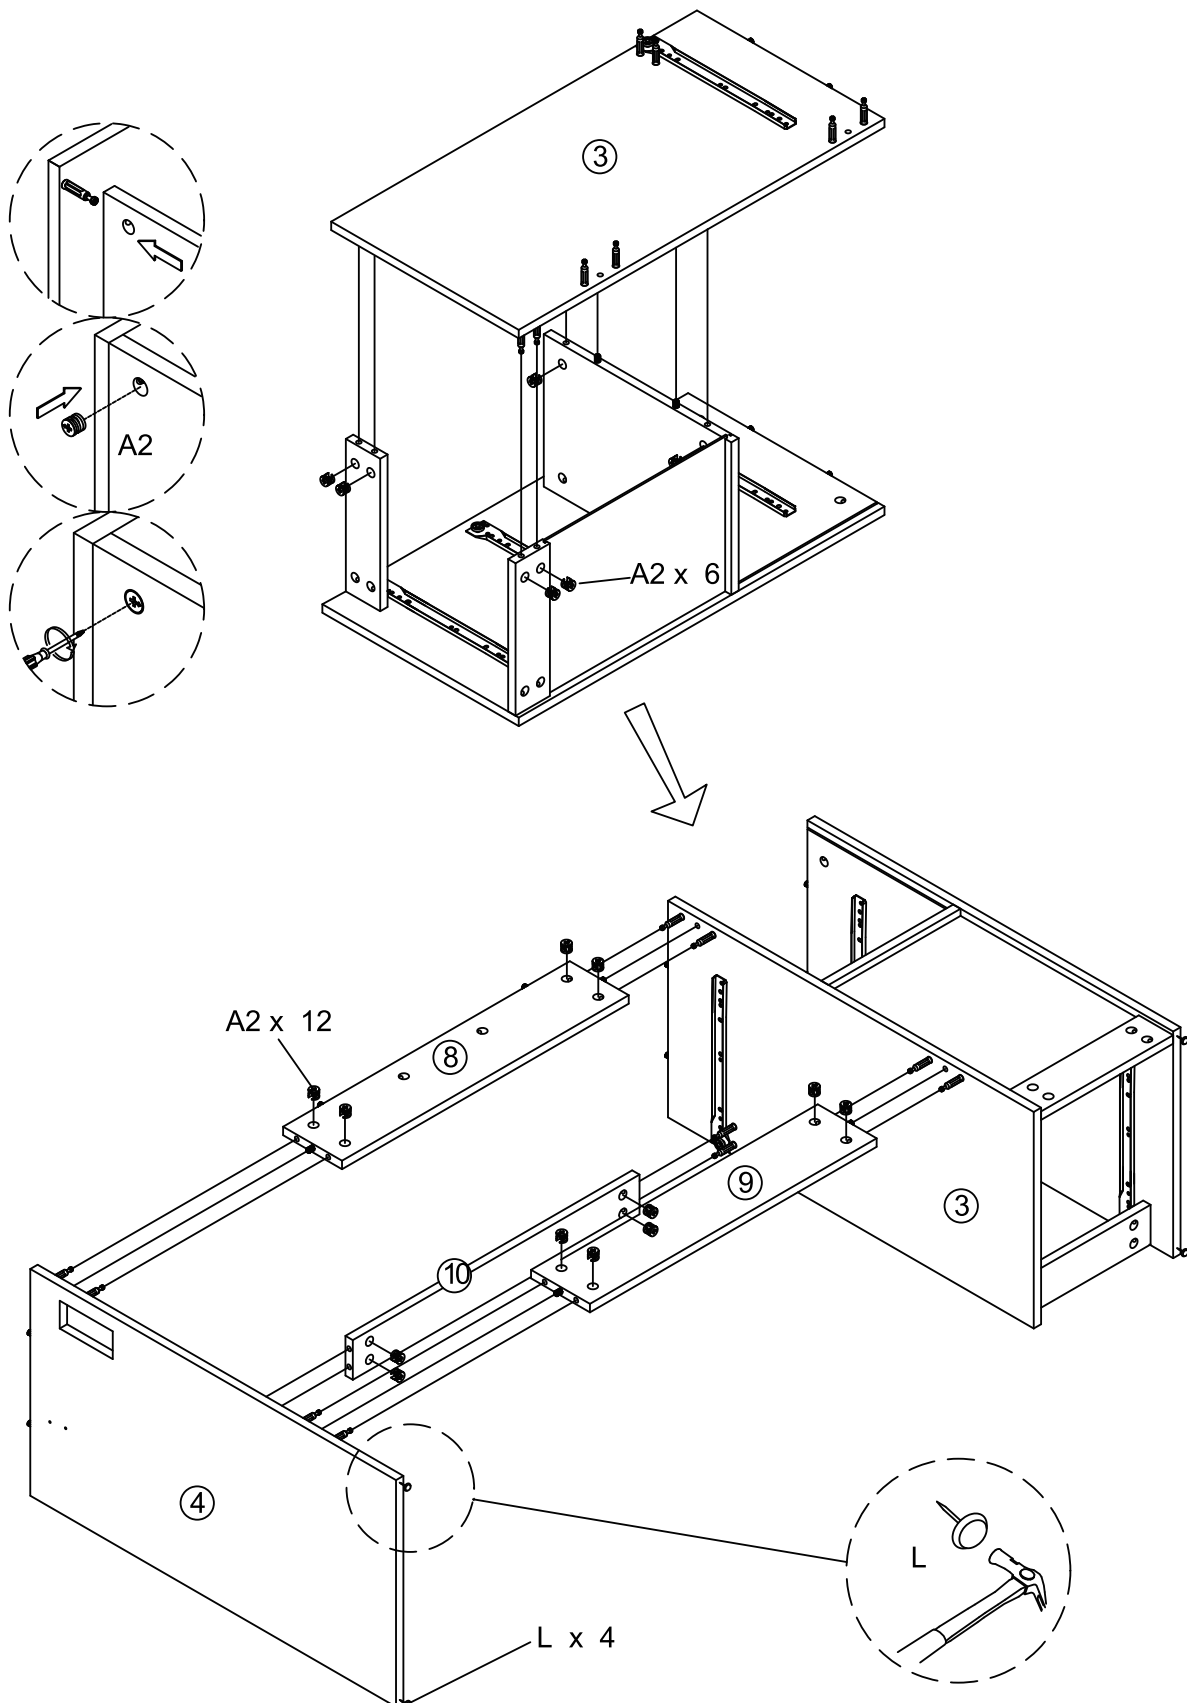



Email:Service@cozfurn.com

PRODUCT ASSEMBLY

Step 5

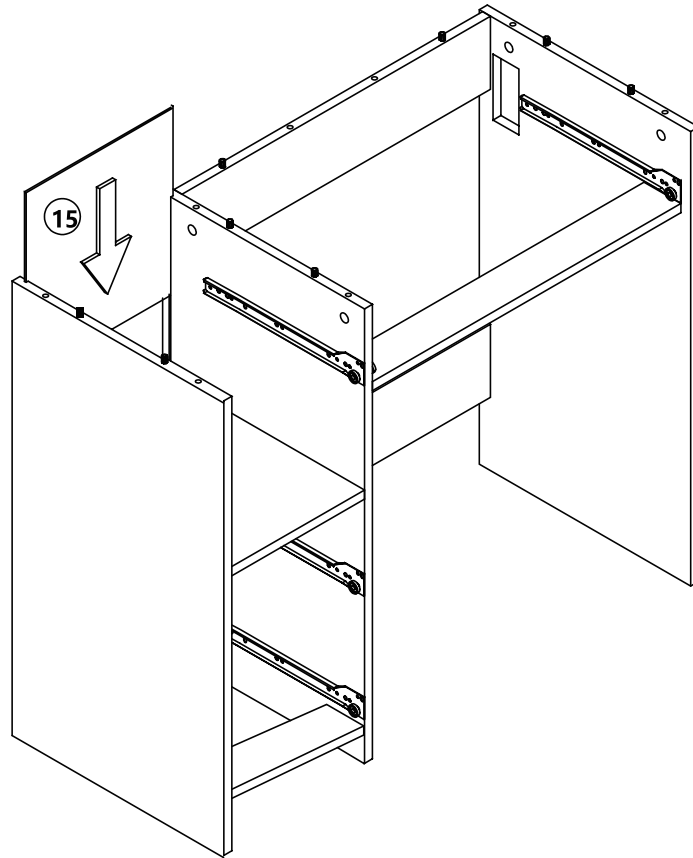

Step 6 A1x8

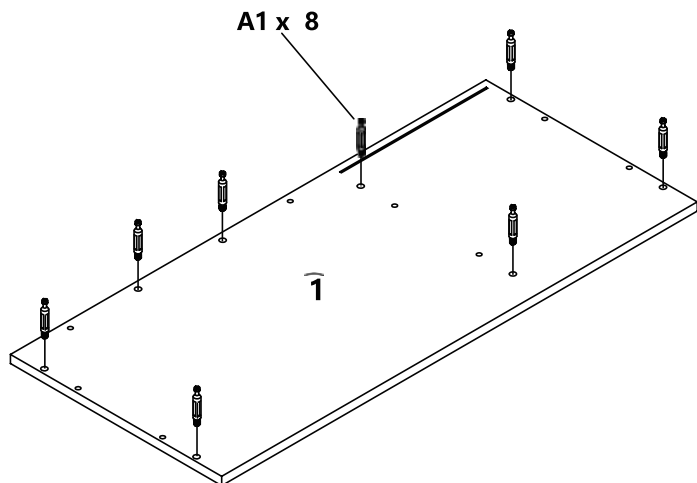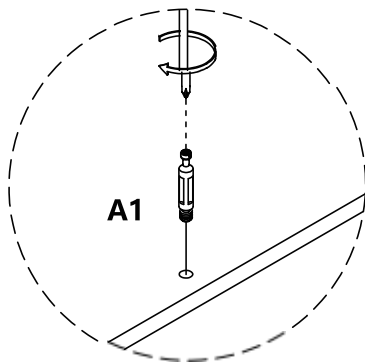


Email:Service@cozfurn.com

Step 7 A1x6 A2 x8




PRODUCT ASSEMBLY

Step 8 A1x4 Bx13

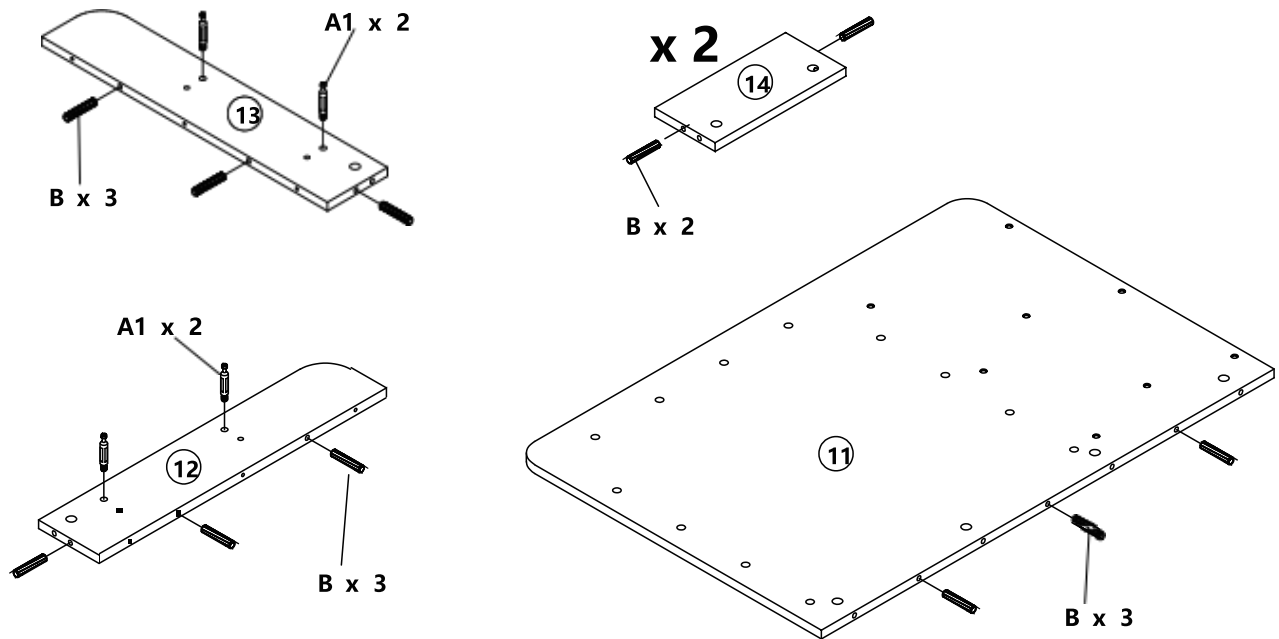


Step 9 A2x4 Fx8

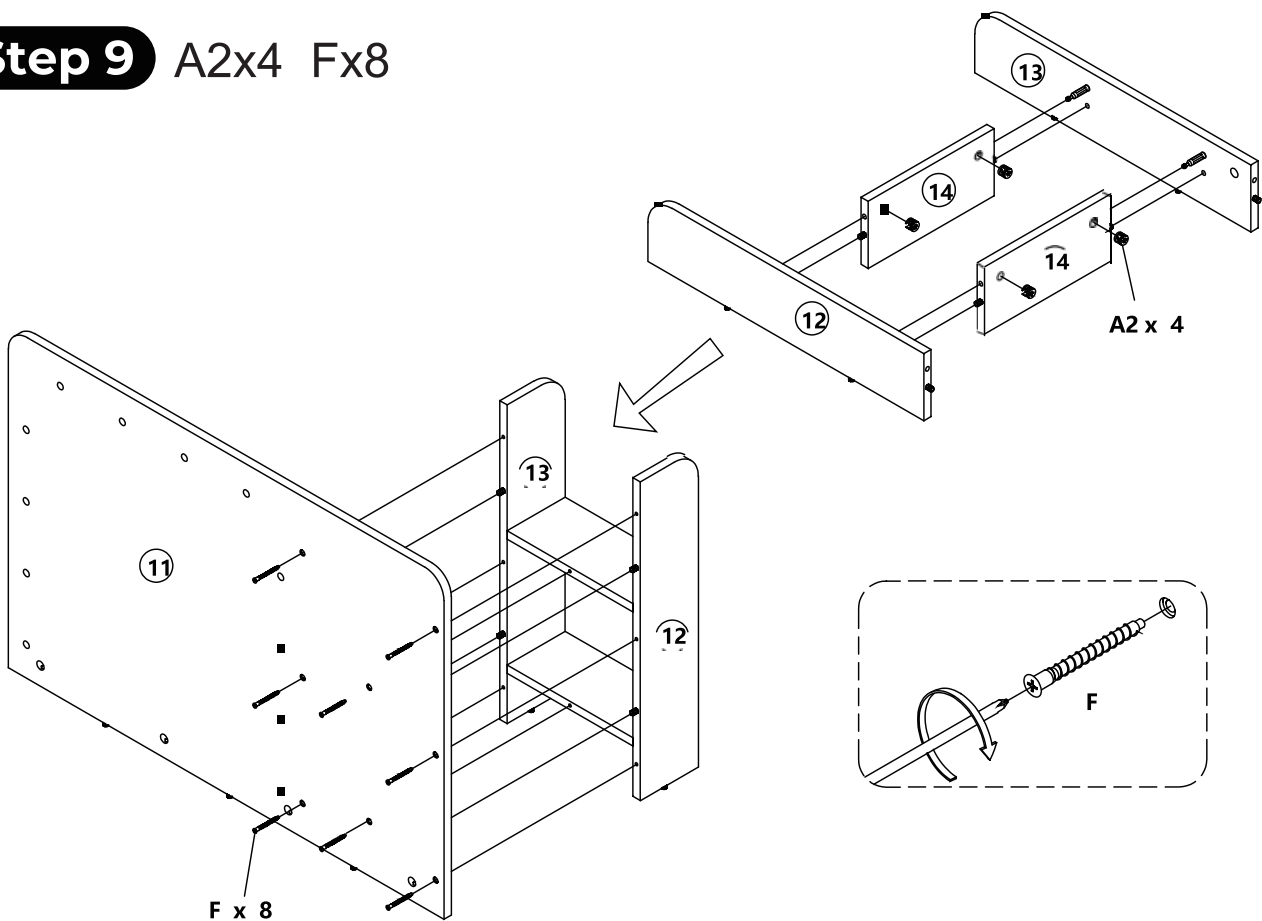

PRODUCT ASSEMBLY


Step 10 A2x6 Cx8 Kx8

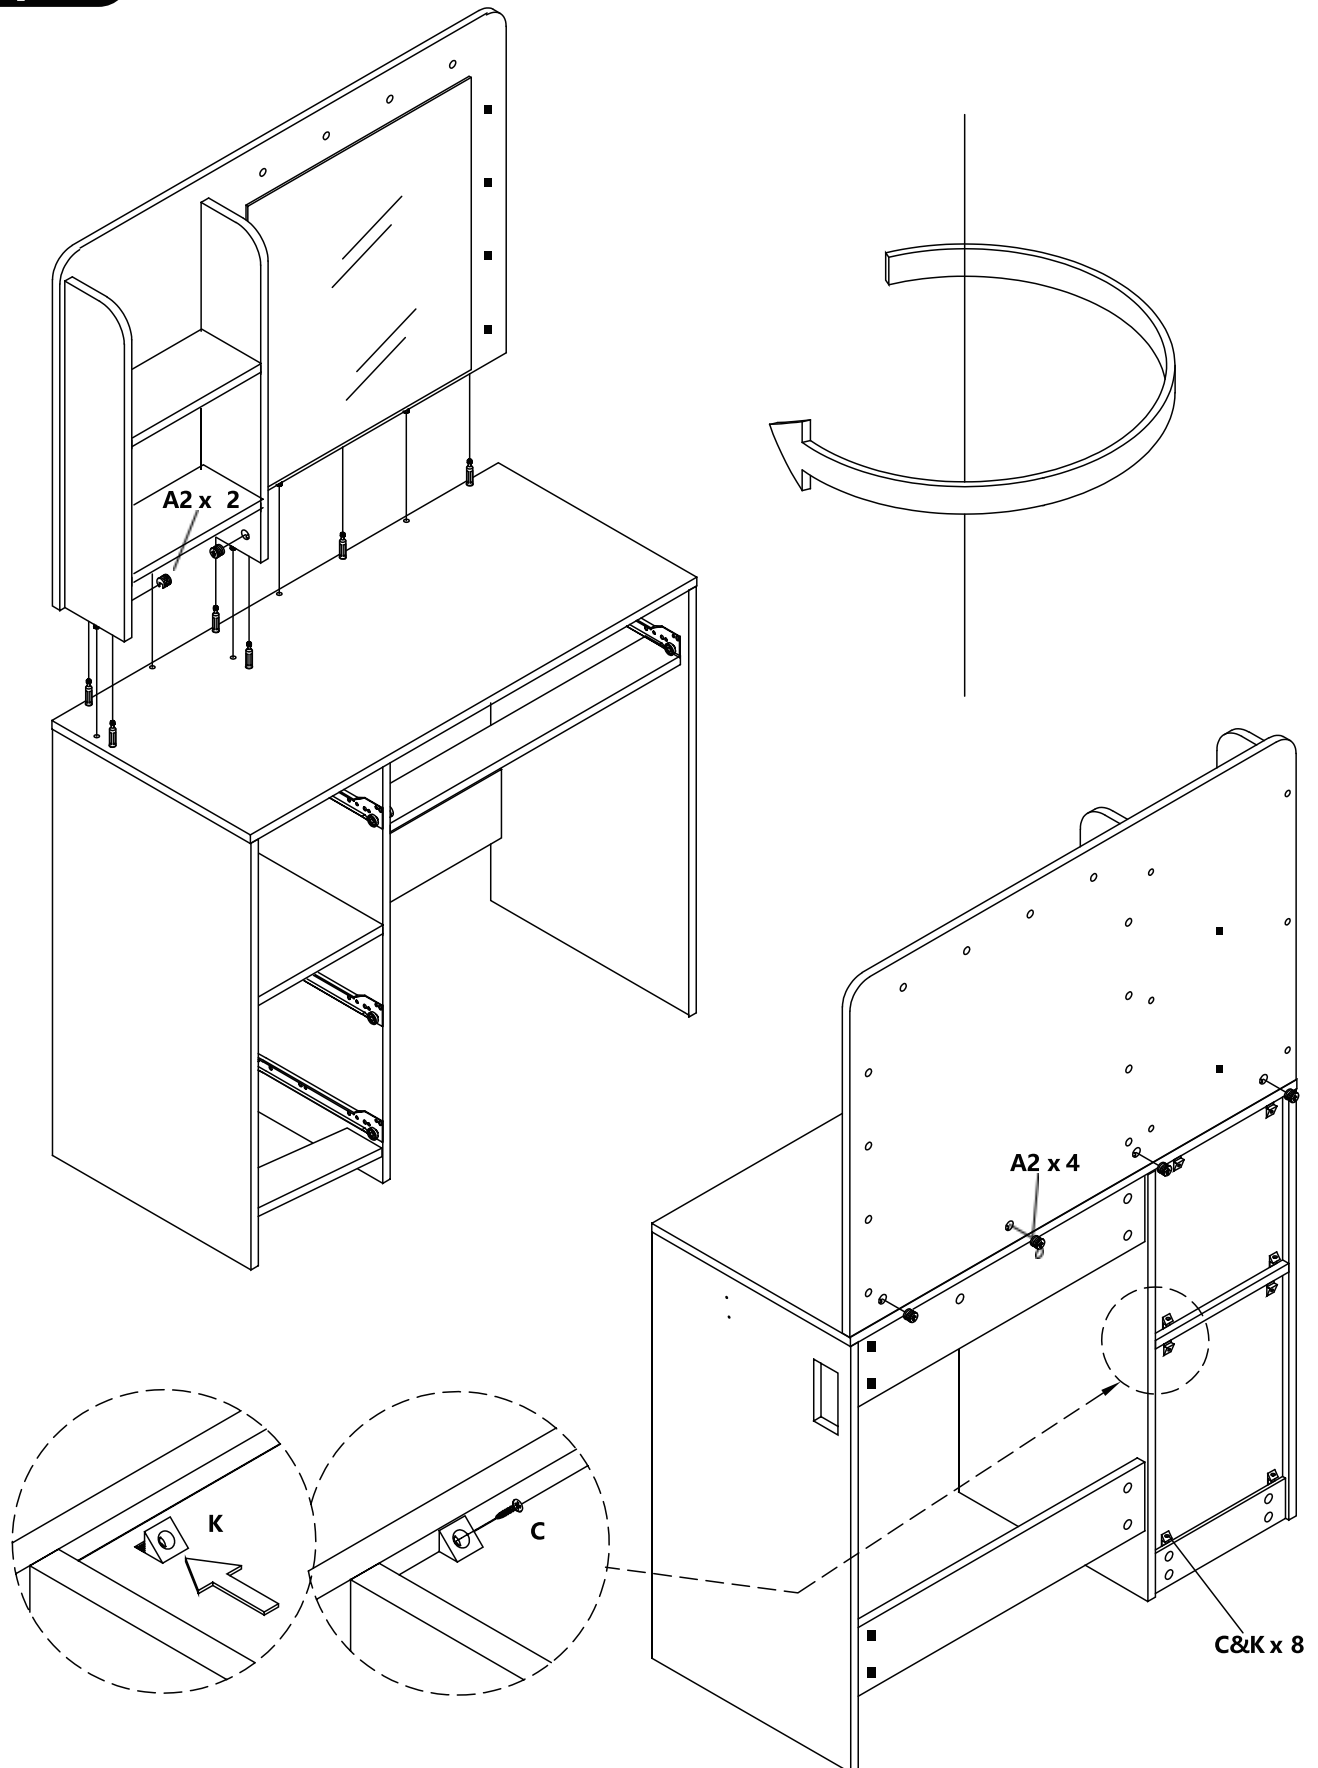

Email: Service@cozfurn.com


PRODUCT ASSEMBLY

Step 11 Ax4 Cx4 Dx4 E(DL)x1 E(DR)x1

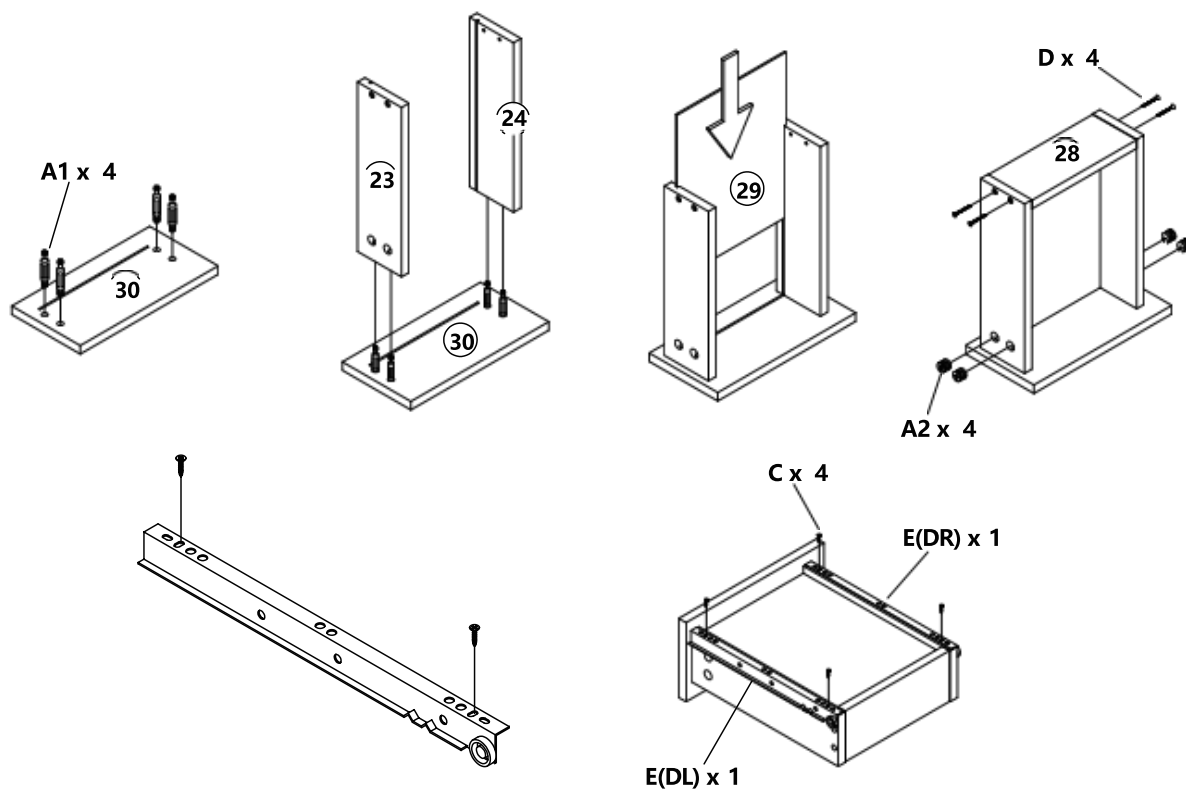

Step 12 Ax8 Cx8 Dx8 (DL)x2 E(DR)x2 Gx4 Hx2


x 2

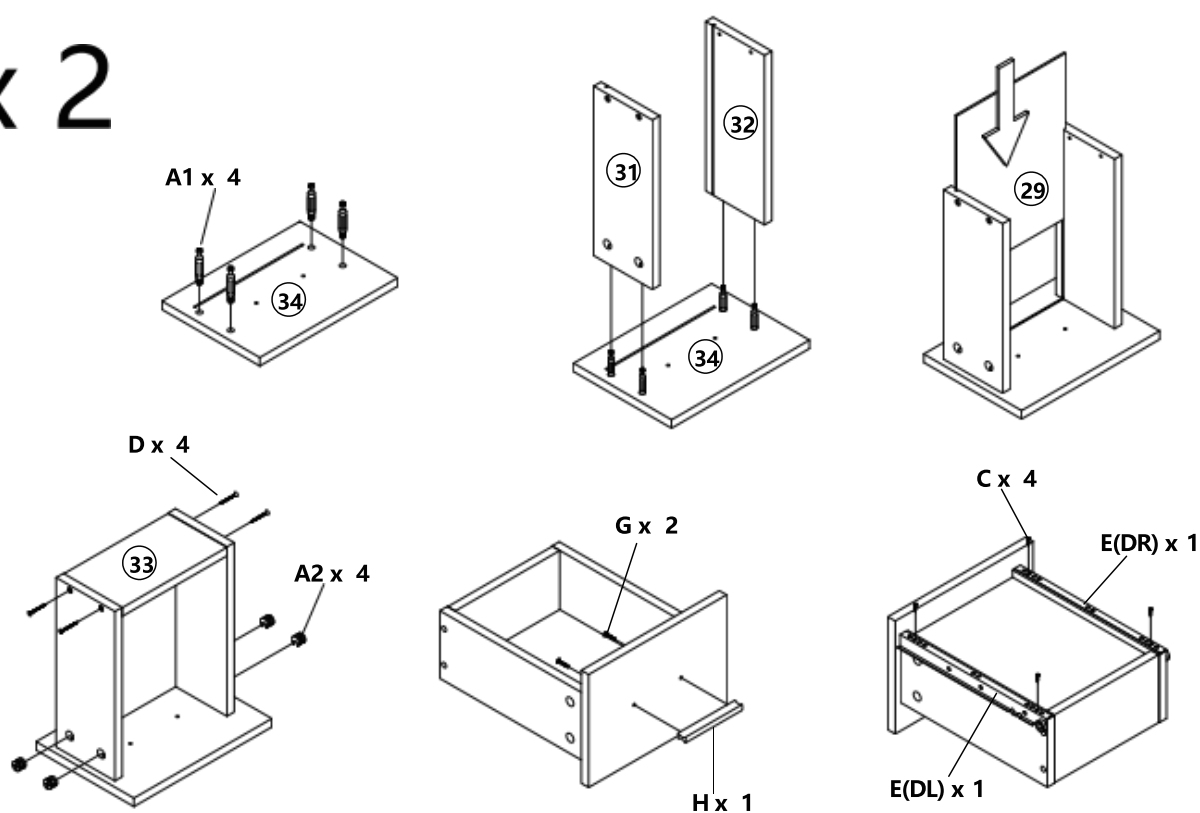


Email: Service@cozfurn.com

PRODUCT ASSEMBLY

Step 13 Ax4 Dx4 Gx2 Jx1

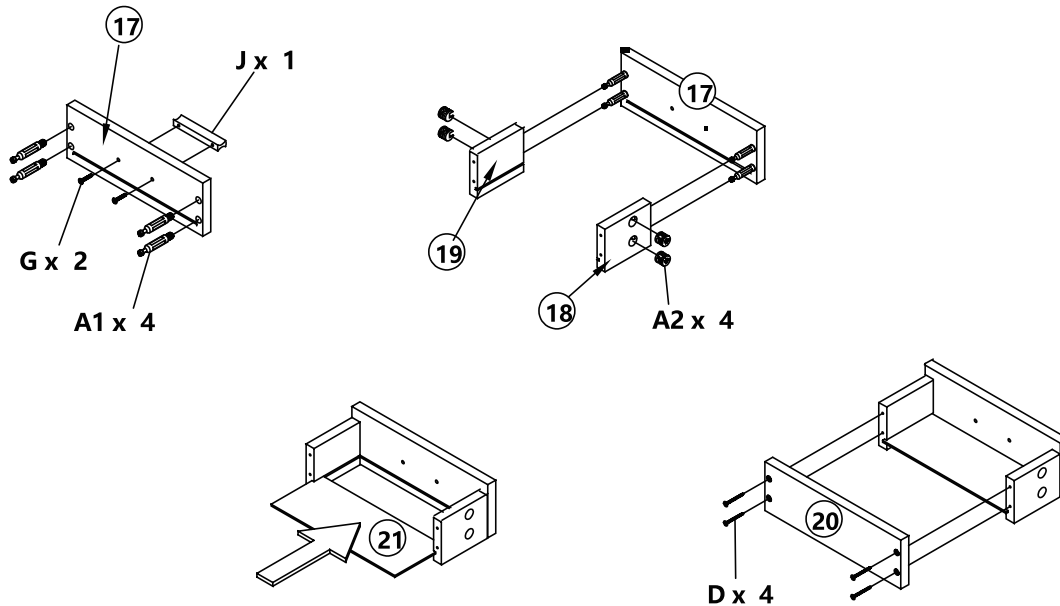





Step 14 Ax5 Cx4 Dx5 E(DL)x1 E(DR)x1 Gx2 Hx1

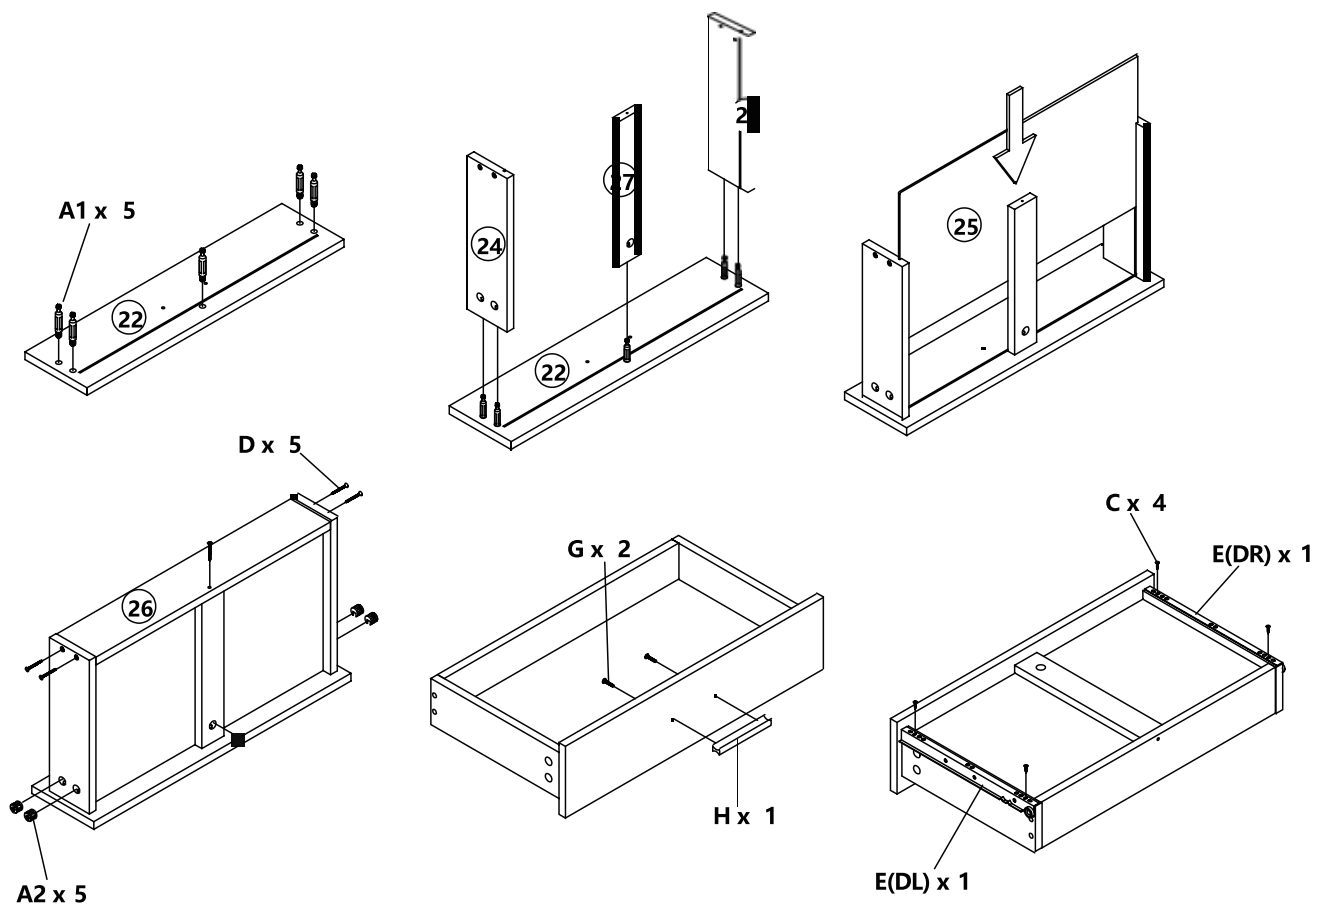

Email: Service@cozfurn.com



PRODUCT ASSEMBLY

Step 15 Cx4 Rx1Nx1

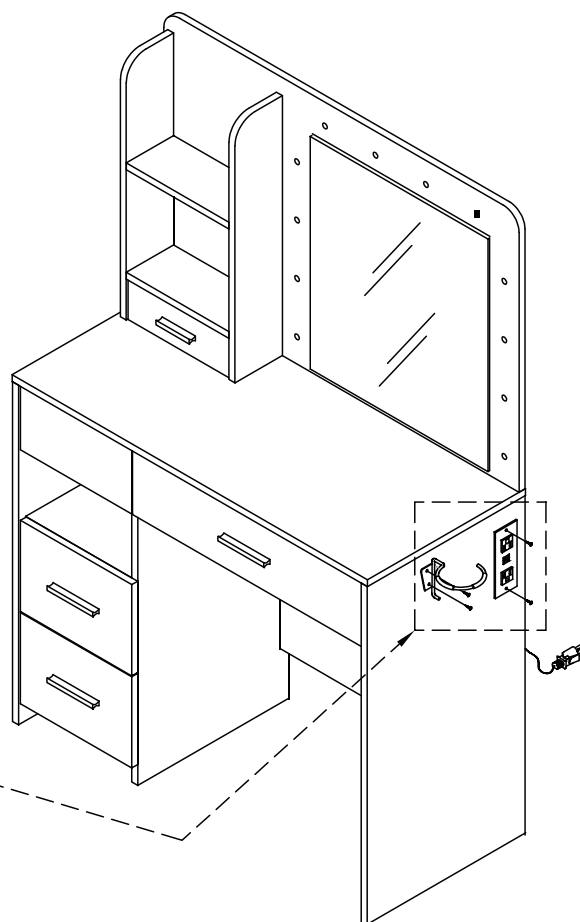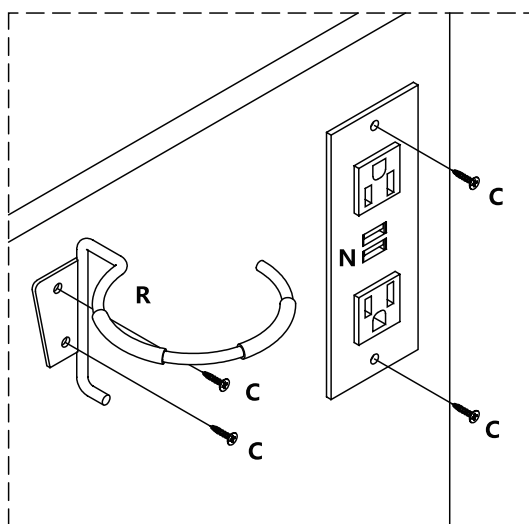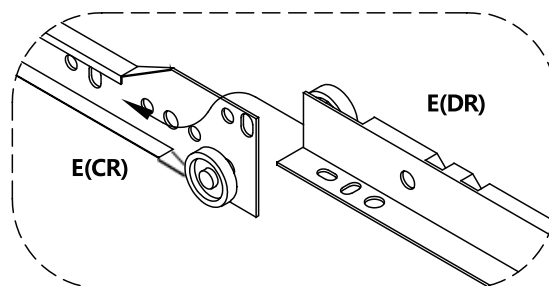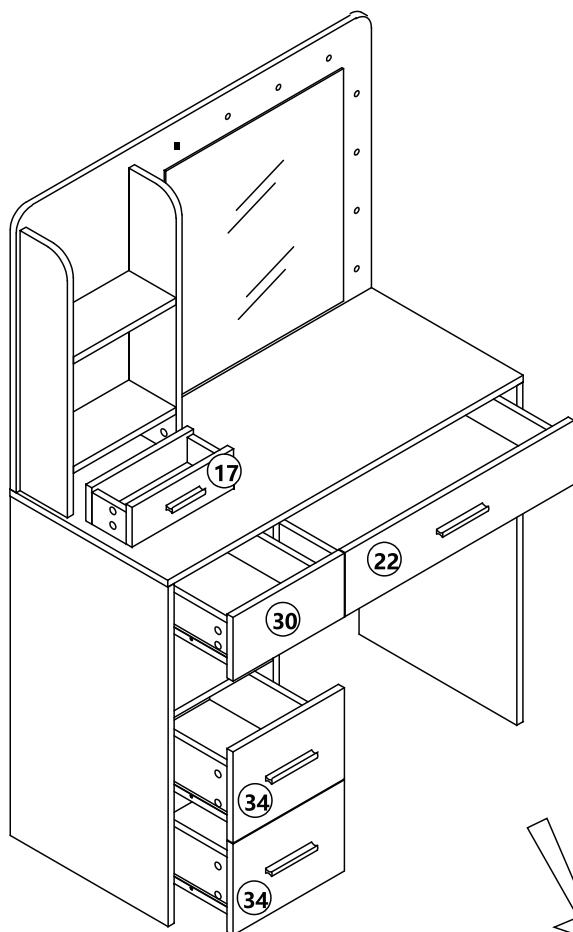

PRODUCT ASSEMBLY


Step 16 Px1

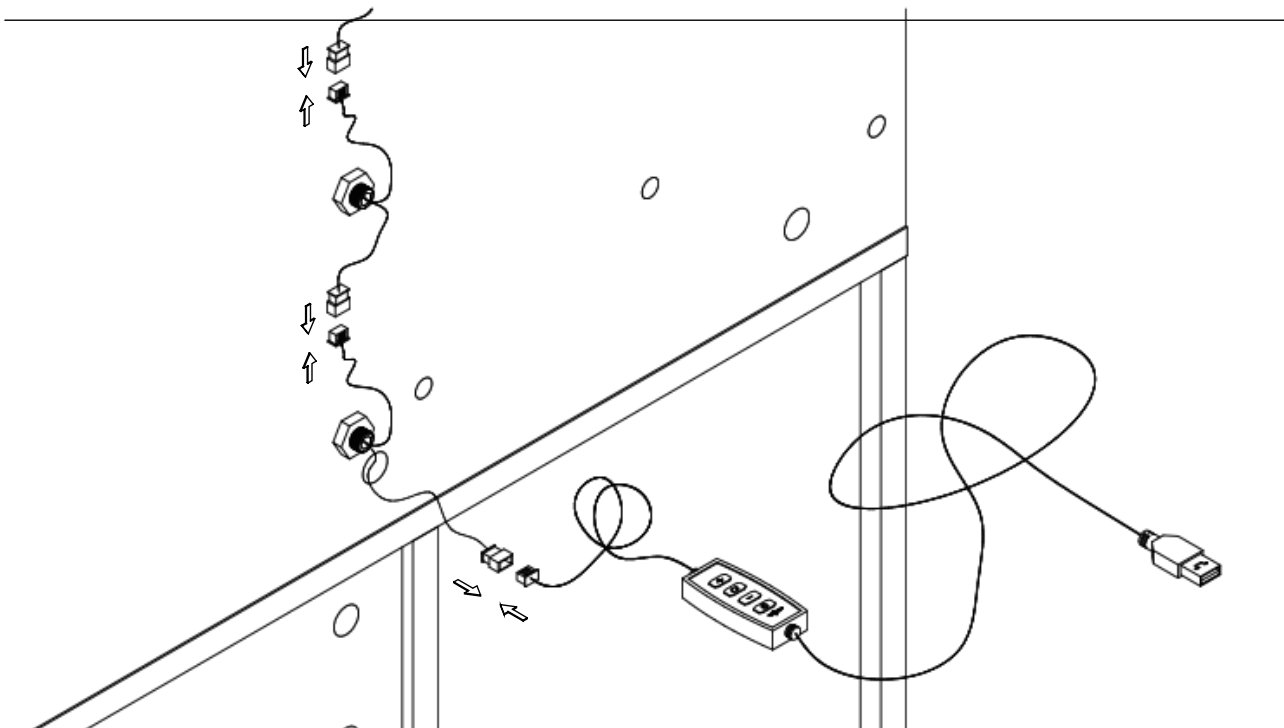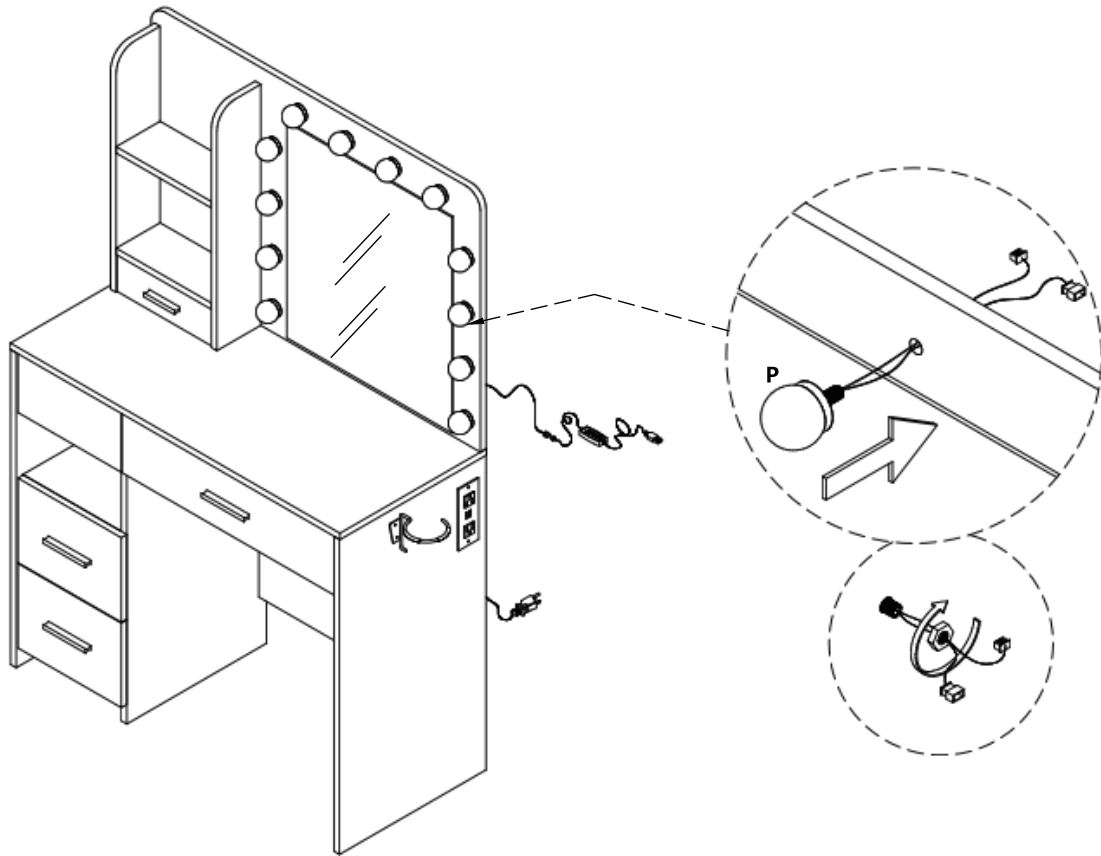


Email: Service@cozfurn.com

PRODUCT ASSEMBLY

Step 17 A1x16 Bx4 Lx4

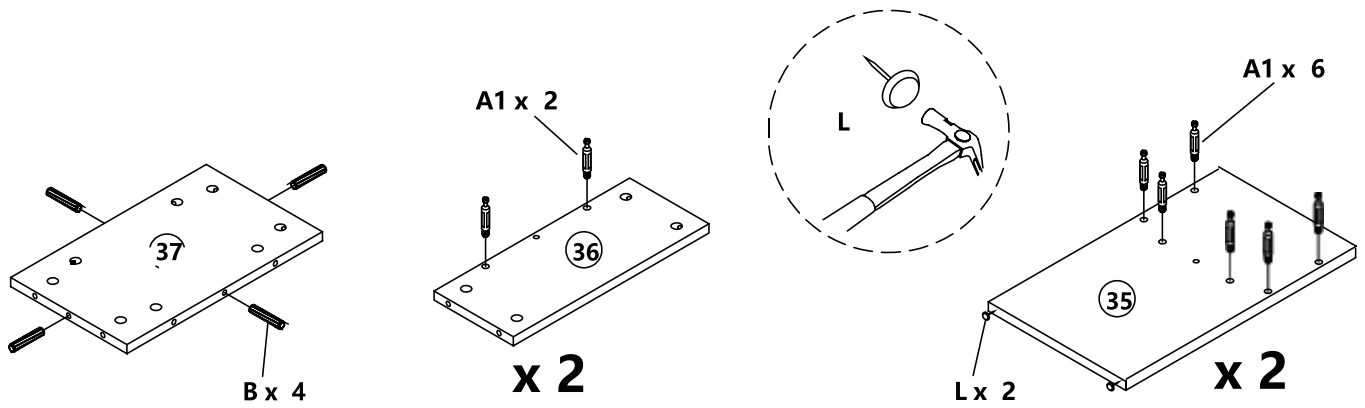


Step 18 A2x16

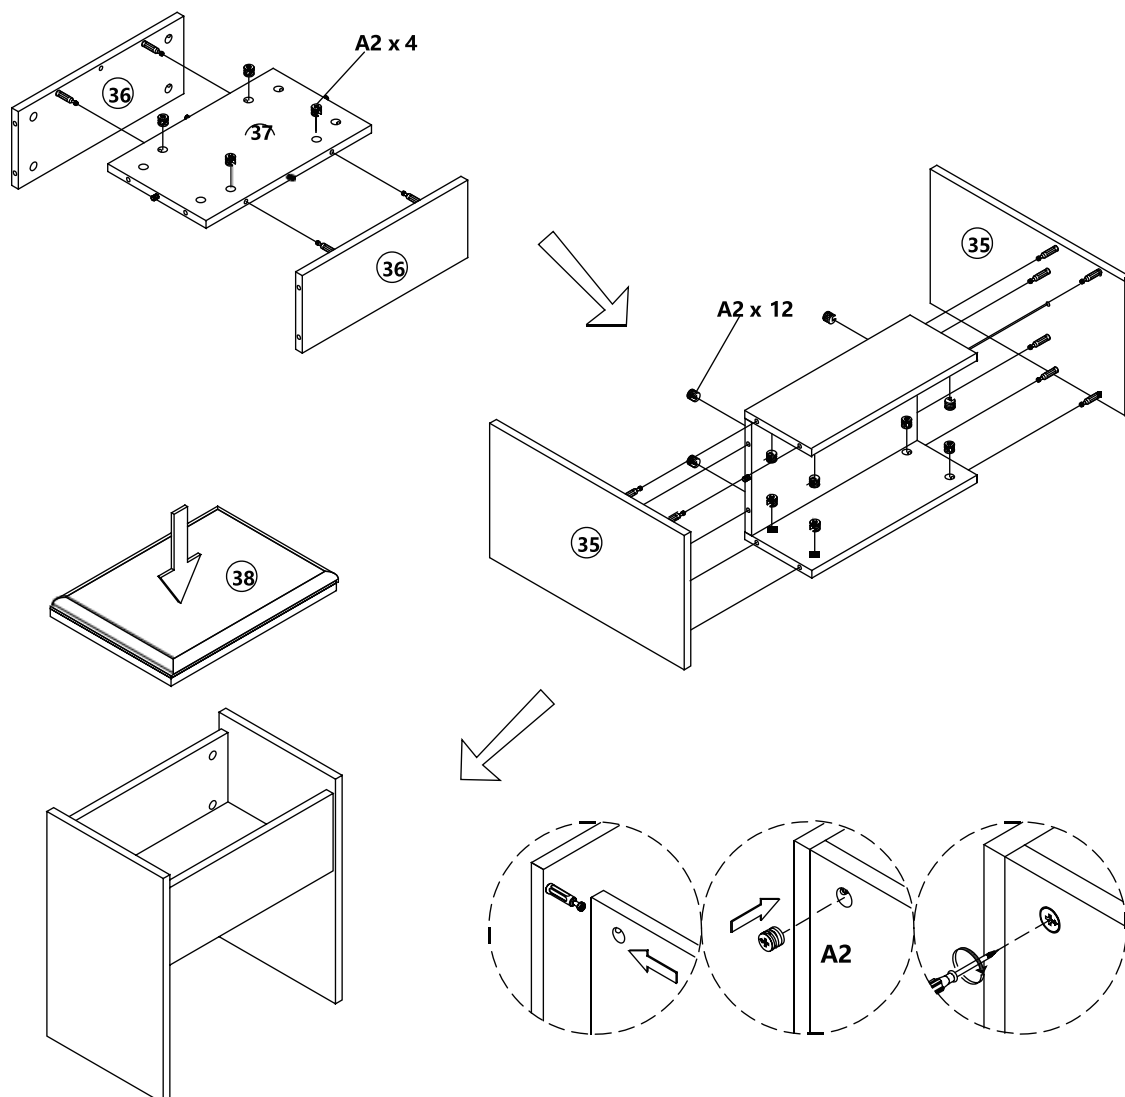


Email: Service@cozfurn.com

PRODUCT ASSEMBLY

Step 19 Yx2

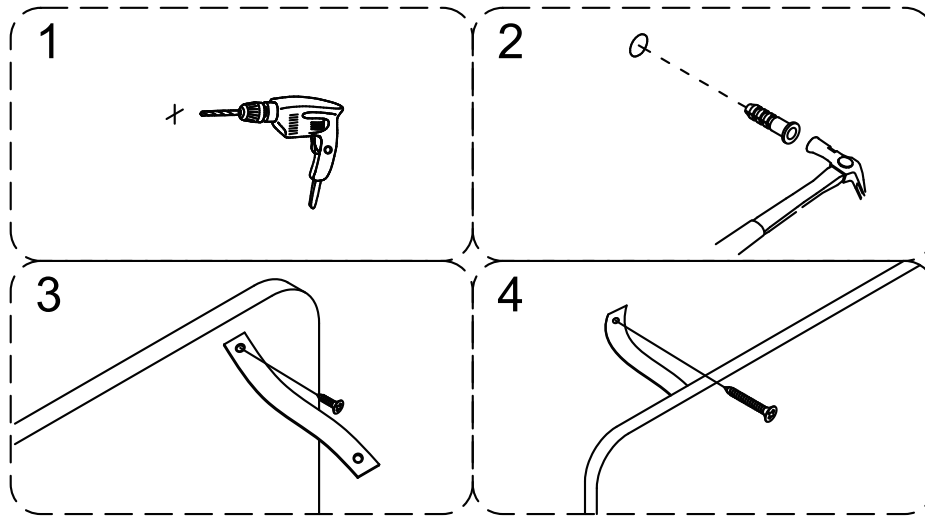


WALL

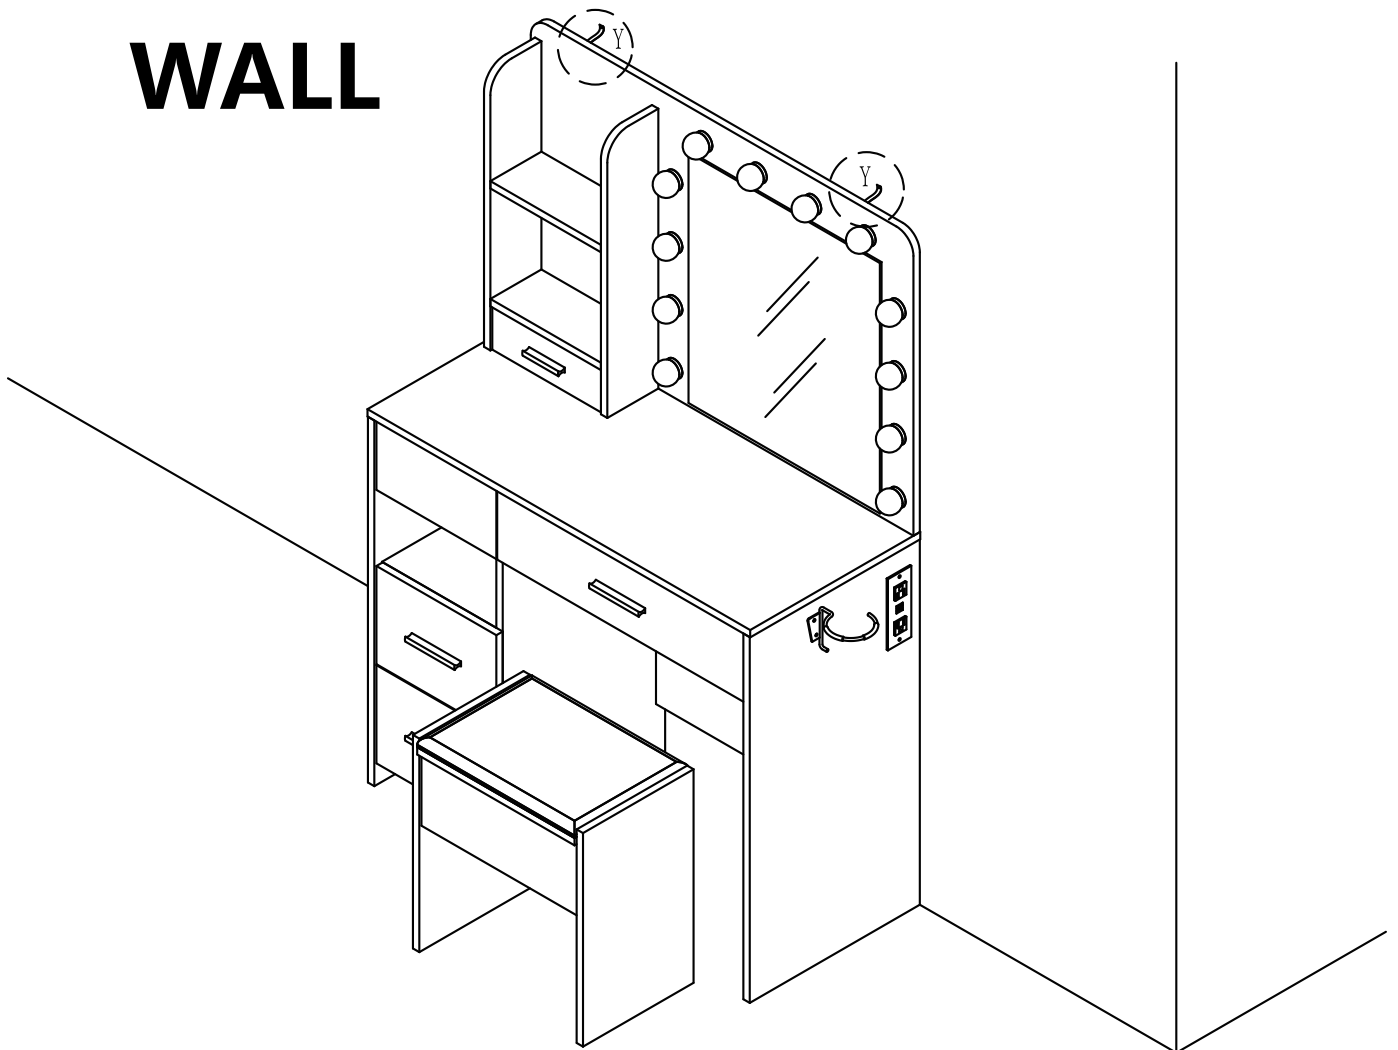

PRODUCT ASSEMBLY

Step 19 S x79

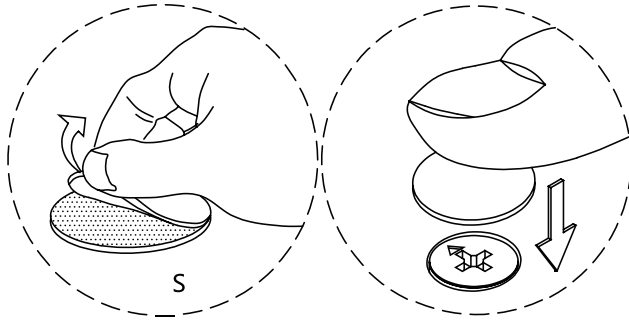

In order to make the product more beautiful, please paste hardware T on the exposed holes

