


Assembly Instructions

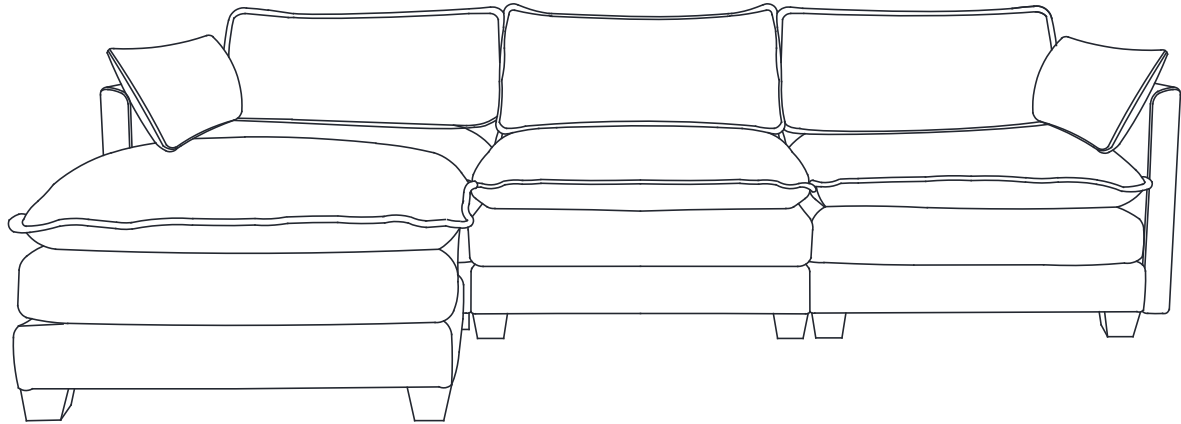

The modular sectional couch will be shipped in multiple boxes.

Box A-single sofa and 1 ottoman

ITEM NO. E046-073-001

Box B-Love seat.

ITEM NO. E046-074-001

The exact number of boxes will be determined by the combination you purchase.

Loveseat:

Box B

L Shaped:

Box A + Box B

U Shaped:

Box A*2 + Box B

Each package will be dispatched from a different warehouse depending on your shipping address, so they may not arrive at the same time. Each package has its own tracking number, you can check the logistics information through the different tracking numbers..

You can contact us in several ways.

Way1: Click on the **seller's name** on the order page to contact us.

Way2: Click "**Contact Seller**" on the product details page to contact us.

Way3: Call CustomerService phone to get assistance.

Way4: Email us: **home@homeselecting.com**.

Way5: Go to the App order page to get further assistance.

MAINTAINANCE AND WARNING

- Keep furniture away from heat sources.
- Do not clean furniture with harsh cleaner or polishes. Do not use detergents, solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water to clean spills (Mix 1:10 soap to water).
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not use dry cleaning machine.
- Children should not climb or jump on the furniture.
- Do not write on furniture that is not protected by a padded barrier.






Weight Capacity

250LBS PER SEAT





PART LIST & HARDWARE

A

A Middle backrest  1PC	D Middle cover  1PC	I Seat cushion  1PC	L Back cushion  1PC	K Ottoman cushion  1PC
N Iron connector  2PCS	O Front board  3PCS	P Back board  1PC	Q Ottoman board  2PCS	R Wooden strip  4PCS
T Middle seat  1PC	U Ottoman seat  1PC	V Iron strip  1PC	W Connector  4PCS	X L connector  1PC
Y Supporting feet  6PCS	Z Gasket  6PCS	A1 M6*50mm Bolt  8PCS	B1 M6*20mm Bolt  28PCS	C1 M6*45mm Bolt  4PCS
D1 M4.2*30mm Bolt  4PCS	T1 M6 Alley key  1PC			

that may have come loose inside the carton during shipment.


B

B Left backrest  1PC	C Right backrest  1PC	E Left cover  1PC	F Right cover  1PC	G Left armrest  1PC
H Right armrest  1PC	L Back cushion  2PCS	M Armrest bag  2PCS	T seat cushion  2PCS	N Iron connector  2PCS
O Front board  2PCS	P Back board  2PCS	R Wooden strip  4PCS	S Side seat  2PCS	V Iron strip  1PC
W Connector  4PCS	Y Supporting feet  6PCS	Z Gasket  6PCS	A1 M6*50mm Bolt  8PCS	B1 M6*20mm Bolt  24PCS
C1 M6*45mm Bolt  4PCS	D1 M4.2*30mm Bolt  8PCS	T1 M6 Alley key  1PC		


ASSEMBLY INSTRUCTIONS

Sept 1: Assemble the sofa seat frame according to the above steps. Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.


(1): Assemble the Wooden strip (R) to the 3 pcs Back board (P) and 3 pcs Front board (O)

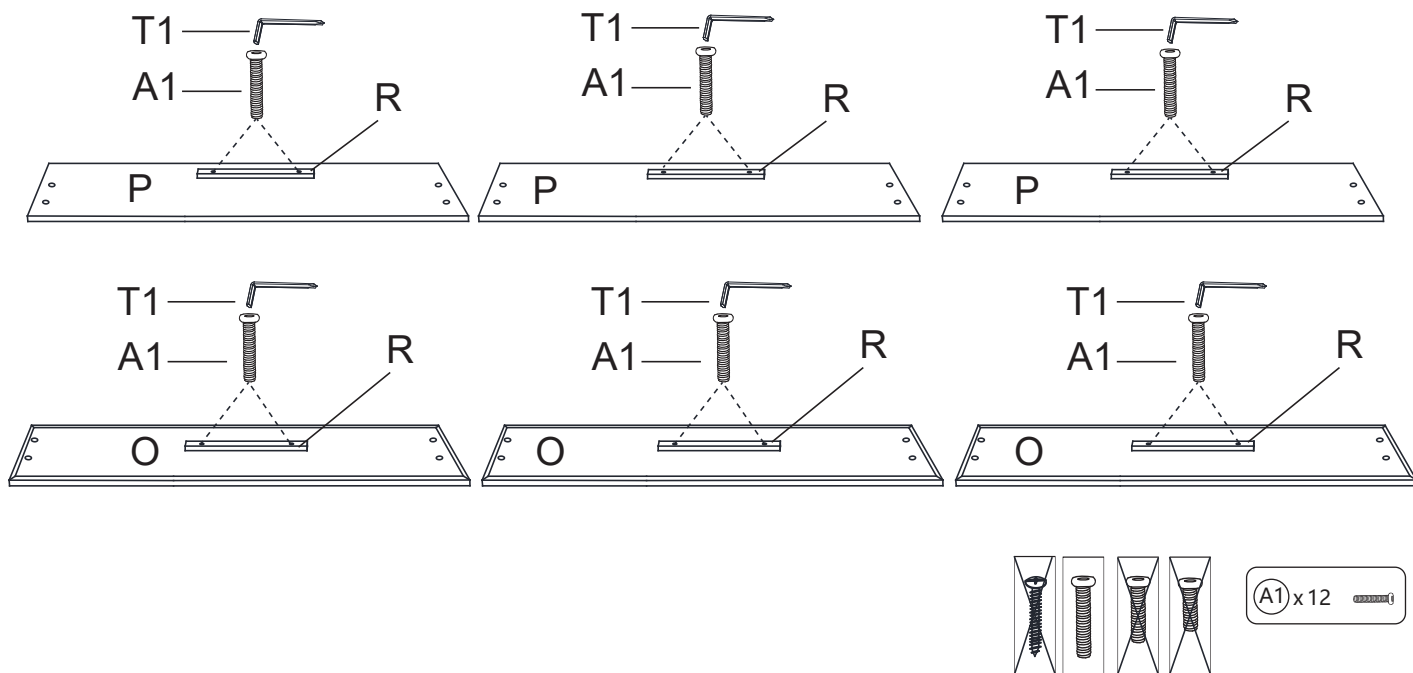


(2): Assemble the Connector (W) to the Back board (P).

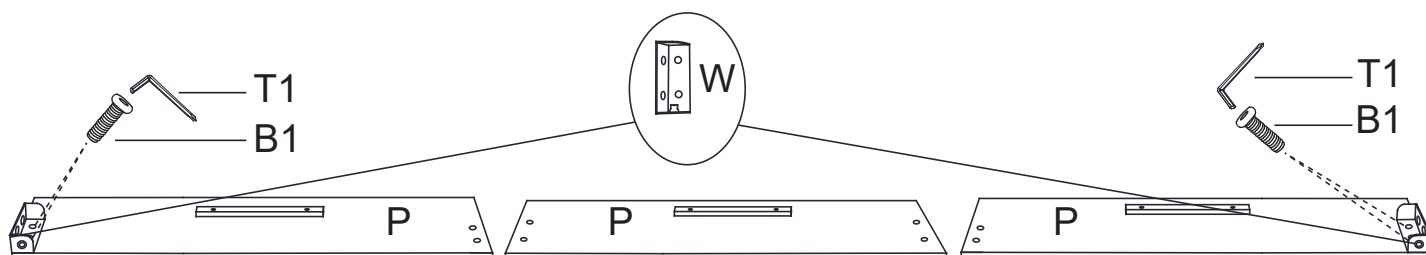


(3): Assemble the Connector (W) to the Front board (O).

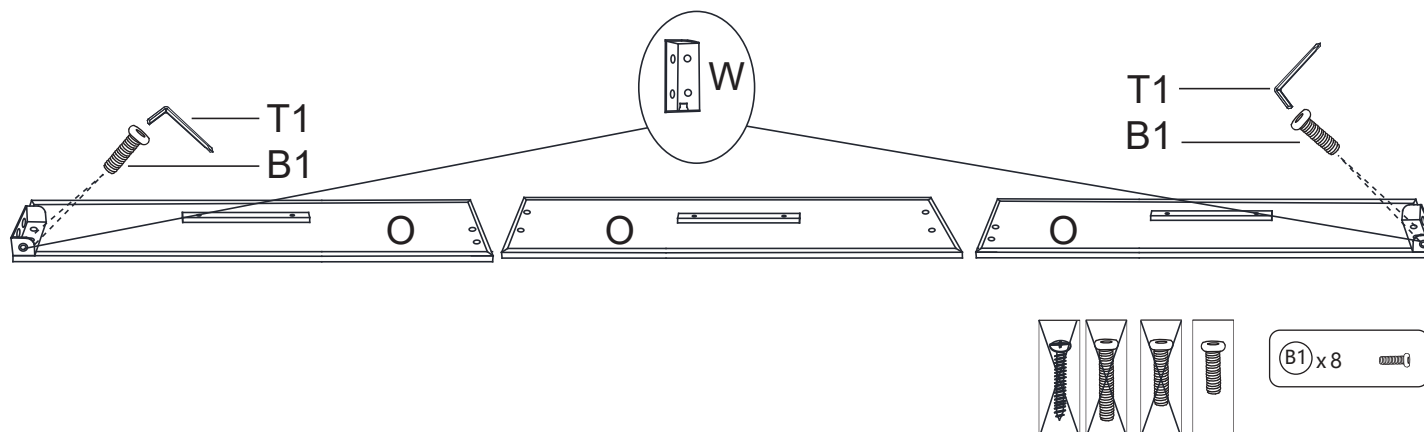


(4): Assemble the Iron strip (V) to the Front board (O).

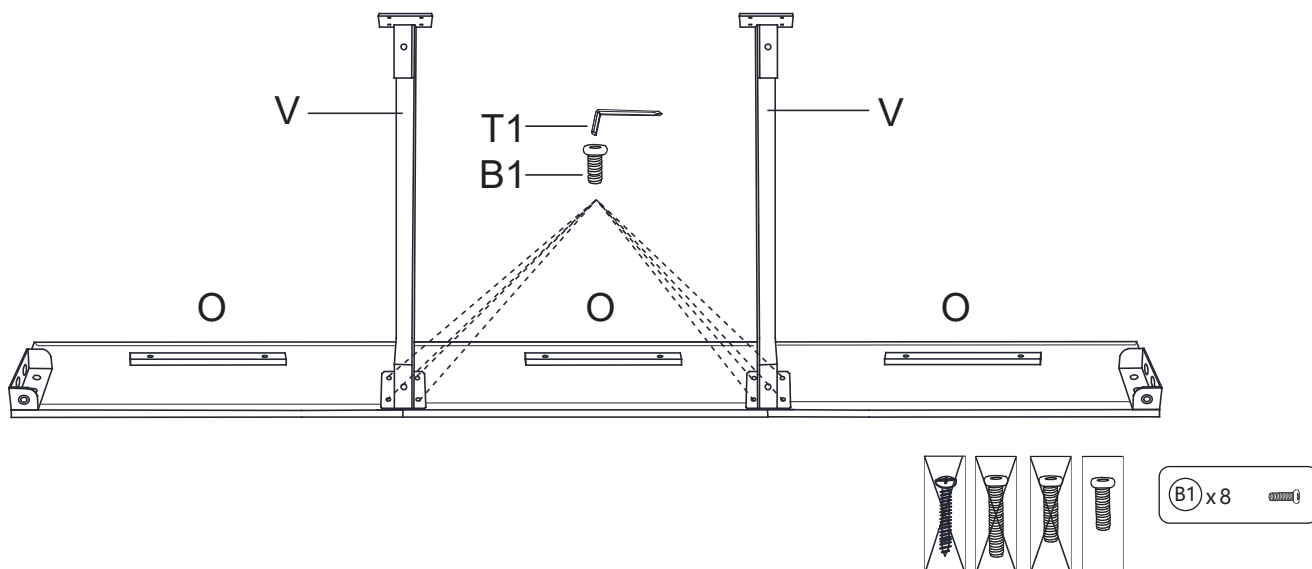


(5): Assemble the Iron strip (V) to the Back board (P).

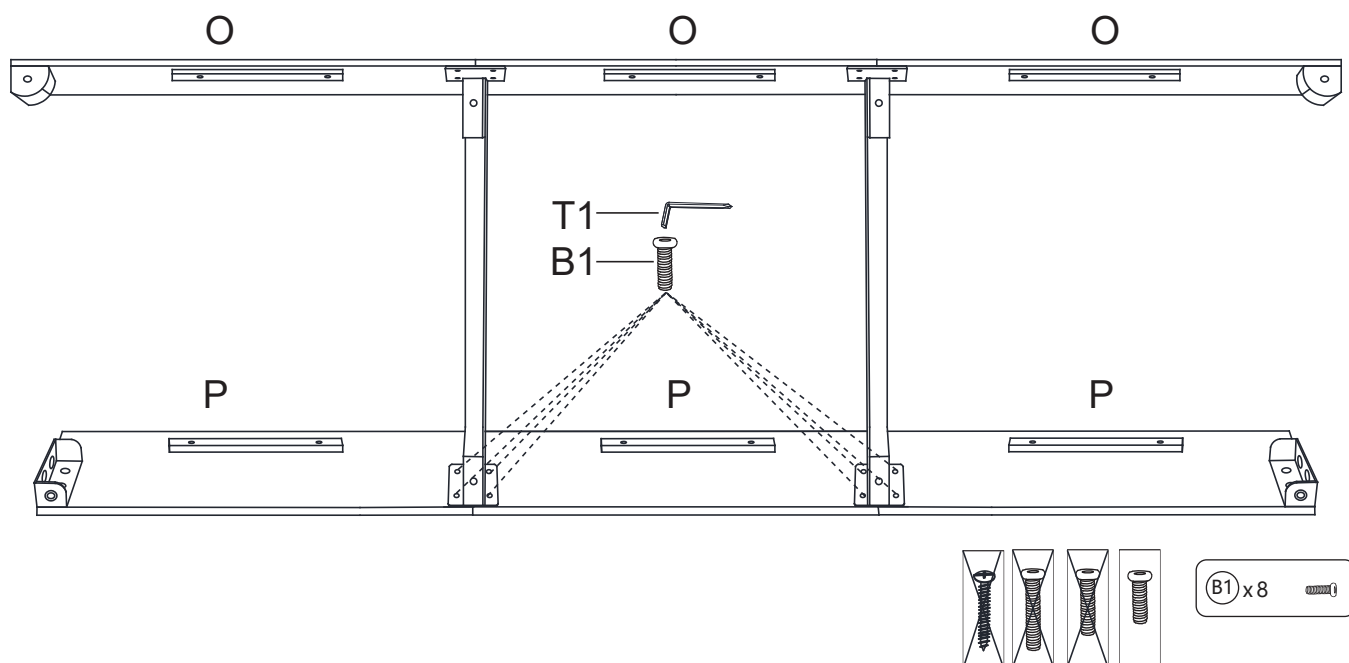



Sept 2: Assemble the Left Armrest (G) and the Right armrest (H).

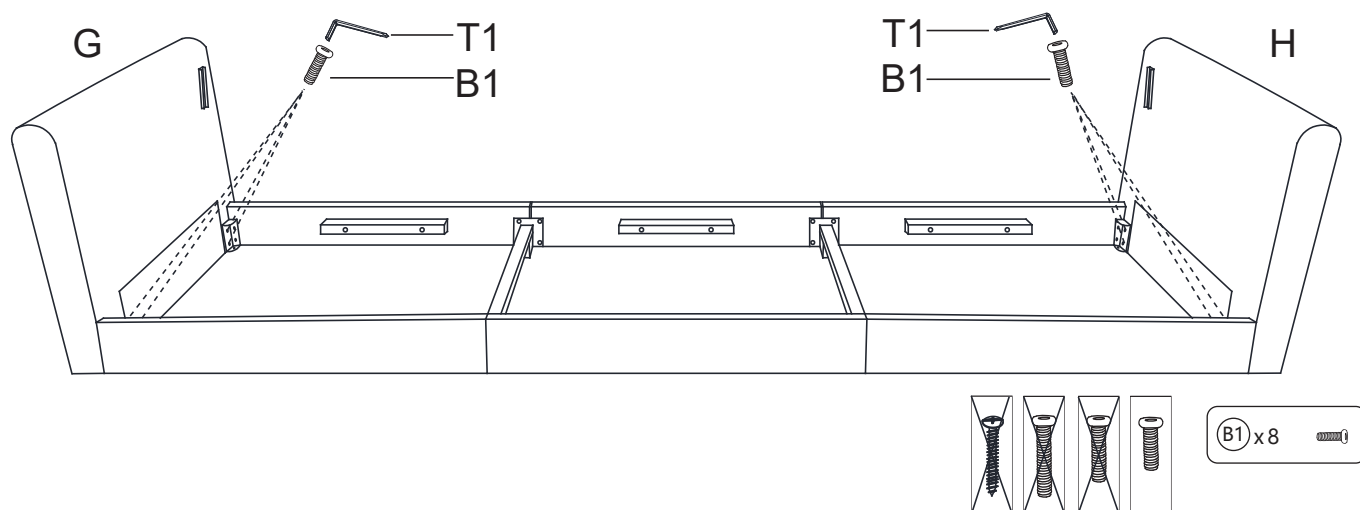


Step 3: Put the Middle seat (T) and the Side seat (S) to the frame.

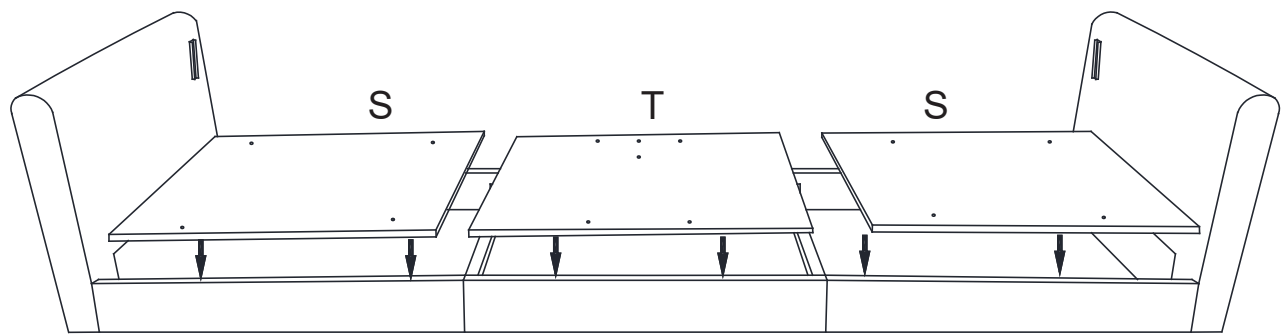


Step 4: Assemble the Middle seat (T) and the Side seat (S) to the Front board (O) and the Back board (P).

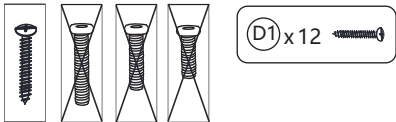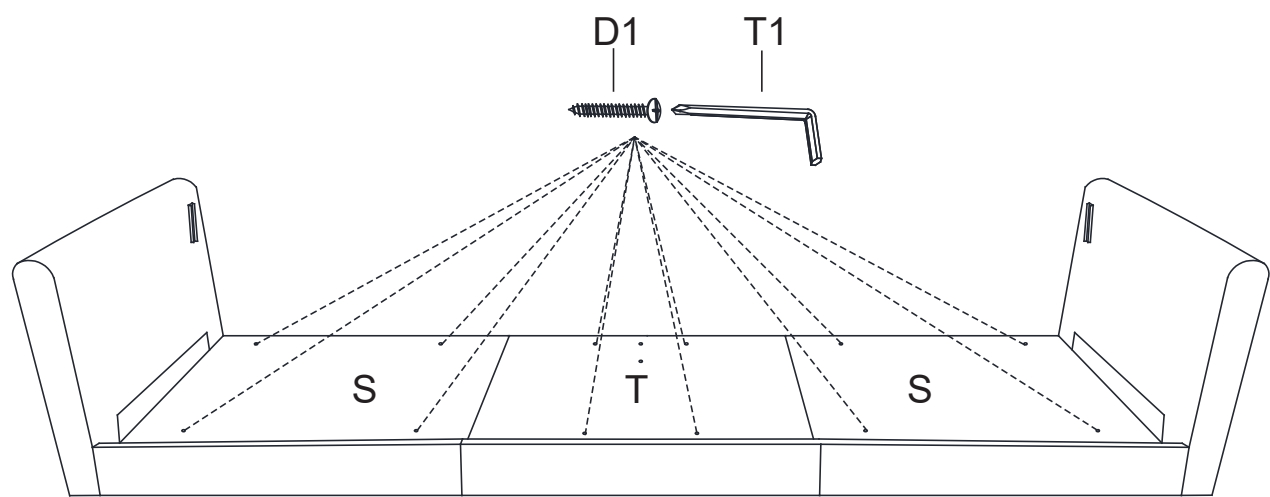


Step 5: Put the Iron connector (N) into the the Middle backrest (A).

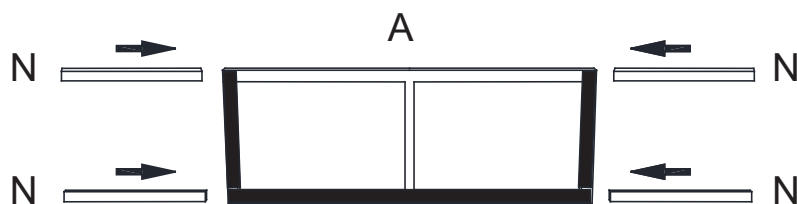



Step 6: Connect the Left backrest (B) and Right backrest (C) into the Middle backrest (A) and then use the bolts (C1) to screw.

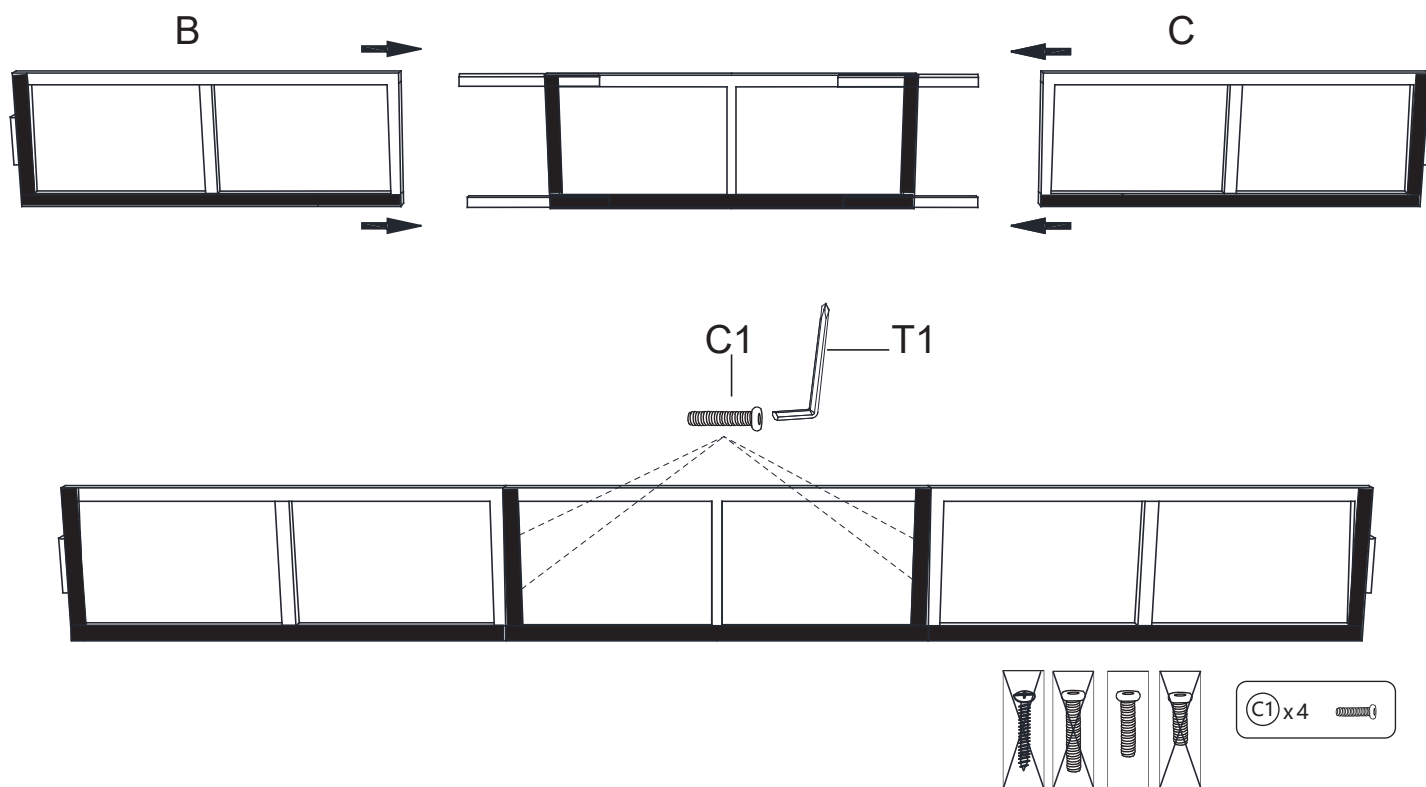


Step 7: Insert the assembled backrest into the handrail.

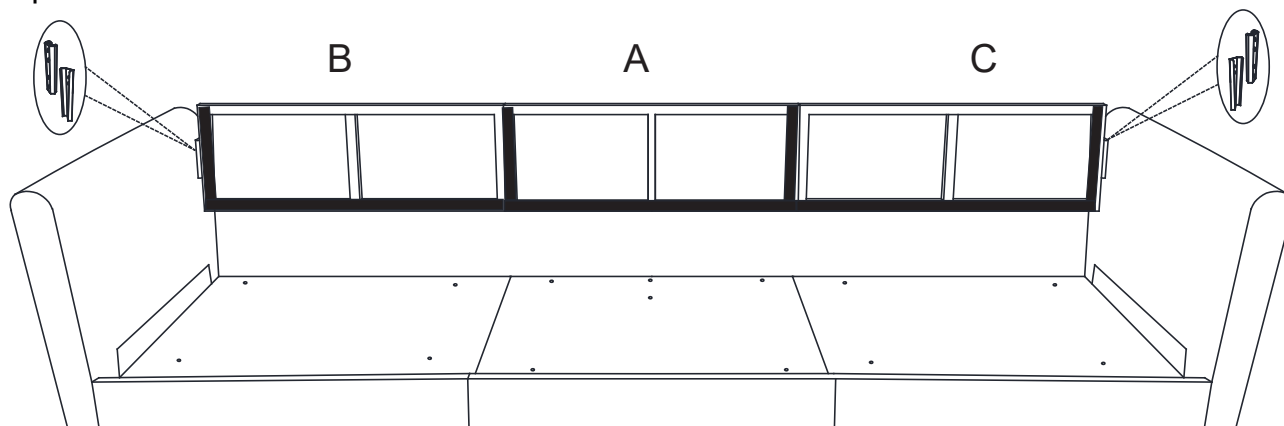


Step 8: Assemble the L connector (X) to the Middle seat (T) and the Middle backrest (A) with Bolt (B1) and Alley key (T1).

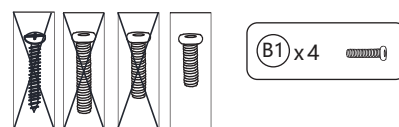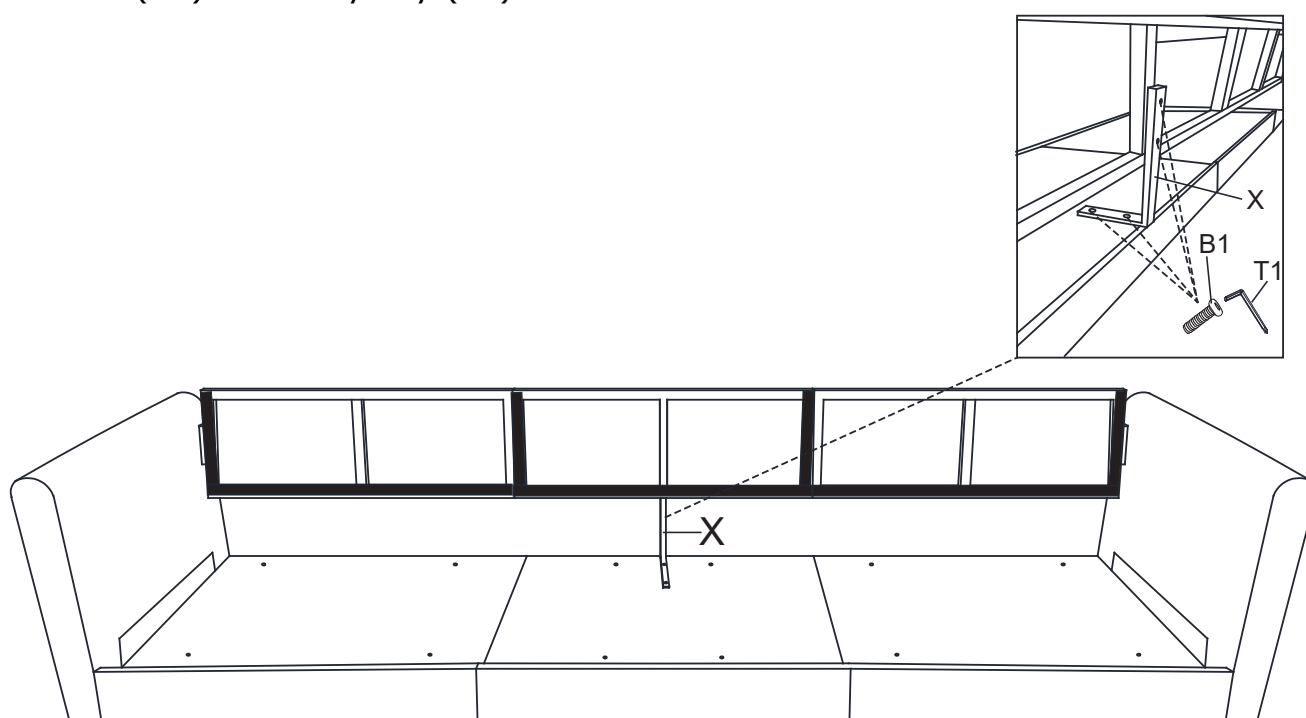


Step 9: Screw the Supporting feet (Y) and Gaskets (Z) like below picture.

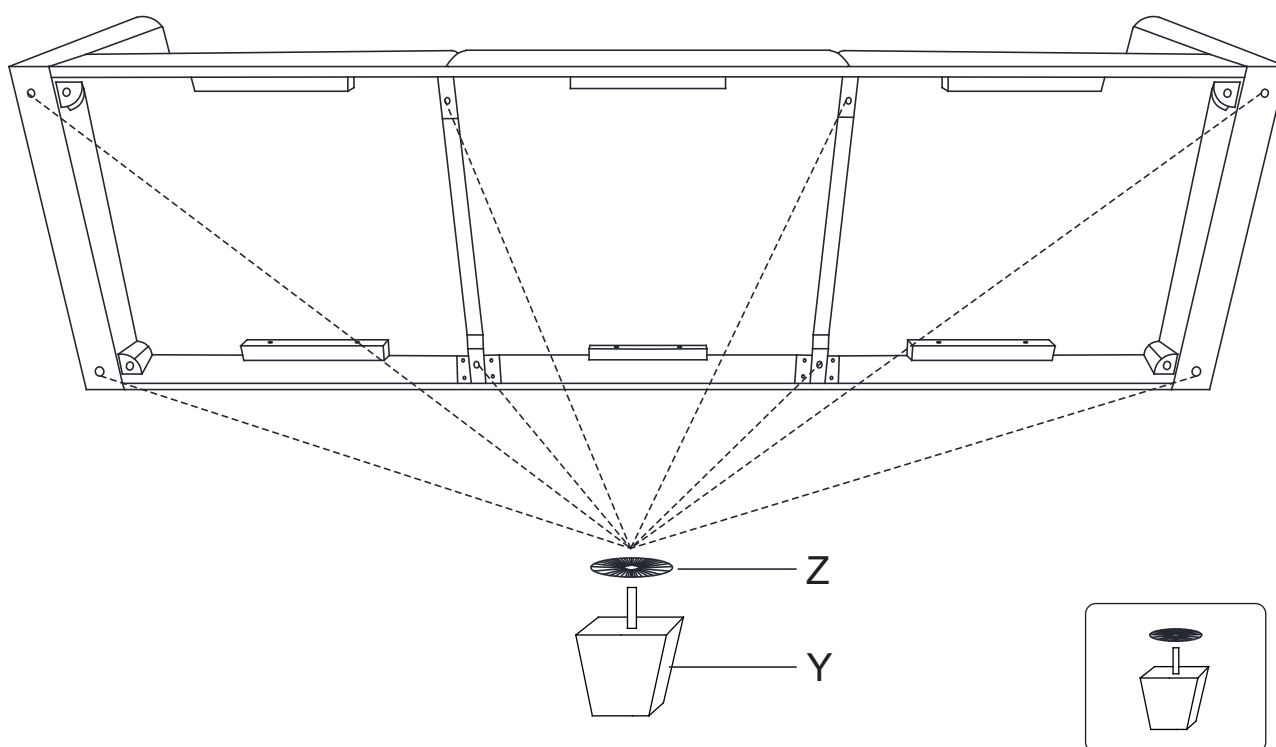

Step 10: Put the Left cover (E), Right cover (F), Middle cover (D) to the backrest like below picture.

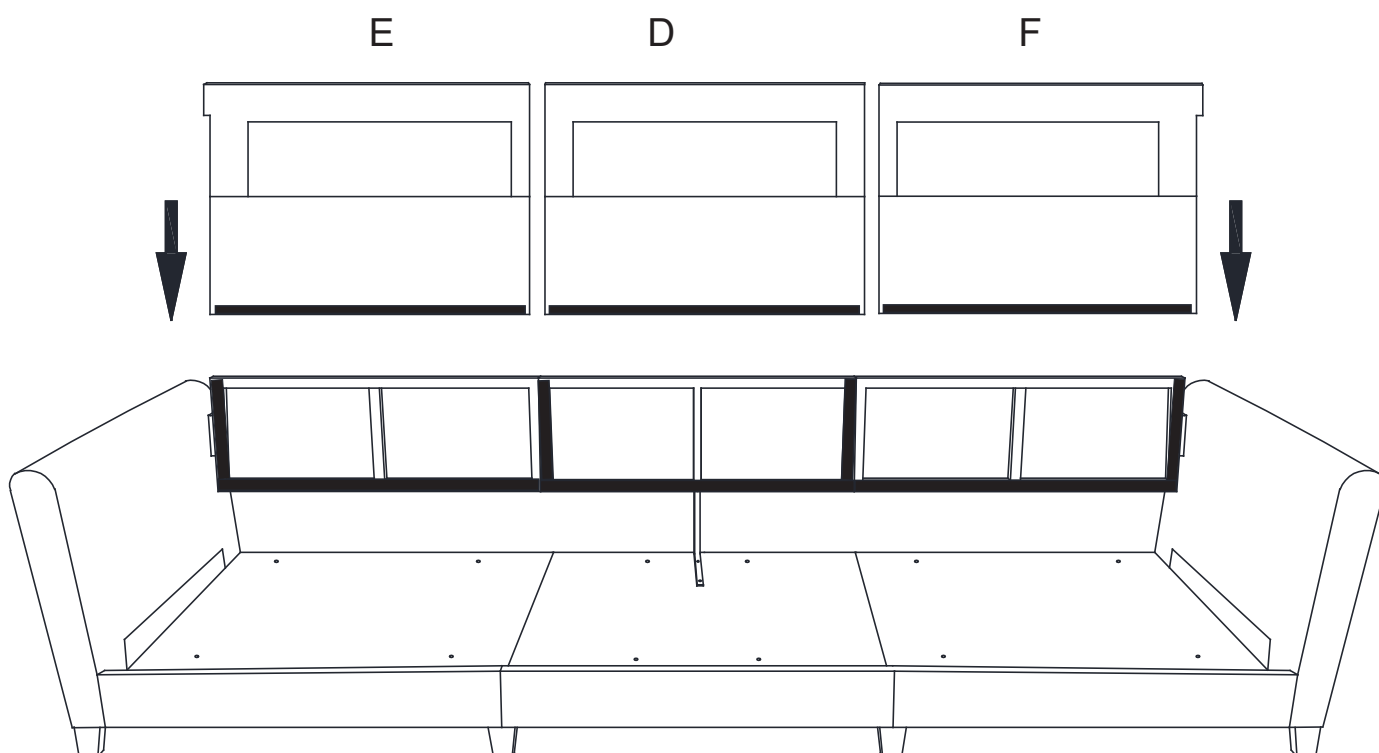


Step 11: The back strap velcro is attached to the back frame.

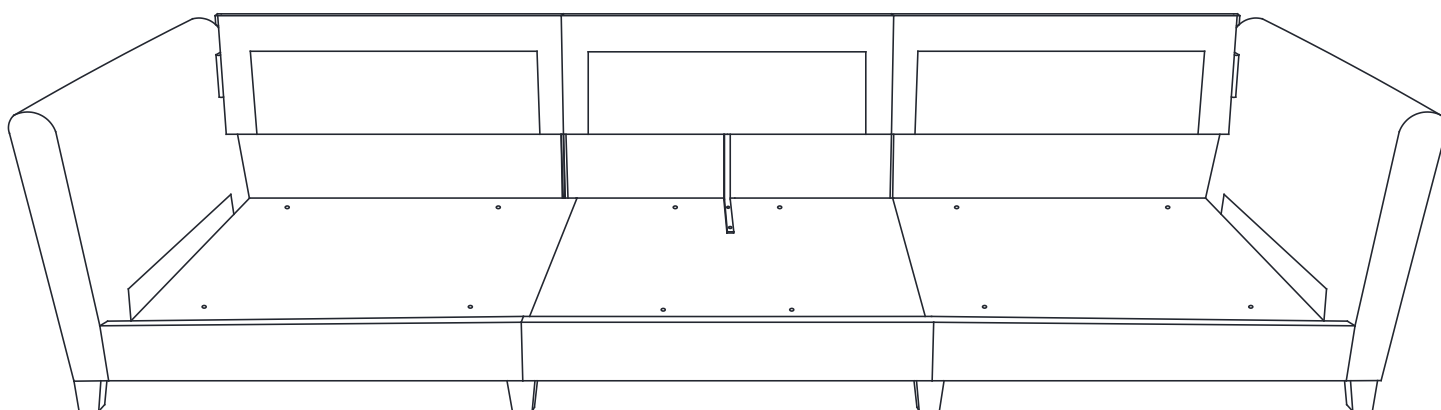


Assemble the Ottoman

Sept 12: Assemble the sofa seat frame according to the above steps. Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.


(1): Assemble the Wooden strip (R) to the 2 pcs Front board (O)

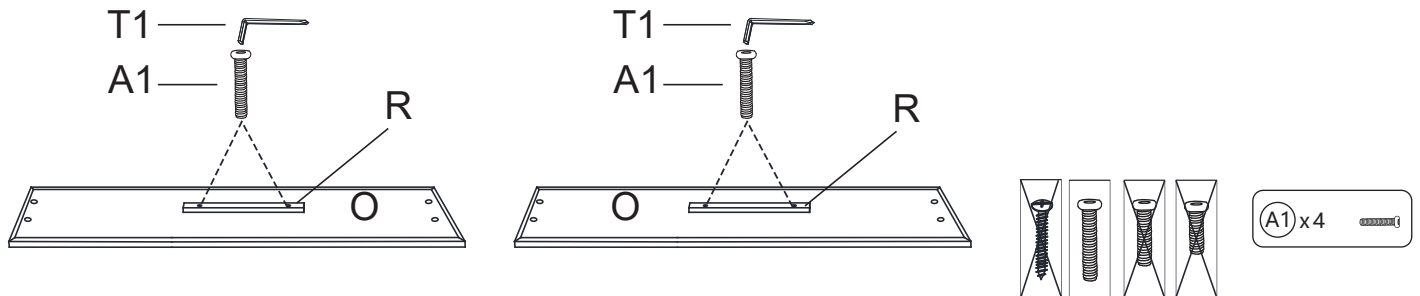


(2): Assemble the Connector (W) to the 2pcs Ottoman board (Q)

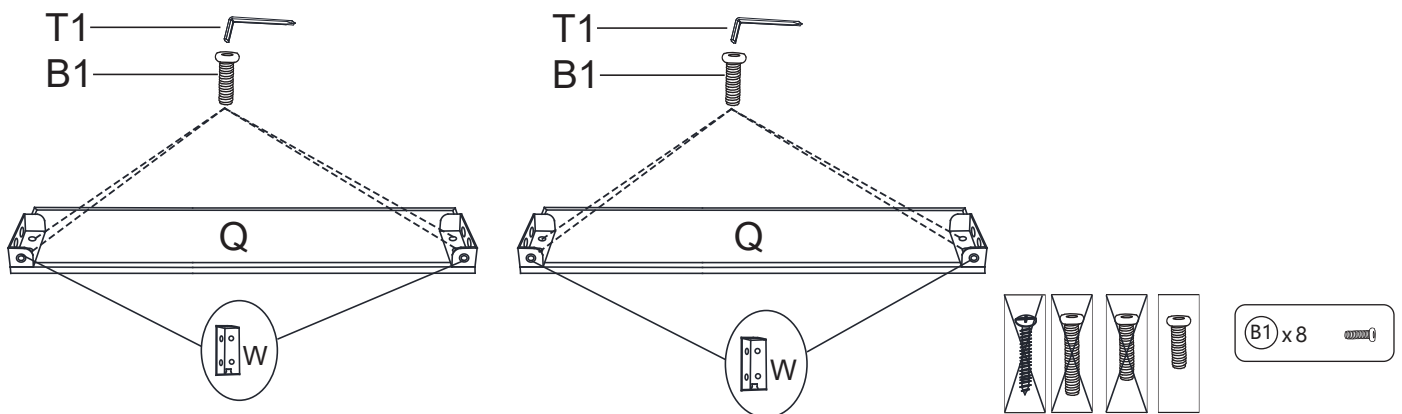


(3): Assemble the Ottoman board (Q) with Connector (W) to the Front board (O) with Bolt (B1) and Alley key (T1).

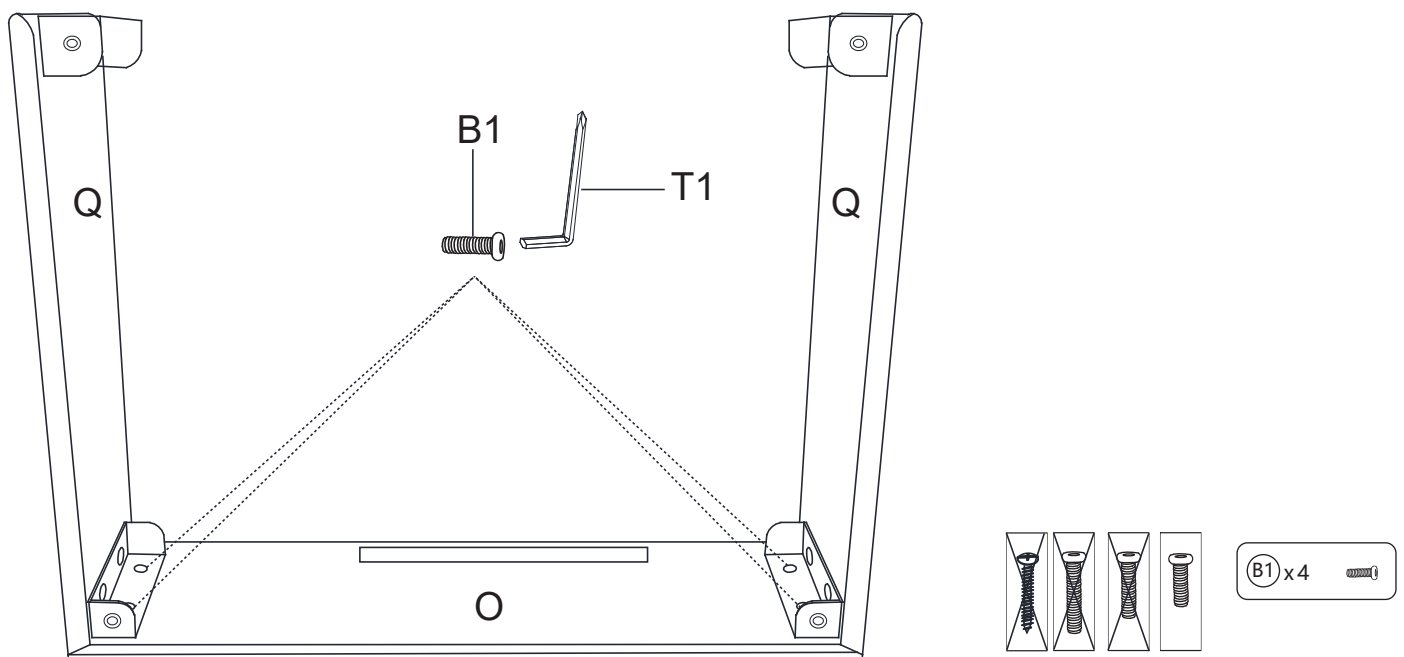


(4):Assemble the Ottoman board (Q) with Connector (W) to the Front board (O) with Bolt (B1) and Alley key (T1).

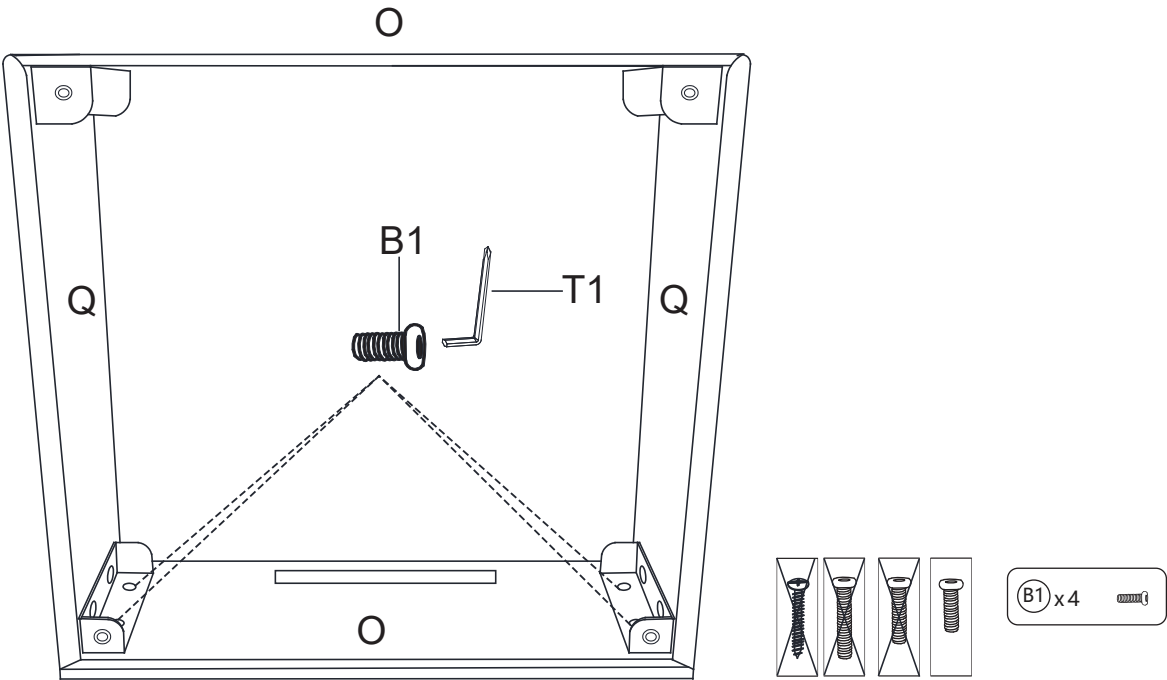

Sept 13:Screw the Supporting feet (Y) and Gaskets (Z) like below picture.

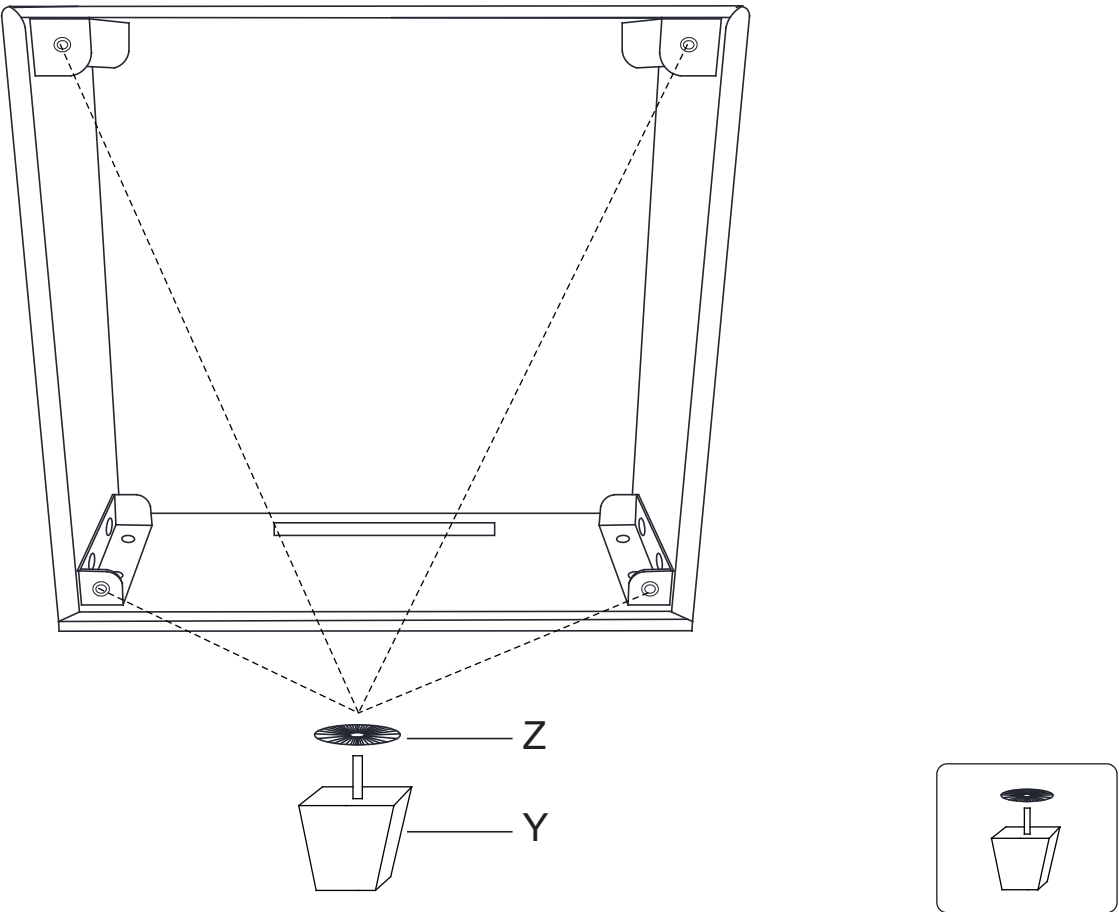


Sept 14:Put the Ottoman seat (U) to the frame.

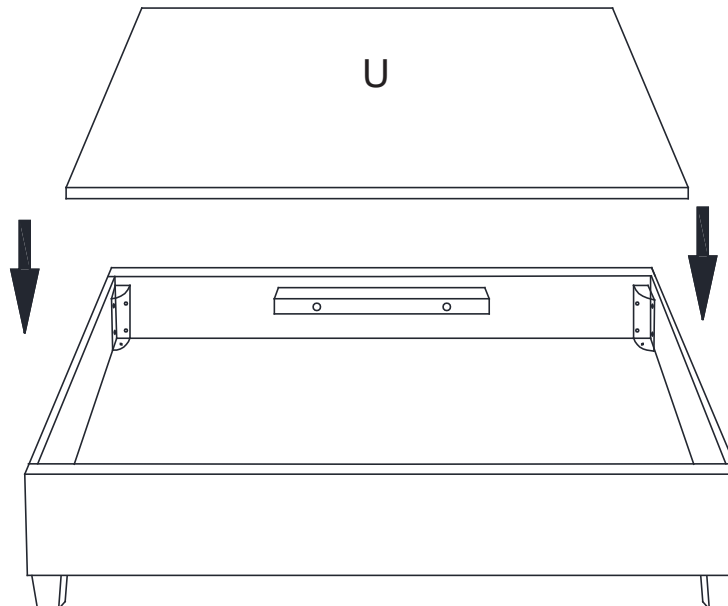


Step 15:The cushions is packaged by vacuum compression.After cuttingthe package, it rebounds quickly within 4 hours.If the fabric has wrinkesit will basically disappear after standing for 72 hours



Give them 24-72h to recover

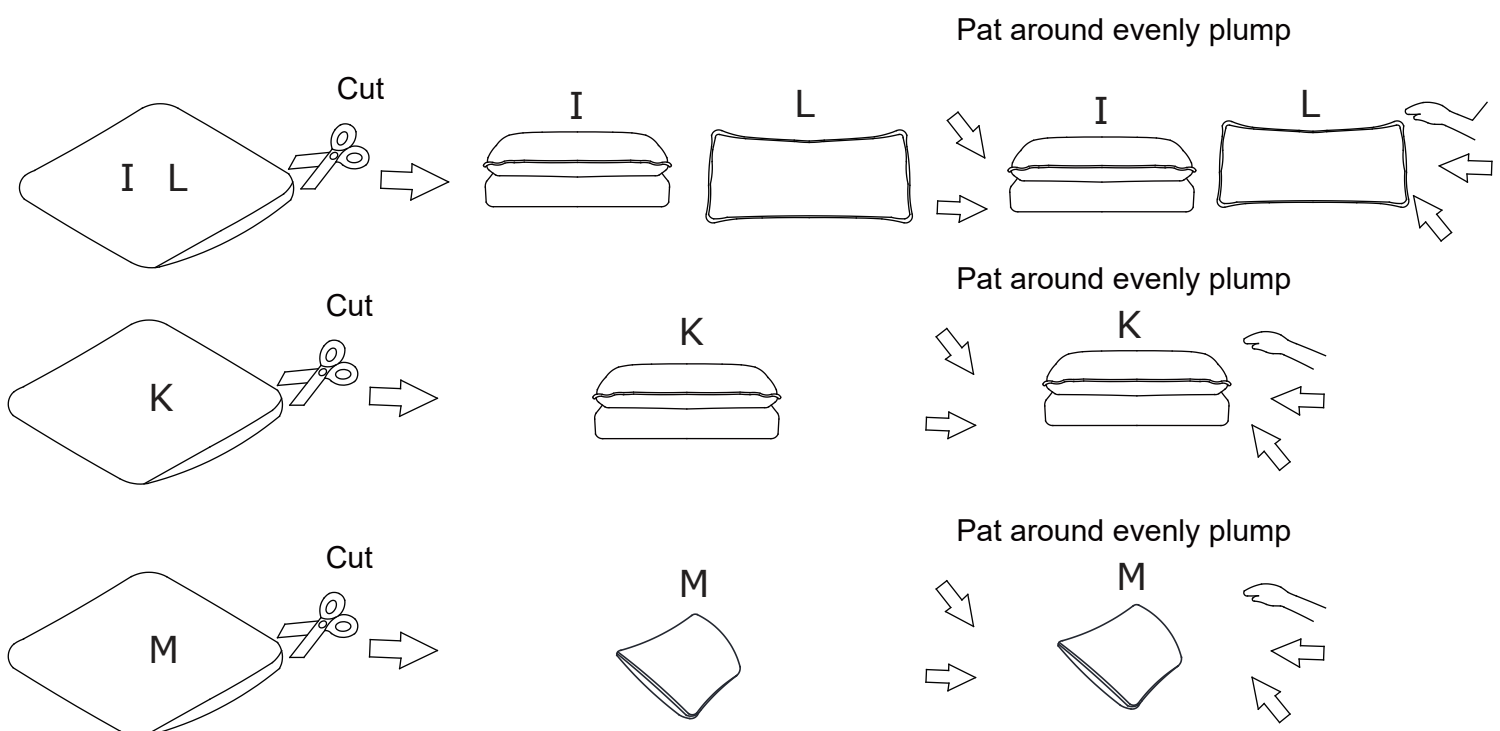


Sept 16:Place the seat cushion (I) Ottoman cushion (K) Back cushion (L) on the sofa as shown in the figure.

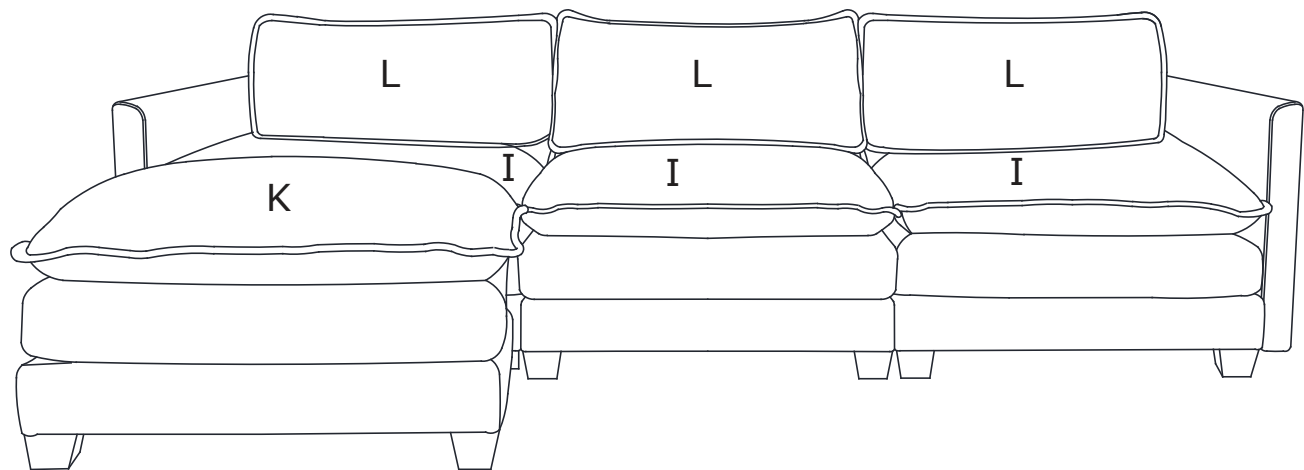


Sept 17:Place the armrest bag (M) on the sofa as shown in the figure.

Box A + Box B


Completed!

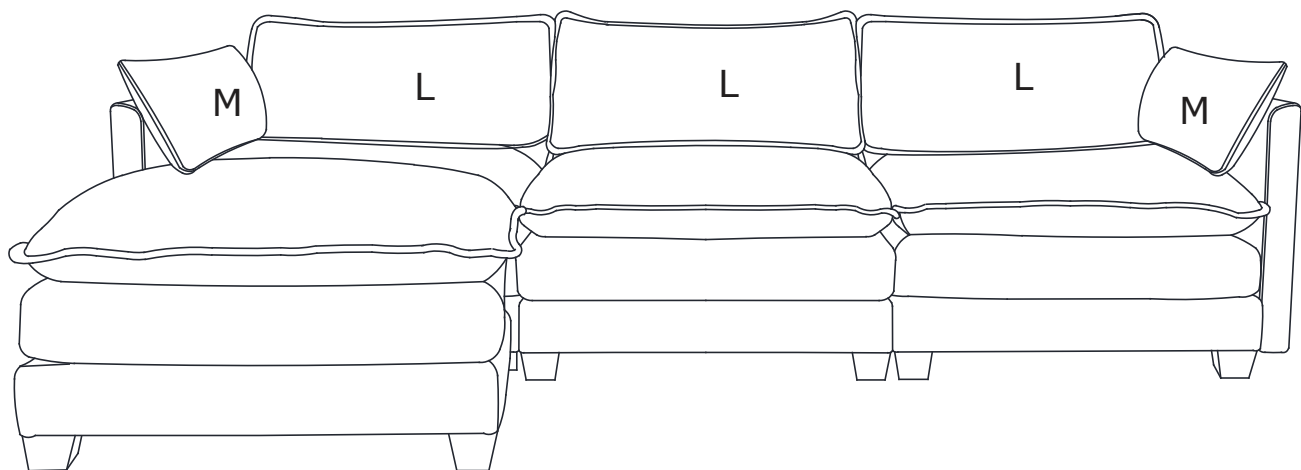


Box B

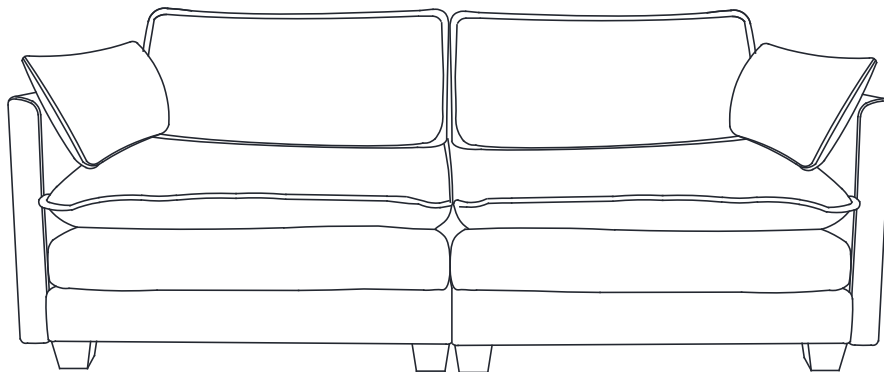

Box A + Box B

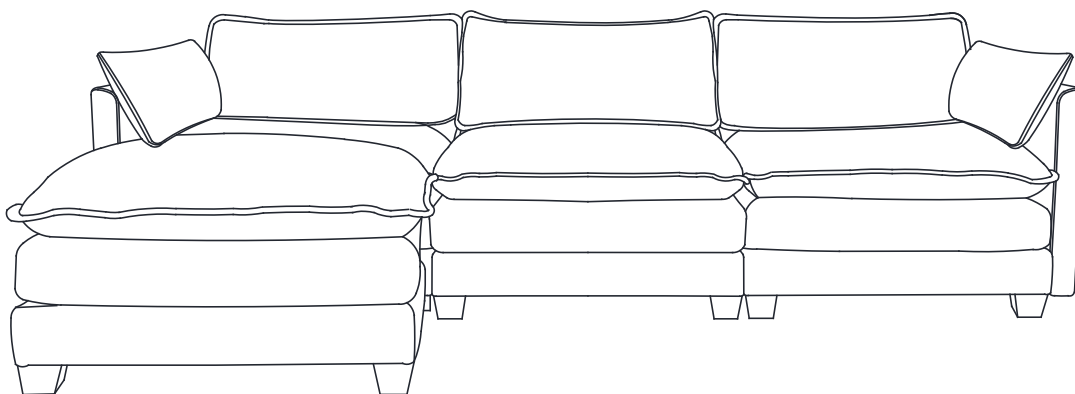

Box A*2 + Box B

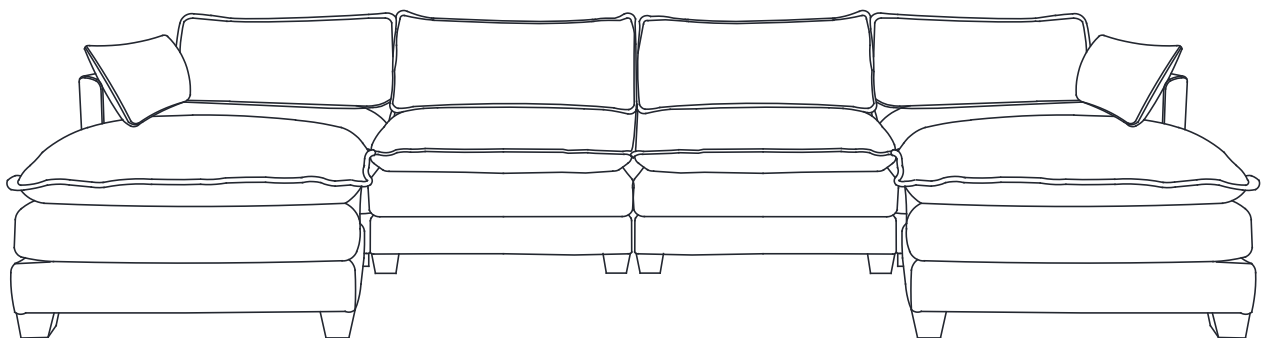


INSTRUCTIONS


If you buy a loveseat,pls assemble as below

Sept 1:Assemble the sofa seat frame according to the above steps.Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.


(1):Assemble the Wooden strip (R) to the 2 pcs Back board (P) and 2 pcs Front board (O)

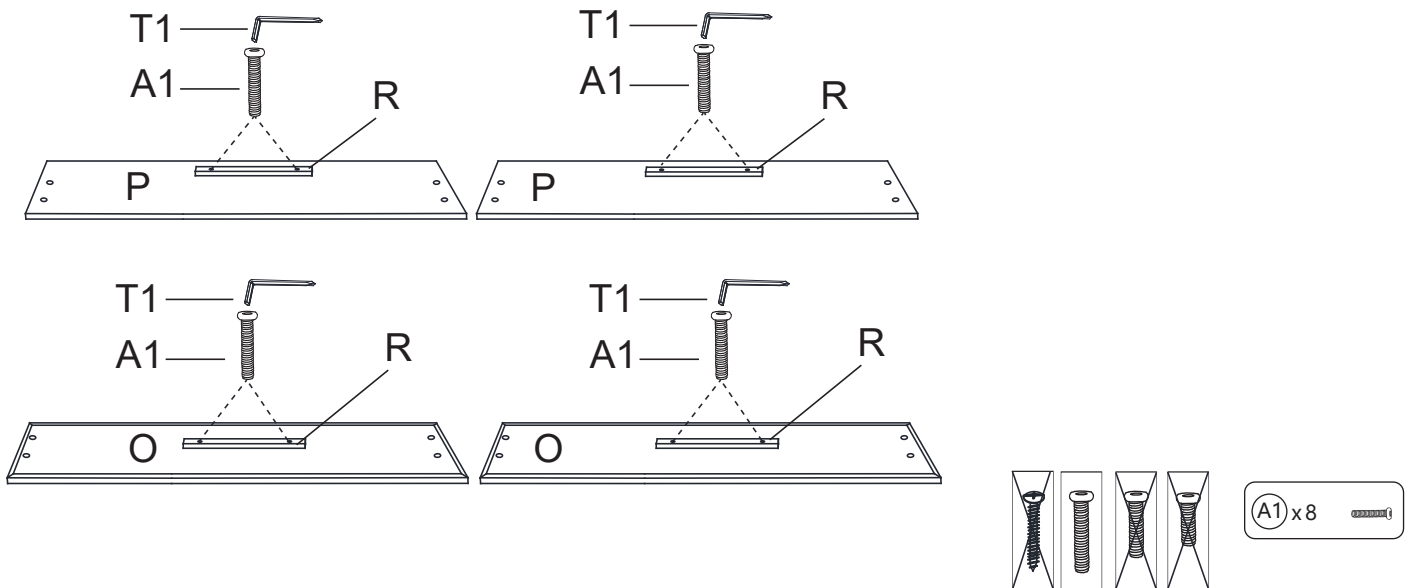



(2):Assemble the Connector (W) to the Back board (P).

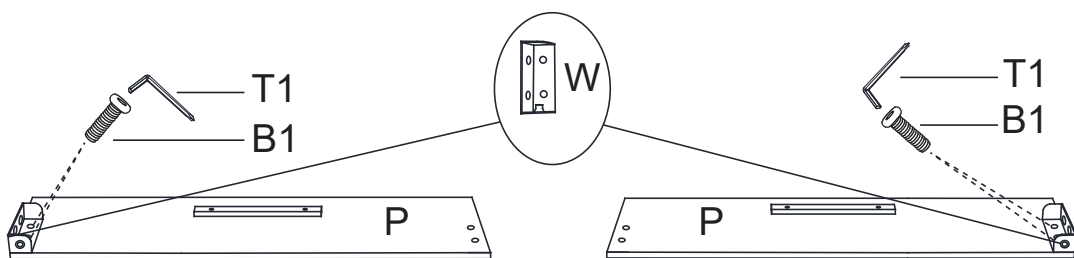

(3):Assemble the Connector (W) to the Front board (O).


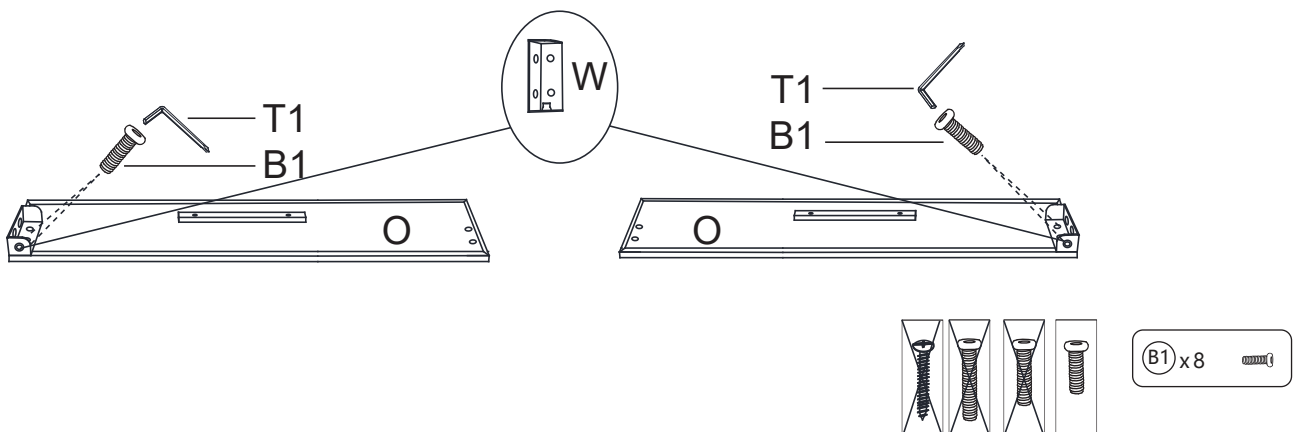


(4): Assemble the Iron strip (V) to the Front board (O).

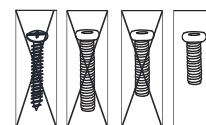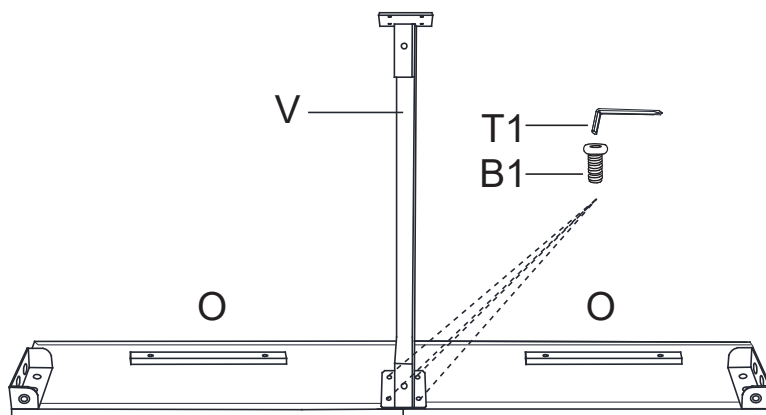



(B1) x4

(5): Assemble the Iron strip (V) to the Back board (P).

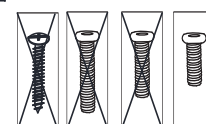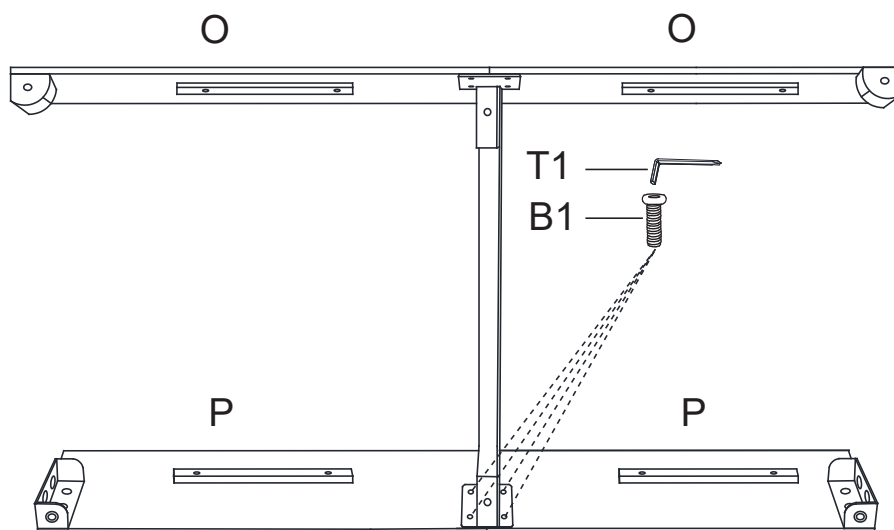


(B1) x4

Sept 2: Assemble the Left Armrest (G) and the Right armrest (H).

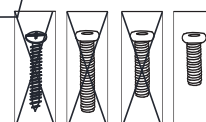
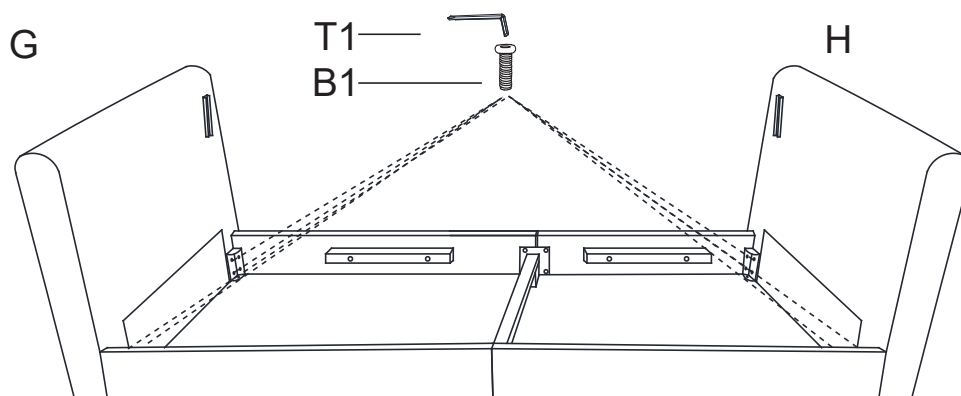


(B1) x8


Step 3: Put the Side seat (S) to the frame.

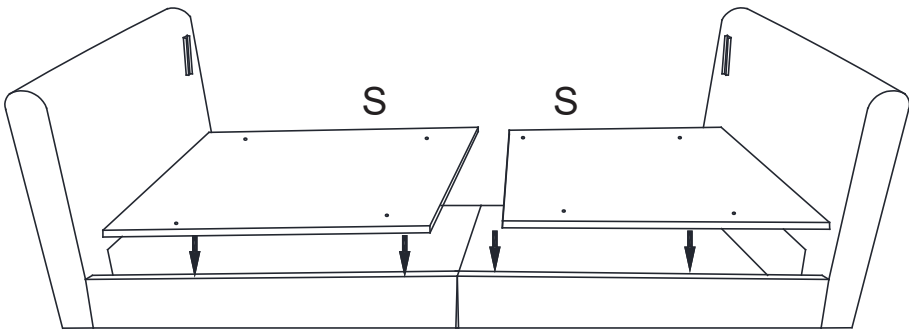


Step 4: Assemble the Side seat (S) to the Front board (O) and the Back board (P).

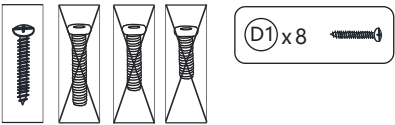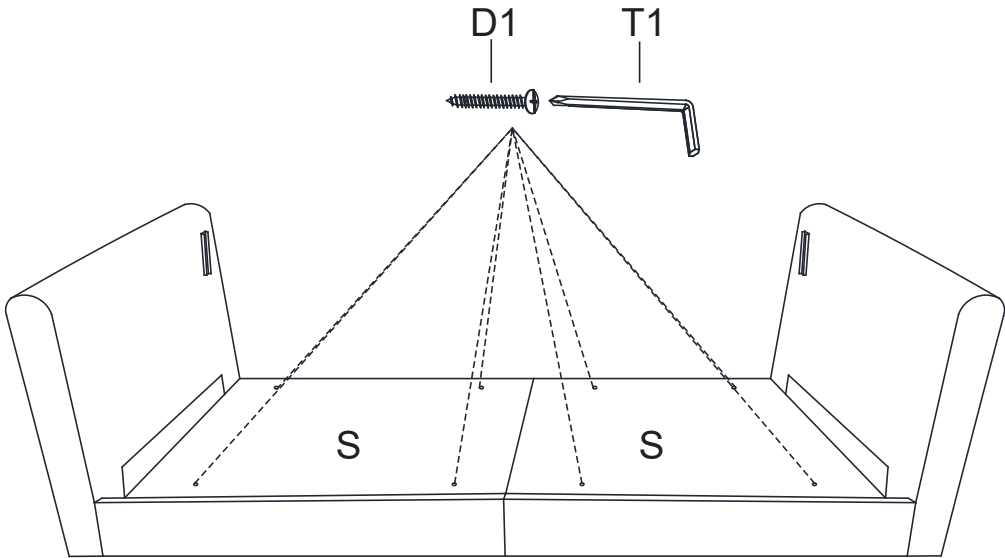


Step 5: Put the Iron connector (N) into the the Left backrest (B).

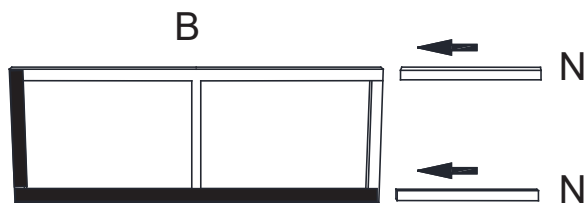


Step 6: Connect the Left backrest (B) into the Right backrest (C) and then use the bolts (C1) to screw.

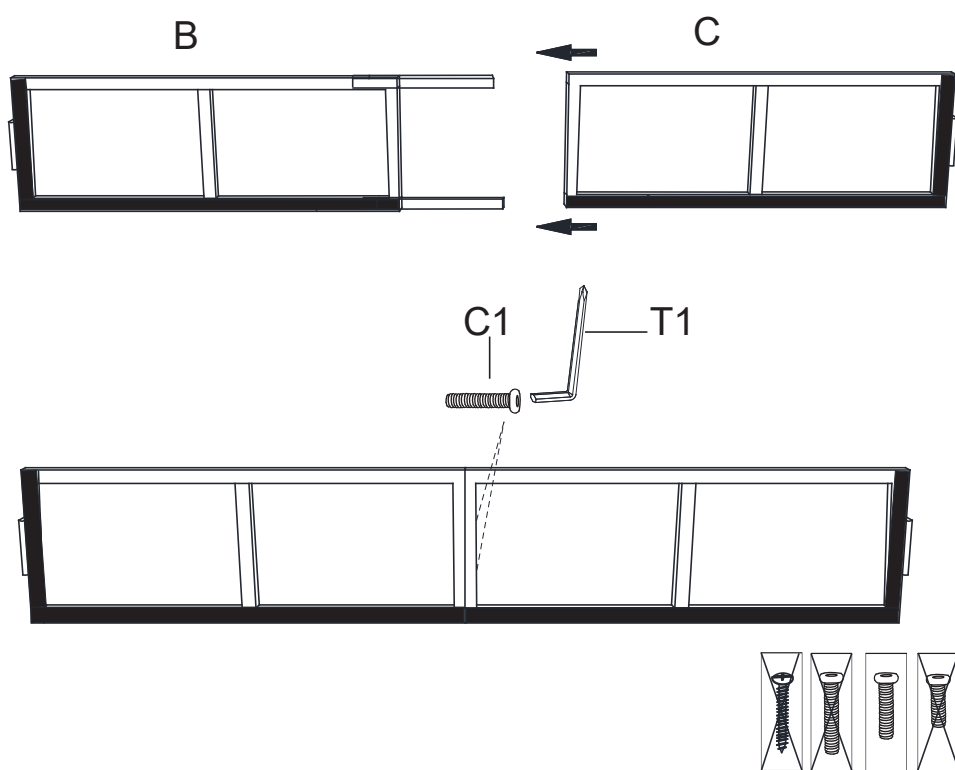


Step 7: Insert the assembled backrest into the handrail.

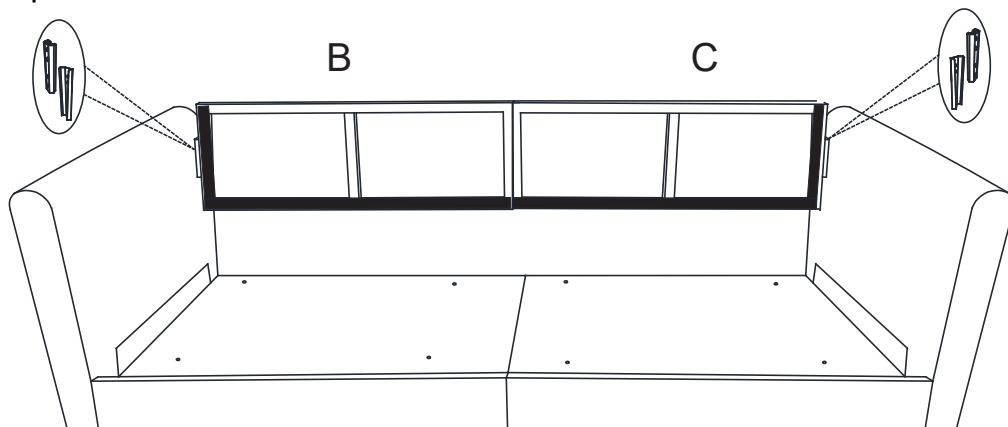


Step 8: Screw the Supporting feet (Y) and Gaskets (Z) like below picture.

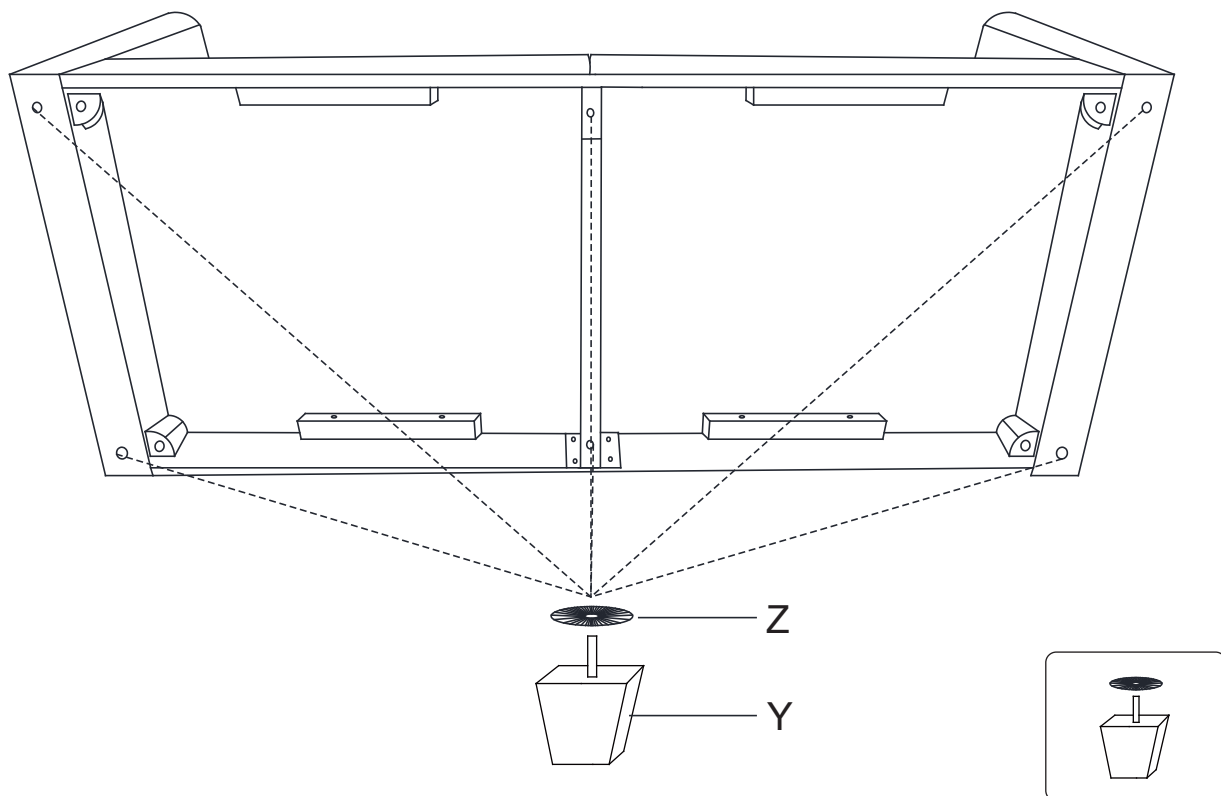

Step 9: Put the Left cover (E), Right cover (F) to the back like below picture.

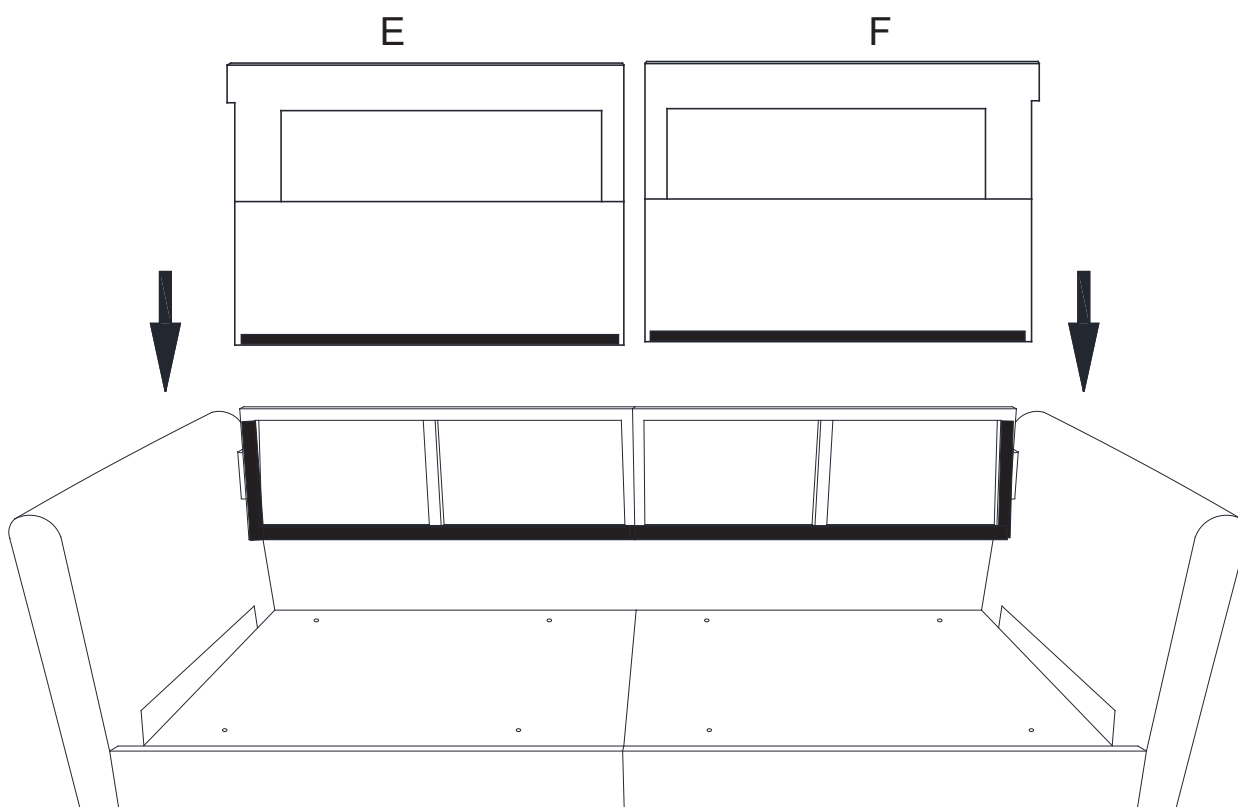


Step 10: The back strap velcro is attached to the back frame.

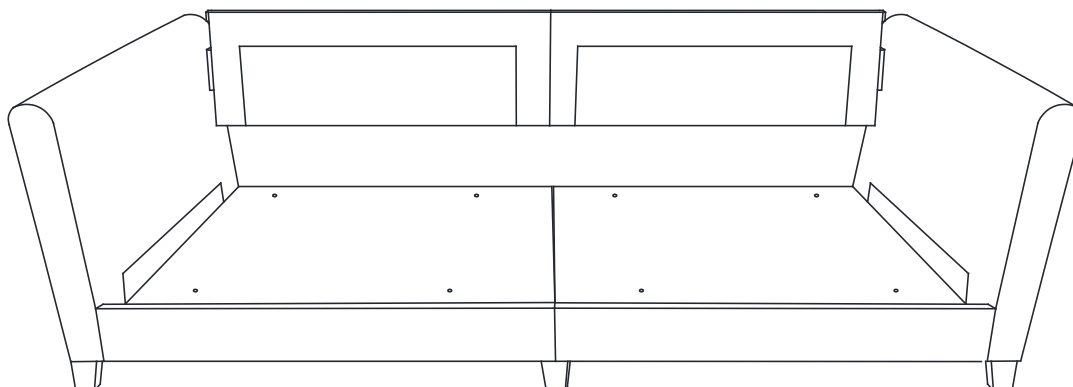


Step 11: The cushions are packaged by vacuum compression. After cutting the package, it rebounds quickly within 4 hours. If the fabric has wrinkles, it will basically disappear after standing for 72 hours.



Give them 24-72h to recover

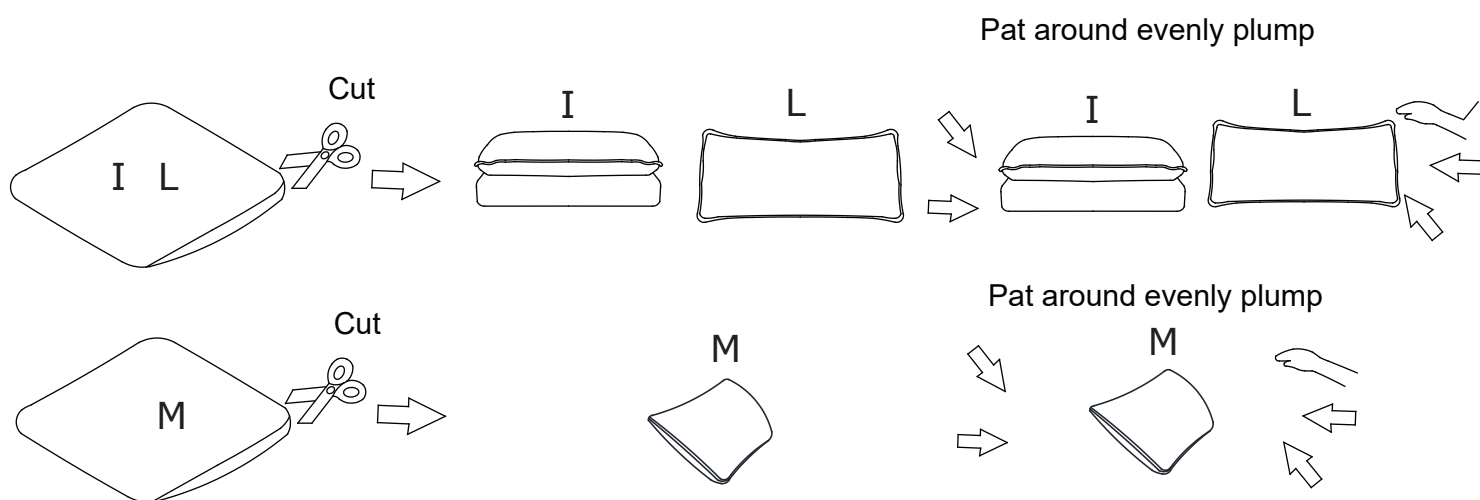


Sept 12:Place the seat cushion (I) Back cushion (L) on the sofa as shown in the figure.

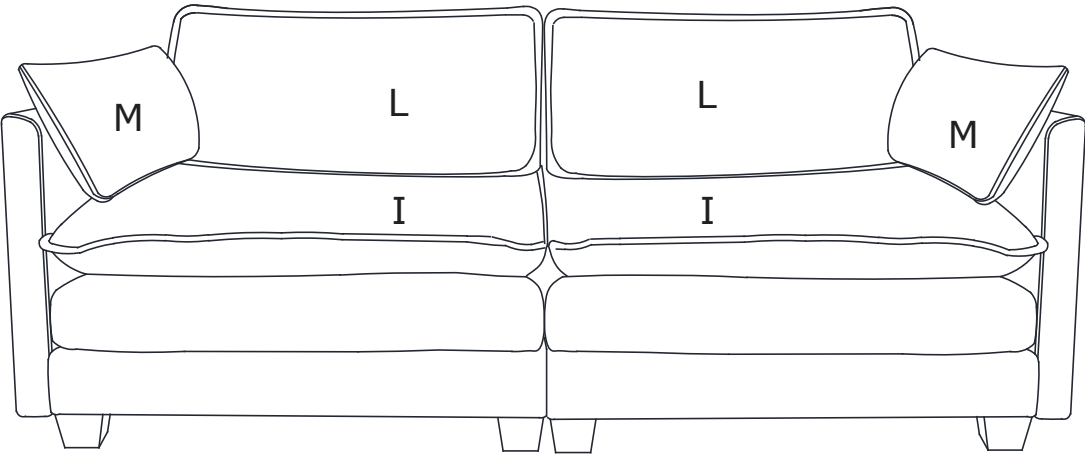

Box B

Completed!

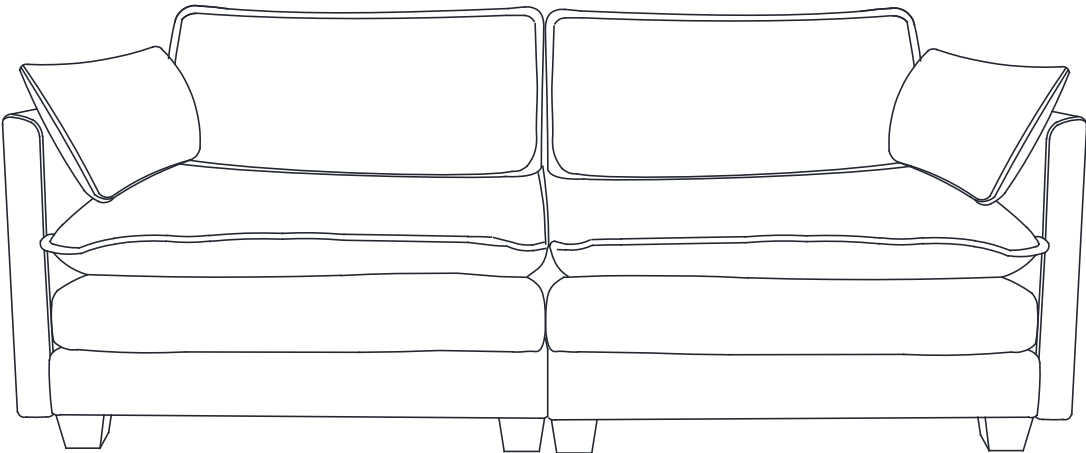


ASSEMBLY INSTRUCTIONS


If you buy a U shaped sofa,pls assemble as below

Sept 1: Assemble the sofa seat frame according to the above steps. Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.


(1): Assemble the Wooden strip (R) to the 4 pcs Back board (P) and 4 pcs Front board (O)

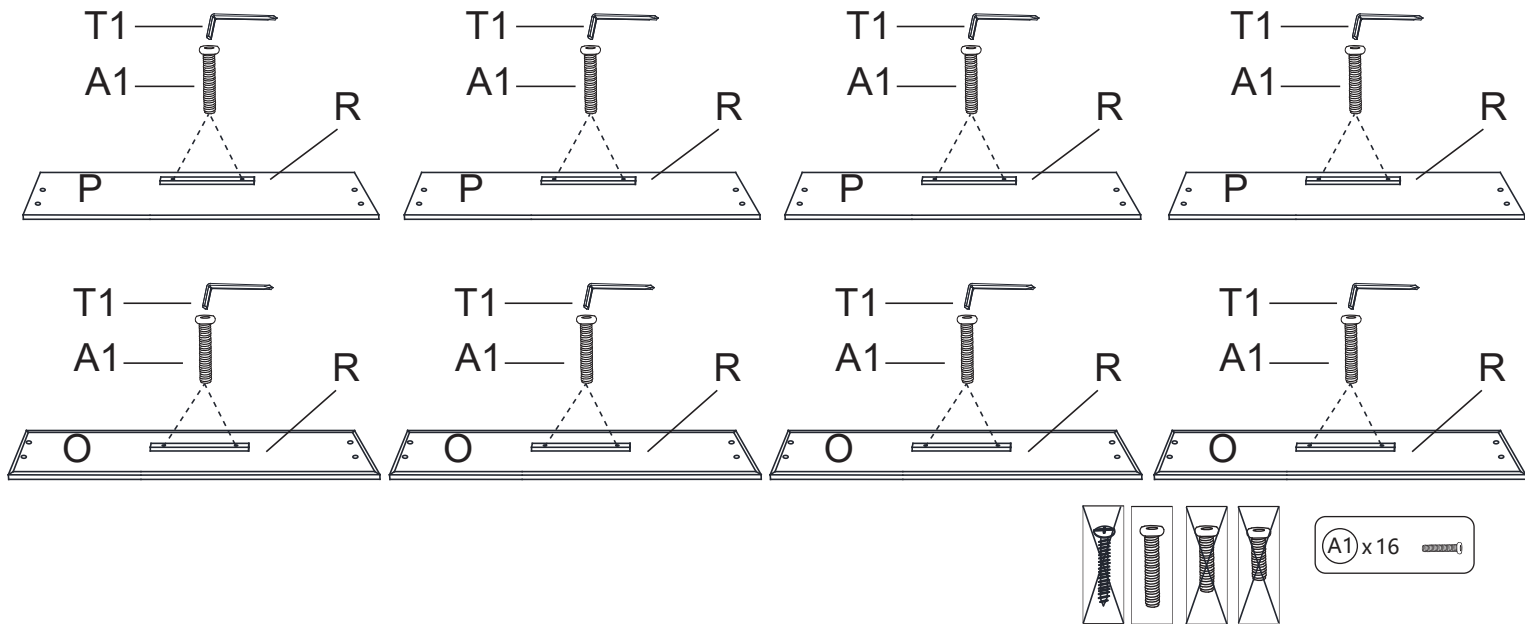


(2): Assemble the Connector (W) to the Back board (P).

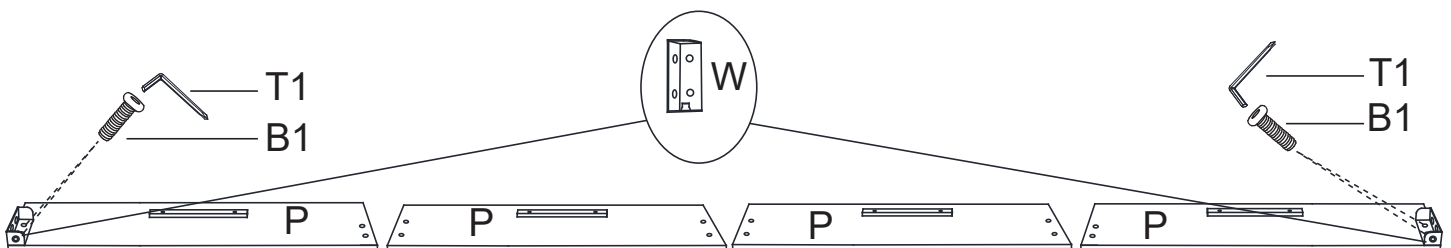


(3): Assemble the Connector (W) to the Front board (O).

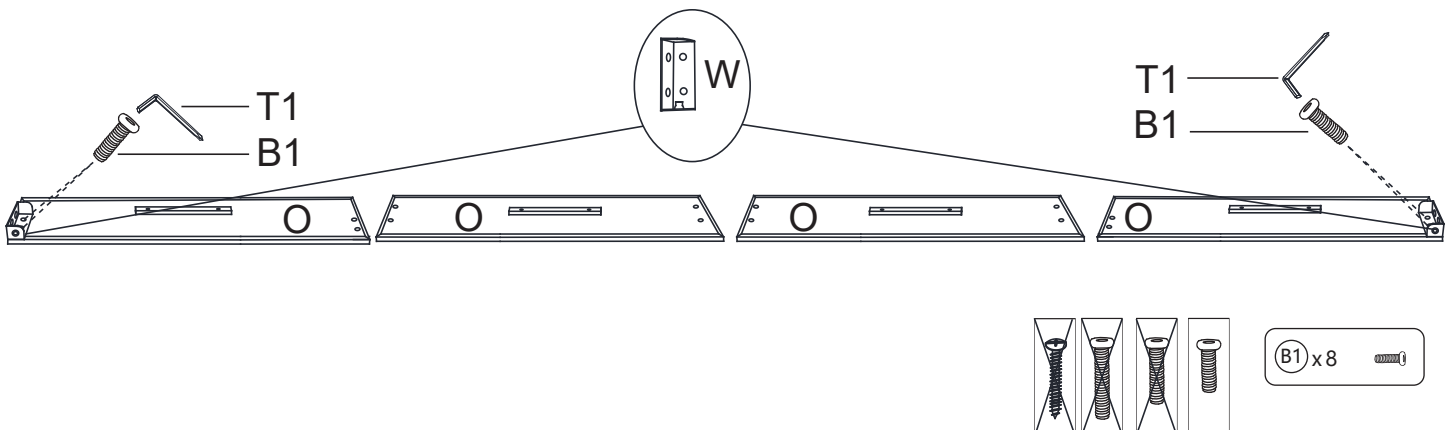


(4):Assemble the Iron strip (V) to the Front board (O).

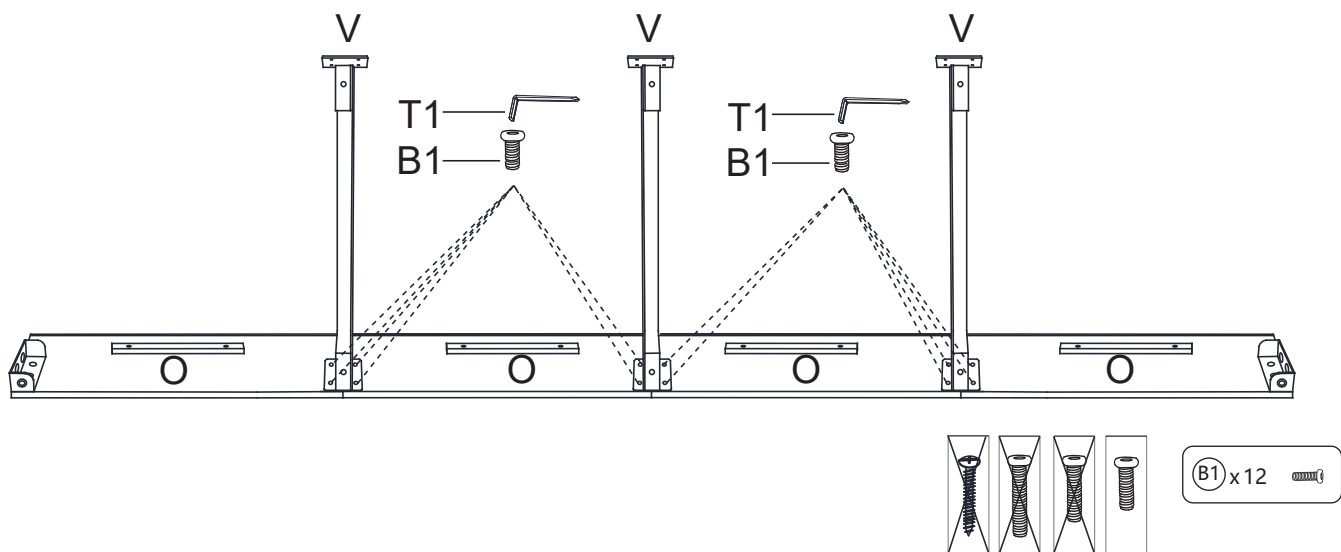


(5):Assemble the Iron strip (V) to the Back board (P).

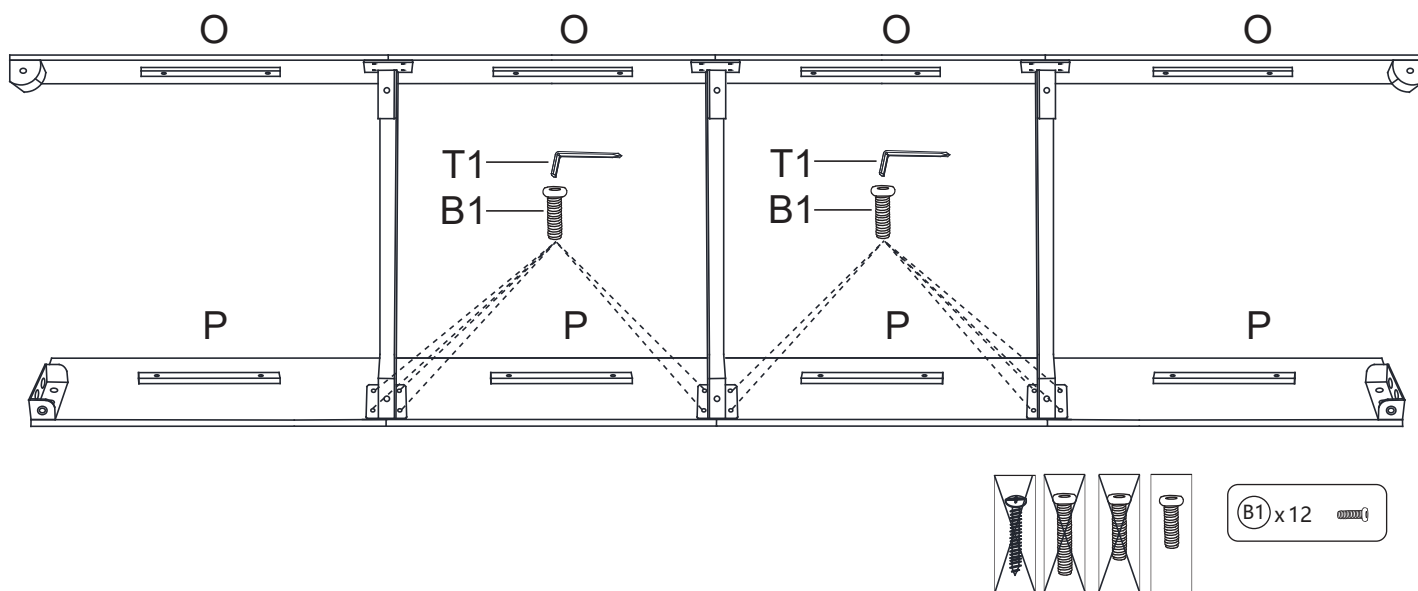


Sept 2:Assemble the Left Armrest (G) and the Right armrest (H).

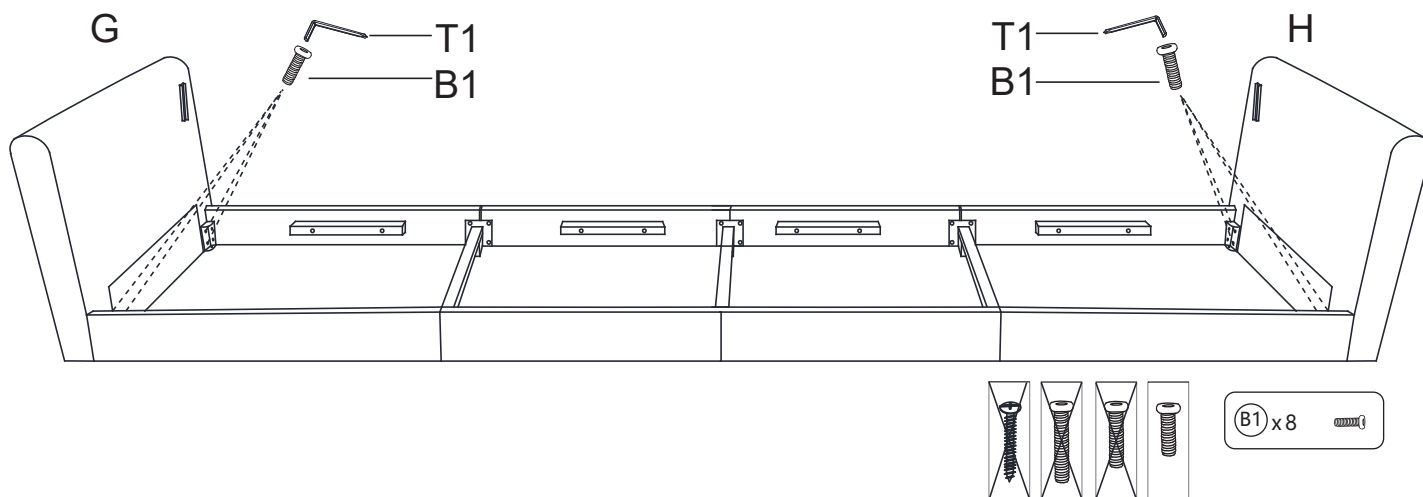


Step 3: Put the Middle seat (T) and the Side seat (S) to the frame.

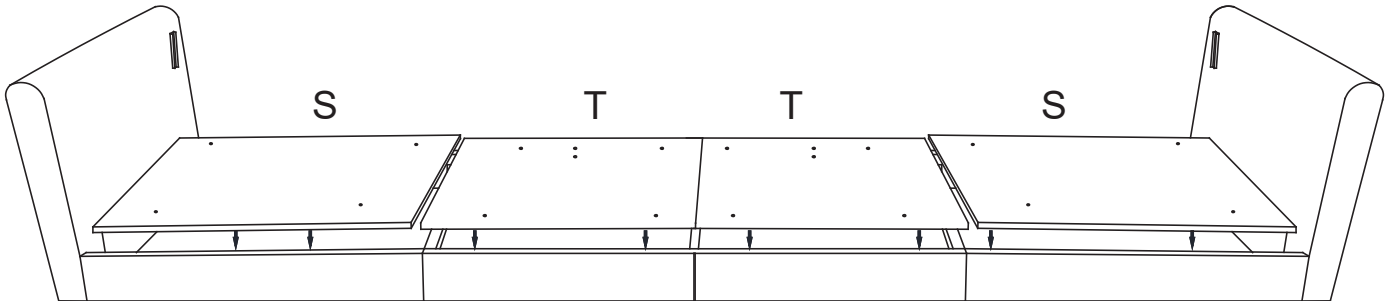


Step 4: Assemble the Middle seat (T) and the Side seat (S) to the Front board (O) and the Back board (P).

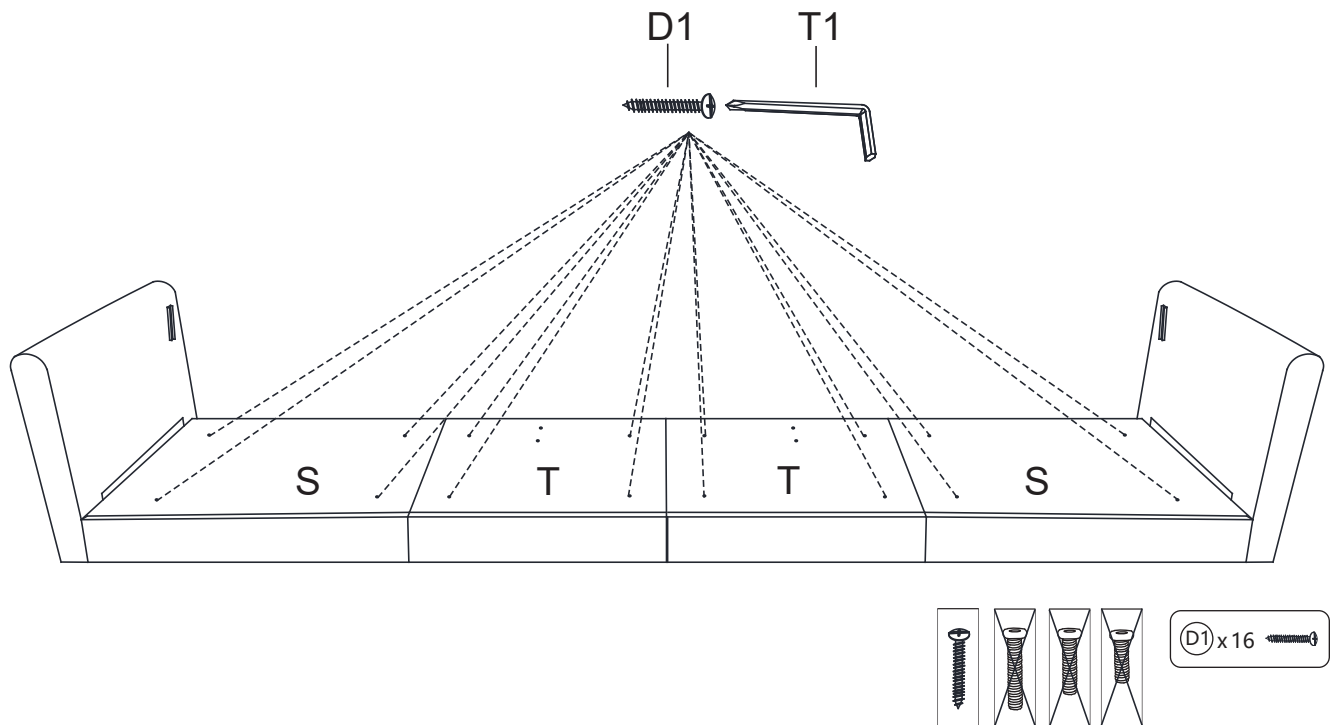


Step 5: Put the Iron connector (N) into the the Middle backrest (A).

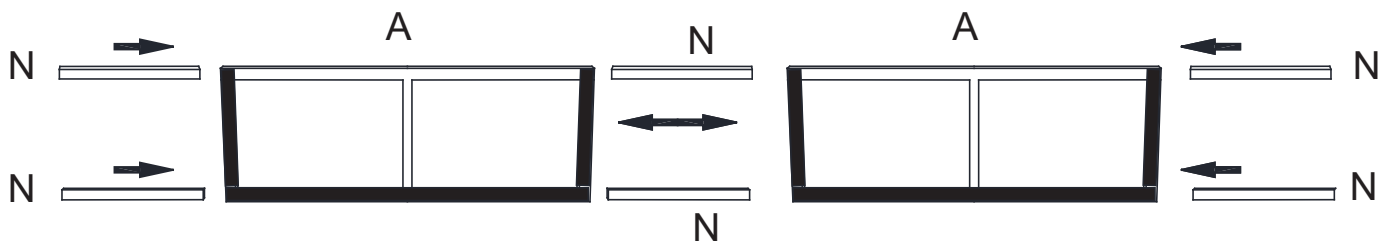


Step 6: Connect the Left backrest (B) and Right backrest (C) into the Middle backrest (A) and then use the bolts (C1) to screw.

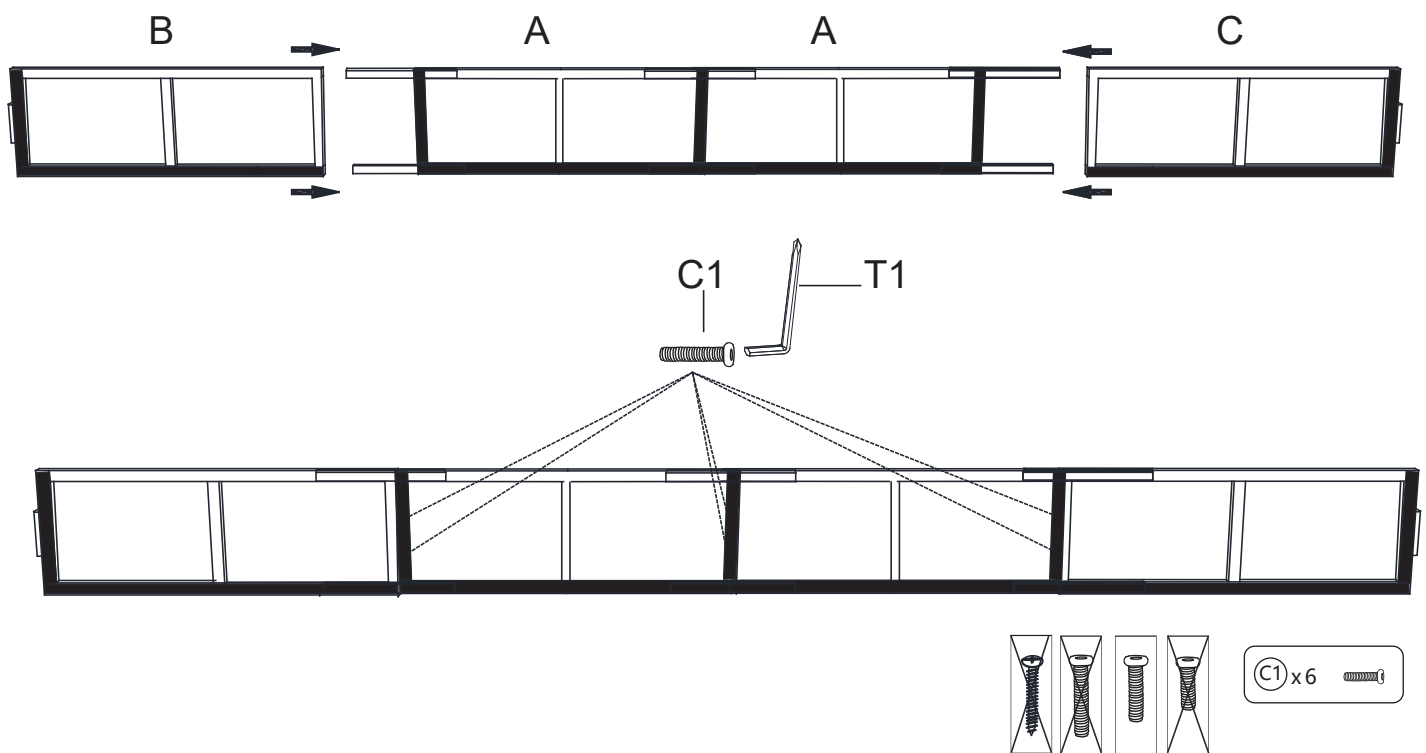


Step 7: Insert the assembled backrest into the handrail.

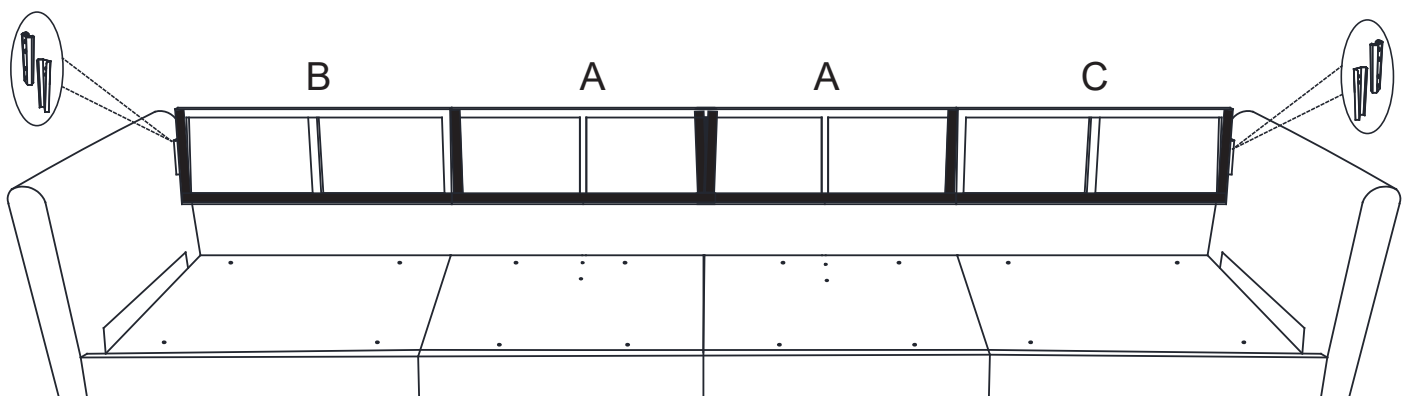


Step 8: Assemble the L connector (X) or to the Middle seat (T) and the Middle backrest (A) with Bolt (B1) and Alley key (T1).

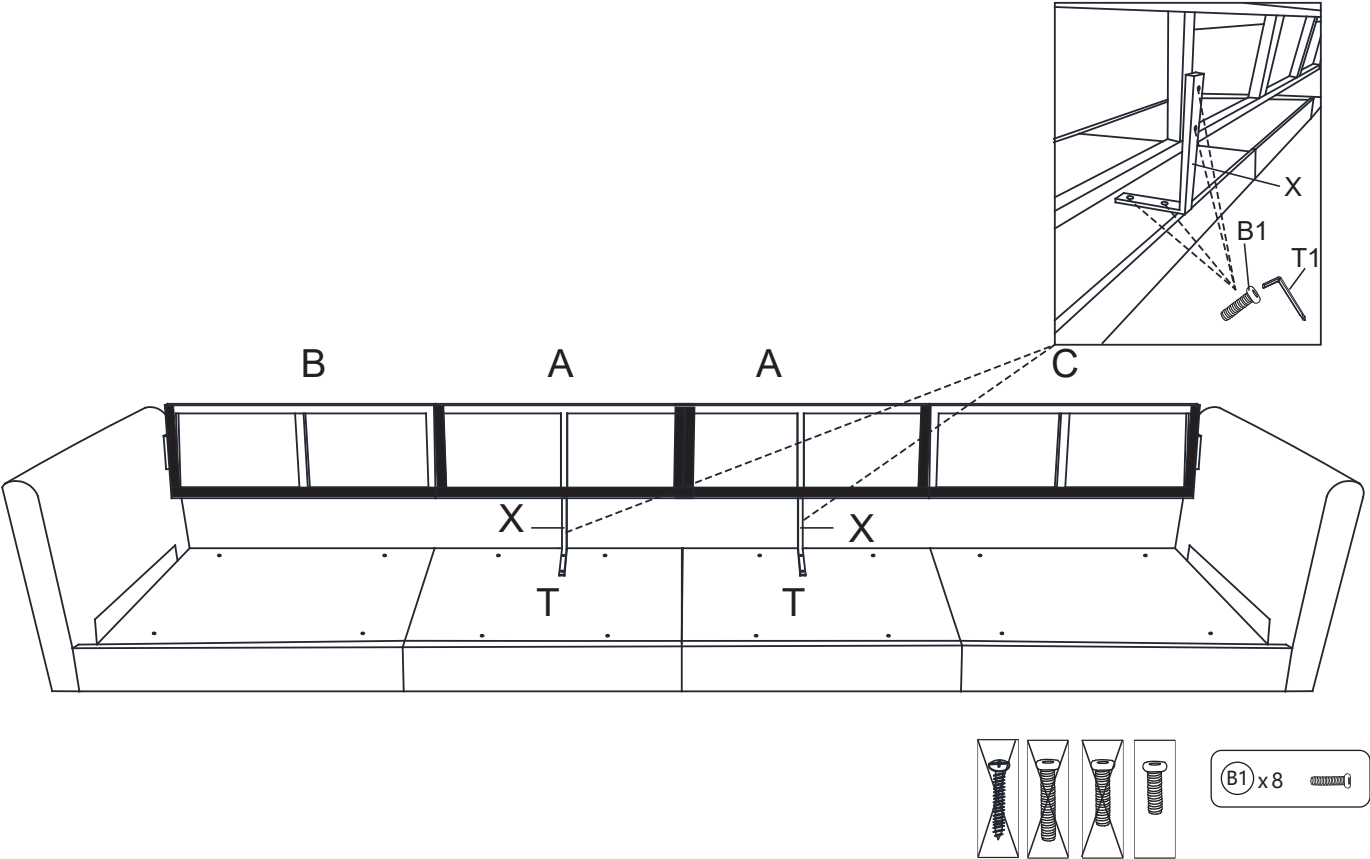


Step 9: Screw the Supporting feet (Y) and Gaskets (Z) like below picture.

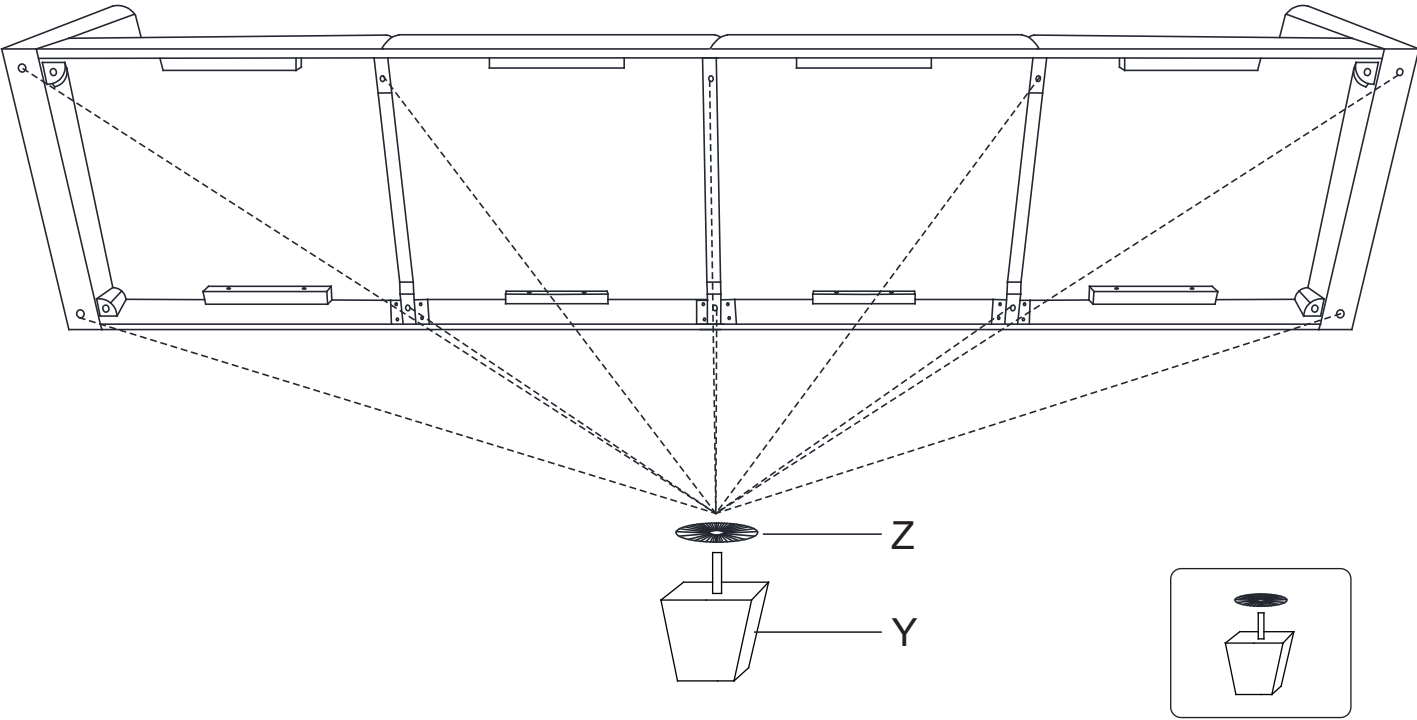

Step 10: Put the Left cover (E), Right cover (F), Middle cover (D) to the back like below picture.

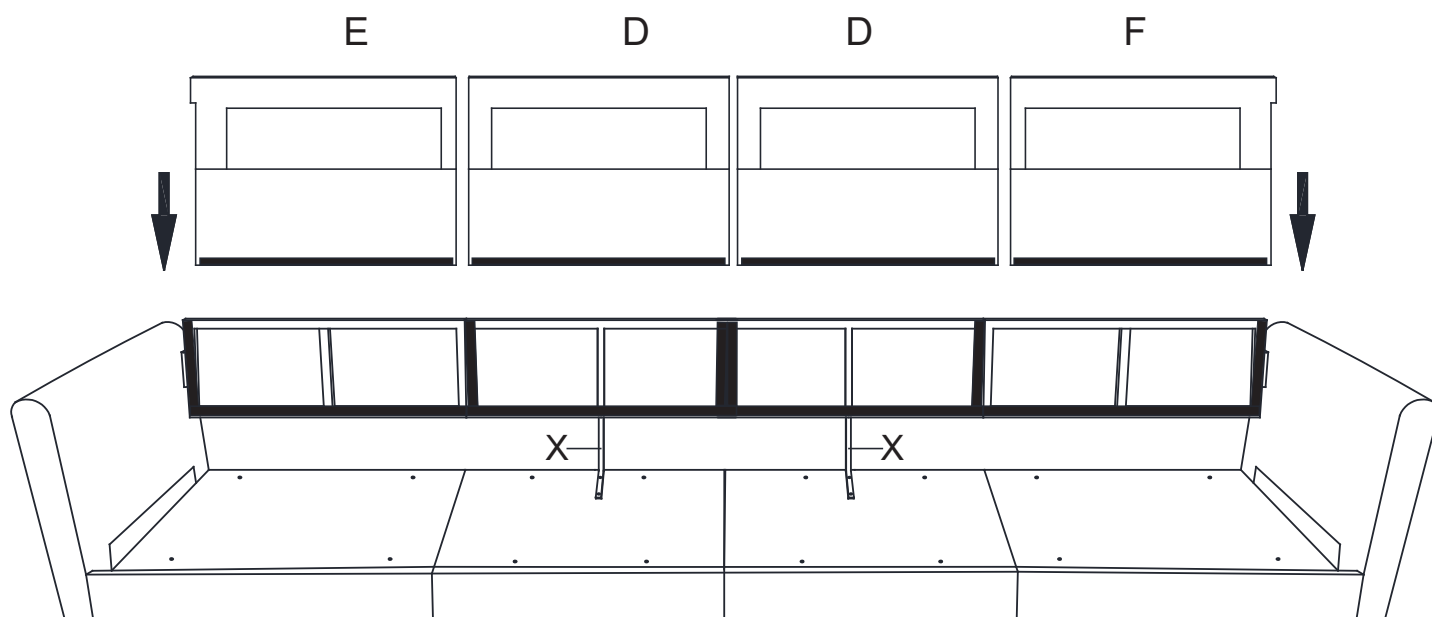


Step 11: The back strap velcro is attached to the back frame.

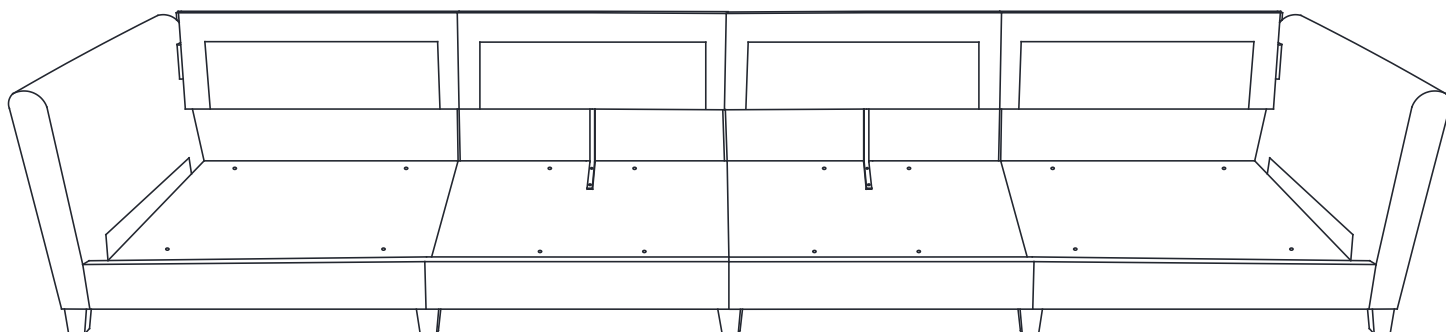


Sept 12: Assemble the sofa seat frame according to the above steps. Please make sure that the screws are 80% tightened in this step, and when all the screws of this sofa are installed in the holes, then lock one by one to 100%.


(1): Assemble the Wooden strip (R) to the 2 pcs Front board (O)

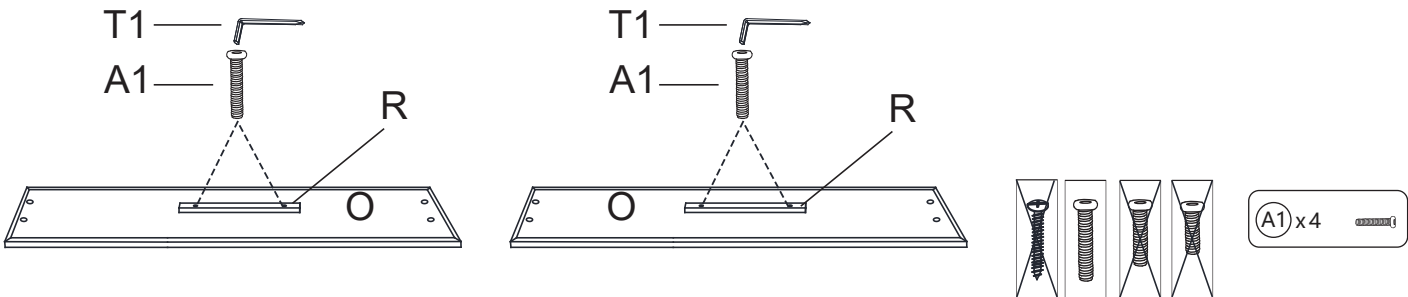


(2): Assemble the Connector (W) to the pcs Ottoman board (Q)

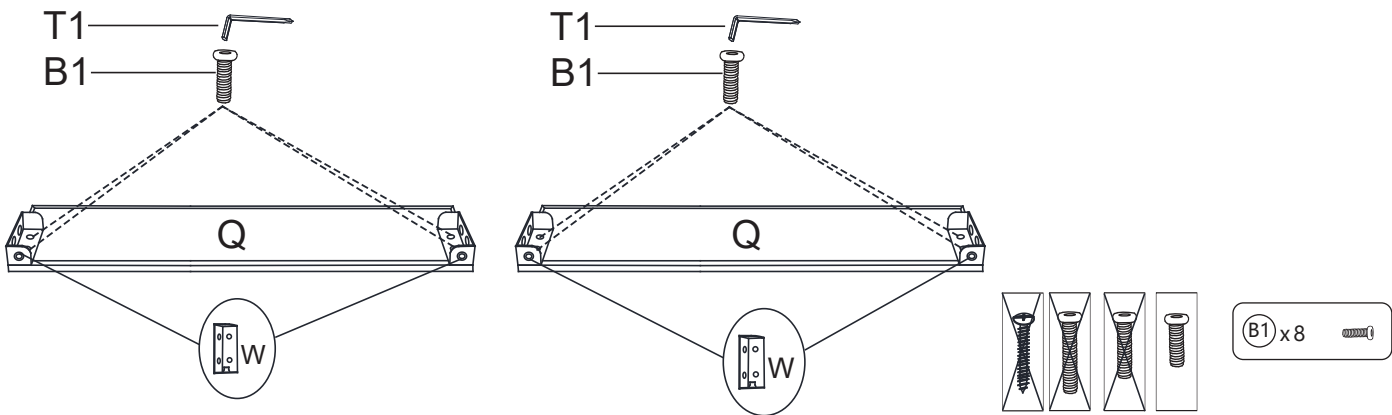


(3): Assemble the Ottoman board (Q) with Connector (W) to the Front board (O) with Bolt (B1) and Alley key (T1).

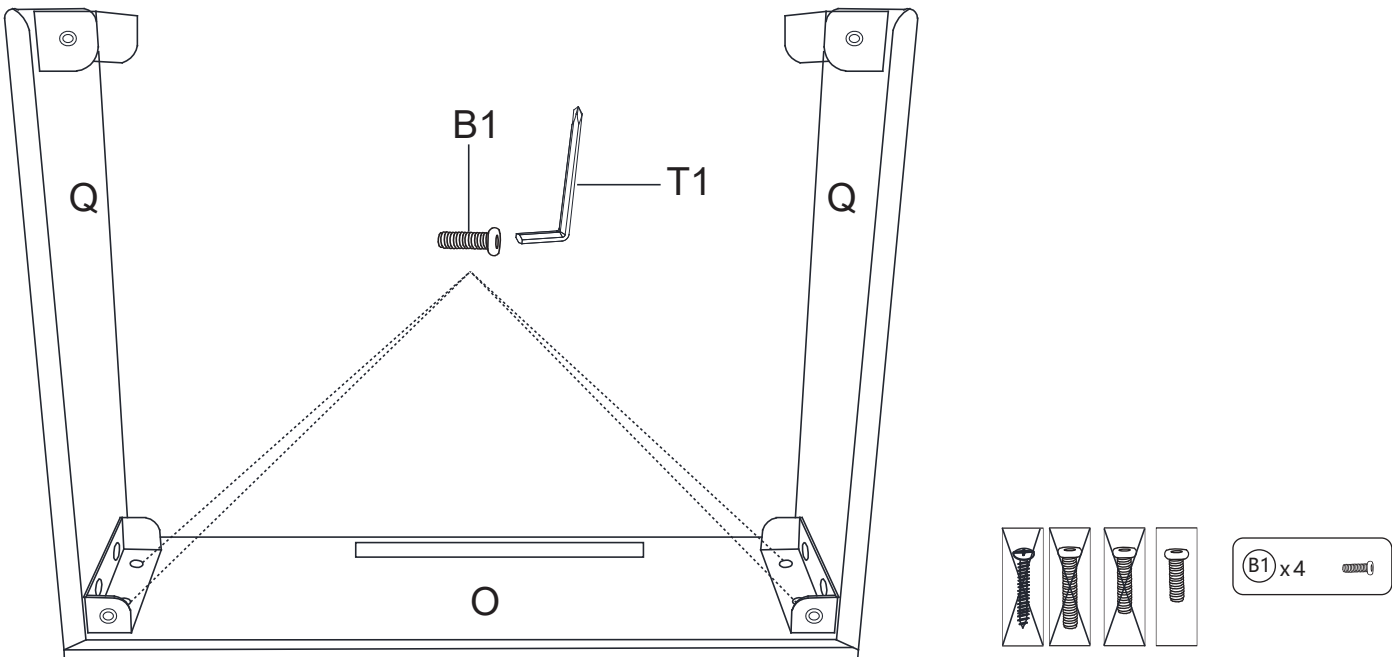


(4): Assemble the Ottoman board (Q) with Connector (W) to the Front board (O) with Bolt (B1) and Alley key (T1).

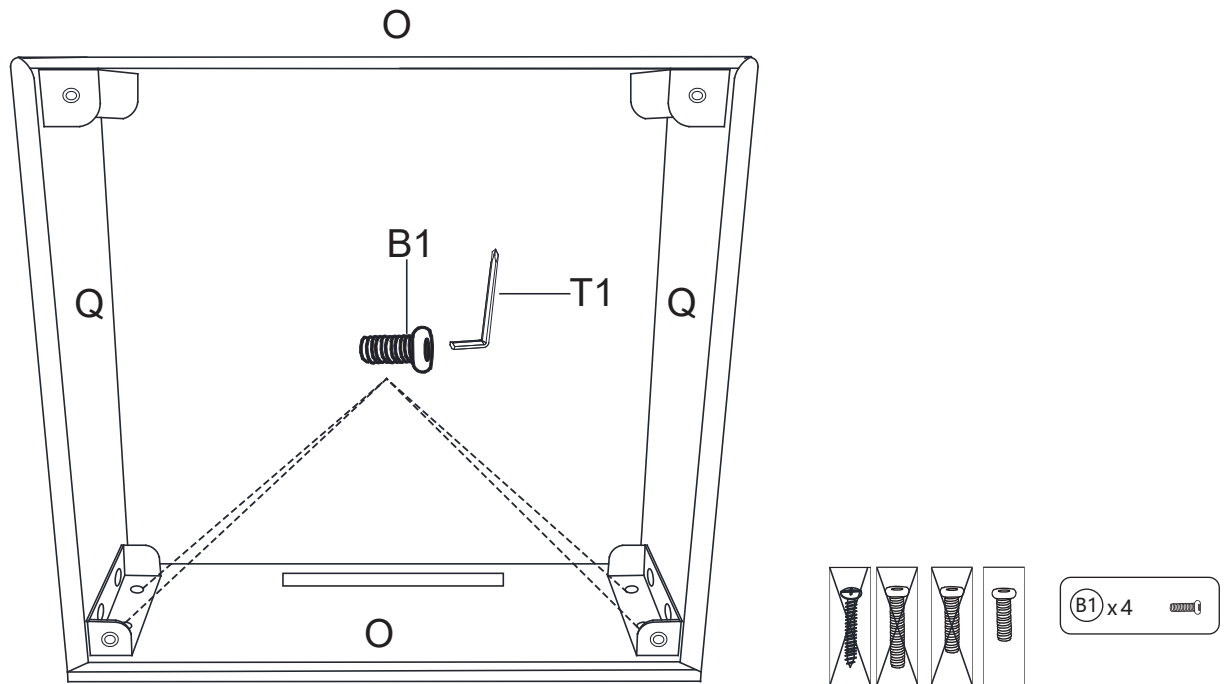

Sept 13: Screw the Supporting feet (Y) and Gaskets (Z) like below picture.

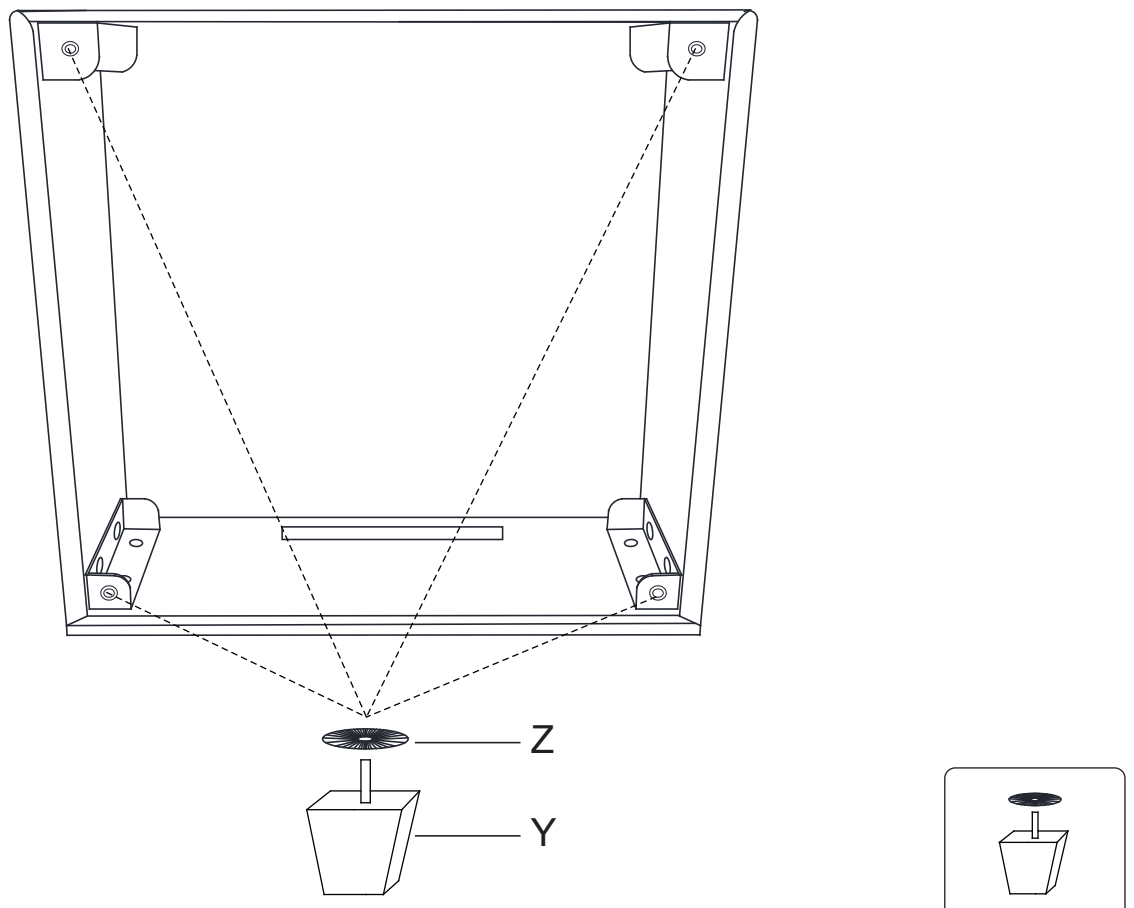


Sept 14:Put the Ottoman seat (U) to the frame.

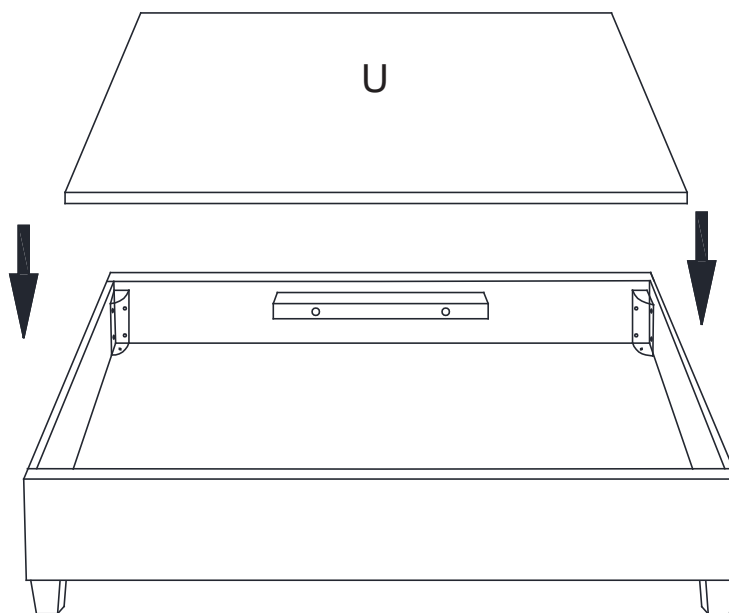


Step 15:The cushions is packaged by vacuum compression.After cuttingthe package, it rebounds quickly within 4 hours.If the fabric has wrinkesit will basically disappear after standing for 72 hours



Give them 24-72h to recover

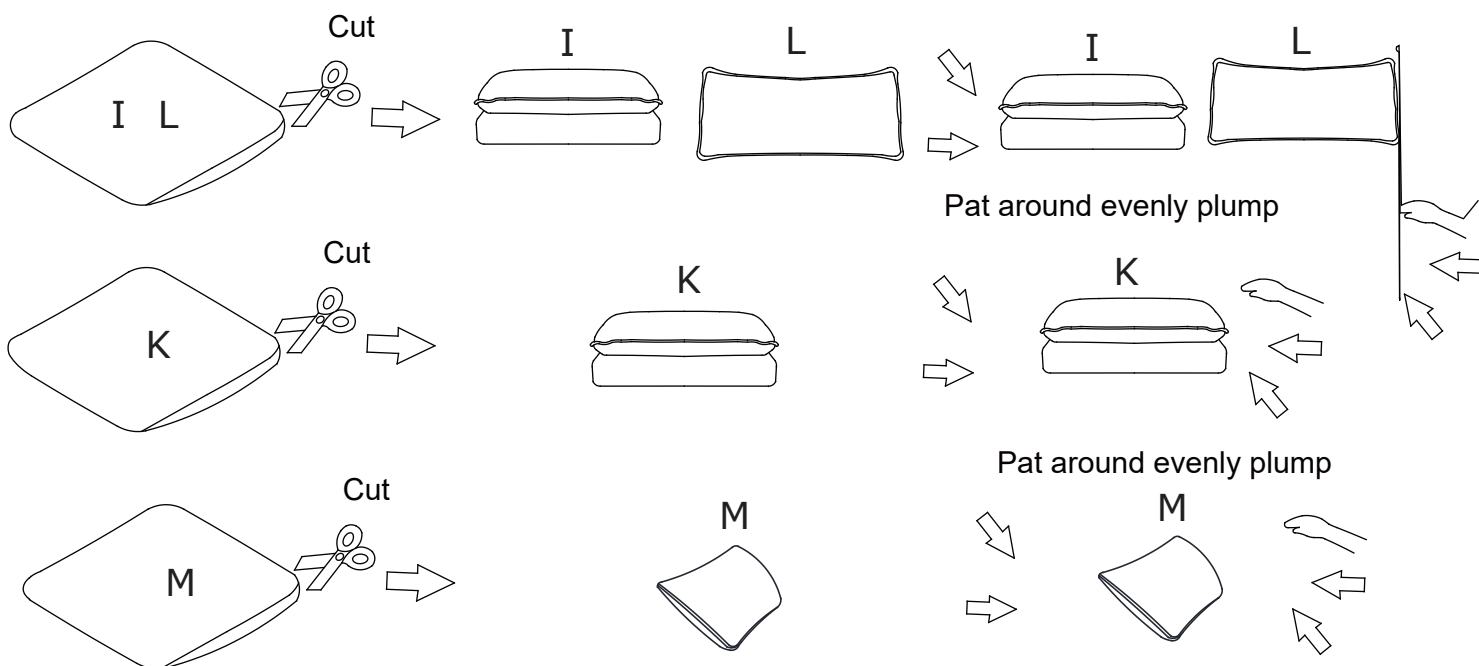

Sept 16:Place the seat cushion (I) Ottoman cushion (K) Back cushion (L) armrest bag (M) on the sofa as shown in the figure.

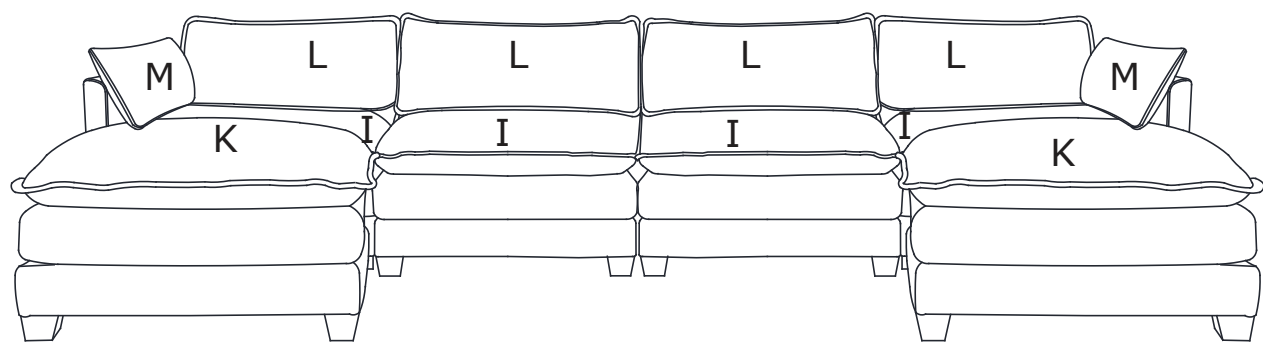

Box A*2 + Box B

Completed!

