




Assembly Instructions

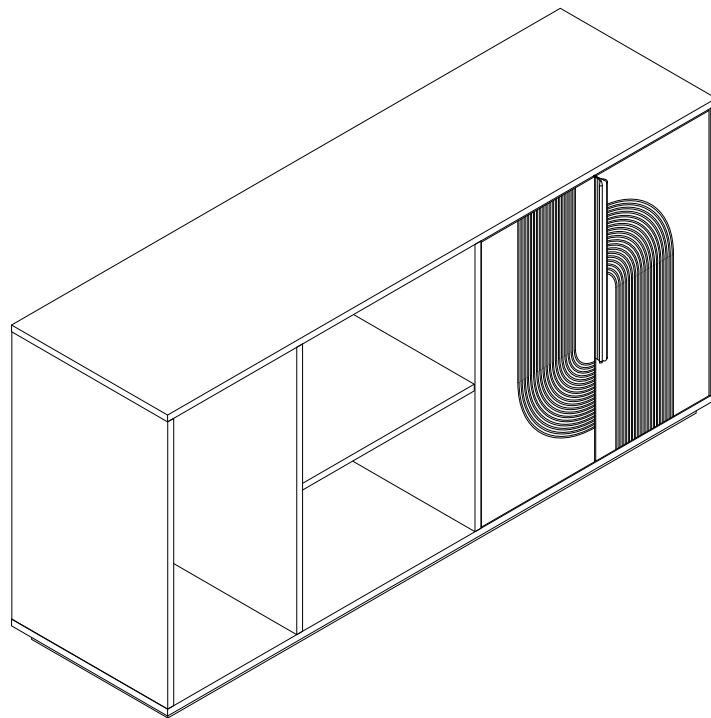

Boss table

Model No.
HOGA-JW0939-B

 **LITTLE TREE**
Little Tree by Tribesigns
www.tribesigns.com

Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1 Scan the QR code.




Installation Video

Step 2 Search with the Model No.
(on the bottom left corner of the title page)




HOGA-JW0939-B

Note: If you can't find the assembly video, please contact us.

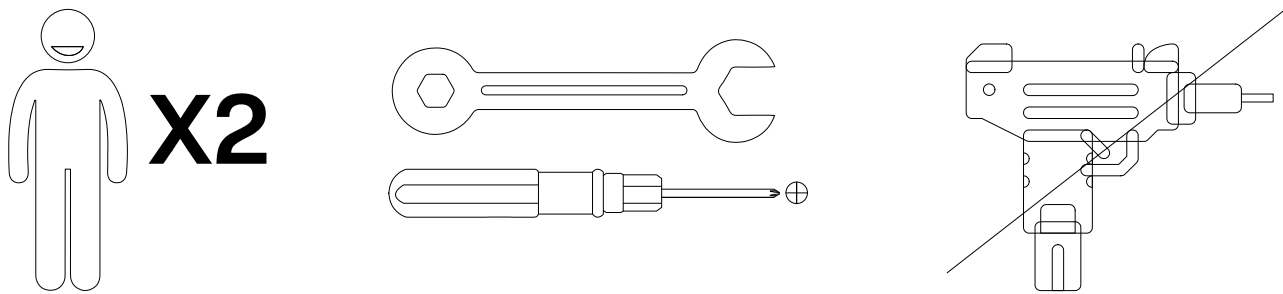


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

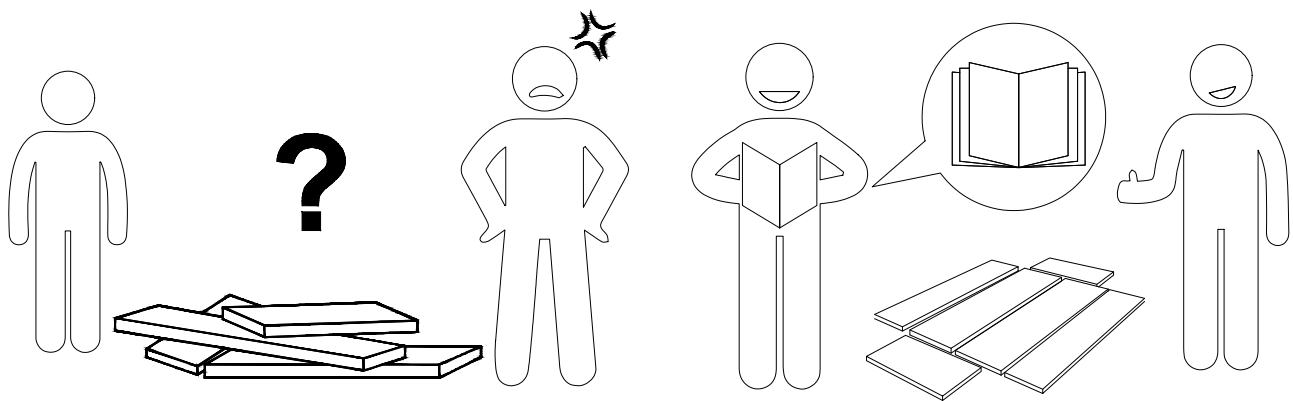

Install the Anti-Tip Straps


Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

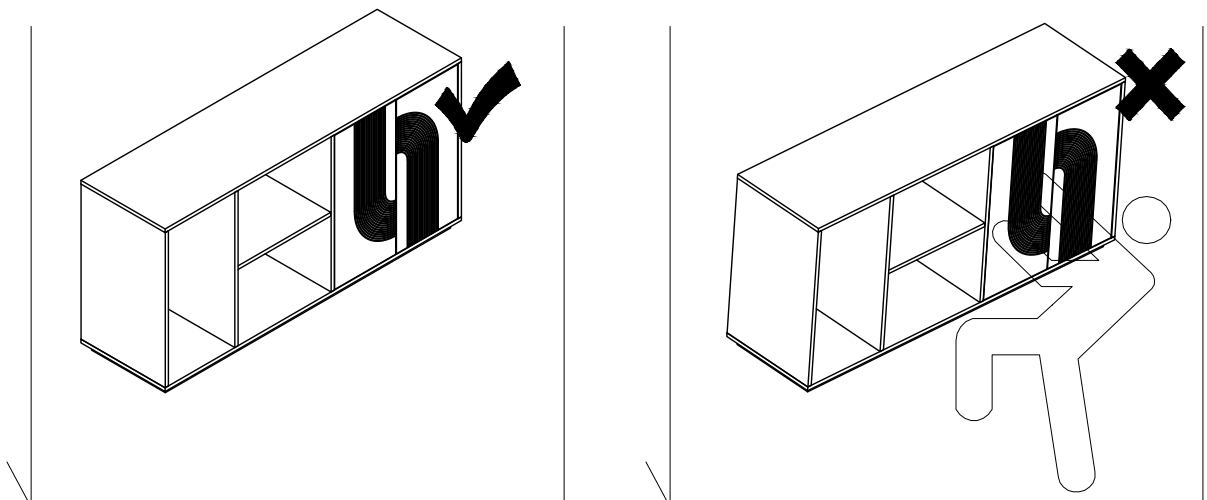

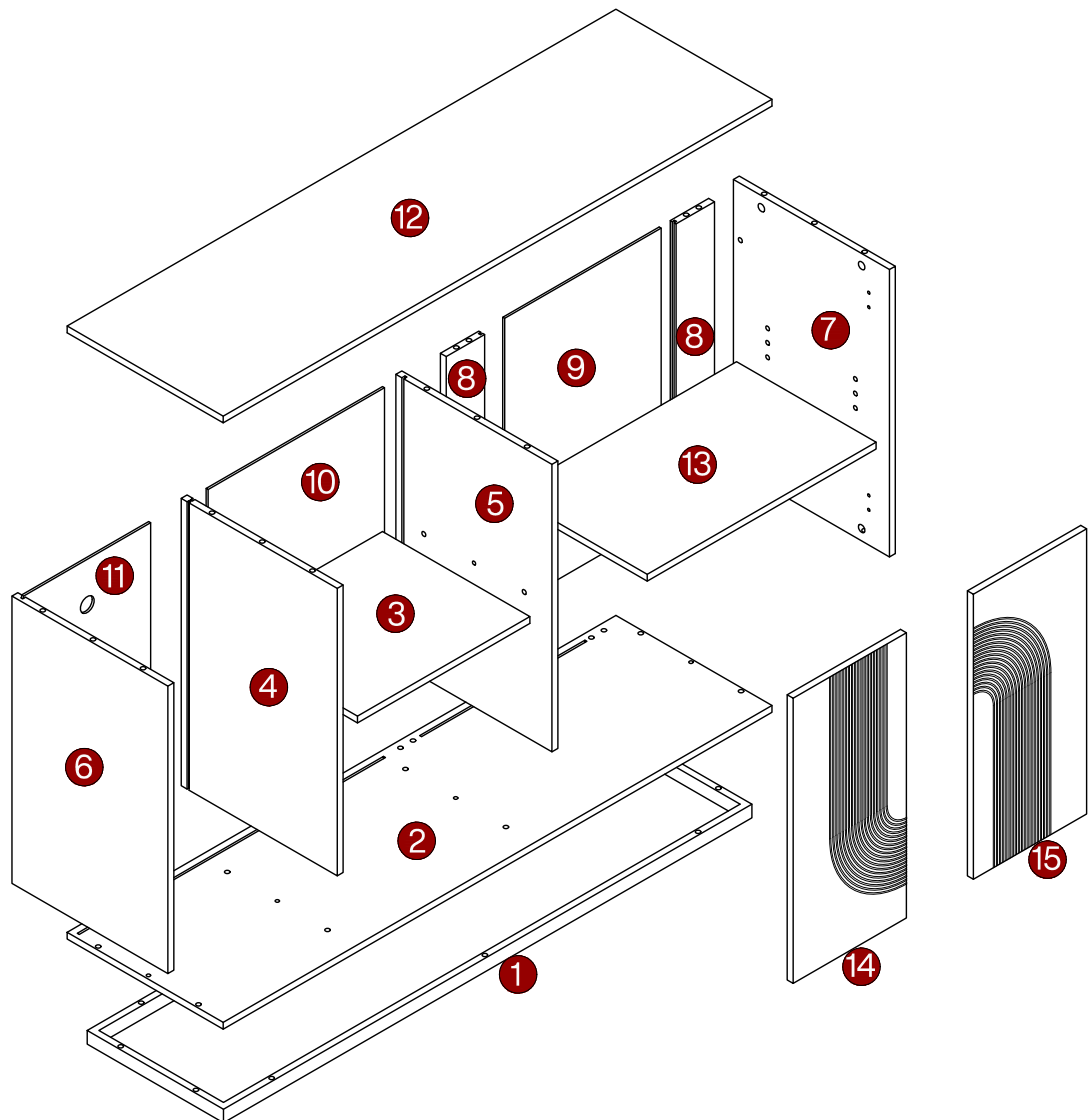


⚠ Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

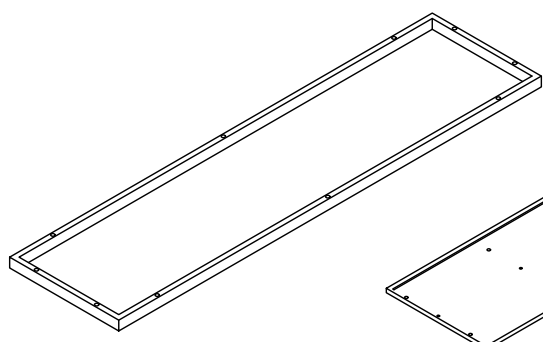


1 1pc

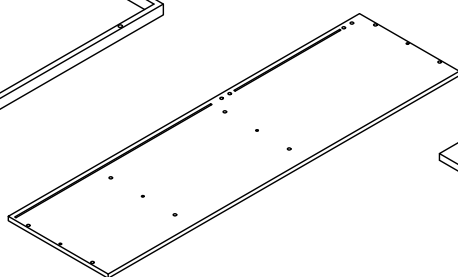


2 1pc

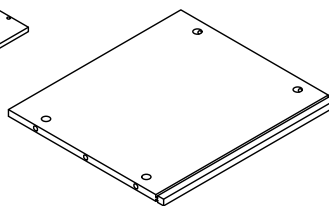


3 1pc

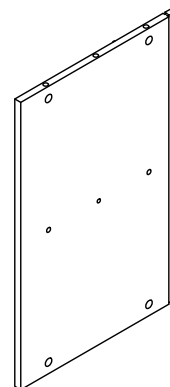


4 1pc

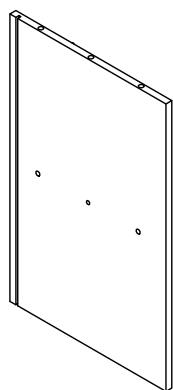

5 1pc

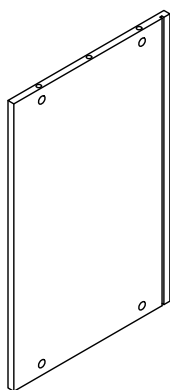


6 1pc

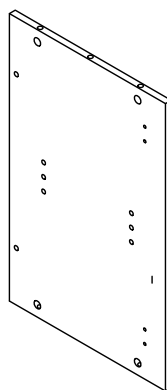


7 1pc




8 2pcs

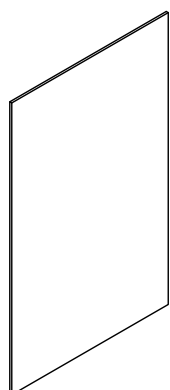


9 1pc

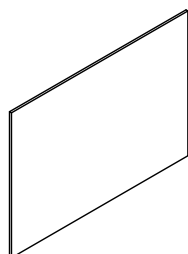


10 2pcs

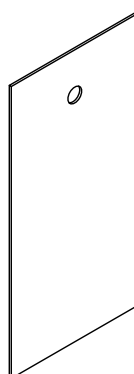


11 1pc

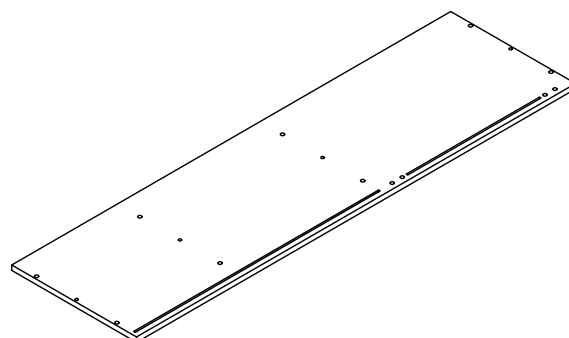


12 1pc

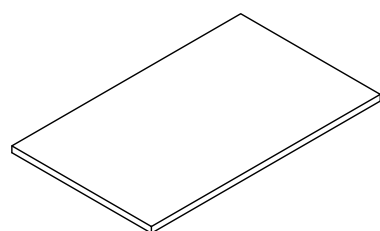

13 1pc




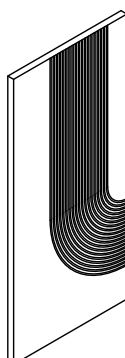


14 1pc

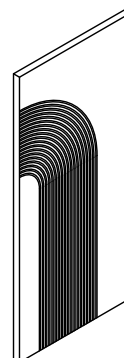


15 1pc

Hardware List

 M6X35MM A 32+1pcs	 Ø8X30MM B 10+1pcs	 Ø6X40MM C 10pcs	 E X6 D 4pcs	 Ø3.5X14MM E 20+1pcs	 16X11X15MM F 4pcs
 14X12X10MM G 16pcs	 Ø6X10MM H 6pcs	 I 2pcs	 J 1pc	 M4 K 1pc	 Screwdriver



Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.






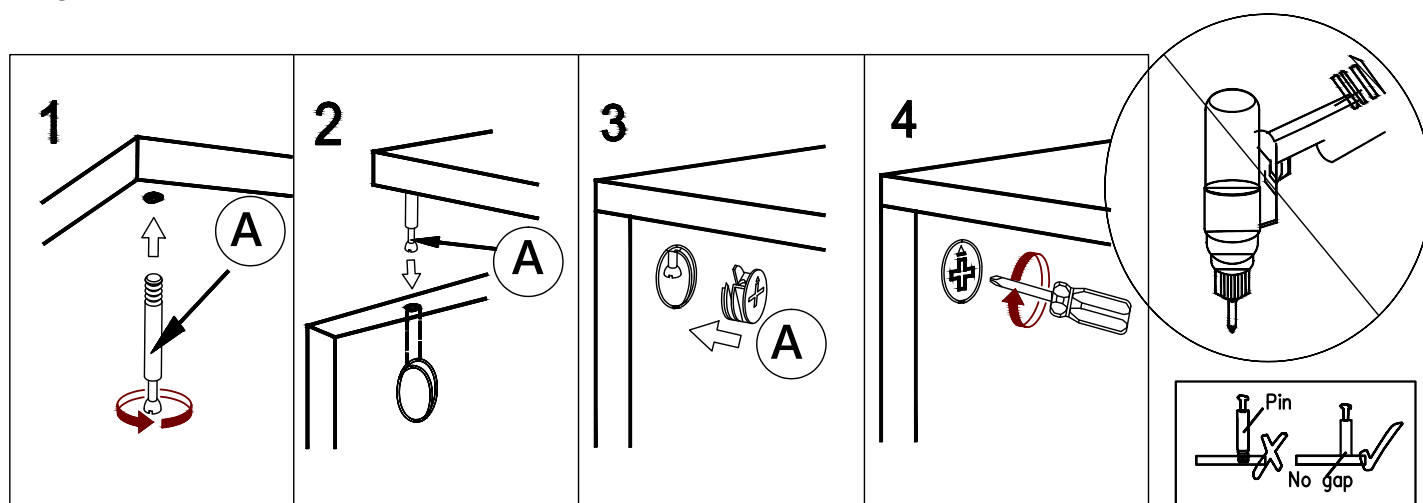


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.


1

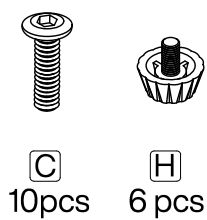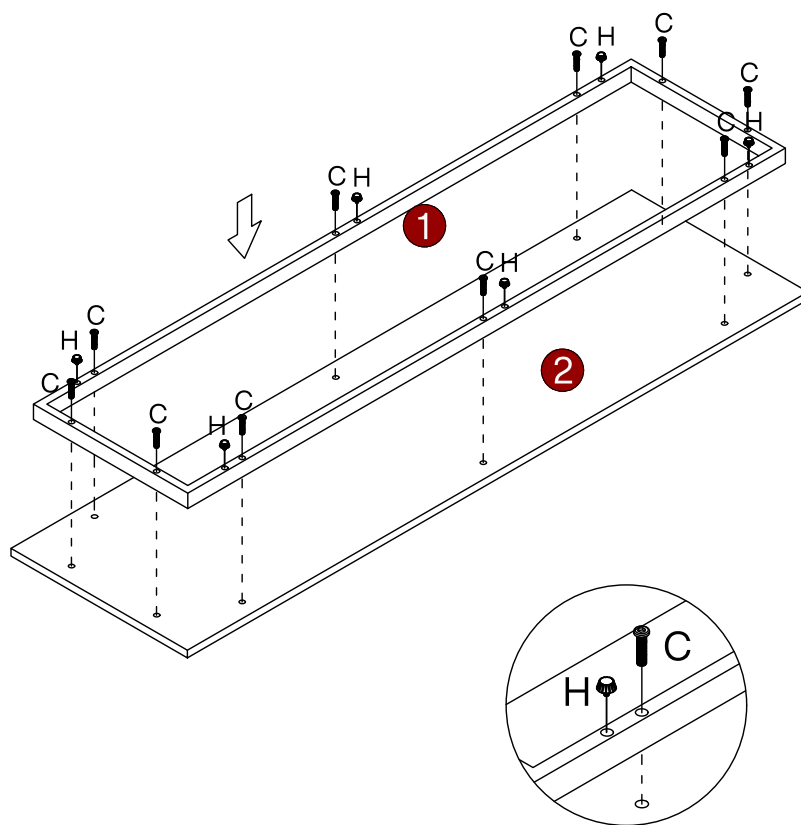



2

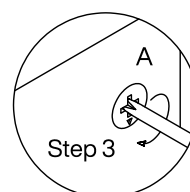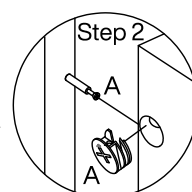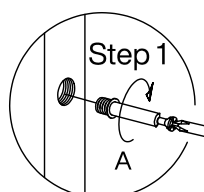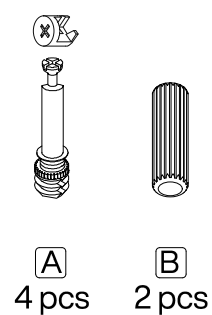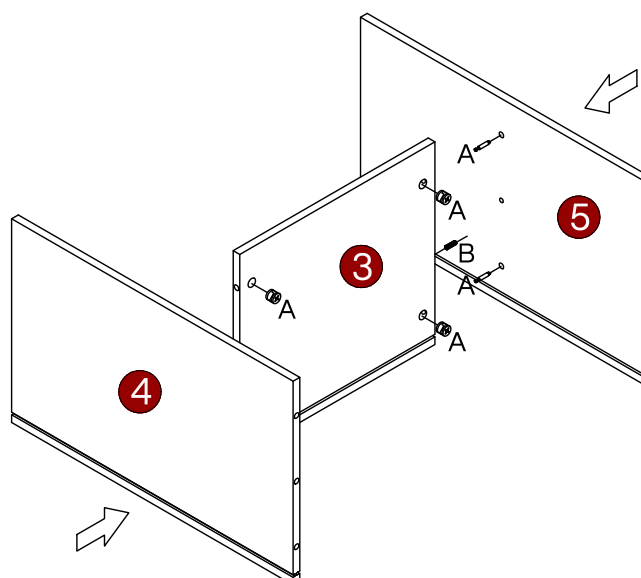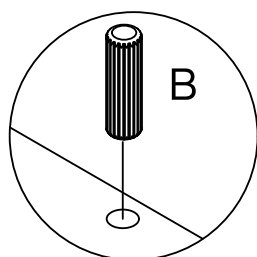


3

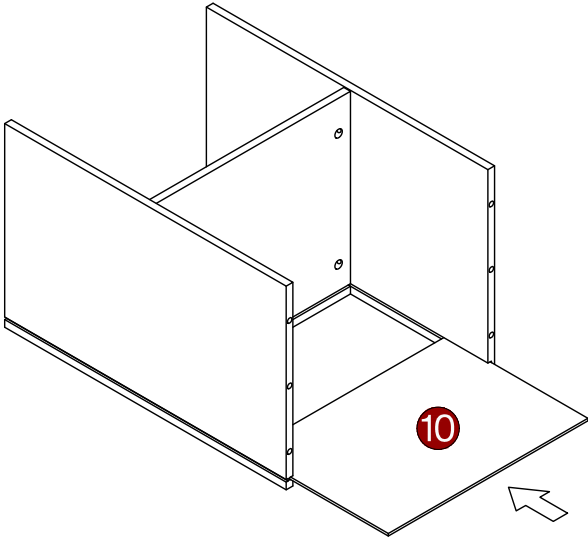







4

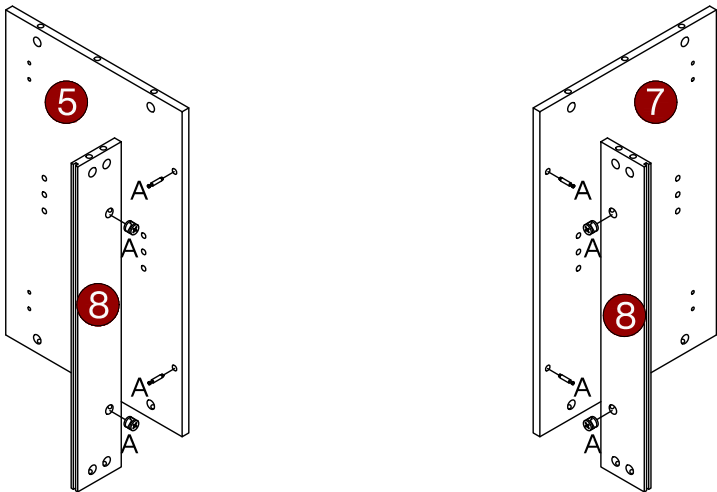

A
4 pcs

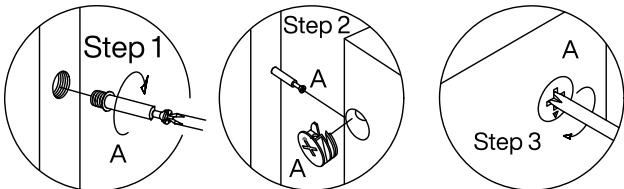


5

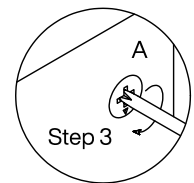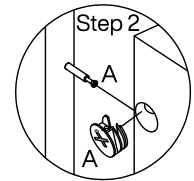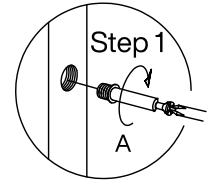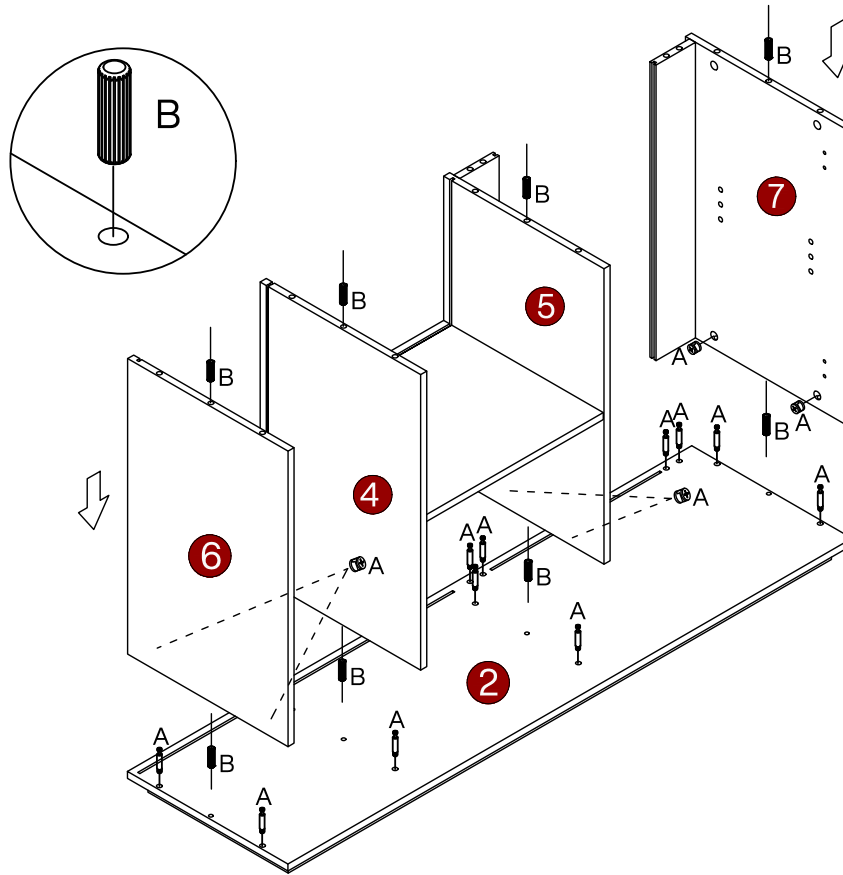

A
12pcs


B
8pcs

6

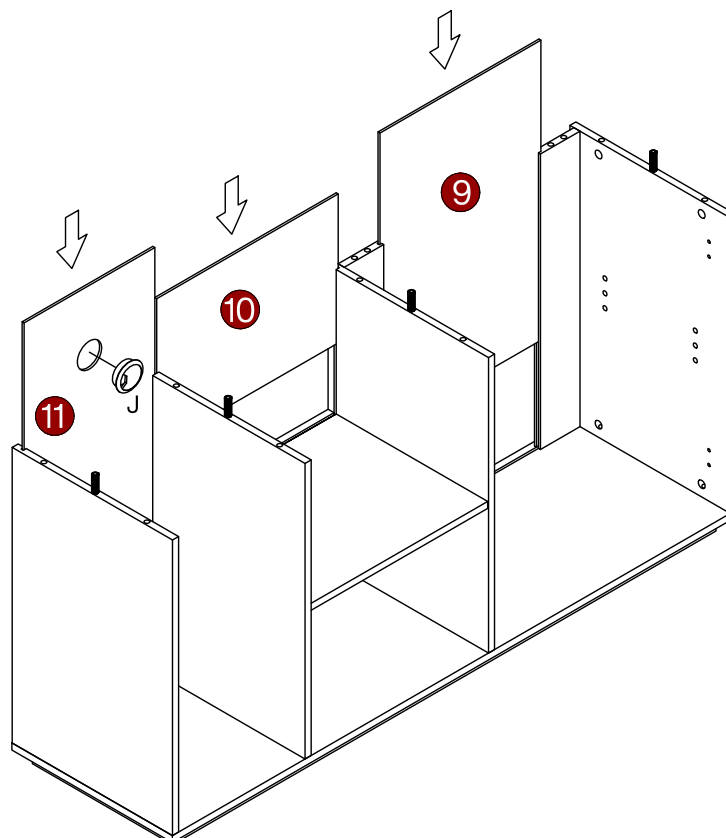


J
1pcs

7

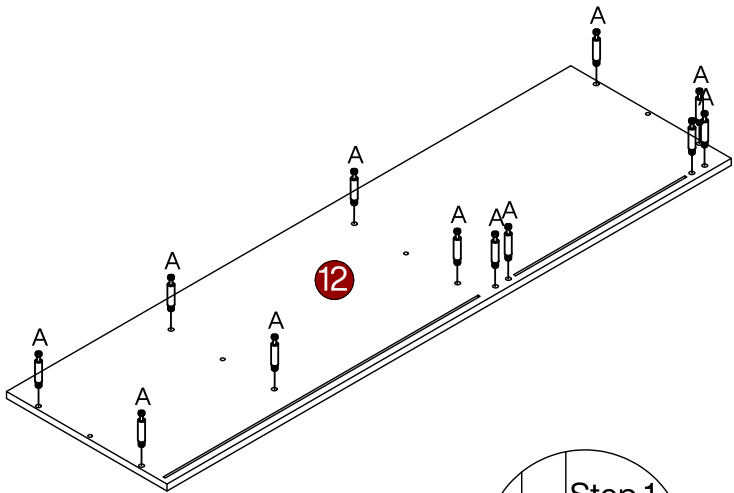


A
12pcs

8

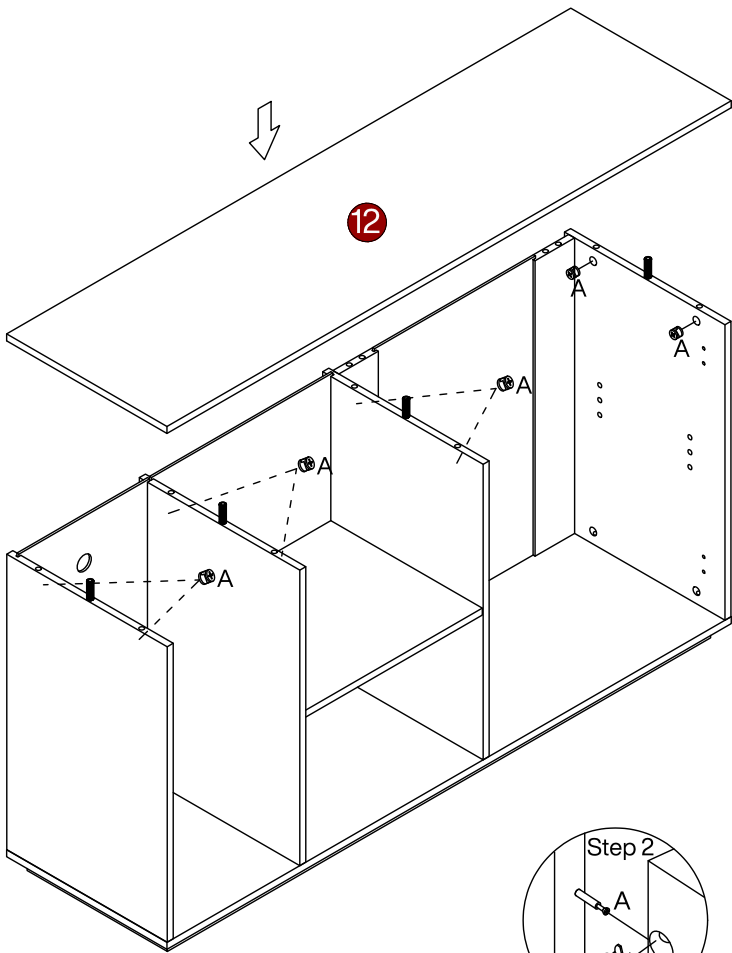


A
12pcs

9

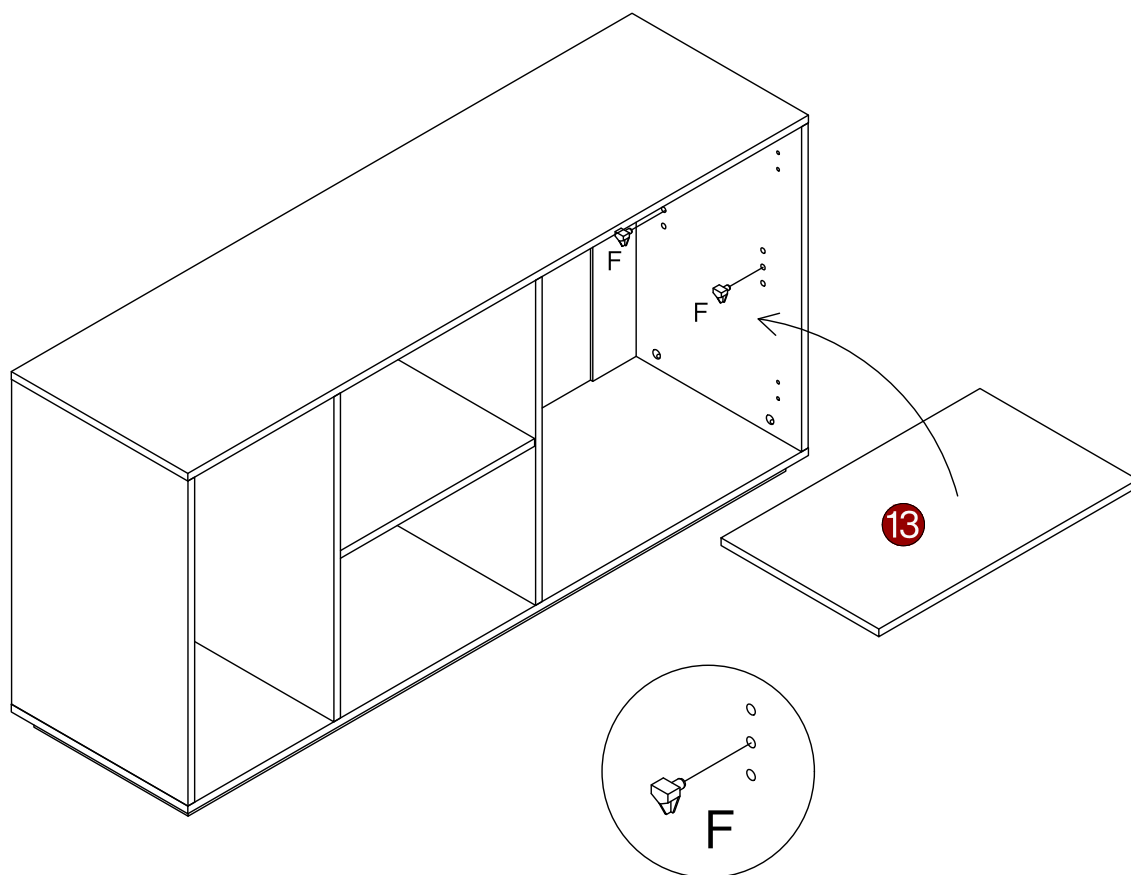

F
4 pcs

10


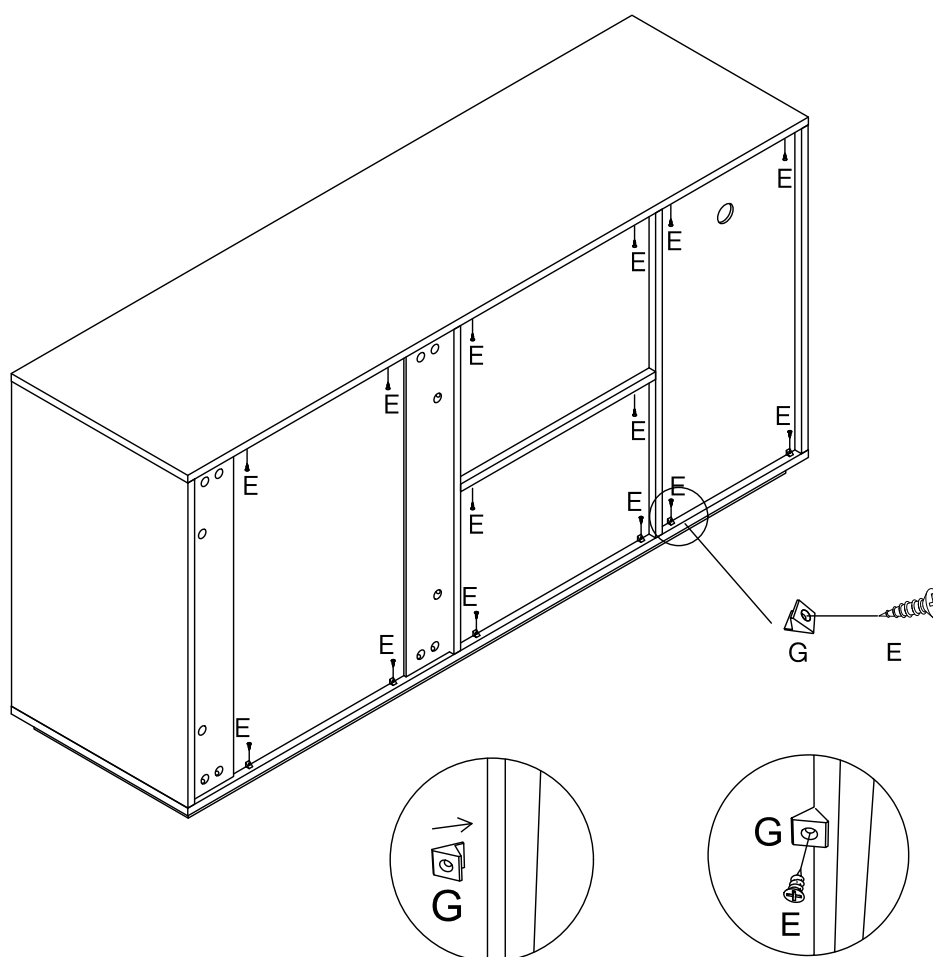


E
16 pcs





G
16 pcs

11

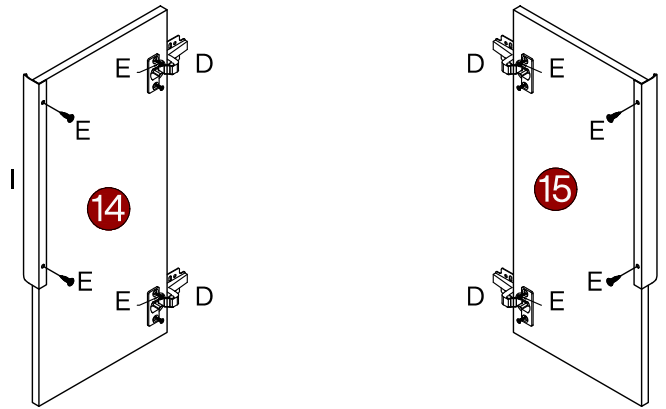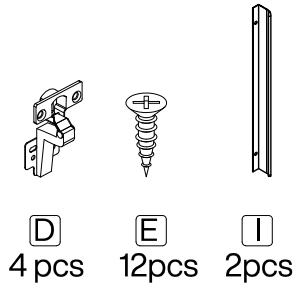


12

When adjusting the left and right sides of the door panel, this screw should not be loosened too much, otherwise it may easily damage the side panel or door panel

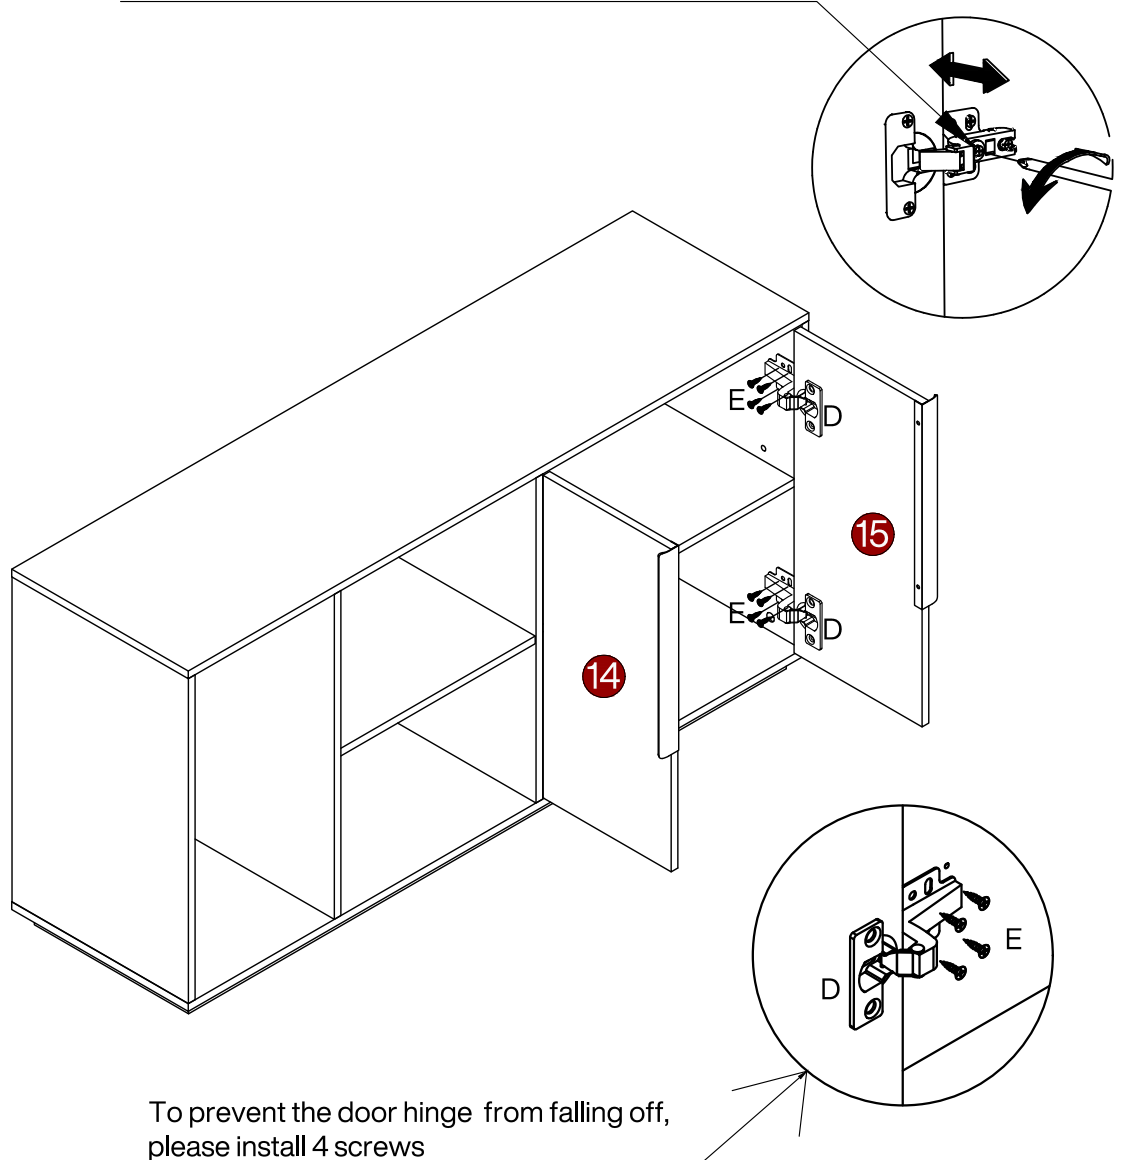

To prevent the door hinge from falling off, please install 4 screws

13

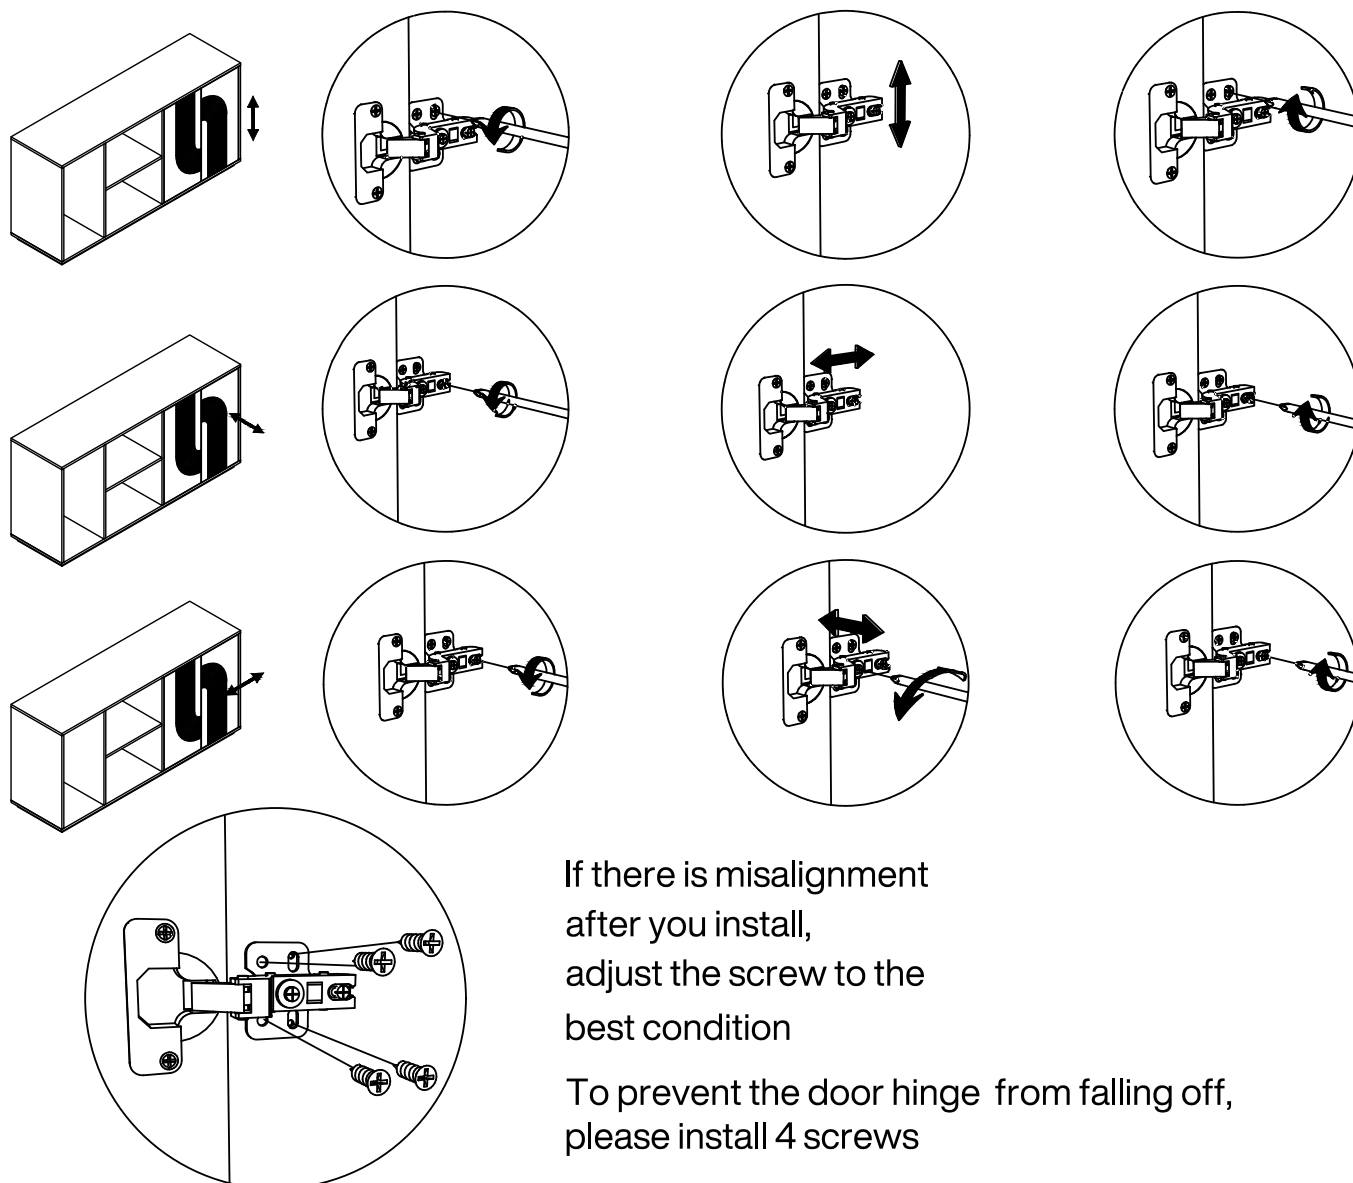


If there is misalignment
after you install,
adjust the screw to the
best condition

To prevent the door hinge from falling off,
please install 4 screws



Assembly Instructions

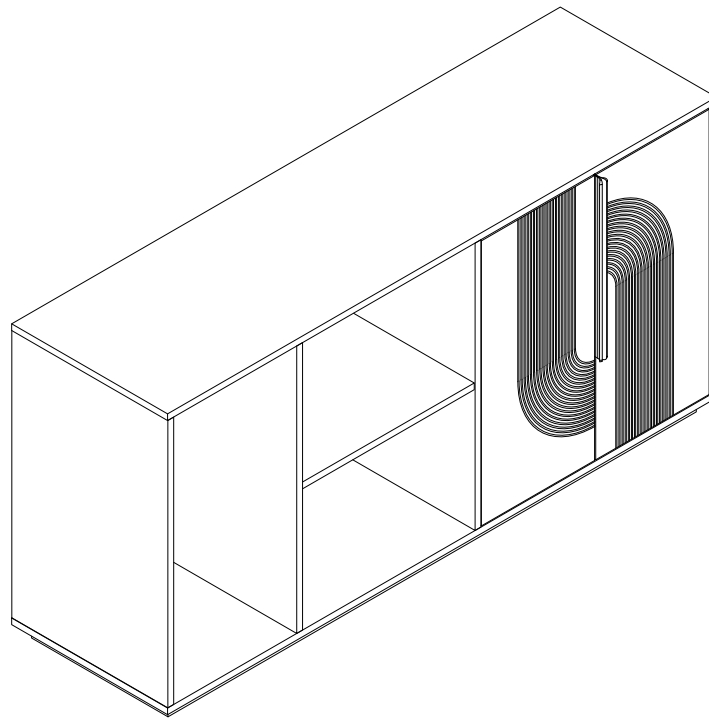

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888
Contact us anytime except
12:00 AM to 8:00 AM EST.

Follow Tribesigns



Facebook



Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp